






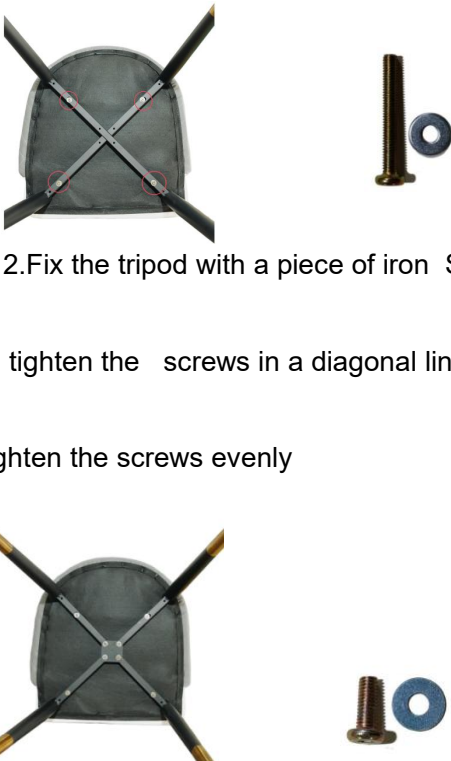



Installation

| Hardware List | | Hardware List | |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---|
|  Seat | 1 |  Support leg | 1 |
|  Screws and washer 6*16 | 4 |  Hexagonal screw tap | 1 |
|  Screws and washer 6*50 | 4 |  Fixed iron sheet | 1 |
| <div>1</div>  <p>First, the stainless steel foot bayonet is spliced and aligned with the screw hole.</p> | | <div>2</div> <p>1.First use the 6*50 screw to align the hole,do not tighten the screws</p>  <p>2.Fix the tripod with a piece of iron Screws 6*16 ,and tighten the screws in a diagonal line .Be careful to tighten the screws evenly</p>  | |