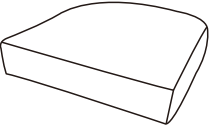

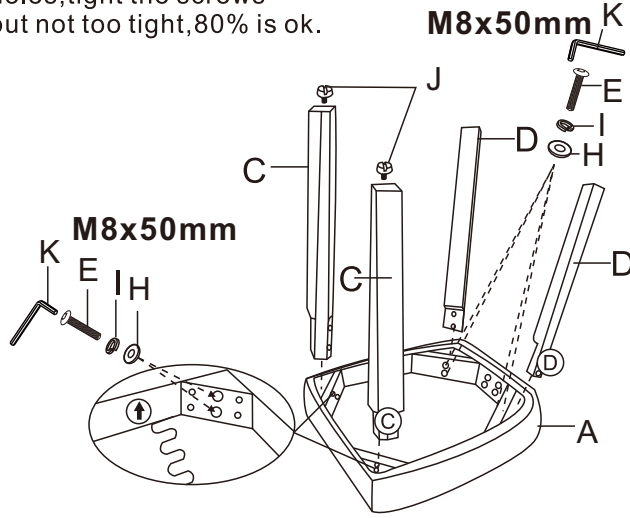
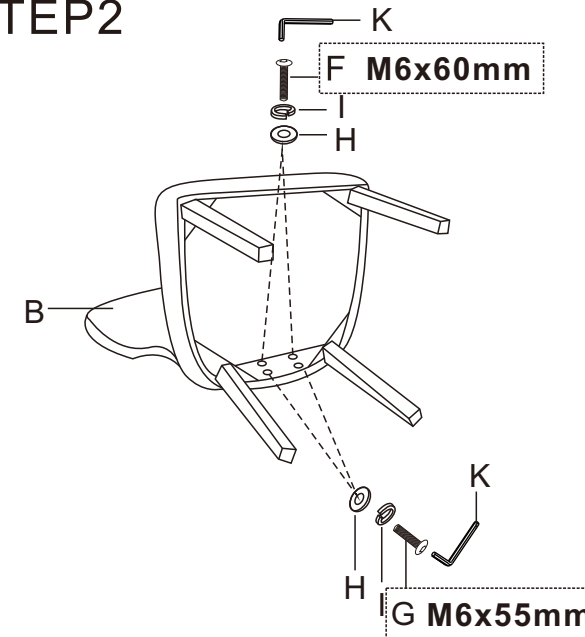
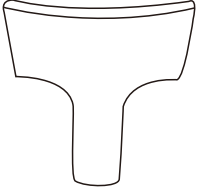





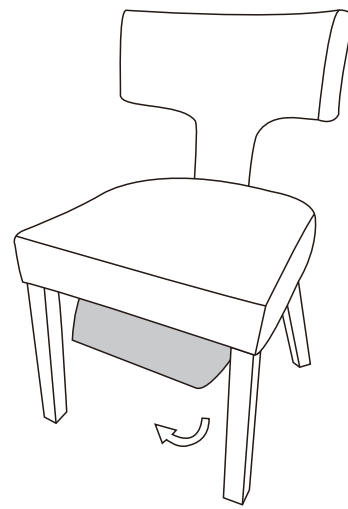
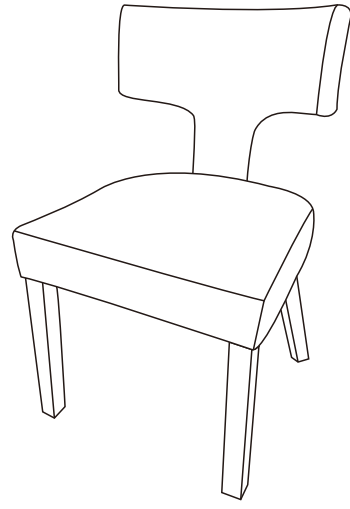





ASSEMBLY INSTRUCTIONS

Ax1 	Gx2  M6x55mm	STEP1 Put the screws in the holes, tight the screws but not too tight, 80% is ok. 	STEP2 
Bx1 	Hx12 		
Cx2 FRONT LEG 	Ix12 		
Dx2 BACK LEG 	Jx2 PLASTIC NAIL 	STEP3 	STEP4 
Ex8  M8x50mm	Kx1 ALLEN KEY 		
Fx2  M6x60mm			

Notes: compare the length of each of screw, twist them to 80% instead of 100%; adjust the balance of the chair after installation, twist each screw tightly step by step.