



























Assembly Instruction Sheet

ITEM: PR-90060DWHQ677D VANITY CABINET

S/N	DIAGRAM	CONNECTING FITTINGS	QTY				
1		HINGE SCREWS (ø6.5*16)	4				
2		HINGE SCREWS (ø8*35)	8				
3		CORNER BRACES	4				
4		TOURNEVIS					
				A1	A2	B	C
6PCS		12PCS	1PC	2PCS	Drawer Box 6PCS		
							
5	6	D	E	F			


Assembly Instruction Sheet

ITEM: PR-90060DWHQ677D VANITY CABINET

S/N	DIAGRAM	CONNECTING FITTINGS	QTY	1PC		1PC		1PC		1PC	
1		HINGE SCREWS (ø6.5*16)	12		A1		A2		B		C
2		HINGE SCREWS (ø8*25)	6								
3		CORNER BRACES	4								
4		TOURNEVIS									
6PCS		12PCS		1PC		2PCS		Drawer Box 6PCS			
											
5		6		D		E		F			


Step 5

USING SCREWDRIVER
TO SECURE PART. 2

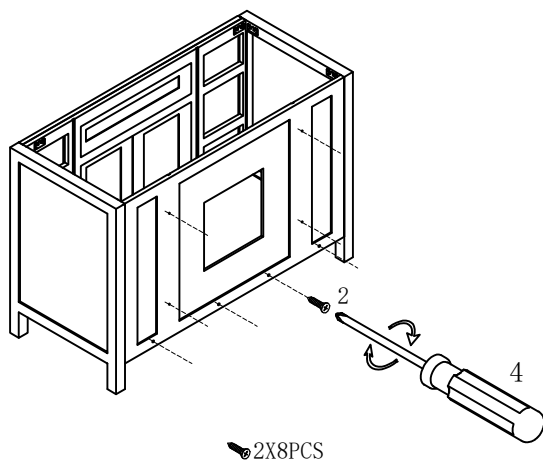


Step 6

1. SECURE PART. 6 INTO
BACK OF THE CABINET
2. MOUNT PART. 5
ON PART. 6
AND SECURE
PART. 1
INTO FRONT
END OF
PART.

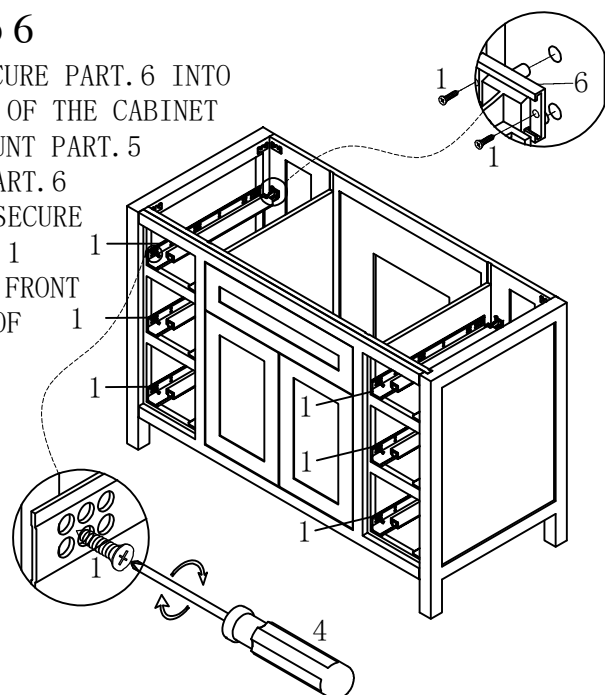


Step 7

PUT PART. F
ON PART. 5
MAKE SURE
THEY ARE ON
TEACK.

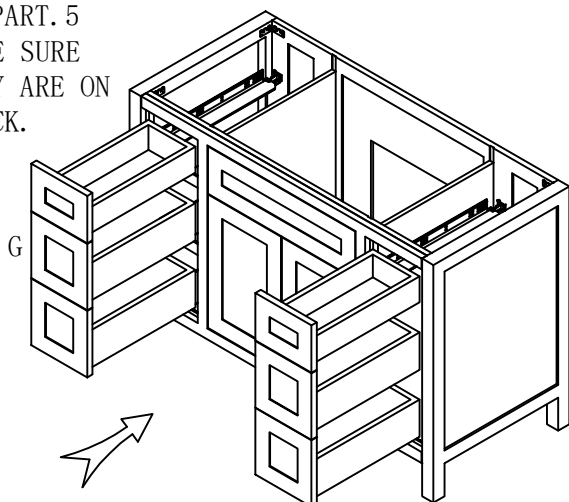











Step 8

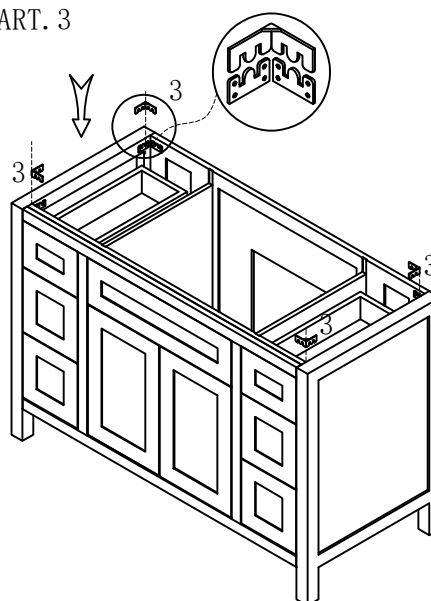SECURE PART. 3
ON TOP
CORNERS.




Assembly Instruction Sheet

ITEM: PR-90060DWHQ677D VANITY CABINET

S/N	DIAGRAM	CONNECTING FITTINGS	QTY	6PCS		6PCS		6PCS		6PCS	
1		HINGE SCREWS (Ø6.5*16)	24								
2		TOURNEVIS									
				A1		A2		B1		B2	
6PCS				6PCS				6PCS			
											
C		D		E		Drawer Box 6PCS					


Step 1

PUT PART.B2 AND A1
TOGETHER FOLLOWING
THE DOVETAIL.

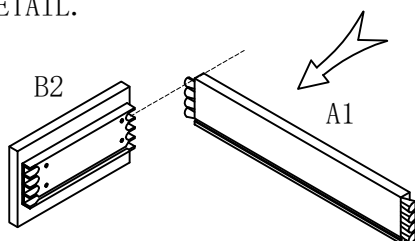


Step 2

PUT PART. B1
ON THE BACK
OF STEP1.

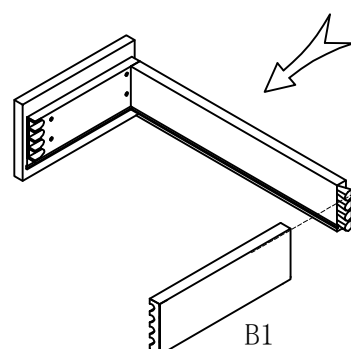


Step 3

SLIDE PART. C INTO
THE BOTTOM
NOTCHES.

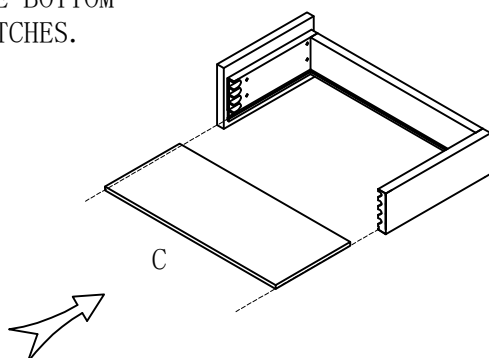


Step 4

PUT PART. A2 AND
STEP3 TOGETHER.

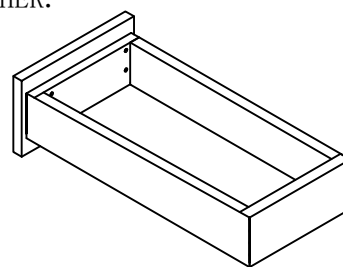


Step 5

FLIP OVER STEP4
AND SECURE PART. D
AND E INTO THE
DRAWER BY USING
PART. 1 AND 2.

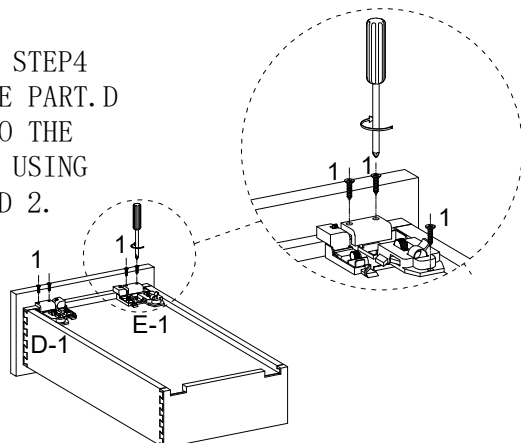




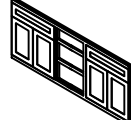


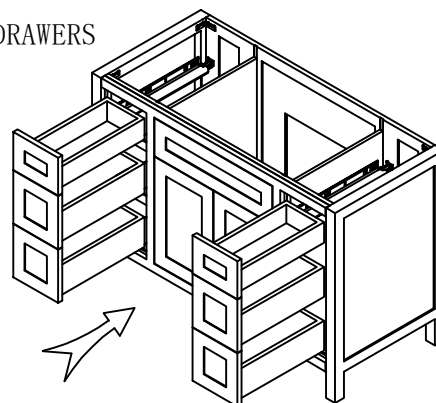






Step 6

SLIDE THE DRAWERS
INTO THE
CABINET.






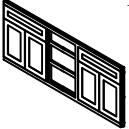




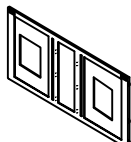




Assembly Instruction Sheet

ITEM: PR-90060DWHQ677D VANITY CABINET

S/N	DIAGRAM	CONNECTING FITTINGS	QTY				
1		HINGE SCREWS (ø6.5*16)	4				
2		HINGE SCREWS (ø8*25)	8				
3		CORNER BRACES	4				
4		TOURNEVIS					
				A1	A2	B	C
3PCS		6PCS	1PC	2PCS	Drawer Box 3PCS		
							
5	6	D	E	F			










Assembly Instruction Sheet

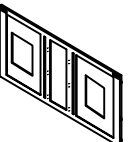ITEM: PR-90060DWHQ677D VANITY CABINET

S/N	DIAGRAM	CONNECTING FITTINGS	QTY				
1		HINGE SCREWS (ø6.5*16)	4				
2		HINGE SCREWS (ø8*25)	8				
3		CORNER BRACES	4				
4		TOURNEVIS					
				A1	A2	B	C
3PCS		6PCS	1PC	2PCS	Drawer Box 3PCS		
							
5	6	D	E	F			


Assembly Instruction Sheet

ITEM: PR-90060DWHQ677D VANITY CABINET

S/N	DIAGRAM	CONNECTING FITTINGS	QTY	3PCS	3PCS	3PCS	3PCS
1		HINGE SCREWS (Ø6.5*16)	12				
2		TOURNEVIS					
				A1	A2	B1	B2
				3PCS	3PCS	3PCS	3PCS
							Drawer Box 3PCS
				C	D	E	


Step 1

PUT PART. B2 AND A1 TOGETHER FOLLOWING THE DOVETAIL.

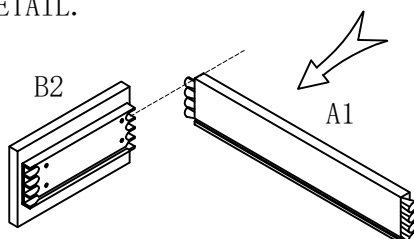


Step 2

PUT PART. B1 ON THE BACK OF STEP1.

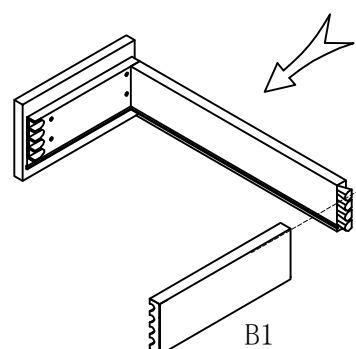


Step 3

SLIDE PART. C INTO THE BOTTOM NOTCHES.

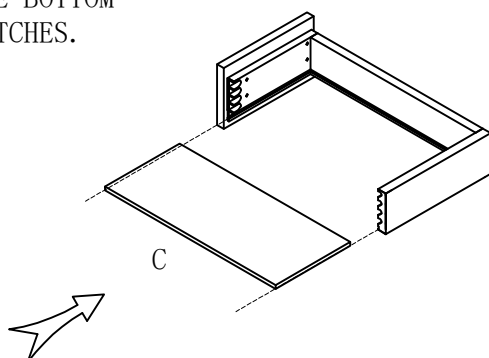


Step 4

PUT PART. A2 AND STEP3 TOGETHER.

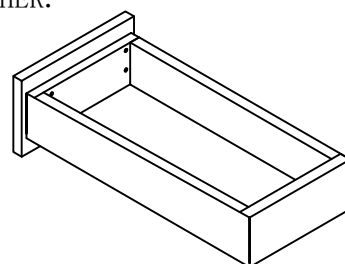


Step 5

FLIP OVER STEP4 AND SECURE PART. D AND E INTO THE DRAWER BY USING PART. 1 AND 2.

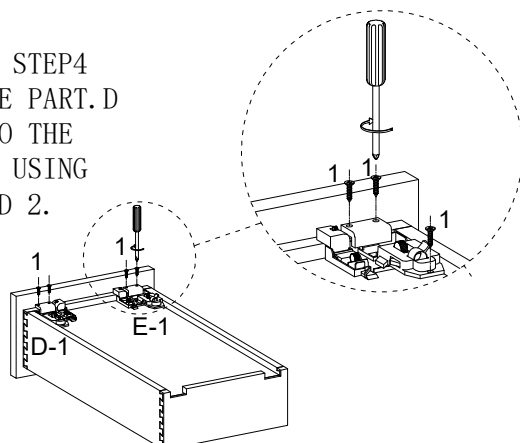


Step 6

SLIDE THE DRAWERS INTO THE CABINET.

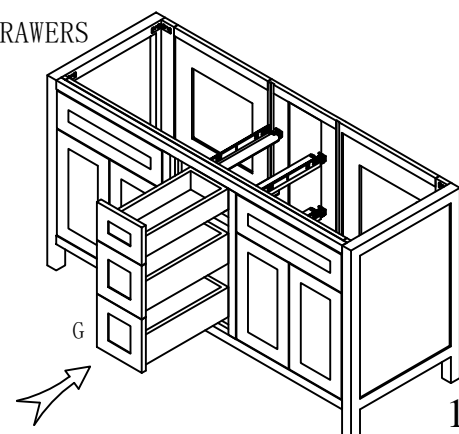


UNDERMOUNT SINK VANITY Y

HOW TO CARRY THE TOP

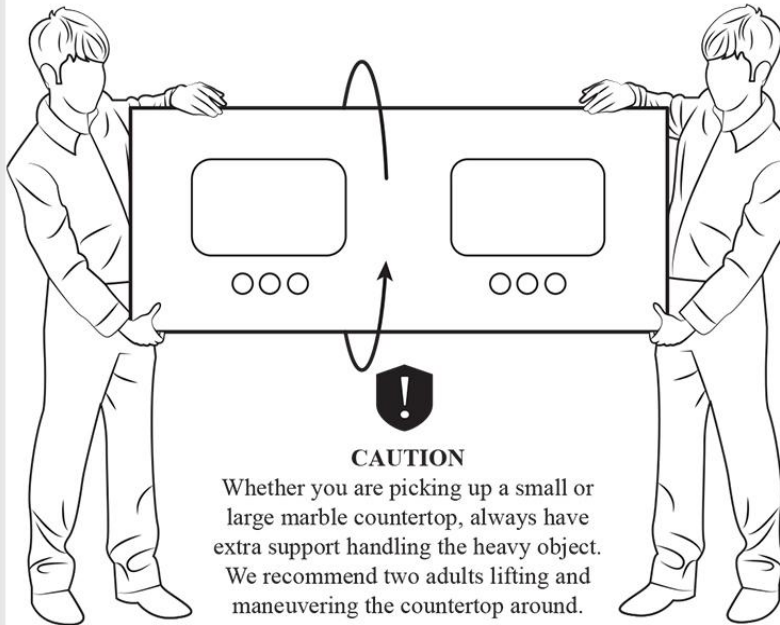


1

Apply a continuous stream of silicone glue around the top of the cabinet.

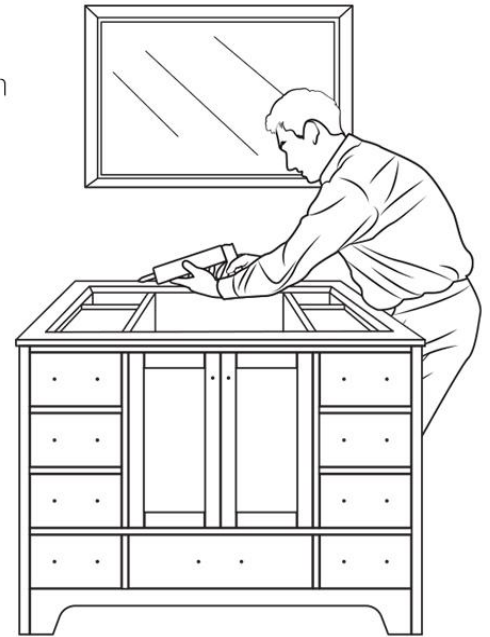

2

Carry the countertop and gently place it onto the cabinet.

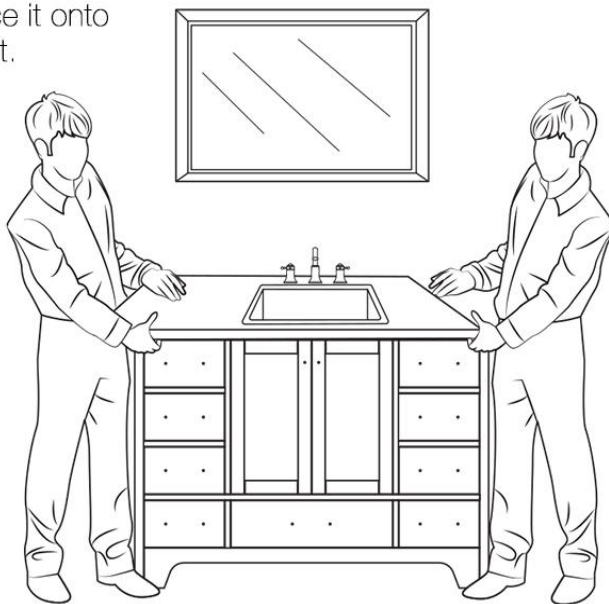

3

Install the backsplash by applying silicone glue near the edge of the countertop. Then place the backsplash onto the silicone area. Add additional silicone onto the edges for sealant if necessary.

