

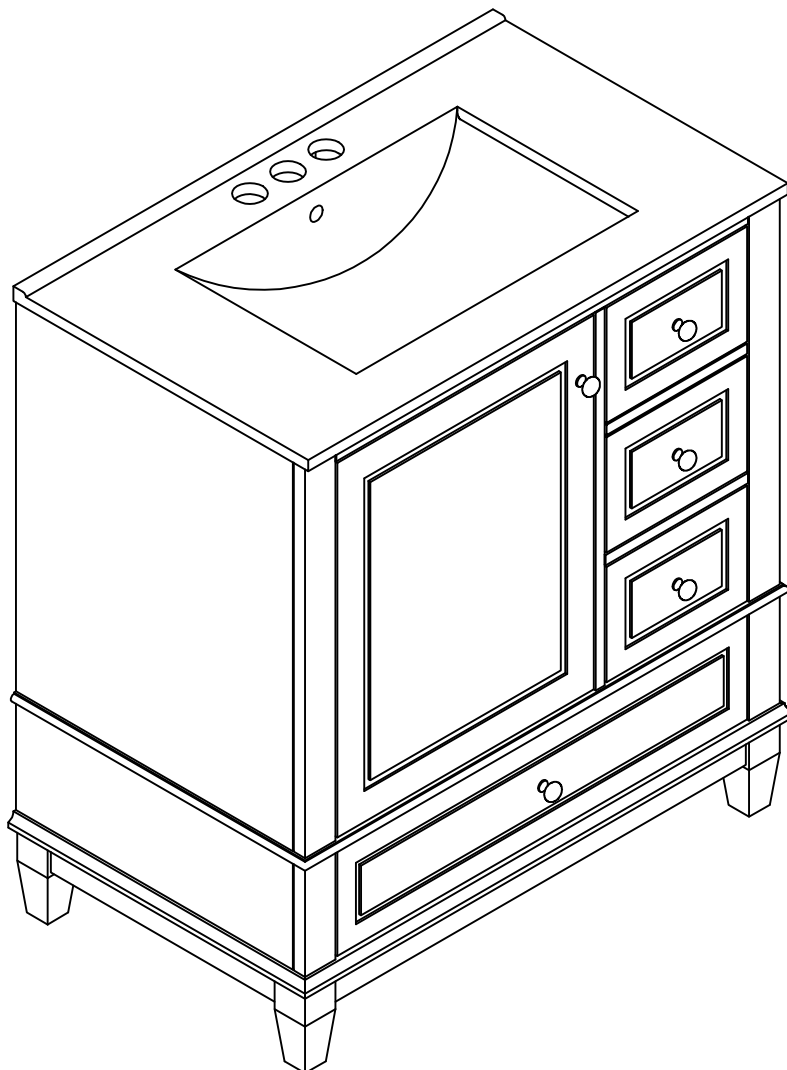


ASSEMBLY INSTRUCTION
30INCH BATH VANITY (COMBO)
SKU: N759P225994

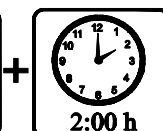


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware. Compare with the parts list to be sure all parts are present.
"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"


*** Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!**
*** Please assemble on a clean soft surface to avoid damage.**

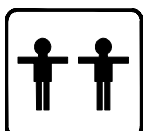

Tools Required



(Not included)



(Not included)

IMPORTANT:
PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE



**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

1. Note: This is not a clothing storage cabinet and it is not recommended to use it as a clothing storage cabinet.
2. All cabinets come with TRD, stainless steel or our "L-Bracket "when shipped.







Before Installation

Important – Please read these instructions fully before starting assembly


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions









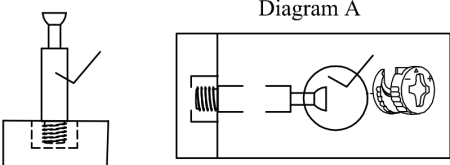
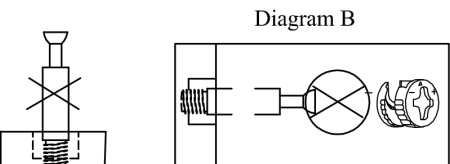
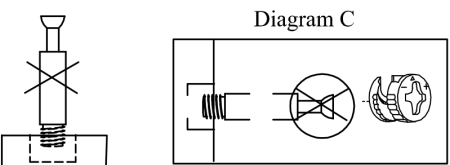
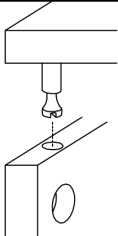
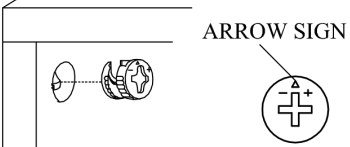
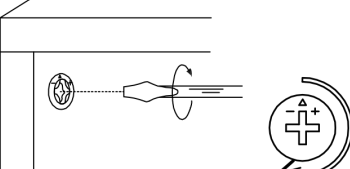
	<p>Diagram A</p> <p>Insert Cam Bolt into hole as shown in diagram A.</p>
	<p>Diagram B</p> <p>Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.</p>
	<p>Diagram C</p> <p>Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.</p>
	<p>Connect the panels together.</p>
	<p>ARROW SIGN</p> <p>Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.</p>
	<p>To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i></p>

Detail View - CABINET

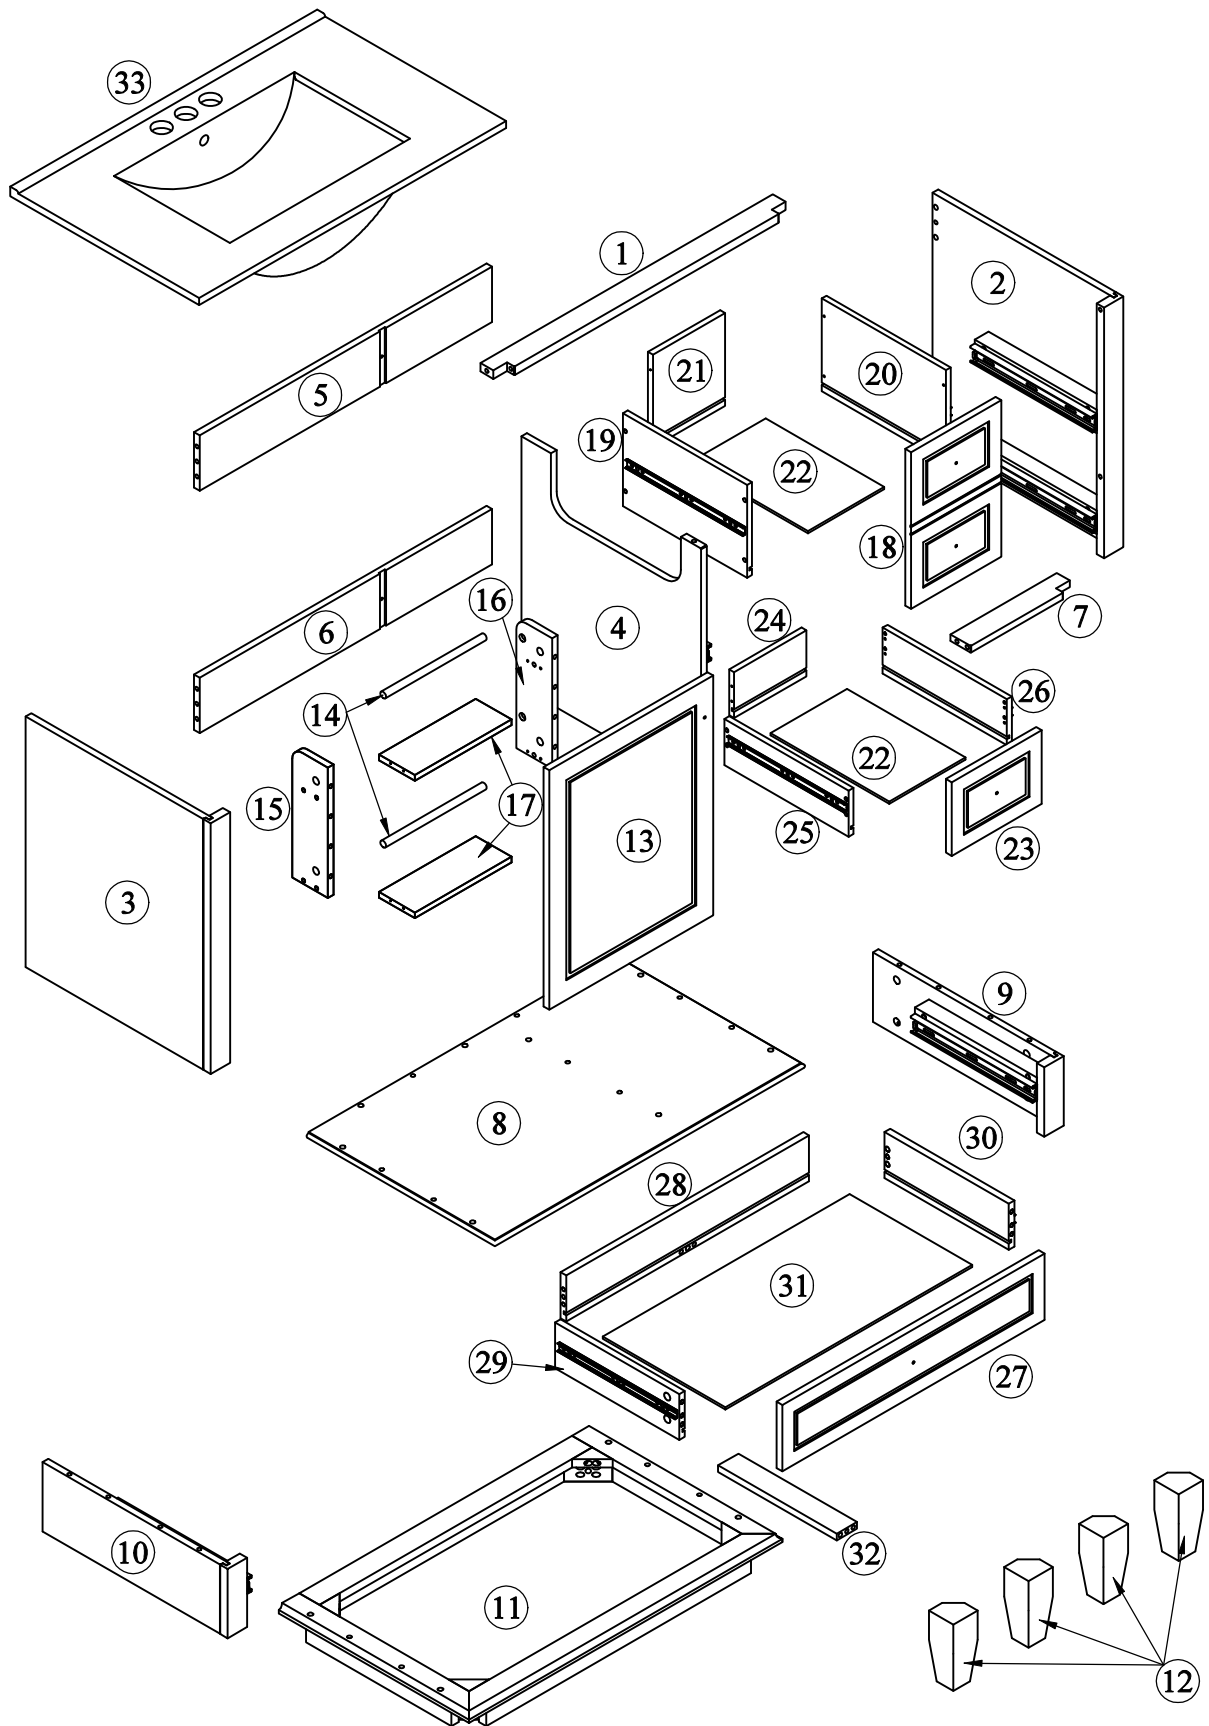















Identifying the Hardware -Identify the hardware using the illustrations below.

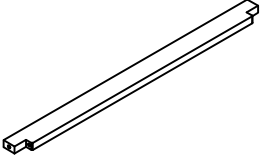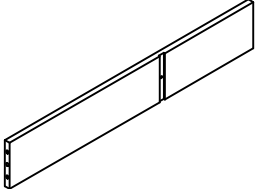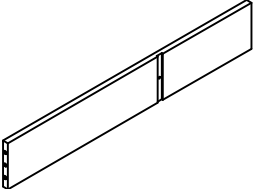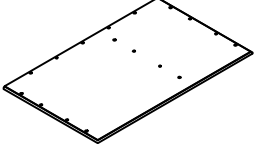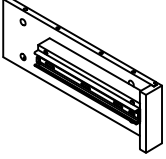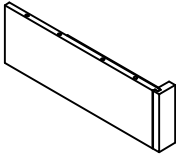
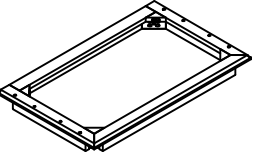
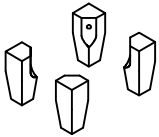


Part List

1		2	
	Front Top Bar - 1pc		Top Side Panel (R) - 1pc
3		4	
	Top Side Panel (L) - 1pc		Mid Panel - 1pc
5		6	
	Top Panel Rear - 1pc		Bottom Panel Rear - 1pc
7		8	
	Crossbar Front - 1pc		Mid Panel - 1pc
9		10	
	Bottom Side Panel (R) - 1pc		Bottom Side Panel (L) - 1pc
11		12	
	Bottom Frame - 1pc		Cabinet Feet - 4pcs
13		14	
	Door - 1pc		Round Bar - 2pcs




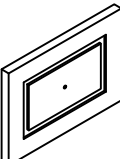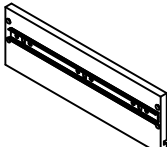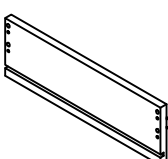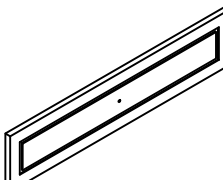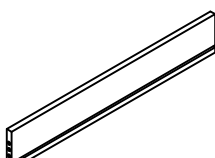






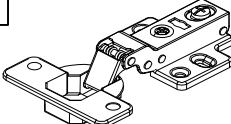


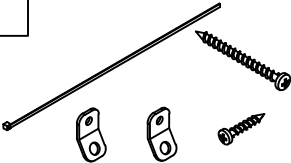
Part List

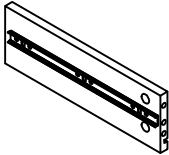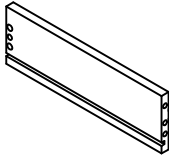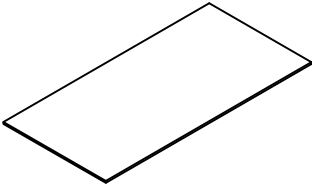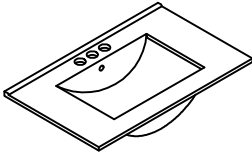15		16	
	Left Panel of Door - 1pc		Right Panel of Door (R) - 1pc
17		18	
	Mid Panel of Door - 2pcs		Top Drawer Face - 1pc
19		20	
	Top Drawer Side Panel (L) - 1pc		Top Drawer Side Panel (R) - 1pc
21		22	
	Top Drawer Back Panel - 1pc		Top Drawer Bottom Panel - 2pcs
23		24	
	Mid Drawer Face - 1pc		Mid Drawer Back Panel - 1pc
25		26	
	Mid Drawer Side Panel (L) - 1pc		Mid Drawer Side Panel (R) - 1pc
27		28	
	Bottom Drawer Face - 1pc		Bottom Drawer Back Panel - 1pc





Part List



<div data-bbox="199 342 252 383">29</div> <div data-bbox="389 367 558 521">  </div> <div data-bbox="225 528 753 577">Bottom Drawer Side Panel (L) - 1pc</div>	<div data-bbox="815 342 868 383">30</div> <div data-bbox="1034 358 1203 512">  </div> <div data-bbox="837 528 1366 577">Bottom Drawer Side Panel (R) - 1pc</div>
<div data-bbox="199 589 252 629">31</div> <div data-bbox="311 584 624 768">  </div> <div data-bbox="263 772 713 817">Bottom Drawer Bottom Panel - 1pc</div>	<div data-bbox="815 589 868 629">32</div> <div data-bbox="1007 627 1185 739">  </div> <div data-bbox="888 772 1313 817">Bottom Drawer Bottom Bar - 1pc</div>
<div data-bbox="199 831 252 871">33</div> <div data-bbox="360 846 612 999">  </div> <div data-bbox="418 1014 558 1059">Sink - 1pc</div>	

Hardware List


A  ø6x35mm Three in one bolts - 48pcs	B  ø14.5x12mm Three in one lock - 48pcs	C  ø8xø4x32mm Round head screw - 16pcs
D  ø8xø4x25mm Round head screw - 2pcs	E  ø13x1/4"x40mm Hex-Head bolts - 4pcs	F  ø1/4"x16x1mm Washer - 4pcs
G  4mm Allen key - 1pc	H  ø24x24mm Handle - 5pcs	I  ø5/32"x19mm Handle screw - 3pcs
J  ø5/32"x32mm Handle screw - 2pcs	K  Damping hinge - 2pcs	L  ø7xø3.5x15mm Flat head screw - 12pcs
M  ø8x30mm Wood dowel - 44pcs	N  Anti fall hardware (2sets)	

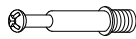
STEP: 1

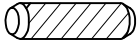A	E	F	M
			
4PCS	4PCS	4PCS	4PCS

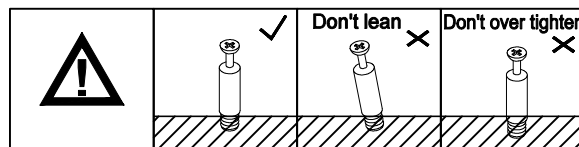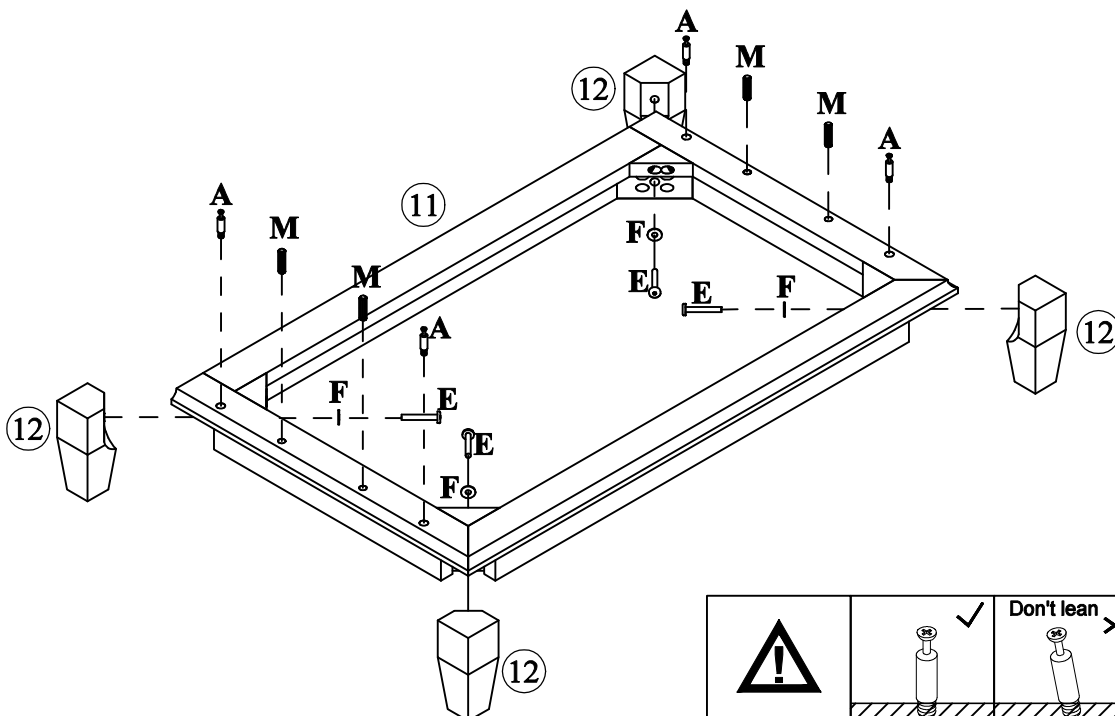



STEP: 2





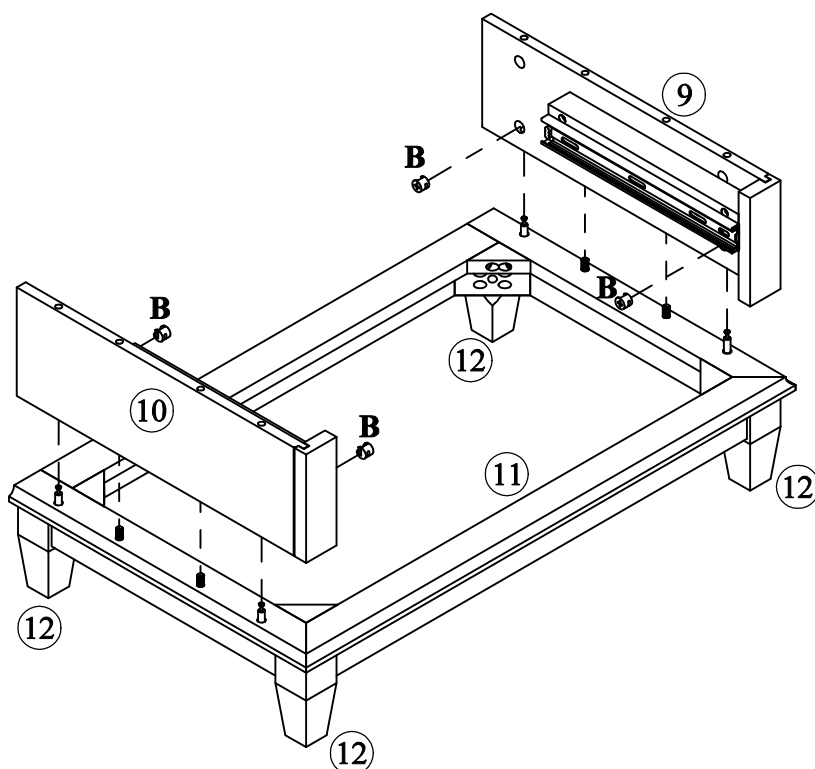B

4PCS



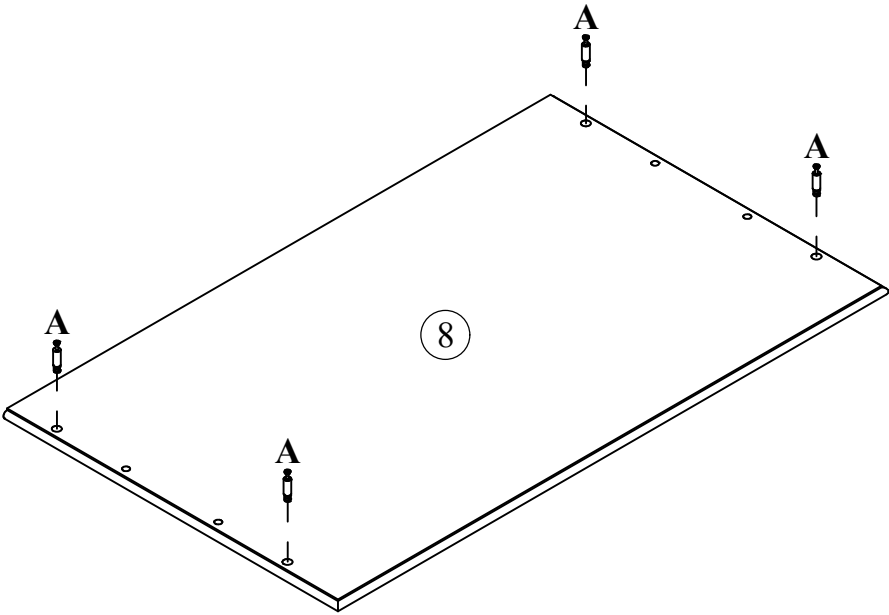

STEP: 3



A

4PCS




	 ✓	 Don't lean ✗	 Don't over tighten ✗
---	--	---	---

STEP: 4

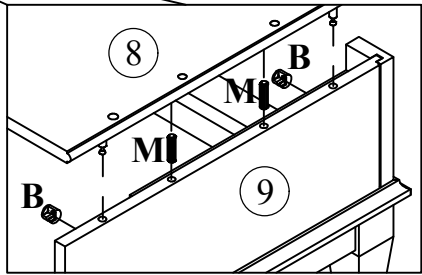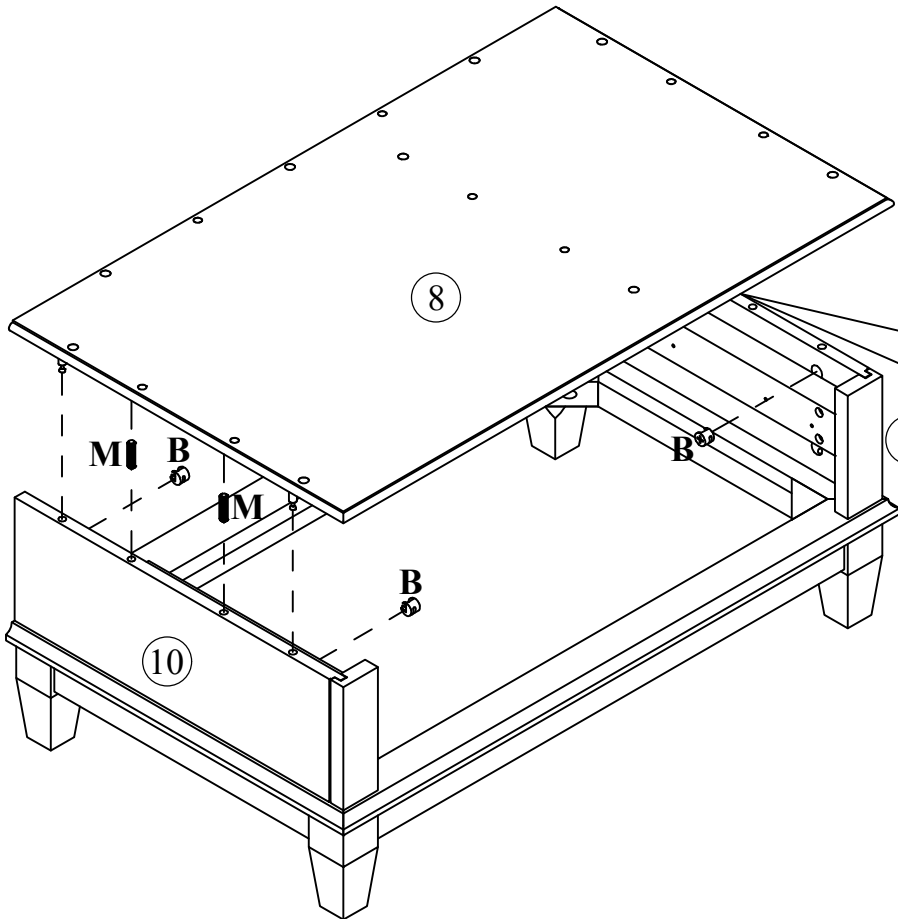
B	M
	
4PCS	4PCS




STEP: 5

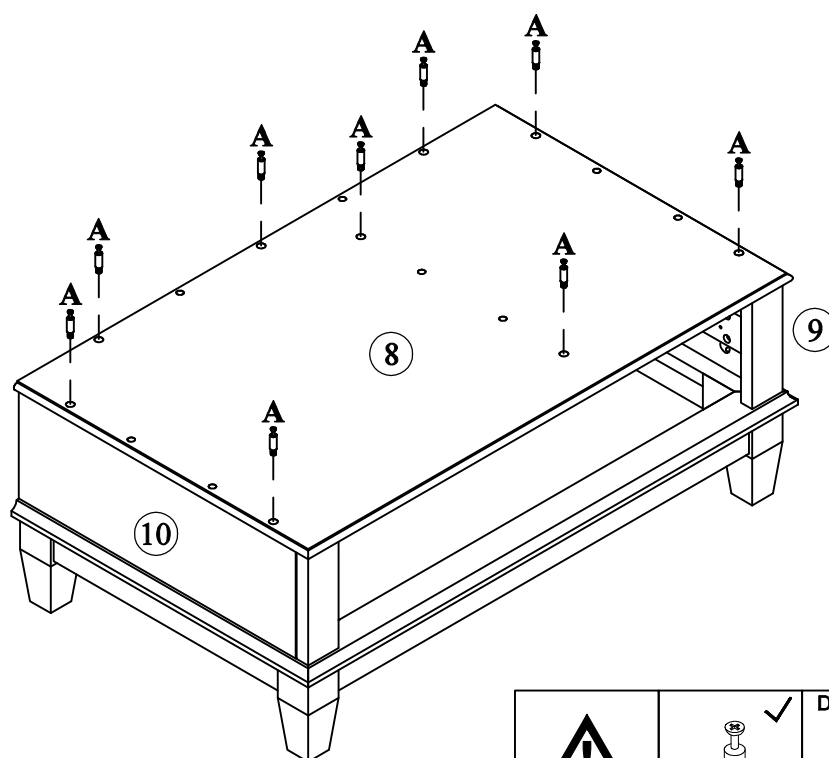


A




9PCS

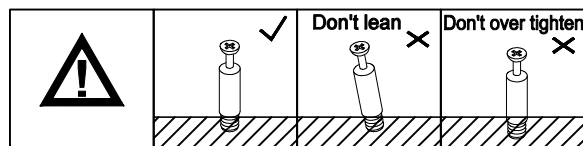


STEP: 6

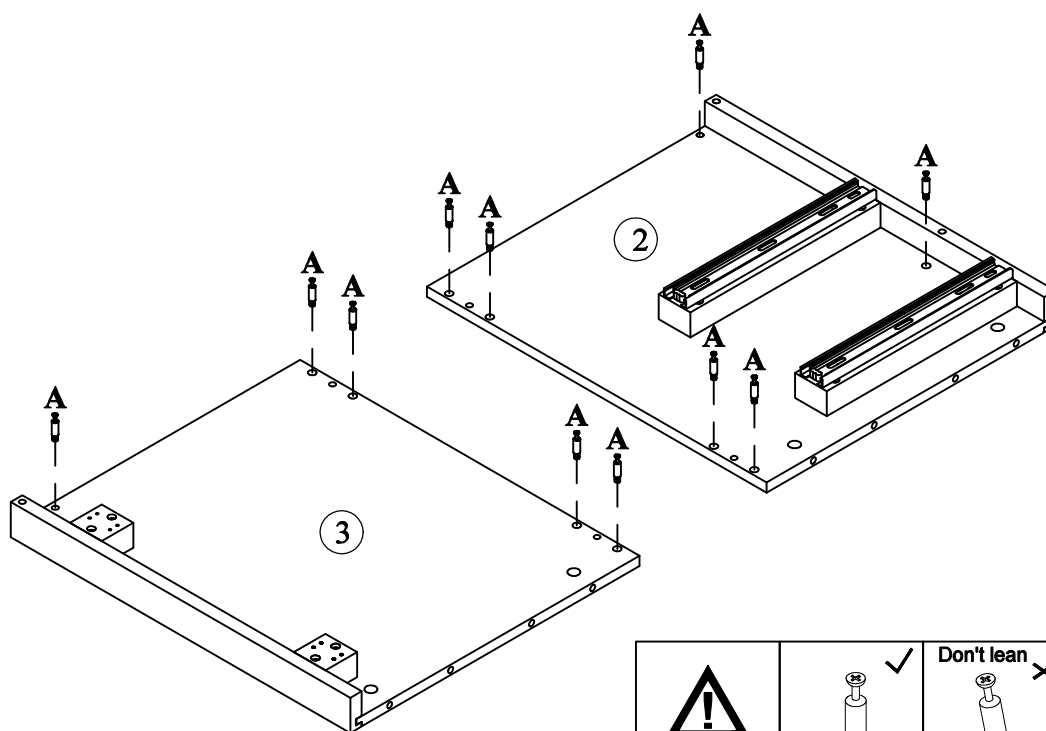

A



11PCS


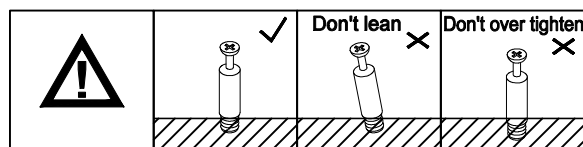


STEP: 7

A



2PCS

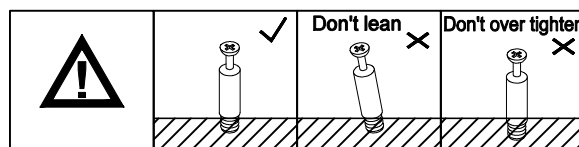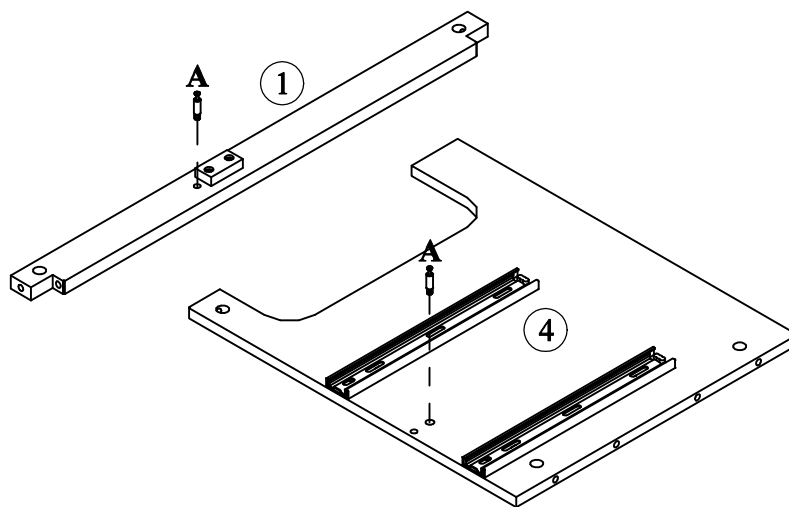

STEP: 8

B



2PCS

D




2PCS


M





1PC

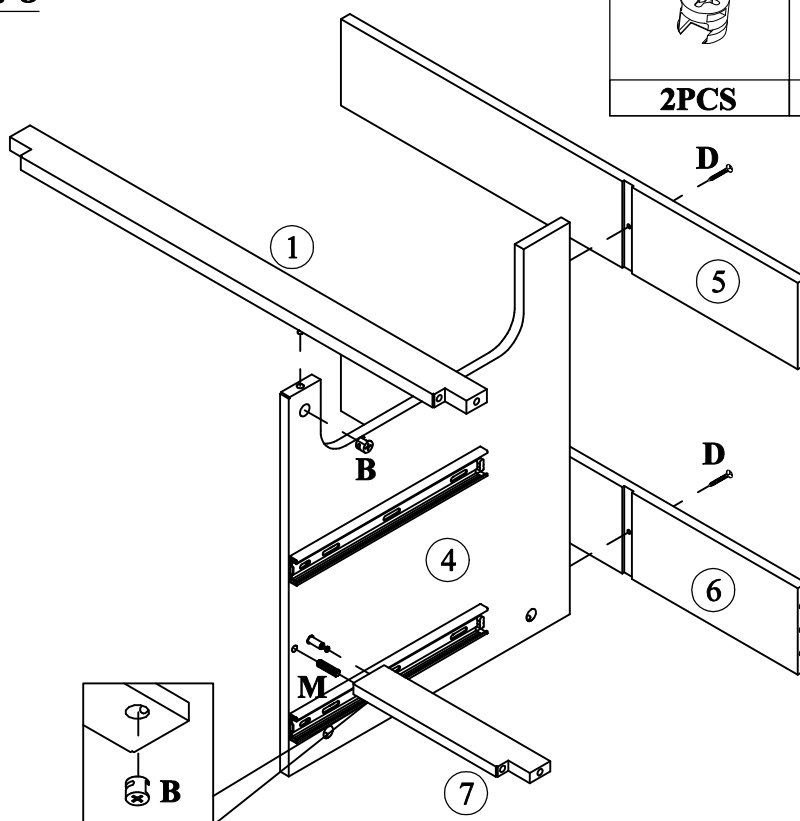


STEP: 9



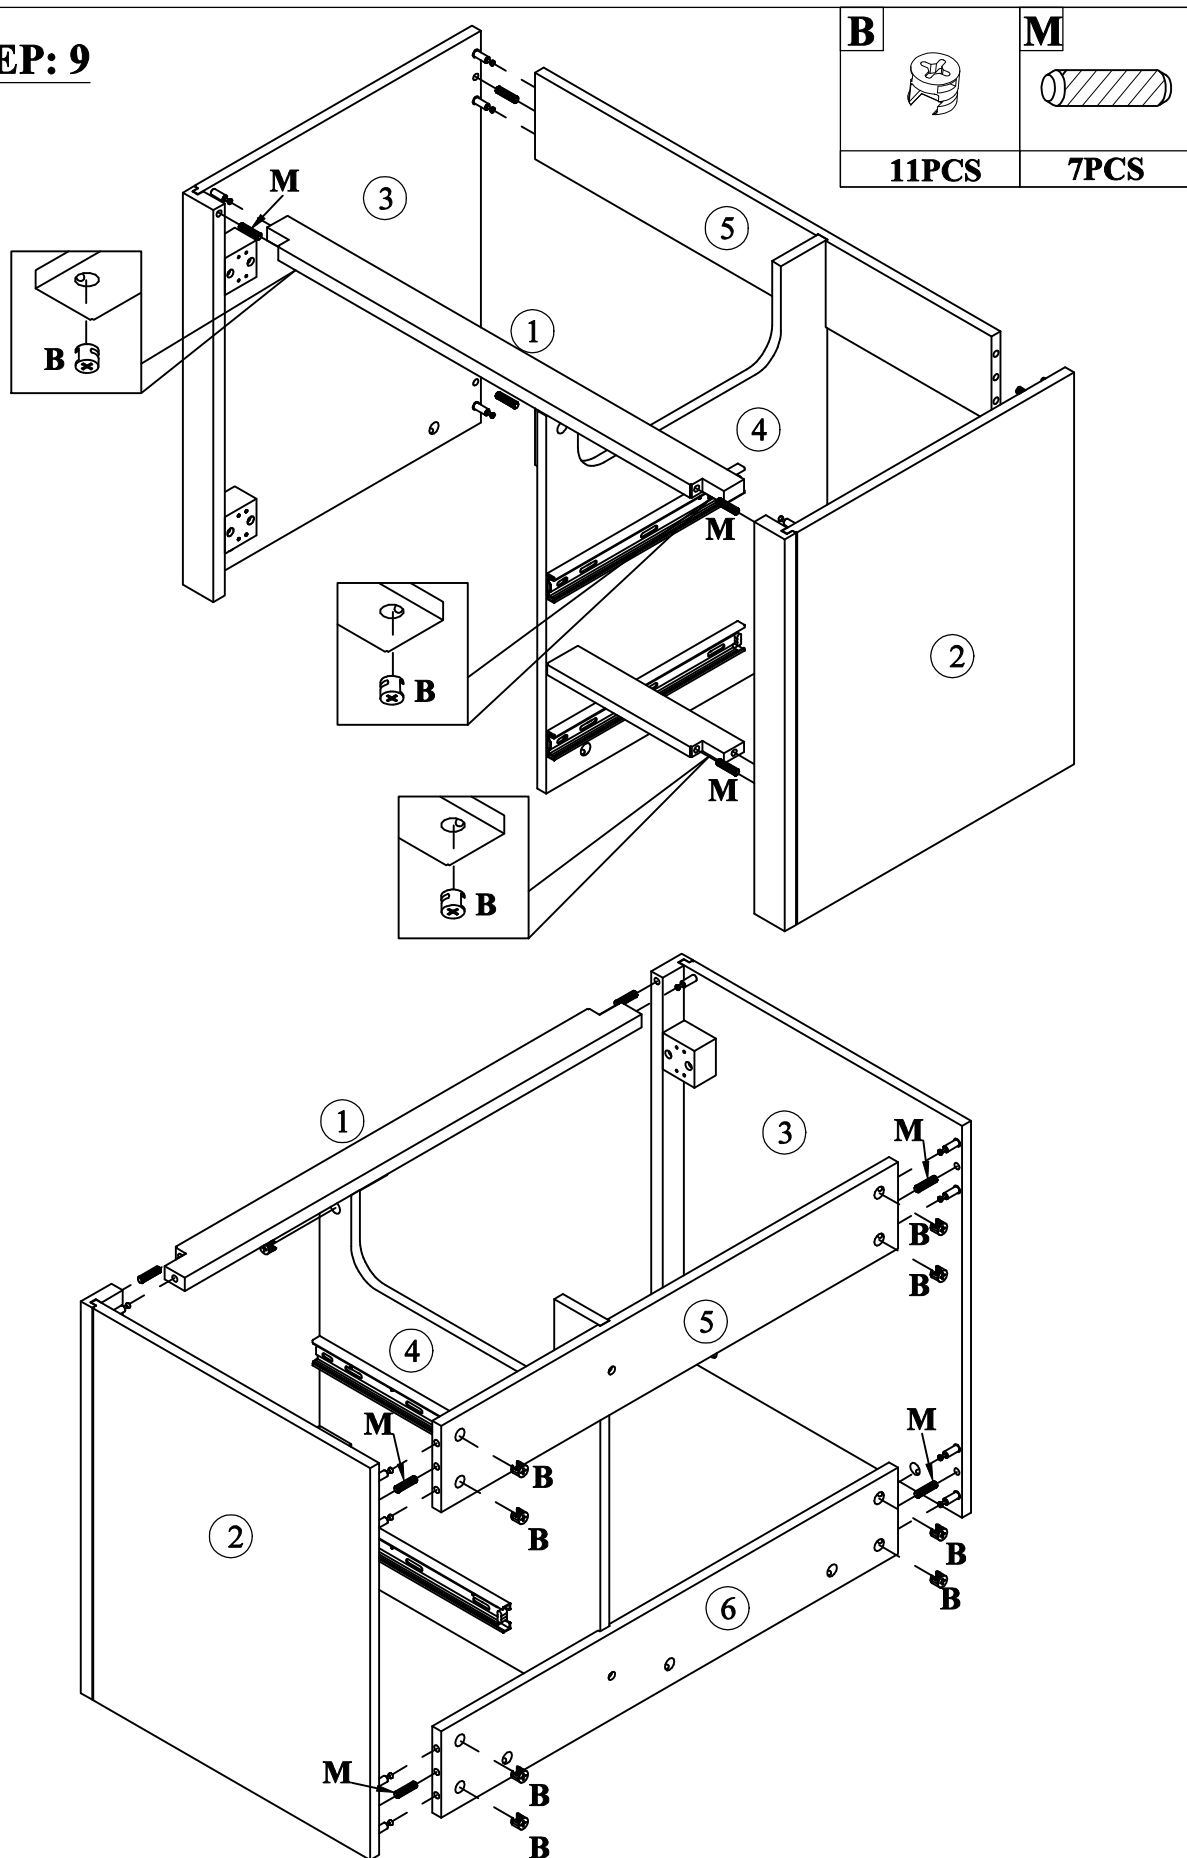


STEP: 10

B		M	
9PCS		8PCS	

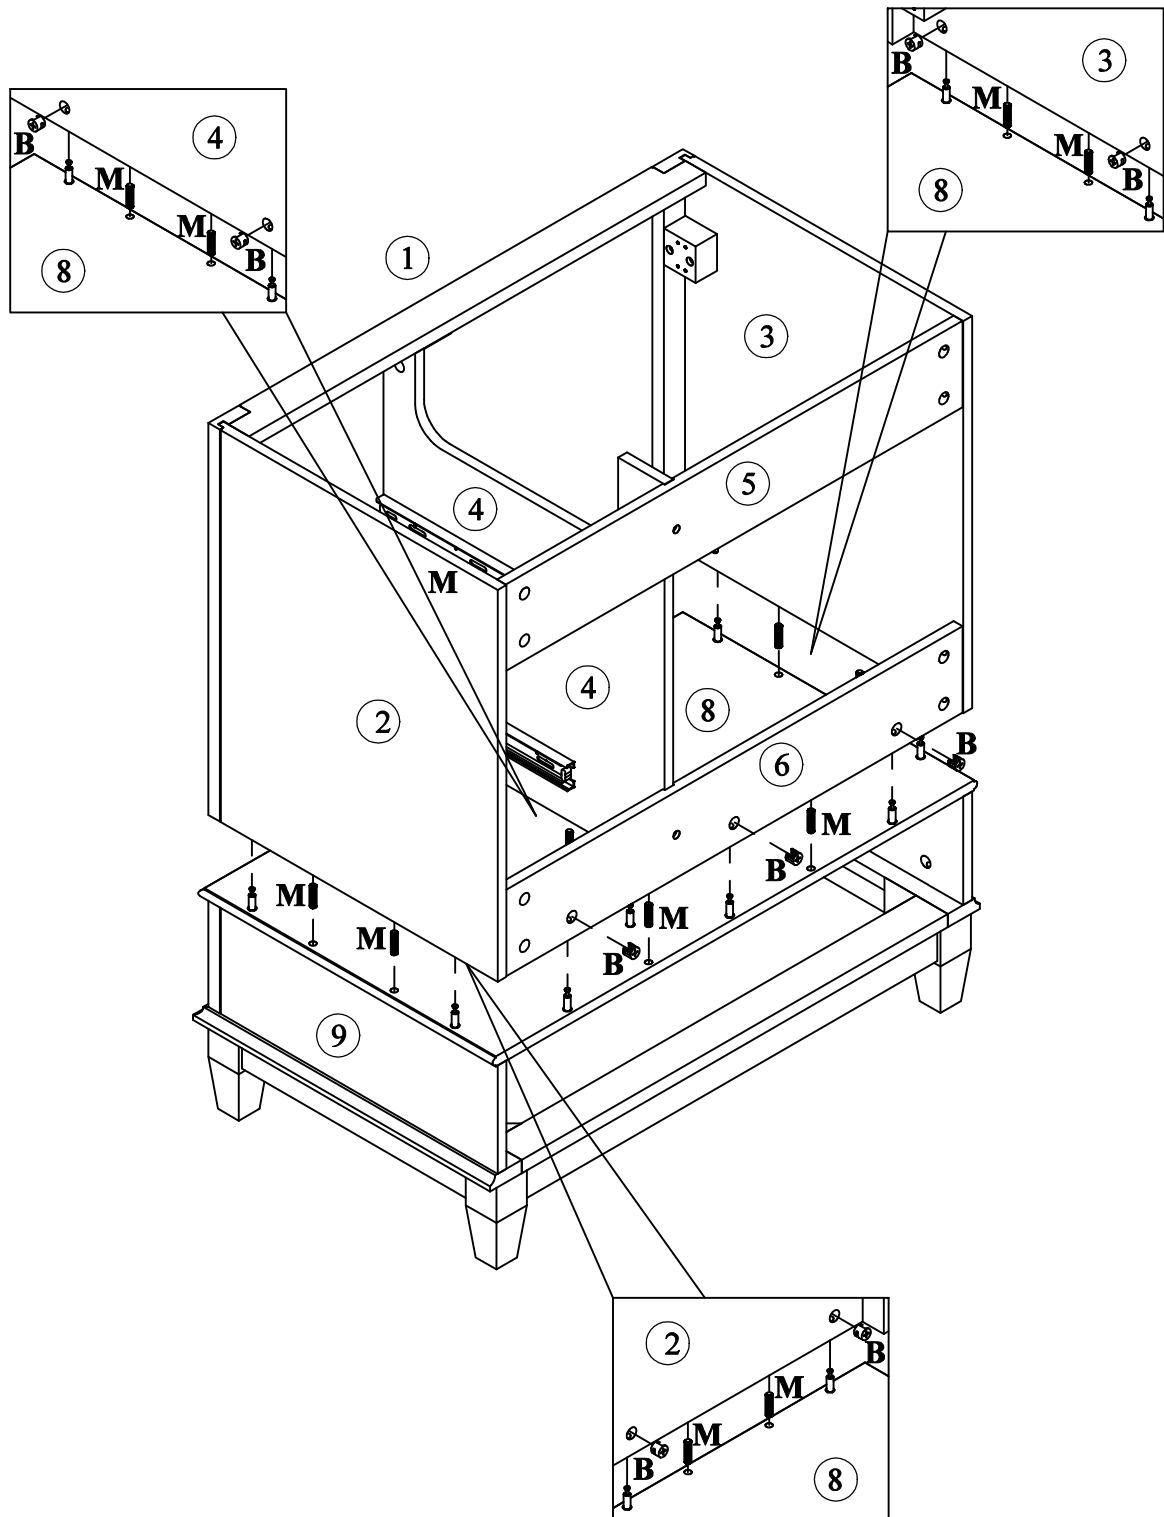

STEP: 11

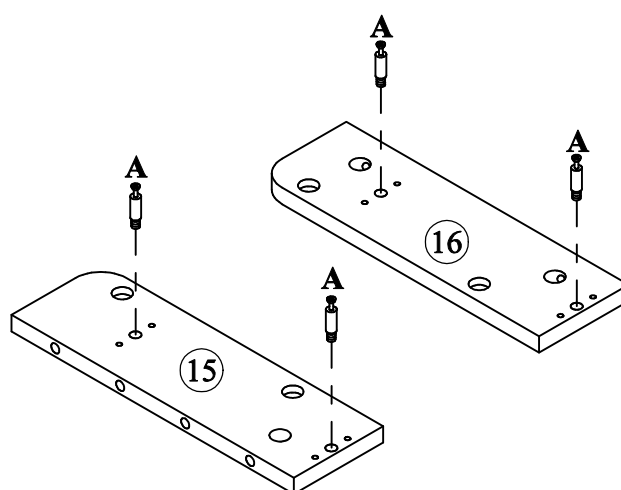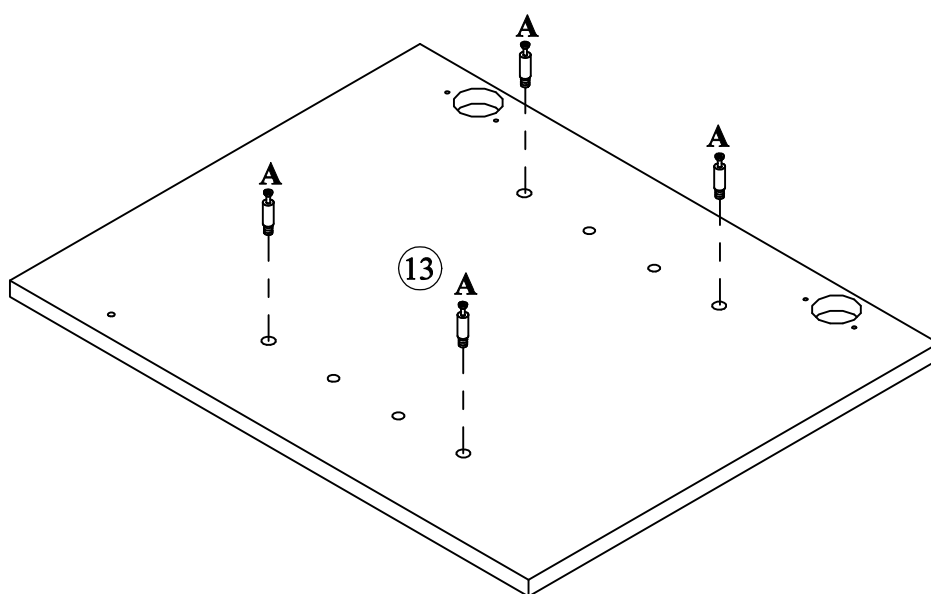A**8PCS**





Don't lean




Don't over tighten


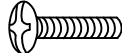



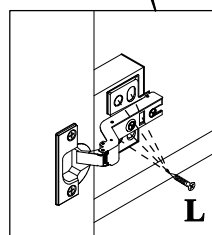
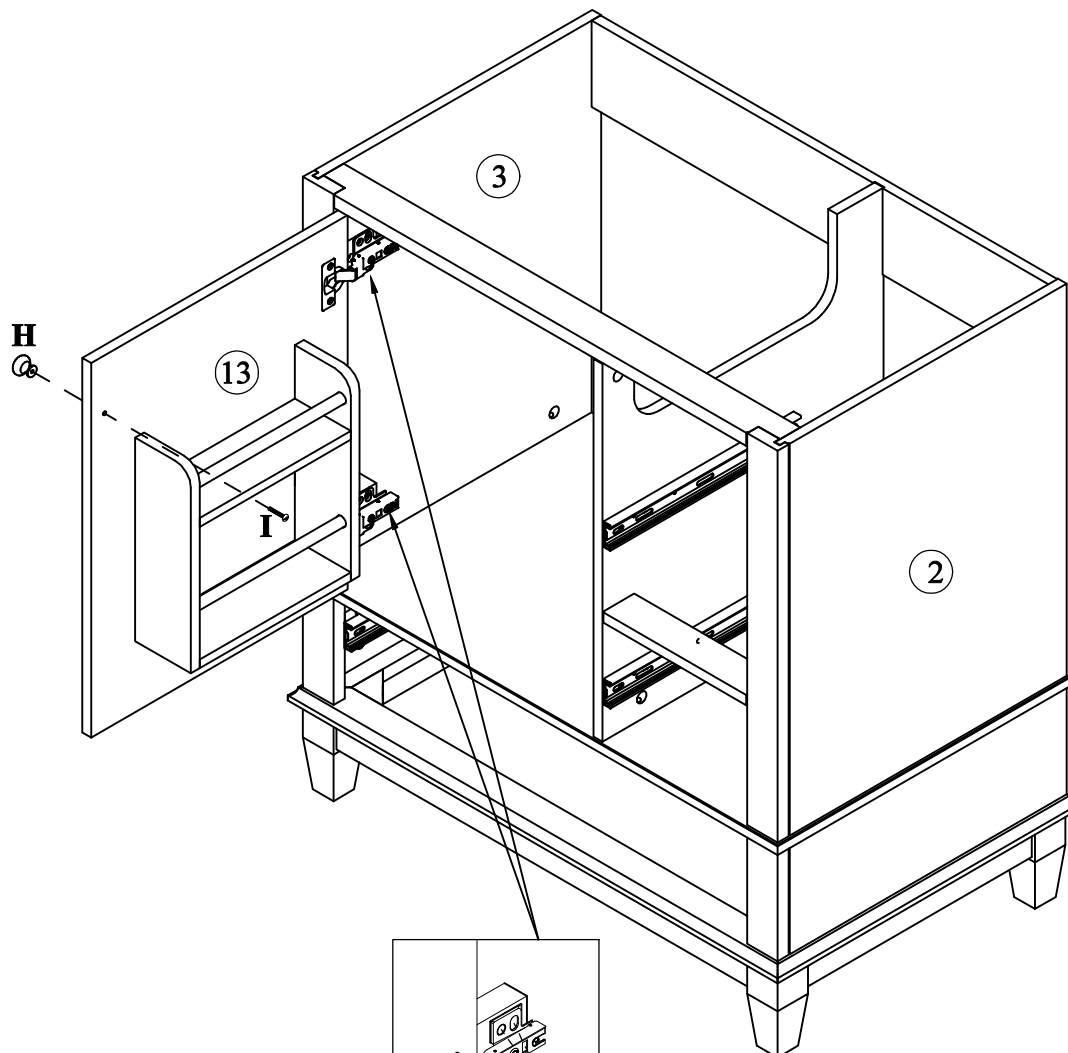
STEP: 12

B	K	L	M
			
8PCS	2PCS	4PCS	12PCS

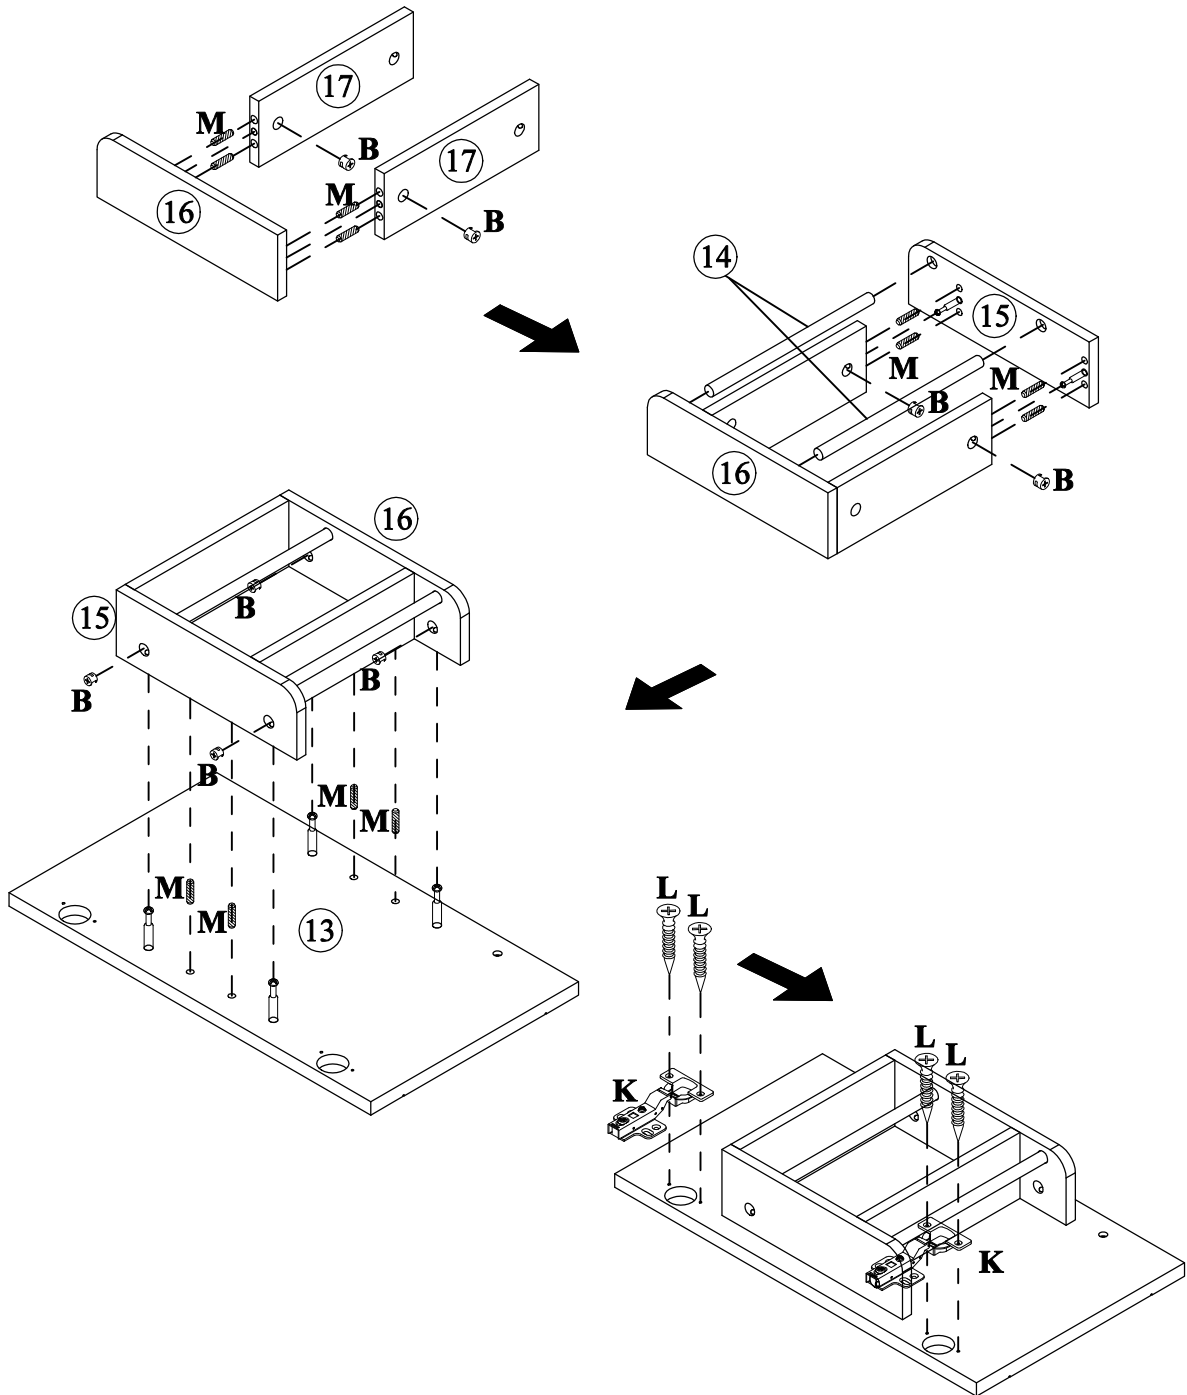


STEP: 13


H	I	L
		
1PC	1PC	8PCS




Use the screws to adjust up or down

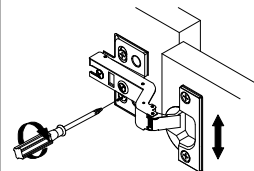


Use the screws to permanent

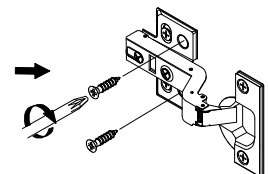

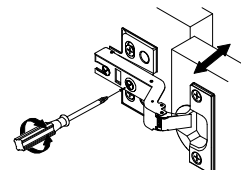



Use the screws to adjust left or right

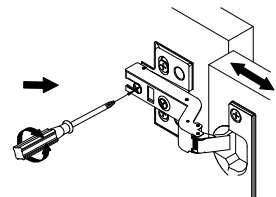


Use the screws to adjust in or out



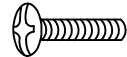


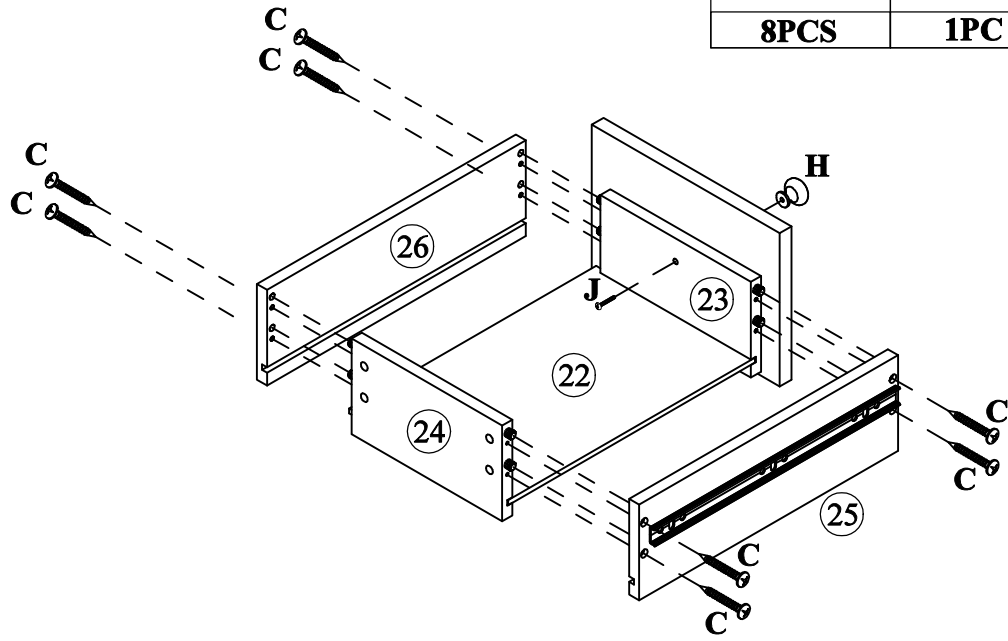
STEP: 14

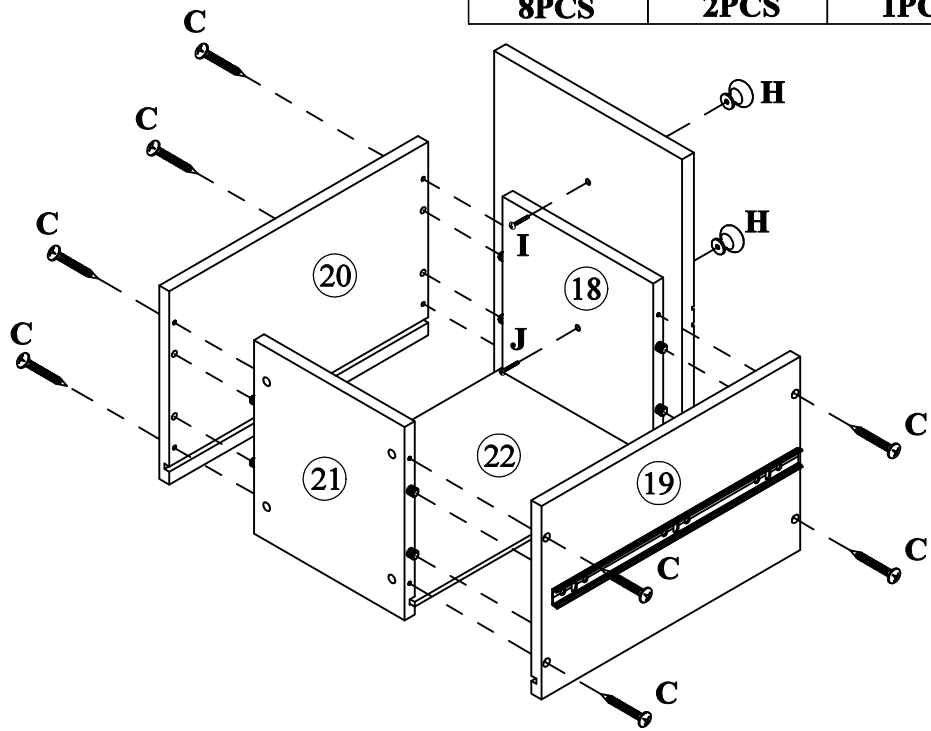C	H	I	J
			
8PCS	2PCS	1PC	1PC




STEP: 15


C	H	J
		
8PCS	1PC	1PC




STEP: 16

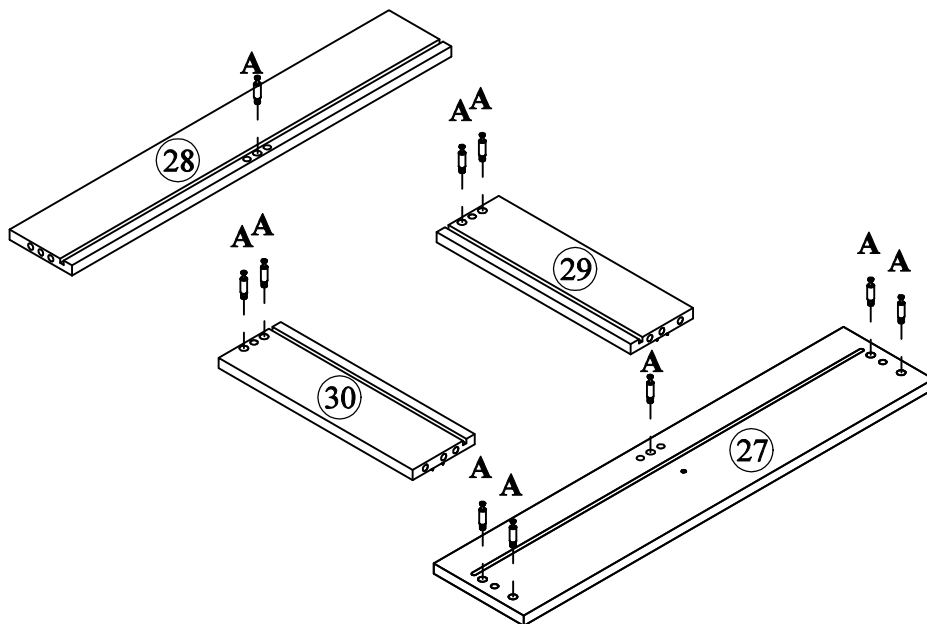


A



10PCS

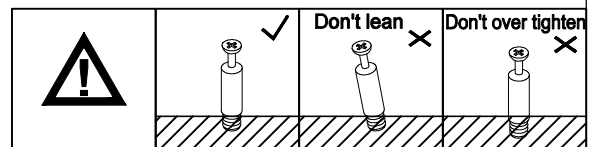

STEP: 17

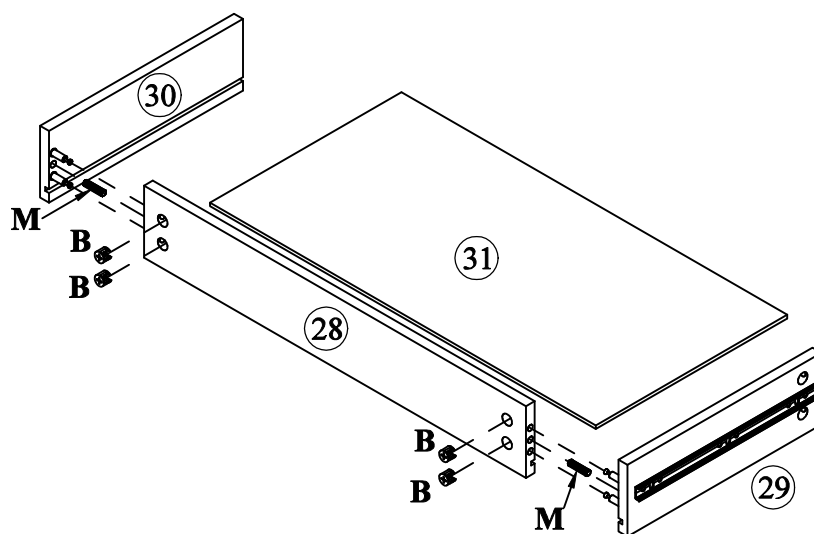


B







4PCS


M




2PCS

STEP: 18

B	H	I	M
			
6PCS	1PC	1PC	6PCS

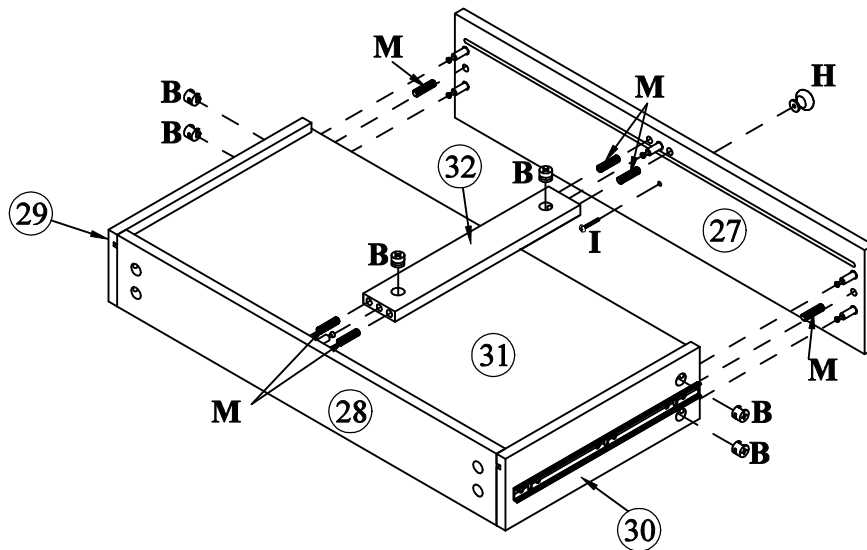


STEP: 19

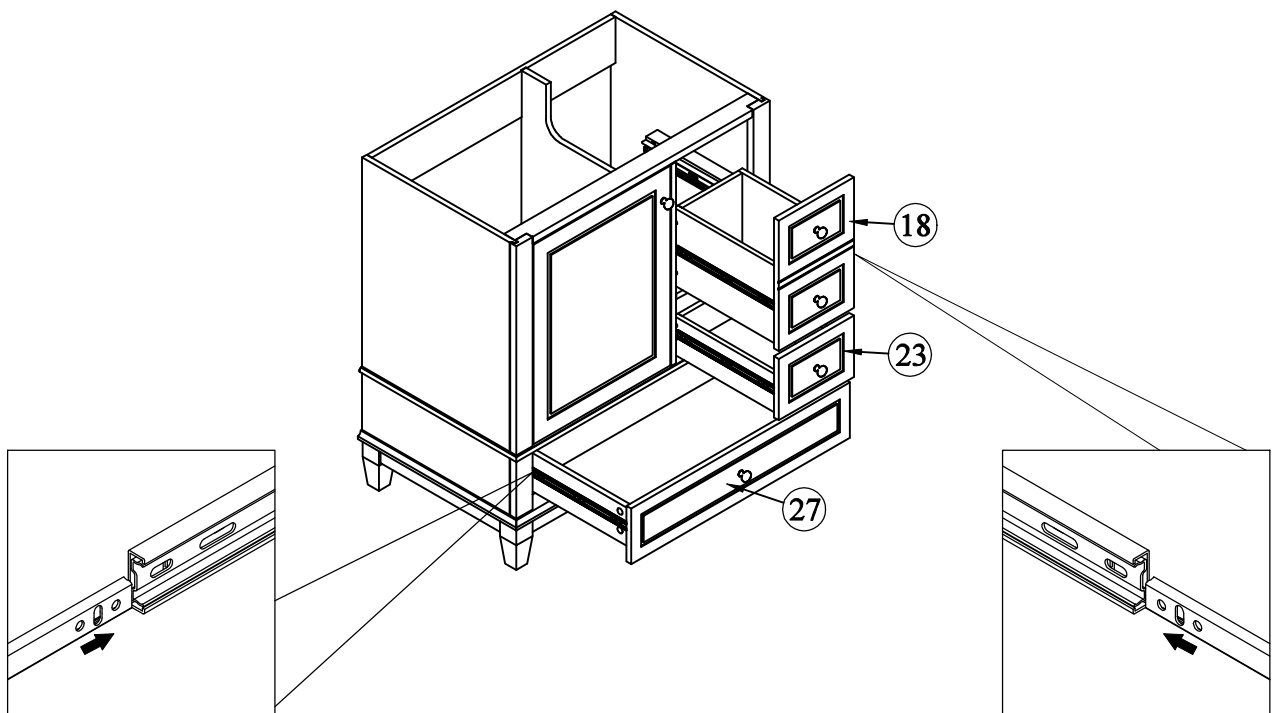


STEP: 20

N

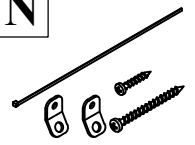


2SETS

Wall

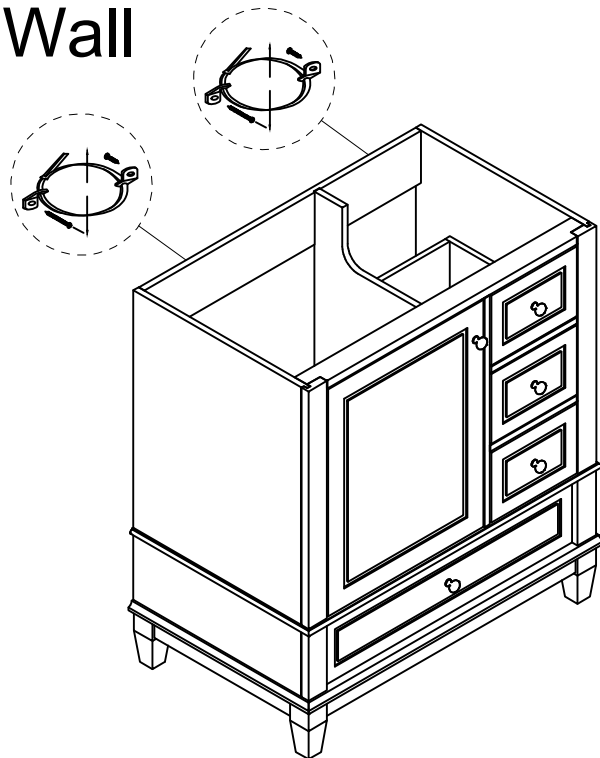


STEP: 21

Install the sink on the cabinet with glue.
Let stand for 24 hours

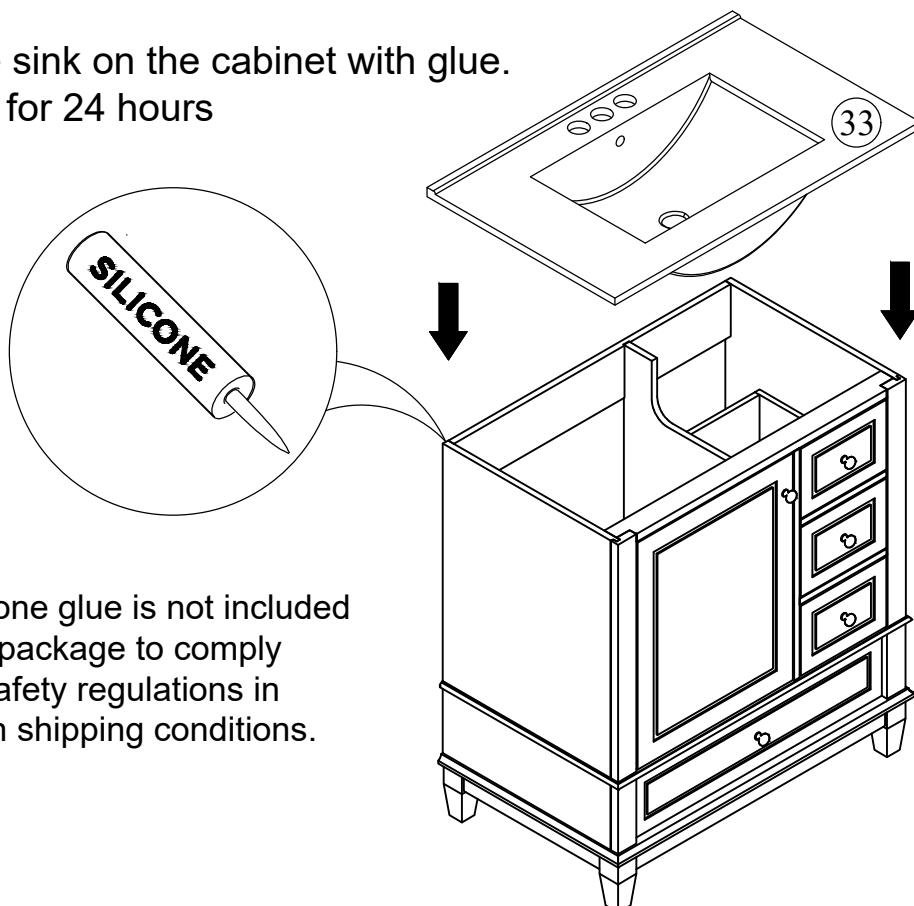


*Silicone glue is not included
in the package to comply
with safety regulations in
certain shipping conditions.

STEP: 22

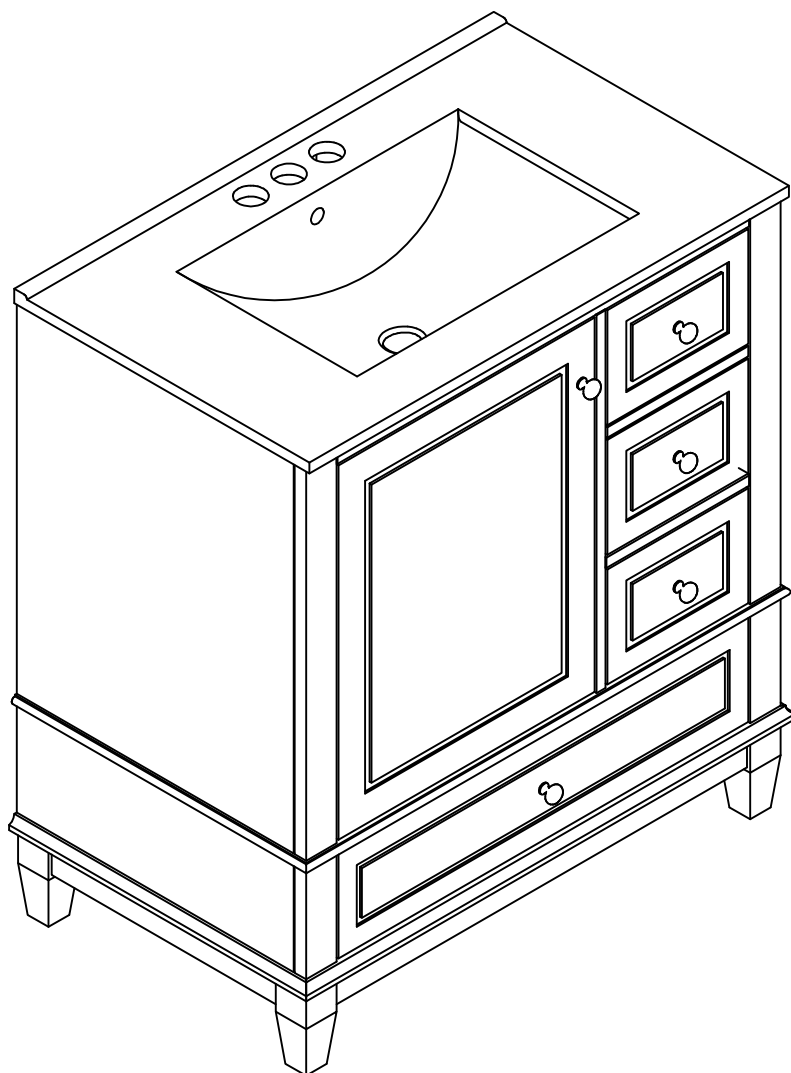

HINGE ADJUSTMENTS

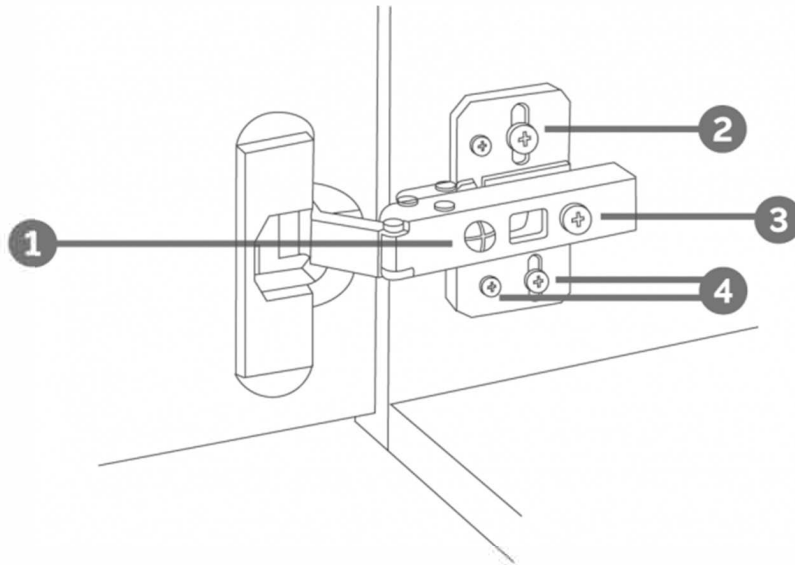


① Sideways / Tilt adjustment

Turn the screw

clockwise to move the door further away from the side of the cabinet

anticlockwise to move the door closer to the side of the cabinet

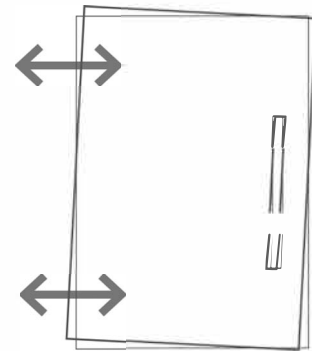


② ④ Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up

anticlockwise to move the door down

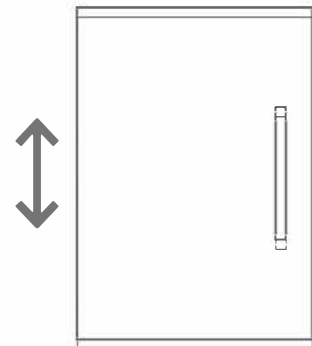

③ Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw

clockwise to decrease the gap between the door and the cabinet

anticlockwise to increase the gap between the door and the cabinet

