Assembly Instructions

Caution: You must read this before you proceed

Care & Maintenance



• Not for commercial use. For residential use only.



• Furniture may scratch floors. We recommend using furniture pads to protect your floors.



• Do not put hot items directly on furniture surface.



• Do not clean furniture with harsh cleansers or polish.



• Do not place furniture under direct sunlight.



• Do not place furniture near heating or cooling vents.



 Do not write on furniture without a padded barrier to protect the surface.



• Do not place furniture outside . For indoor use only.



• Stains may be removed with mild soap solution and damp cloth.




Children should not climb or jump on the furniture.



 Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in seat for hardware packs and legs.

CHAIR

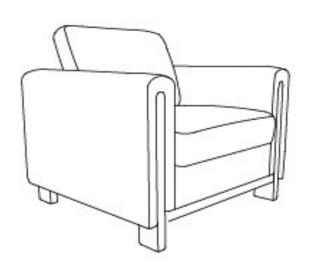


| Parts List | | | | |
|------------|---------|----------------|-----|--|
| Label | Picture | Description | QTY | |
| A | | Chair Base | 1 | |
| В | | Chair Backrest | 1 | |
| С | | Right Arm | 1 | |
| D | | Left Arm | 1 | |
| E | | Seat Cushion | 1 | |

| F | | Back Cushion | 1 | |
|---------------|-------------------|------------------|-----|--|
| G | | Crosspiece | 1 | |
| Н | | Front Wooden Leg | 2 | |
| I | 0 0 | Back Wooden Leg | 2 | |
| Hardware List | | | | |
| Label | Picture | Description | QTY | |
| 1) | | Bolt (M8*60mm) | 13 | |
| 2 | | Bolt (M6*70mm) | 7 | |
| 3 | () шишший | Bolt (M6*45mm) | 3 | |
| 4 | <u></u> | Washer | 15 | |
| (5) | | Spring Washer | 15 | |
| 6 | | Allen Wrench | 1 | |

Assembly Preparation

Before Beginning Assembly:

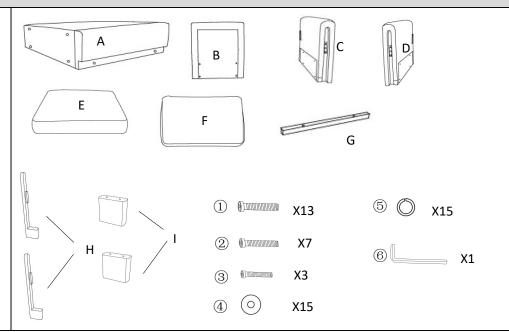




- Read instructions, cover to cover-
- Have 2 adults on hand for assembly-




- Do not assemble on flooring or carpet-
- Assemble on a clean non-marring surface (packing foam)-
- 0
 - Save all packaging until finished-

Assembly Steps

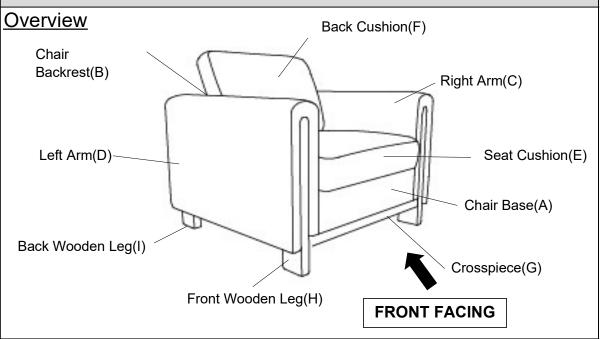


This CHAIR has multiple parts and may require about 30 minutes to assemble. To give you an overview of the Sofa parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.



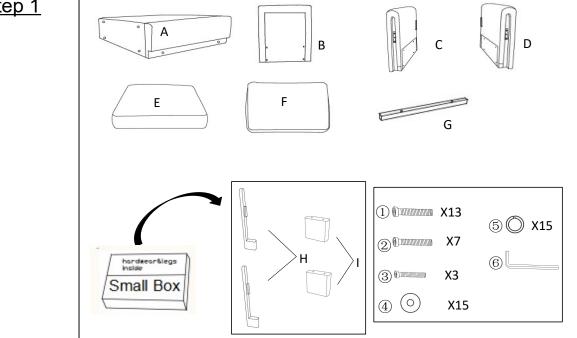


Take out the Chair Base(A), Chair Backrest(B), Left Arm(D), Right Arm(C), Seat Cushion(E), Back Cushion(F), Arm Cushion(G) and Small Box. Open the Small Box to take out the Wooden Legs and Hardware. Place all the parts on a clean, non-marring surface.

Step 2

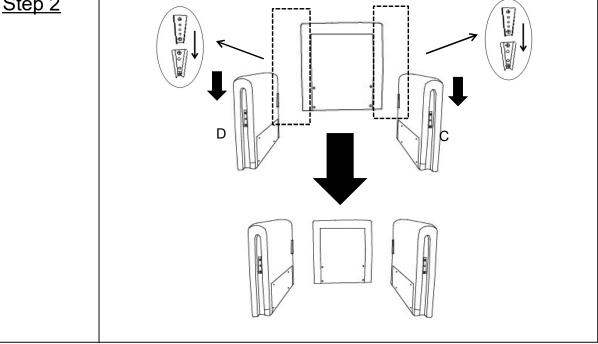


With assistance from your adult partner, hold up the Chair Backrest(B). Align the mounting brackets on both sides of the Chair Backrest(B) with those on the Left Arm(D) and Right Arm(C).

Then slide Chair Backrest(B) downward by hand to make sure it locks into place as pictured.

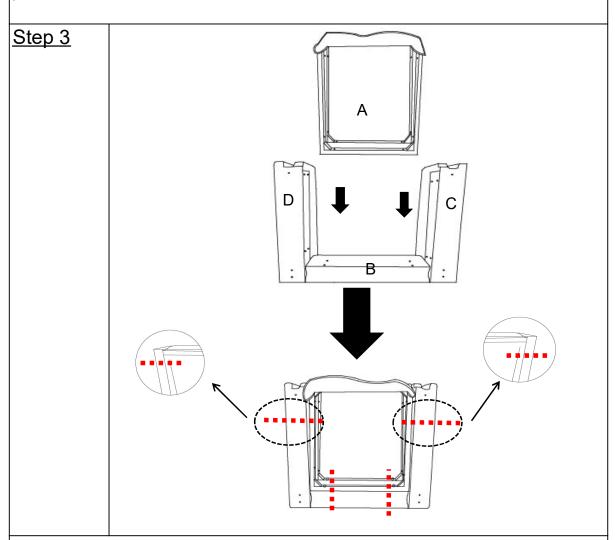

Place the Chair Backrest(B) on a clean, non-marring surface.

With assistance from your adult partner, align the mounting positions on the back and on both sides of the Chair Base(A) to the mounting positions on the Left Arm(D),Right Arm(C) and Chair Backrest(B), and ensure the bottom of the Chair Base(A),Chair Backrest(B),Left Arm(D) and Right Arm(C) at the same level.

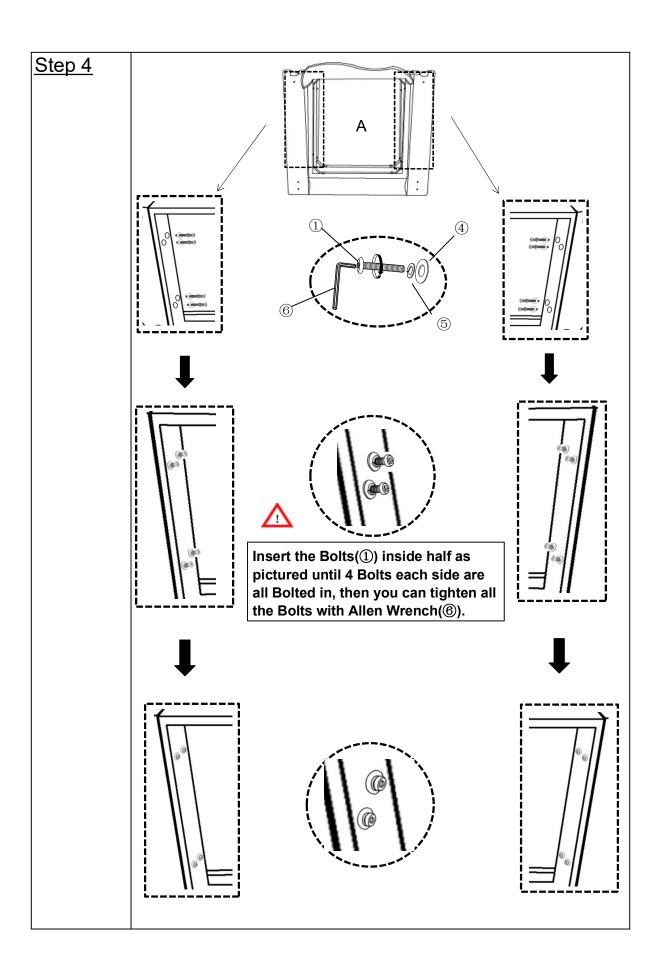


Open the back non-woven cover under Chair Base(A).

Then attach using Bolts(①), Spring Washers(⑤) and Washer(④) with Allen Wrench(⑥).

Please do not tighten the Bolts, just bolt them in half-way until all bolts are in,then tighten all the Bolts with the Allen Wrench(⑥).


Note: The bottom of the Chair Base(A) frame must be aligned with the bottom of the Armrest.

Step 5

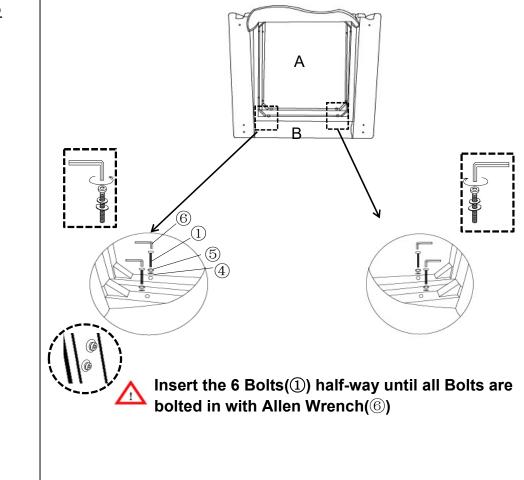


Using the Allen Wrench(\bigcirc) to secure Sofa Base(A) to the front-bottom of Chair Backrest(B) with the Bolts(\bigcirc), Spring Ring(\bigcirc) and Washers(\bigcirc). Insert the 2 Bolts(\bigcirc) half-way starting one by one as pictured. Then tighten the Bolts(\bigcirc) with the Allen Wrench(\bigcirc).

Step 6

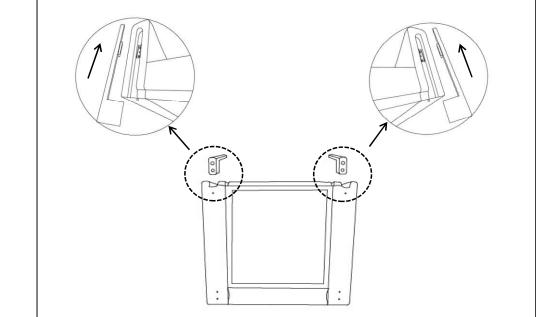

Align the Front wooden(H)with the insert of the Left arm (D) \subset Right arm(C) and push it up from bottom to place


Step 6

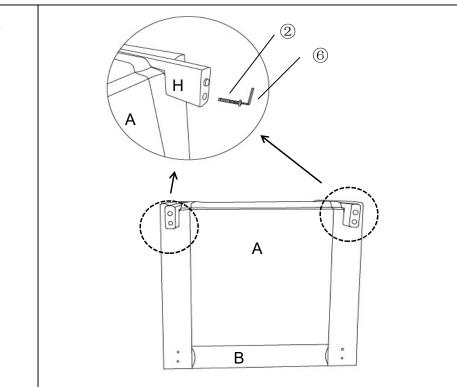

then place the Front Wooden Leg(H) at the front of the Chair Base (A) frame and align them with the installation position。


Attach the Front Wooden Leg(H) to the Left arm (D) 、Right arm(C) using Bolts(②) with the Allen Wrench(⑥).

Step 7

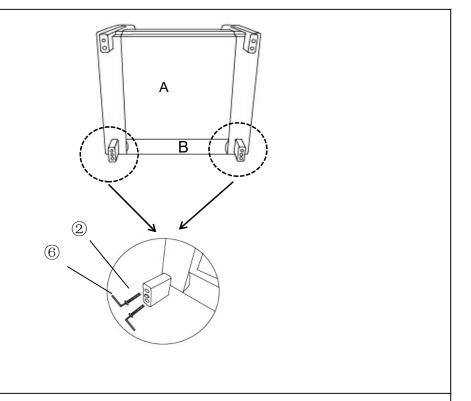


Attach the Back Wooden Leg(I) to the Left arm (D) 、Right arm(C) using Bolts(②) with the Allen Wrench(⑥).

Step 8

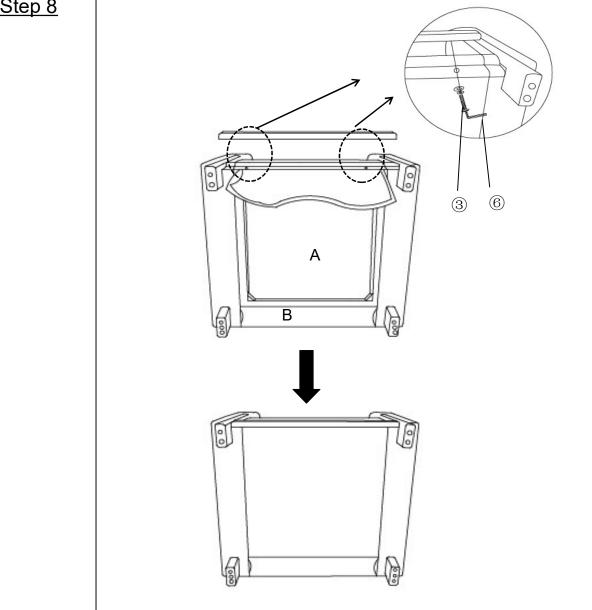

Place the Crosspiece(G) in front of the Chair Base (A) frame and align it with the hole position,Attach the Crosspiece(G) to the Chair Base (A) using Bolts(③) with the Allen Wrench(6).

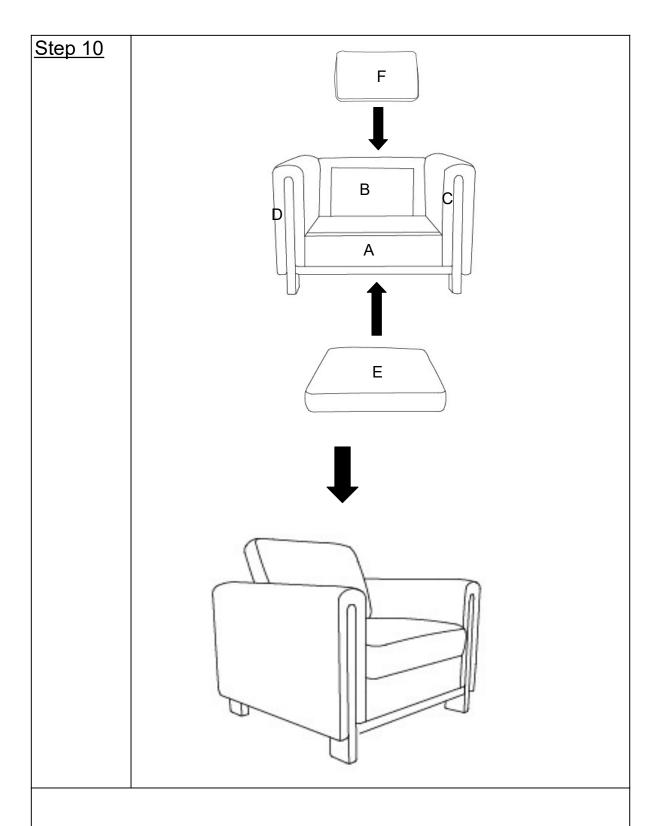

Put the Back Cushion(F), Seat Cushion (E) on the Chair Base(A). **Now your Chair is ready for use.**

This Chair can only be used on a flat, level surface.