



ASSEMBLY INSTRUCTIONS SKU CODE: (SD33008) ITEM NAME: QUEEN MURPHY BED WITH SHELF

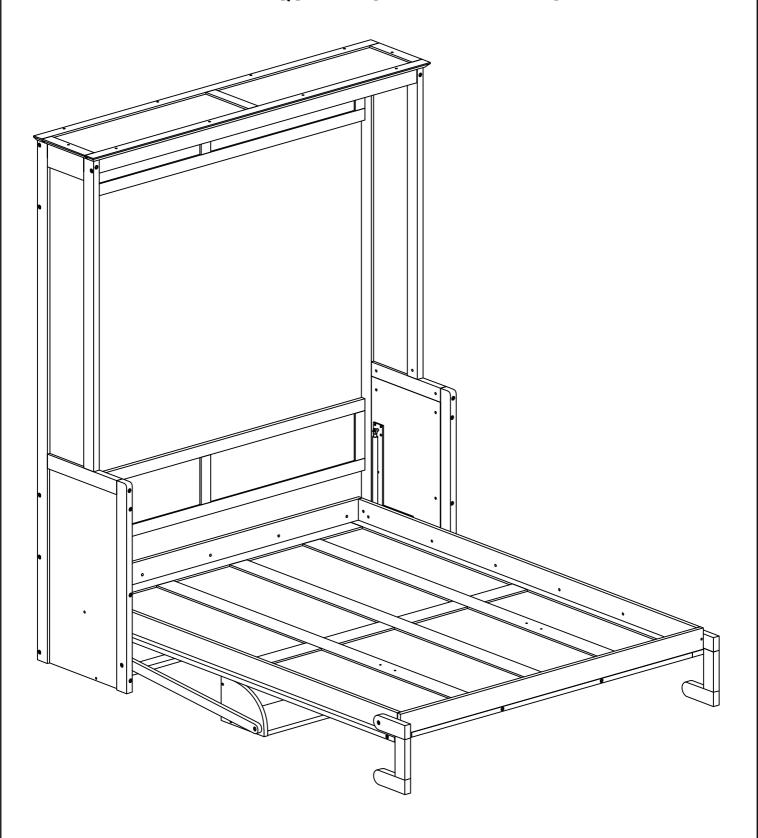

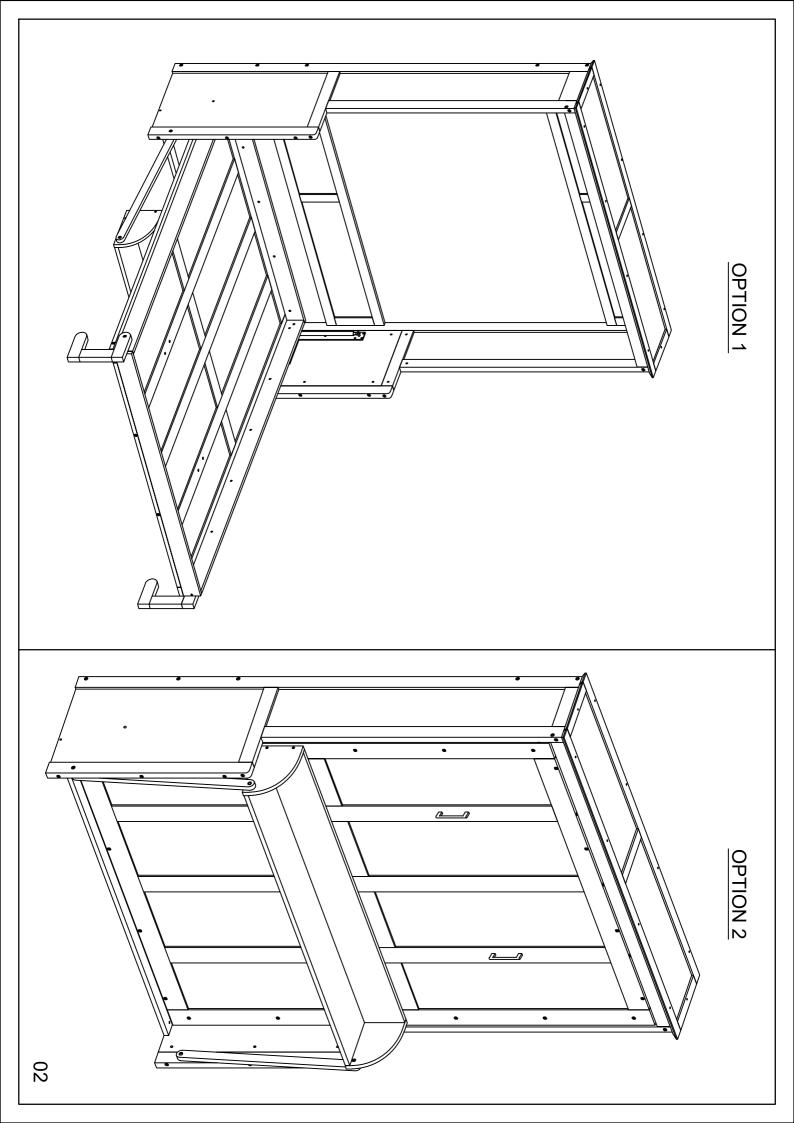

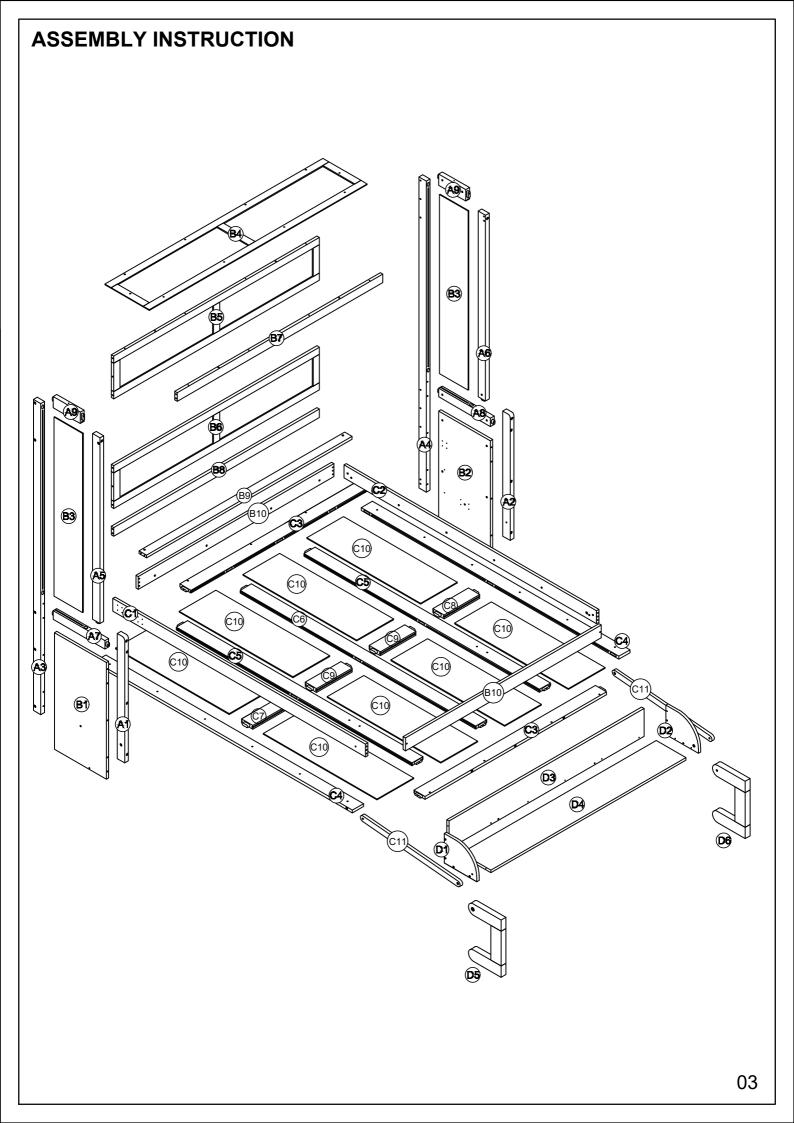


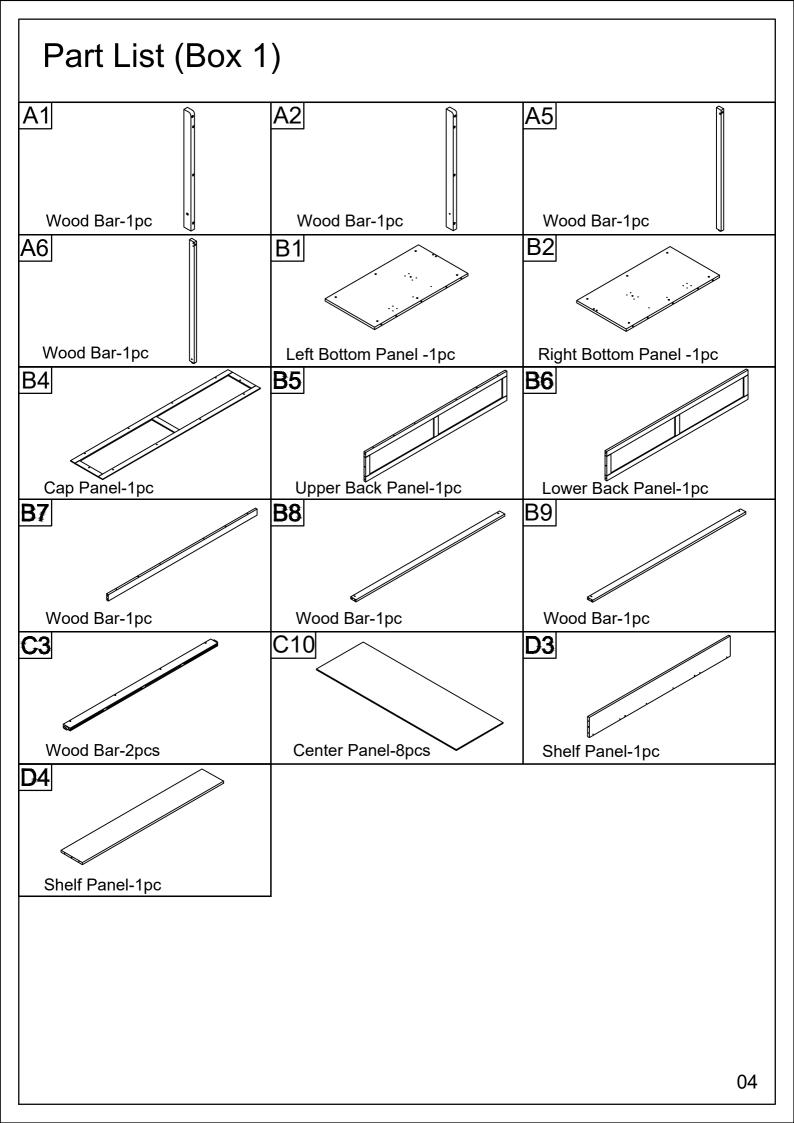






Part List & Hardware List (Box 2) **A3 A4** Wood Bar-1pc Wood Bar-1pc Left Lower Bar-1pc **A9 B3 A8** Left & Right Upper Bar-2pcs Right Lower Bar-1pc Left & Right Upper Panel-2pcs **B10** Wood Bar-1pc Wood Bar-1pc Wood Bar-2pcs C5 C6 Wood Bar-2pcs Wood Bar-2pcs Wood Bar-1pc <u>C8</u> Wood Bar-1pc Wood Bar-1pc Wood Bar-2pcs **D2** Shelf Right Side Panel-1pc Shelf Left Side Panel-1pc Shelf Support-2pcs D6 Right Leg Frame-1pc Left Leg Frame-1pc Left Metal Corner Bracket-1pc 05


Part List & Hardware List (Box 2) D8 E1 **E2** Right Metal Corner Bracket-1pc Metal Connecting Plate-2pcs Gas Spring-2pcs

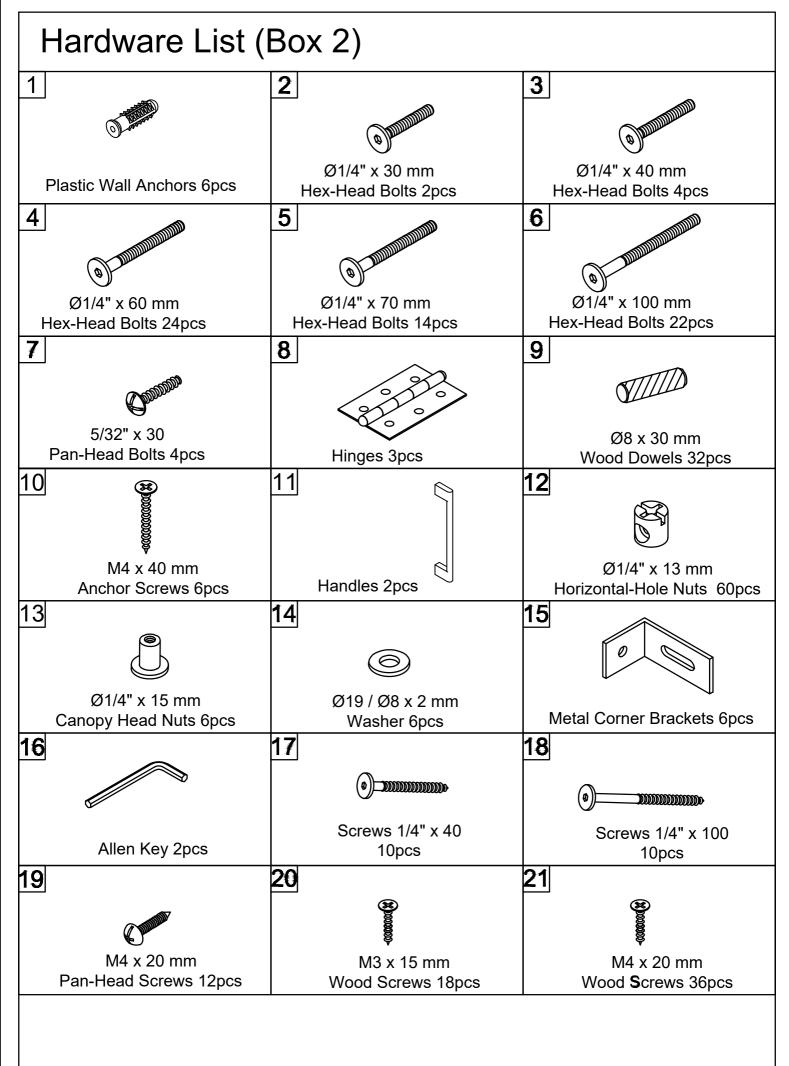


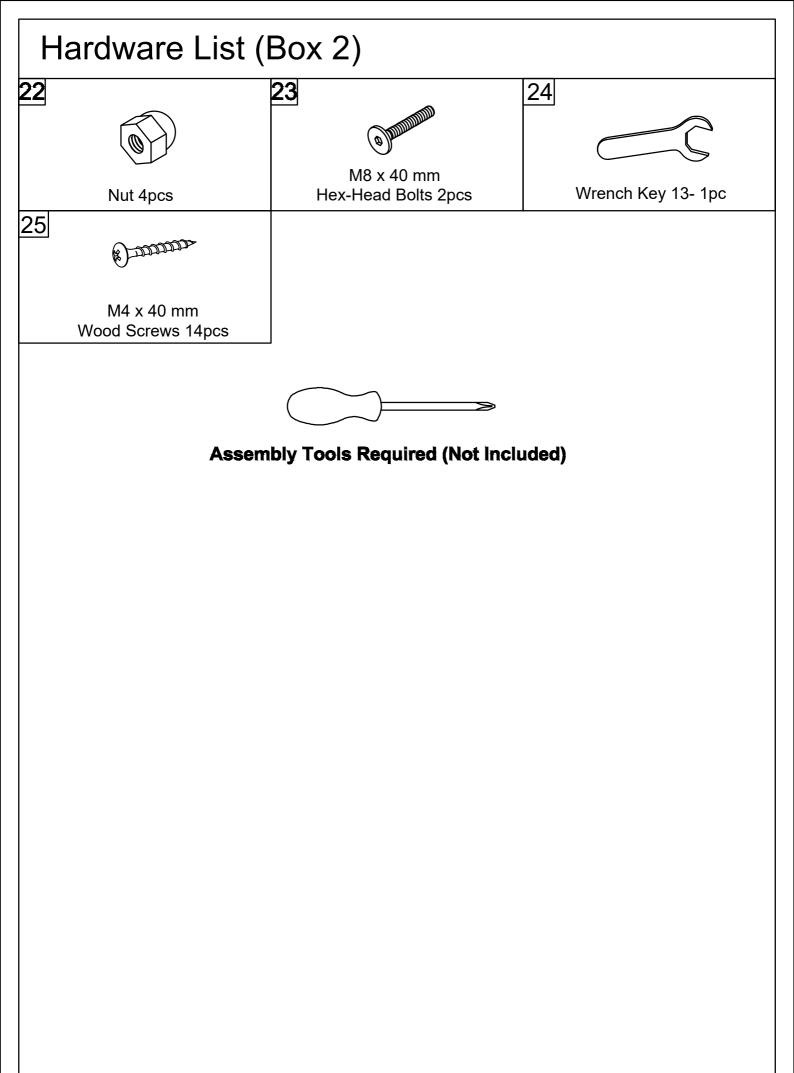


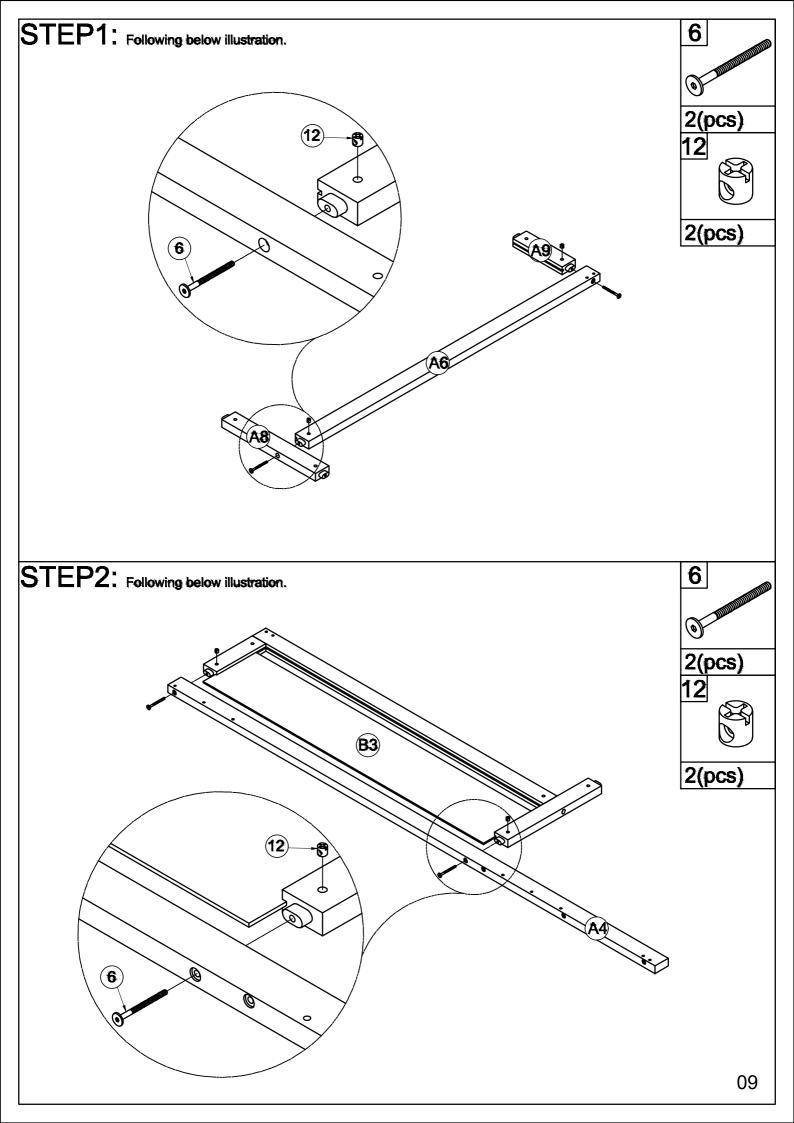


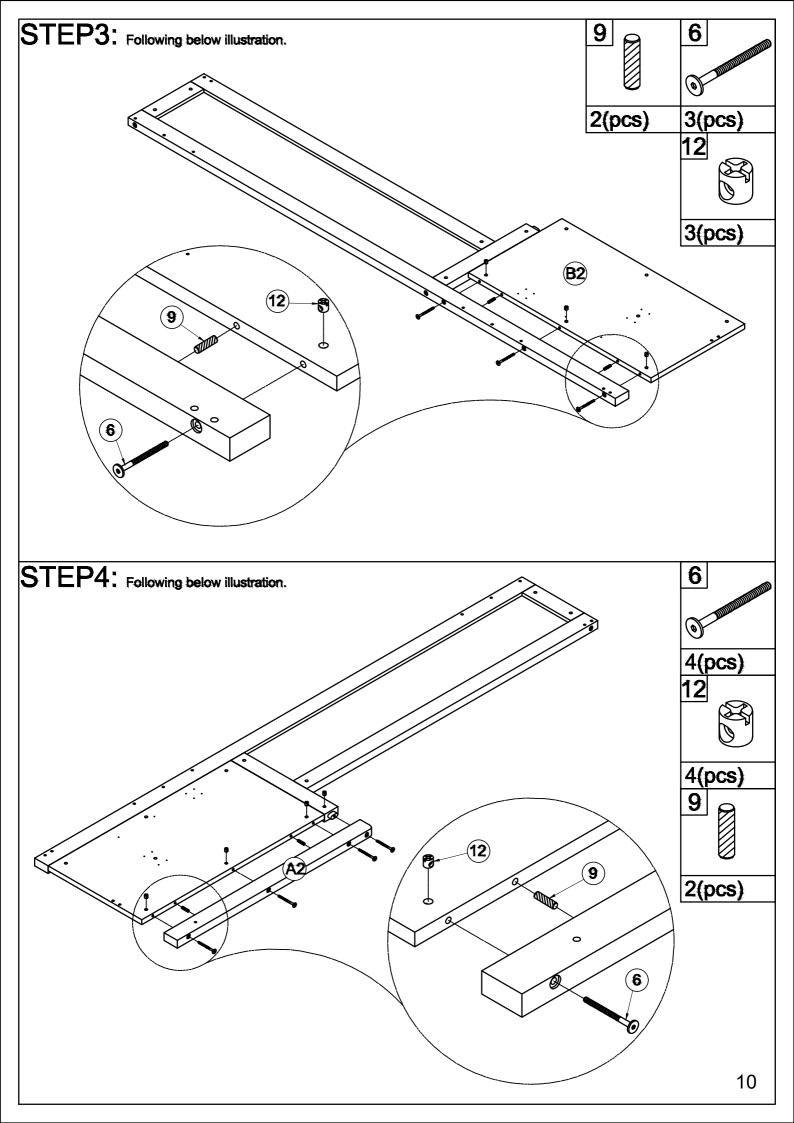


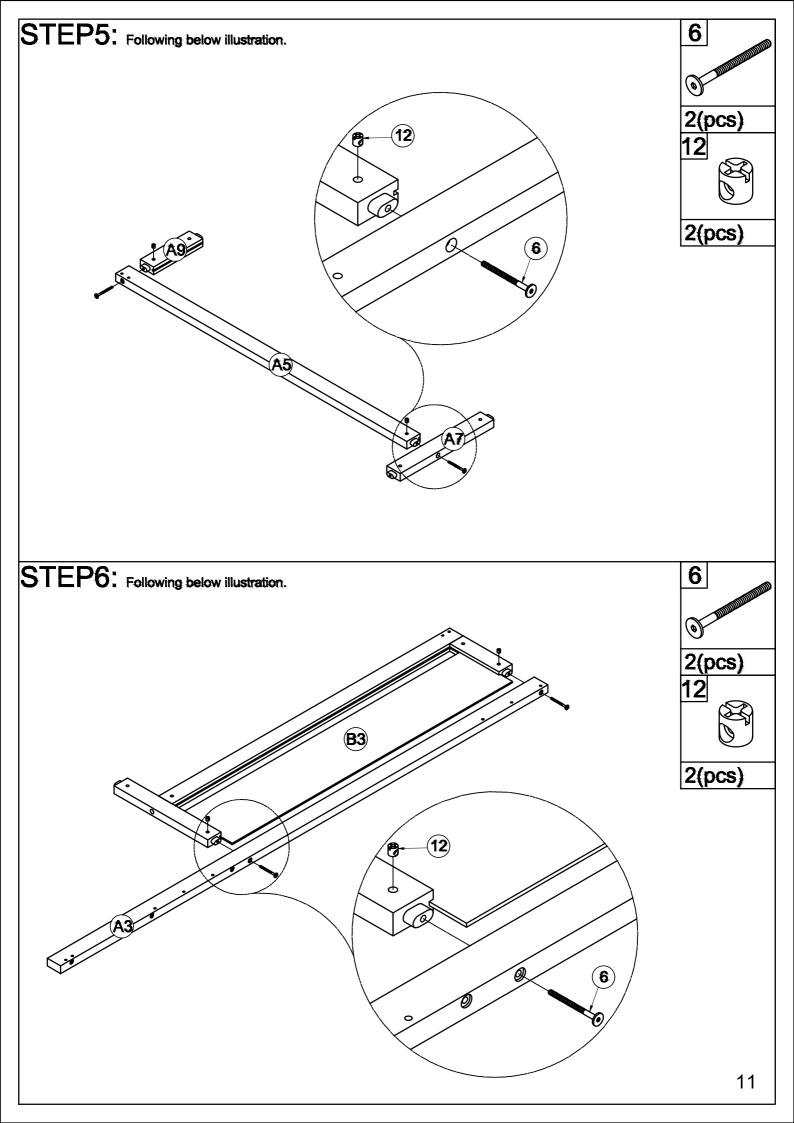


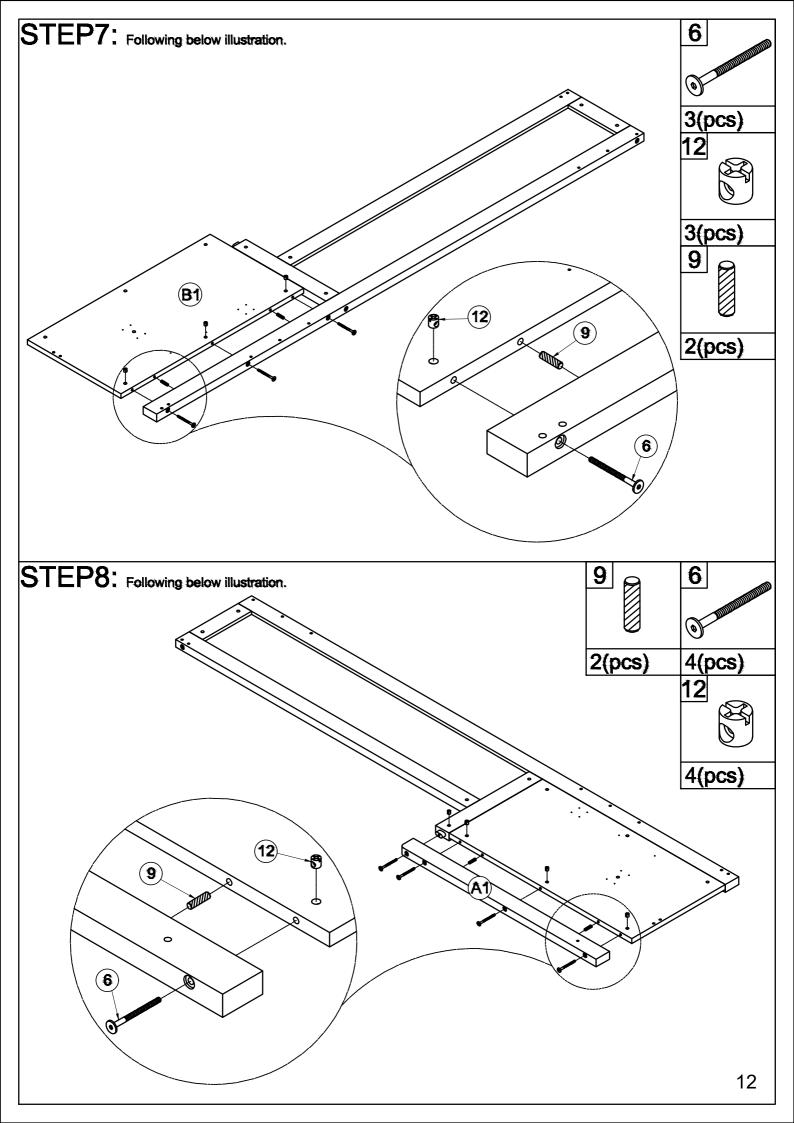


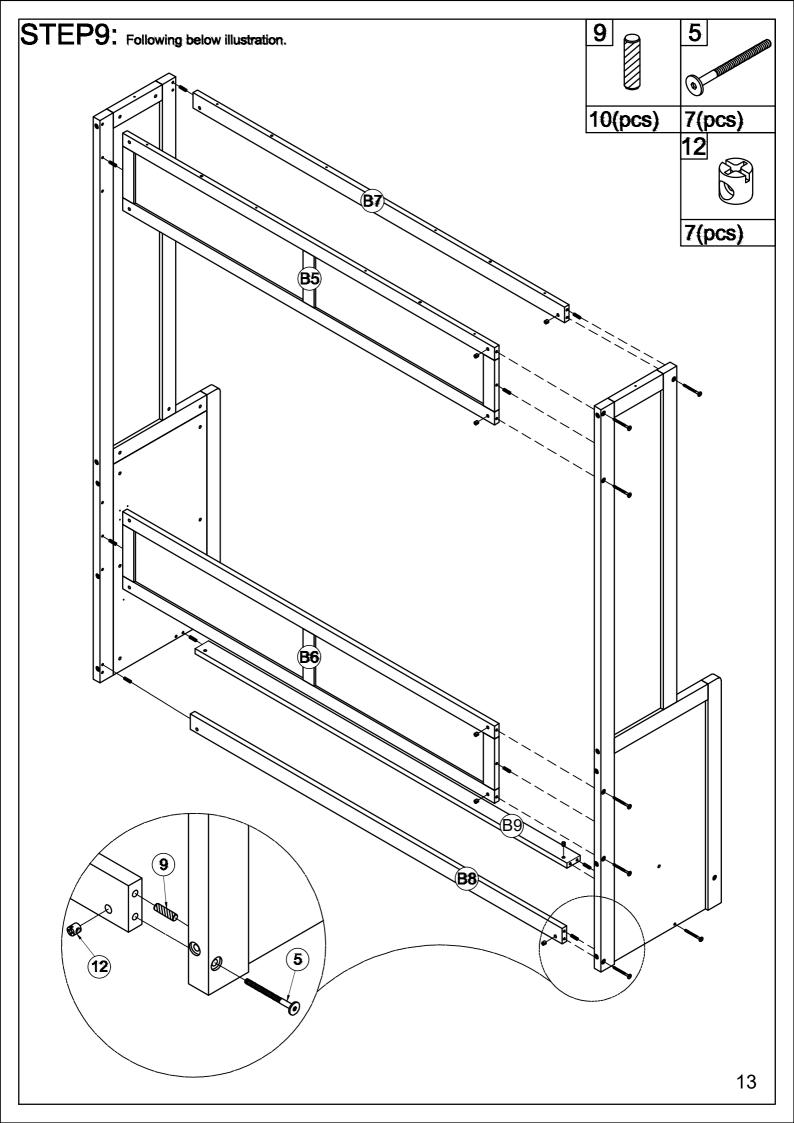


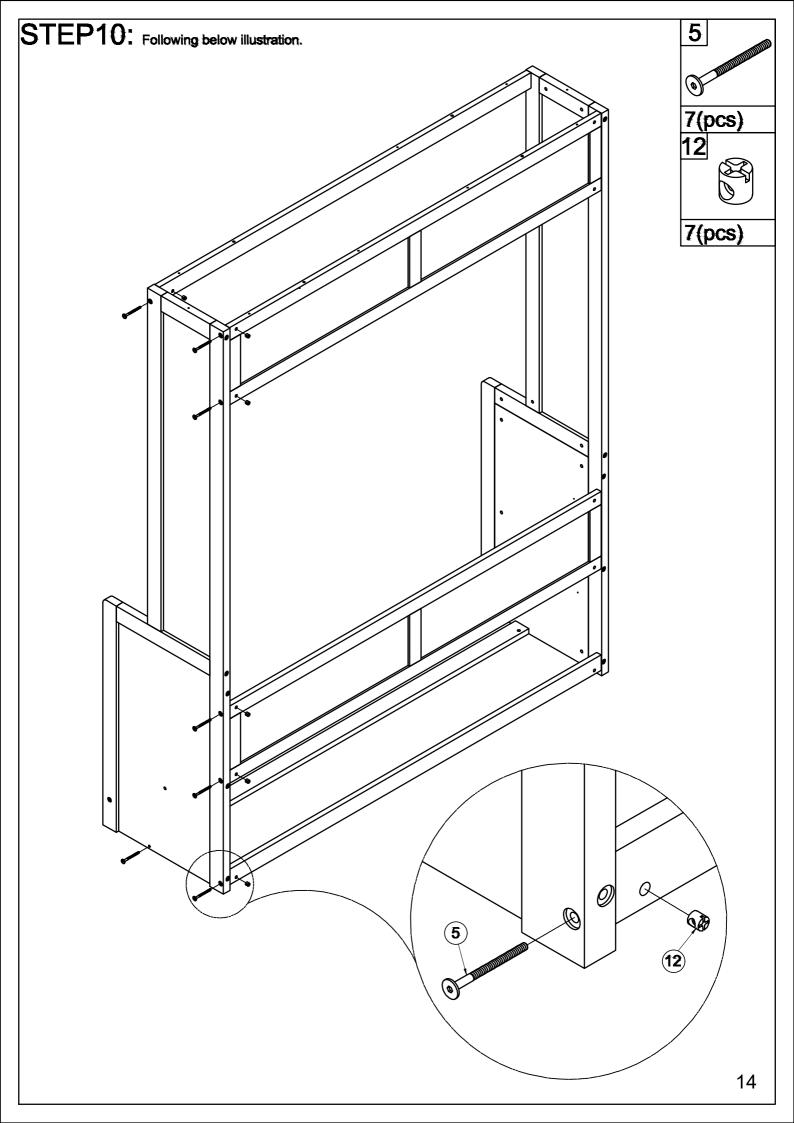


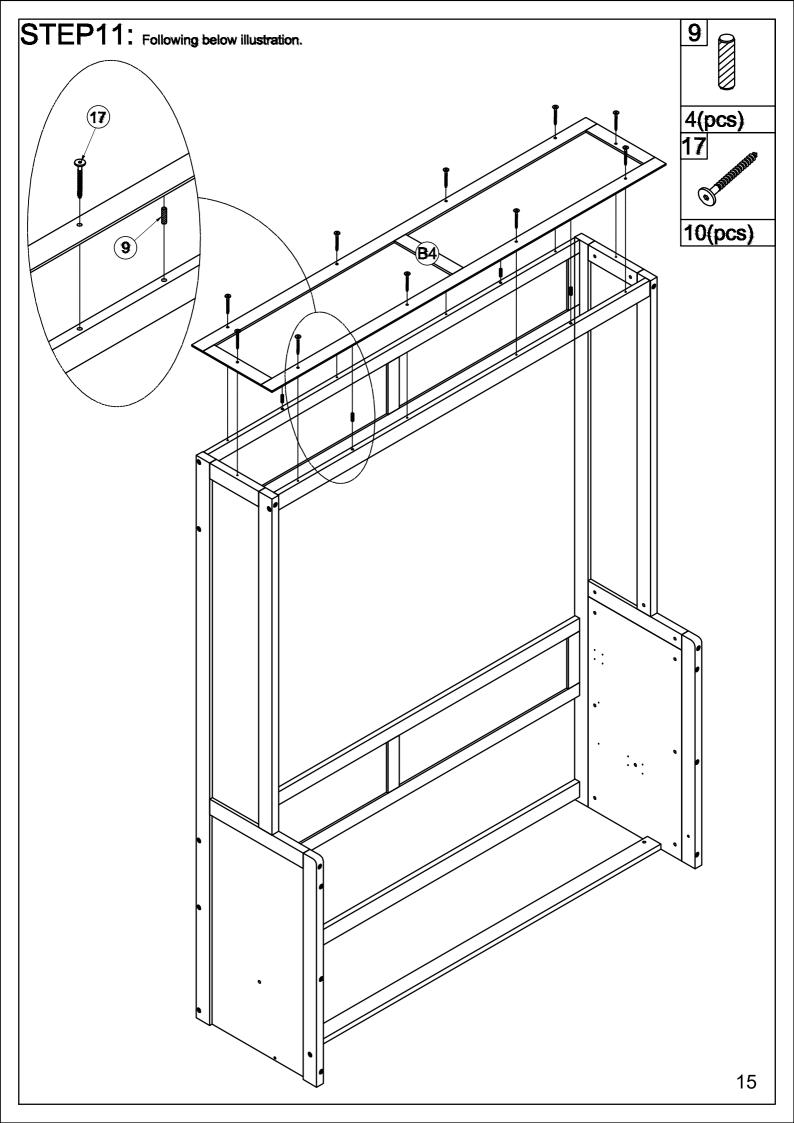


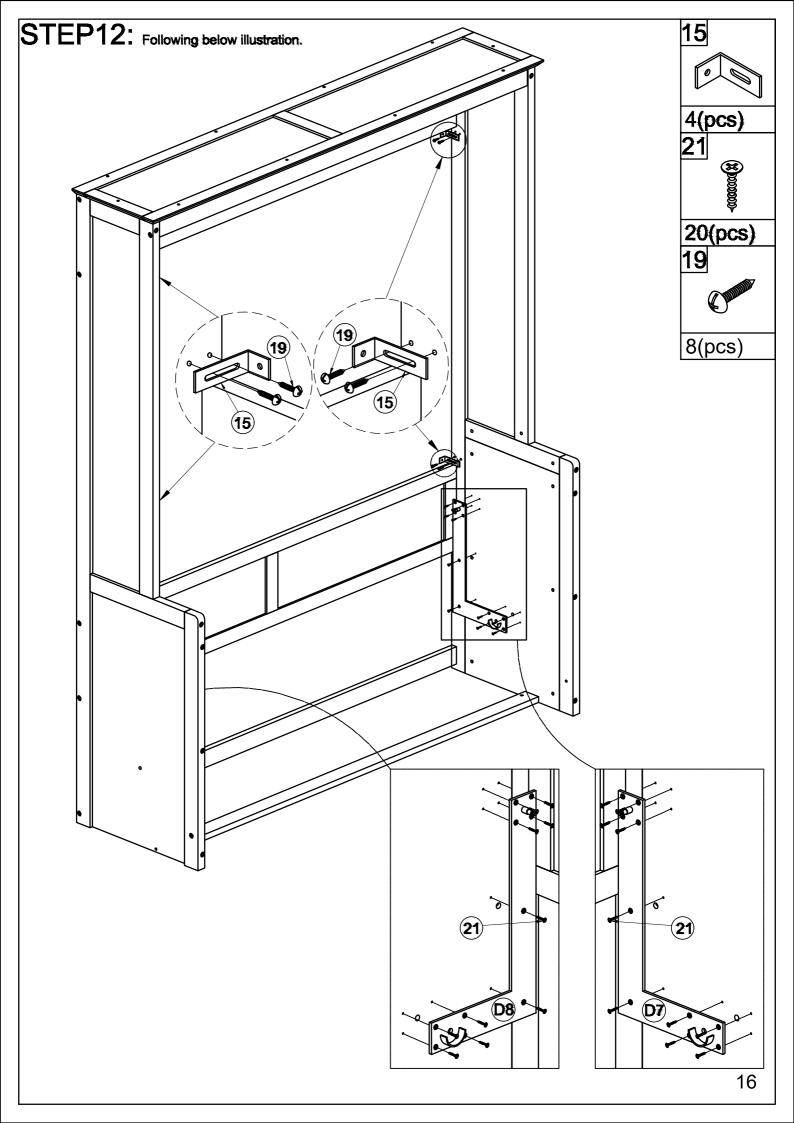


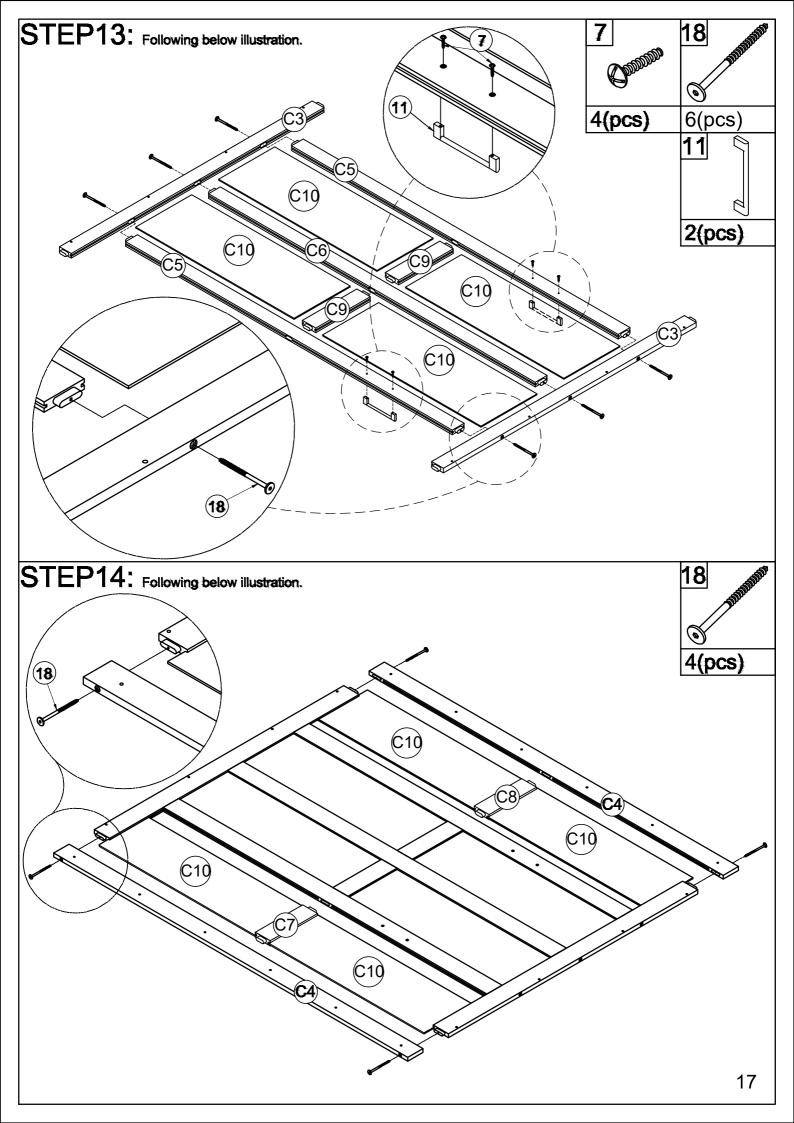


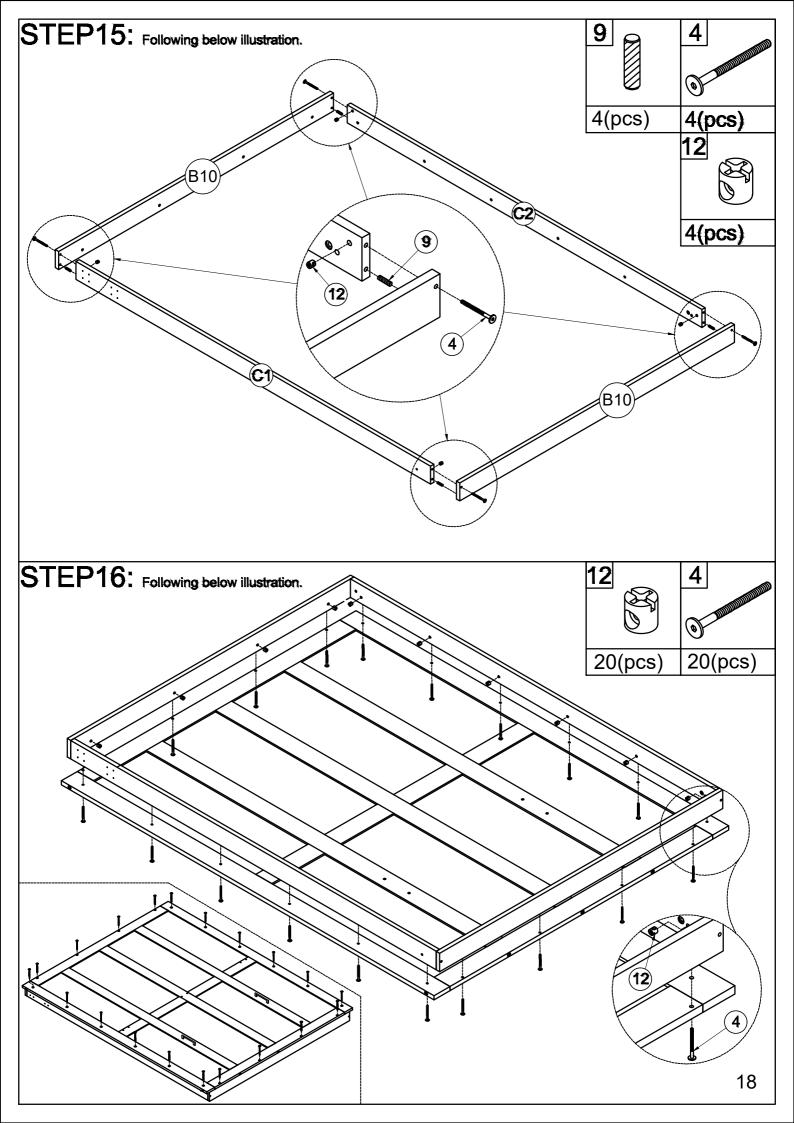


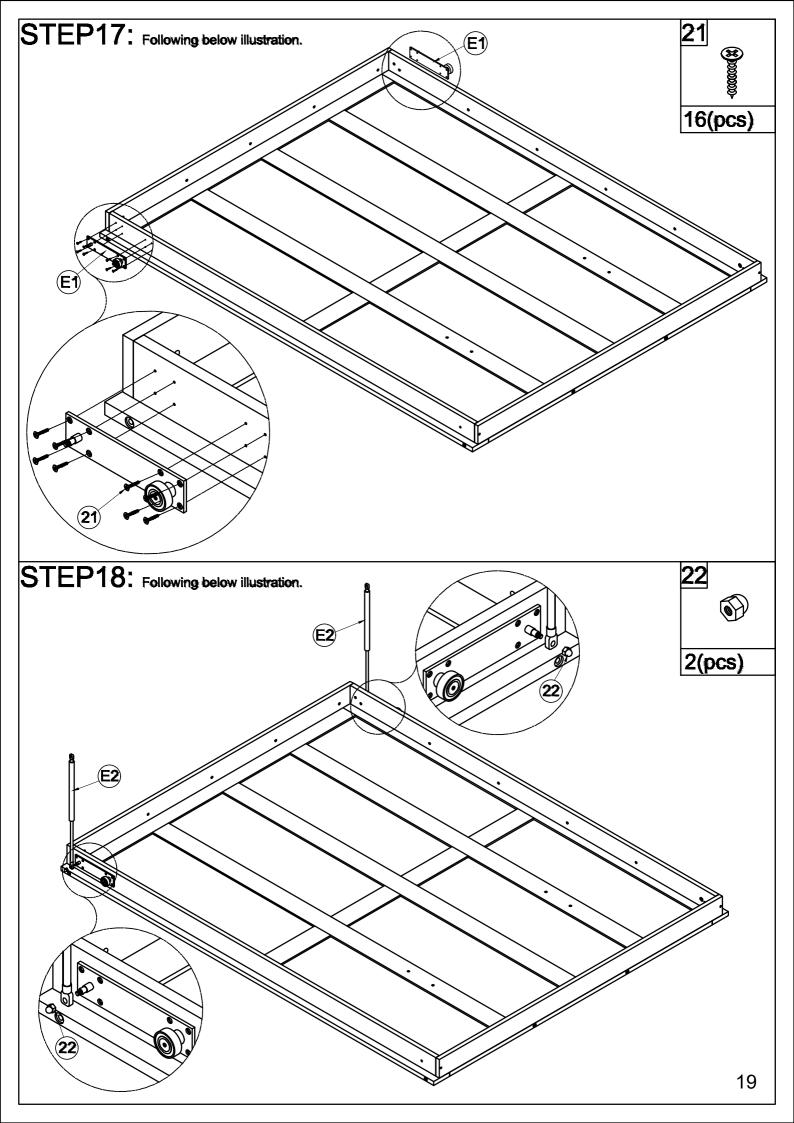


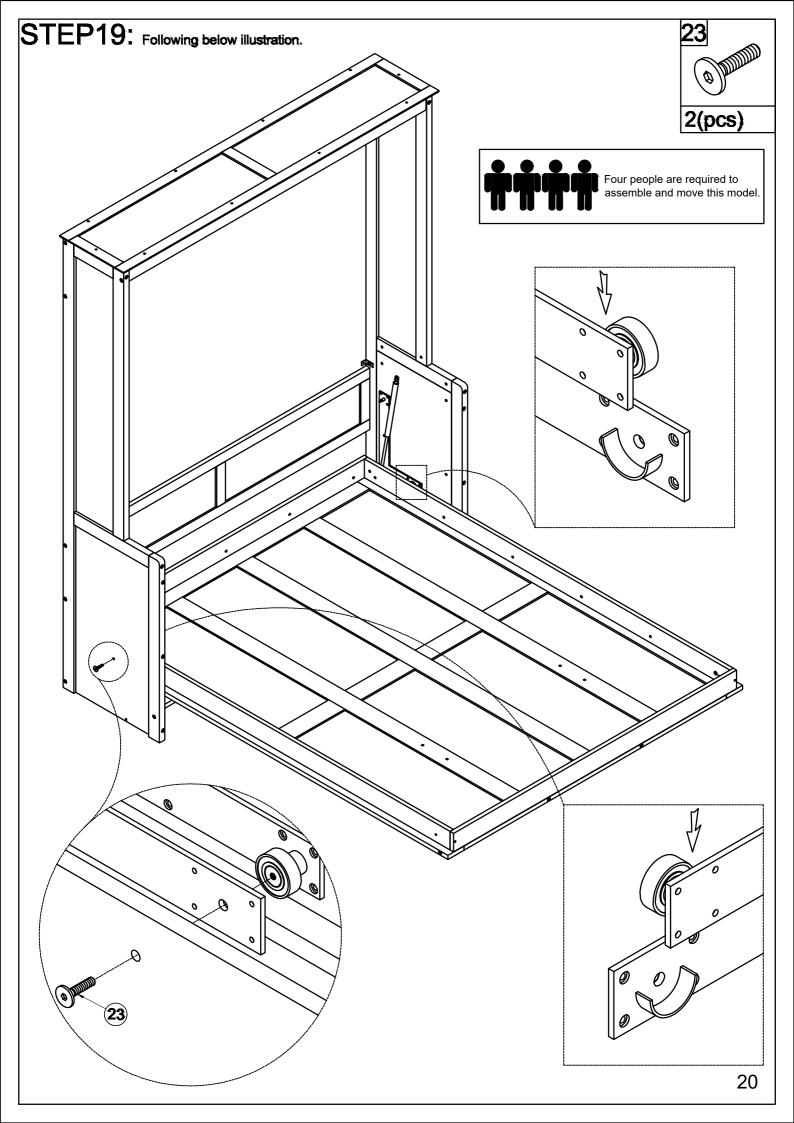


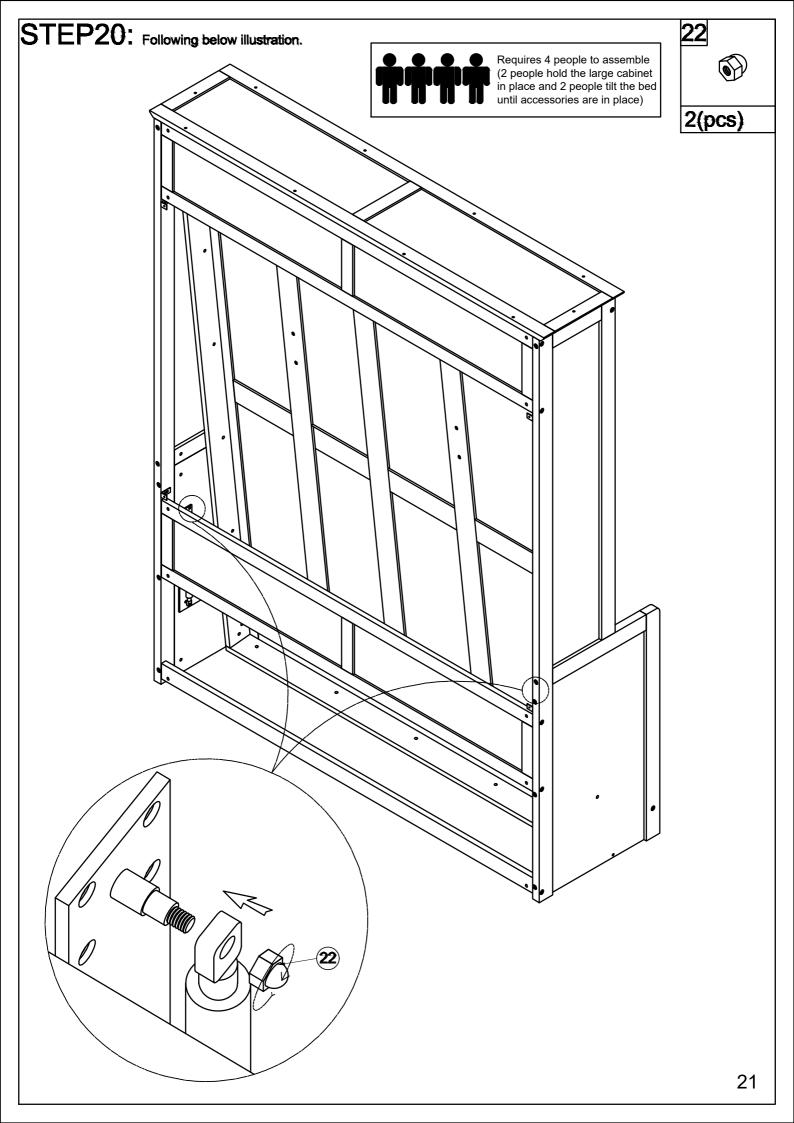


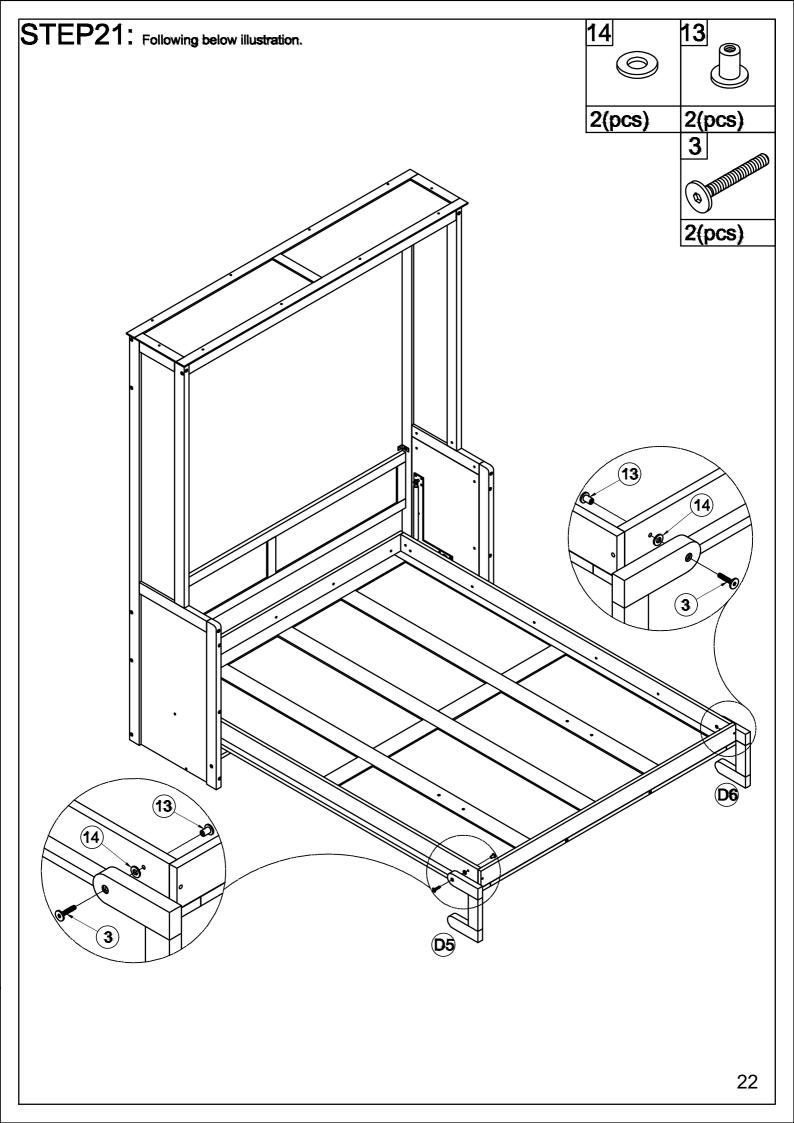

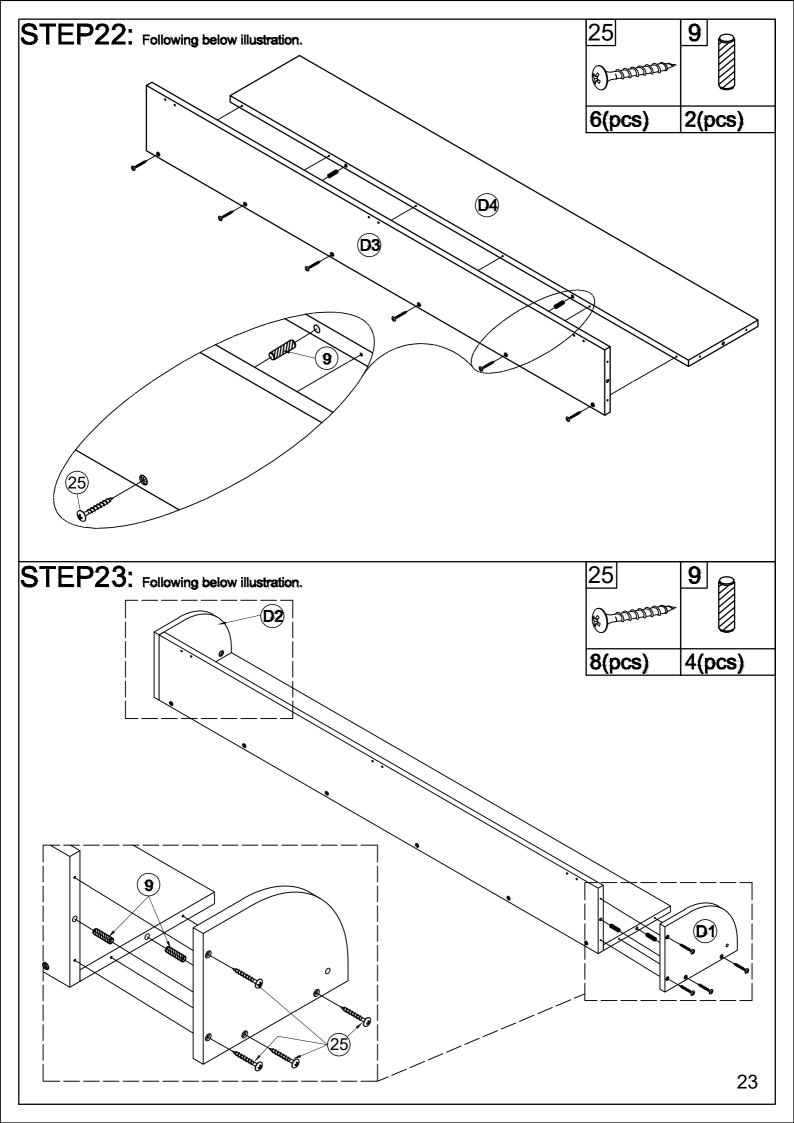

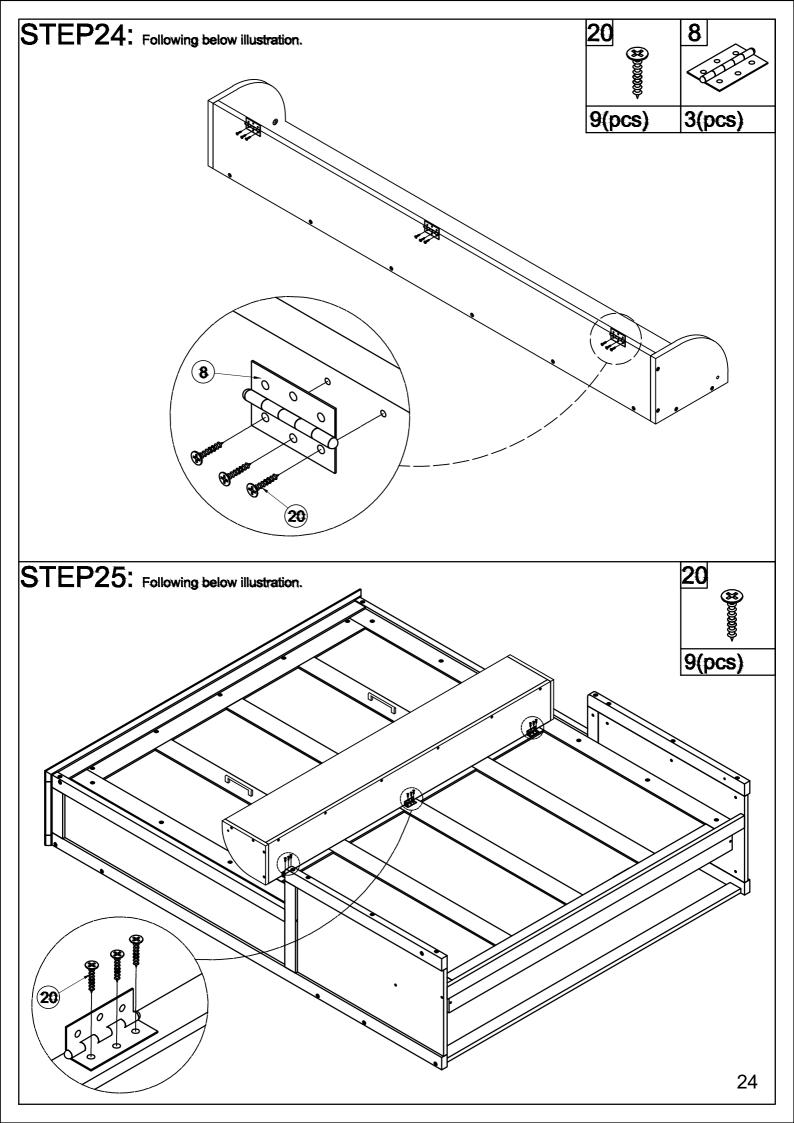

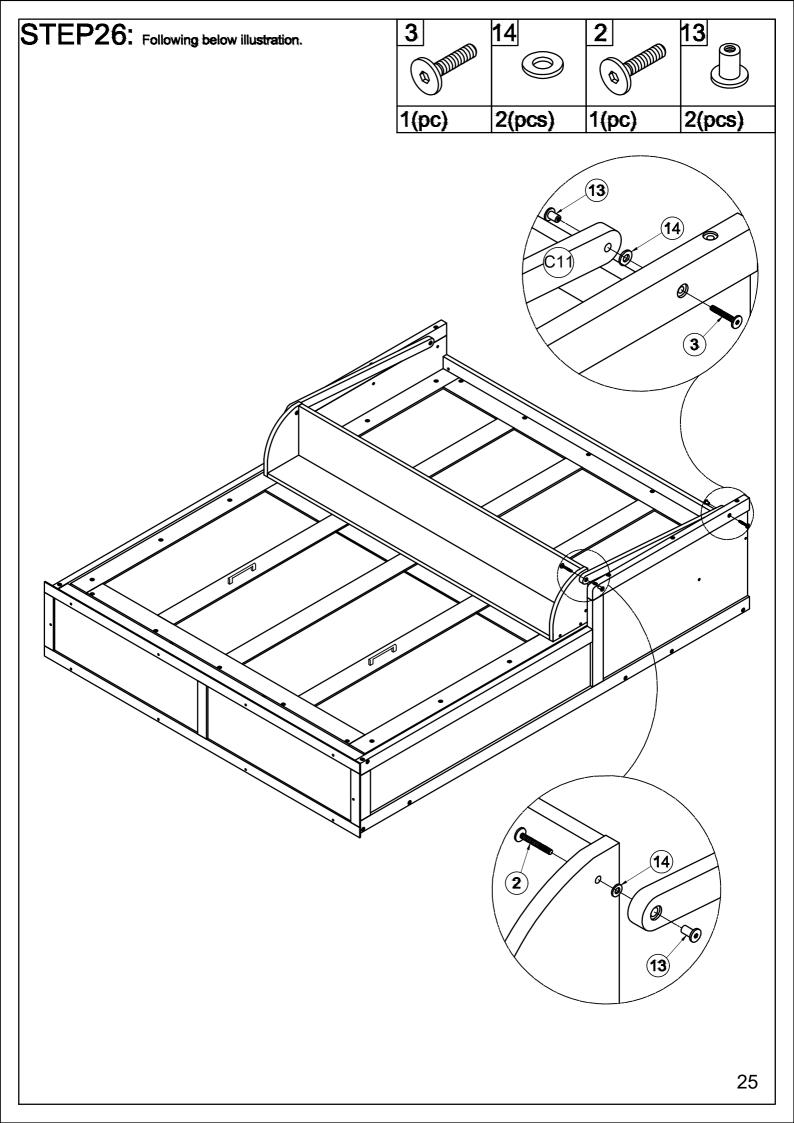

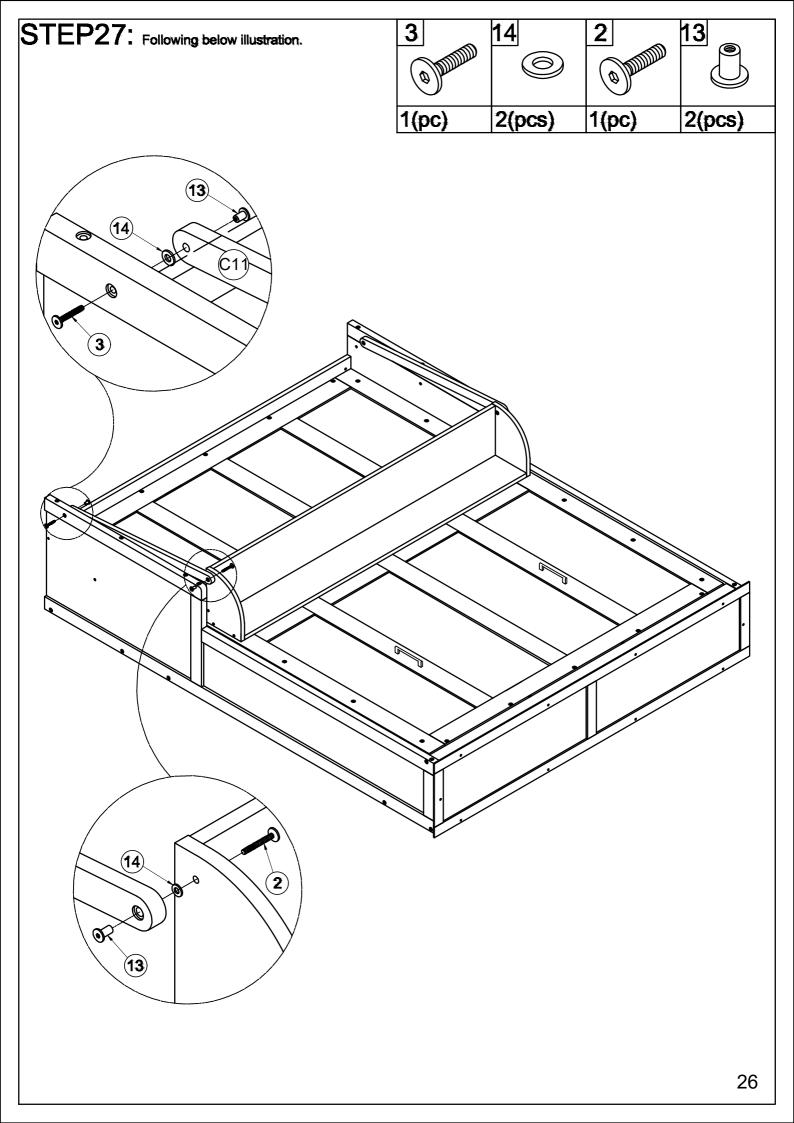

WALL ANCHORING REQUIREMENTS & INSTALLATION RECOMMENDATIONS

Important information to read before starting the assembly. Keep this information for future reference.



IMPORTANT WARNINGS

Risk of serious injuries if the wall bed tips over.

To prevent wall bed from tipping over, mount it permanently to the wall.

Only a qualified person* must carry out the installation and any possible adjustment of the wall bed (including disassembly). If the wall bed is not firmly mounted (anchored) to the wall, it might tip over and cause serious injuries to the installer, users of the bed as well as the people near the bed.

The choice of wall anchoring depends on the type of wall. Use wall anchors suitable for the wall material.

IMPORTANT WARNINGS

INSTALLATION AND APPROPRIATE HARDWARE

Using appropriate hardware, all the anchor screws of the wall bed must be firmly secured to the wood or metal studs, the structural components, or a masonry wall.

Only wall anchor screws for wood-frame walls are provided with this bed.


NEVER USE DRYWALL ANCHOR SCREWS OR SECURE THE BED TO DRYWALL

See wall anchoring requirements and installation notes provided in the instruction manual, according to the type of wall, and use the appropriate anchors such as described in this manual.

NUMBER OF SCREWS NEEDED


Two (2) screws are required for each anchor point. Three (3) wall anchor points are necessary for the proper installation of the wall bed. So you need a total of six (6) wall anchor screws.


THE SCREWS MUST BE VERY WELL ANCHORED TO THE STRUCTURAL COMPONENTS OF THE WALL.

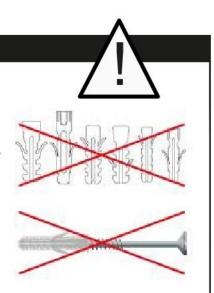

** A CERTIFIED CONSTRUCTION PROFESSIONAL, IN COMPLIANCE WITH APPLICABLE REGULATIONS IN THE PROVINCE, STATE,
OR COUNTRY WHERE THE FURNITURE IS INSTALLED.

^{*} Qualified person: it is necessary to have a good understanding of the wall structure where the bed is anchored, including the positioning of the wall studs and structural components in the case of a wood or metal structure. If you do not have the necessary skills, make sure that the wall anchoring is done by someone who has the qualifications and required knowledge. When you choose the installer, make sure to comply with all applicable regulations in the province, state or country where the furniture is installed.

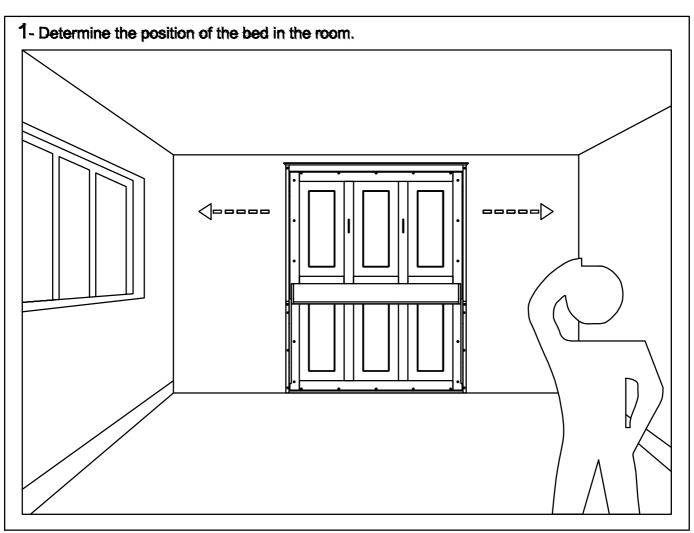

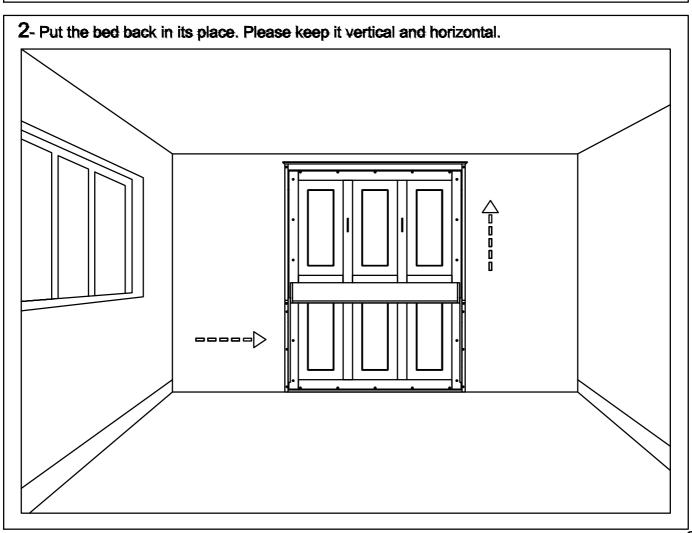

STEP 29: Following below illustration:

Make sure that it is fixed to a concrete or brick wall, not a hollow panel wall.

