


ASSEMBLY INSTRUCTION

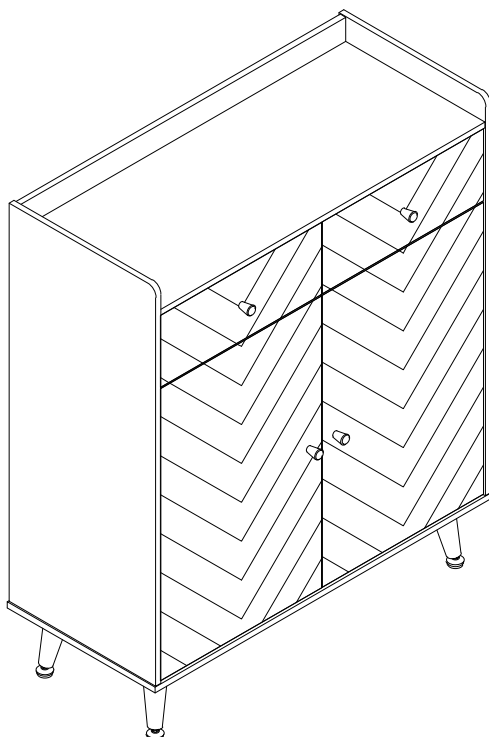


Installation Video Guide



















Scan QR Code to Extend Warranty



Contact After-Sales Support

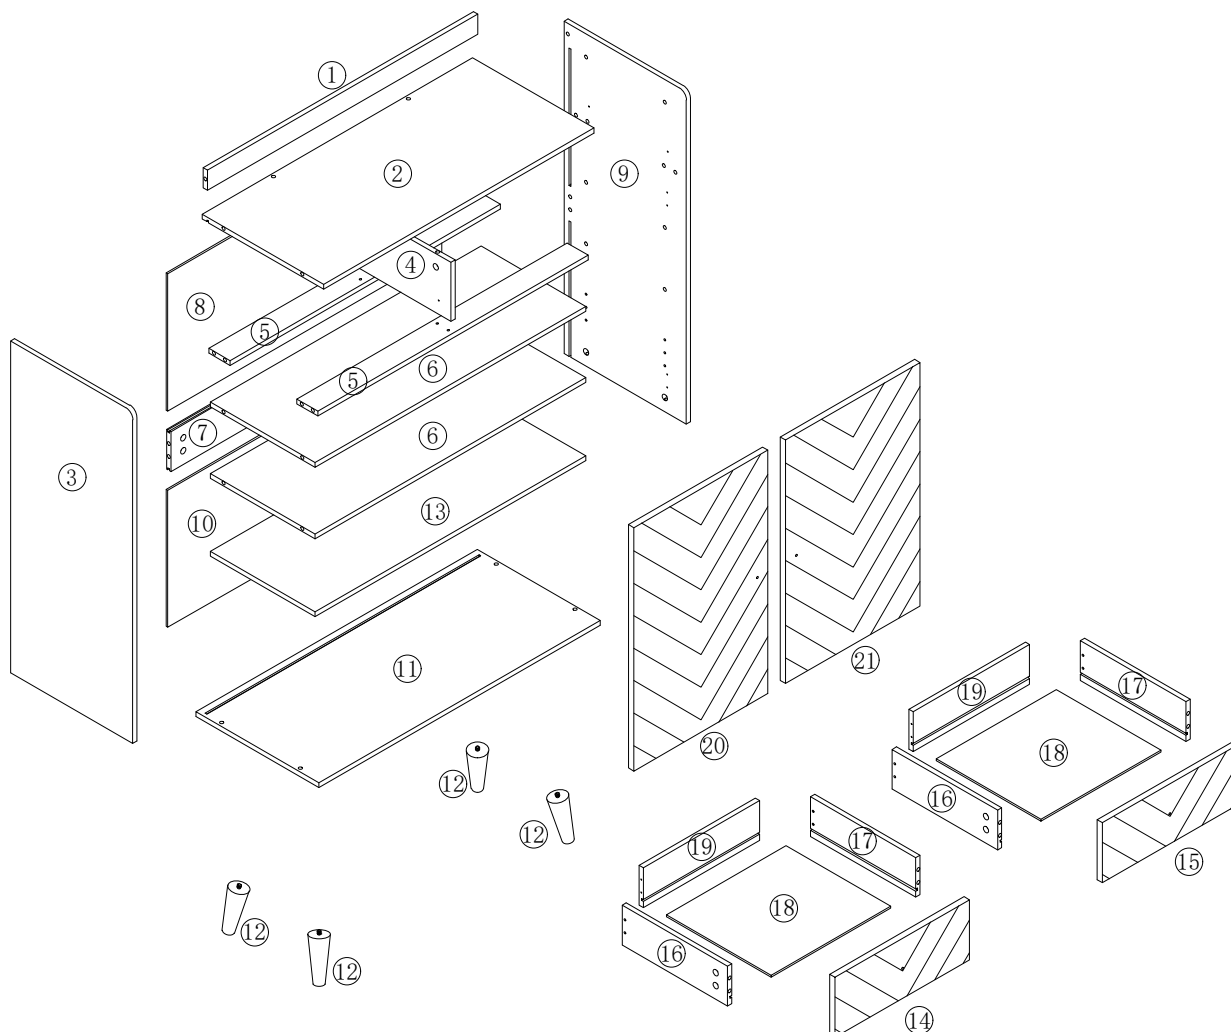


ASSEMBLY INSTRUCTION

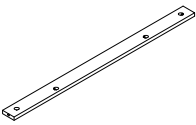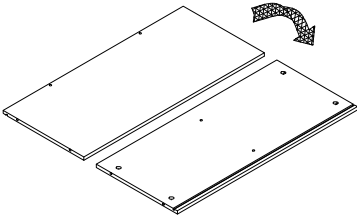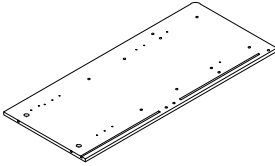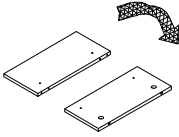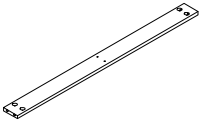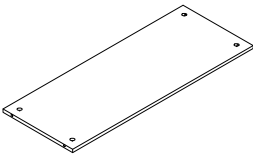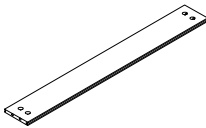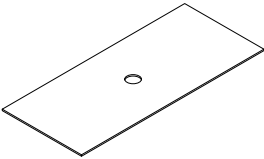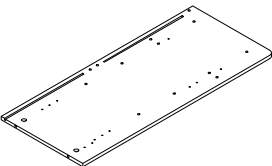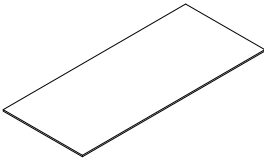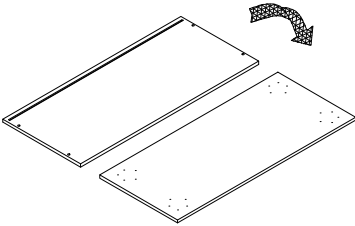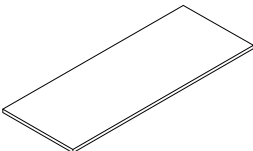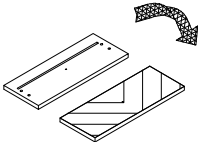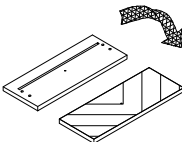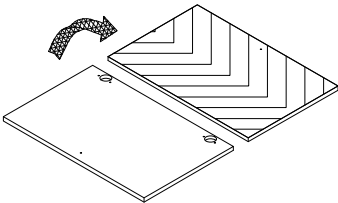① 1PC 	② 1PC 	③ 1PC 	④ 1PC 
⑤ 2PCS 	⑥ 2PCS 	⑦ 1PC 	⑧ 1PC 
⑨ 1PC 	⑩ 1PC 	⑪ 1PC 	⑫ 4PCS  H110mm
⑬ 1PC 	⑭ 1PC 	⑮ 1PC 	⑯ 2PCS 
⑰ 2PCS 	⑱ 2PCS 	⑲ 2PCS 	⑳ 1PC 

ASSEMBLY INSTRUCTION

②1

1PC

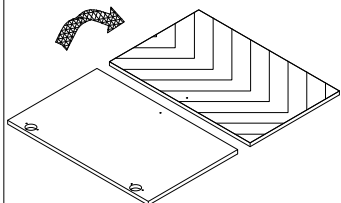

A

42PCS



M6*40

B

42PCS



Ø15*9.5

C

68PCS



Ø3.5*12

D

4PCS



68*68*11

E

4PCS



M8

F

4PCS



M5*38

G

4PCS



Ø5*15

H

8PCS



I

4sets



M4*18

J


8PCS



Ø3.5*40


K

4PCS



L

2sets

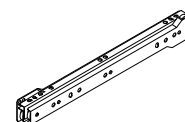

12"

M

1set




Ø3.5*30



Ø6*25



Ø3.5*15








Step 1

A 38PCS




M6*40

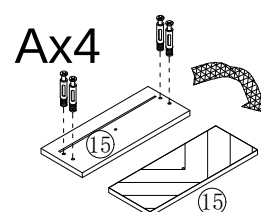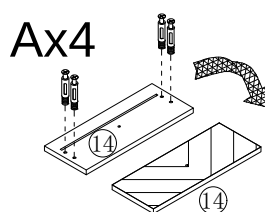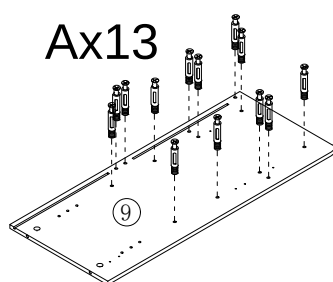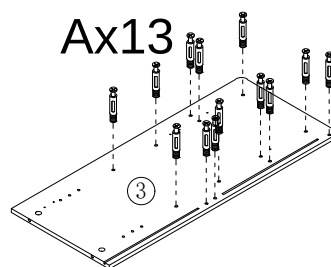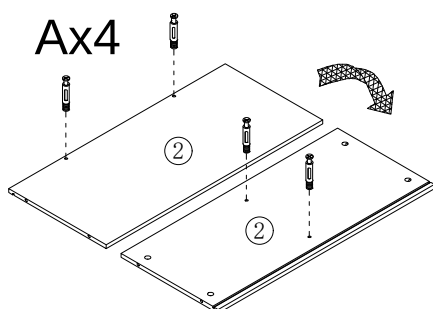


Step 2

L 2sets




12"

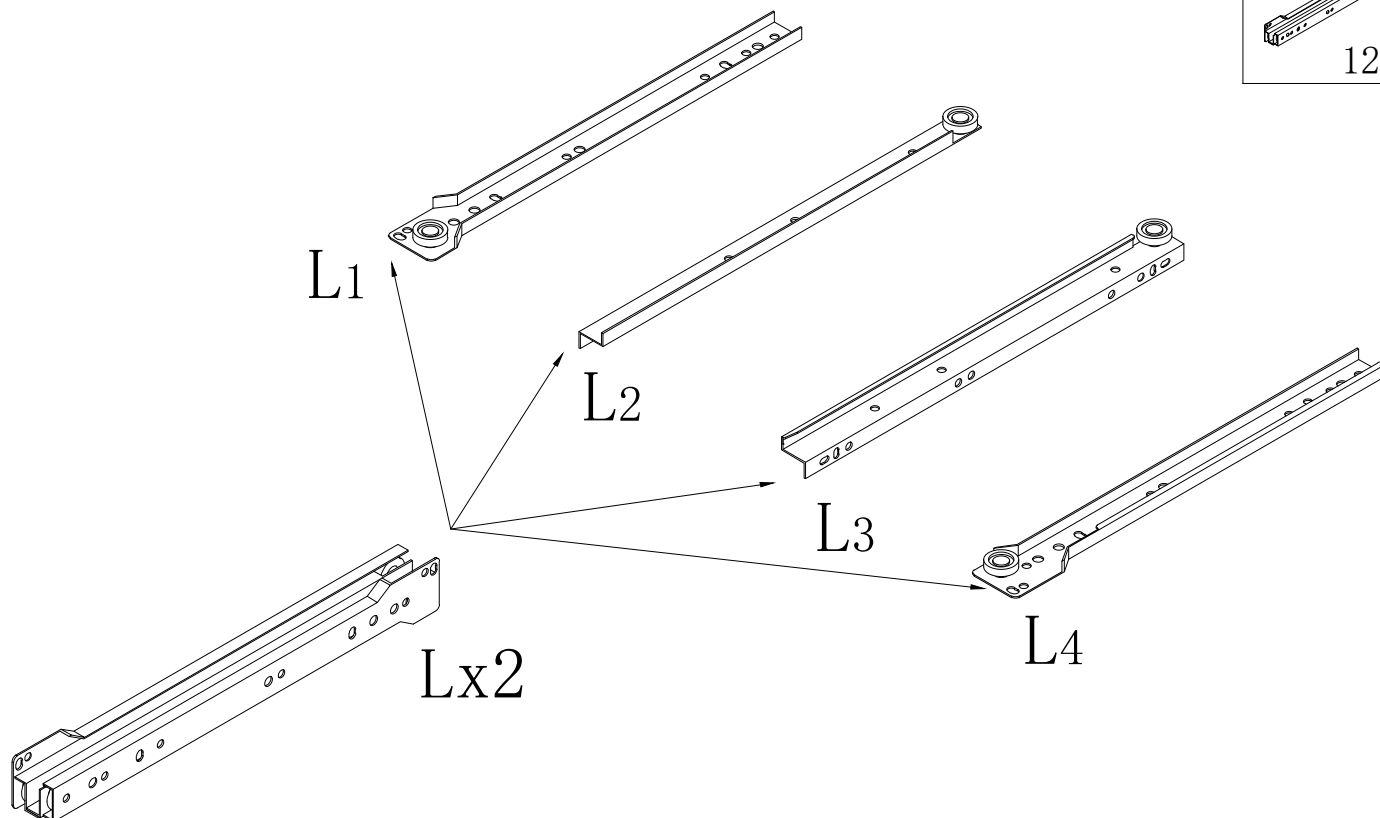


ASSEMBLY INSTRUCTION


Step 3

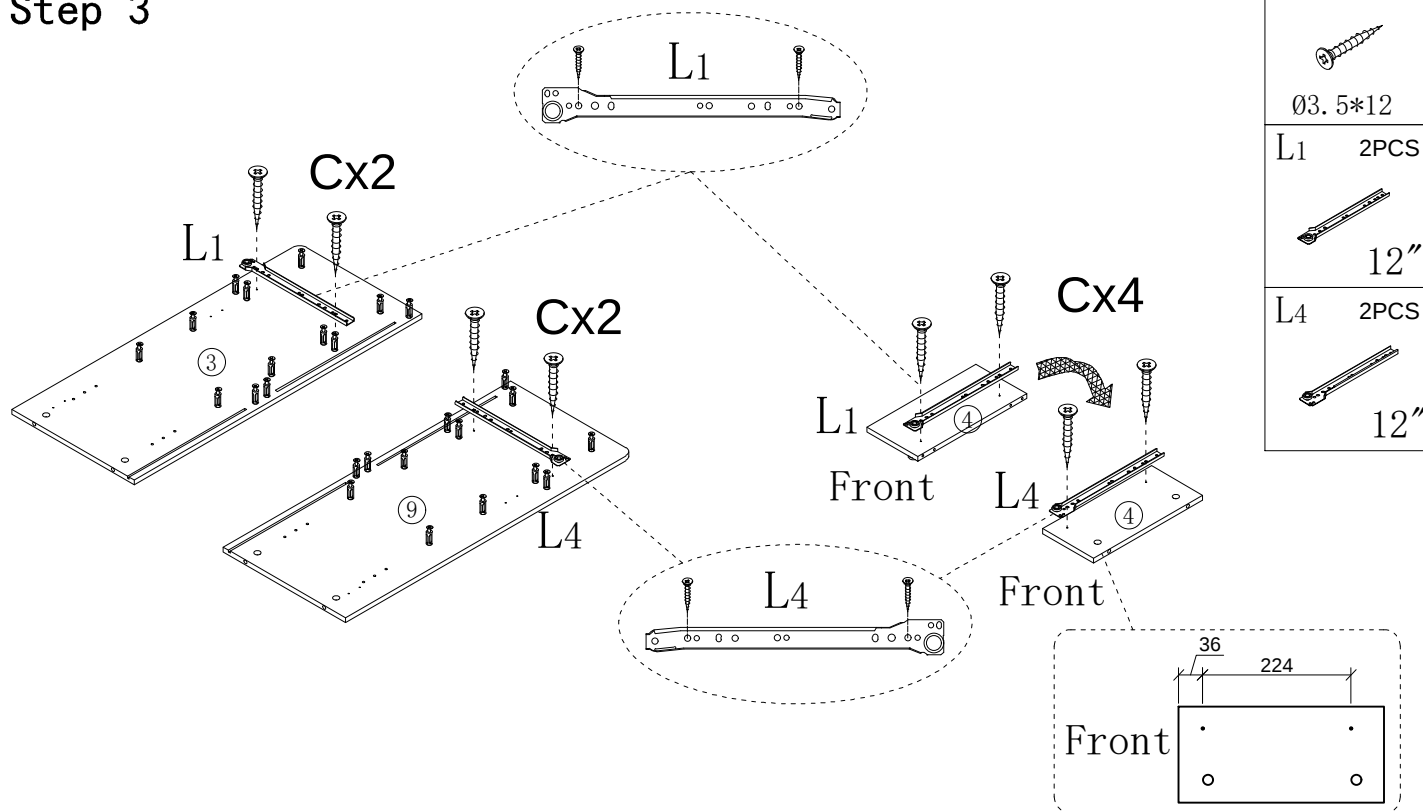

Step 4

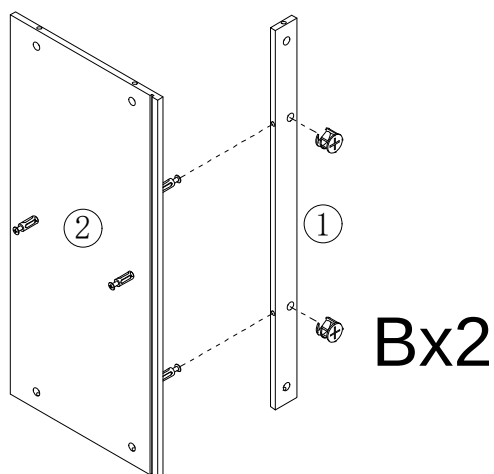


Step 5

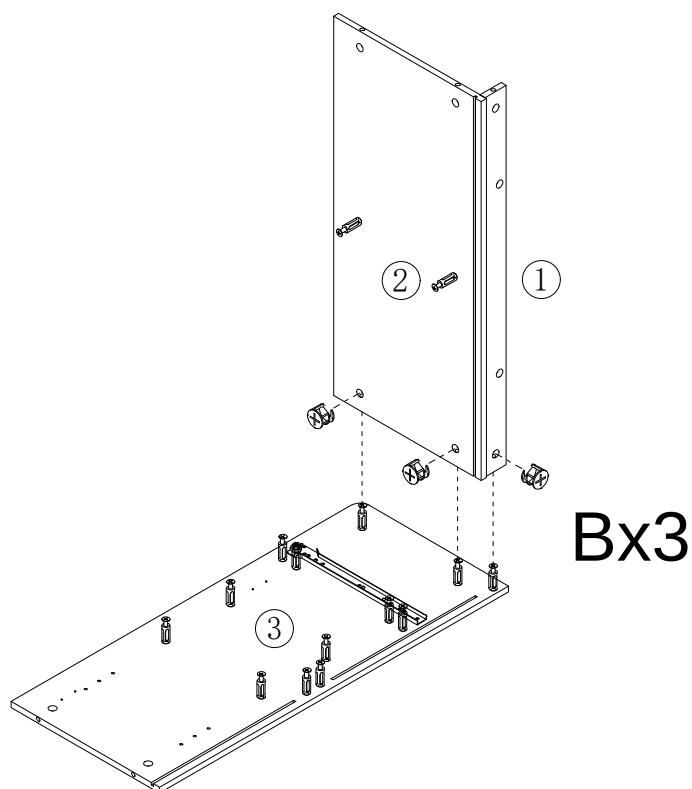

Step 6

B 2PCS


 Ø15*9.5

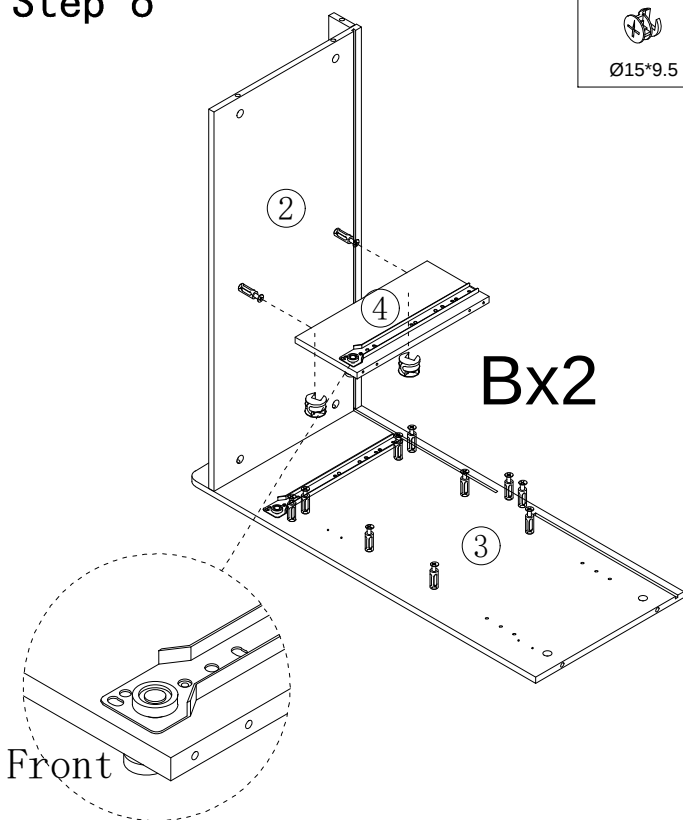

Step 7

B 4PCS


 Ø15*9.5

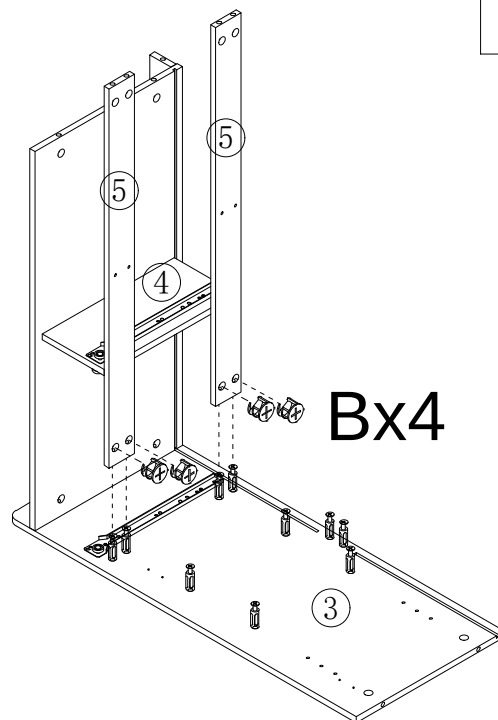

Step 8

F 4PCS


 M5*38

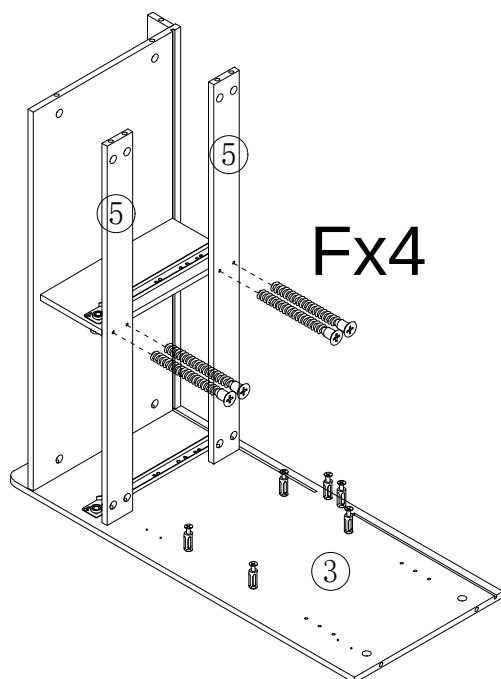

Step 9

B 4PCS


 Ø15*9.5

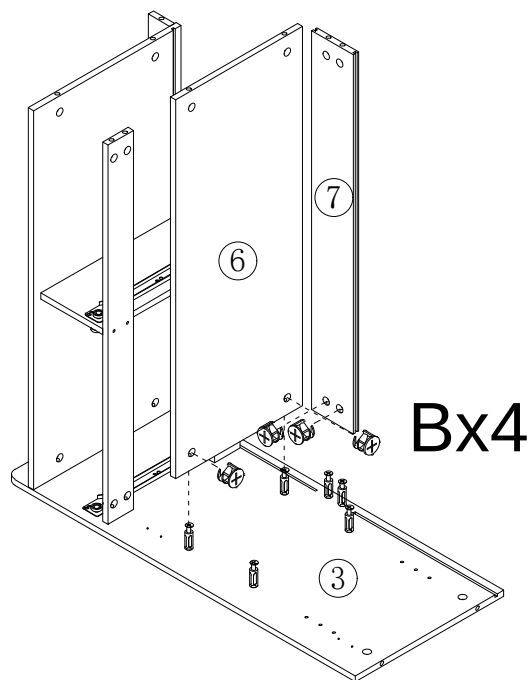


Step 10

B 2PCS

 Ø15*9.5

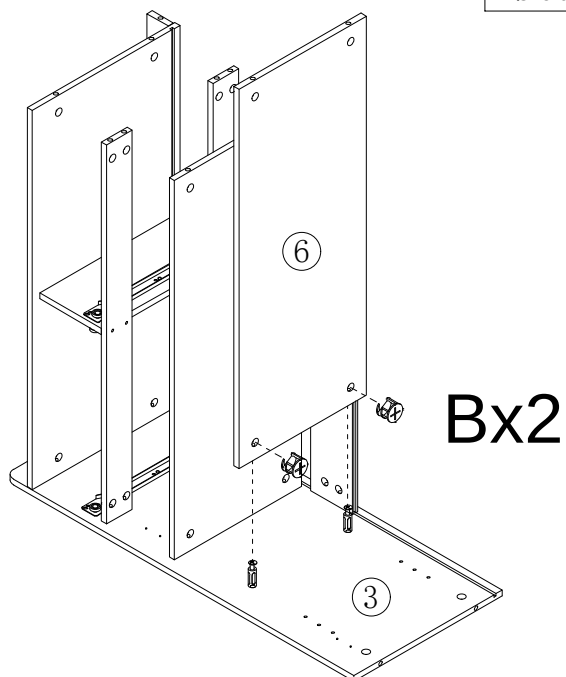


Step 11

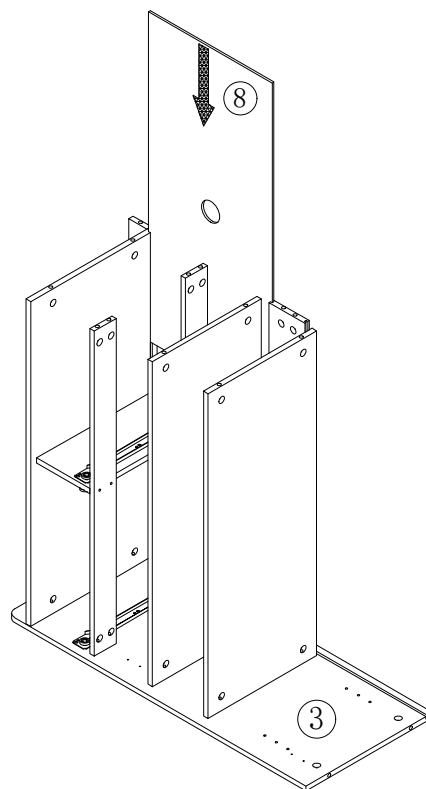


Step 12

B 13PCS

 Ø15*9.5

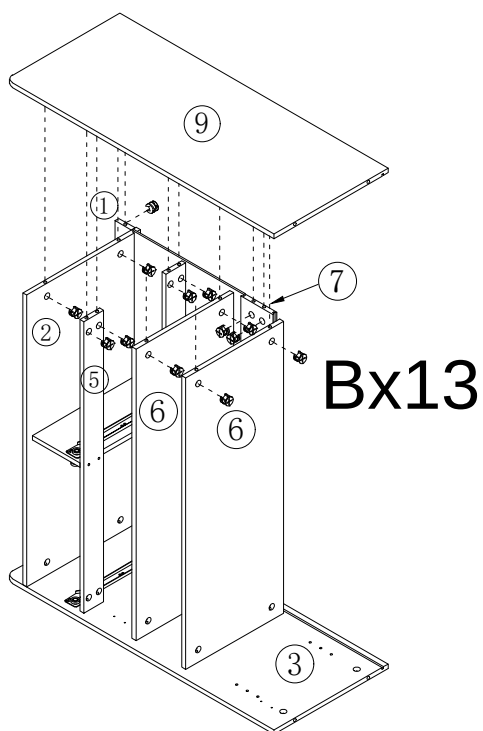


Step 13

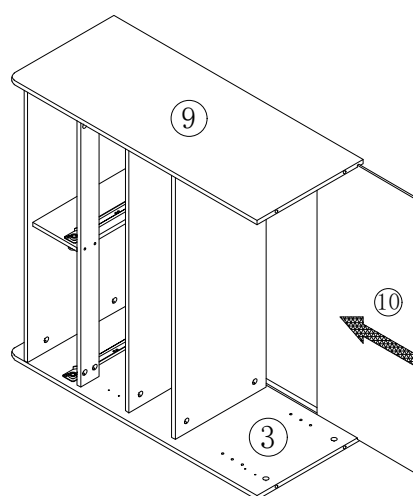


ASSEMBLY INSTRUCTION


Step 14

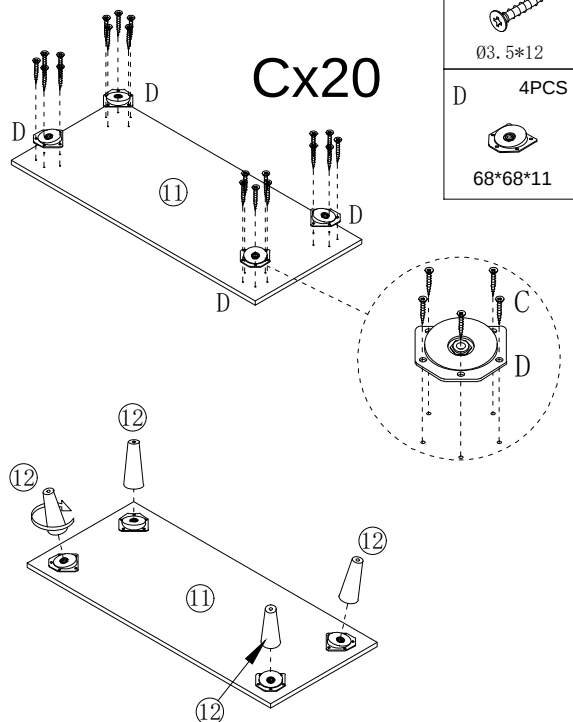


Step 15

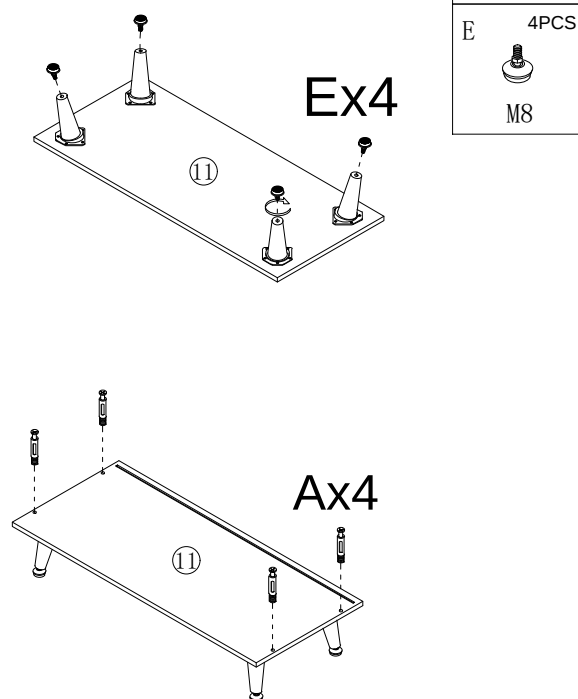


Step 16

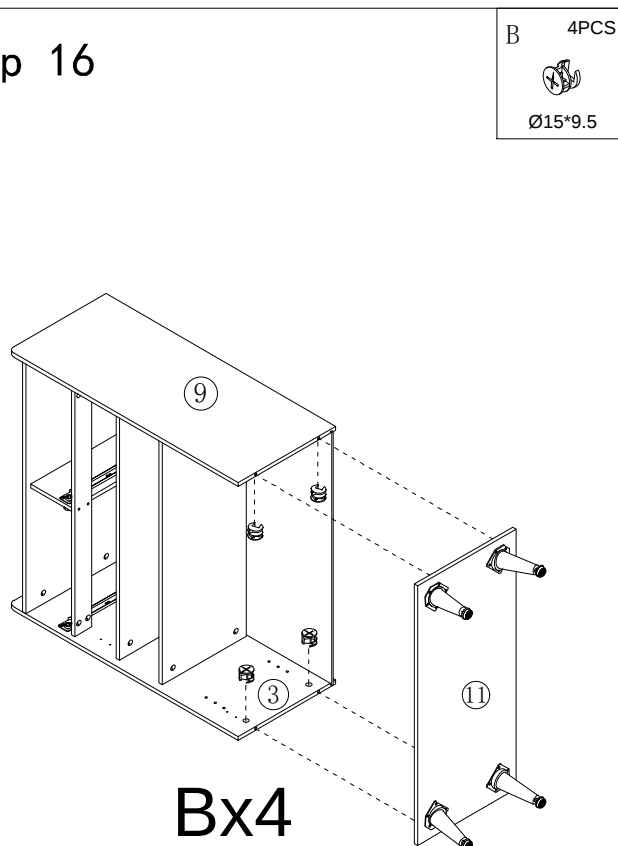

Step 17

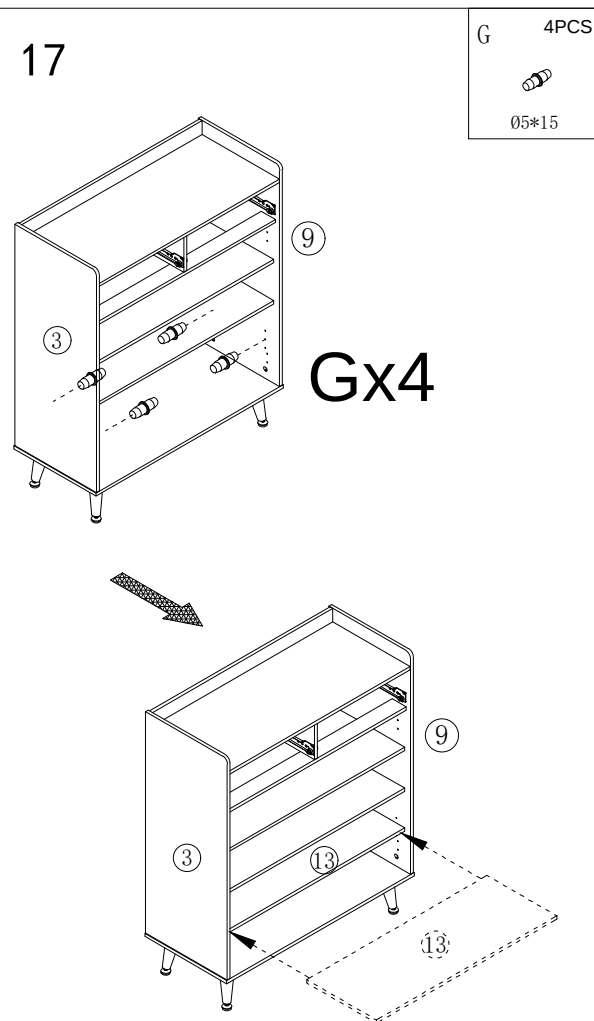


Step 18

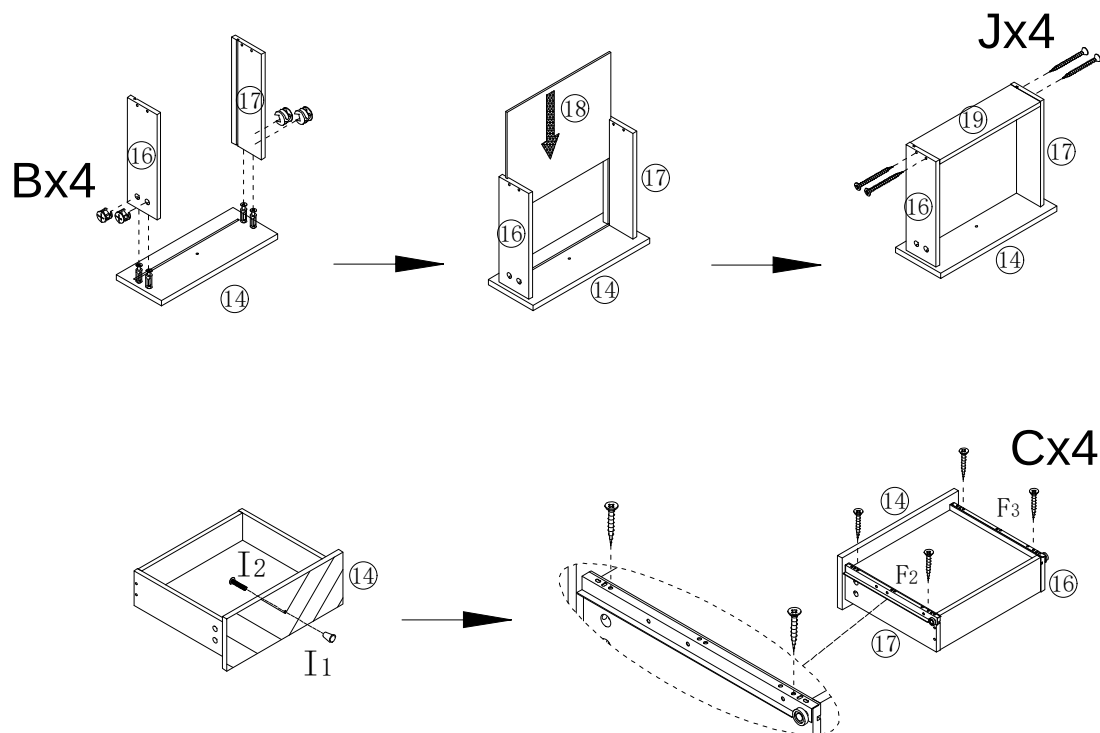

B	4PCS
	
Ø15*9.5	
C	4PCS
	
Ø3.5*12	
I	1set
	
	
M4*18	
L2	1PC
	
12"	
L3	1PC
	
12"	
J	4PCS
	
Ø3.5*40	


Step 19

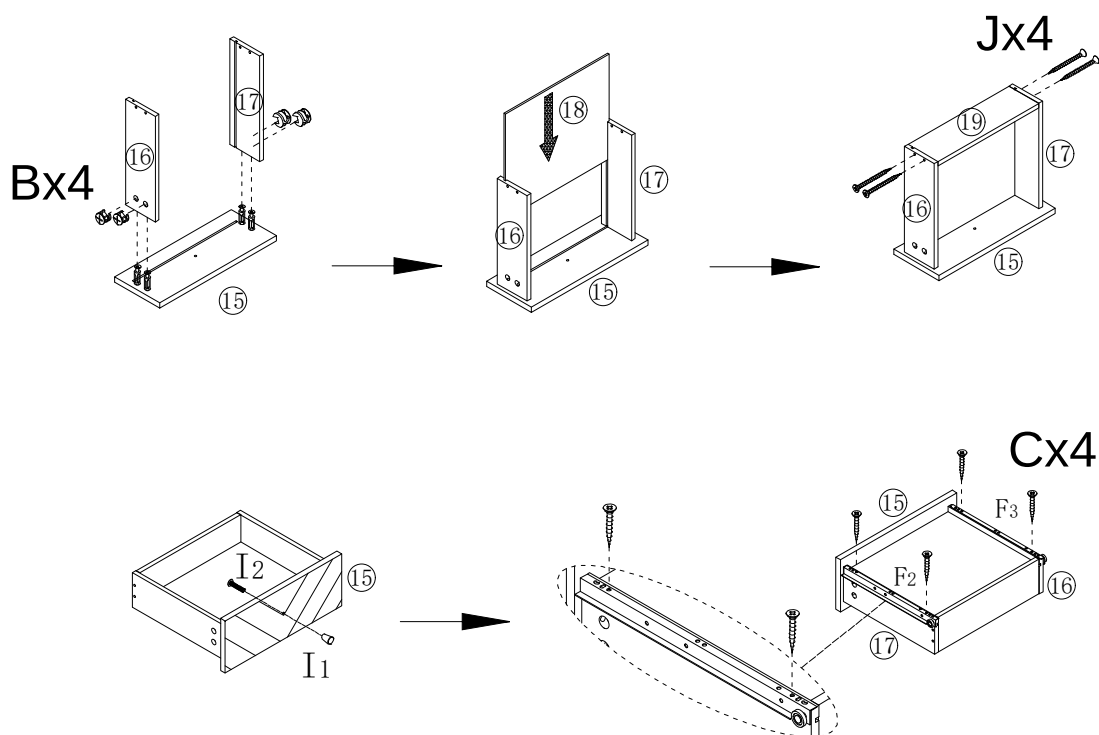



B	4PCS
	
Ø15*9.5	
C	4PCS
	
Ø3.5*12	
I	1set
	
	
M4*18	
L2	1PC
	
12"	
L3	1PC
	
12"	
J	4PCS
	
Ø3.5*40	

ASSEMBLY INSTRUCTION

Step 20


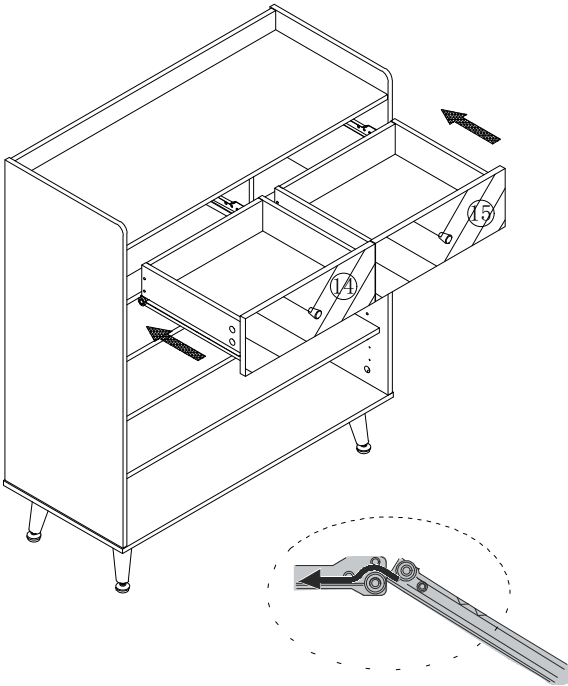


Step 22

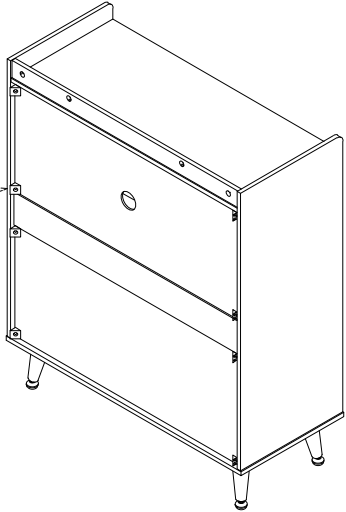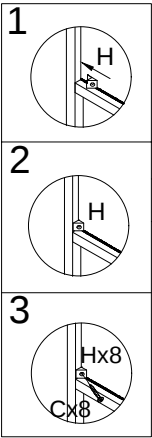

C	8PCS
	
	Ø3.5*12
H	8PCS
	


Step 22

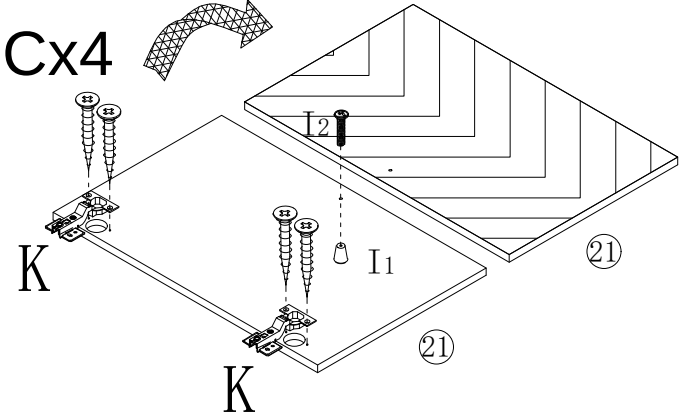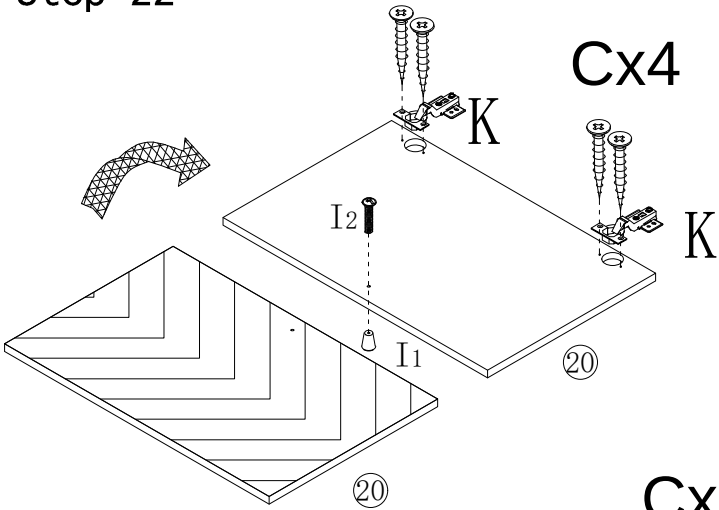



C	8PCS
	
	Ø3.5*12
K	4PCS
	
I	2sets
I ₁	
I ₂	
	M4*18

Step 23





C 16PCS
Ø3.5*12

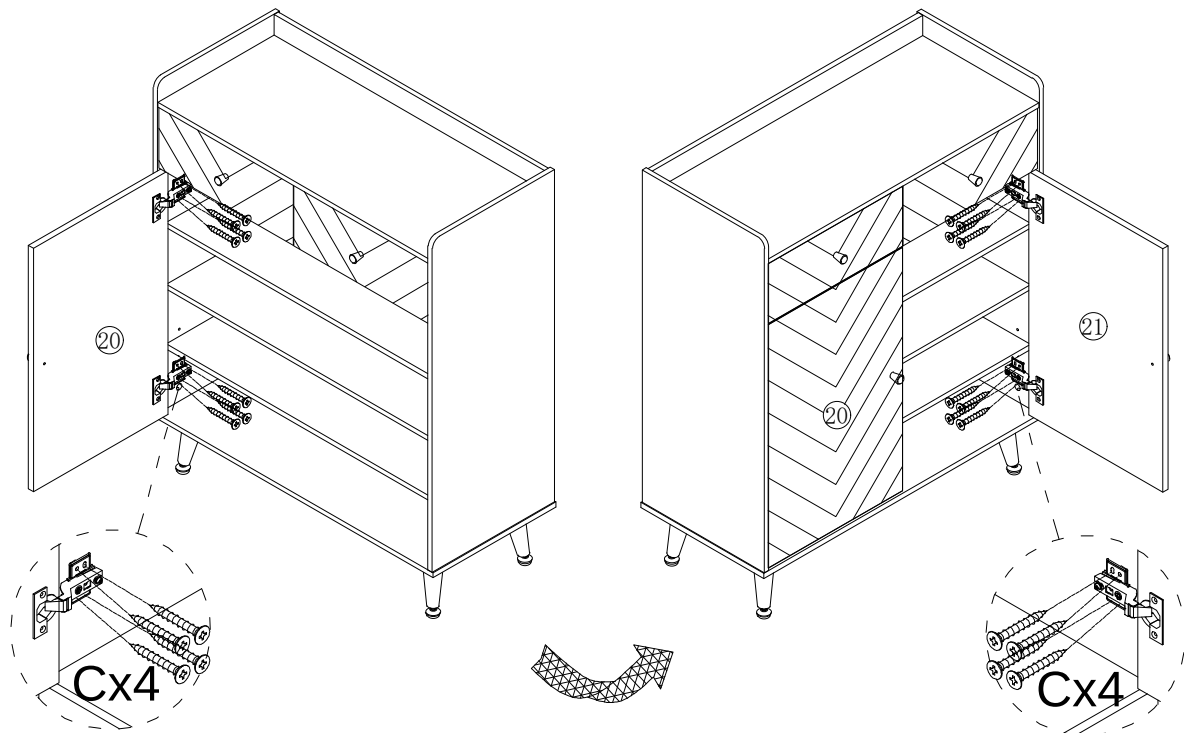

Step 24


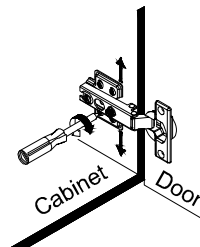
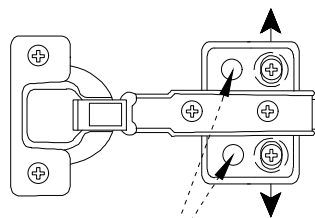


These two screws will be locked after the door panel is adjusted up and down.

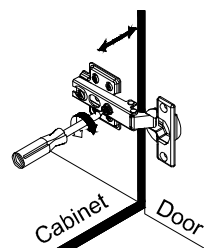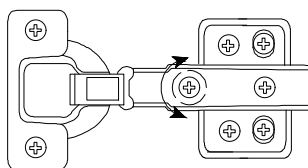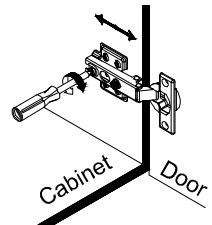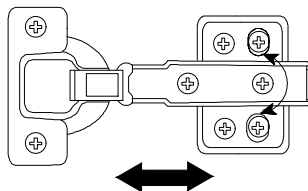

Step 25

M 1set

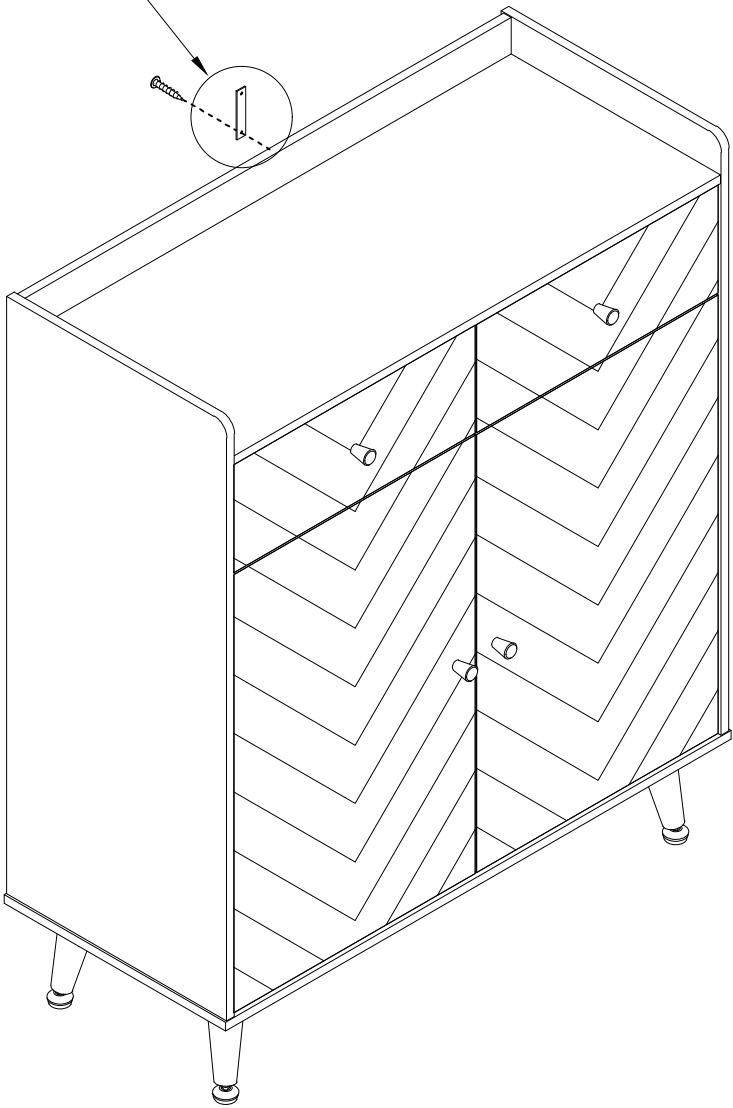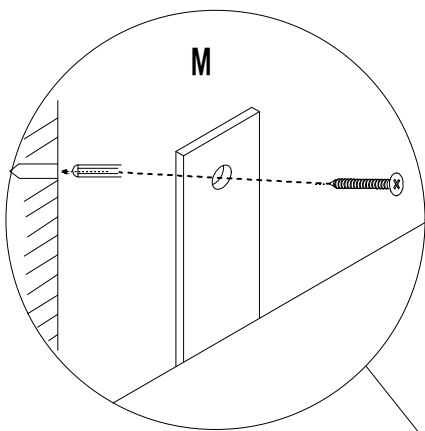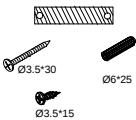

OK