
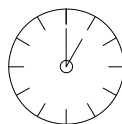
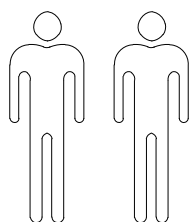


Assembly Instructions


F2071

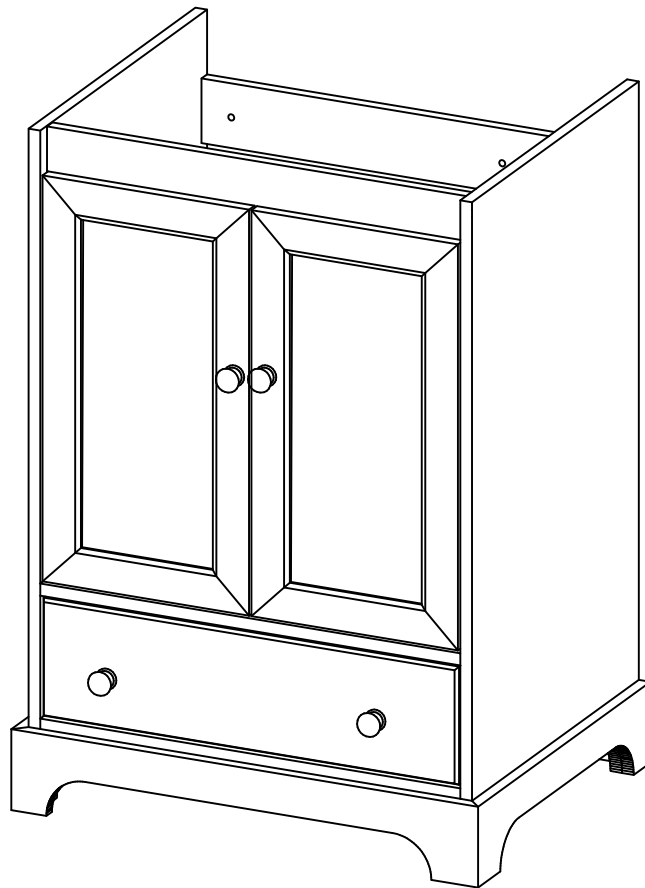





assembly need
120 Mins




HARDWARE LIST


- 1 X1 2 X1 3 X3 4 X1 5 X1 6 X1 7 X1 8 X1
 9 X1 10 X1 11 X1 12 X1 13 X1 14 X1 15 X1 16 X1




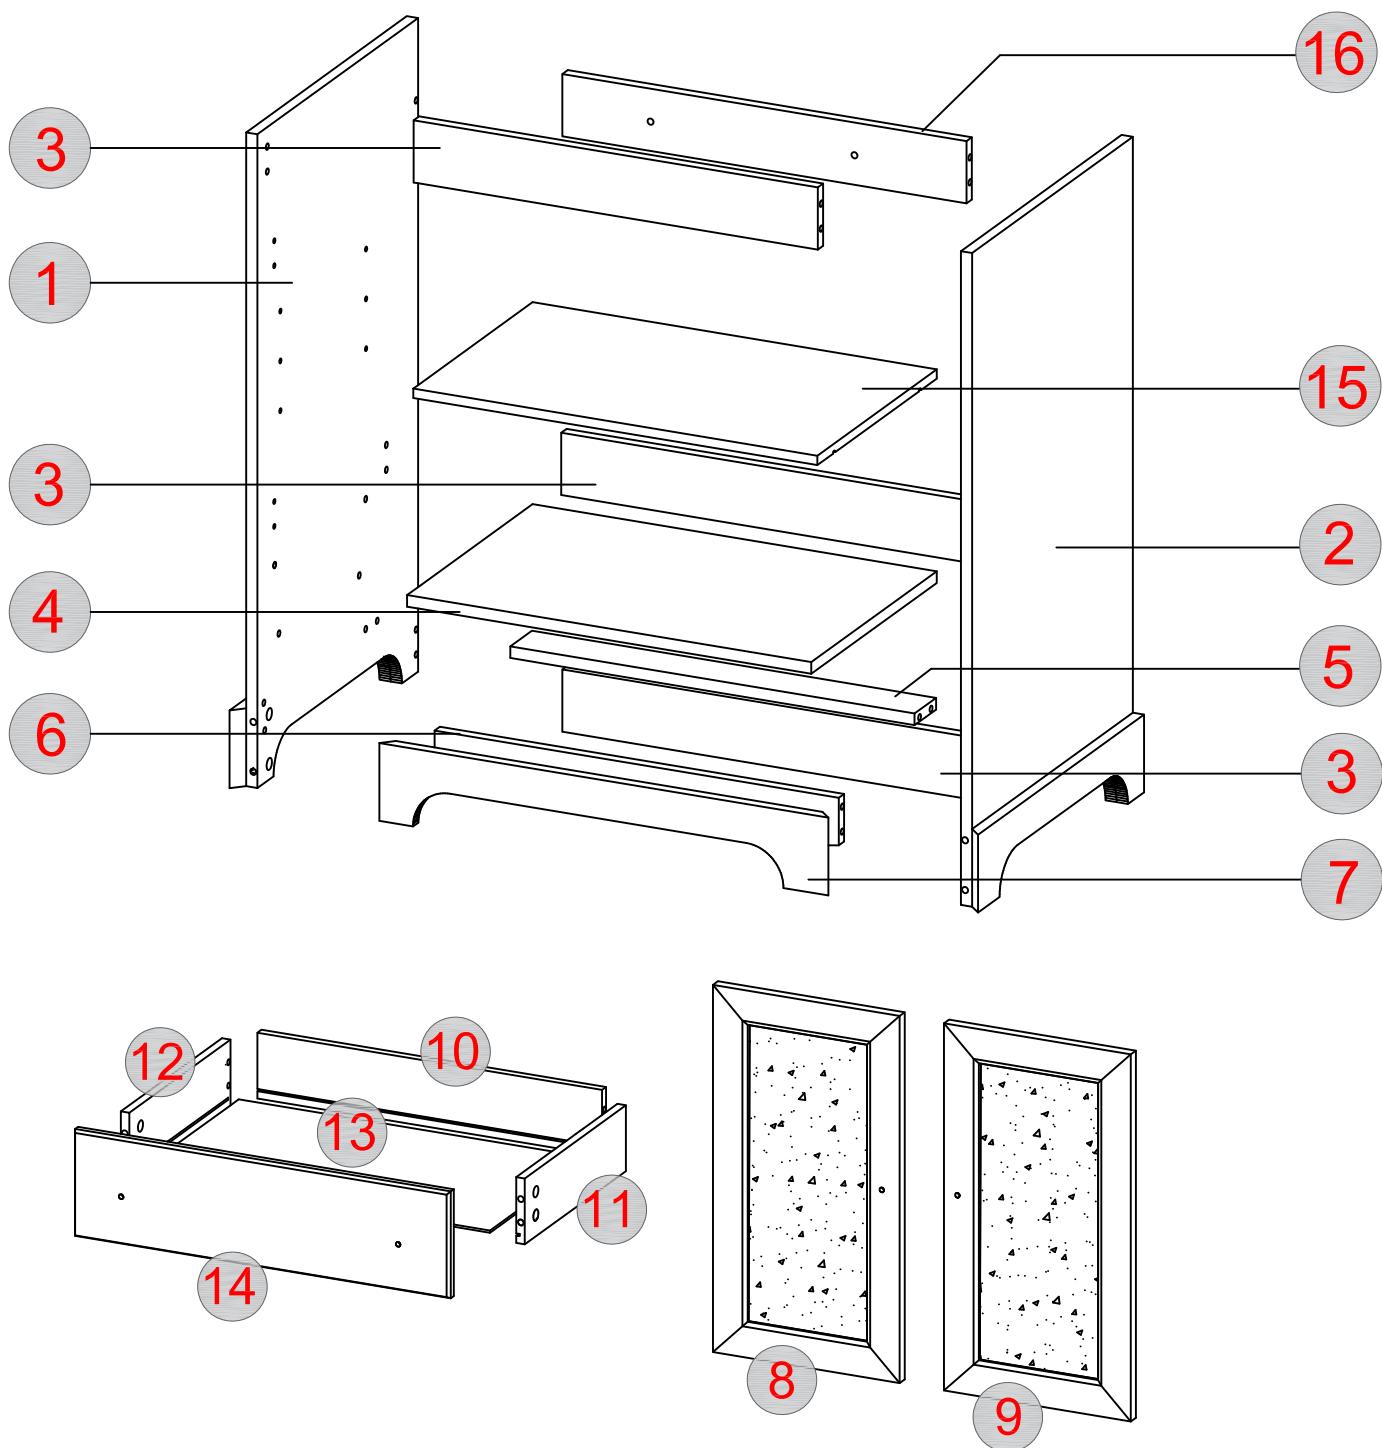


HARDWARE LIST

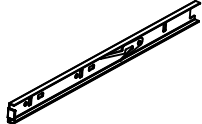Name	Part	Qty.	Spare
A		40	2
B		32	2
C1		2	
C2		2	
D	 3.5*12	8	
E	 4*25	1	
F		4	
G	 4*14	24	2
H		4	
I	 4*18	2	


Name	Part	Qty.	Spare
J		8	1
K		4	
L		4	
M		2	
N	 4*50	2	
O	 4*22	2	

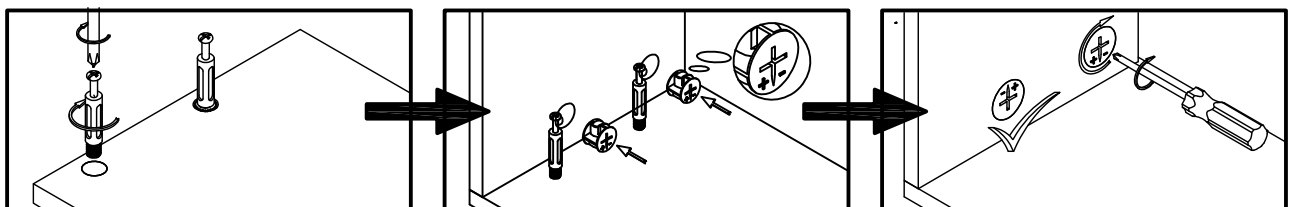

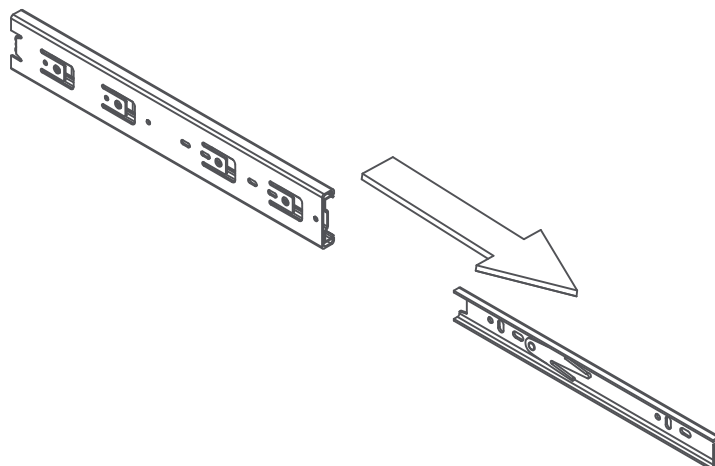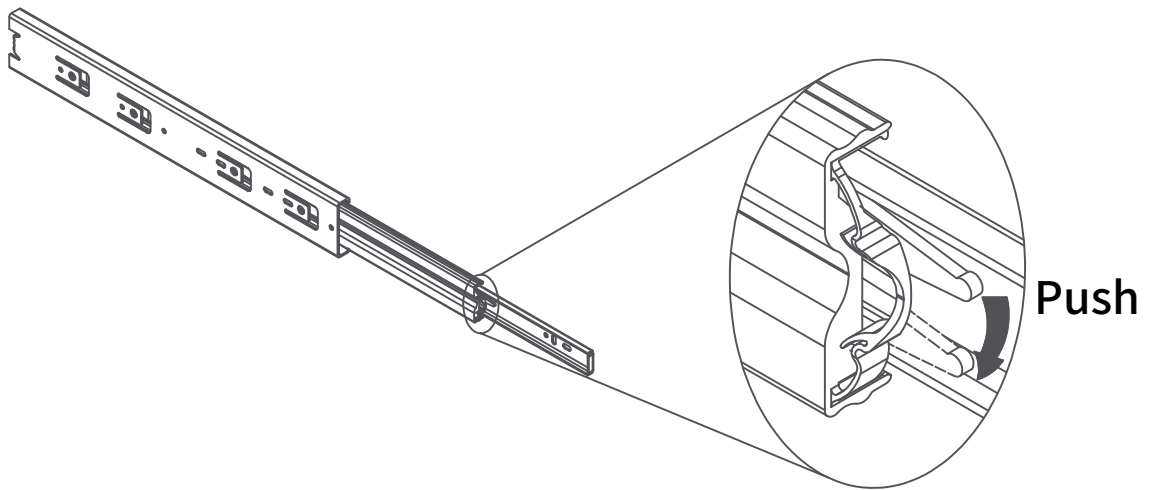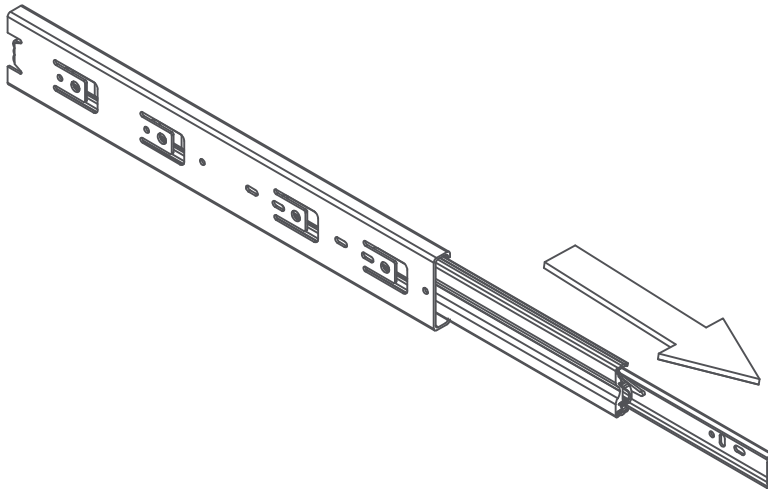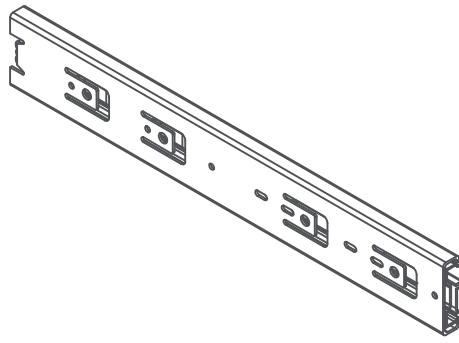

STEP 1


C1 x2 pcs



D x4 pcs




C1

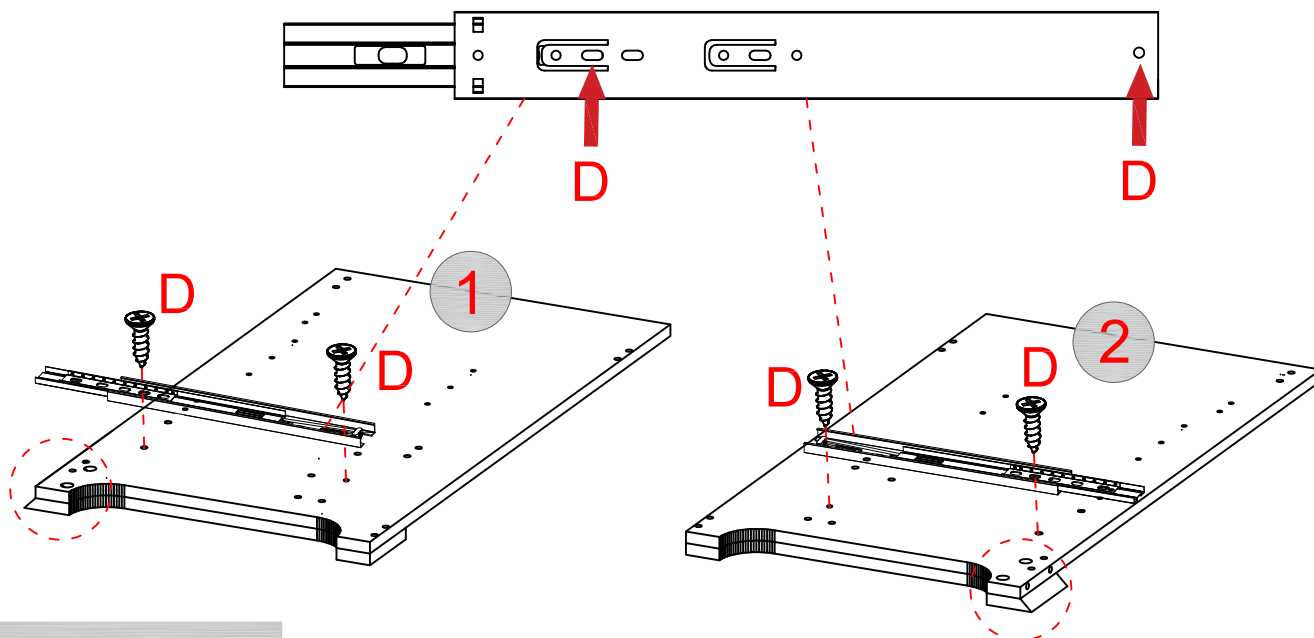


STEP 2


A x14 pcs




B x14 pcs

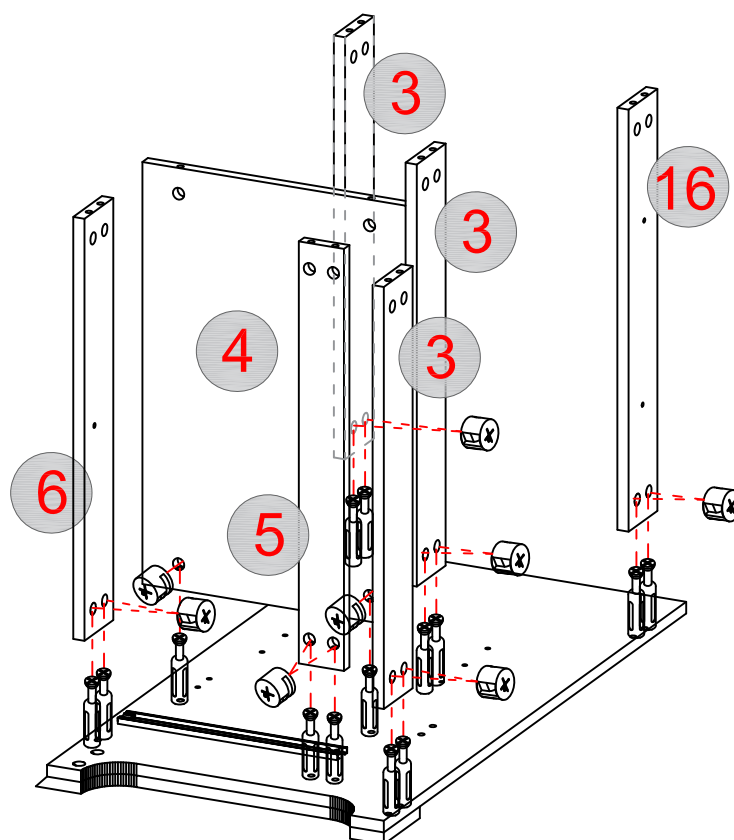

STEP 3

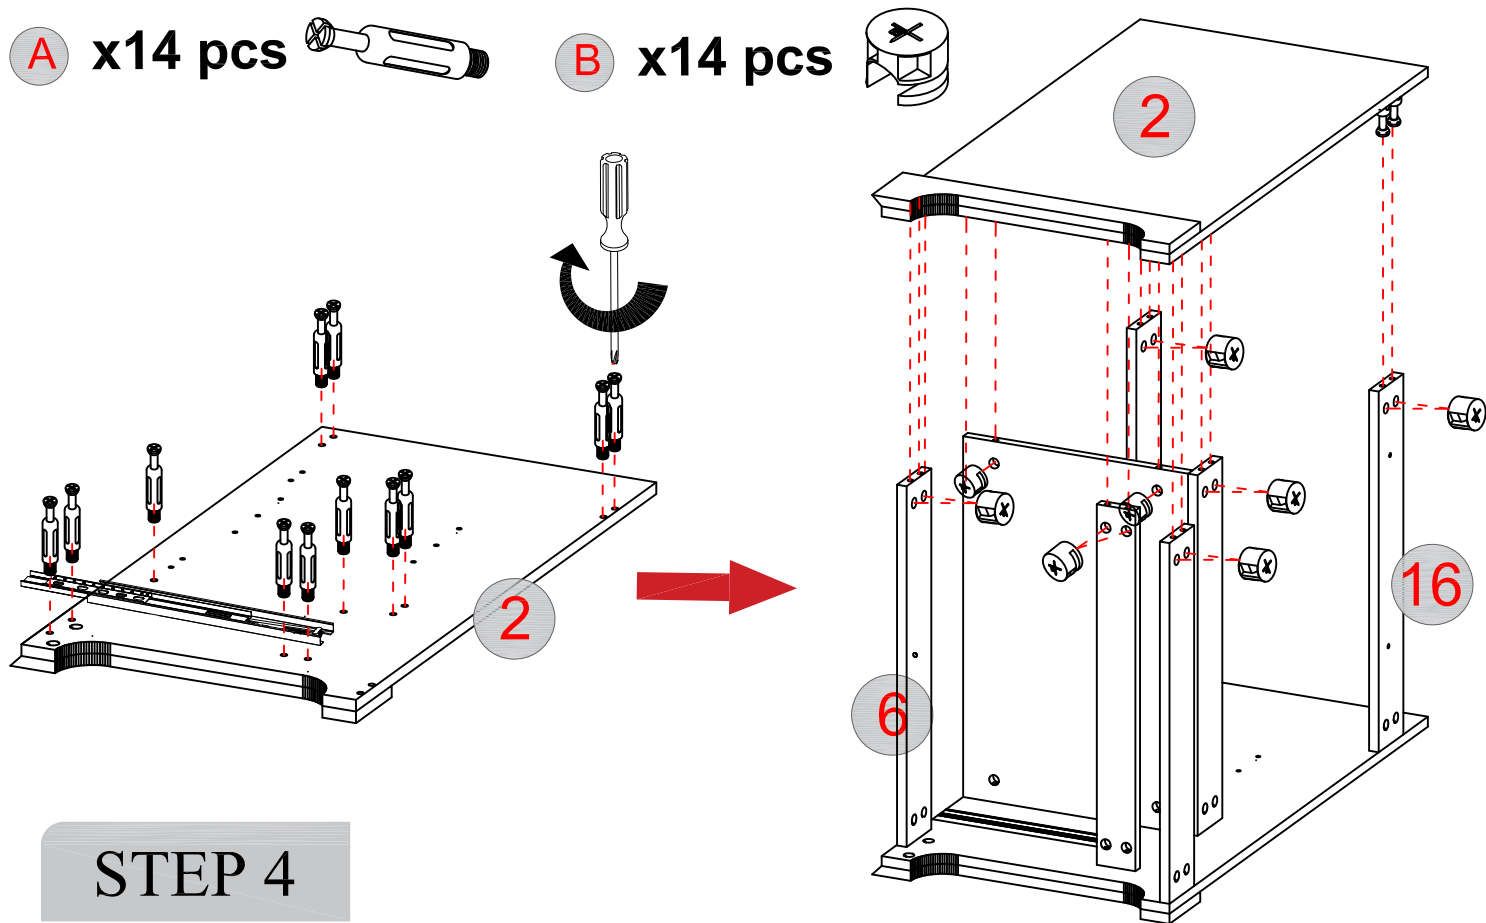


STEP 4

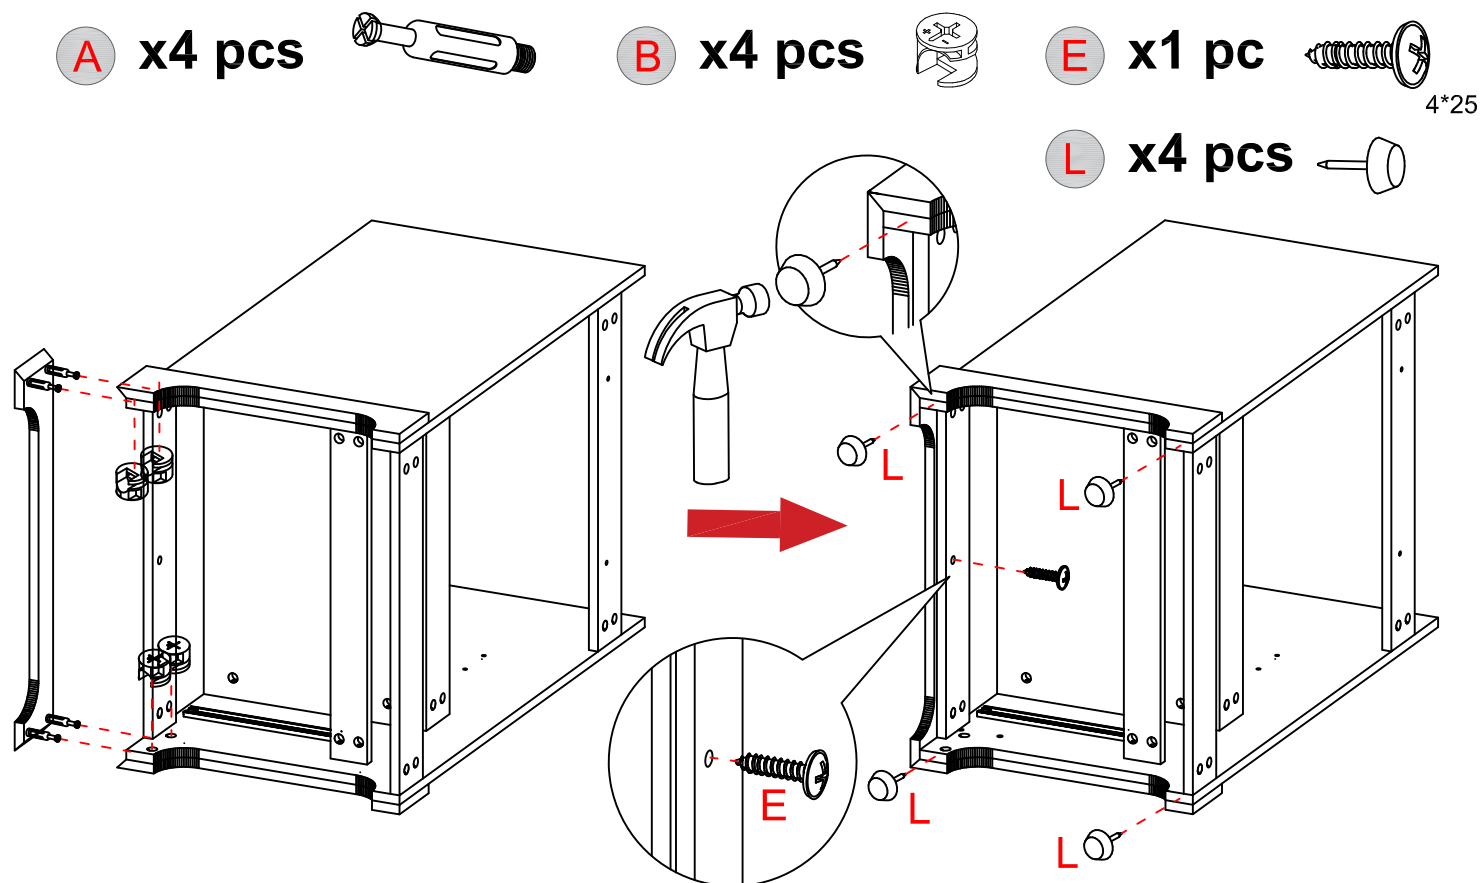


STEP 5

F x4 pcs

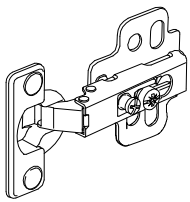


G x24 pcs




H x2 pcs



O x2 pcs




This is the location for the hole

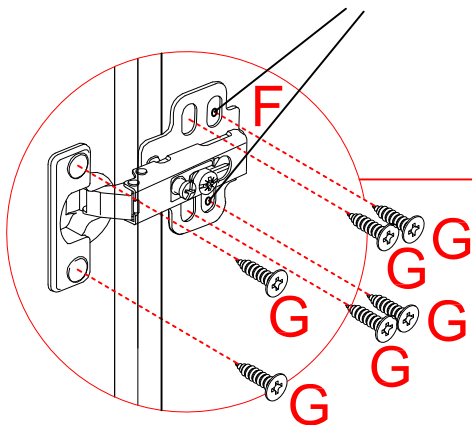


H

8

9

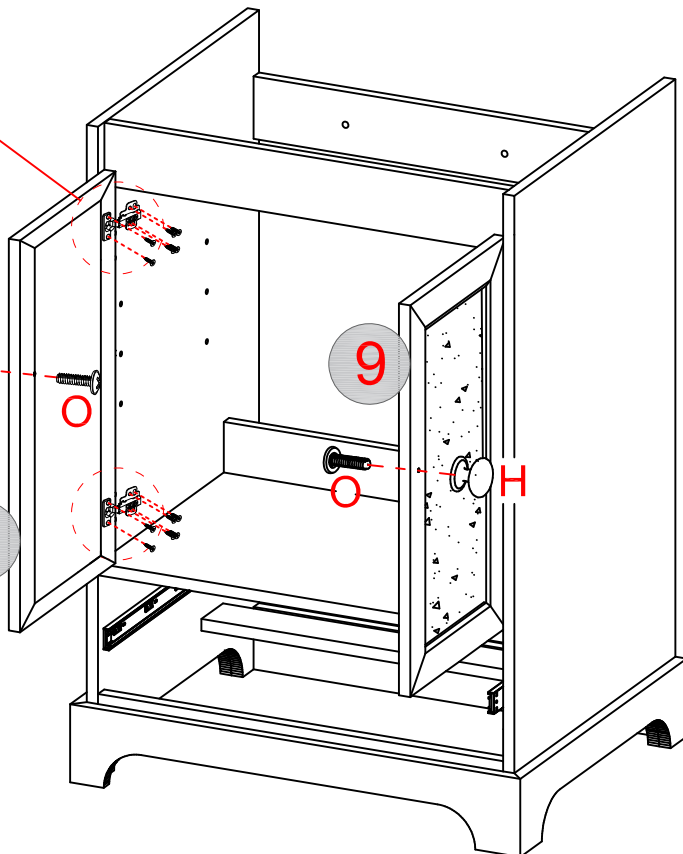

Adjust front-to-back spacing

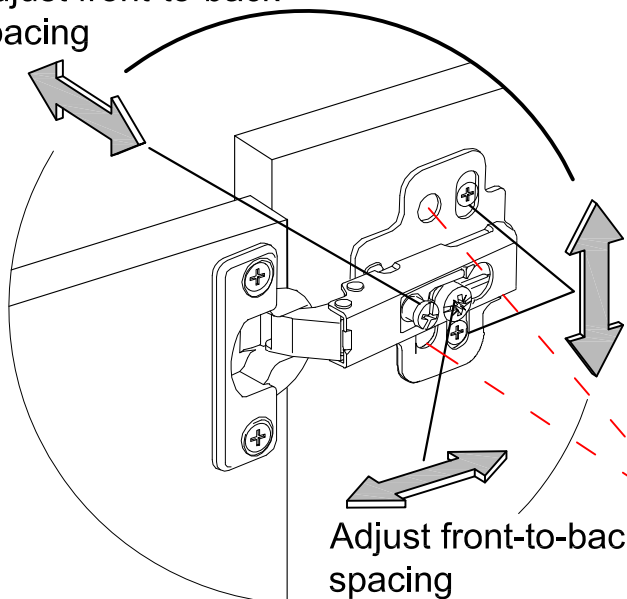


Adjust front-to-back spacing

Adjust front-to-back spacing


Manual drilling is required to install this two screws




STEP 6

A x8 pcs 


J x8 pcs 



H x2 pcs 

I x2 pcs 
4*18

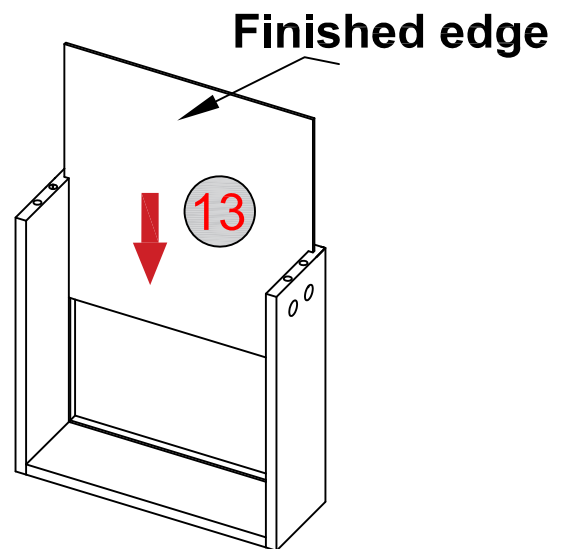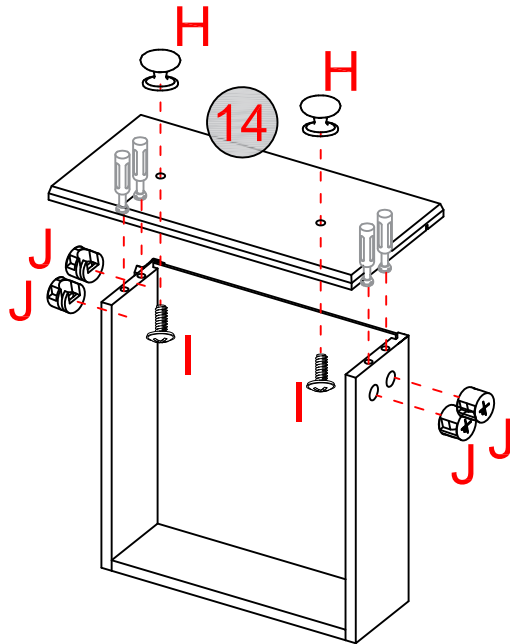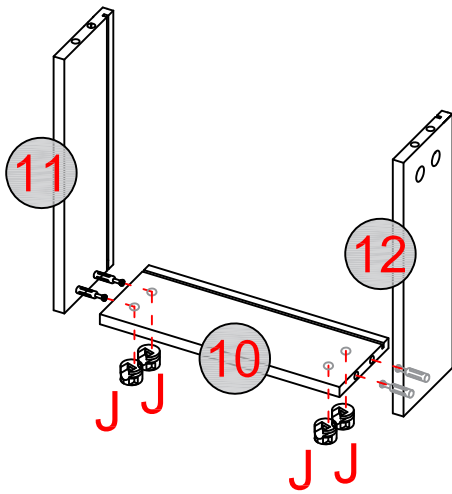




STEP 7

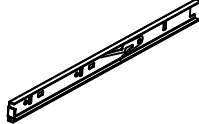C2 x2 pcs 

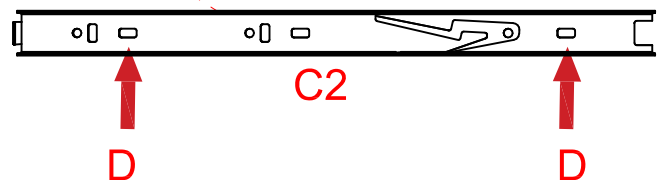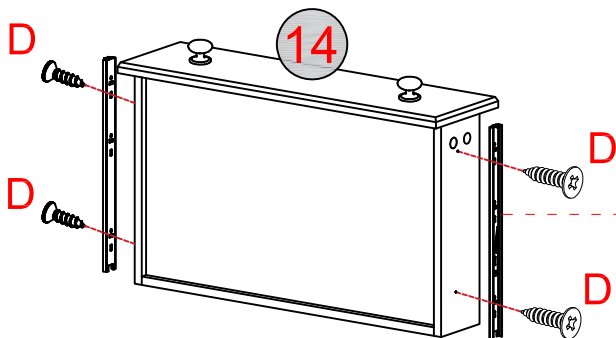

STEP 8

K x4 pcs 

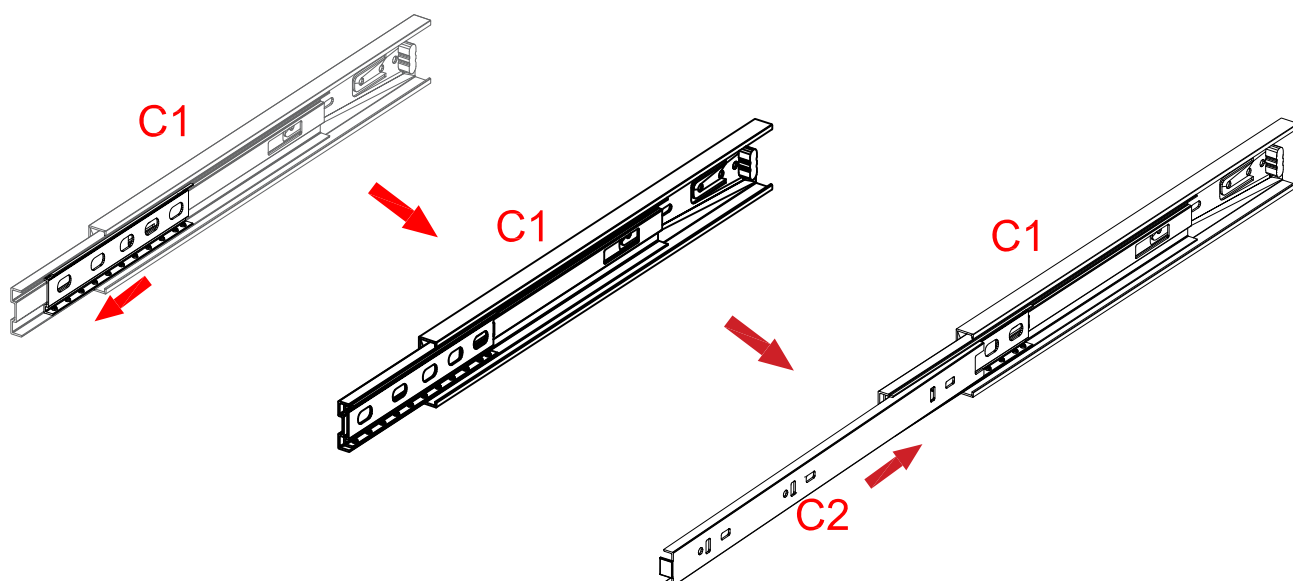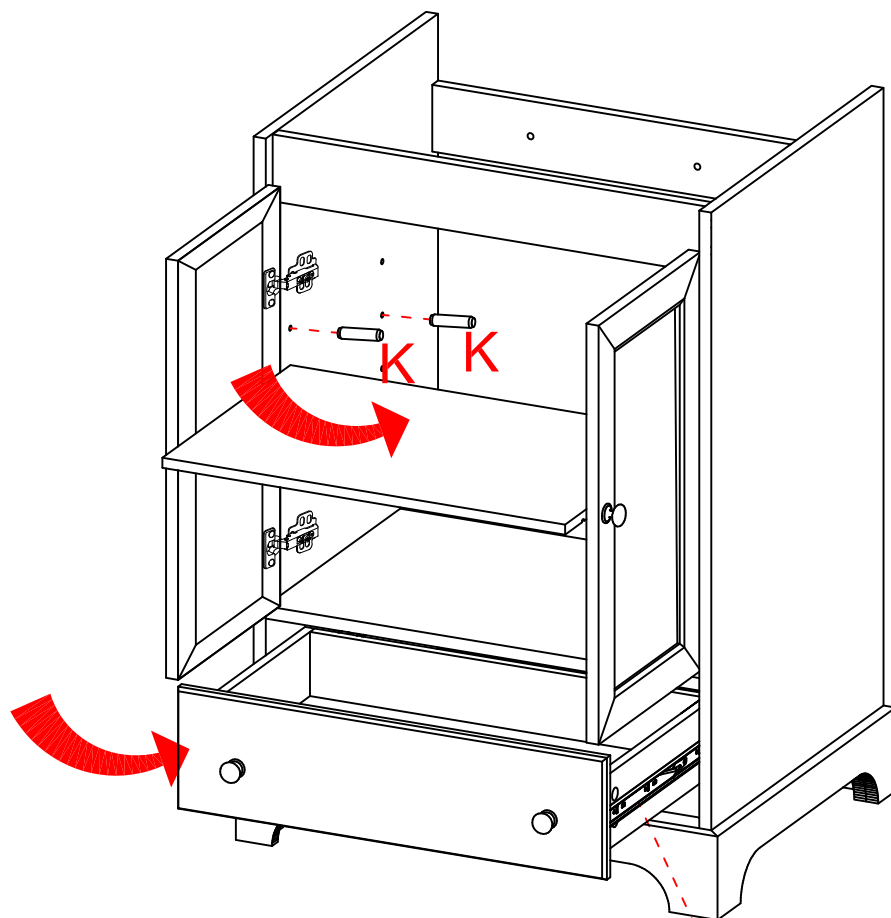

STEP 9

M x2 pcs 

N x2 pcs 

