


# TV STAND

Assembly Instructions - Please keep for future reference

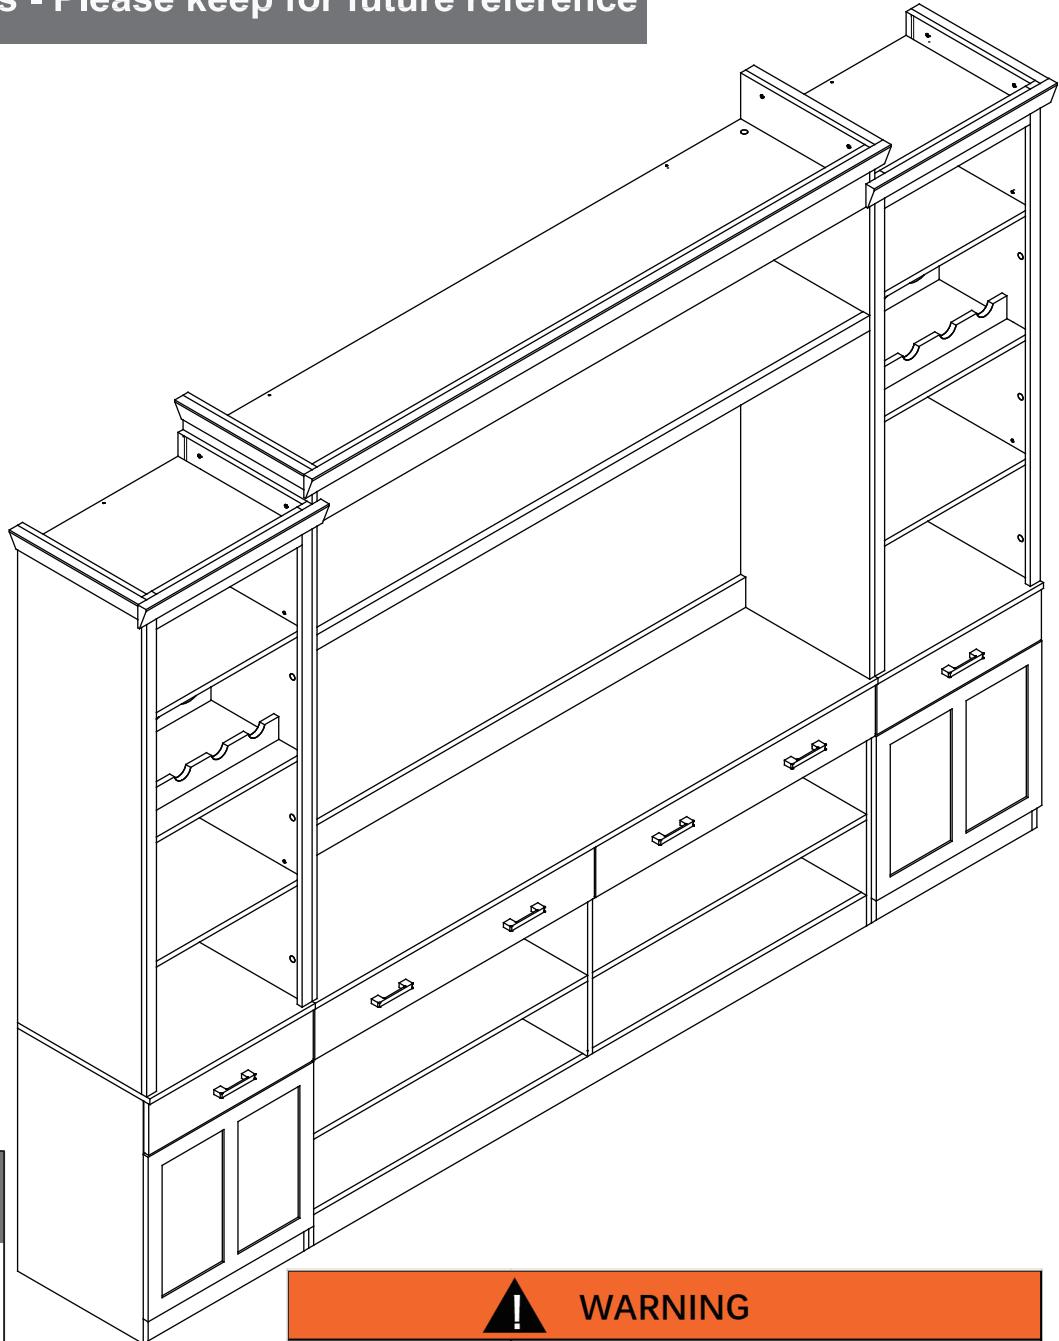

## Dimensions

Width- 106.3inch

Depth- 15.75inch

Height-80.51inch



## WARNING



This product is NOT a Clothing Storage Unit (CSU).  
DO NOT use it for clothing storage.  
Improper use may cause furniture tipover.

**Important – Please read these instructions fully before starting assembly**



# Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

## Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

## Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

## WARNING

**In order to help prevent overturning – please follow these instructions**

To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)  
Do not allow children to climb or hang on the furniture  
Do not open more than one drawer at a time  
Do not place heavy items in the top drawers  
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


# Components - Fittings

Please check you have all the panels listed below



Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

 A	 B	 C	 D
Cam Bolt x 135+2	6*30mm Dowel x 134+2	Cam lock x 135+2	4*30mm Screw x 35+2
 E	 F	 G	 H
Rebound device x 2set	4*40mm Screw x 12+1	4*25mm Screw x 24+2	6*20mm Dowel x 15+1
 I	 J	 K	 L
2.6*10mm Screw x 22+2	3*12mm Screw x 32+2	Slide x 8	Shelf support pin x 16+1
 M	 N	 O	 P
3.5*14mm Hinge x 4set	Allen key x 1	Bracket x 5	6*30mm Screw x 4
 Q	 R	 S	
4*18mm Handle x 6set	Anti-tipping Device x4	Perfect fit x50	

**Tools required** Not Included



Phillips screwdriver  
(medium & large)

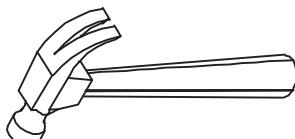


# Using Camlocks

## Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.  
NE PAS SERRER EXCESSIVEMENT.

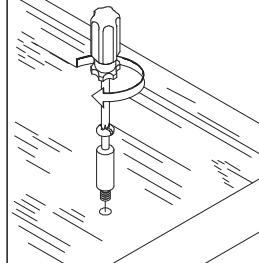

## Step 2

Push the male camlock into the entry hole.

2

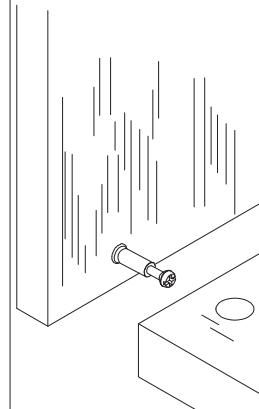


## Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

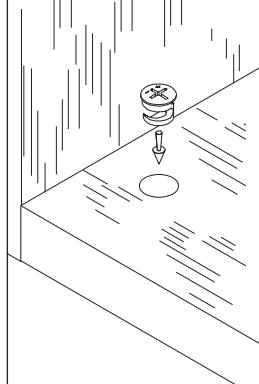


## Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

4

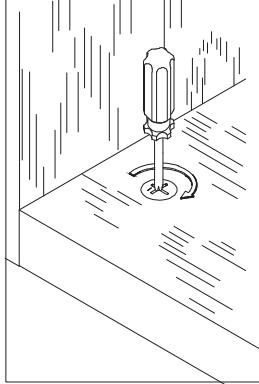











# Assembly Instructions

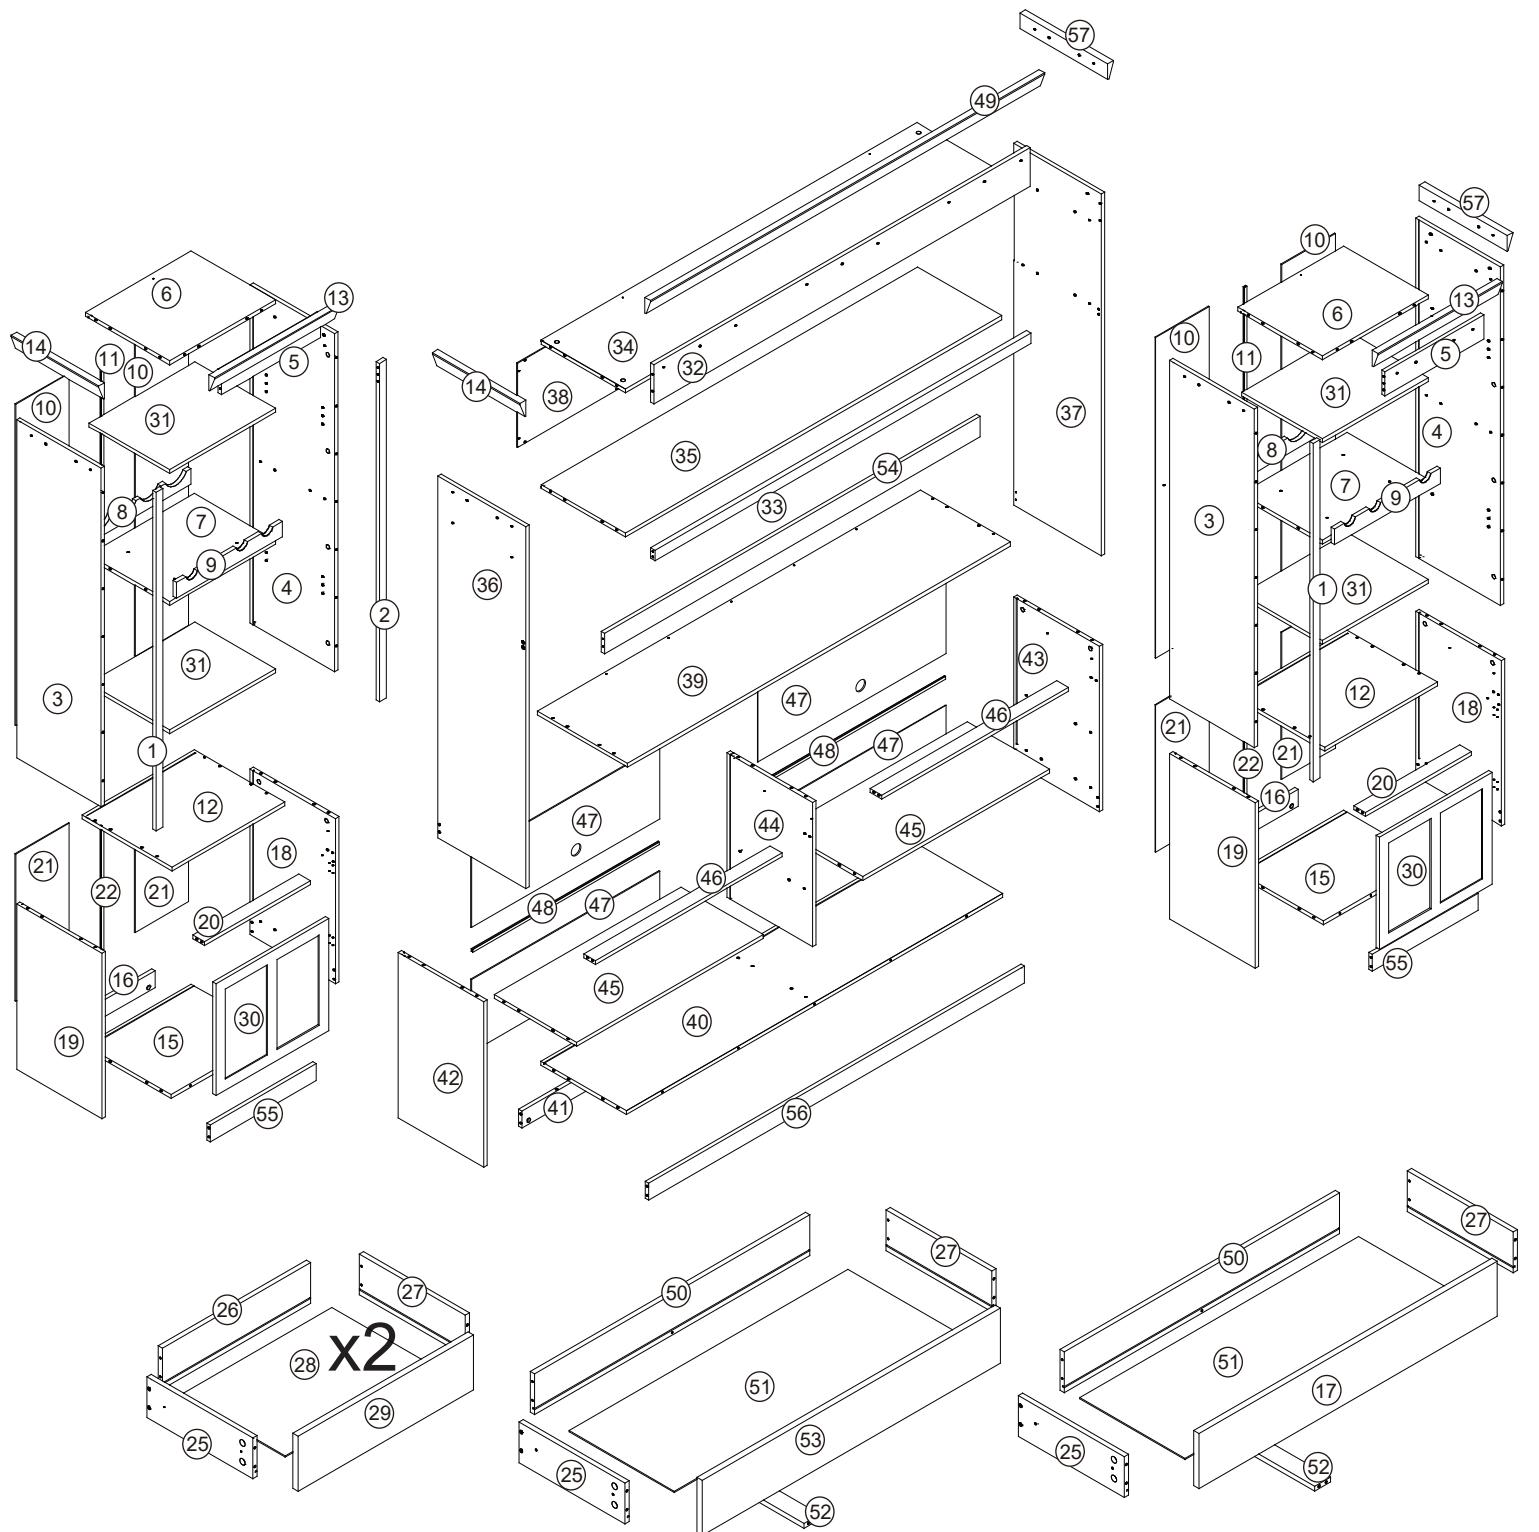


















# PART LIST

There are 3 boxes of this product.

N721P415877

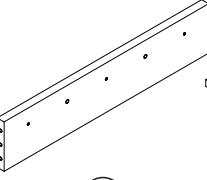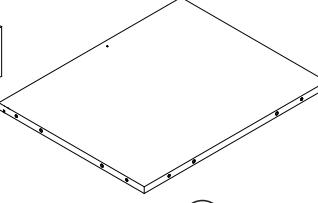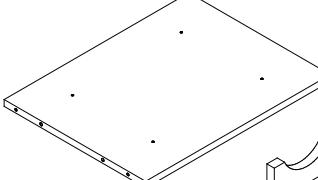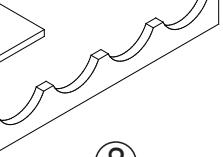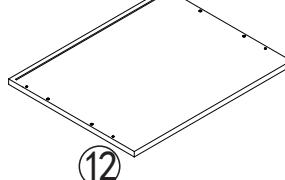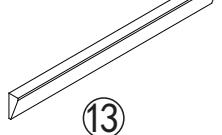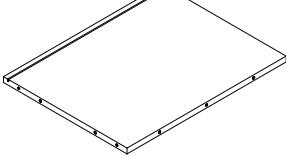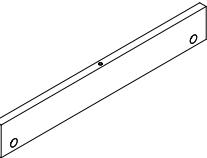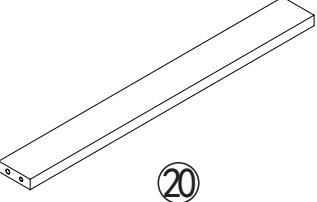 ① x1 Counter Receipt 1300x30x15mm	 ② x1 Counter Receipt 1300x30x15mm	 ③ x1 Upper Cabinet side panel 1300x375x15mm	 ④ x1 Upper Cabinet side panel 1300x375x15mm
 ⑤ x1 Roof front section 440x92x15mm	 ⑥ x1 tip plate 470x375x15mm	 ⑦ x1 Upper Cabinet fixed laminate 470x360x15mm	 ⑧ x1 The wine cabinet 460x60x15mm
 ⑩ x2 Upper Cabinet back panel 1233x240x3mm	 ⑪ x1 Back slats	 ⑫ x1 kneading board 500x400x15mm	 ⑬ x1 Styling strip 553x60x25mm
 ⑮ x1 base plate 470x365x15mm	 ⑯ x1 Drain 470x65x15mm	 ⑯ x1 Side panel of lower cabinet 635x380x15mm	 ⑯ x1 Side panel of lower cabinet 635x380x15mm
 ⑯ x1 Lower Cabinet horizontal bar 470x52x15mm			












# PART LIST

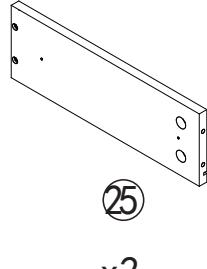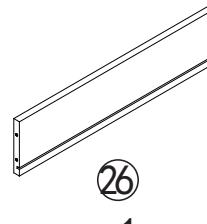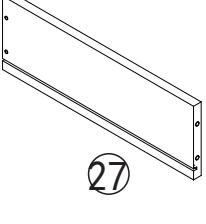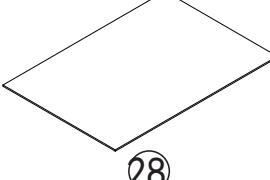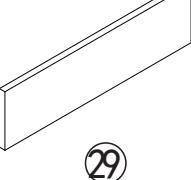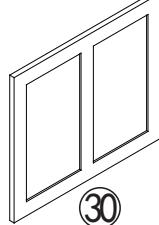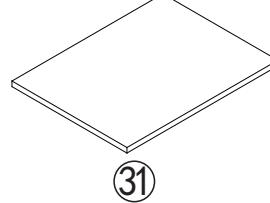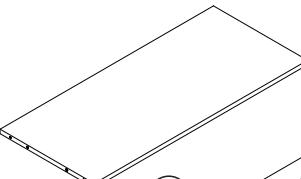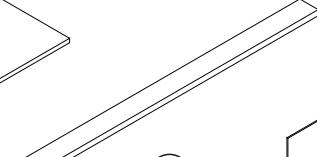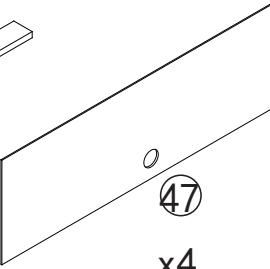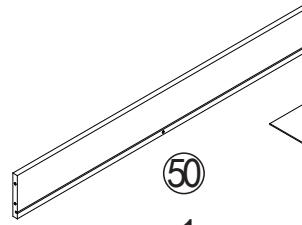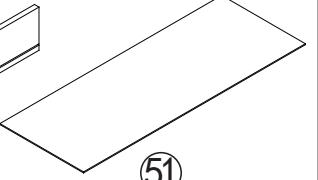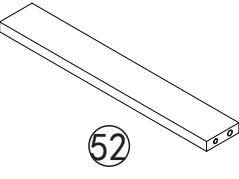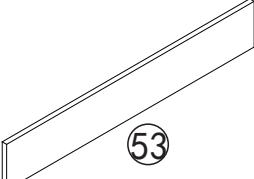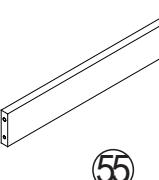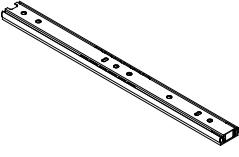				
<b>21</b> x2 Lower Cabinet back panel 565x240x3mm	<b>22</b> x1 Back slats	<b>25</b> x2 Drawer side panel 300x100x12mm	<b>26</b> x1 Back panel of drawer 420x100x12mm	<b>27</b> x2 Drawer side panel 300x100x12mm
				
<b>28</b> x1 Drawer back panel 430x298x3mm	<b>29</b> x1 Drawer Panel 497x135x15mm	<b>30</b> x1 door plank 500x430x15mm	<b>31</b> x2 Active laminate 470x358x15mm	<b>42</b> x1 Side panel of lower cabinet 635x380x15mm
				
<b>45</b> x1 Upper Cabinet fixed laminate 827x365x15mm	<b>46</b> x1 Lower Cabinet horizontal bar 827x52x15mm	<b>47</b> x4 Lower Cabinet back panel 282x375x3mm	<b>50</b> x1 Back panel of drawer 780x100x12mm	<b>51</b> x1 Drawer back panel 790x298x3mm
				
<b>52</b> x1 Drawer drawers 288x45x12mm	<b>53</b> x1 Drawer Panel 845x135x15mm	<b>55</b> x1 Drain 470x80x15mm		<b>Slide x 8</b>

# PART LIST

There are 3 boxes of this product.














N721P415878

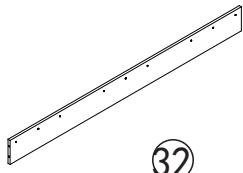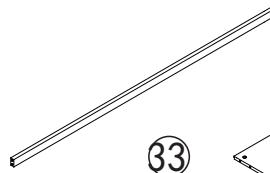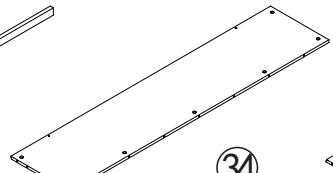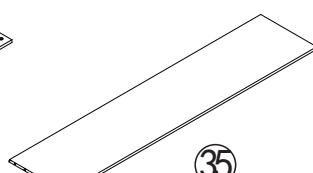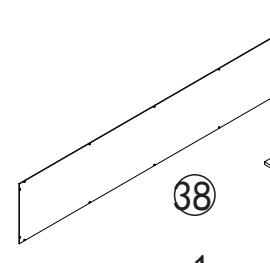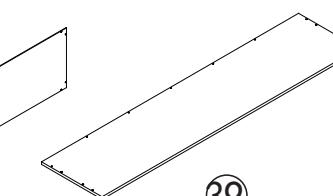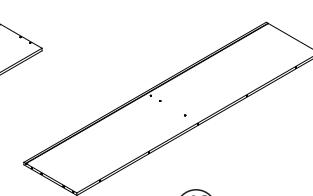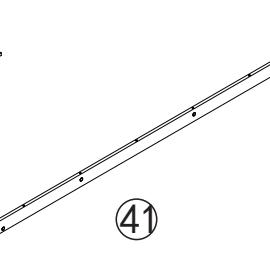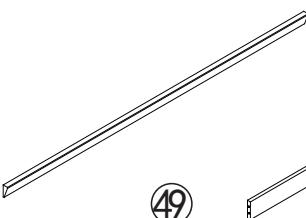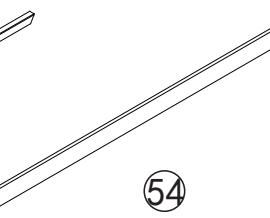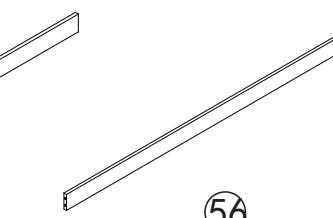				
<b>32</b> x1 Roof front section 1670x150x15mm	<b>33</b> x1 Square tube 1670x40x20mm	<b>34</b> x1 tip plate 1670x375x15mm	<b>35</b> x1 Upper Cabinet fixed laminate 1670x375x15mm	<b>36</b> x1 Upper Cabinet side panel 1390x390x15mm
				
<b>37</b> x1 Upper Cabinet side panel 1390x390x15mm	<b>38</b> x1 Upper Cabinet back panel 1688x323x3mm	<b>39</b> x1 kneading board 1700x400x15mm	<b>40</b> x1 base plate 1670x365x15mm	<b>41</b> x1 Drain 1670x65x15mm
				
<b>49</b> x1 Styling strip 1750x60x25mm	<b>54</b> x1 Dackspace 1670x79x15mm	<b>56</b> x1 Drain 1670x80x15mm		















# PART LIST

There are 3 boxes of this product.

N721P415879

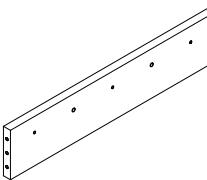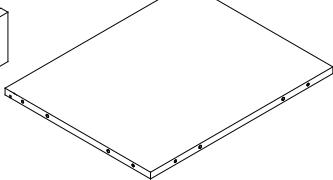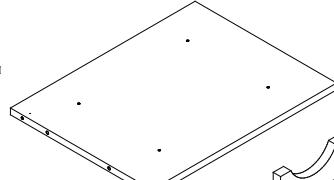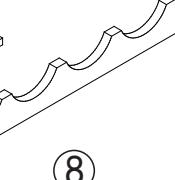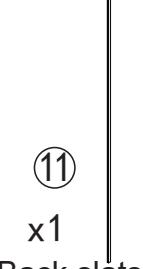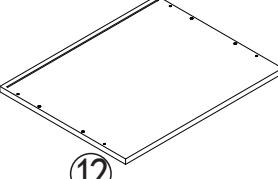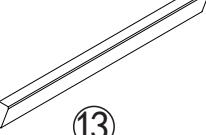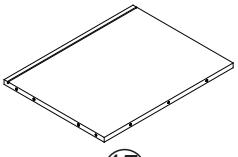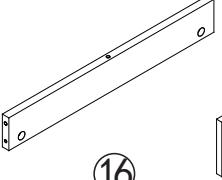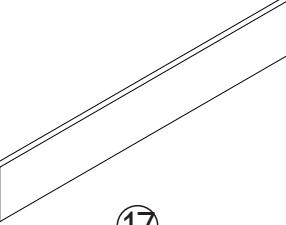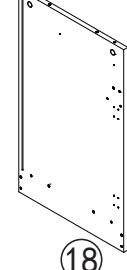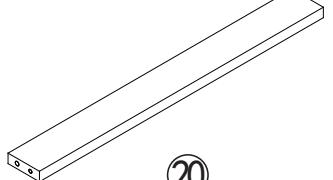 ① x1 Counter Receipt 1300x30x15mm	 ② x1 Counter Receipt 1300x30x15mm	 ③ x1 Upper Cabinet side panel 1300x375x15mm	 ④ x1 Upper Cabinet side panel 1300x375x15mm
 ⑤ x1 Roof front section 440x92x15mm	 ⑥ x1 tip plate 470x375x15mm	 ⑦ x1 Upper Cabinet fixed laminate 470x360x15mm	 ⑧ x1 The wine cabinet 460x60x15mm
 ⑩ x2 Upper Cabinet back panel 1233x240x3mm	 ⑪ x1 Back slats	 ⑫ x1 kneading board 500x400x15mm	 ⑬ x1 Styling strip 553x60x25mm
 ⑮ x1 base plate 470x365x15mm			
 ⑯ x1 Drain 470x65x15mm	 ⑰ x1 Drawer Panel 845x135x15mm	 ⑱ x1 Side panel of lower cabinet 635x380x15mm	 ⑲ x1 Side panel of lower cabinet 635x380x15mm
			 ⑳ x1 Lower Cabinet horizontal bar 470x52x15mm


# PART LIST

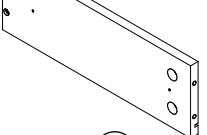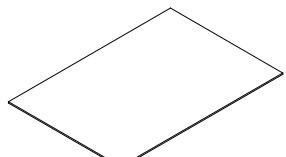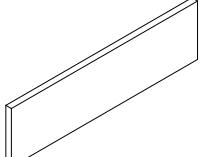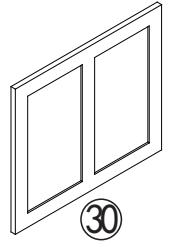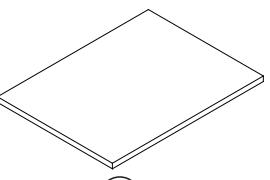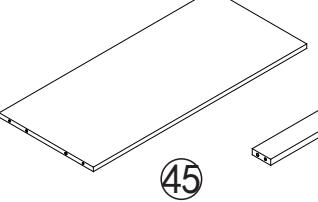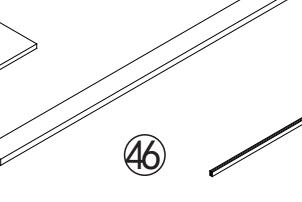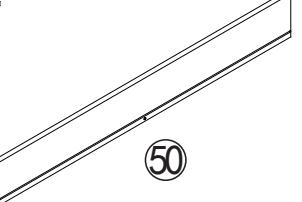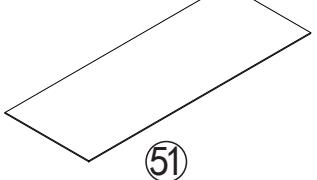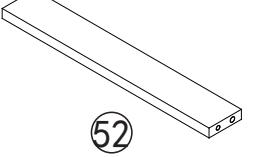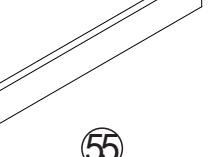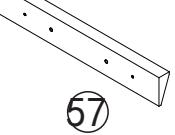	<b>21</b> x2 Lower Cabinet back panel 565x240x3mm		<b>22</b> x1 Back slats		<b>25</b> x2 Drawer side panel 300x100x12mm		<b>26</b> x1 Back panel of drawer 420x100x12mm		<b>27</b> x2 Drawer side panel 300x100x12mm
	<b>28</b> x1 Drawer back panel 430x298x3mm		<b>29</b> x1 Drawer Panel 497x135x15mm		<b>30</b> x1 door plank 500x430x15mm		<b>31</b> x2 Active laminate 470x358x15mm		<b>43</b> x1 Side panel of lower cabinet 635x380x15mm
	<b>44</b> x1 Medium vertical plate 555x380x15mm		<b>45</b> x1 Upper Cabinet fixed laminate 827x365x15mm		<b>46</b> x1 Lower Cabinet horizontal bar 827x52x15mm		<b>48</b> x2 Back slats		<b>50</b> x1 Back panel of drawer 780x100x12mm
	<b>51</b> x1 Drawer back panel 790x298x3mm		<b>52</b> x1 Drawer drawers 288x45x12mm		<b>55</b> x1 Drain 470x80x15mm		<b>57</b> x2 Styling strip 390x60x25mm		Hardware kit x1

# Assembly Instructions

## Step 1

**x2**

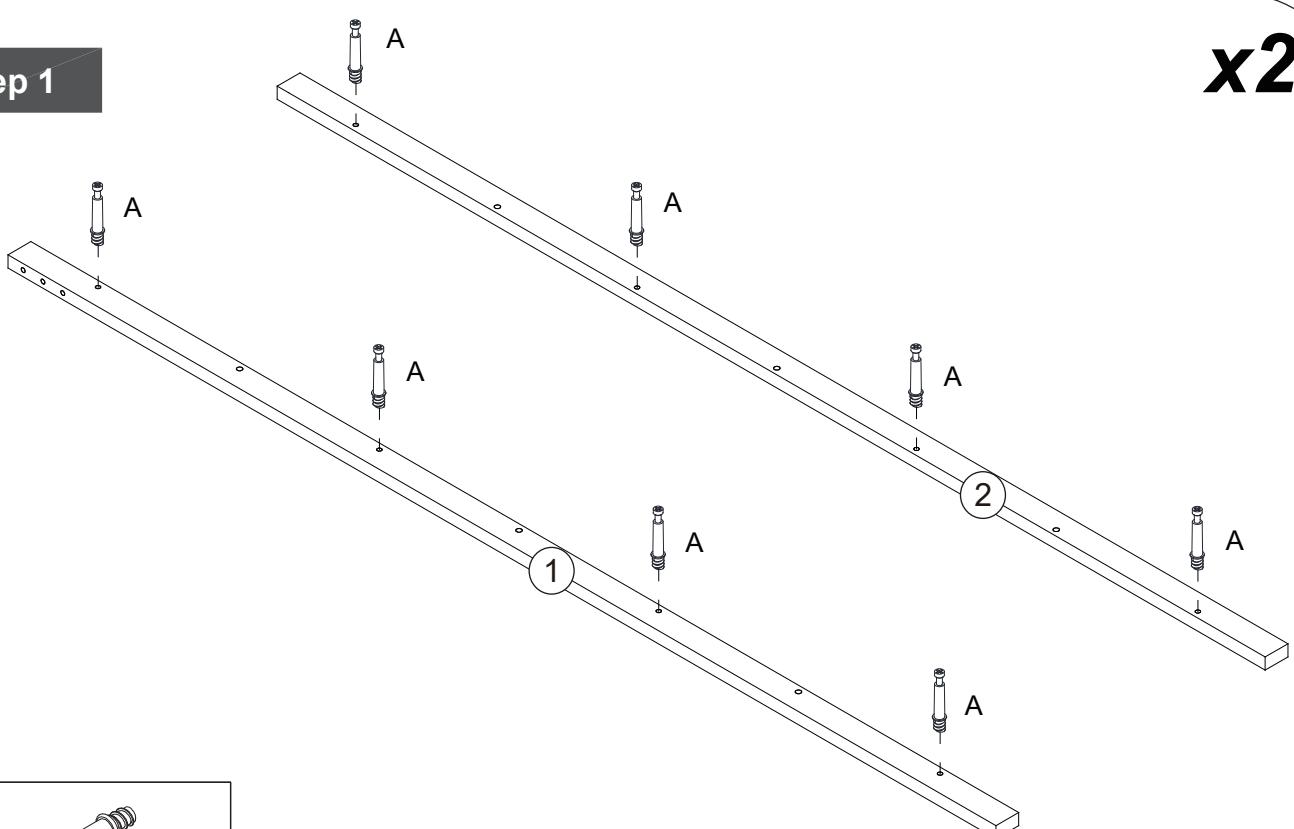


(A)  
Cam Bolt x 16


## Step 2

**x2**



step1

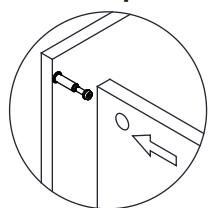

step2

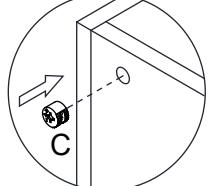

step3

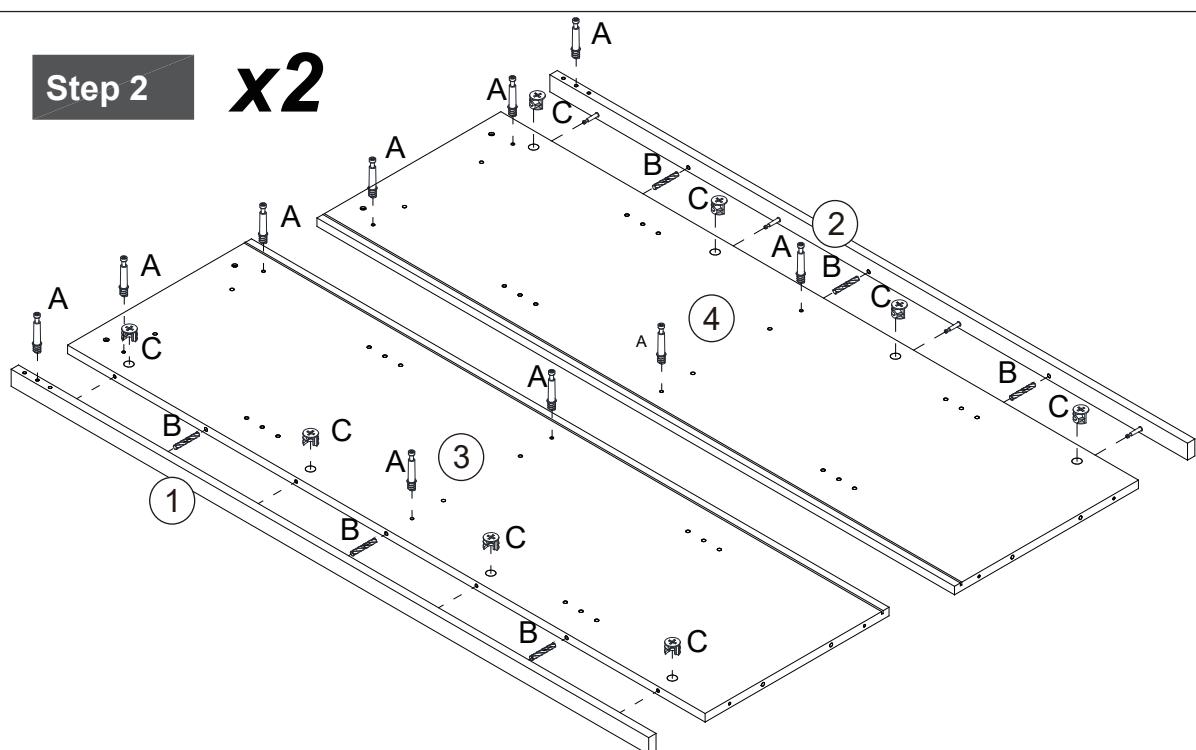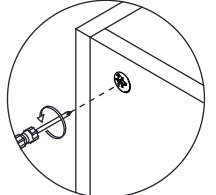

(A)  
Cam Bolt x 20



(B)  
6\*30mm Dowel x 12

(C)  
Cam Bolt x 16


# Assembly Instructions

Step 3


**x2**

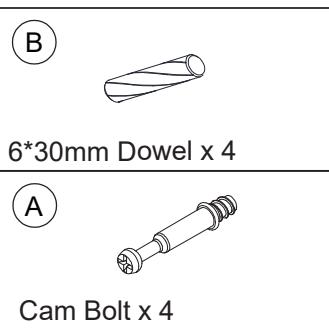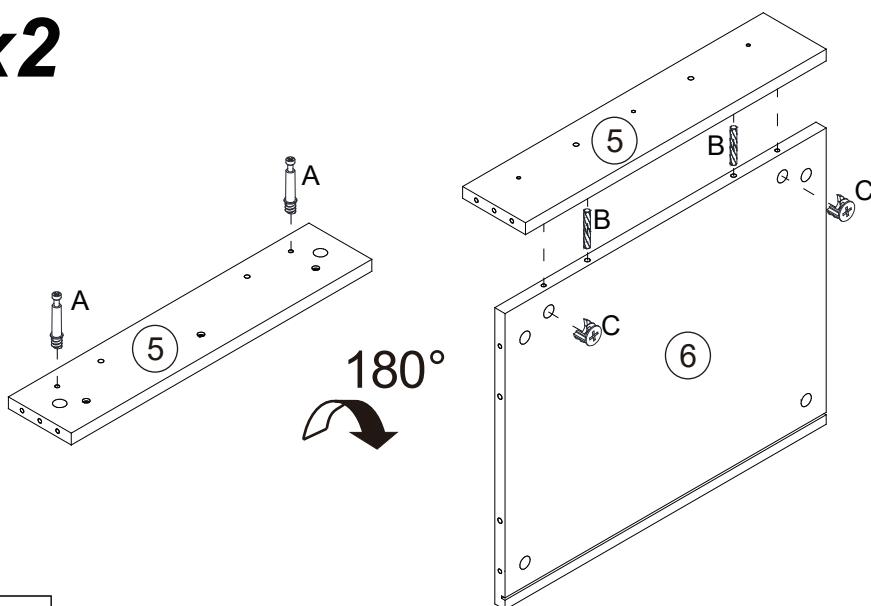


step1

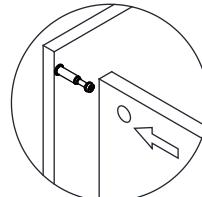

step2


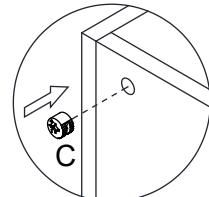


step3

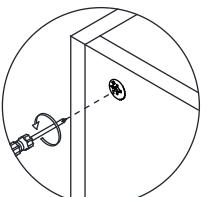

Step 4


**x2**

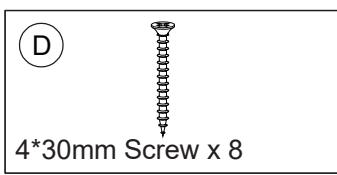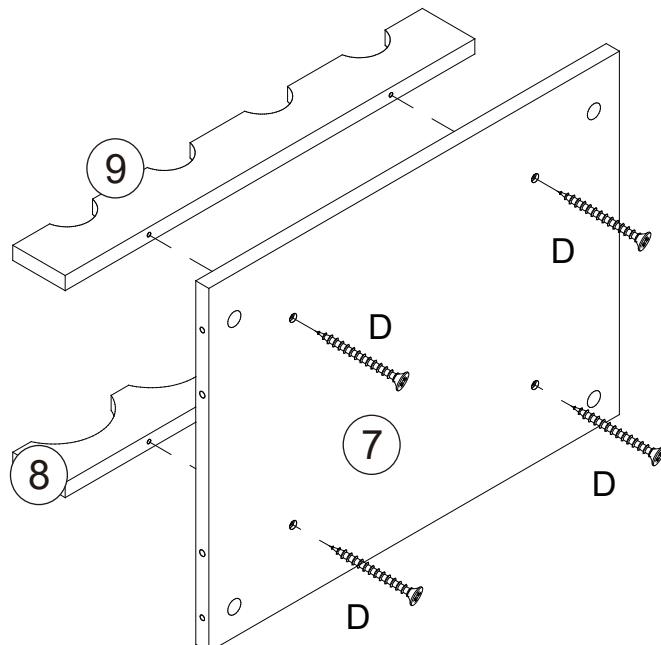

# Assembly Instructions


Step 5

**x2**

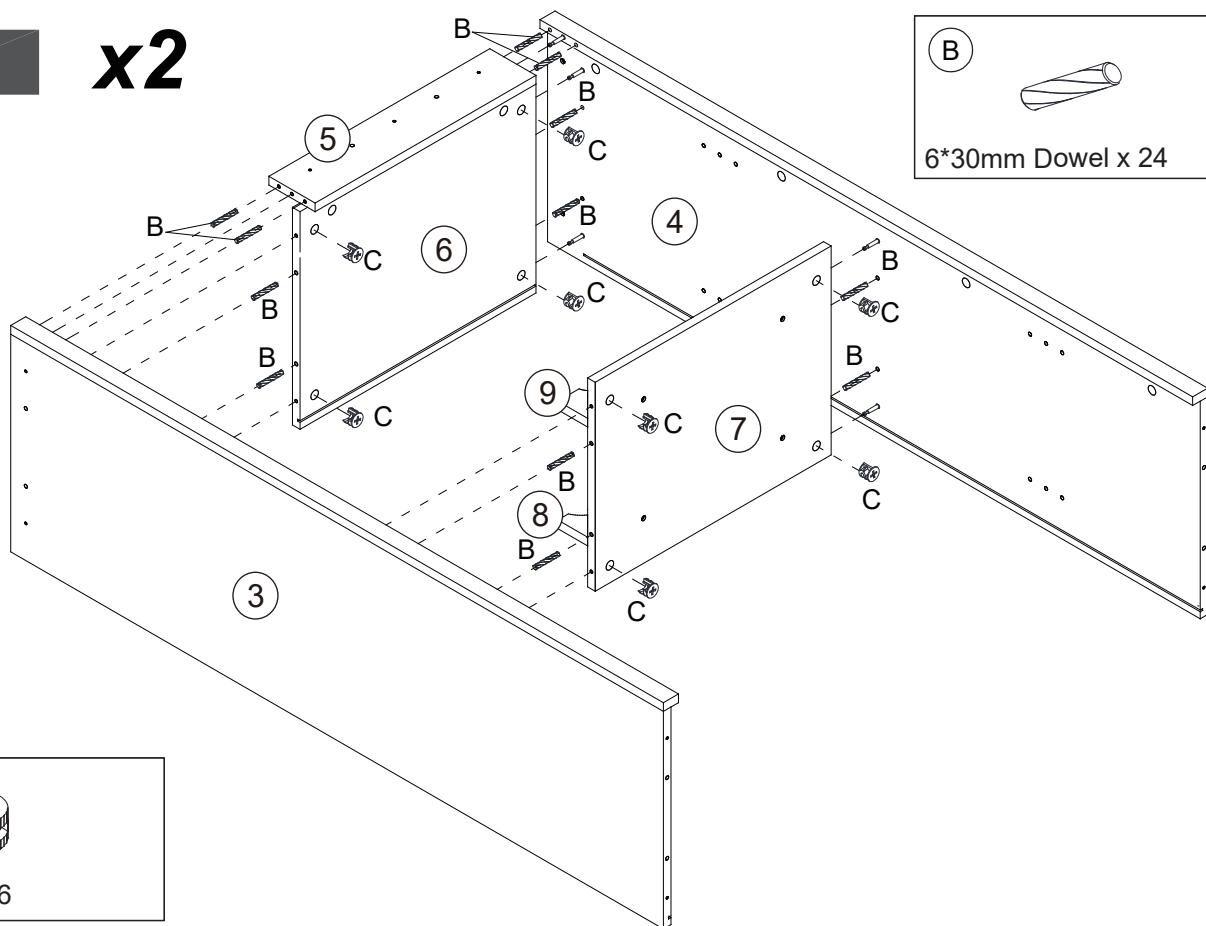

**x2**

Step 6

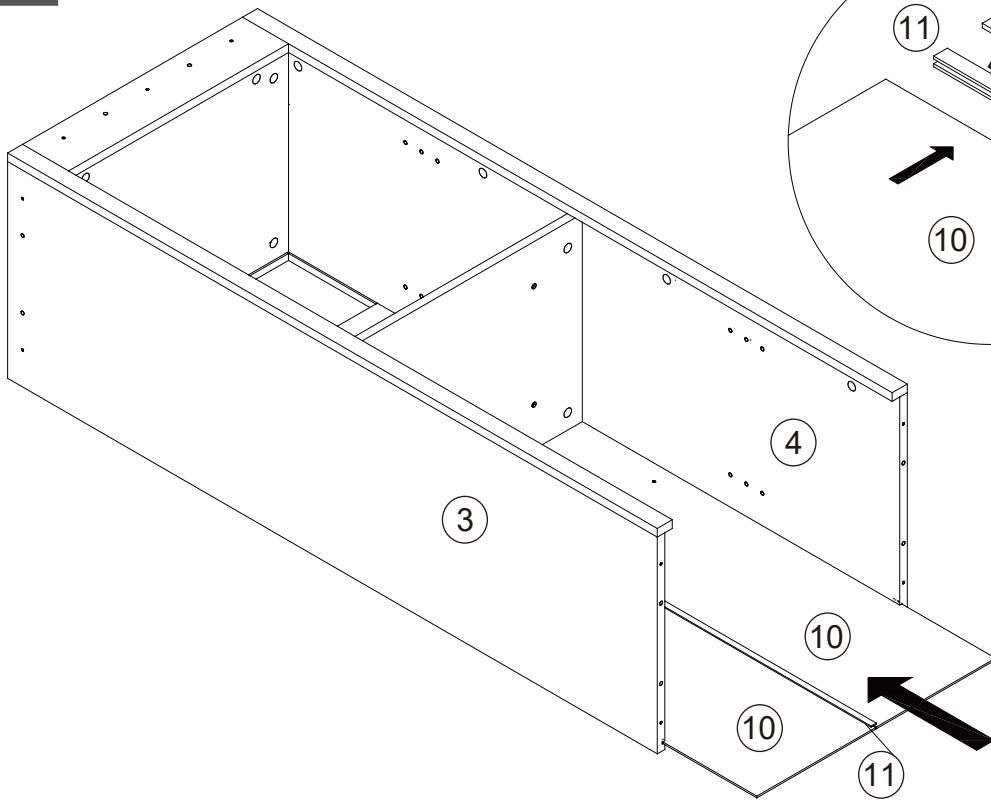


**12**

# Assembly Instructions

Step 7

**x2**

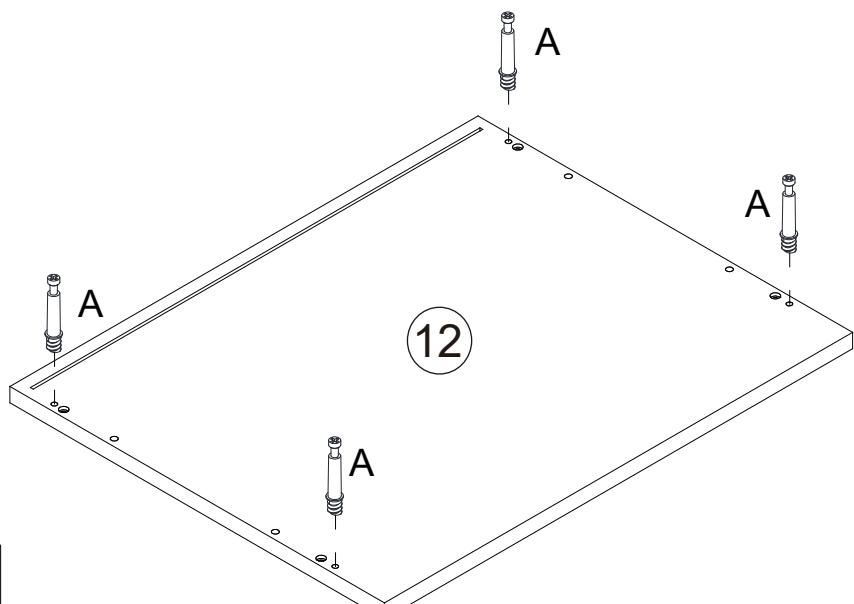


(A)

Cam Bolt x 8

Step 8

**x2**

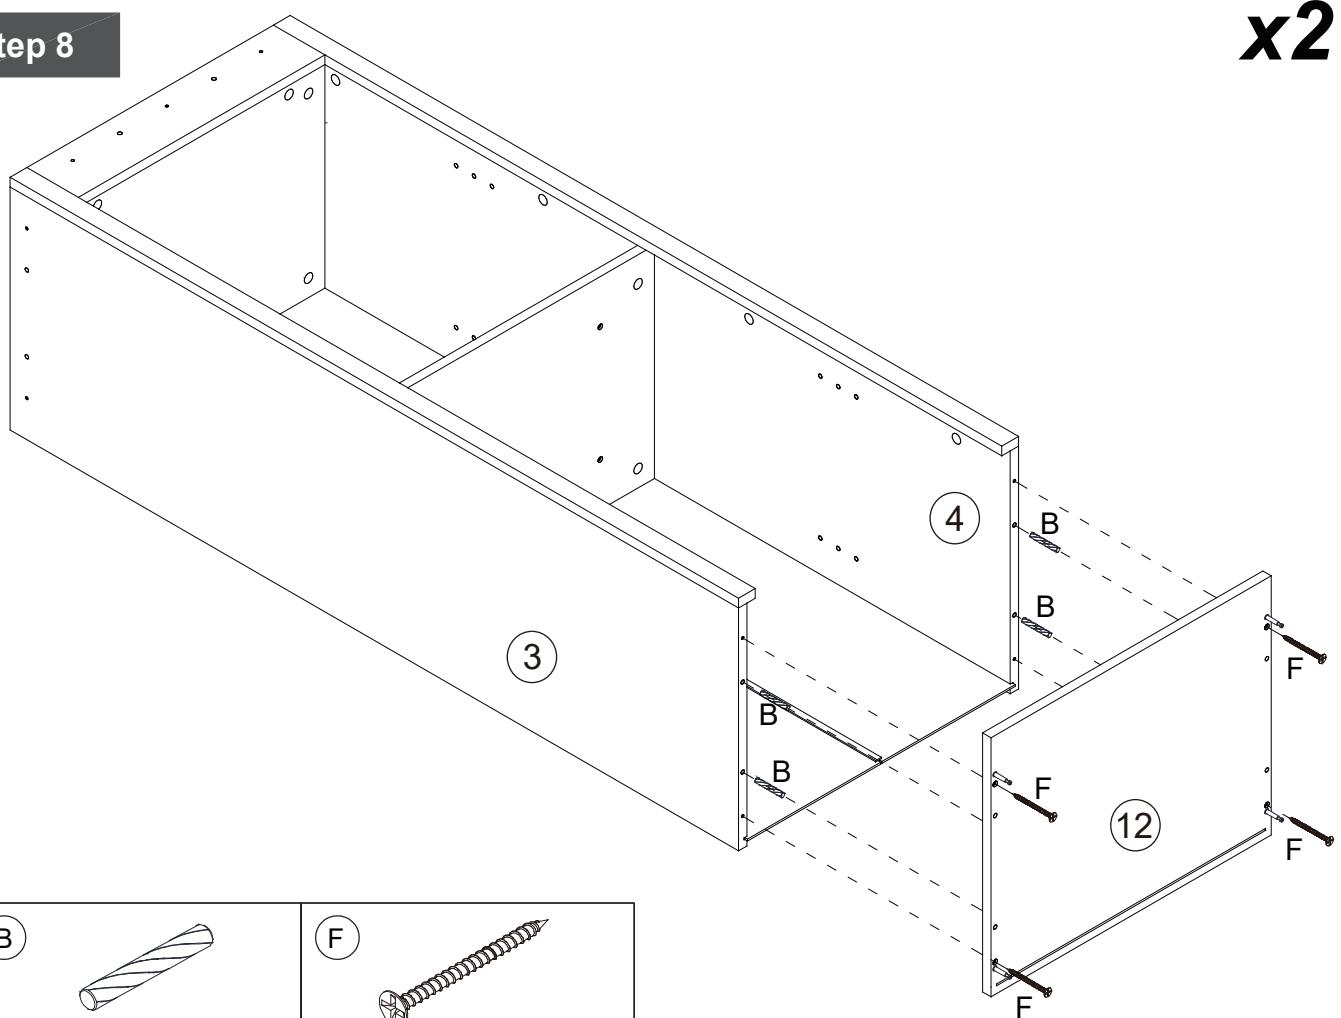

(B)

6\*30mm Dowel x 8

(F)


4\*40mm Screw x 8

**13**


# Assembly Instructions

## Step 9


(I)	2.6*10mm Screw x 4
(H)	6*20mm Dowel x 4
(G)	4*25mm Screw x 5
(C)	Cam Bolt x 2

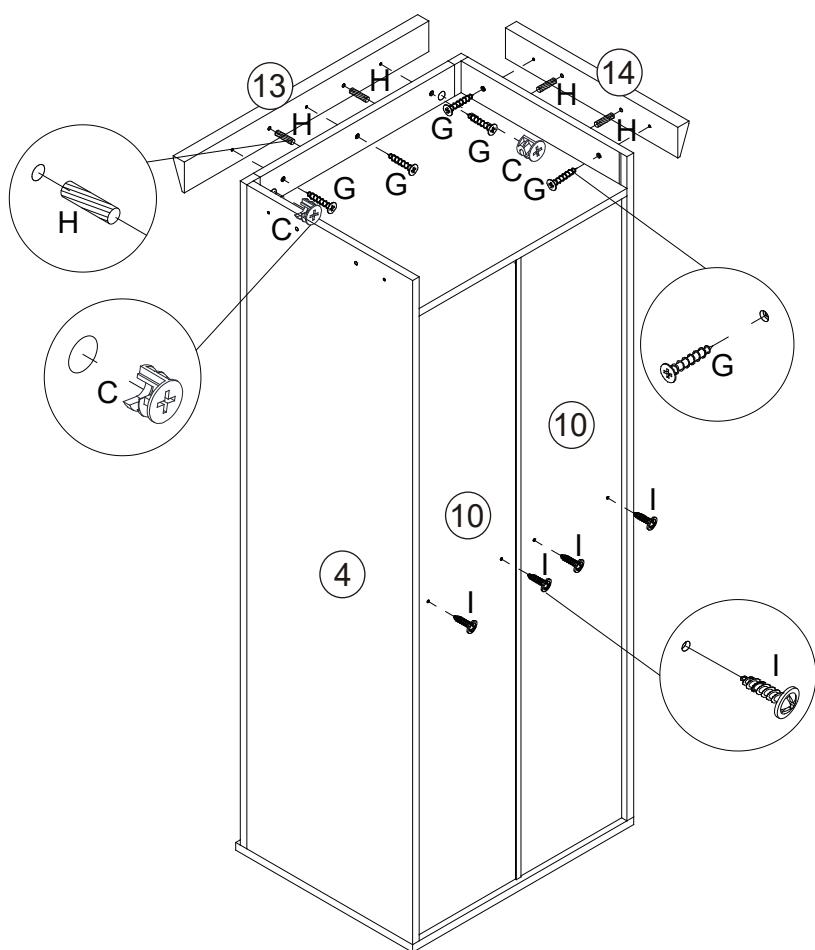


## step1

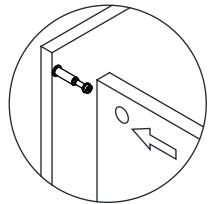

## step2

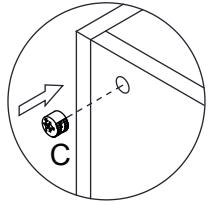


## step3

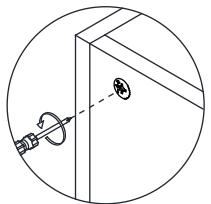


## Step 10


(I)	2.6*10mm Screw x 4
(H)	6*20mm Dowel x 4
(G)	4*25mm Screw x 5
(C)	Cam Bolt x 2

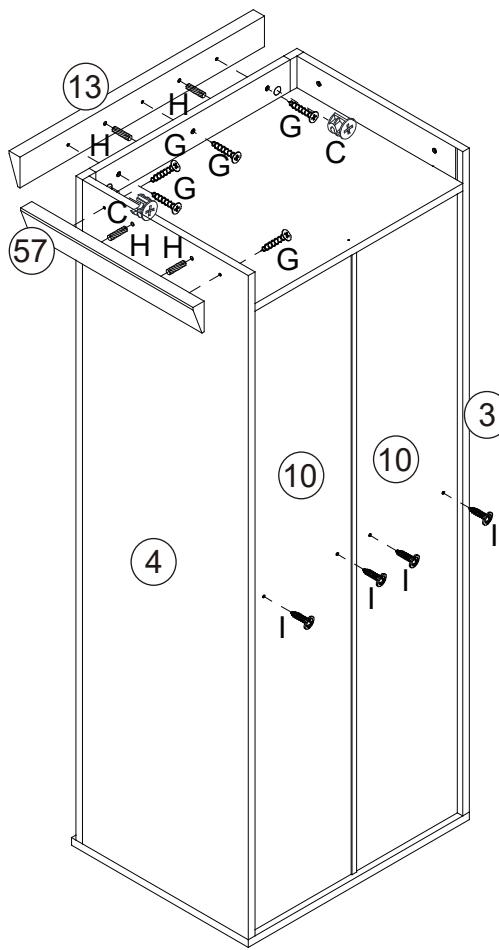


## step1

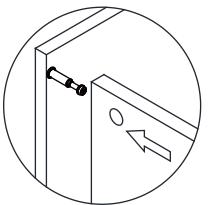

## step2

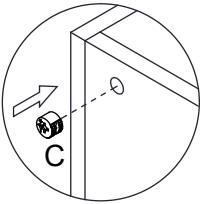


## step3

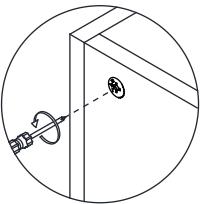

# Assembly Instructions


Step 11

x2

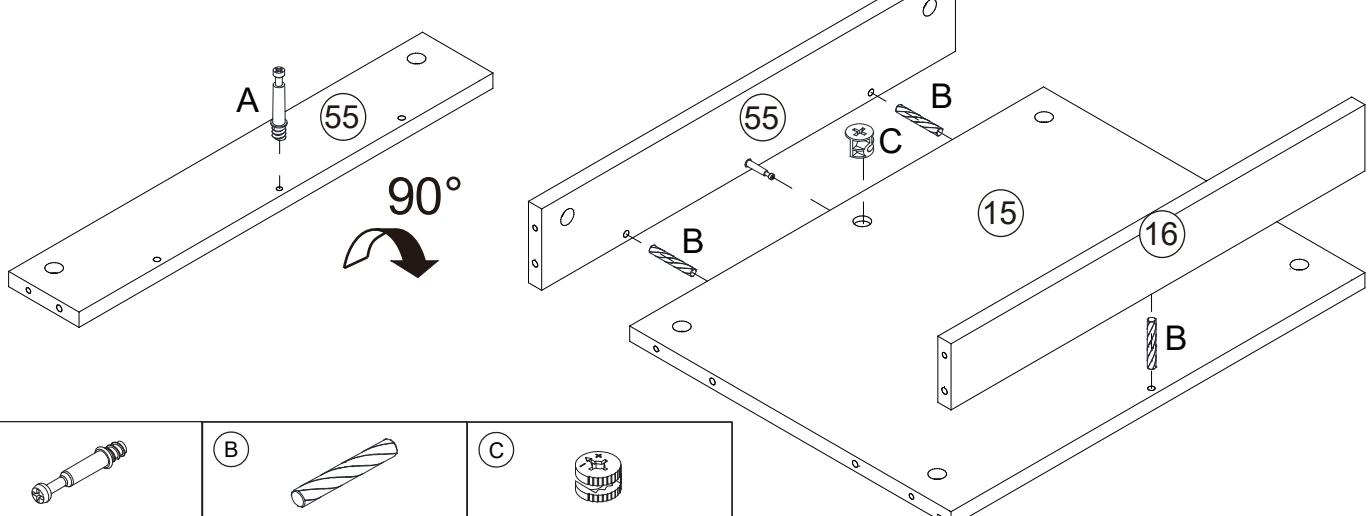


Step 12

x8

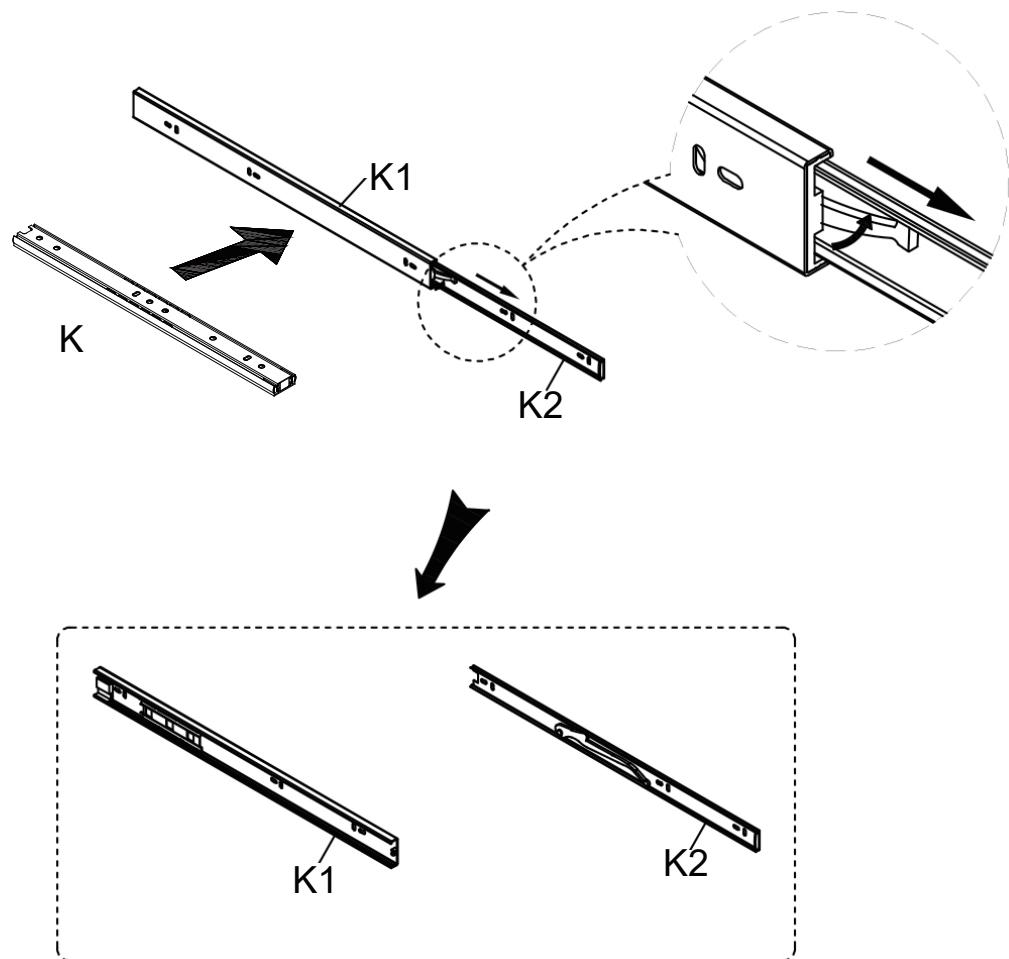


# Assembly Instructions

## Step 13


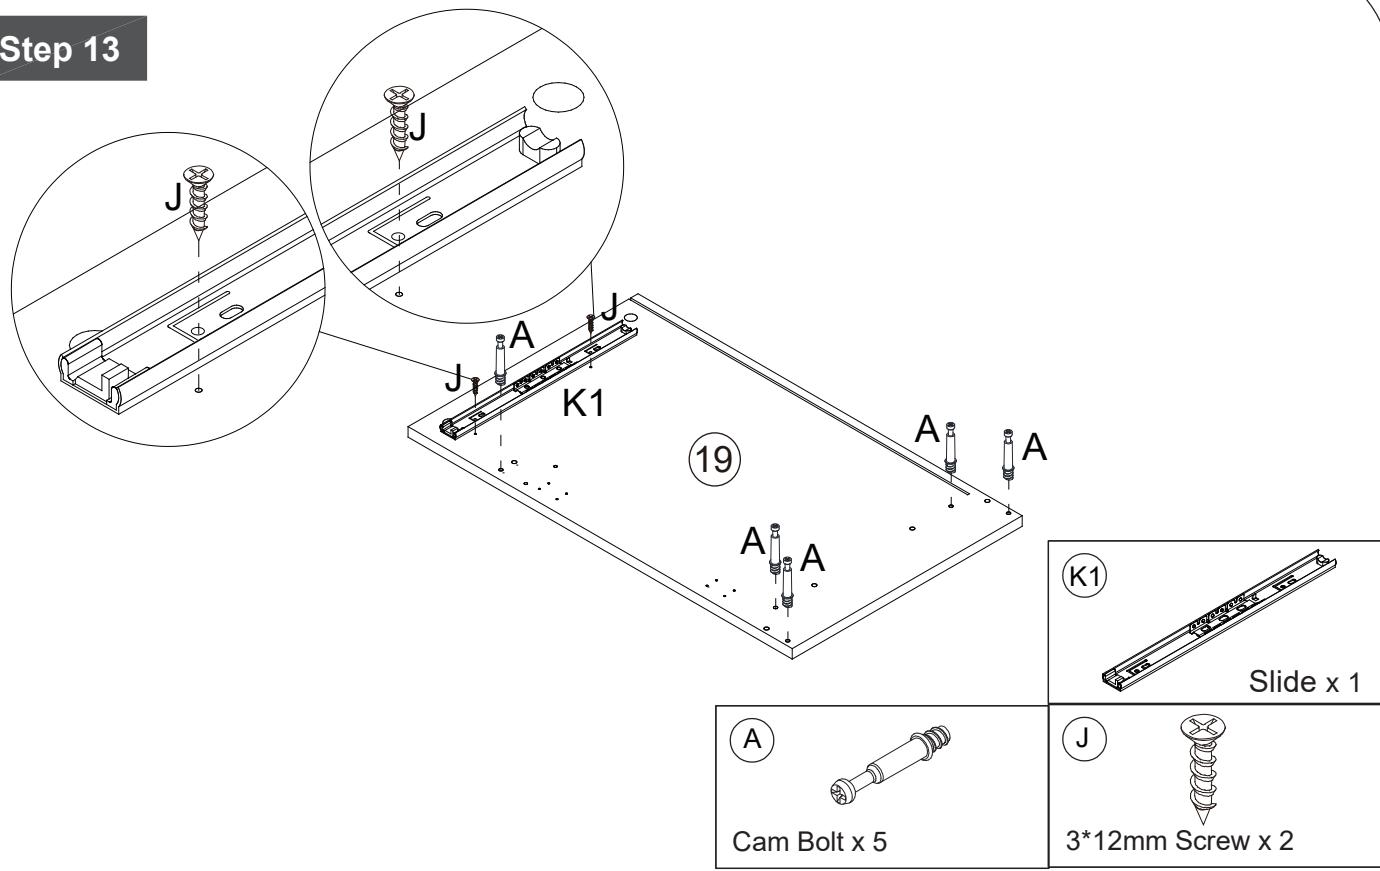


## Step 14

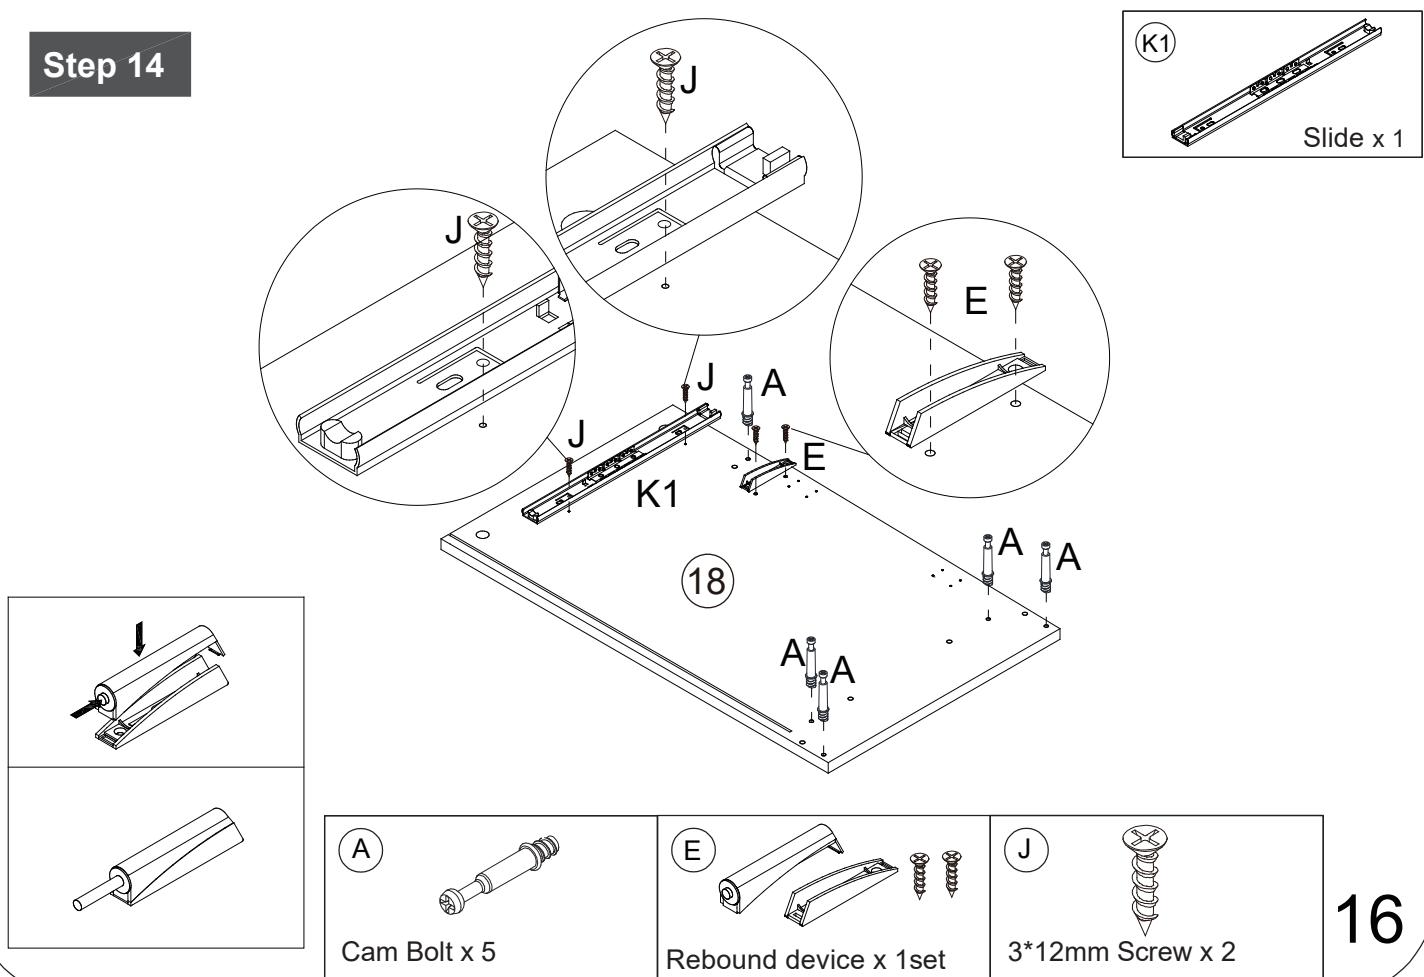

# Assembly Instructions

## Step 15

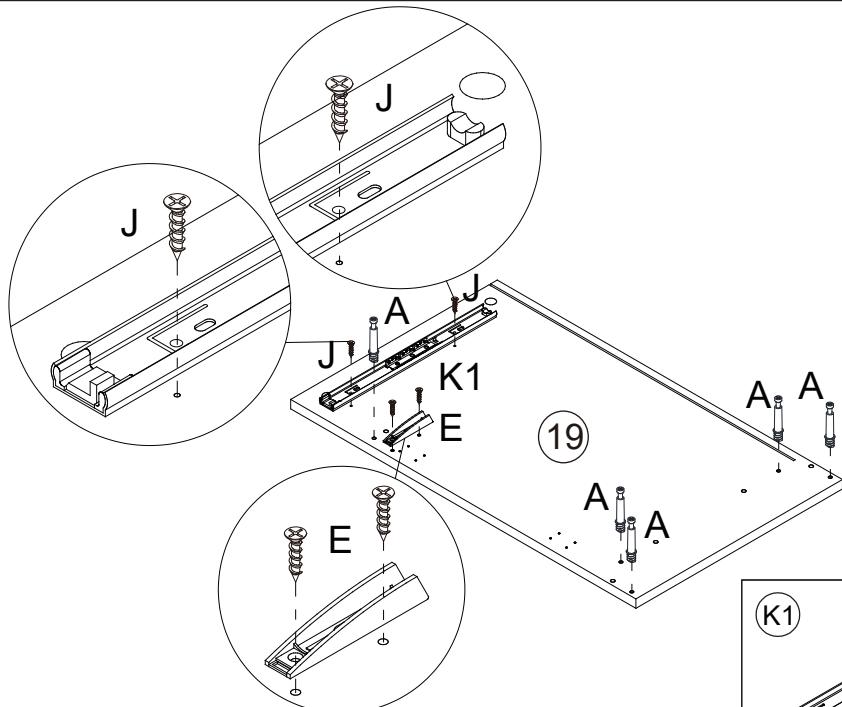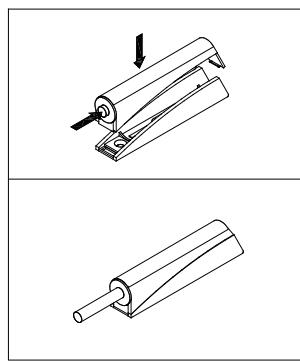


(A) Cam Bolt x 5

(E) Rebound device x 1set

(J) 3\*12mm Screw x 2

## Step 16

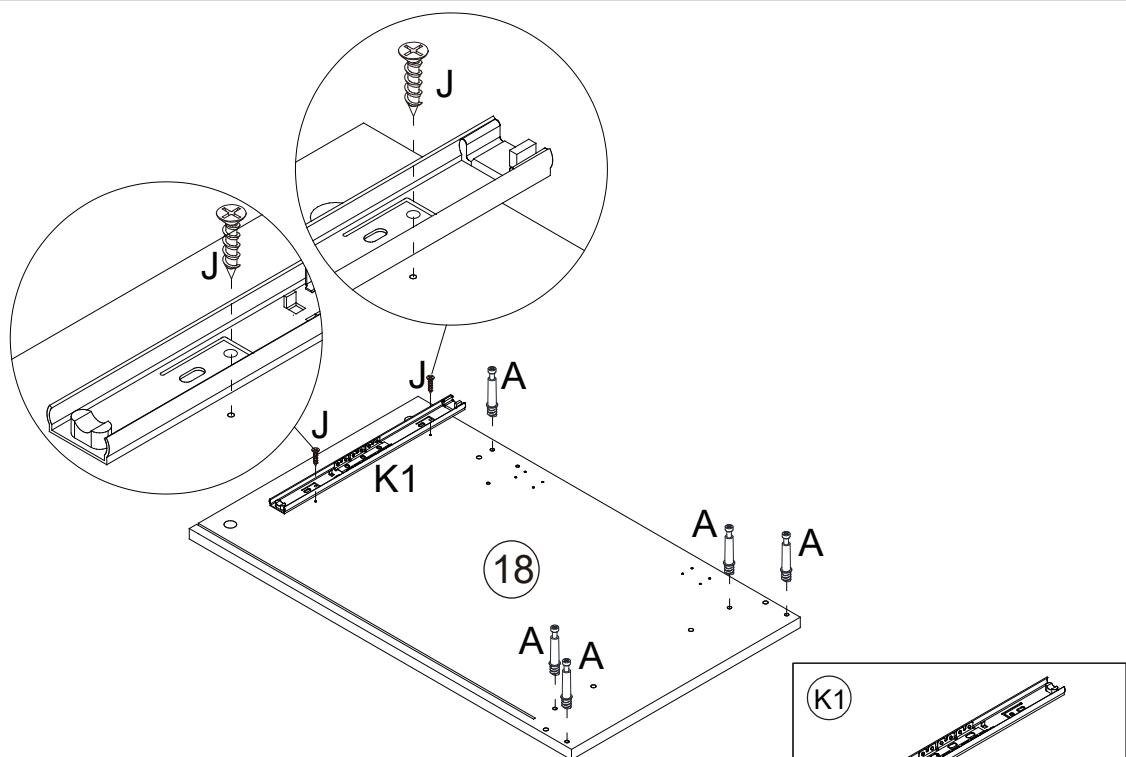


(A) Cam Bolt x 5


(J) 3\*12mm Screw x 2

# Assembly Instructions

## Step 17

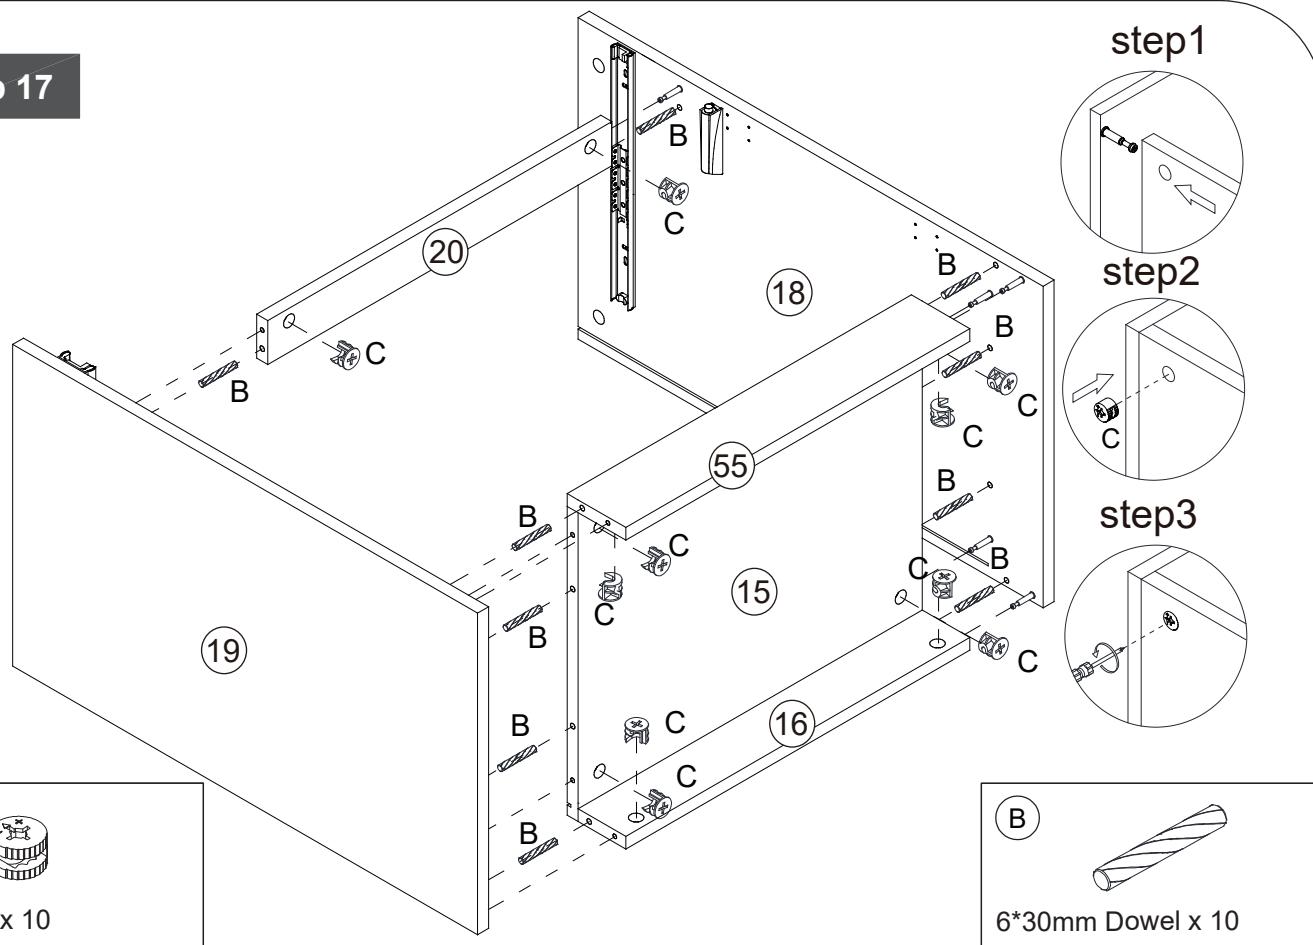


## Step 18

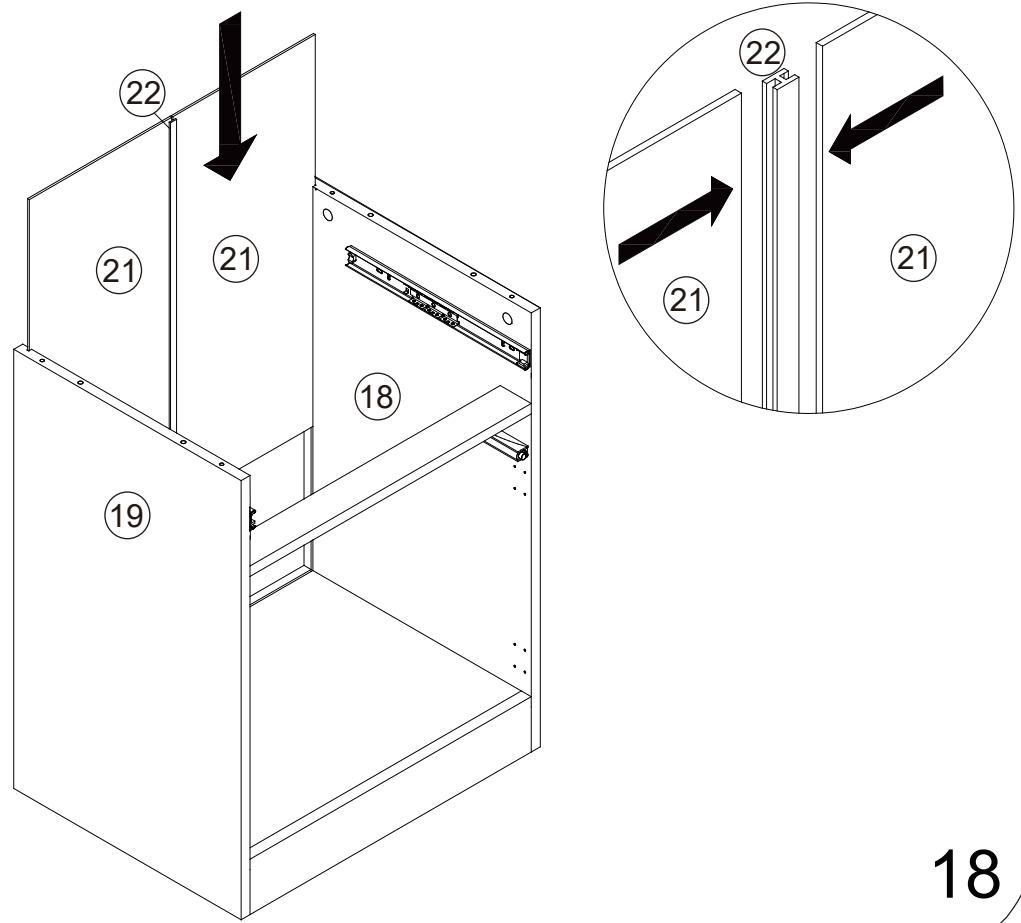


# Assembly Instructions


Step 19

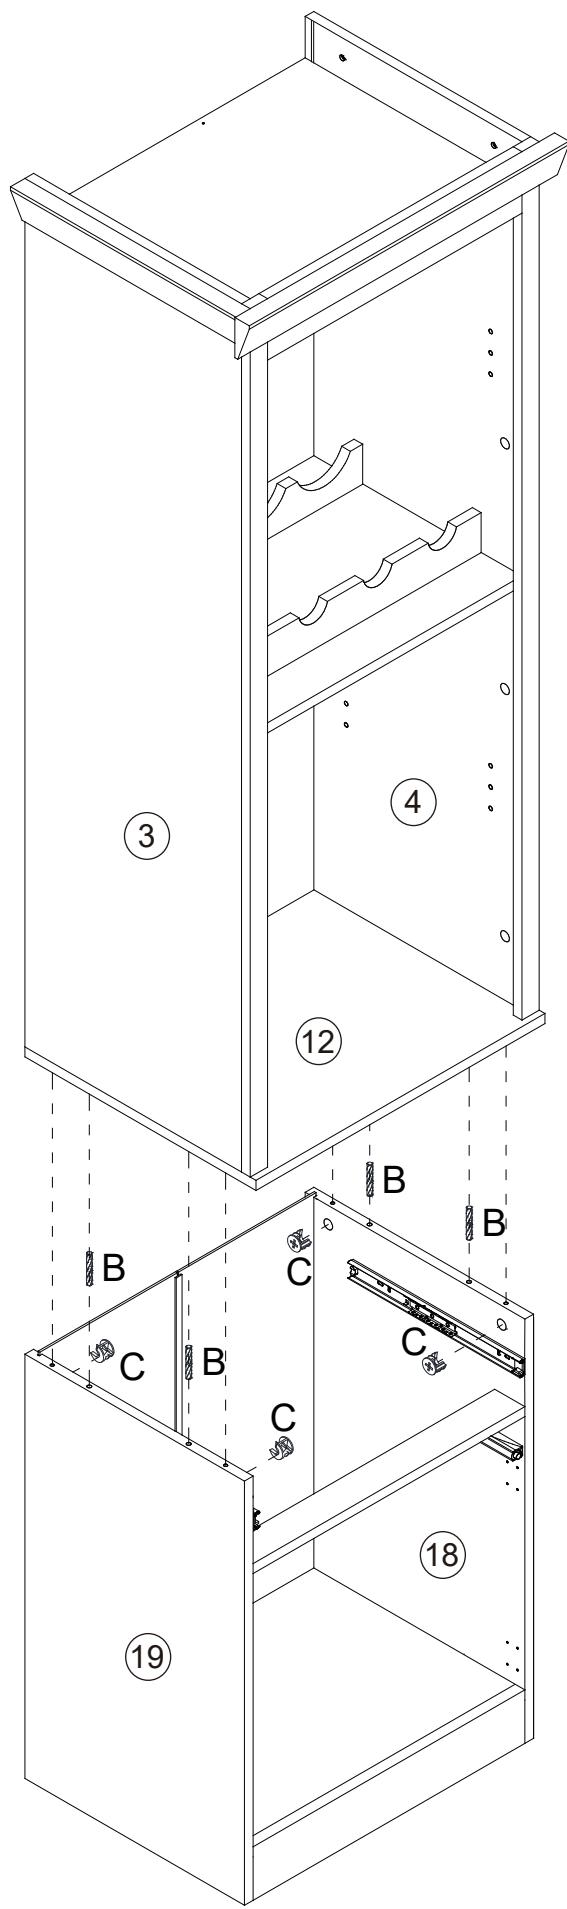


step1

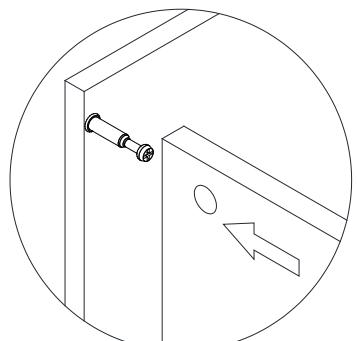

step2

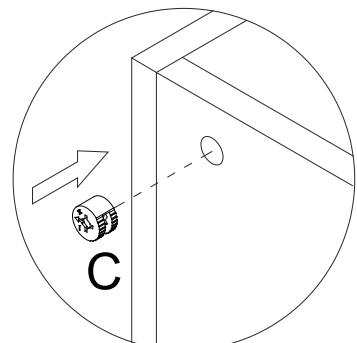

step3

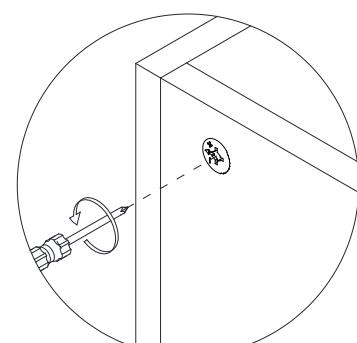


(C)	
	Cam lock x 4
(B)	
	6*30mm Dowel x 4


19

# Assembly Instructions

## Step 20


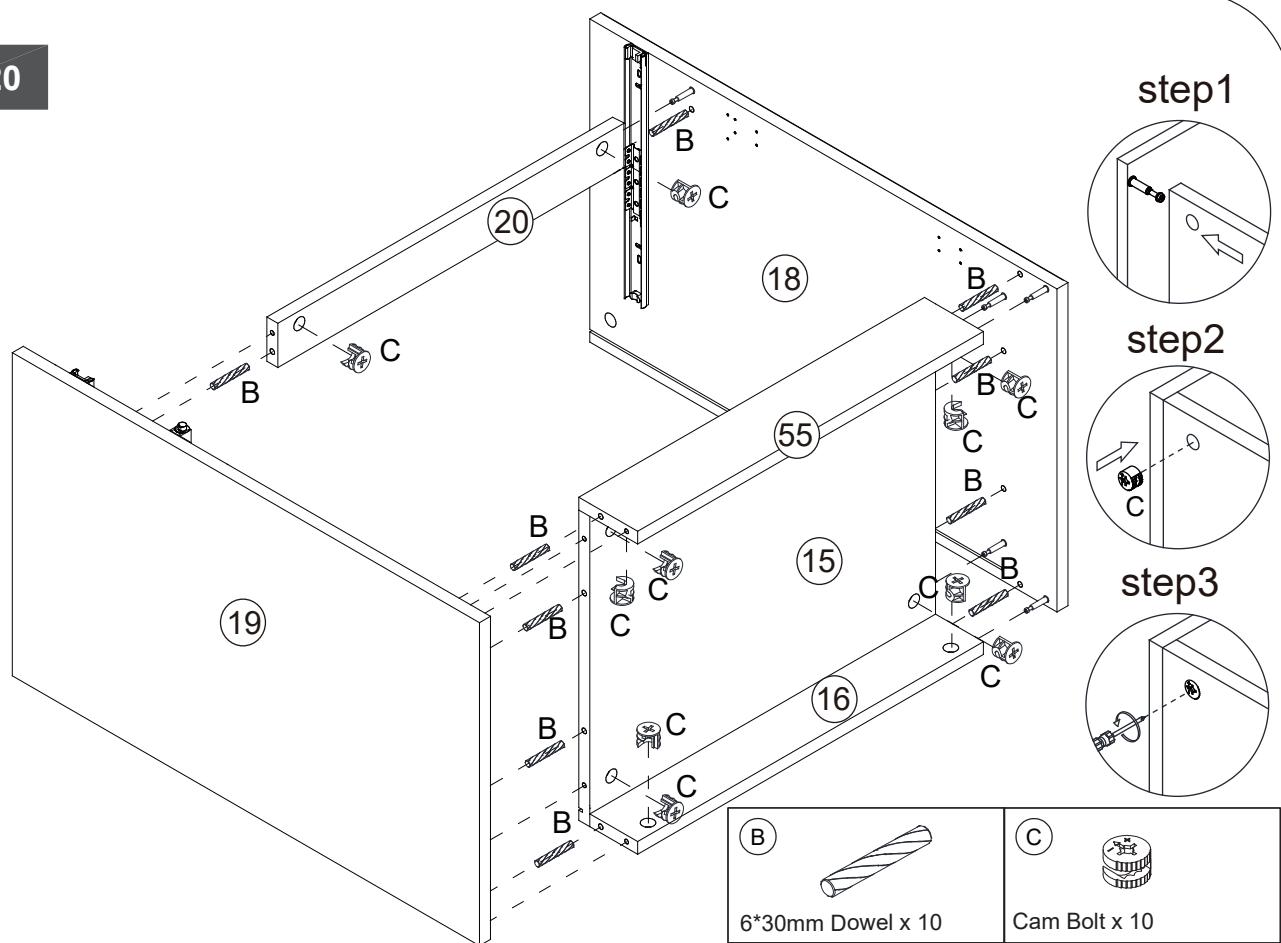


## Step 21

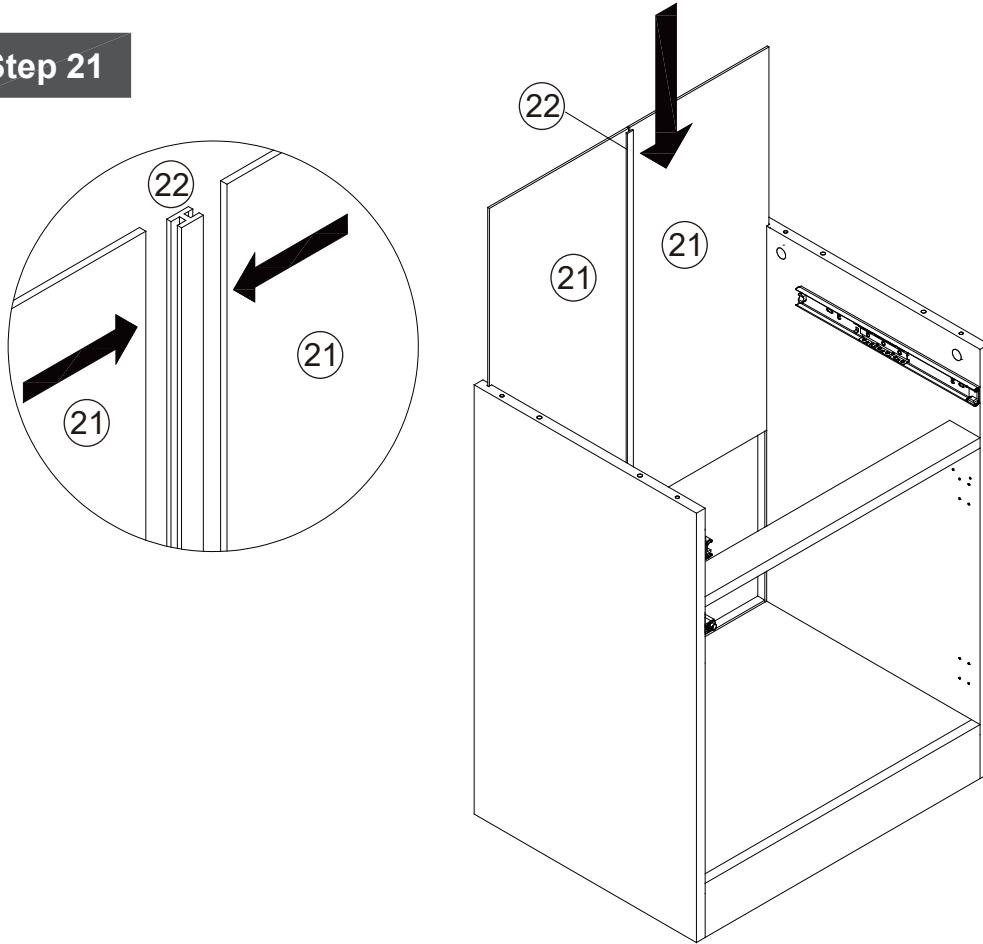


# Assembly Instructions


Step 22

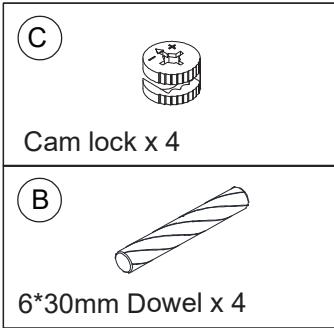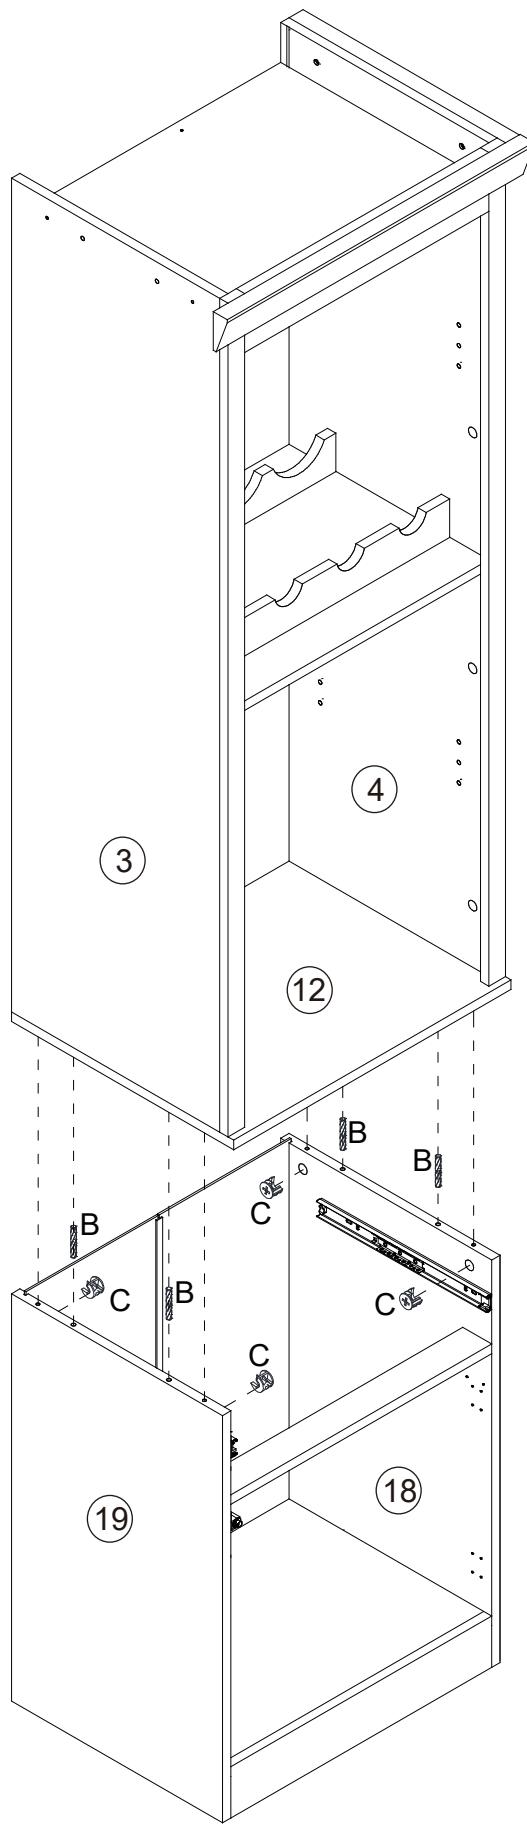


step1

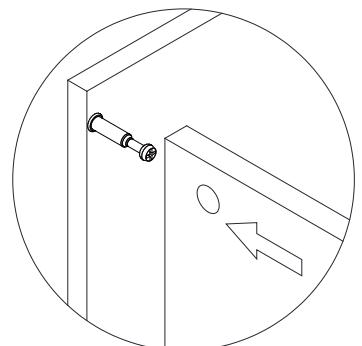

step2

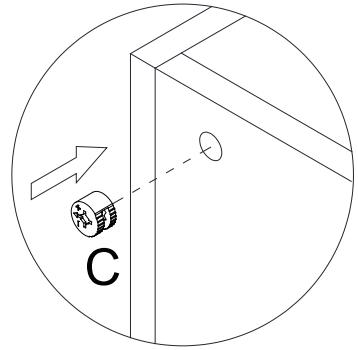

step3


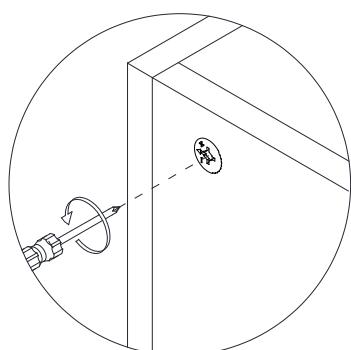


# Assembly Instructions

Step 23

x2

x2

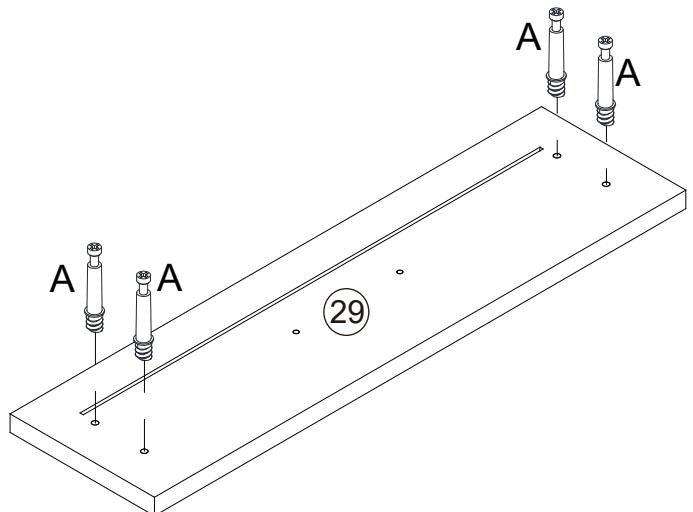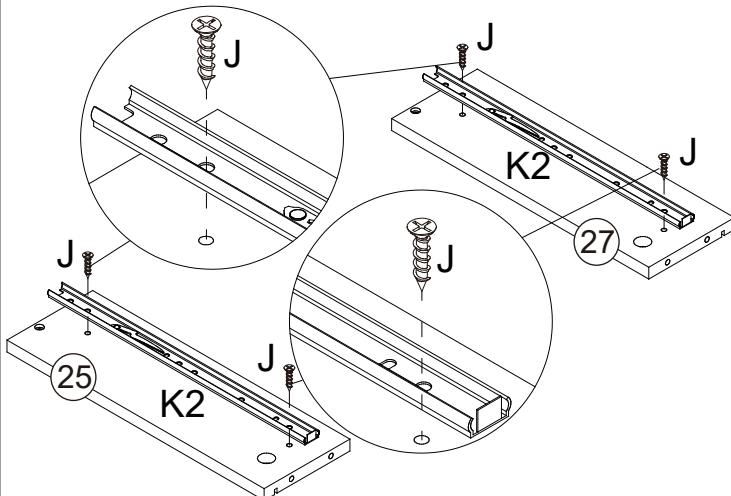

Cam Bolt x 8



3\*12mm Screw x 8





Slide x 4

Step 24

x2

x2



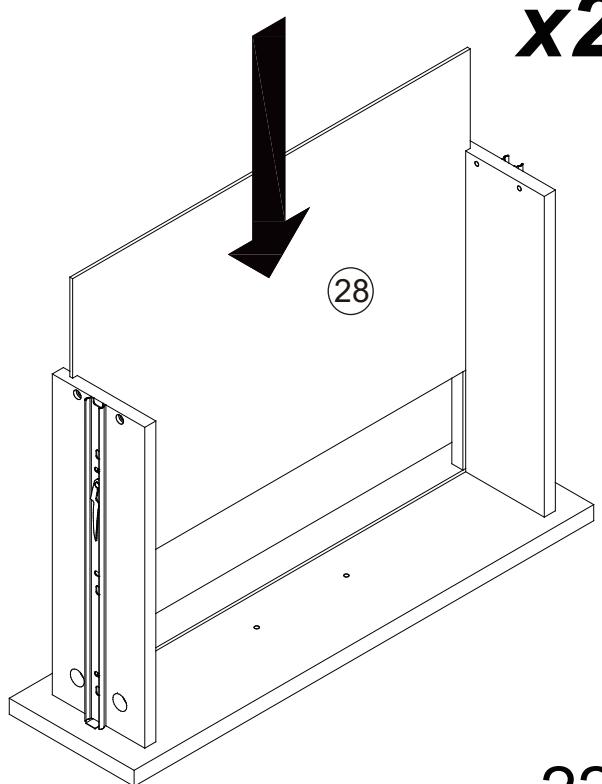
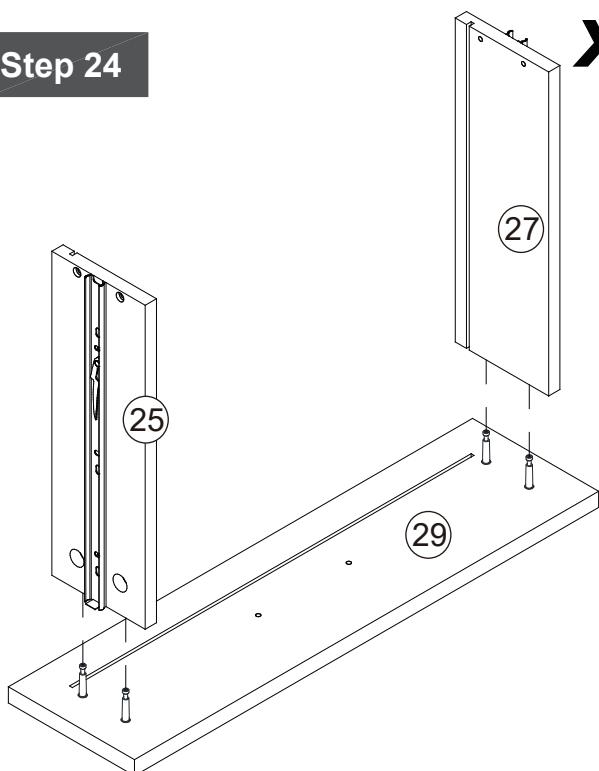


22

# Assembly Instructions



## Step 25

**x2**

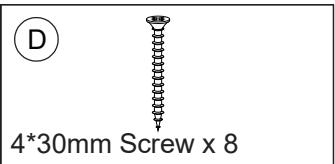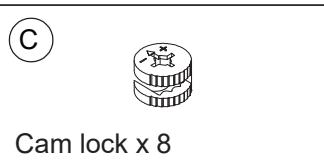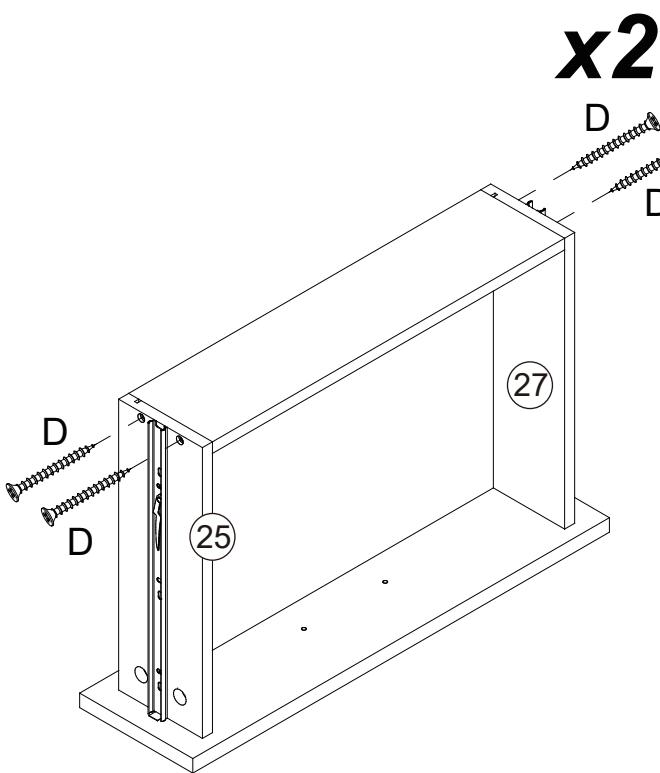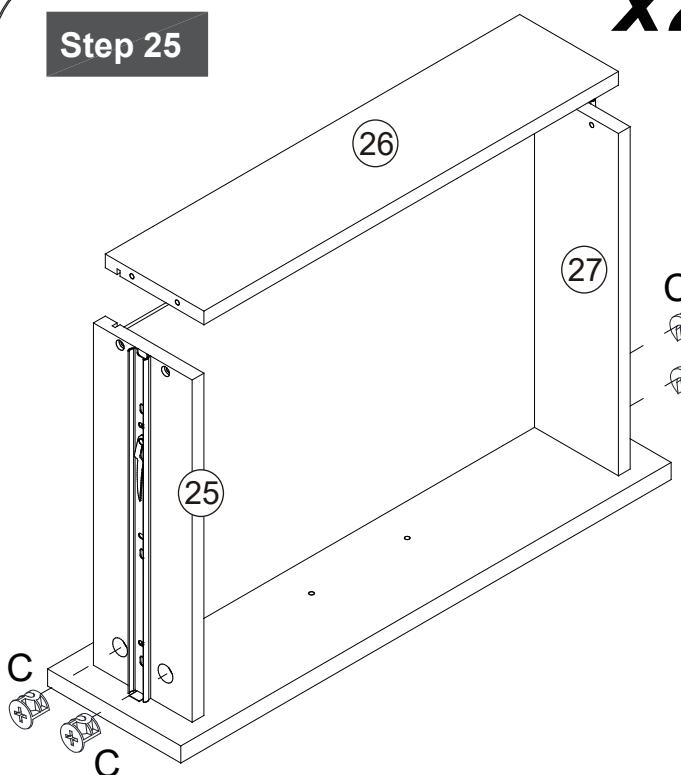


## Step 26

**x2**

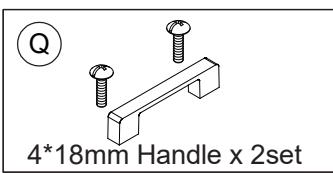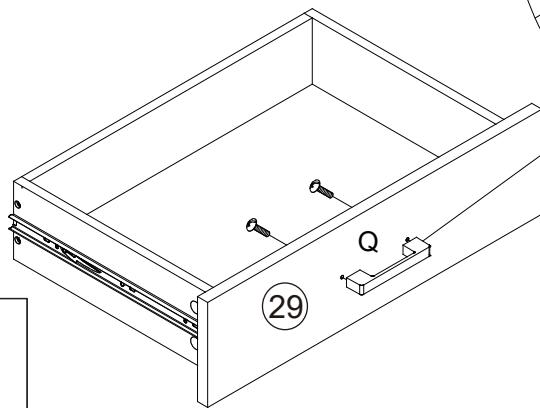


# Assembly Instructions

## Step 27

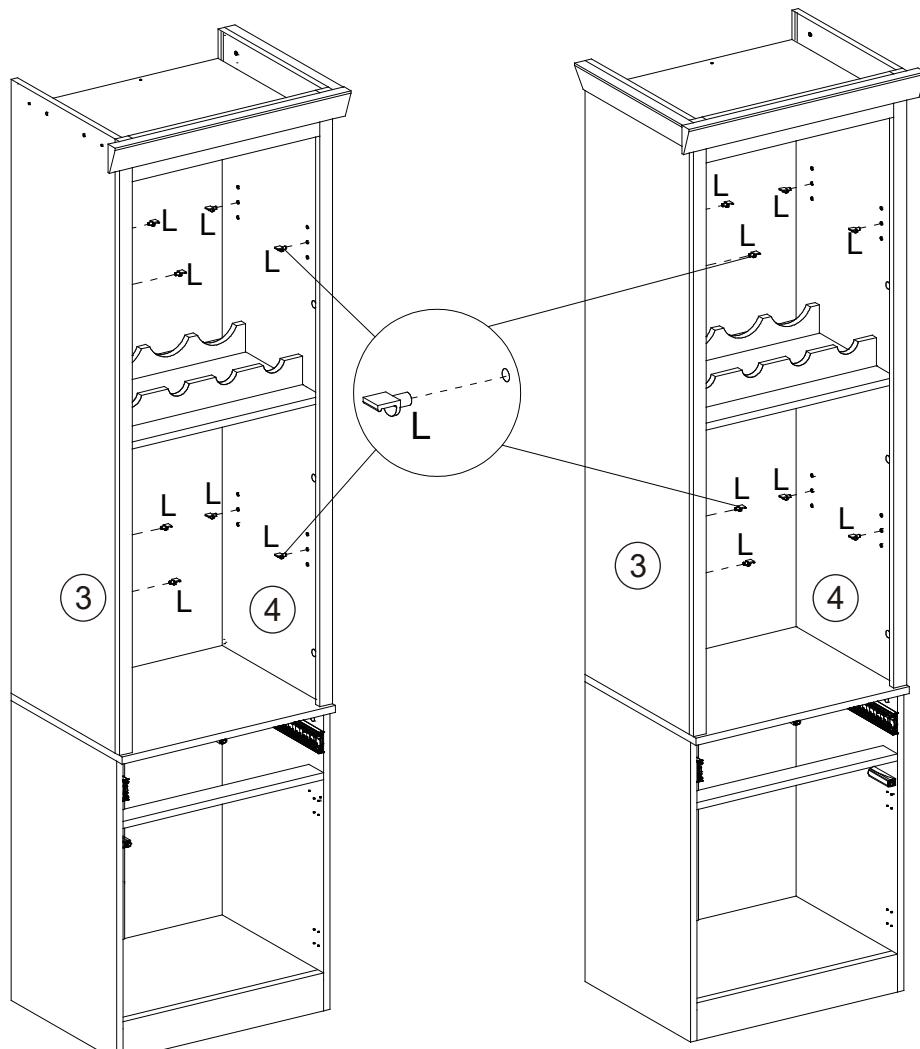


## Step 28

**x2**

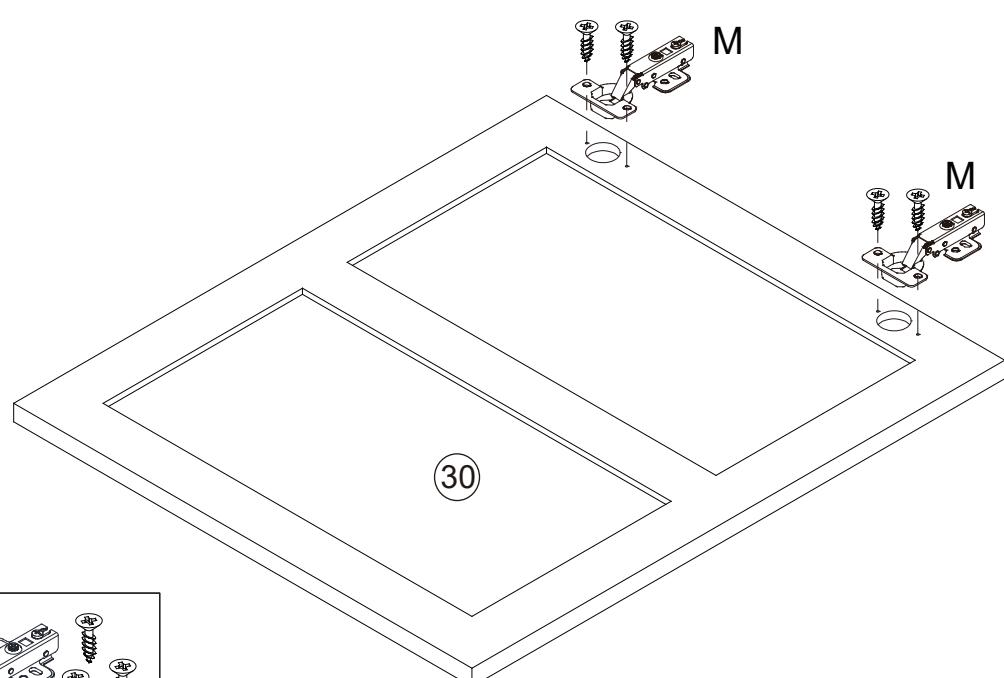


# Assembly Instructions

## Step 29

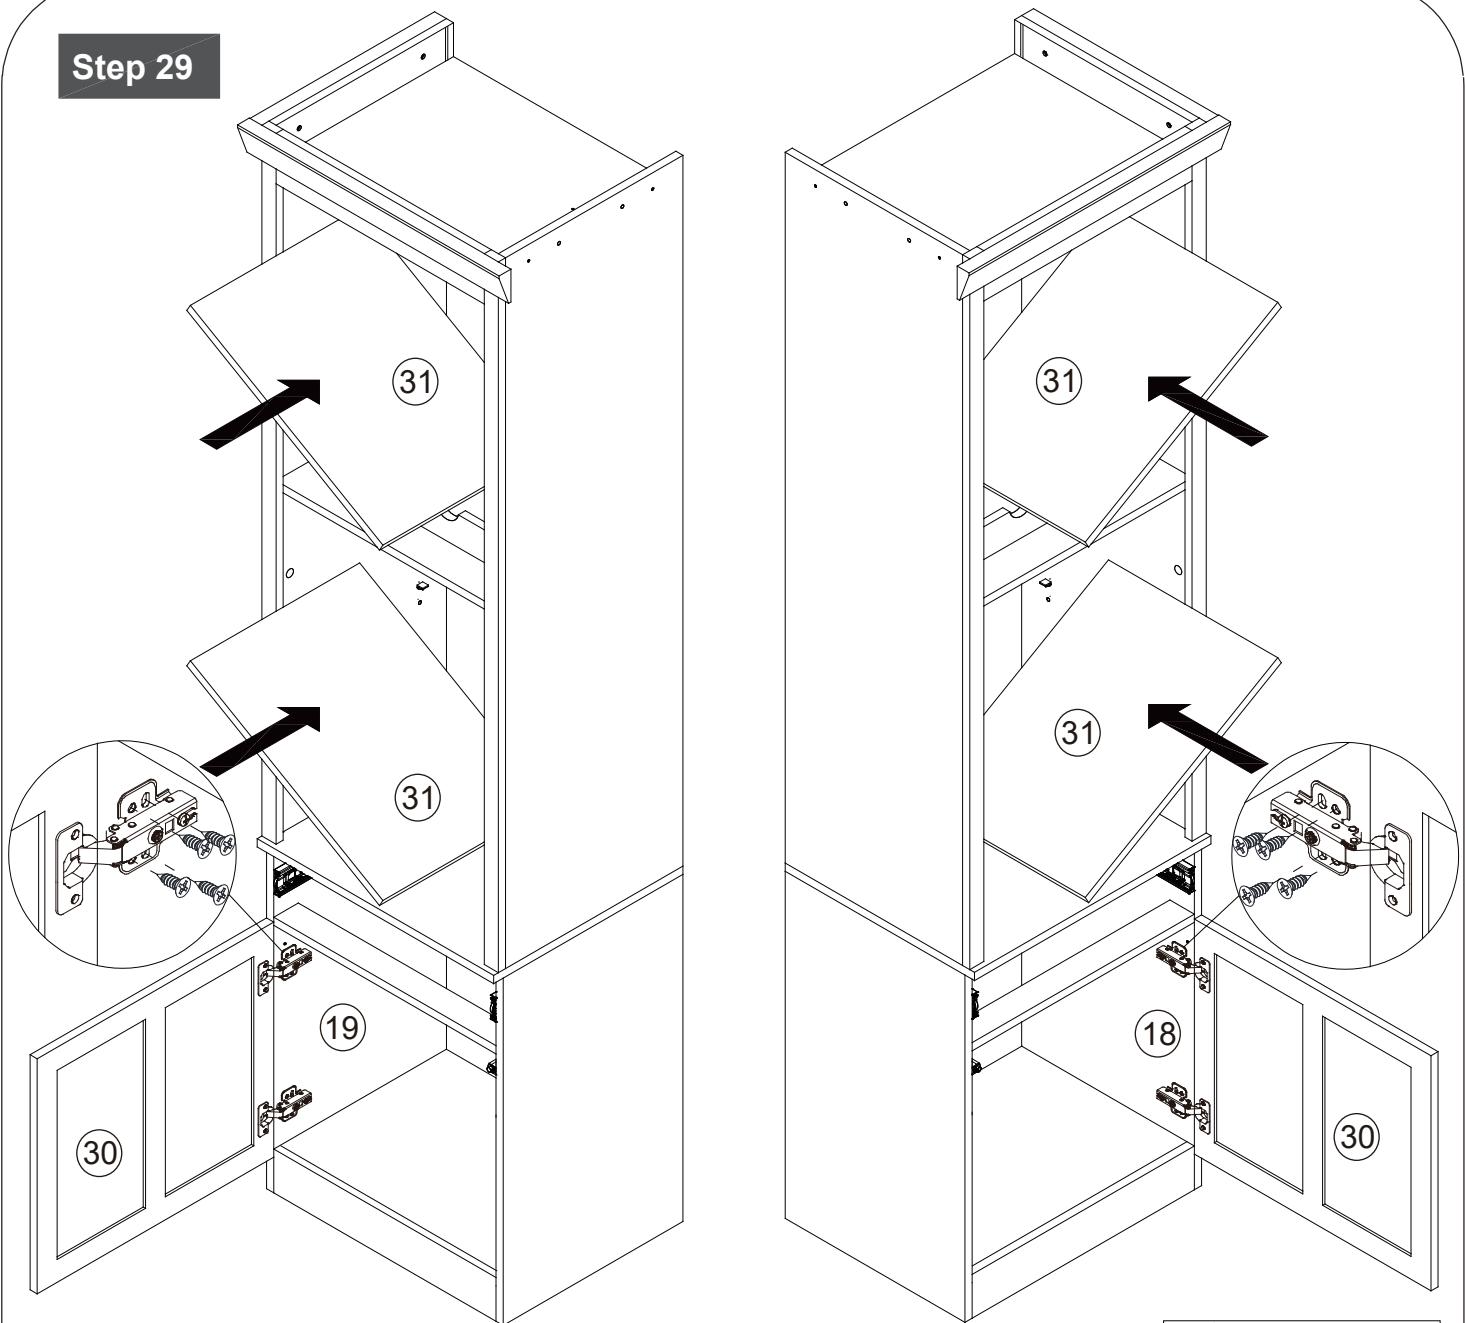

If the door can't close, please adjust the hinges as below.

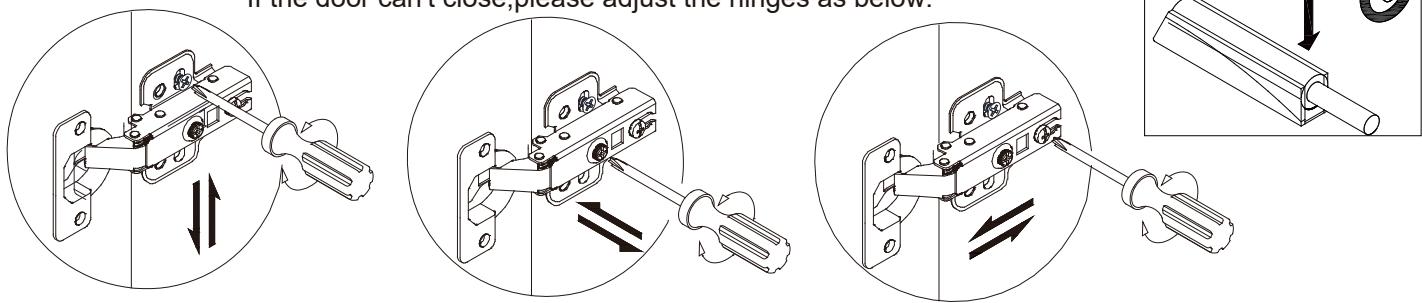


This is used to adjust the door panel in the up and down direction.

This is used to adjust the door panel in the left and right direction.

This is used to adjust the door panel in the front and rear.


# Assembly Instructions

Step 30

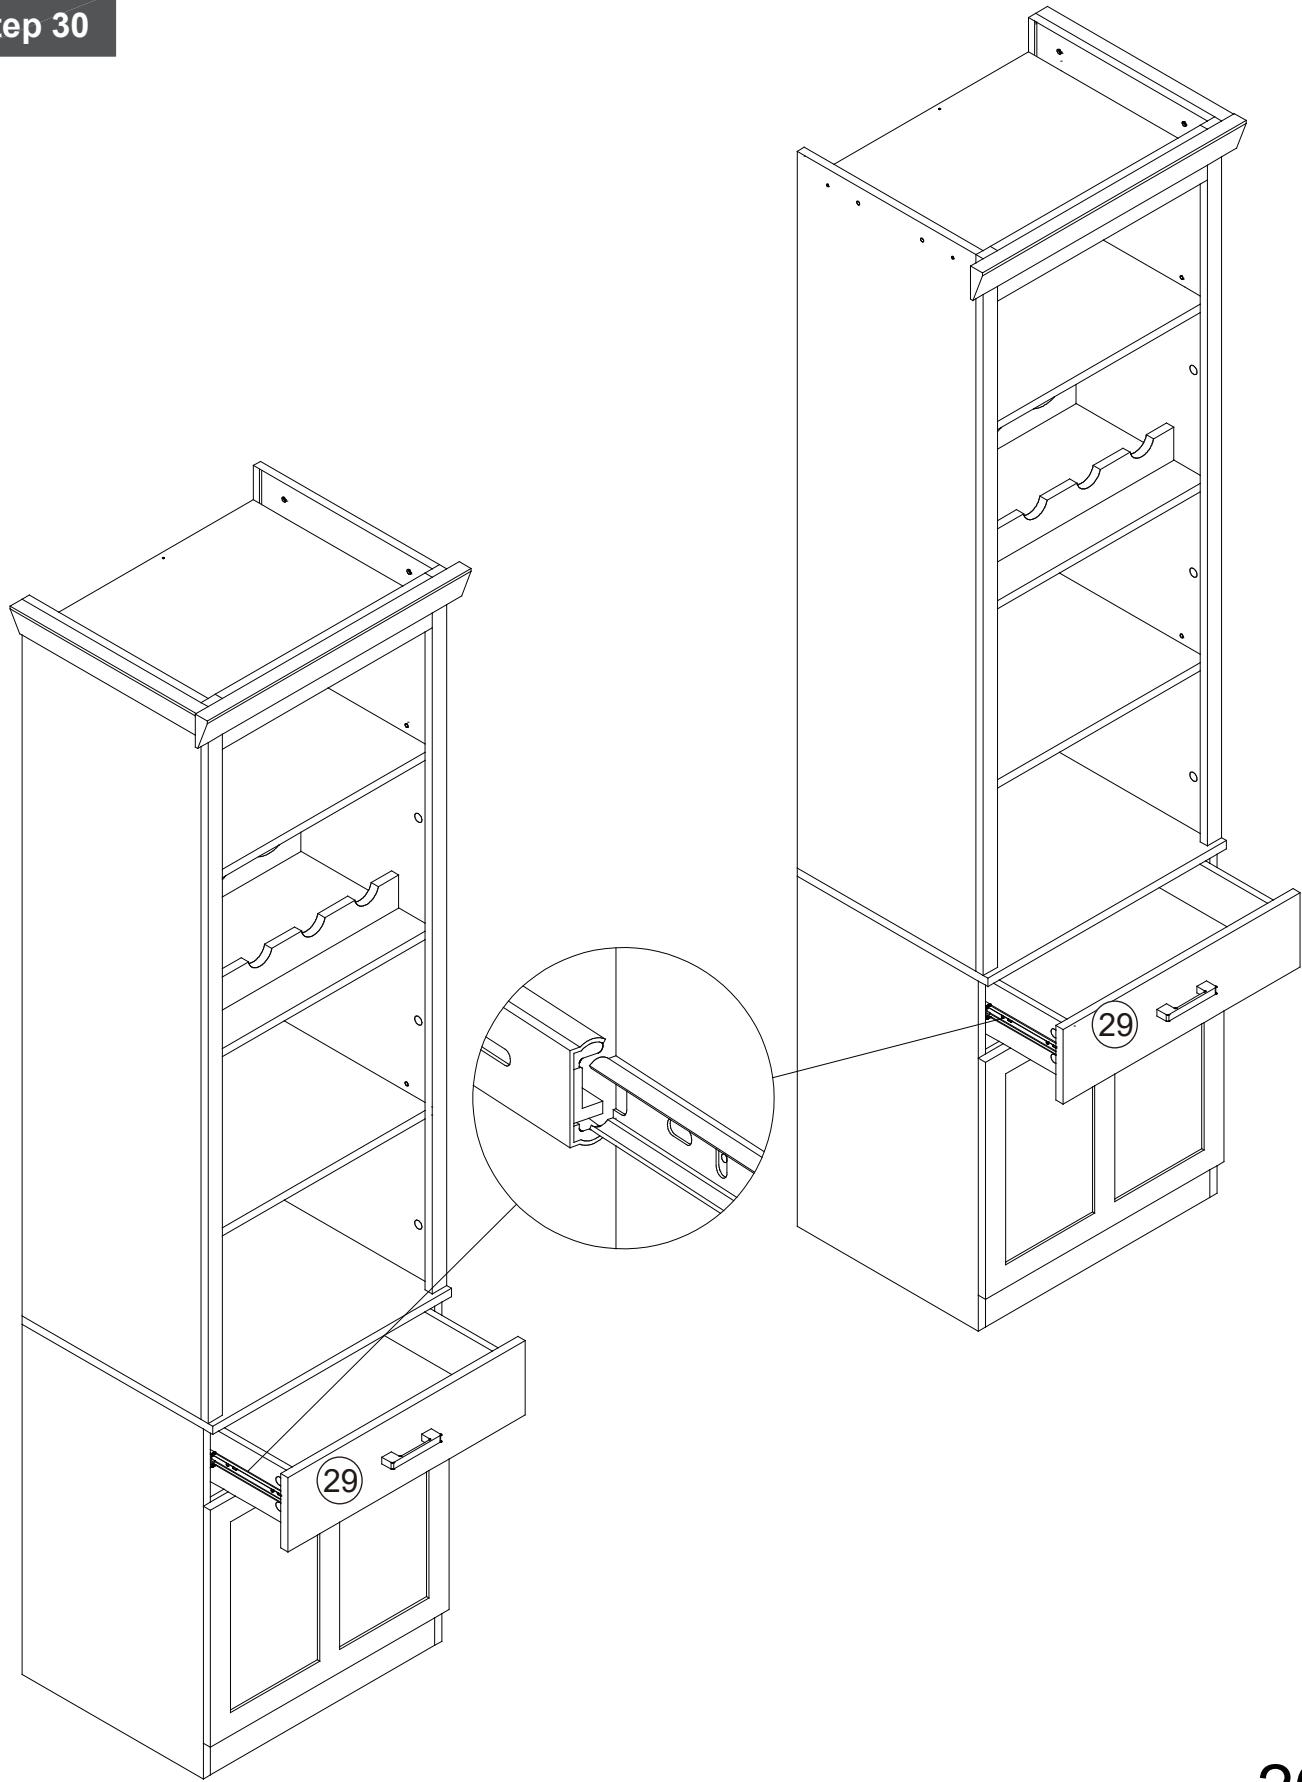


# Assembly Instructions

## Step 31


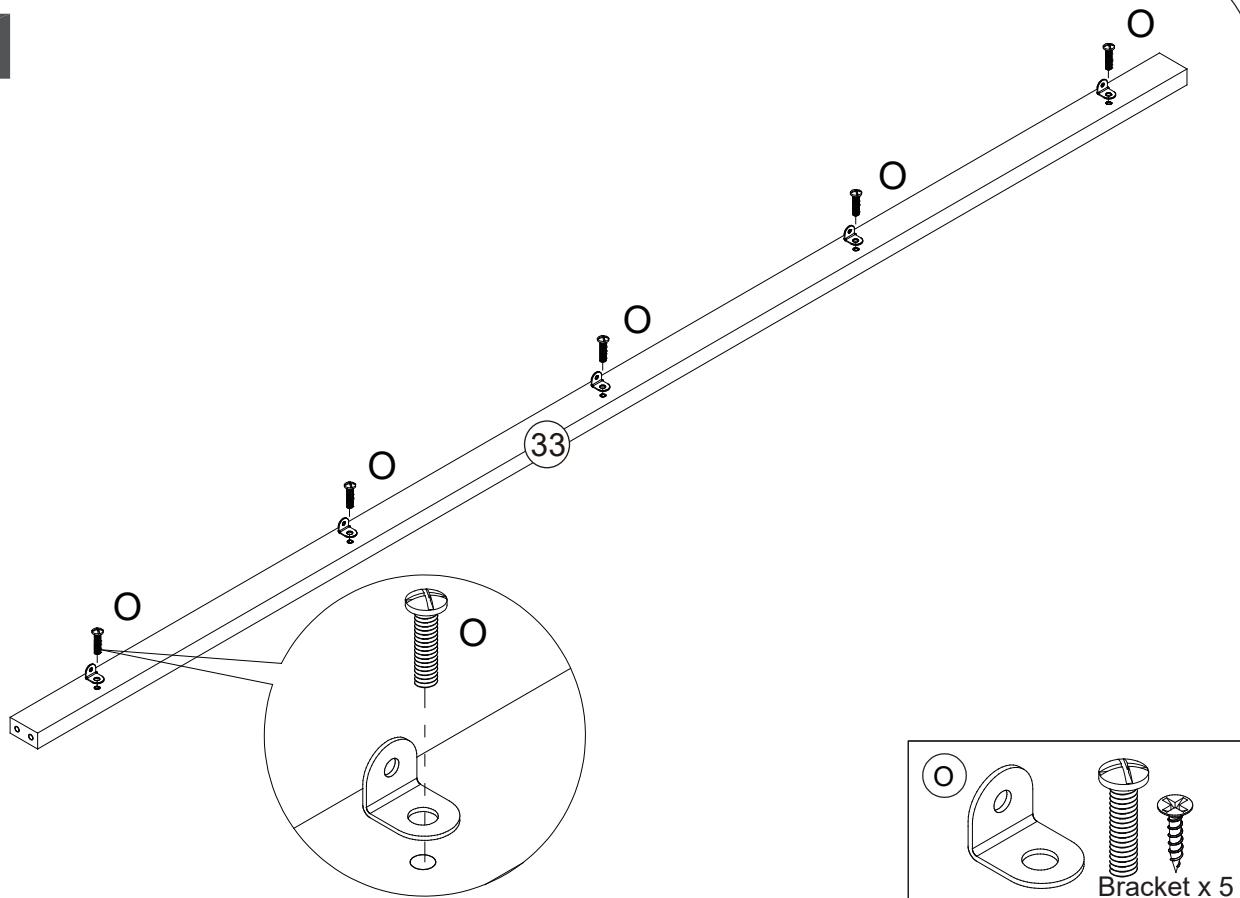


## Step 32



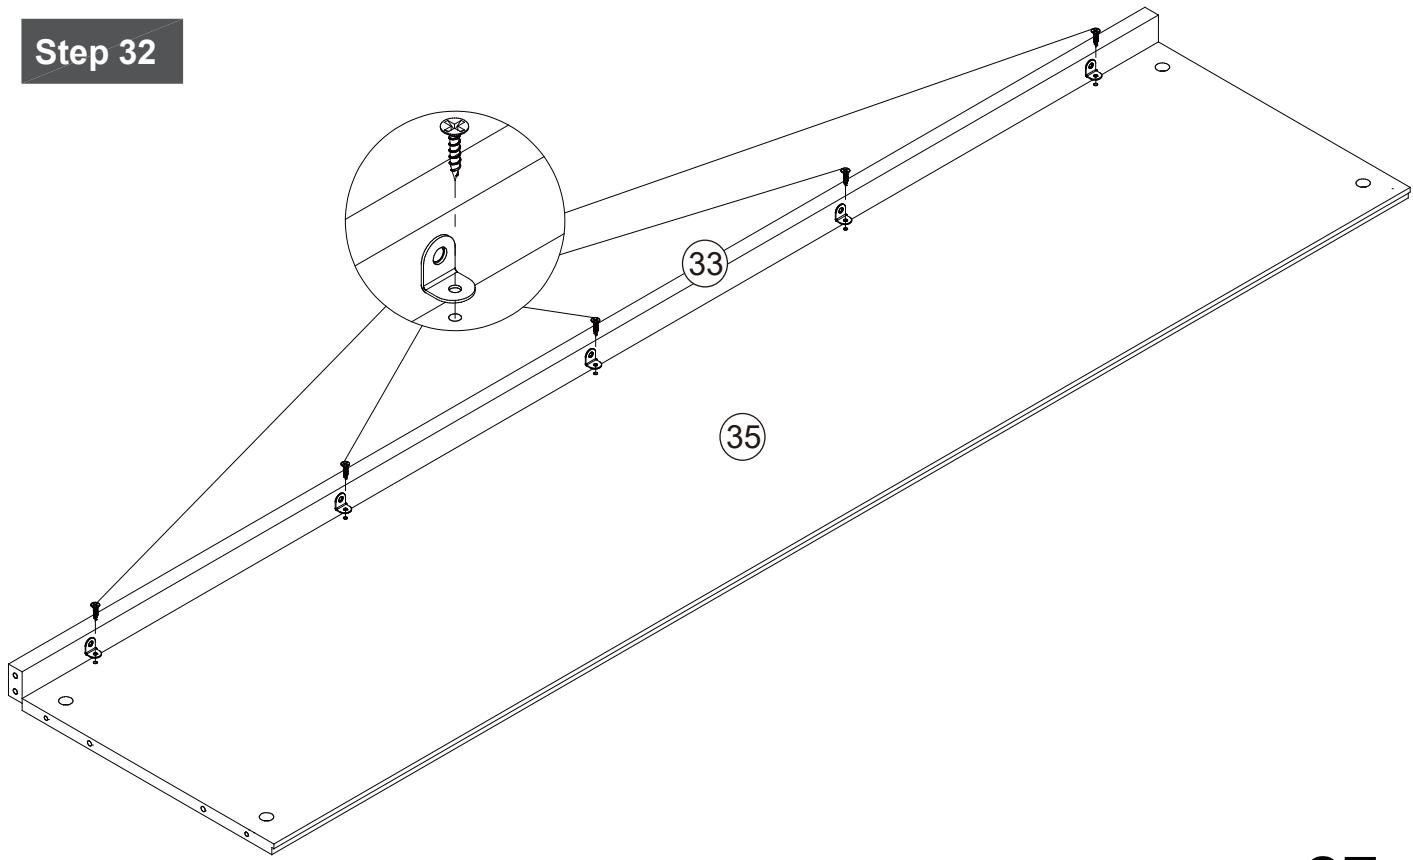


# Assembly Instructions

## Step 33

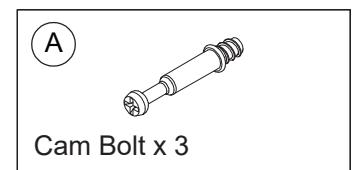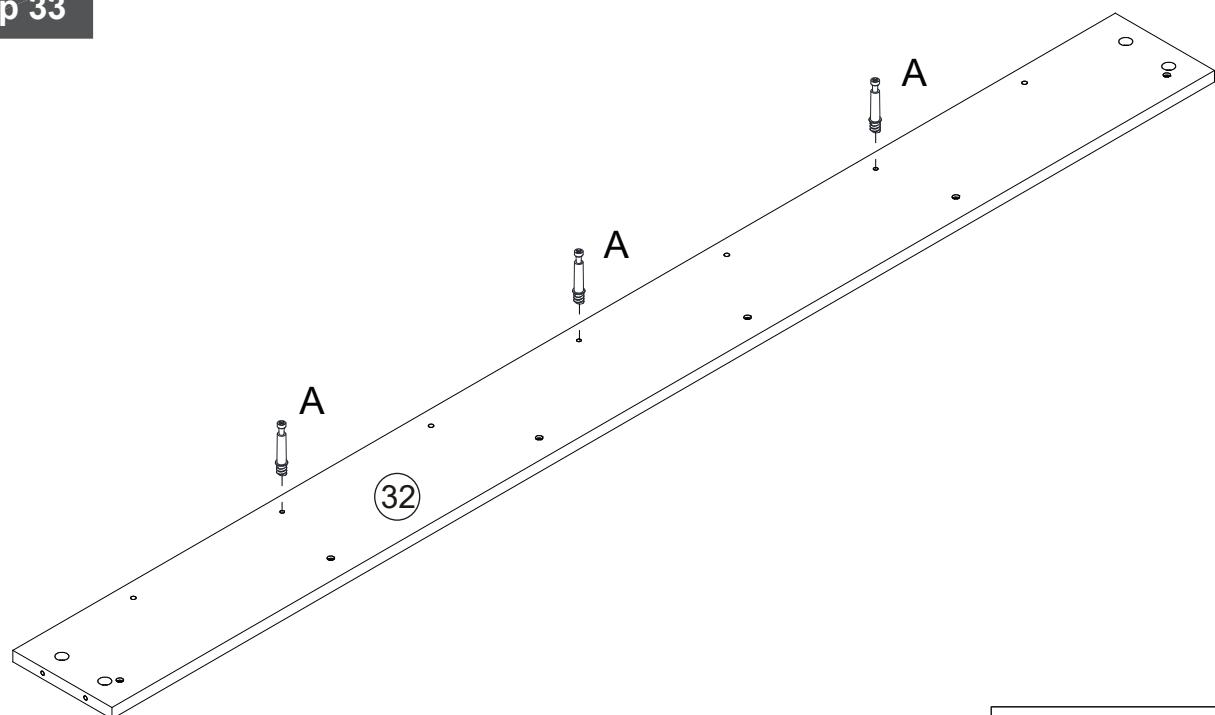


## Step 34

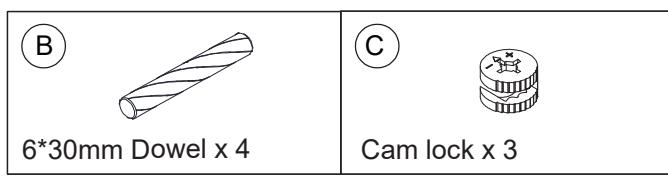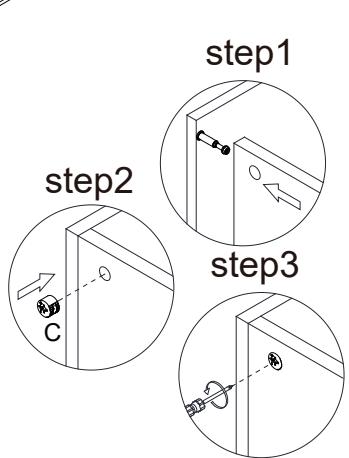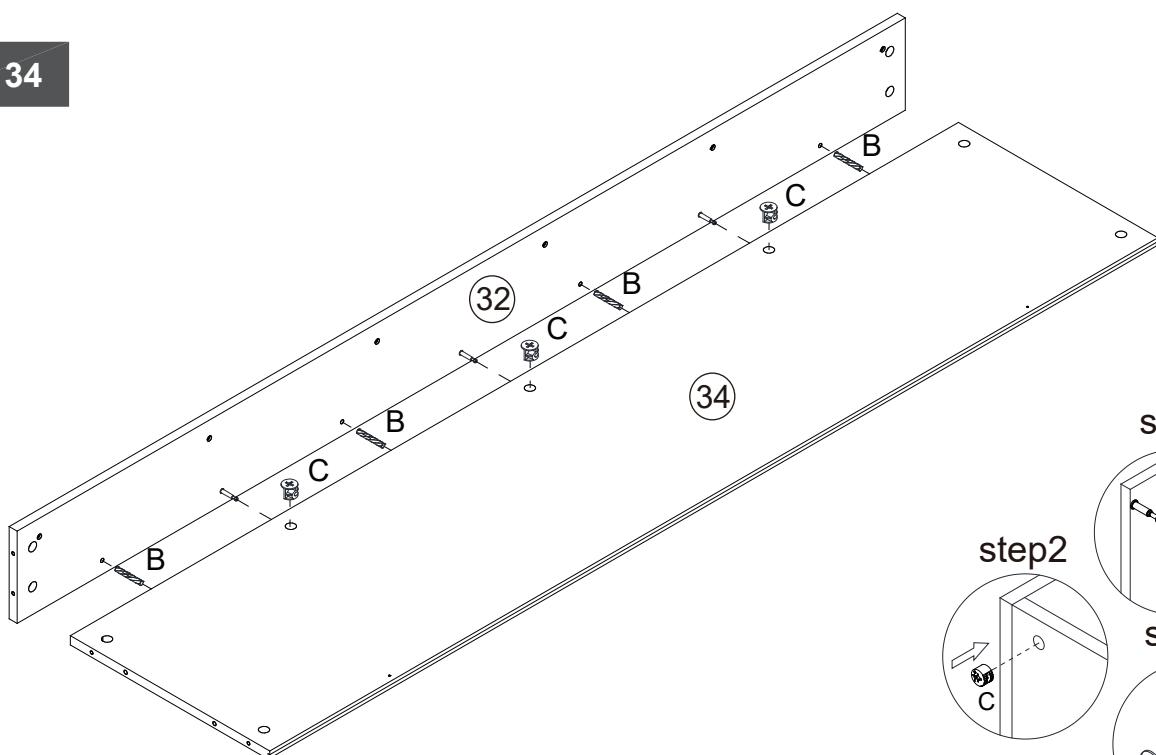


# Assembly Instructions

## Step 35

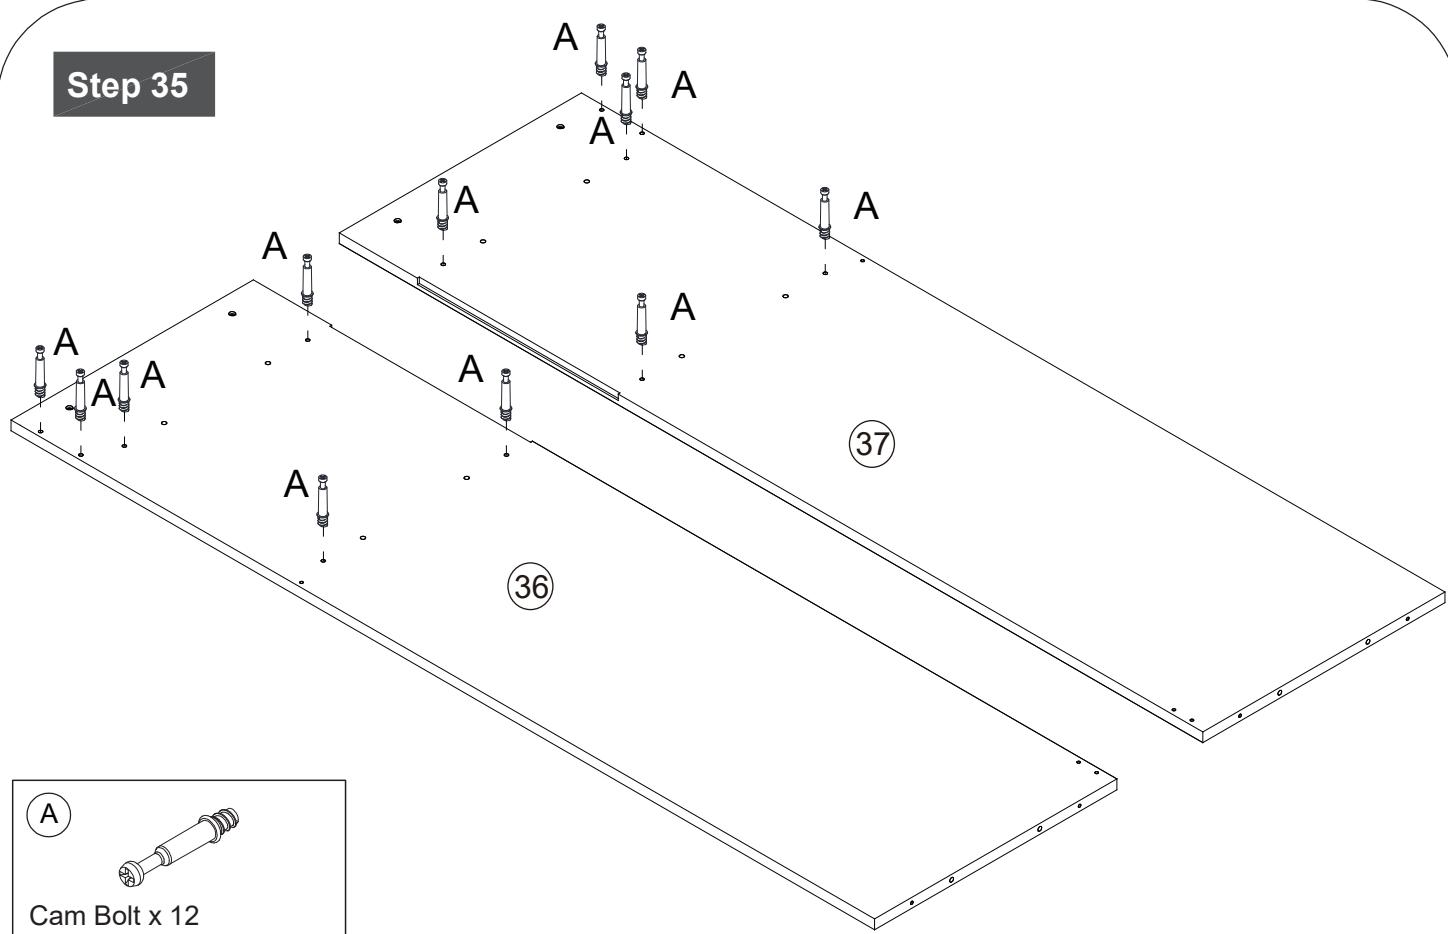


## Step 36

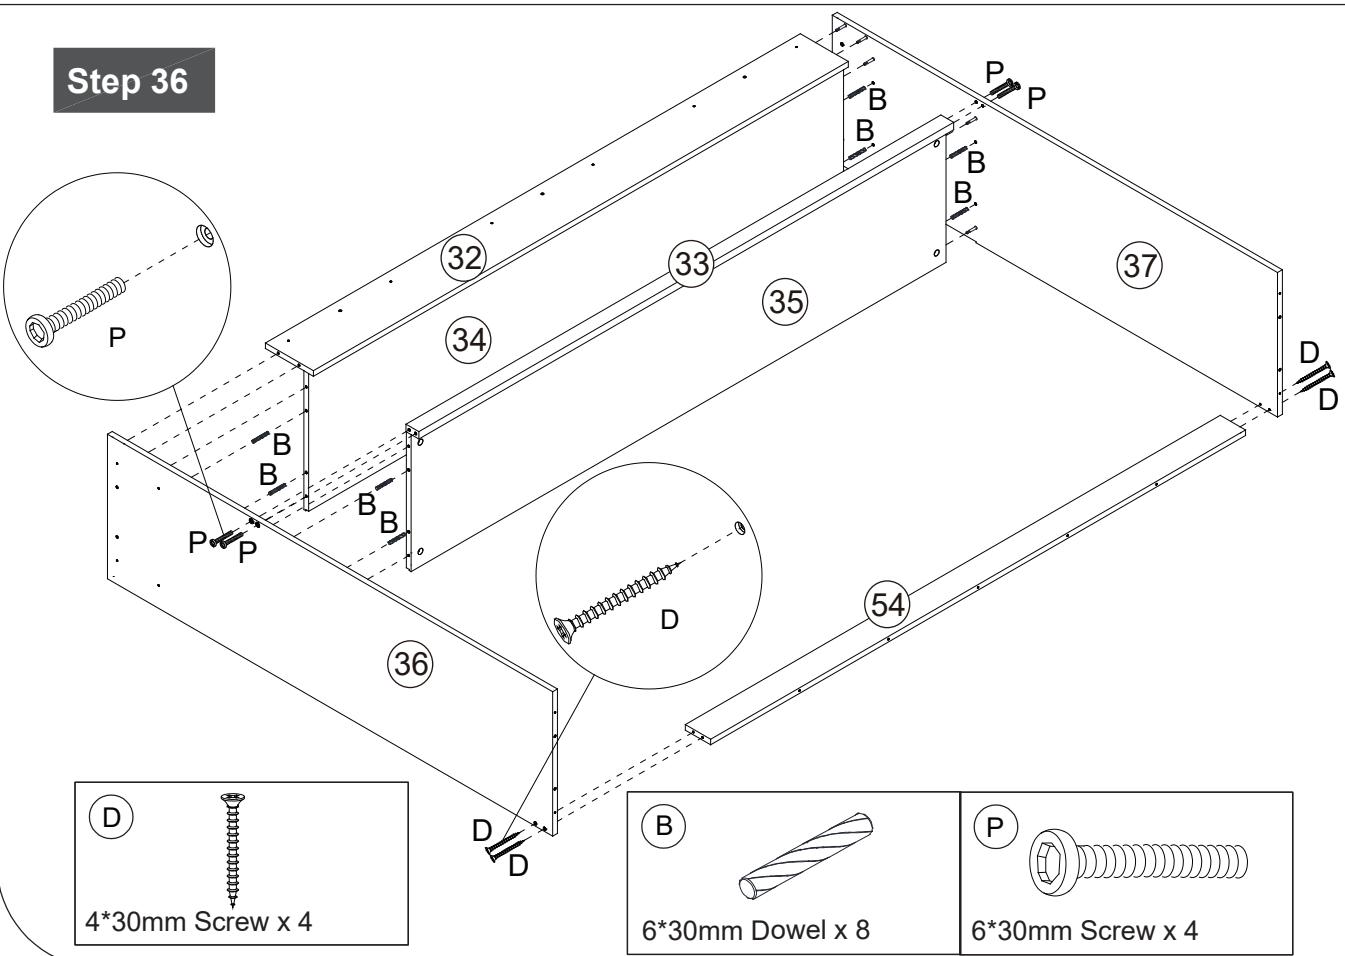


# Assembly Instructions

Step 37




step1

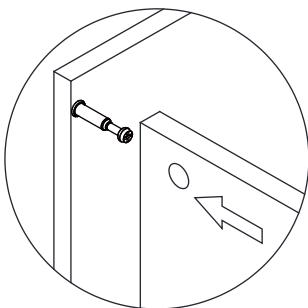

step2

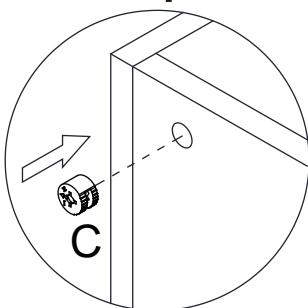

step3

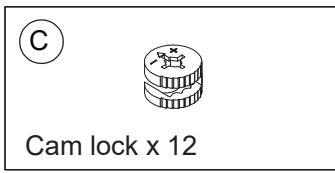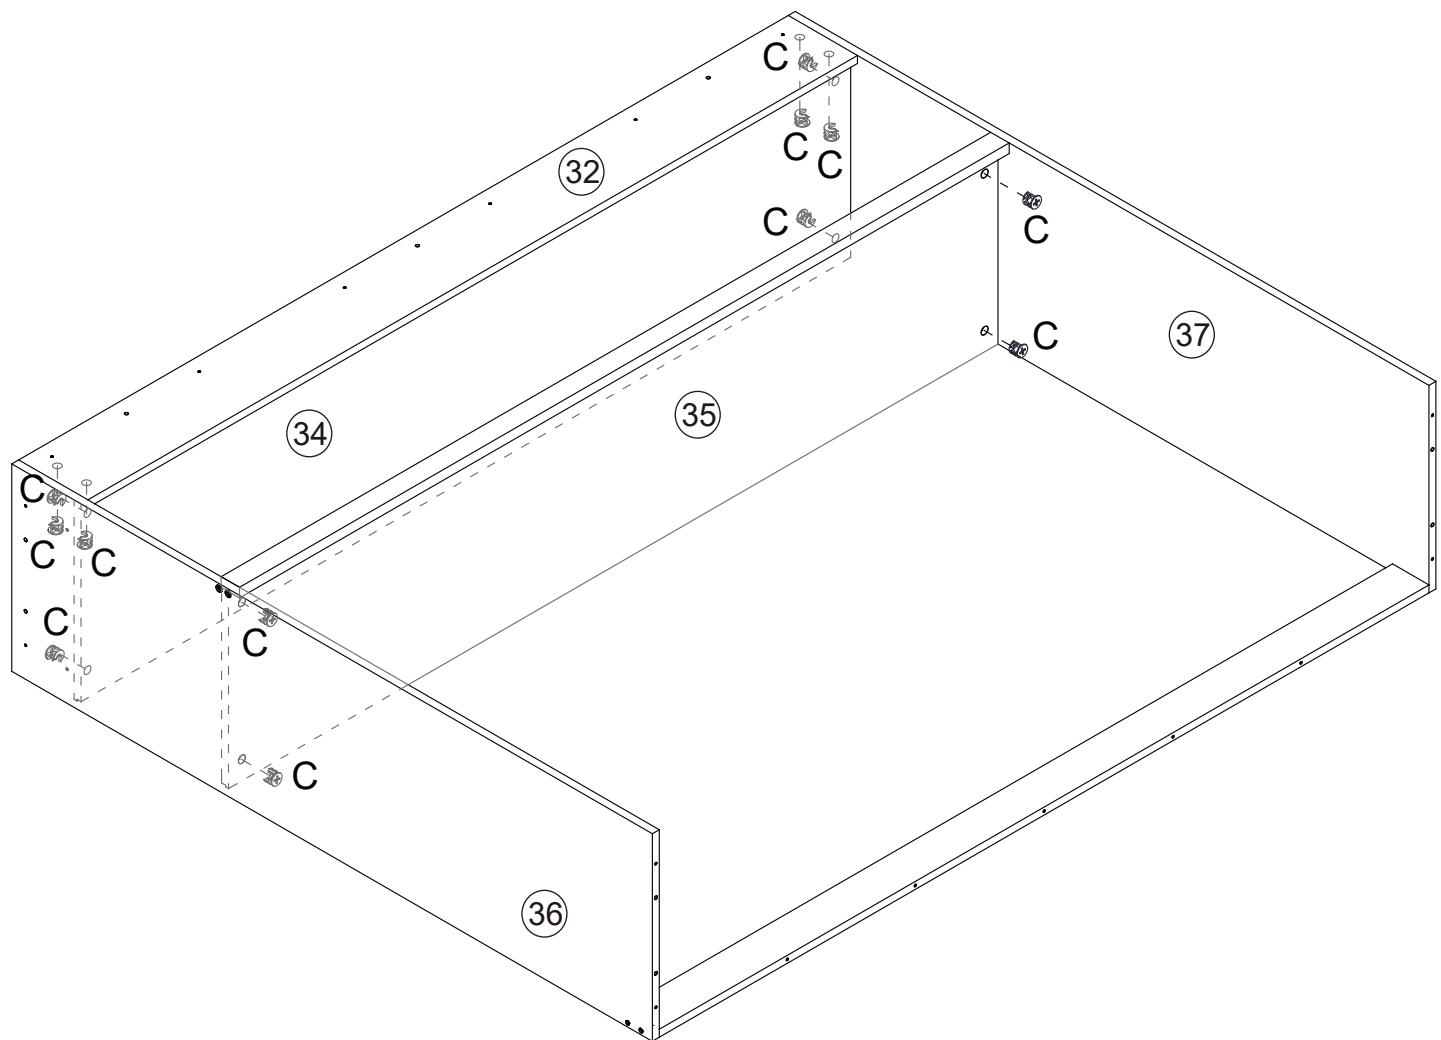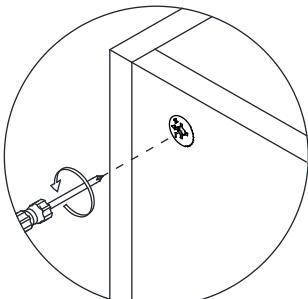


Cam lock x 12

# Assembly Instructions



## Step 38

Please flip carefully!

It's better if two people work together in this step.

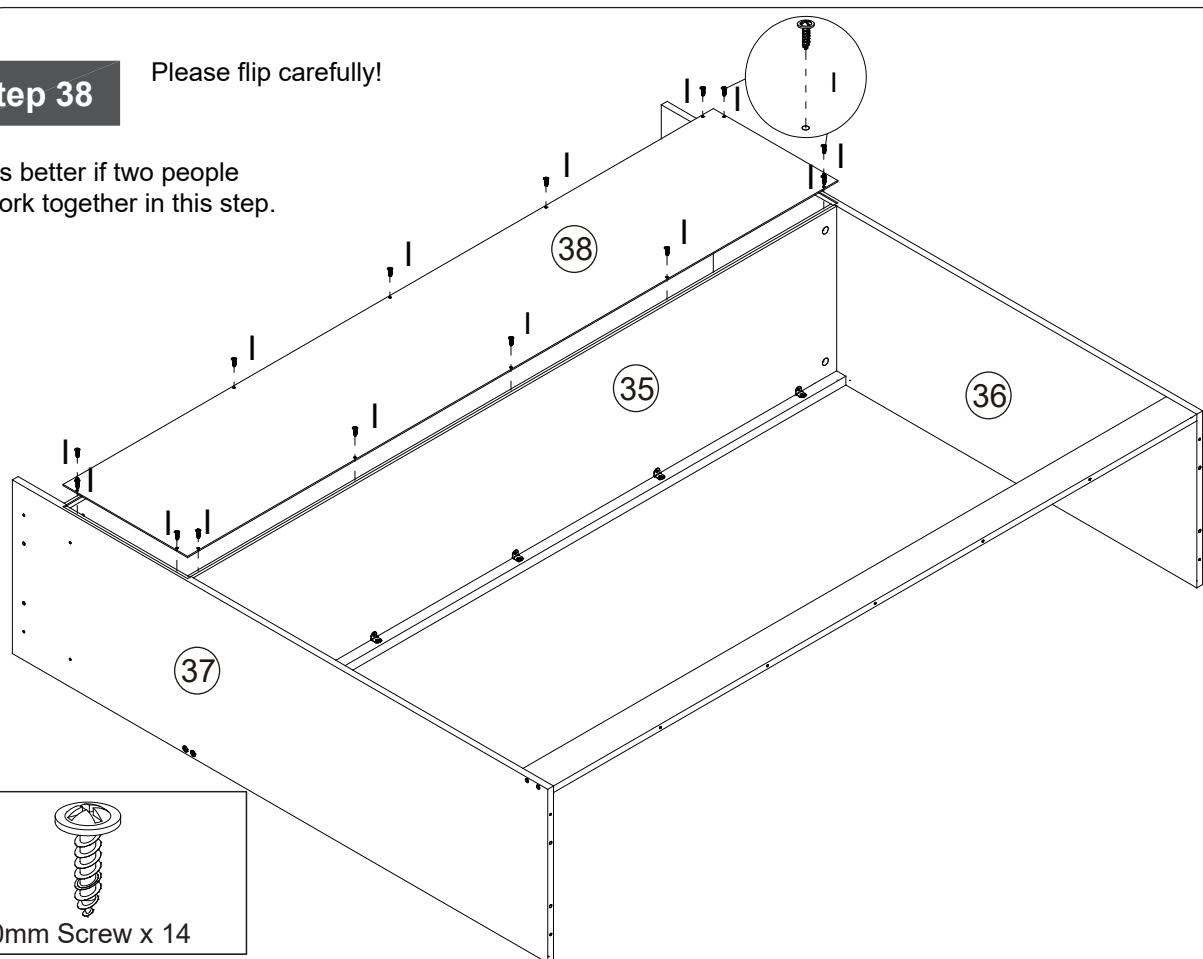


## Step 39



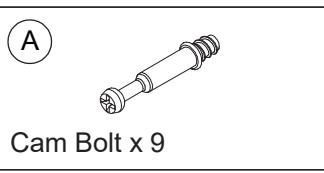
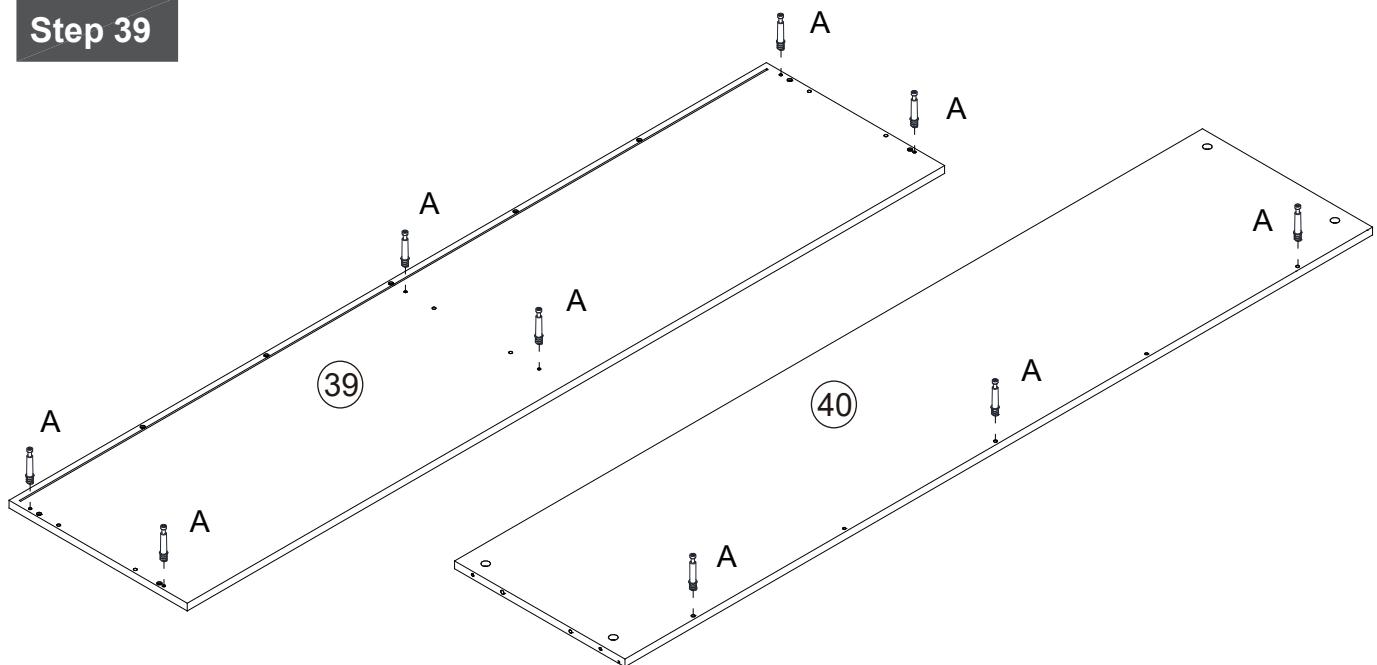


# Assembly Instructions

## Step 40


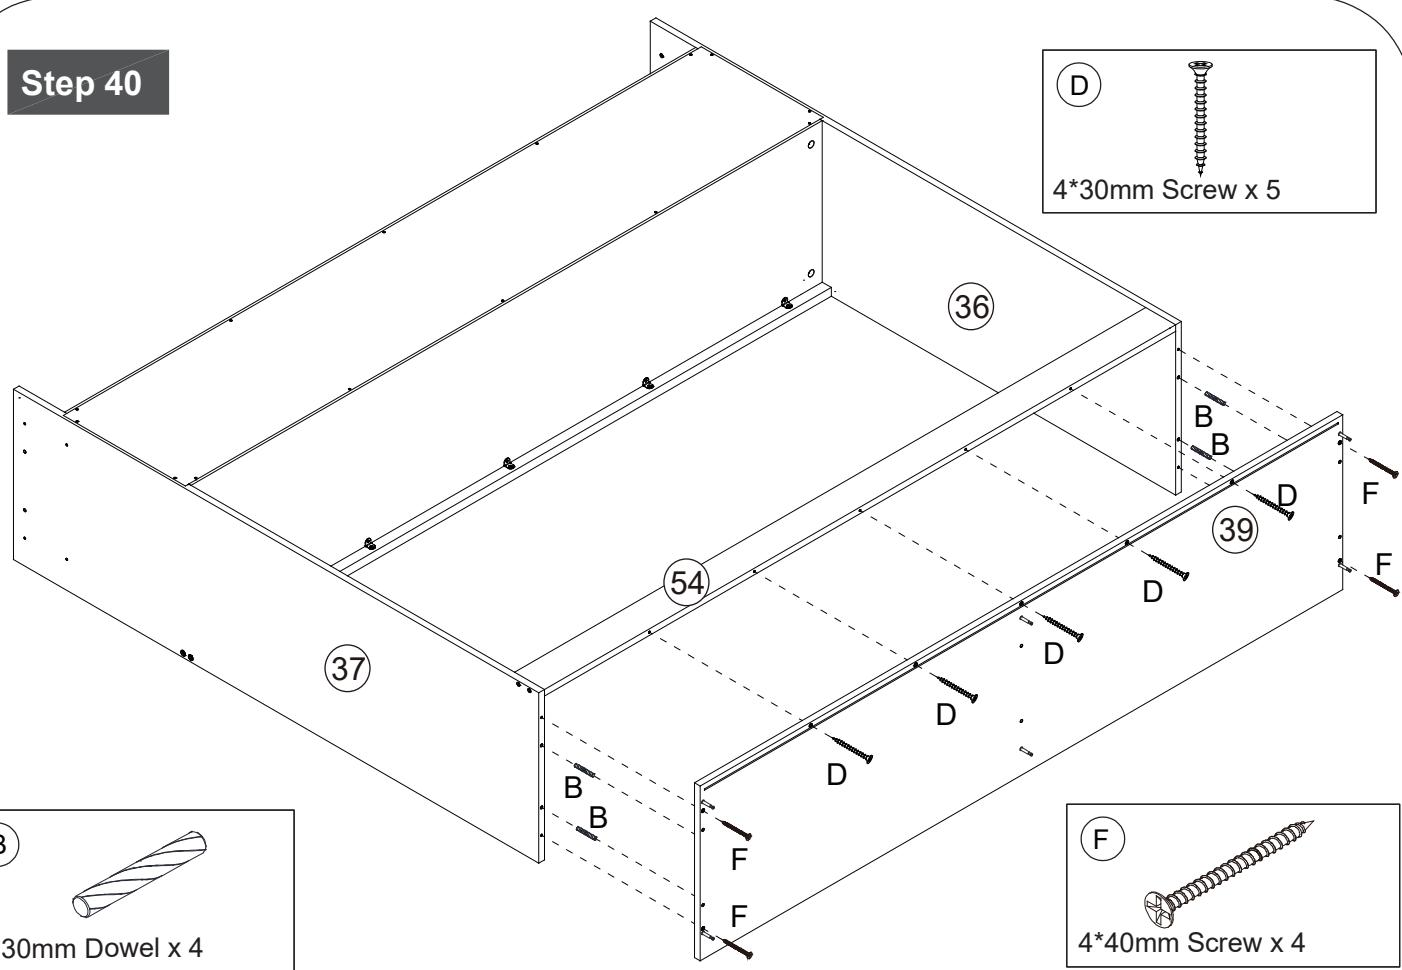


## Step 41

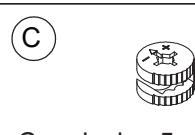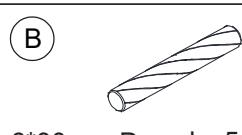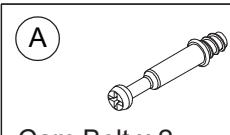
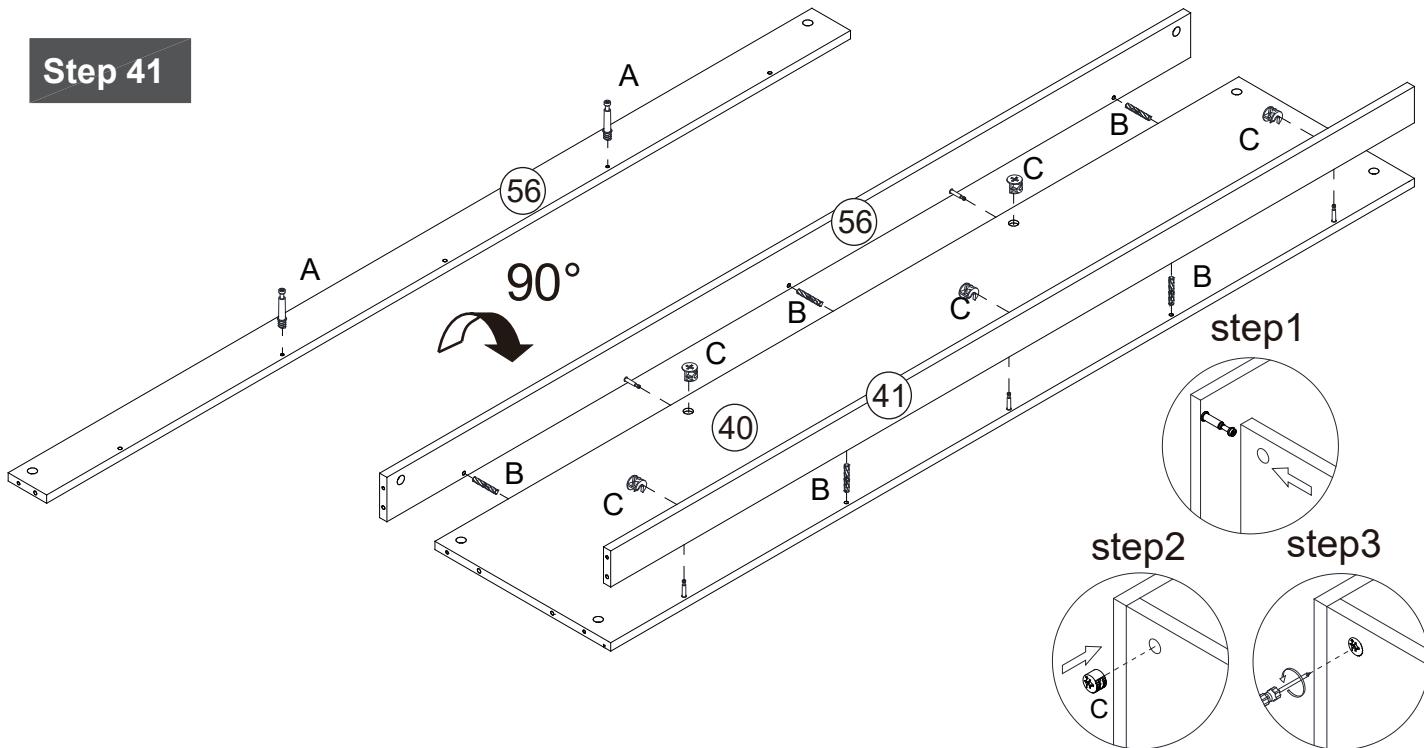


# Assembly Instructions

## Step 42

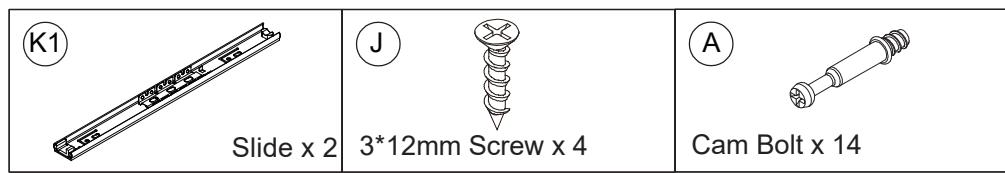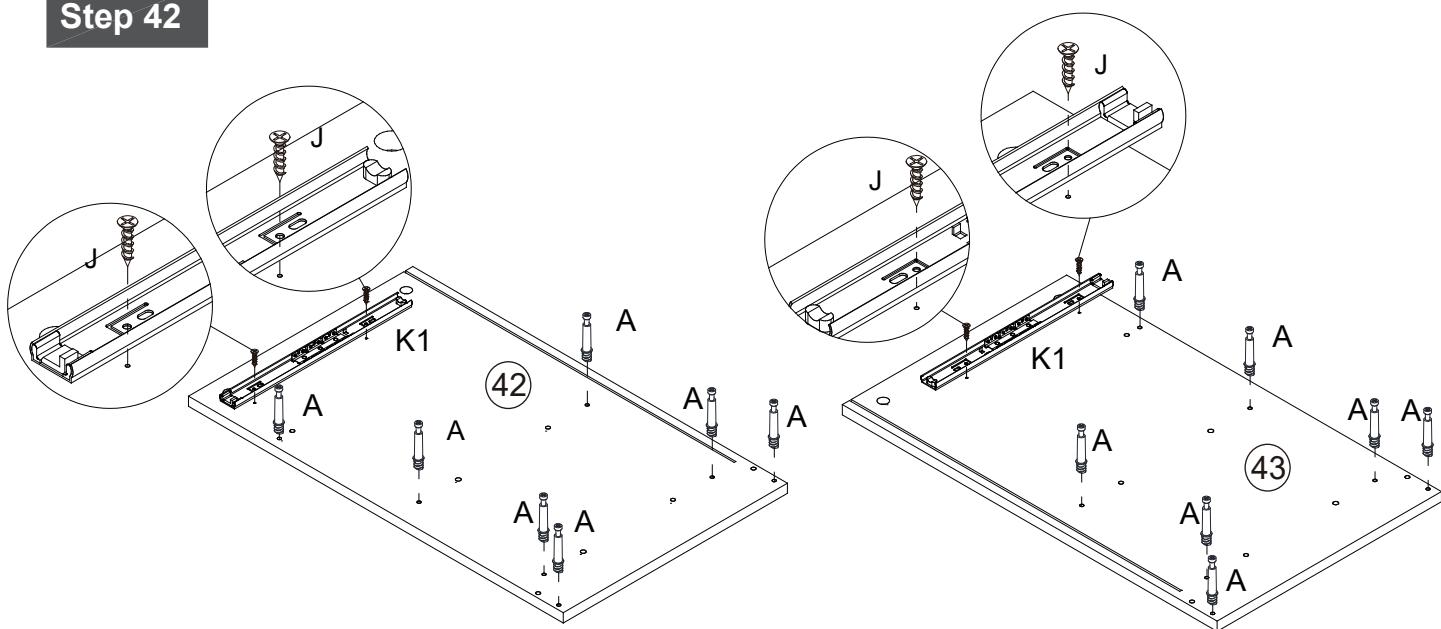


## Step 43

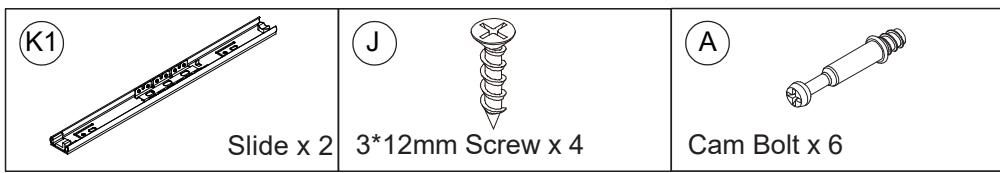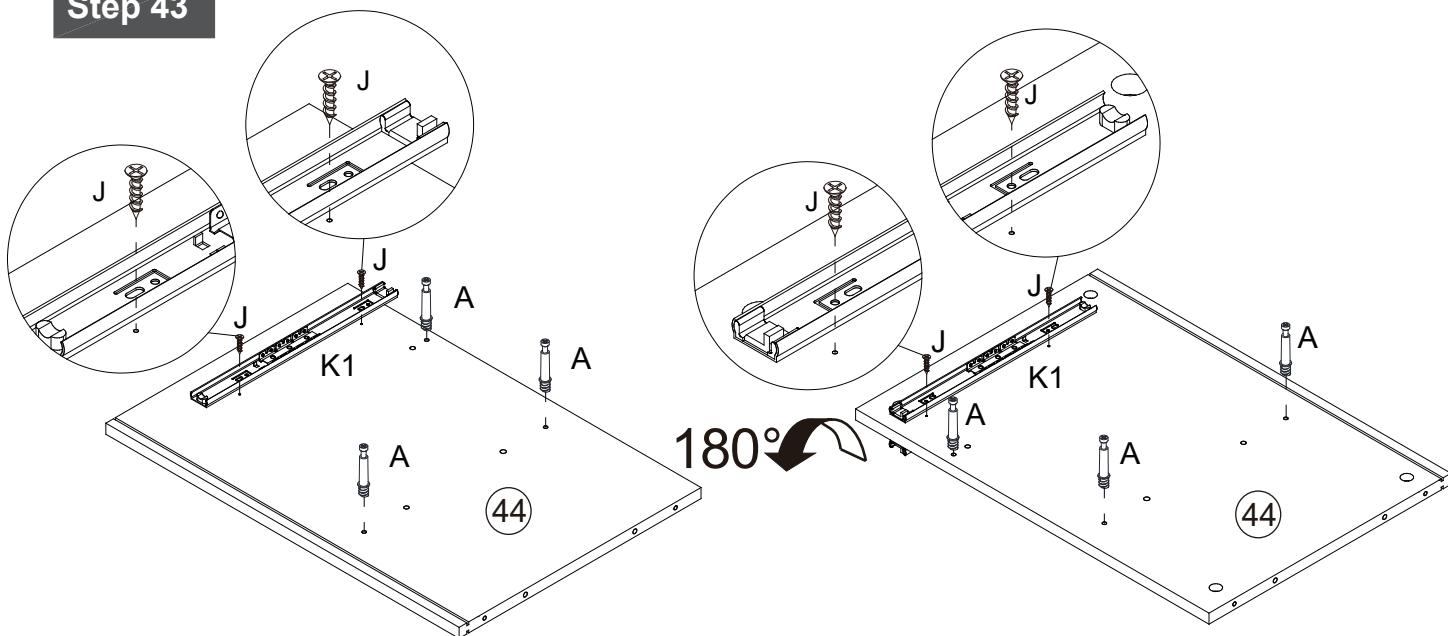


# Assembly Instructions

## Step 44

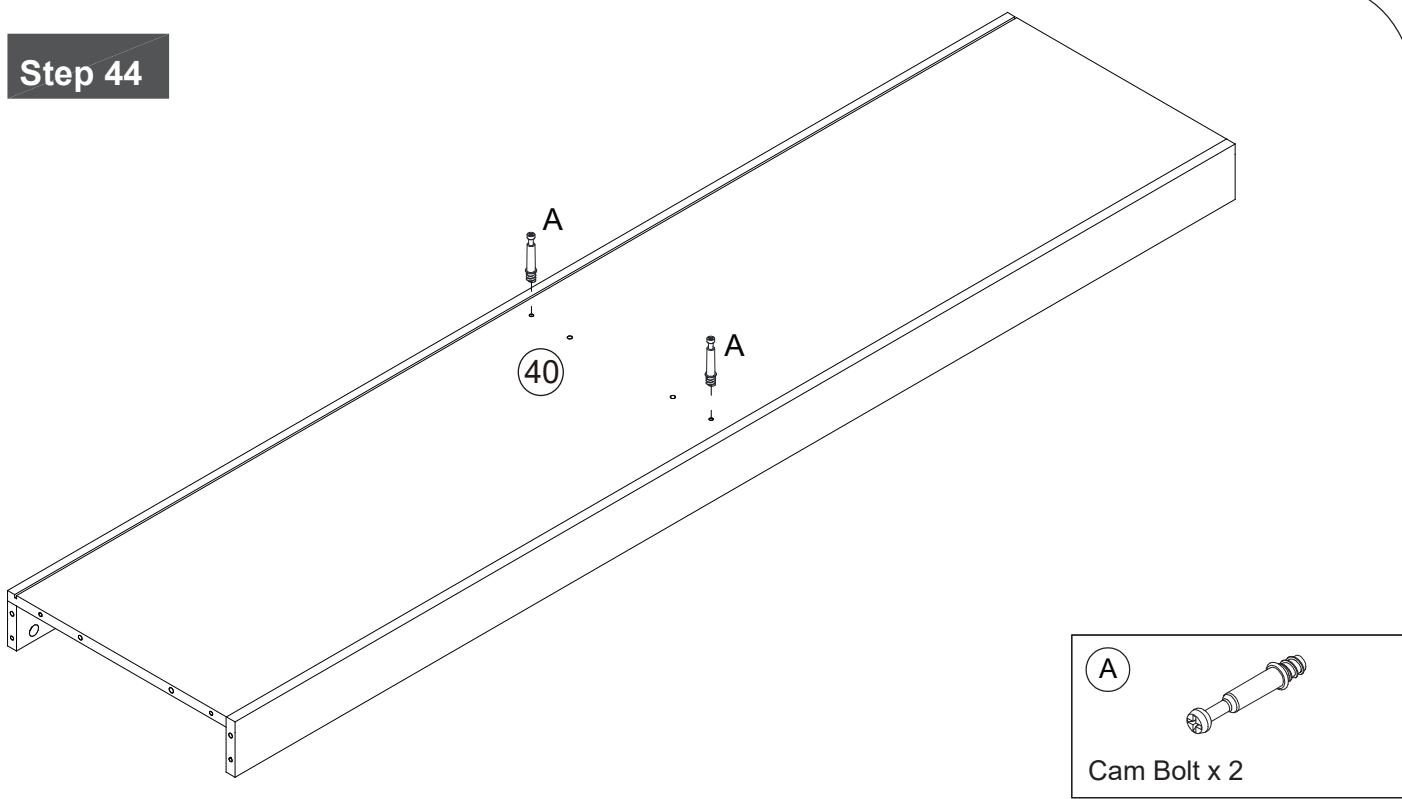


## Step 45




### step1

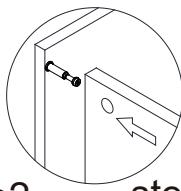


### step2

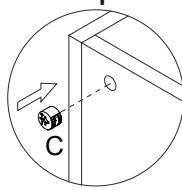

### step3

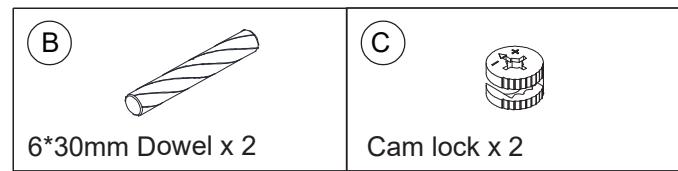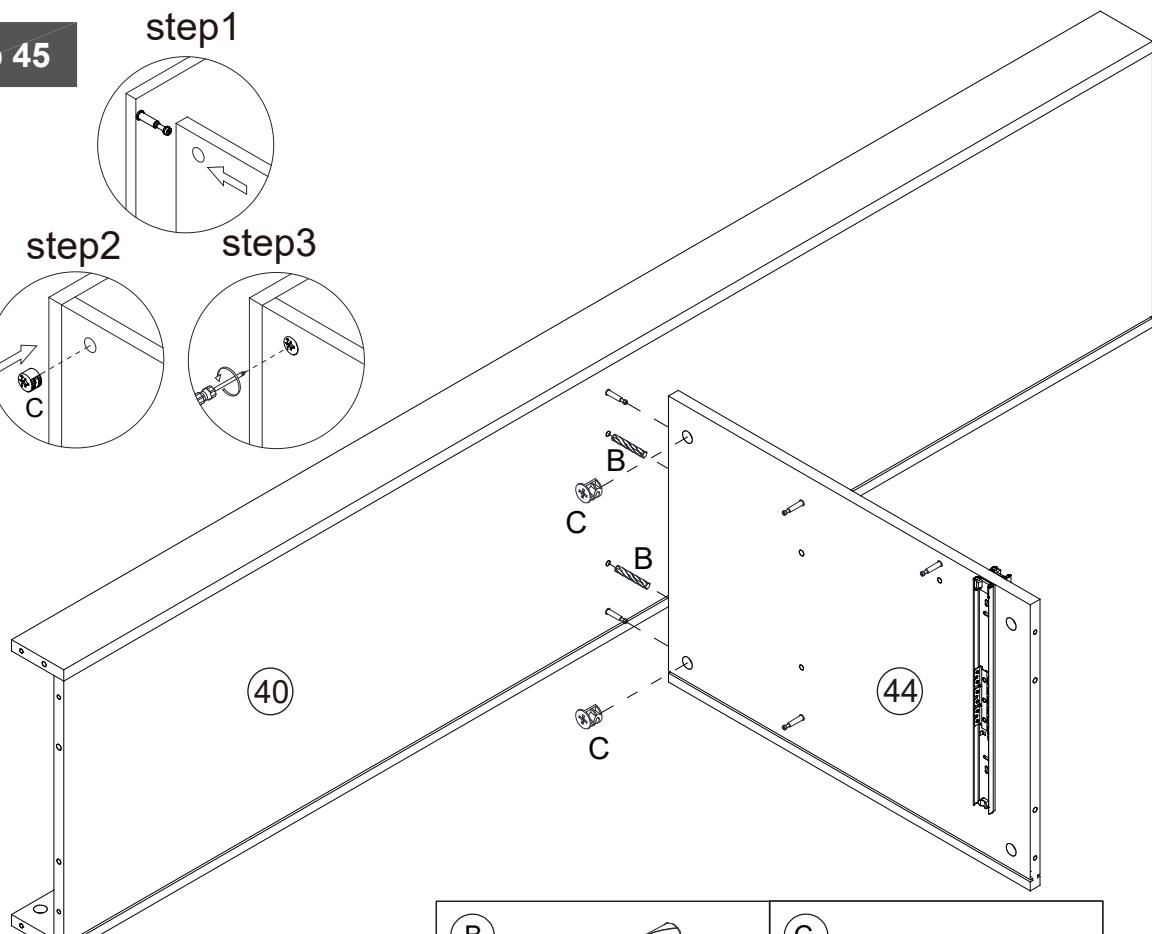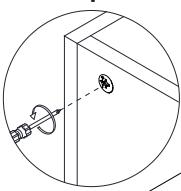

6\*30mm Dowel x 2

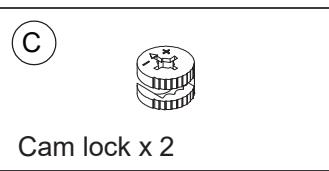


Cam lock x 2


# Assembly Instructions

## Step 46





step1

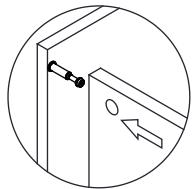

step2

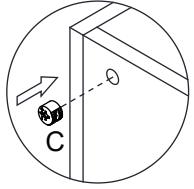


step3

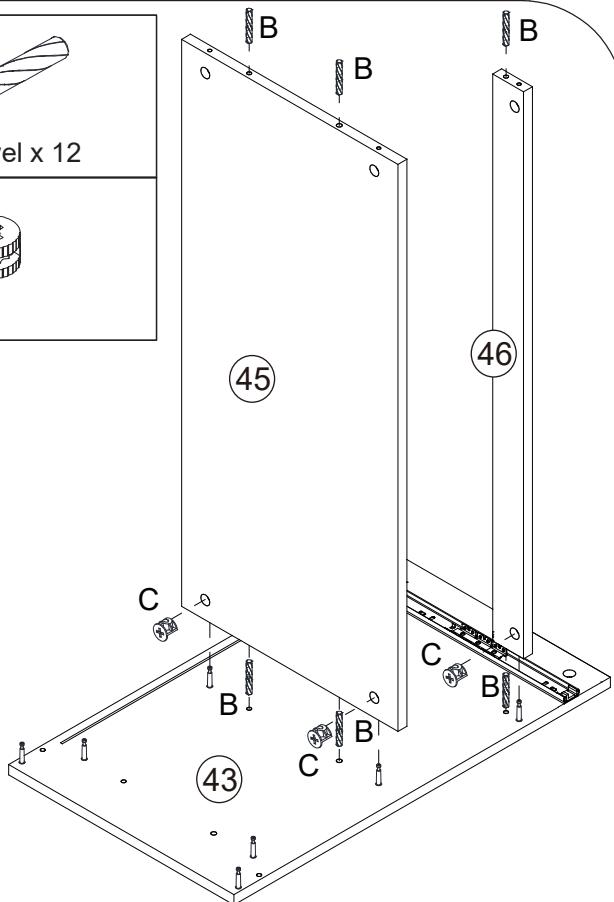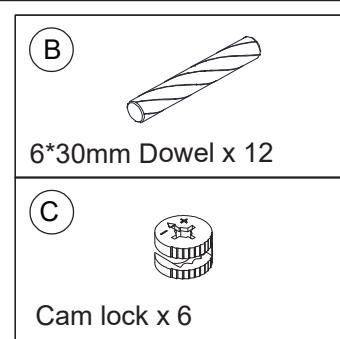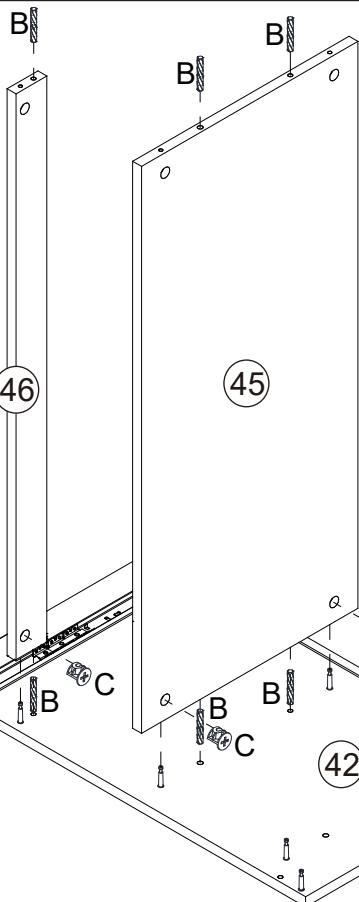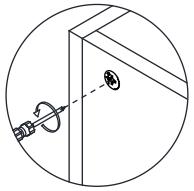


## Step 47


It's better if two people work together in next steps.

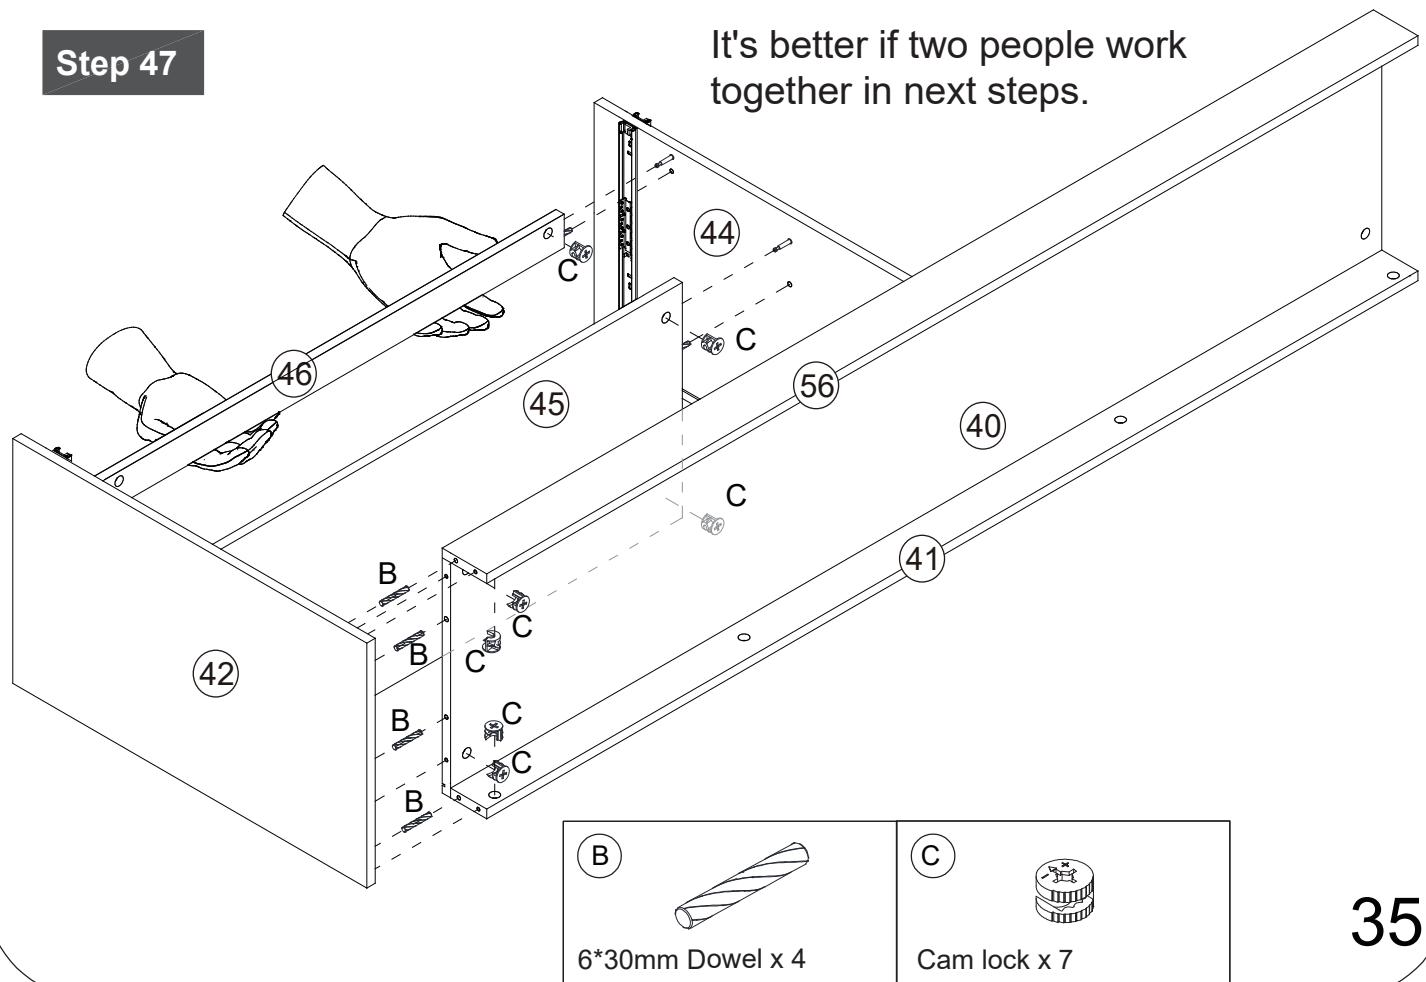

# Assembly Instructions

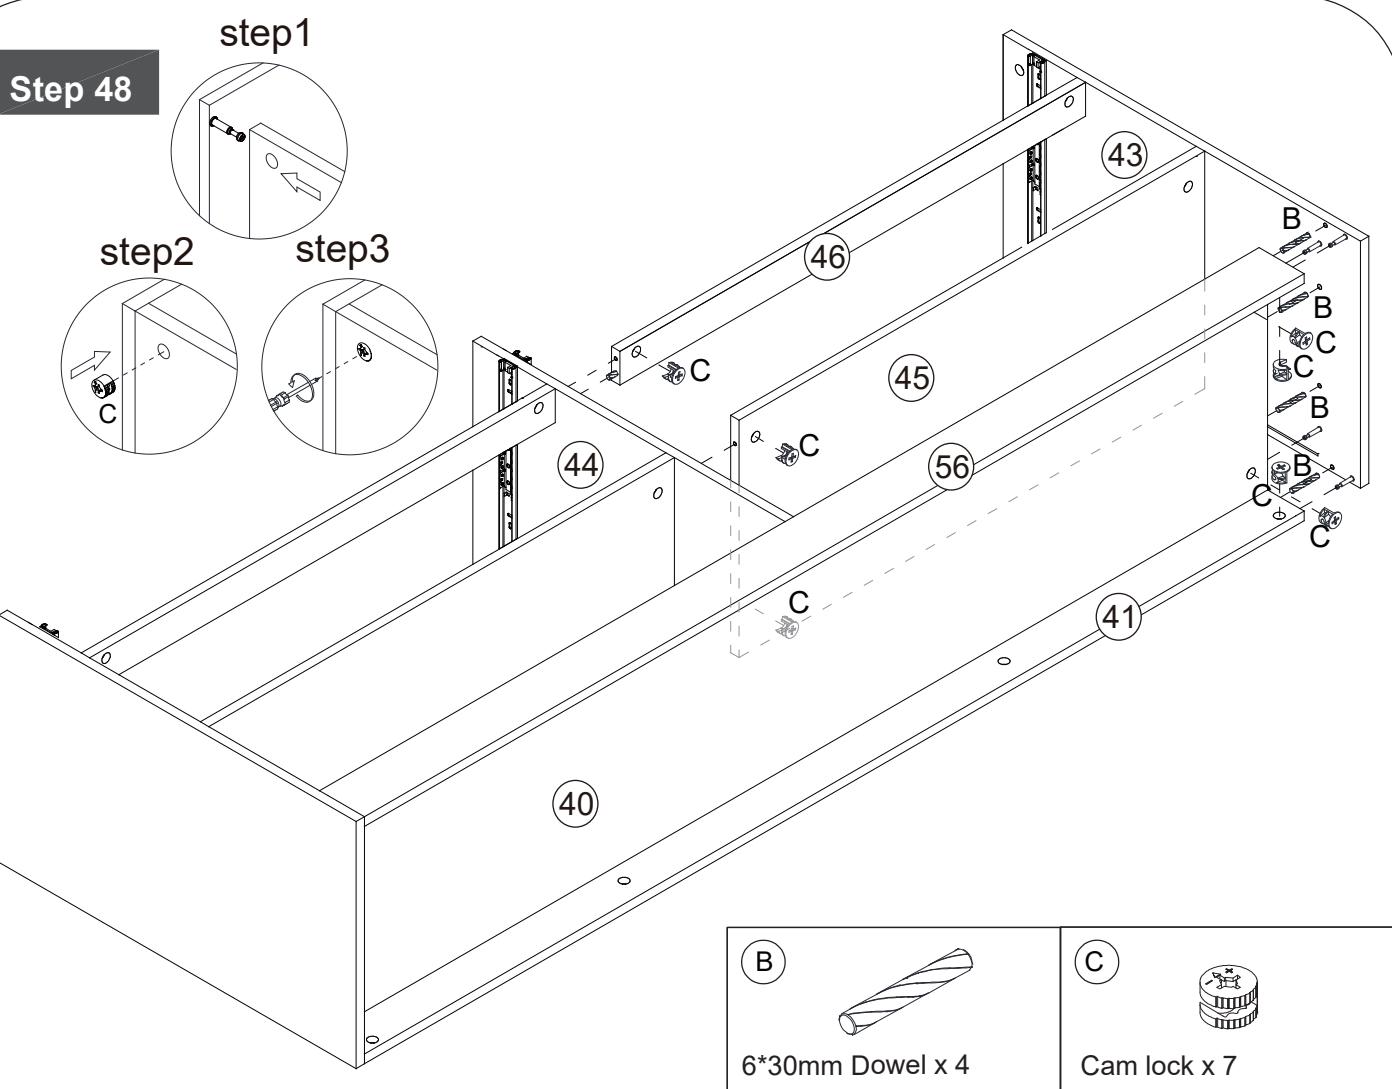


**Step 49**

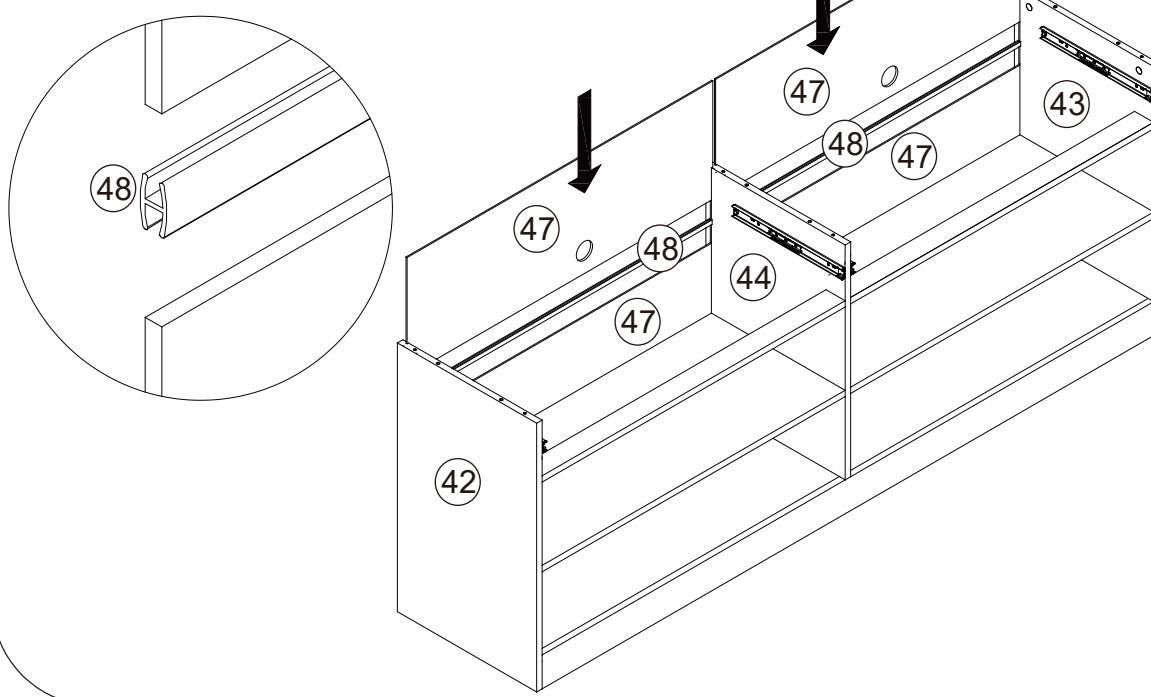


# Assembly Instructions

## Step 50

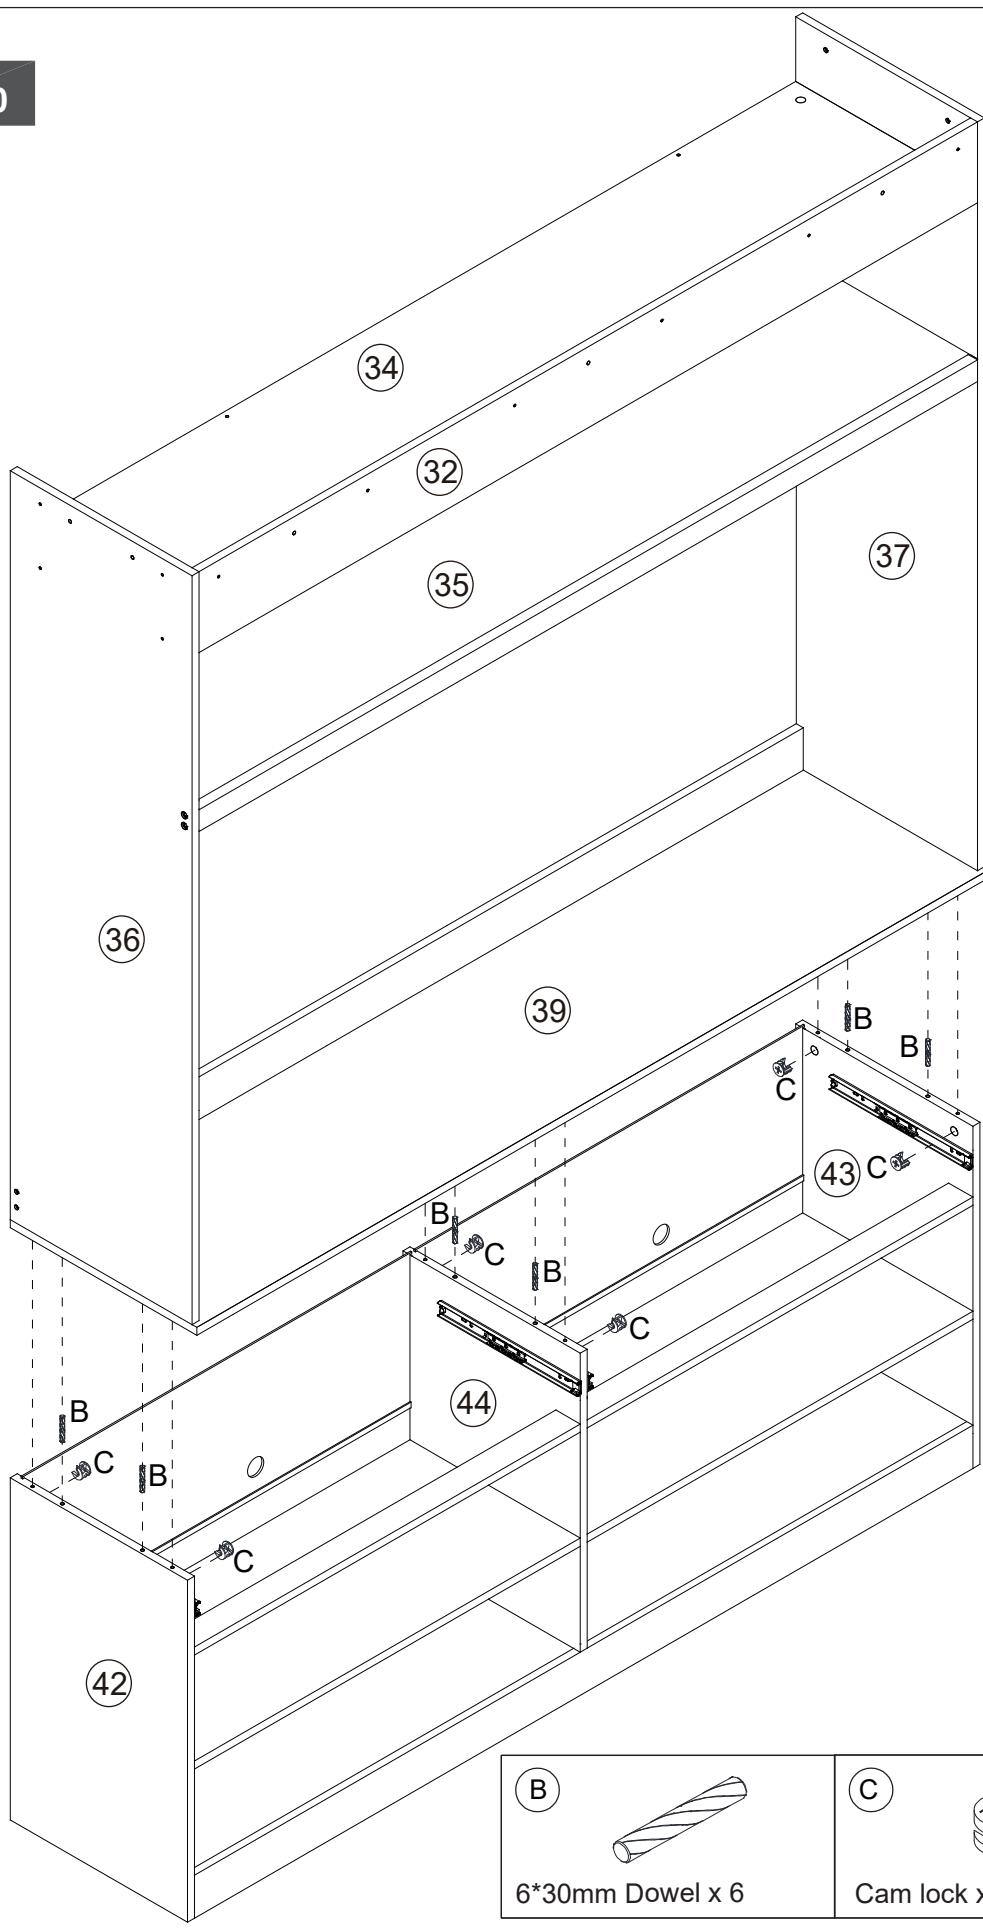




# Assembly Instructions

Step 51



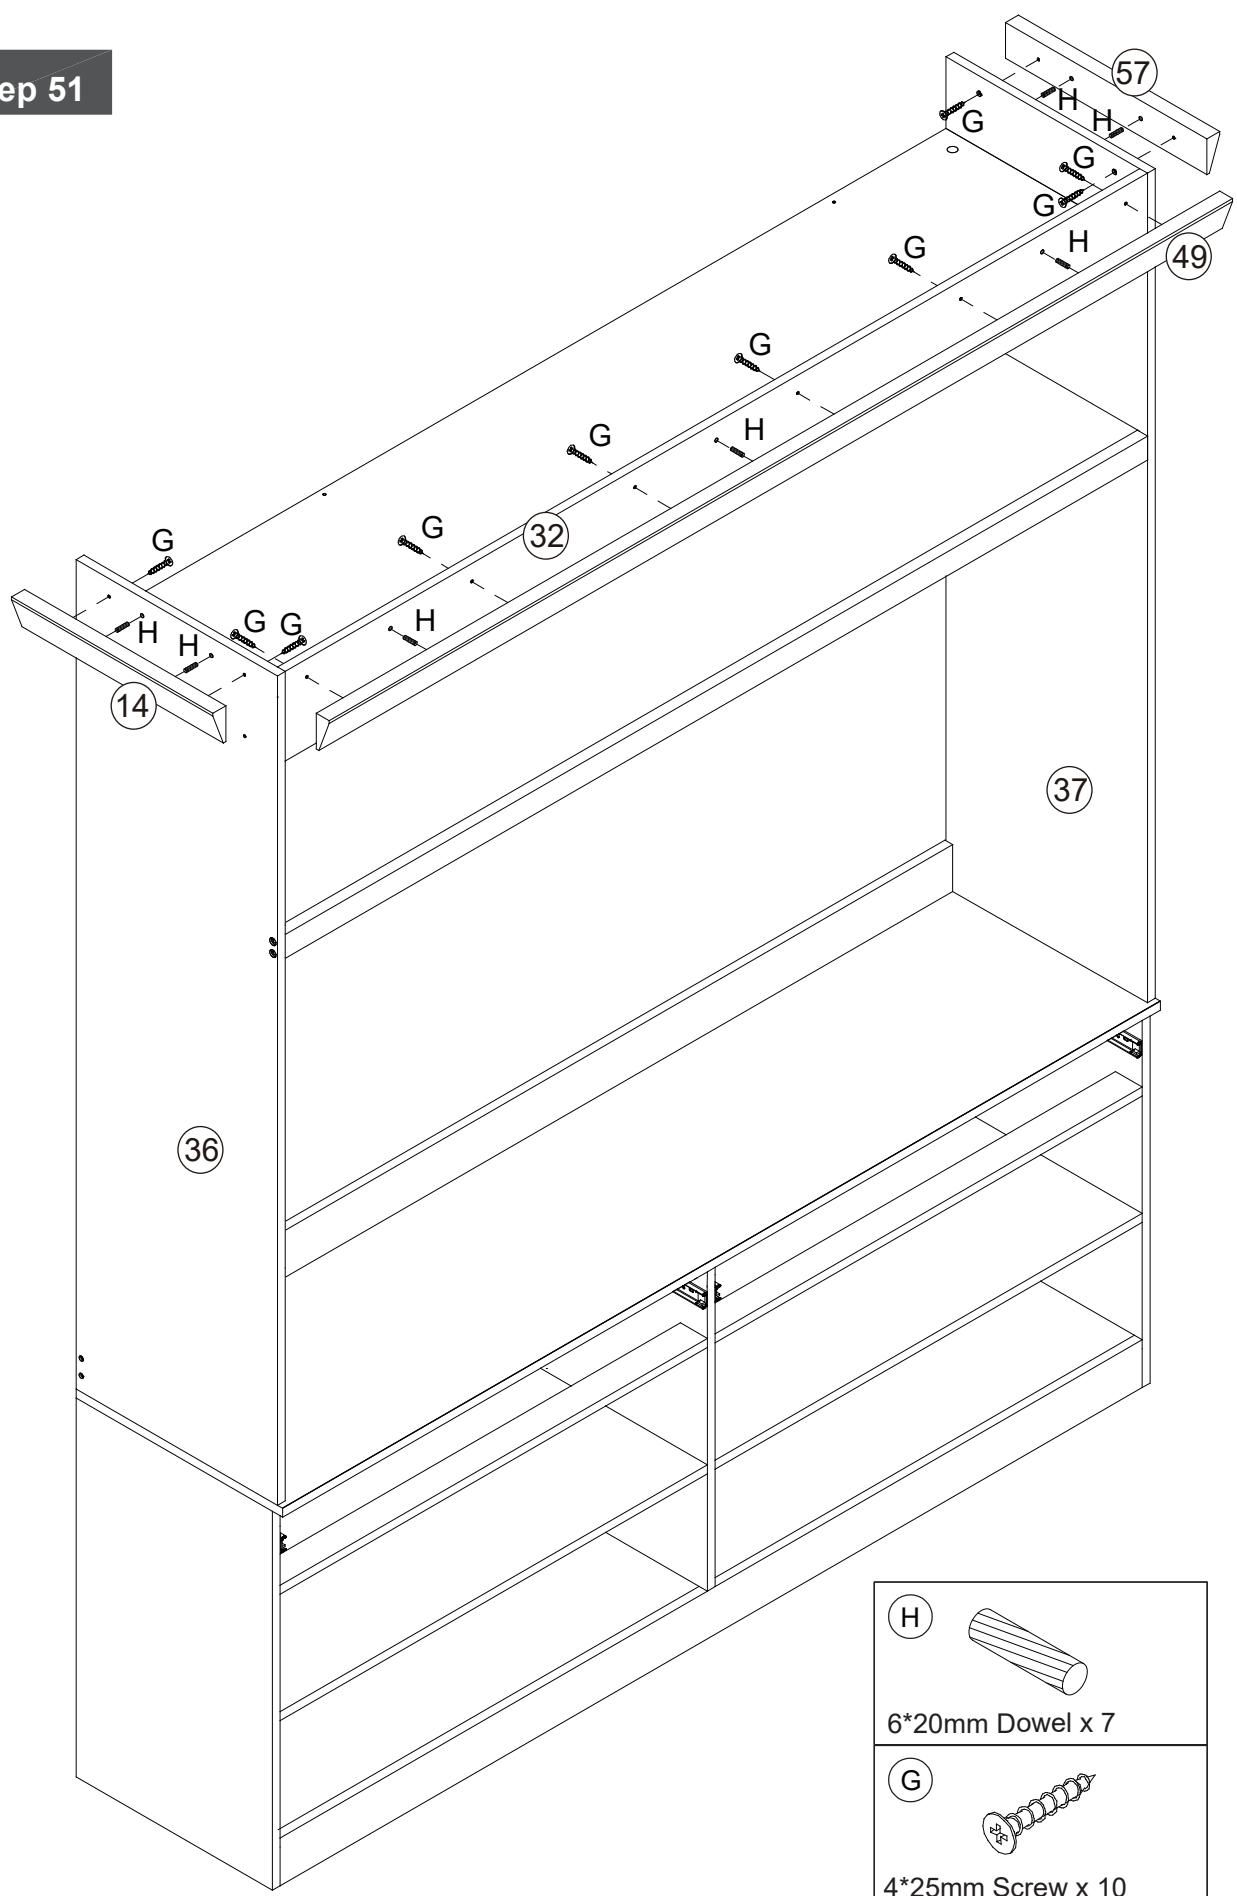


# Assembly Instructions

## Step 52

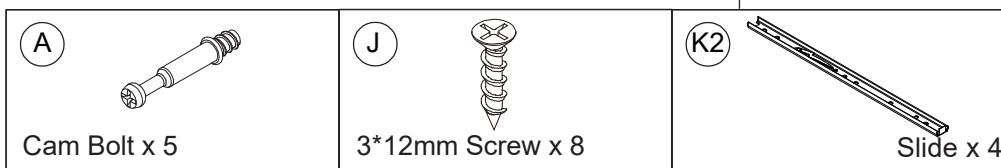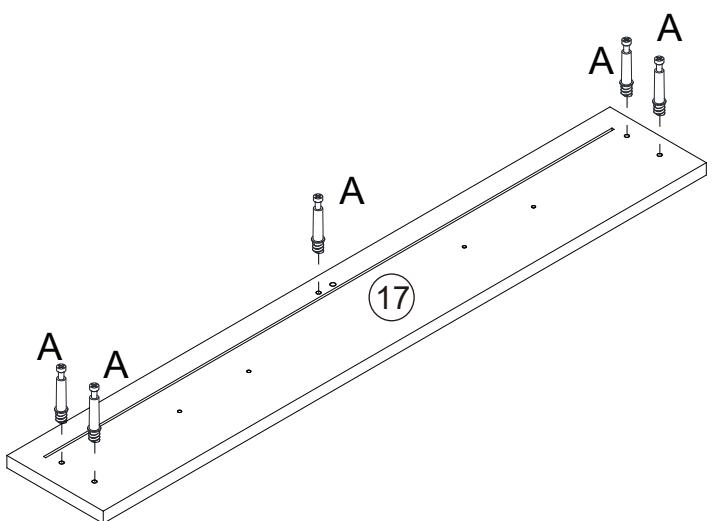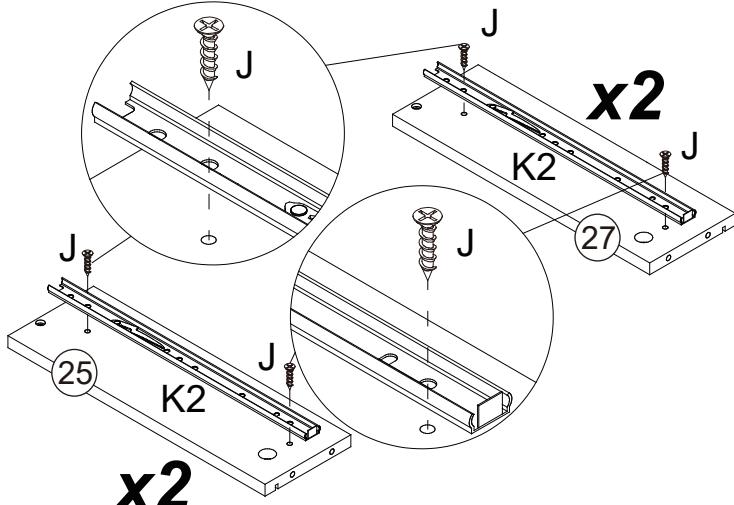


## Step 53

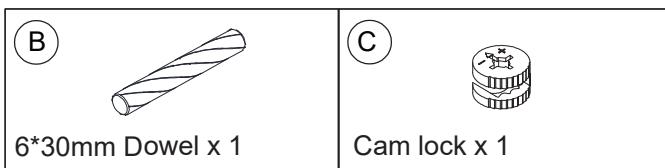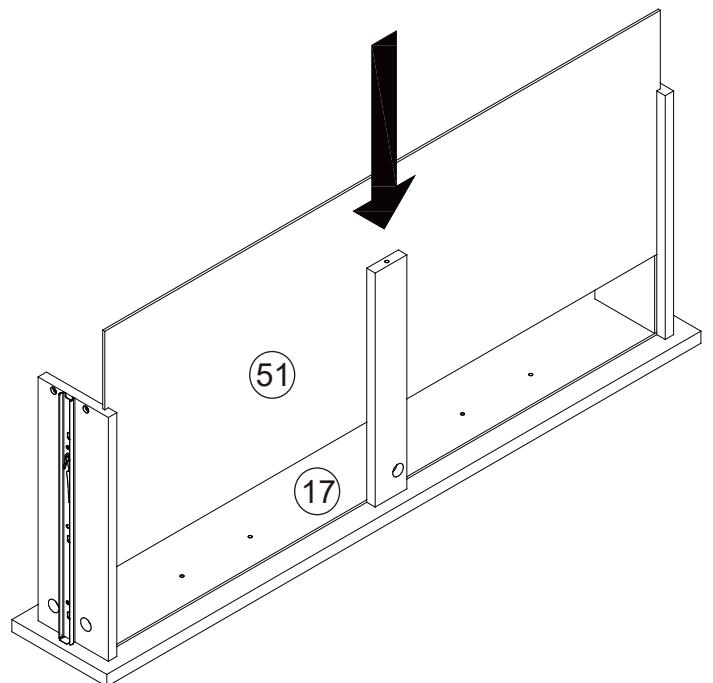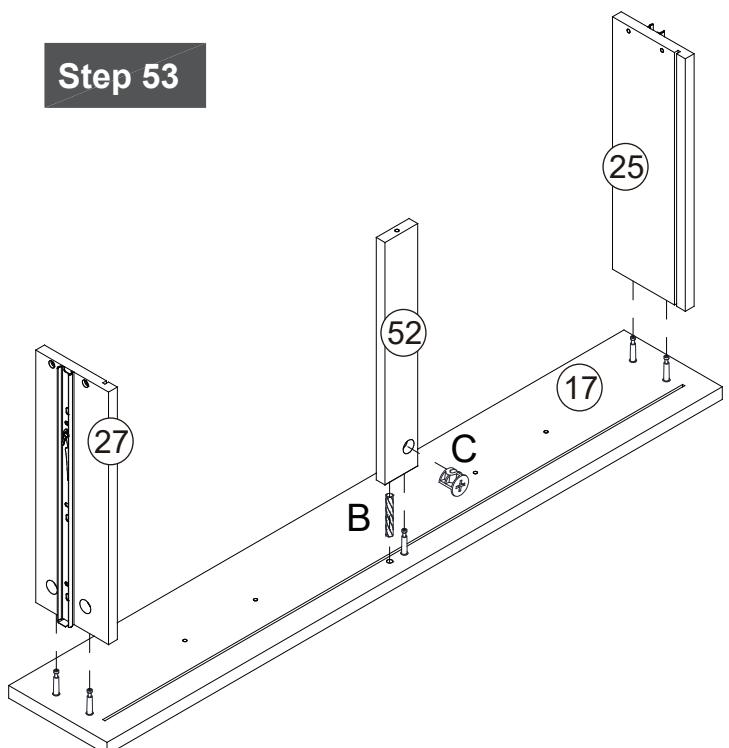


# Assembly Instructions

## Step 54


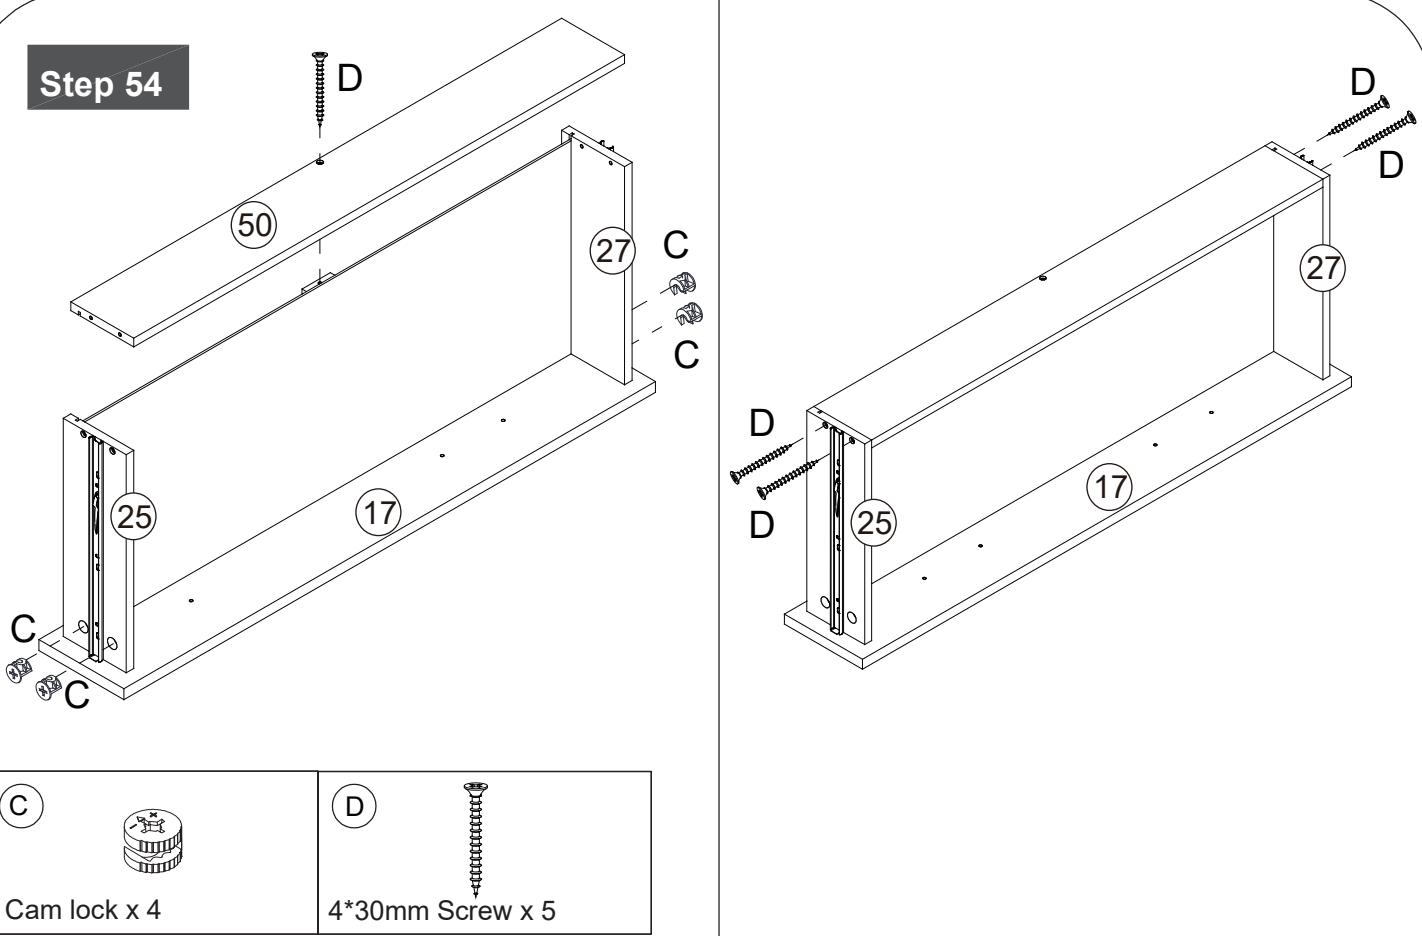


## Step 55

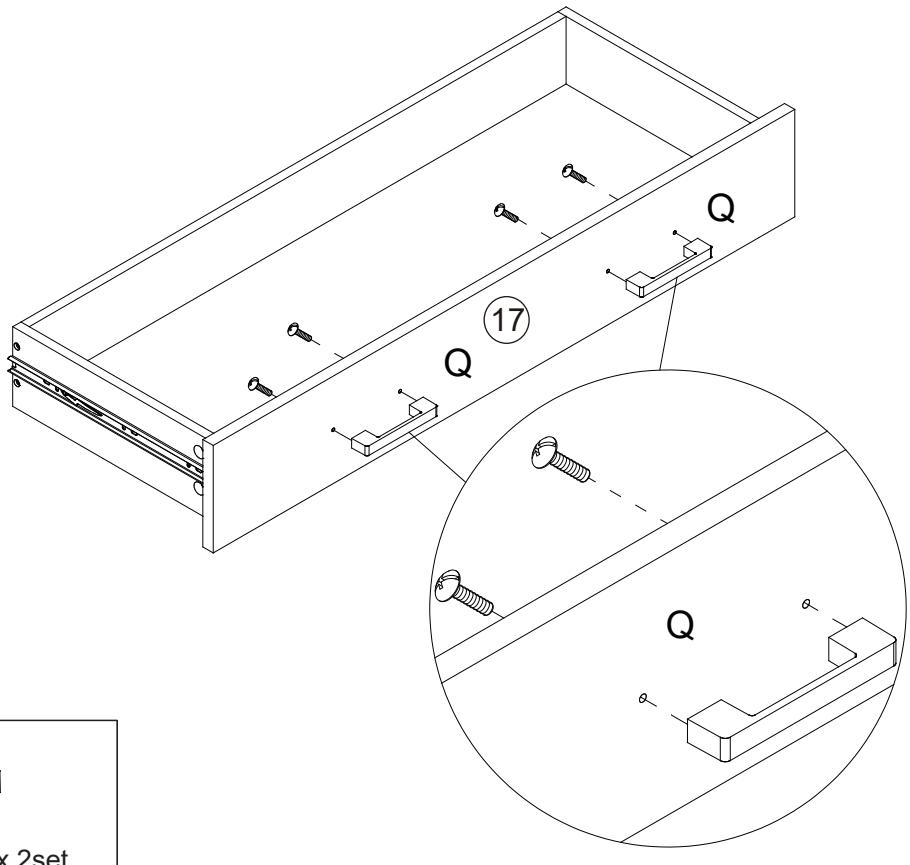

# Assembly Instructions

## Step 56

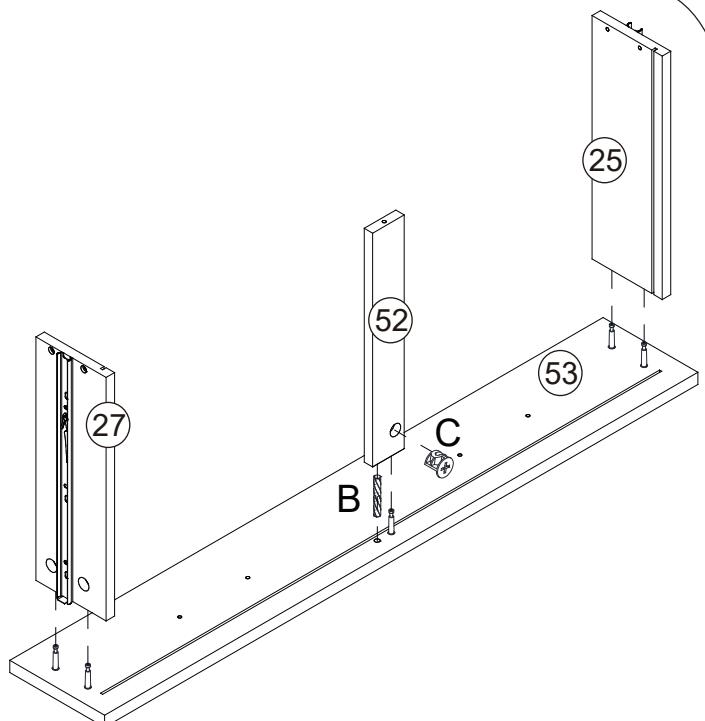
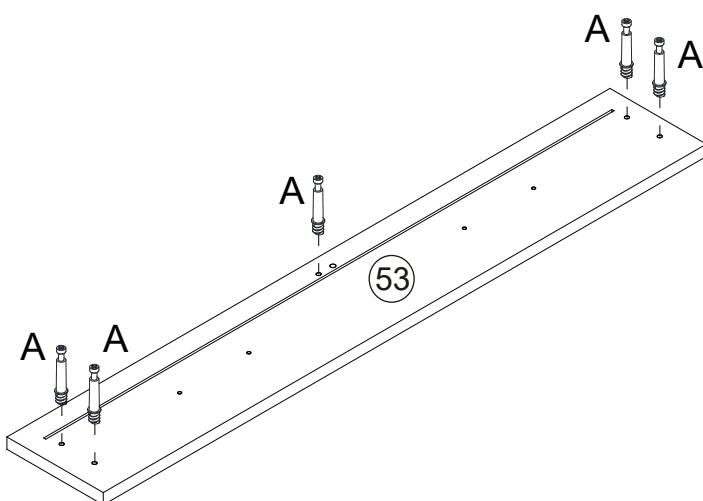


(A) Cam Bolt x 5

(B) 6\*30mm Dowel x 1

(C) Cam lock x 1

## Step 57

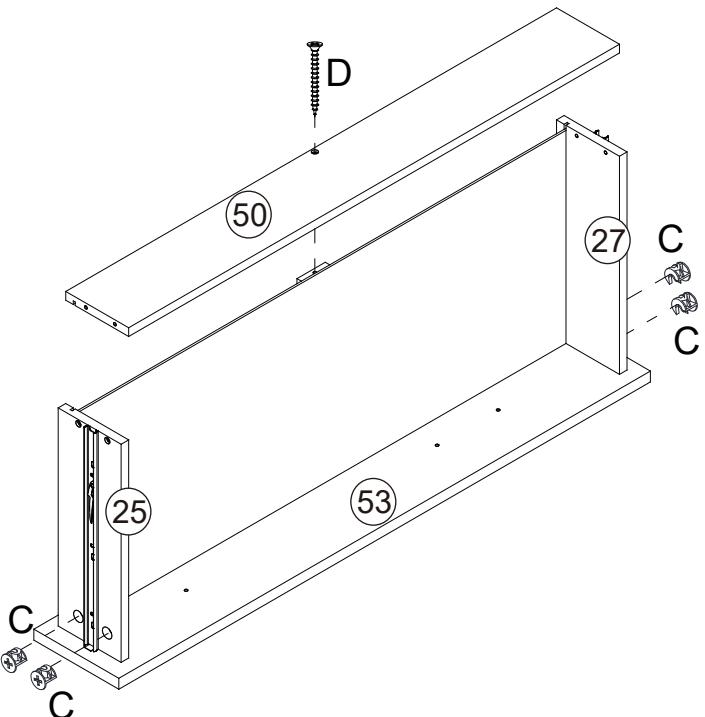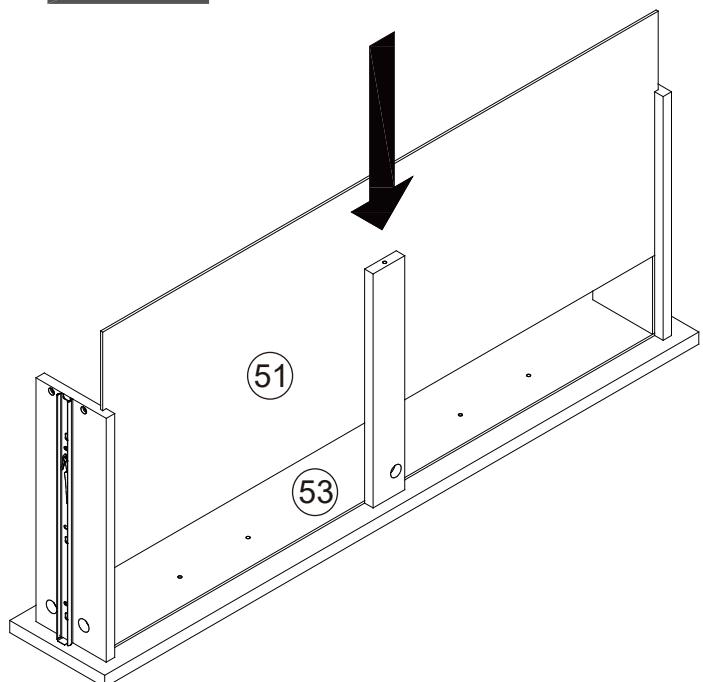


(C) Cam lock x 4



(D) 4\*30mm Screw x 1

# Assembly Instructions

## Step 58

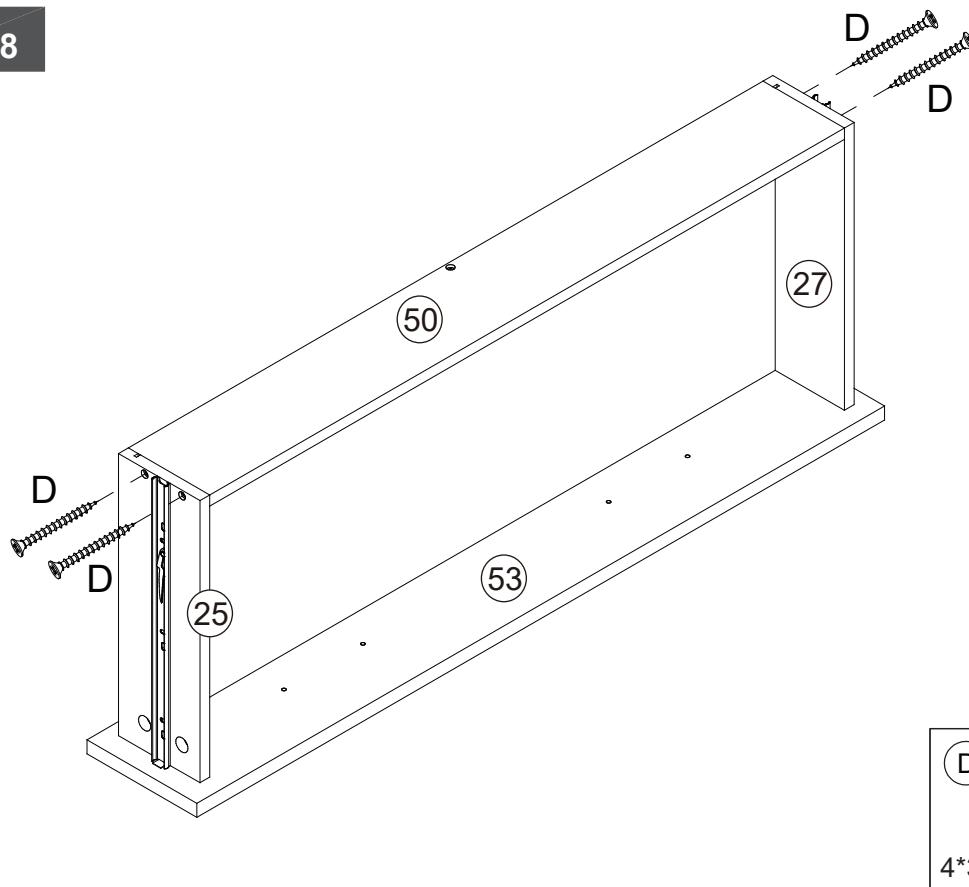


## Step 59

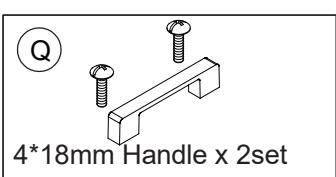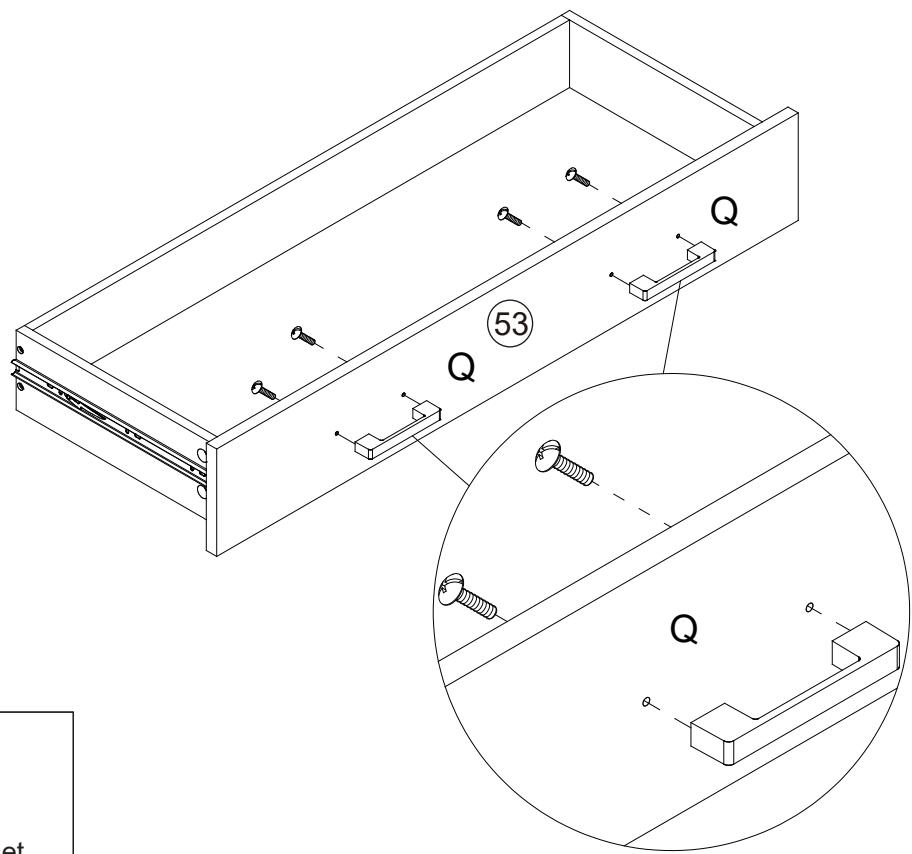



# Assembly Instructions

Step 60

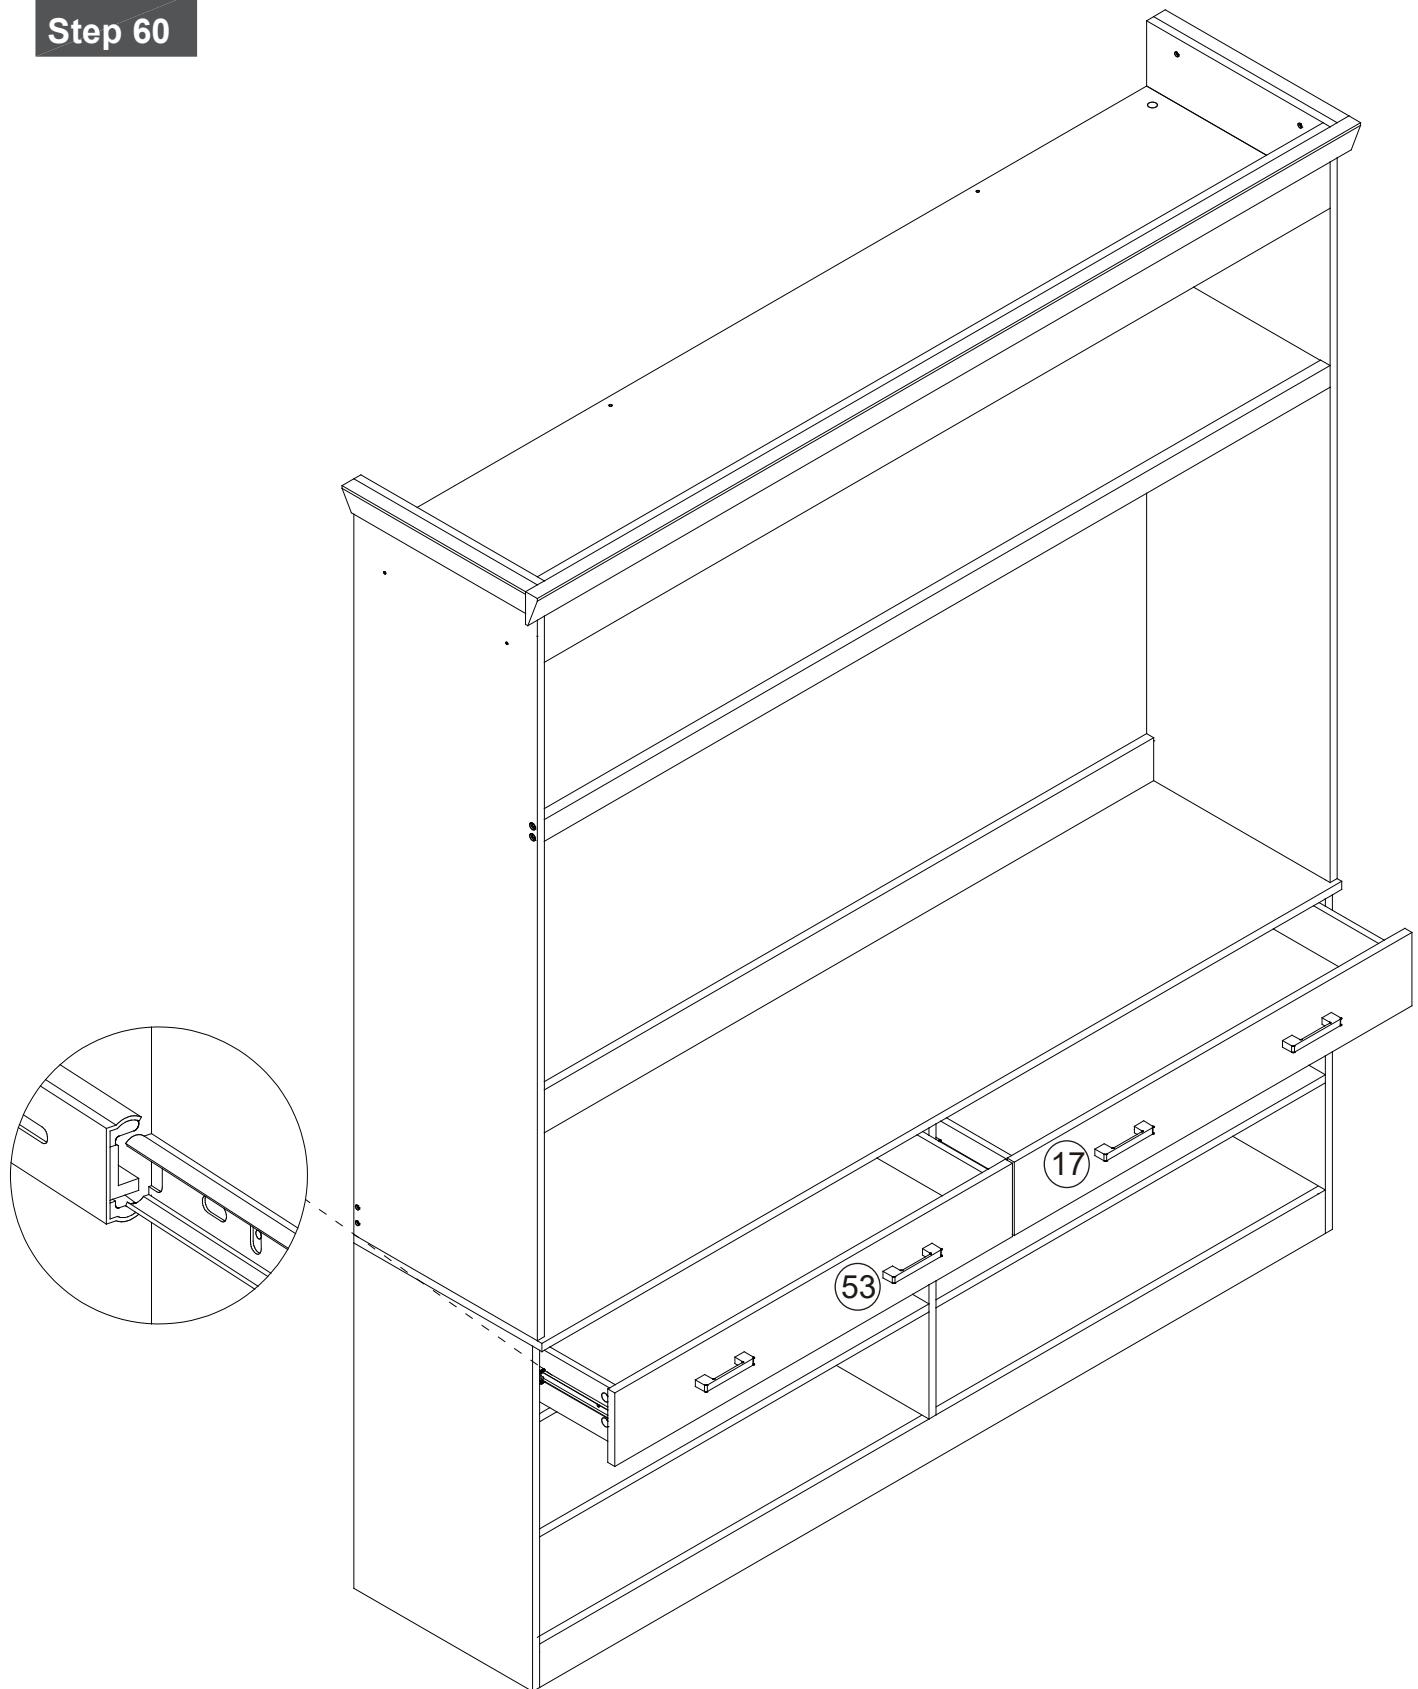


# Assembly Instructions

## Step 61

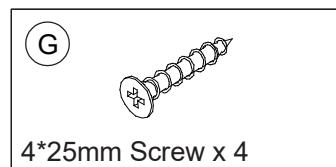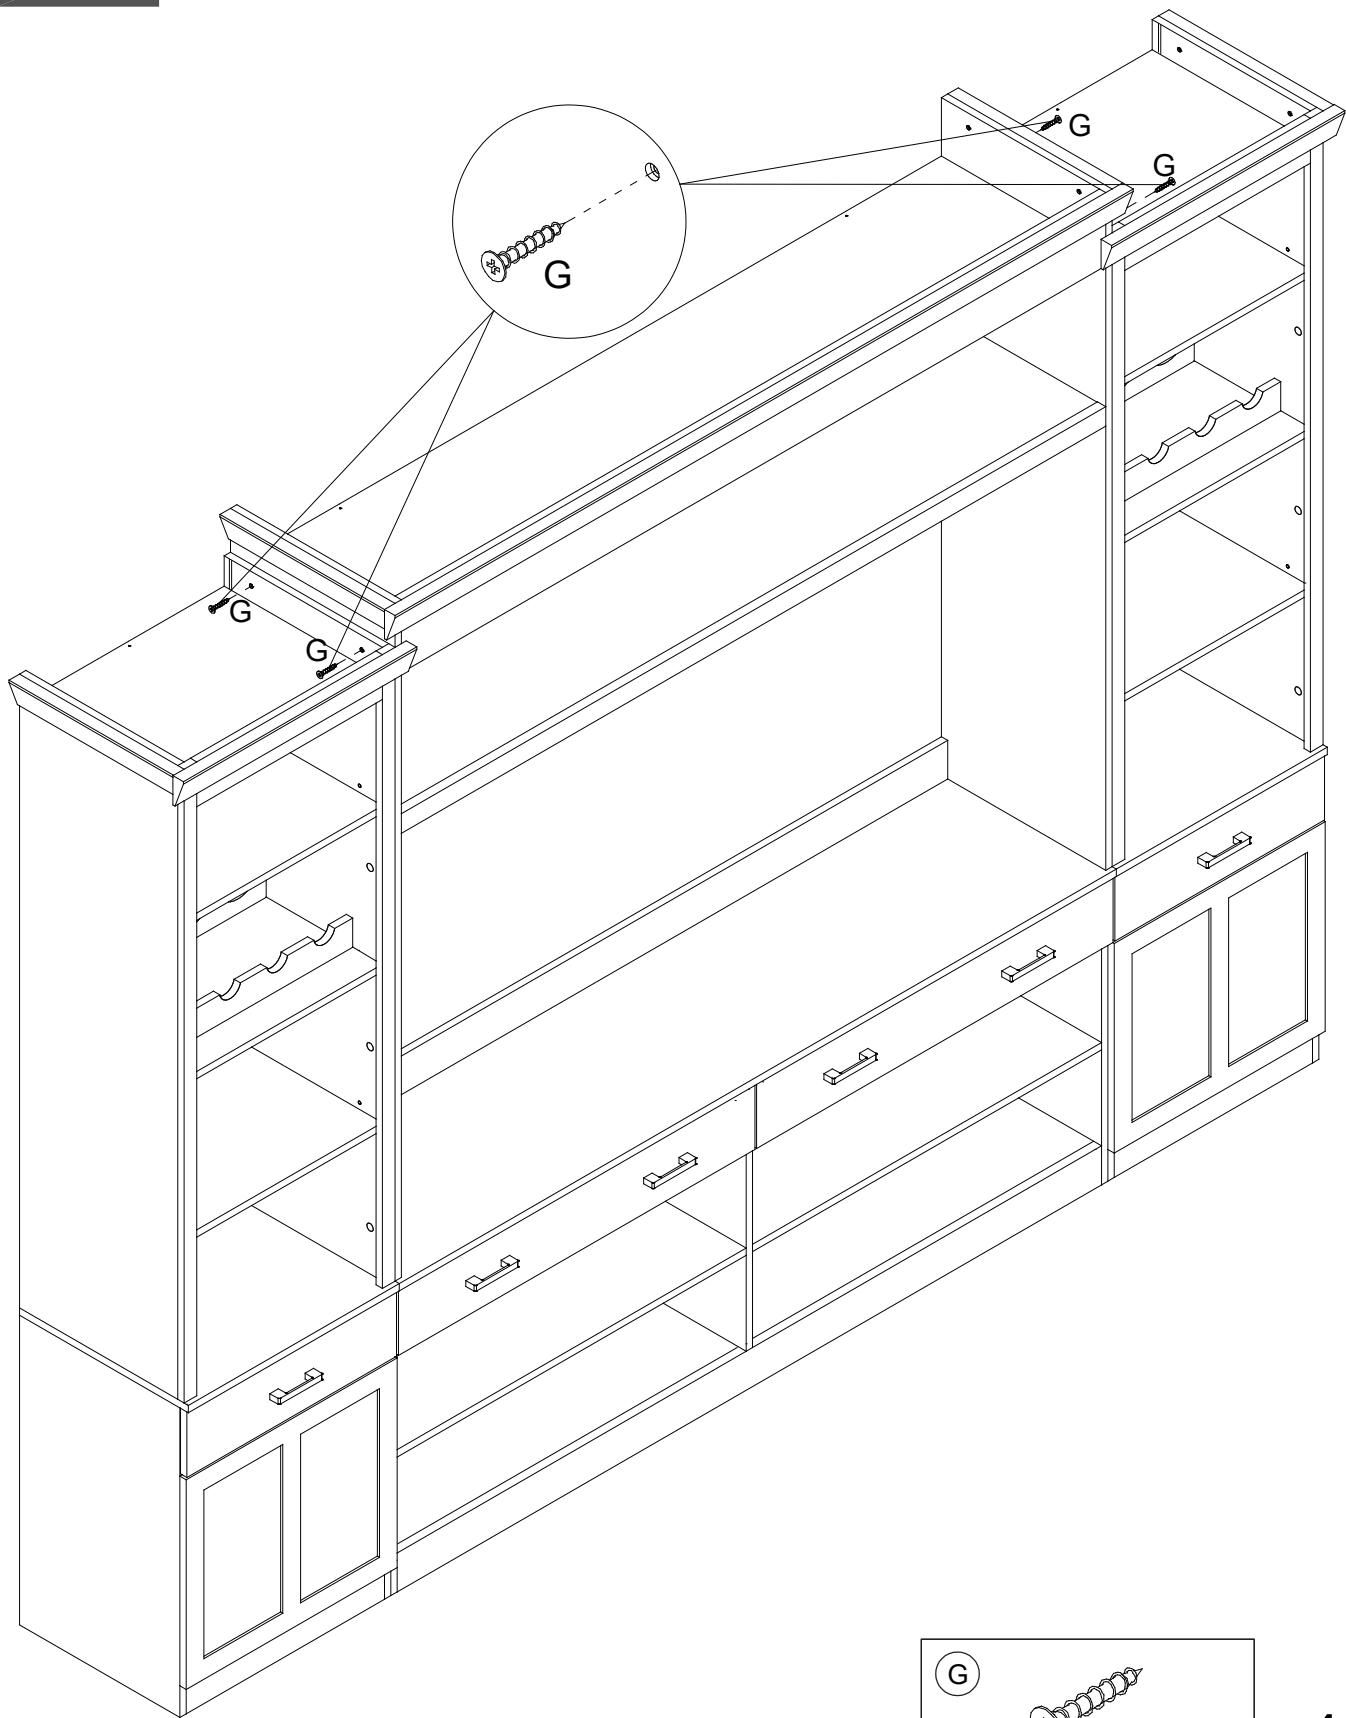

# Assembly Instructions

## Step 62

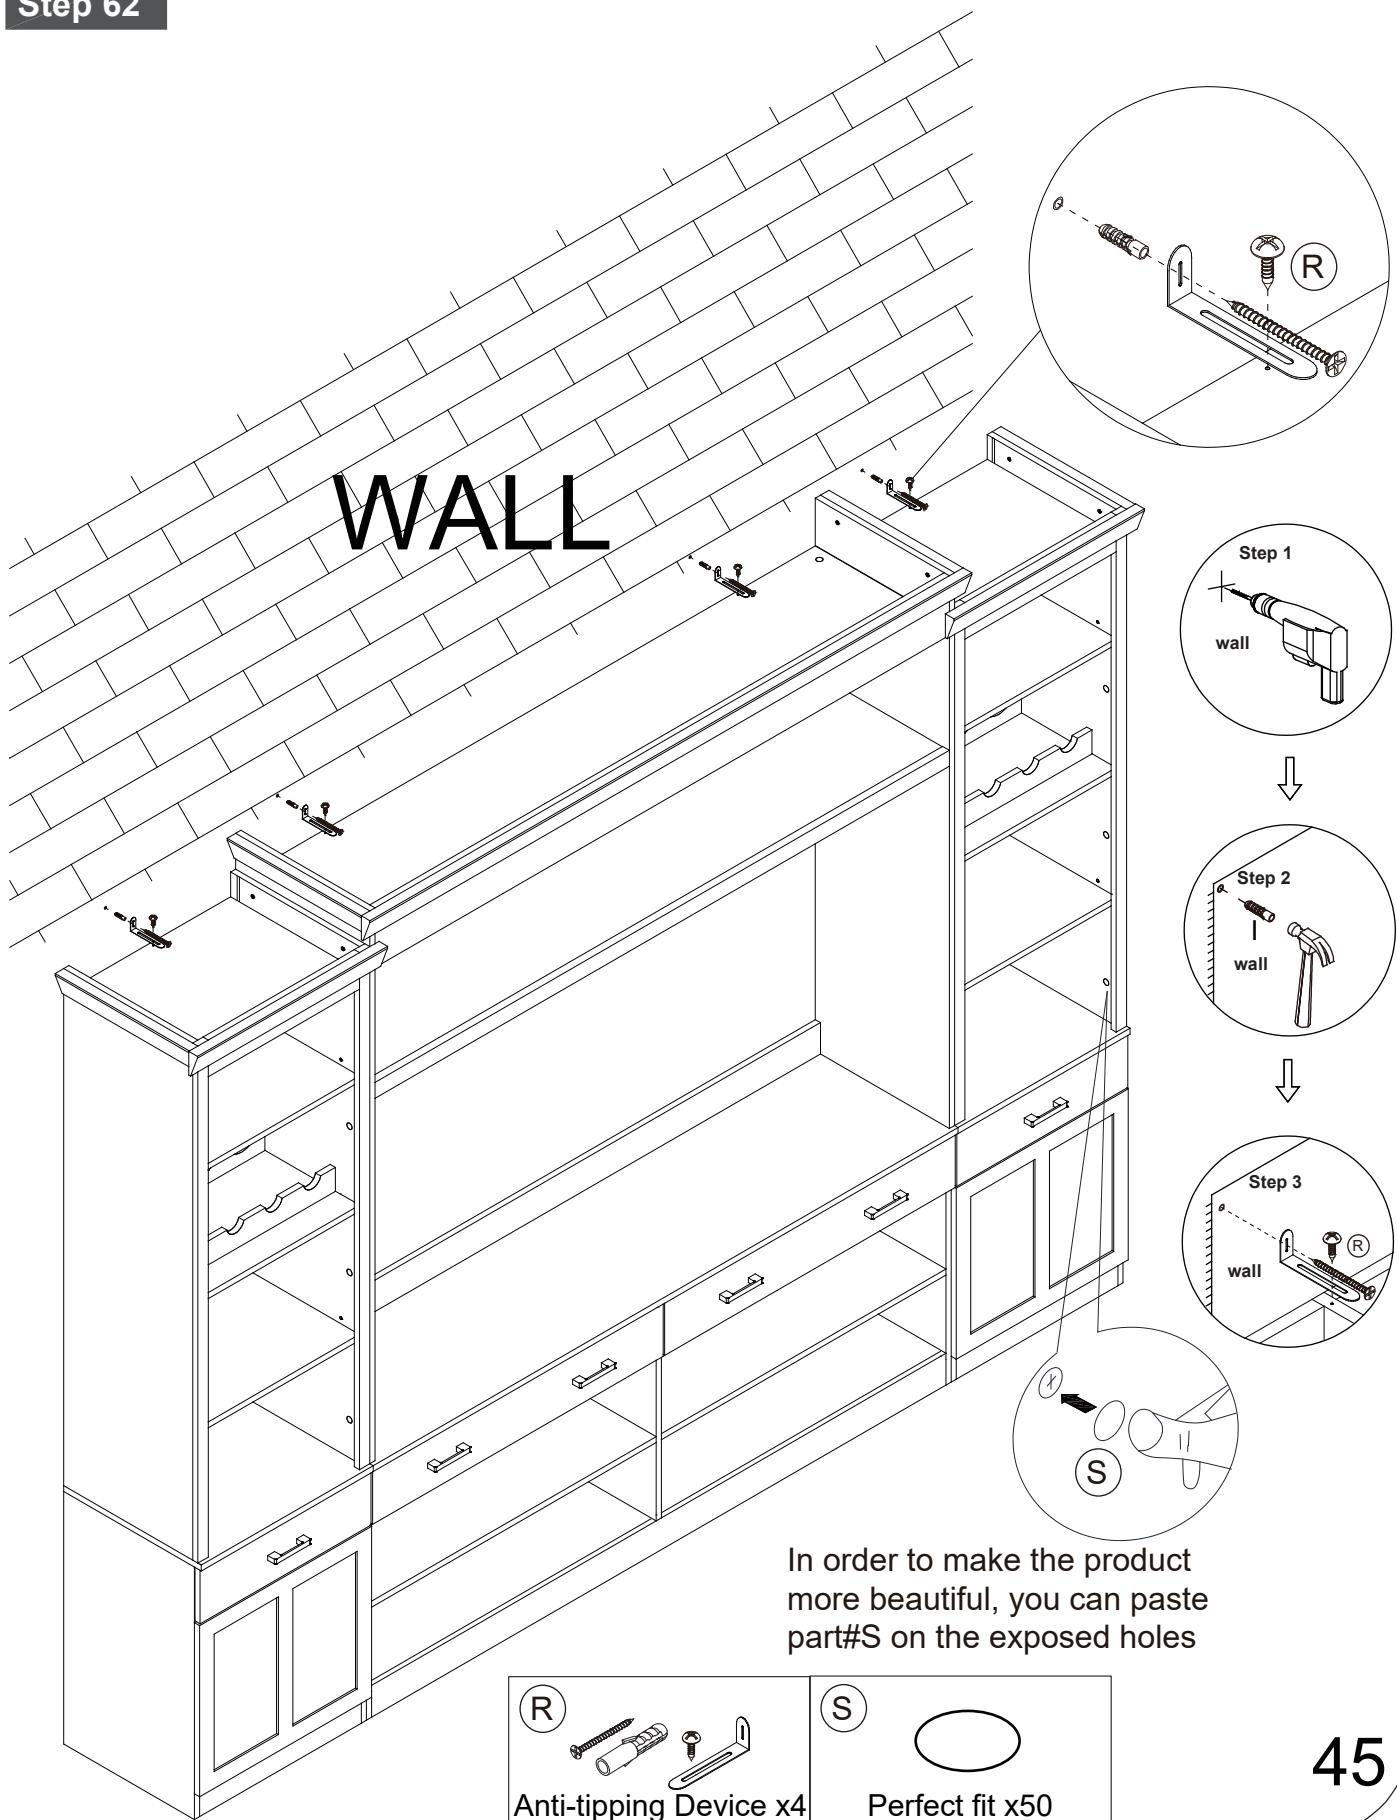

# Assembly Instructions

Step 63

