


ASSEMBLY INSTRUCTIONS

BATH VANITY-CABINET


SKU - N729P373276


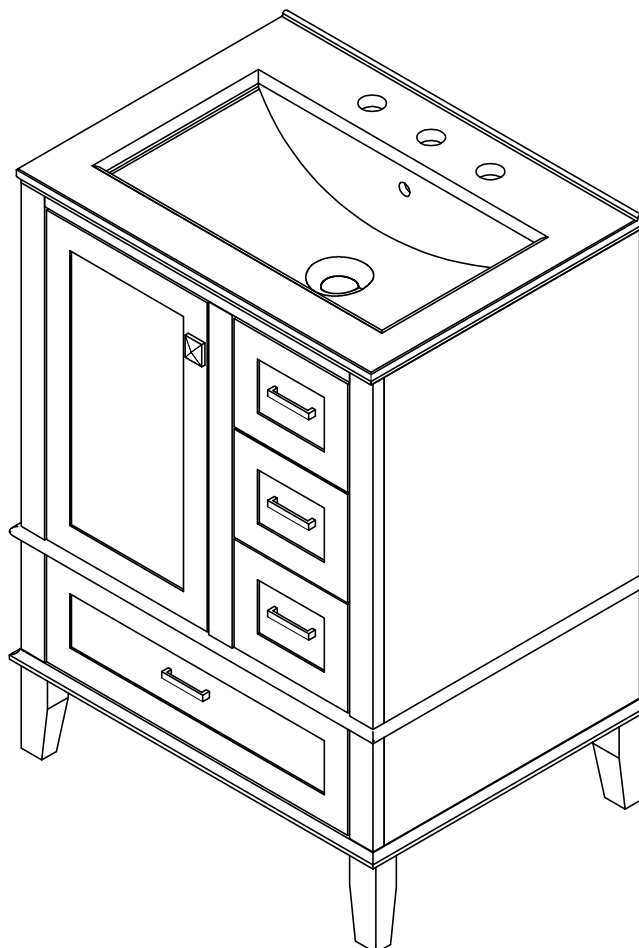


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.

DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED



*Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe!!!
* Please assemble on a clean soft surface to avoid damage.

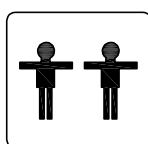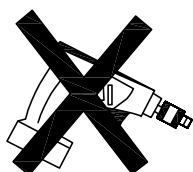


+



Tools Reluired




(Not included)



(Not included)

IMPORTANT:
PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE

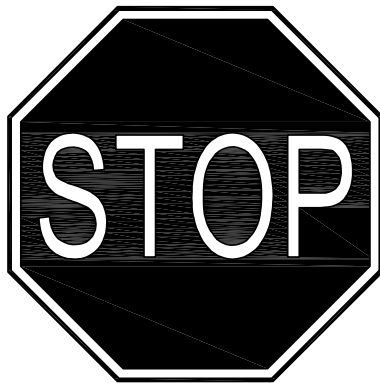

**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.









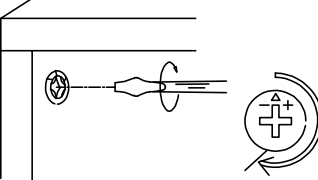
Before Installation

~~Important~~ Please read these instructions fully before starting assembly


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions

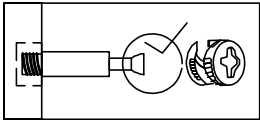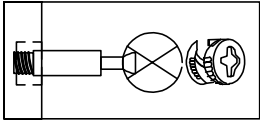
		Diagram A Insert Cam Ball into hole as shown in diagram A.	
		Diagram B Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the cam Lock to be misaligned and unable to interlock properly.	
		Diagram C Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.	
			Connect the panels together.
			ARROW SIGN Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
			To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>

DetailJ View

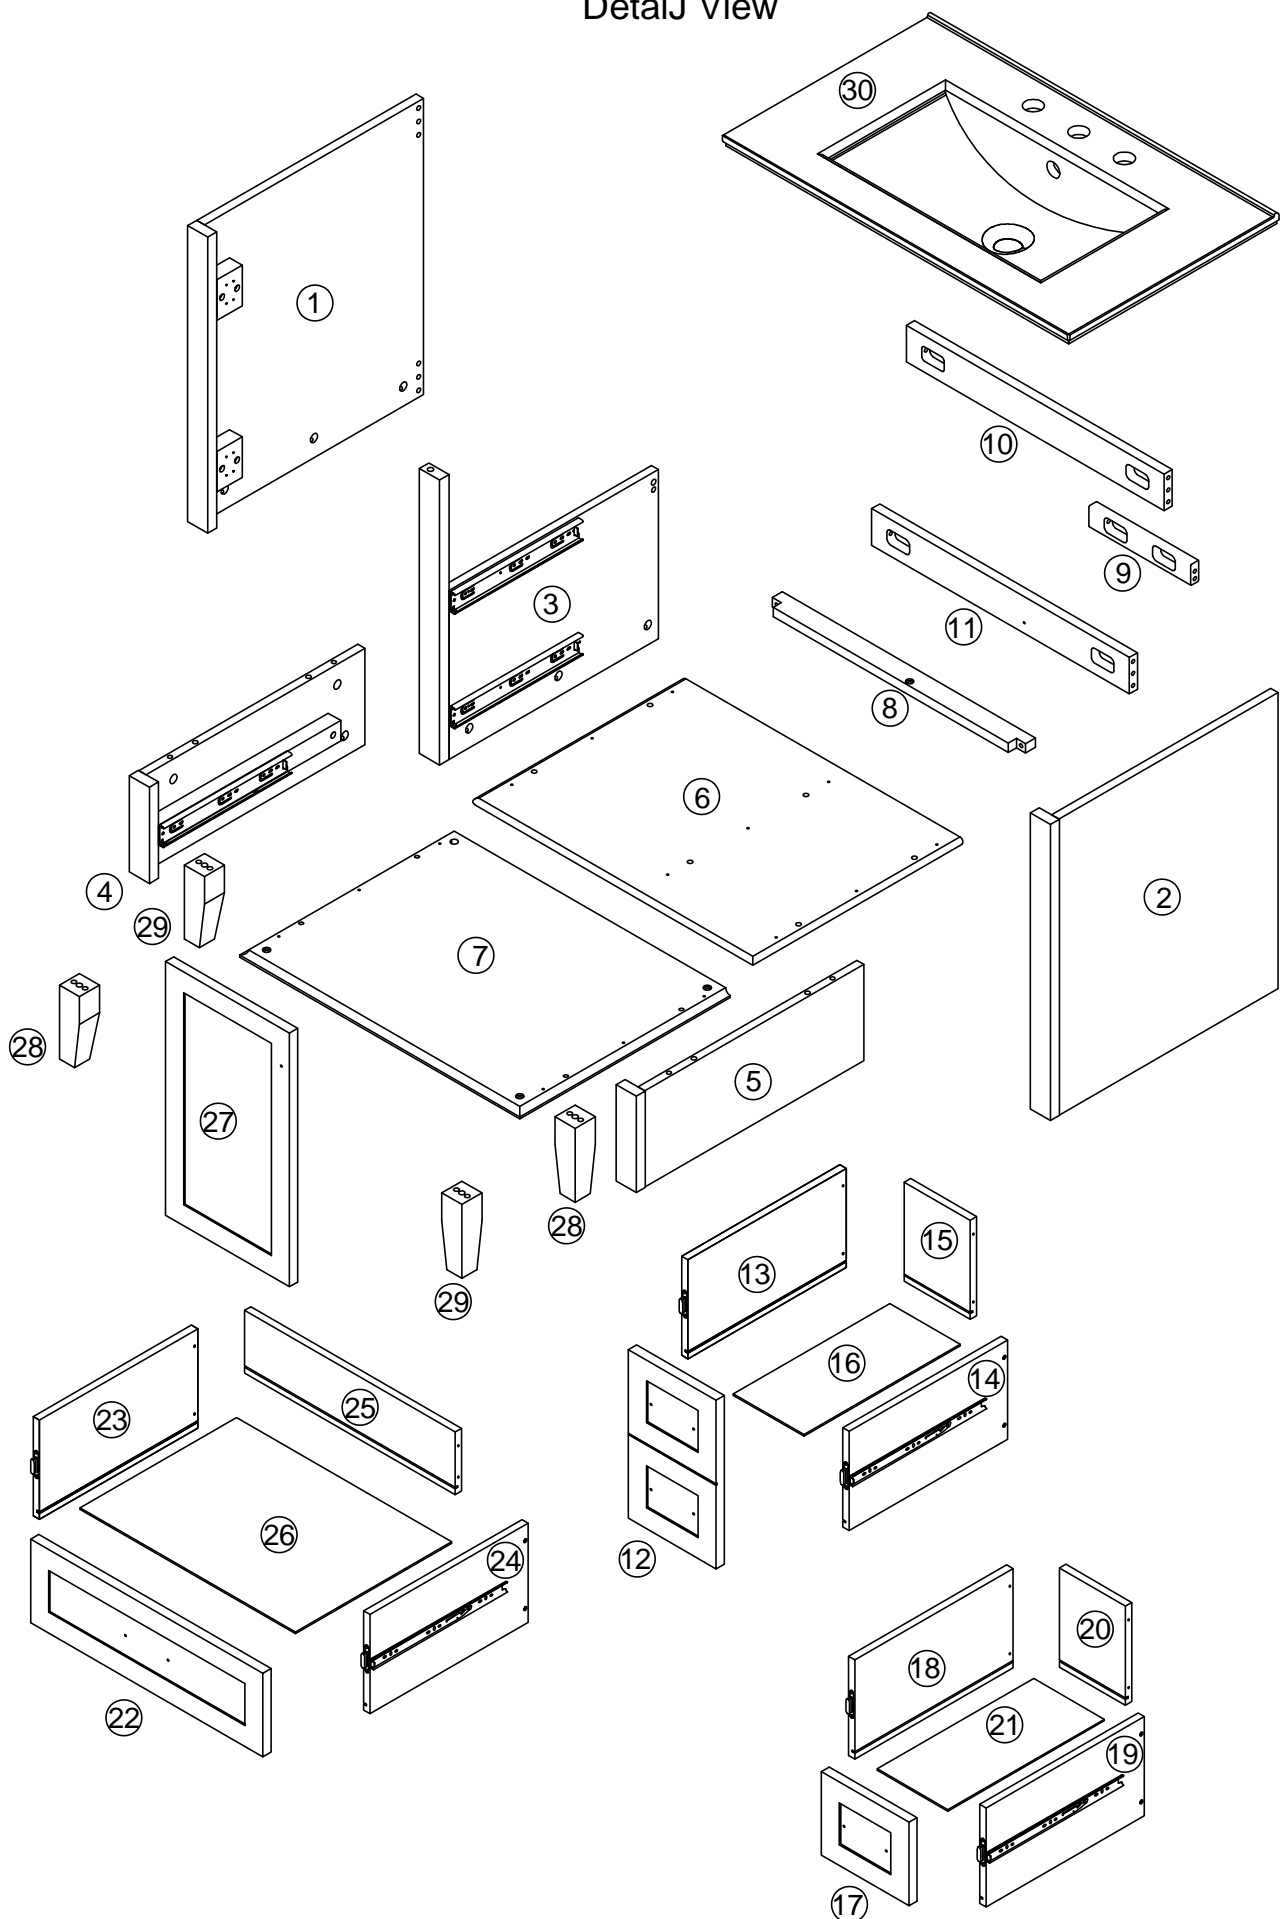


Part Lists N729P373276

1

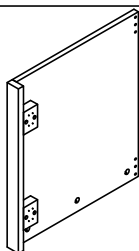


Side Panel (L) - 1pc

8

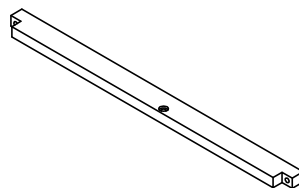


Front Crossbar Top - 1pc

2

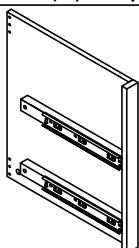


Side Panel (R) - 1pc

9




Rear Crossbar Mid - 1pc

3

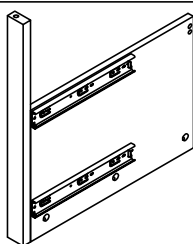


Panel Mid - 1pc

10

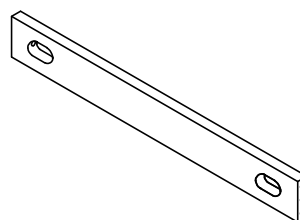


Rear Crossbar Top - 1pc

4

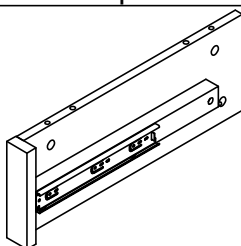


Side Panel (L) - 1pc

11

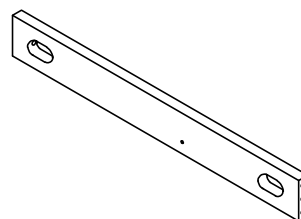


Rear Crossbar Bottom - 1pc

5

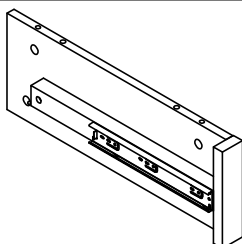


Side Panel (R) - 1pc

12




Bottom Drawer Face 1 - 1pc

6

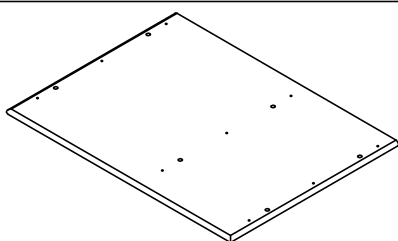


Frame Mid - 1pc

13

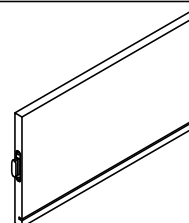


Bottom Drawer Panel Side 1 (L)- 1pc

7

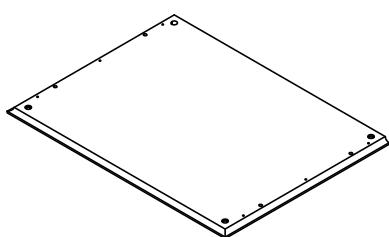

Frame Bottom - 1pc


14

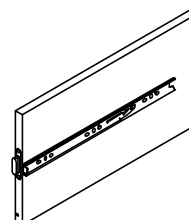

Bottom Drawer Panel Side 1 (R) - 1pc


Part Lists N729P373276

15




Bottom Drawer Panel Rear 1 - 1pc

22

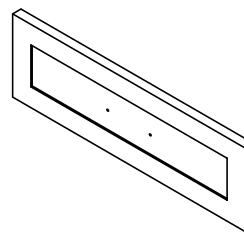


Bottom Drawer Face 3 - 1pc

16

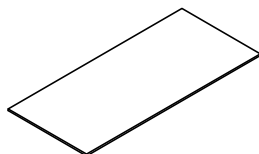


Panel Bottom 1 - 1pc

23

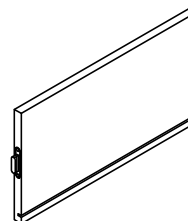


Bottom Drawer Panel Side 3 (L)- 1pc

17




Bottom Drawer Face 2 - 1pc

24

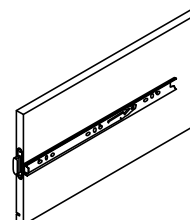


Bottom Drawer Panel Side 3 (R) - 1pc

18

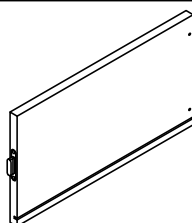


Bottom Drawer Panel Side 2 (L)- 1pc

25

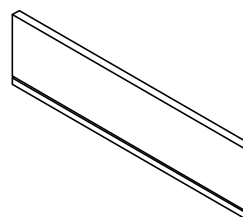


Bottom Drawer Panel Rear 3 - 1pc

19

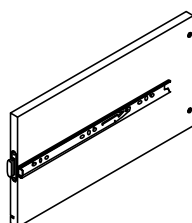


Bottom Drawer Panel Side 2 (R) - 1pc

26

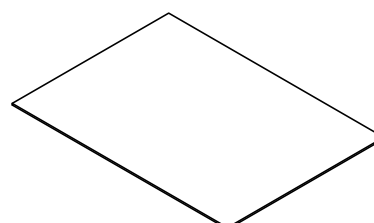


Panel Bottom 3 - 1pc

20




Bottom Drawer Panel Rear 2 - 1pc

27

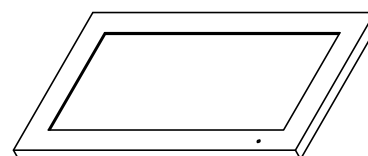

Door Cabinet - 1pc

21

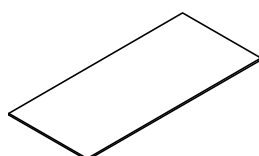

Panel Bottom 2 - 1pc

28



Leg (L) - 2pcs


Part Jists N729P373276

29




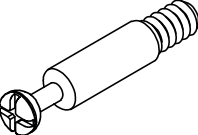



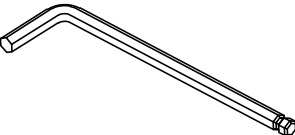










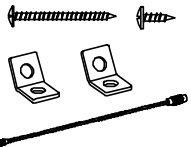

Leg (R) - 2pcs

30

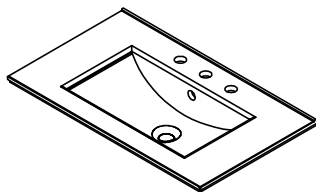




Lavabo - 1pc

Hardware Jists N729P373276


A  $\varnothing 8 \times 20 \text{mm}$ Wood dowel (30pcs)	B  $\varnothing 6 \times 32 \text{mm}$ Three in one bolt (19pcs)	C  $\varnothing 14.5 \times 9.5 \text{mm}$ Three in one locks (19pcs)
D  M6 x 45mm Head bolt (6pcs)	E  Washer (6pcs)	F  K4mm Allen key (1pc)
G  M6 x 30mm Head bolt (7pcs)	H  $\varnothing 8 \times \varnothing 4 \times 25 \text{mm}$ Round head screw (1pc)	I  $\varnothing 10 \times 10 \text{mm}$ Plastic Canopy (12pcs)
J  $\varnothing 8 \times \varnothing 4 \times 50 \text{mm}$ Round head screw (12pcs)	K  Handle(4pcs)	L  M4*20mm Handle screw (9pcs)
M  Handle(1pc)	N  2set  12pcs	O  Support piece (1pc)
P  Anti fall Hardware (2sets)	Q  $\varnothing 8 \times \varnothing 4 \times 25 \text{mm}$ Round head screw (2pcs)	

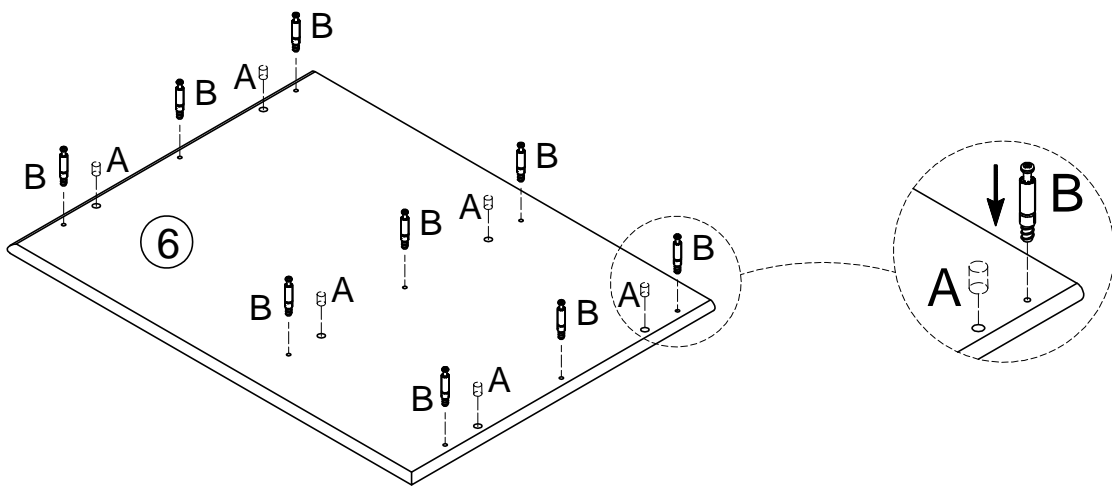
STEP: 1




A	
4PCS	
B	
9PCS	

STEP: 2

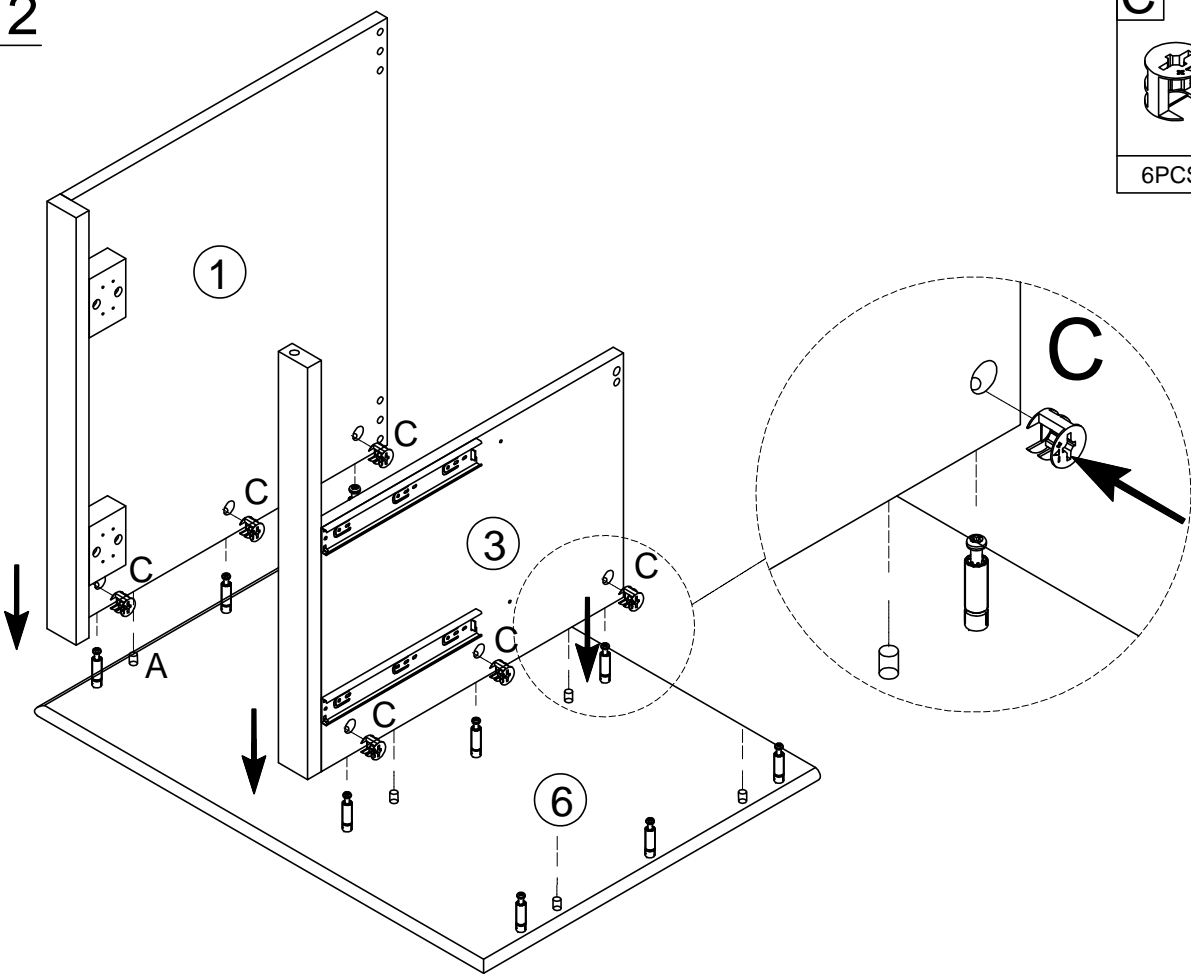


C	
6PCS	


STEP: 3

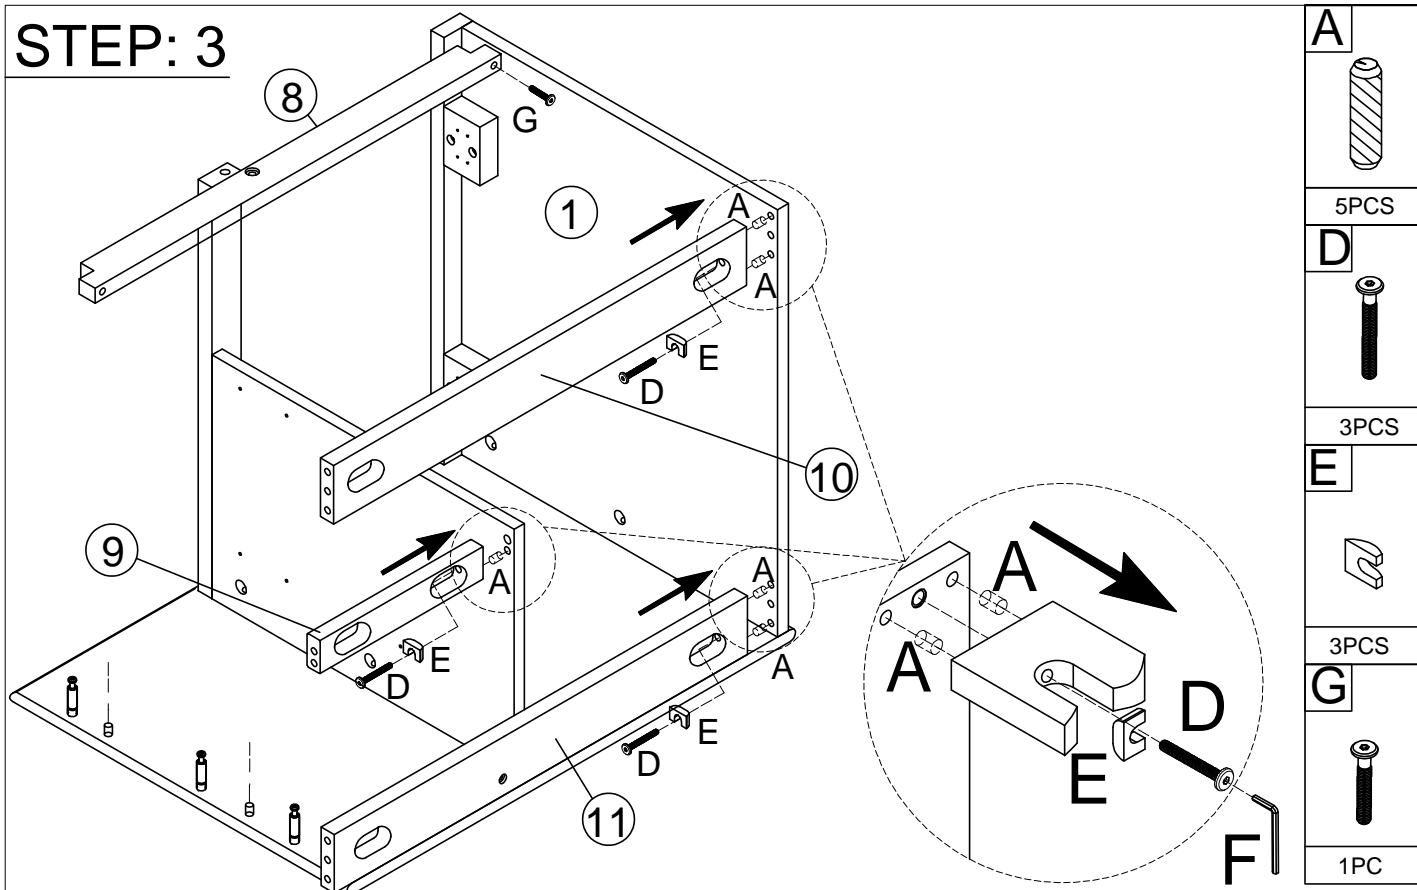

STEP: 4

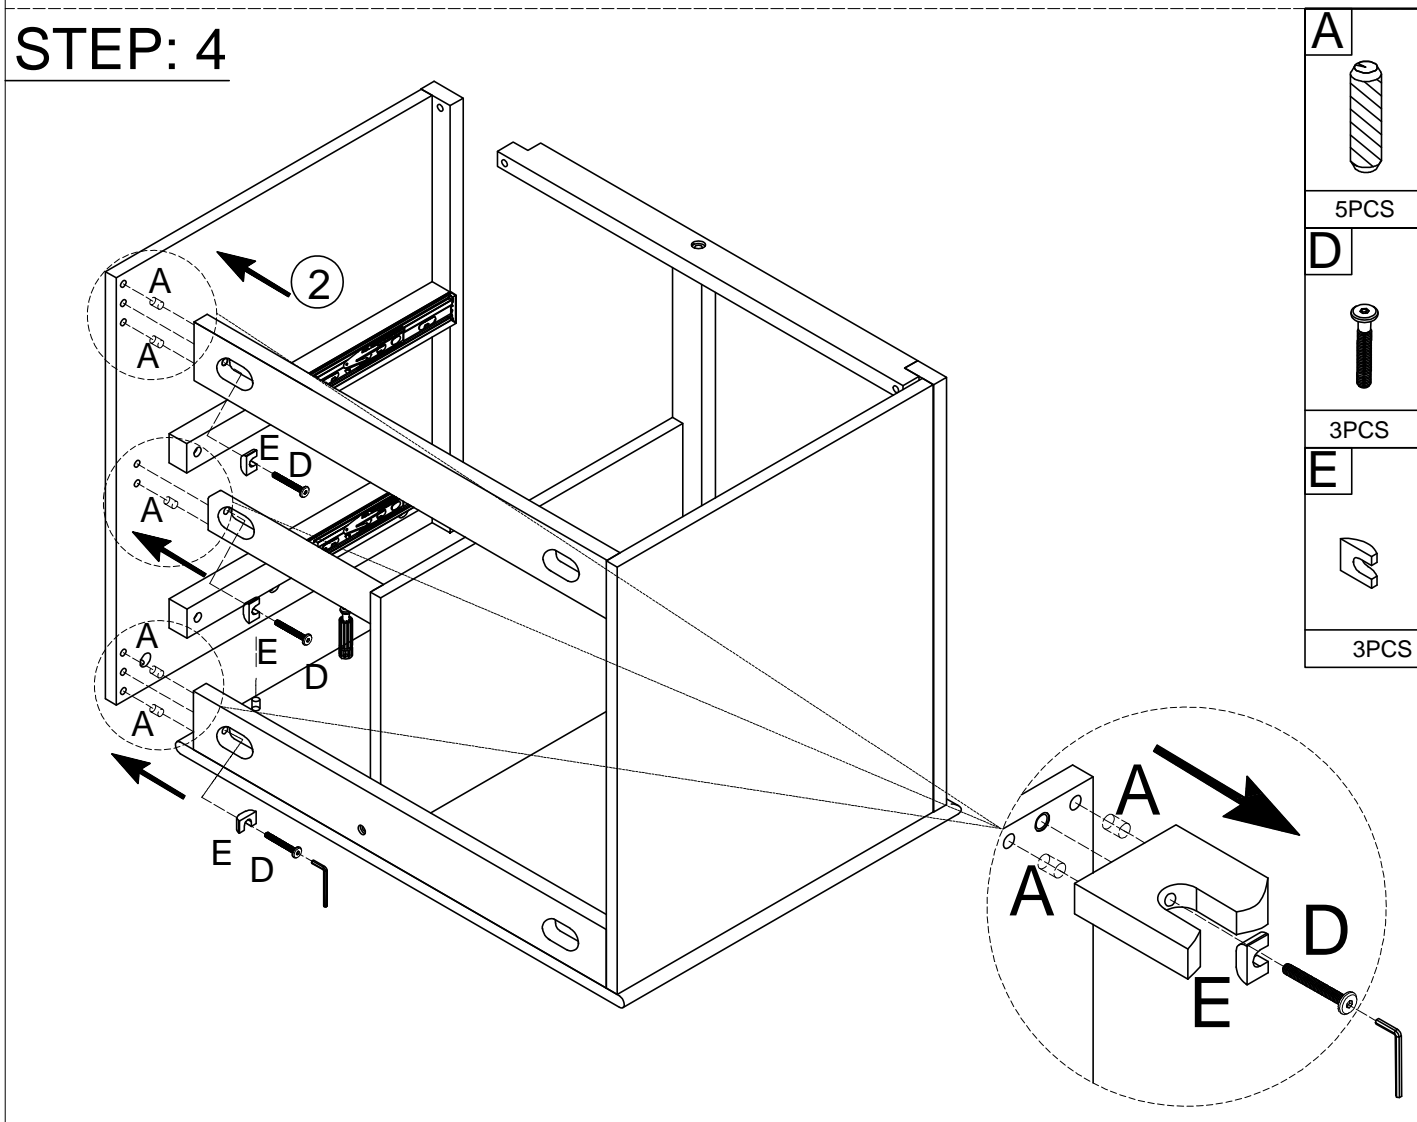

STEP: 5

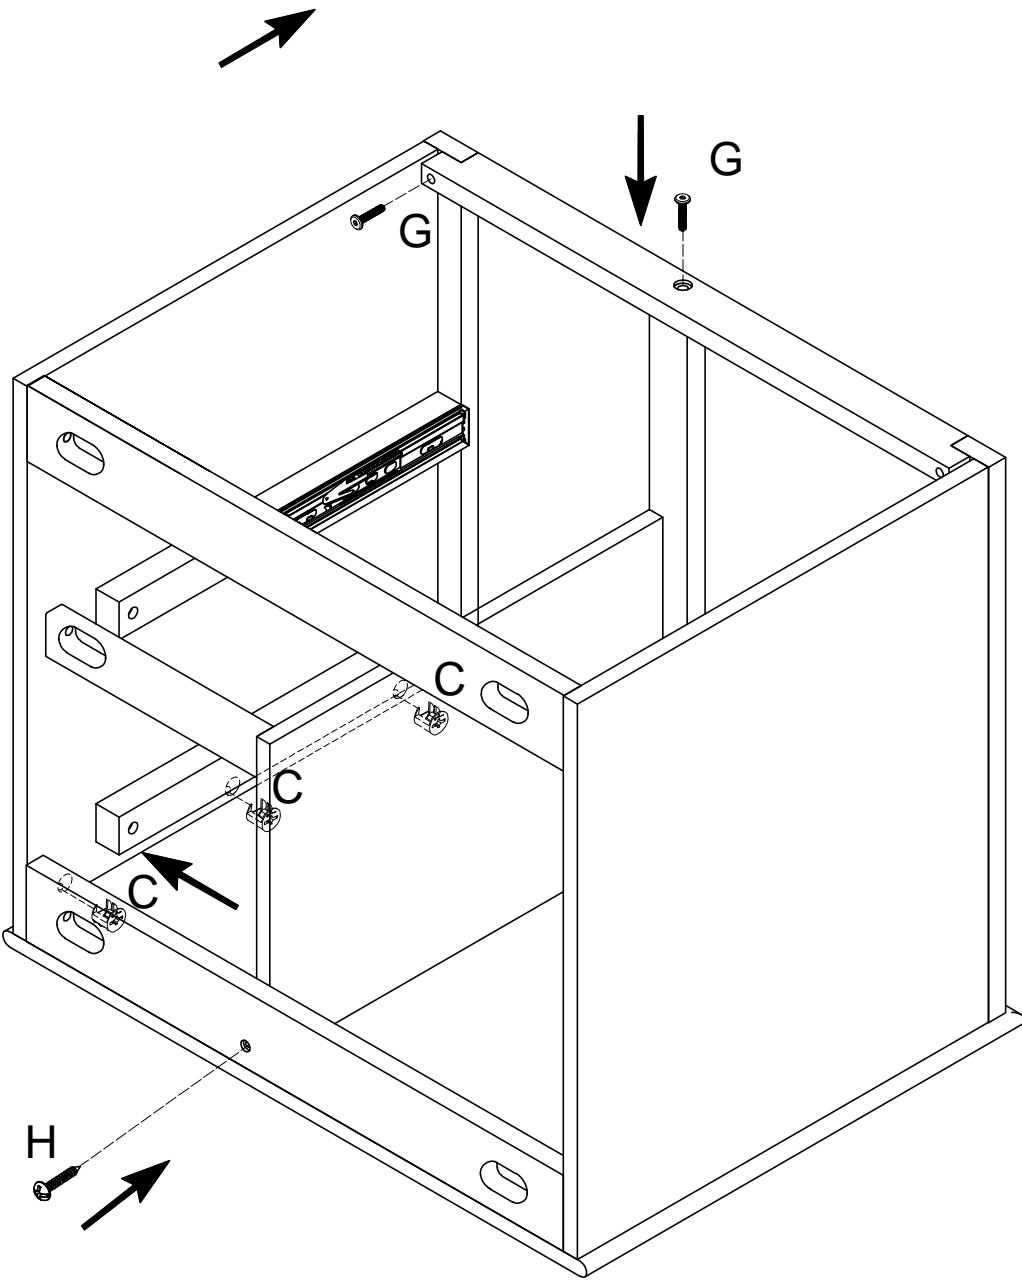

C



3PCS

G




2PCS

H




1PC

STEP: 6

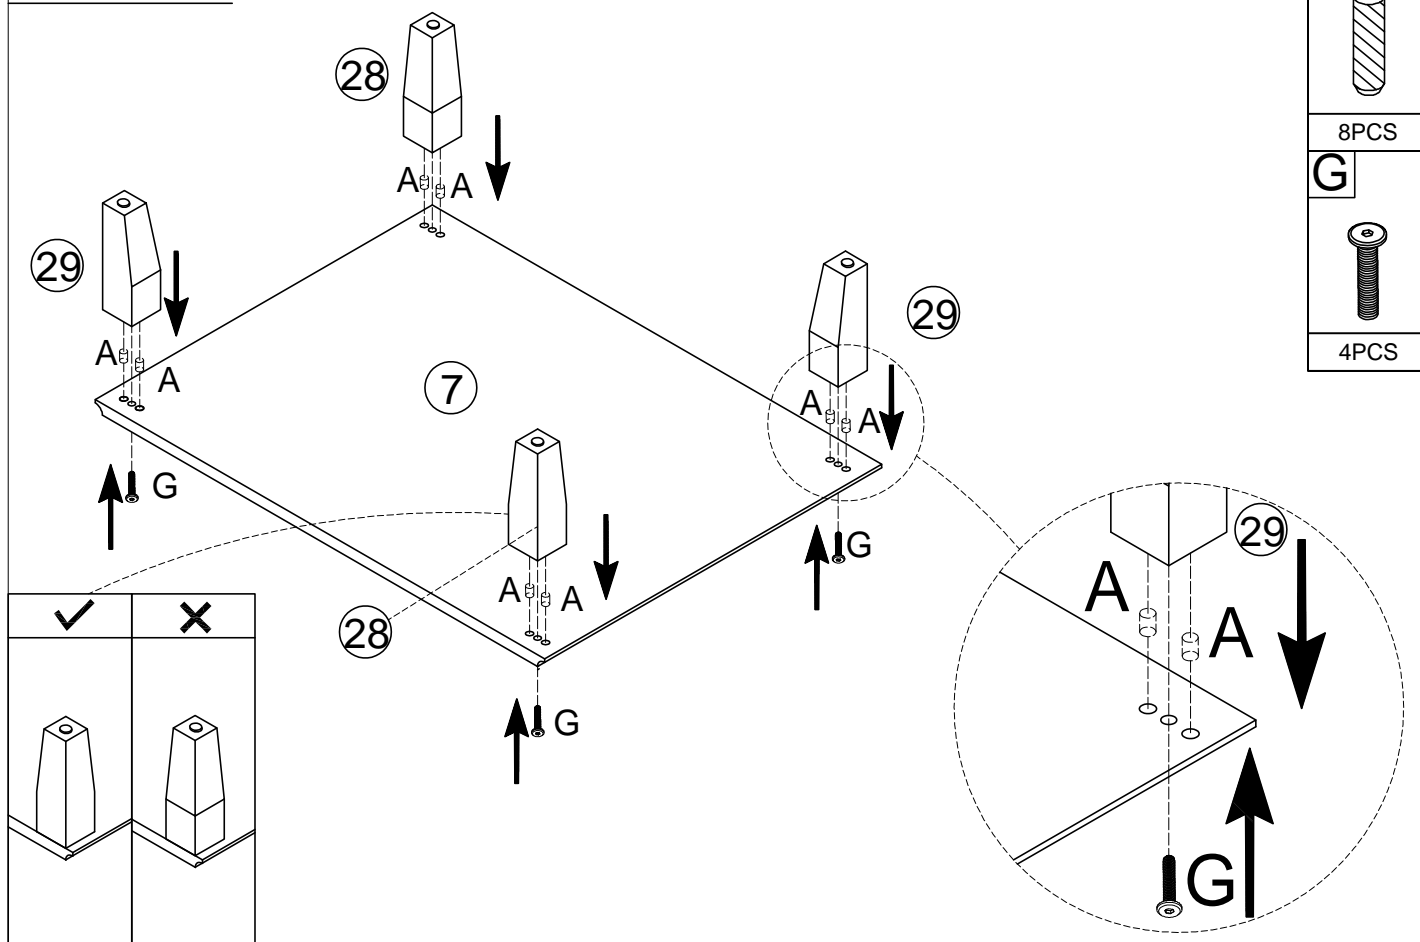


STEP: 7


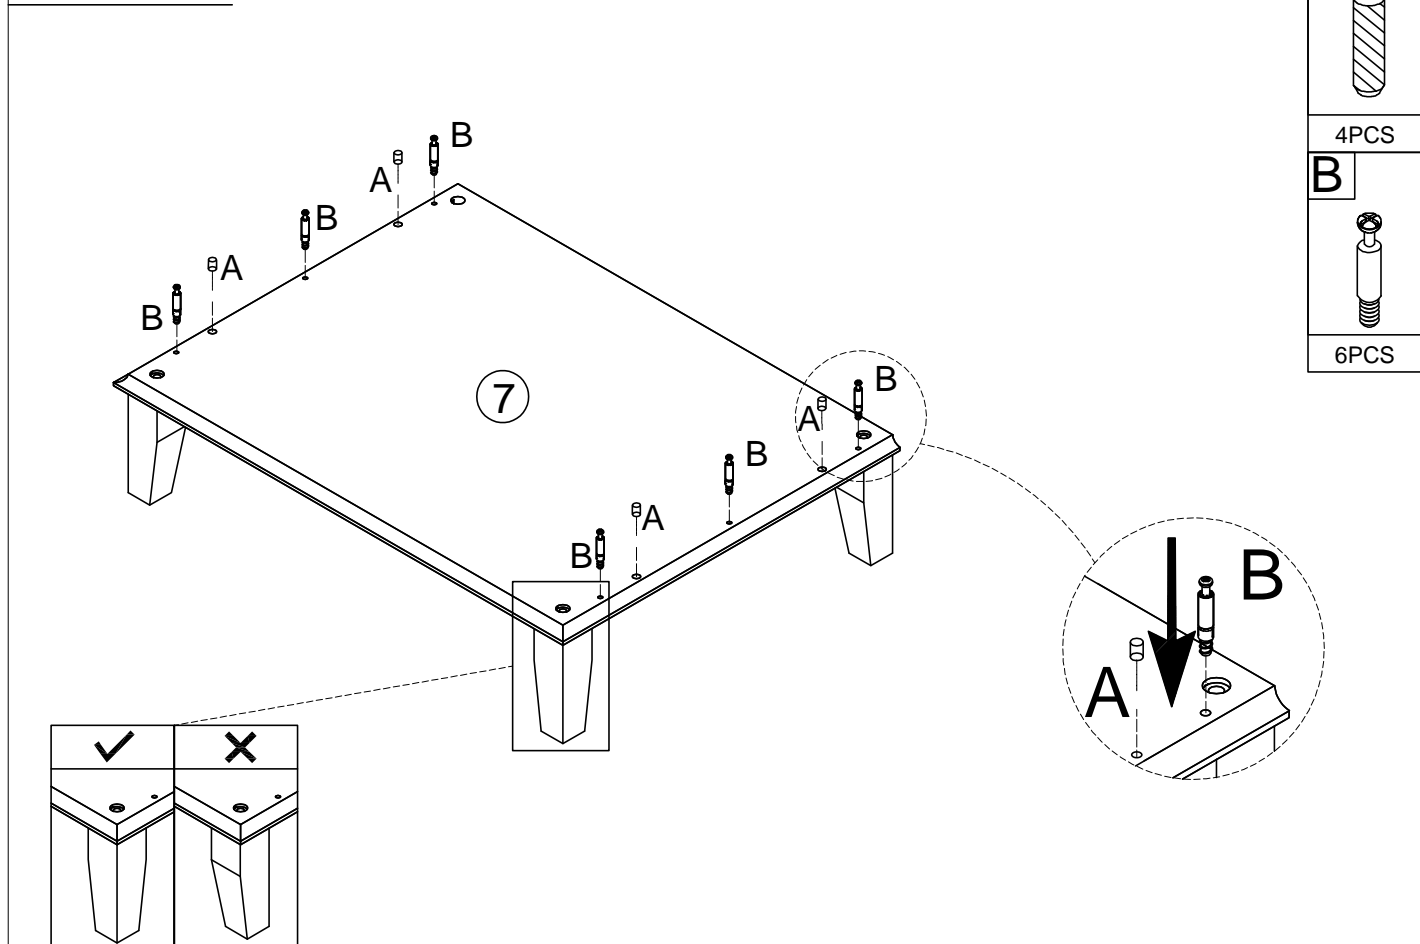


STEP: 8

C




6PCS

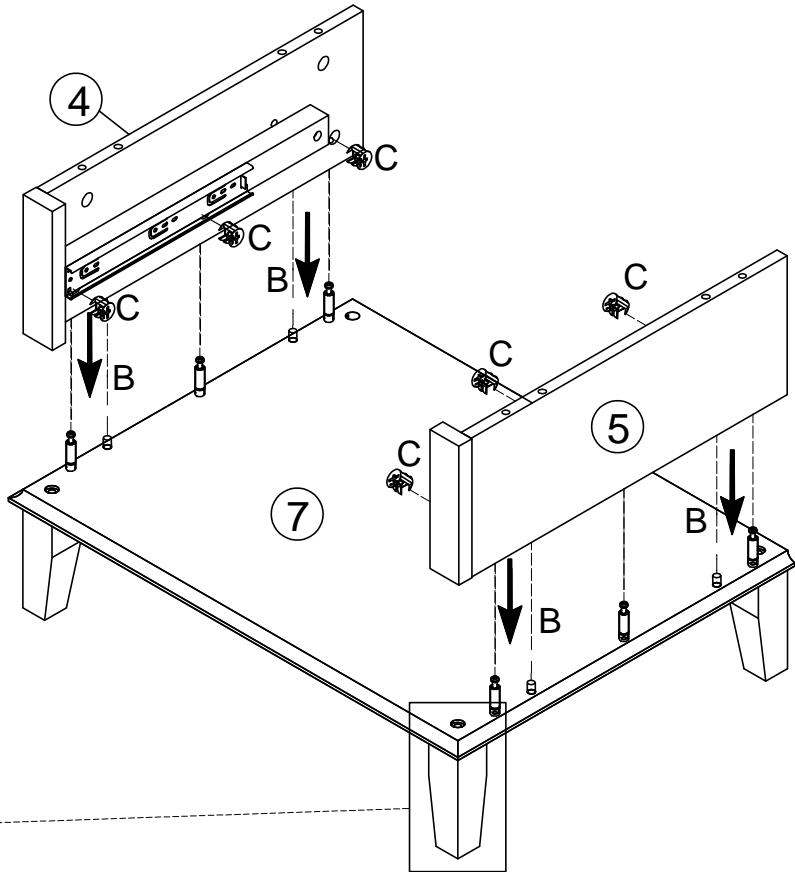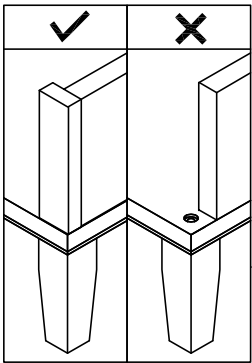


STEP: 9

A




4PCS

B



4PCS

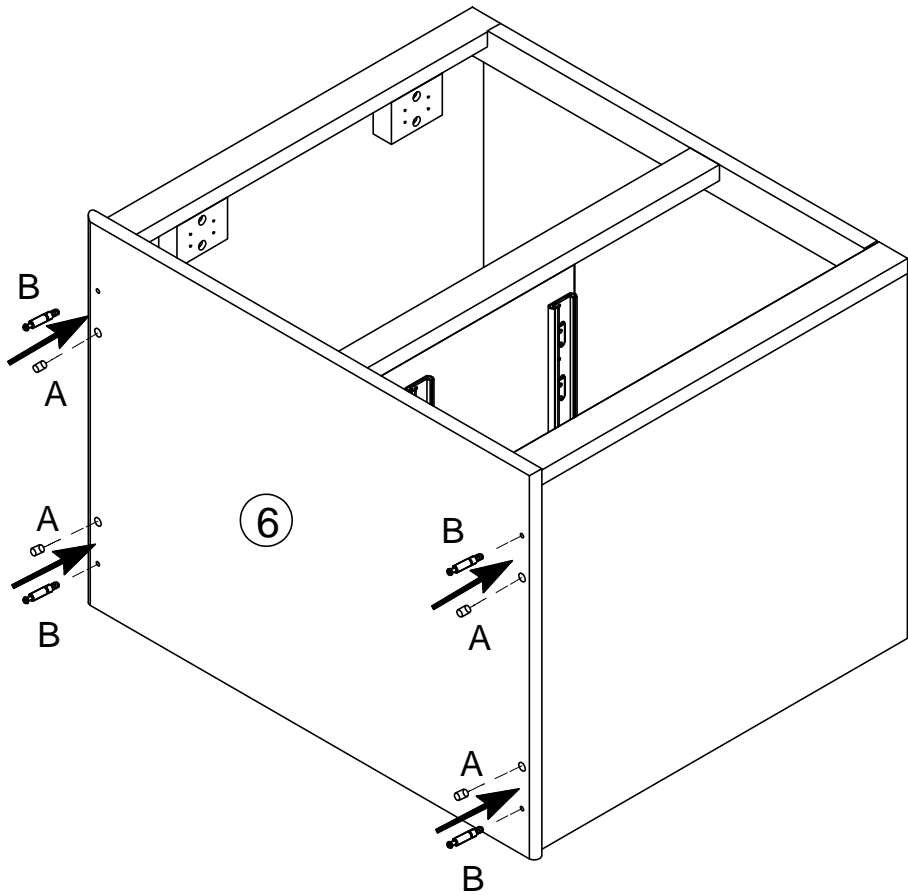


STEP: 10


C




4PCS

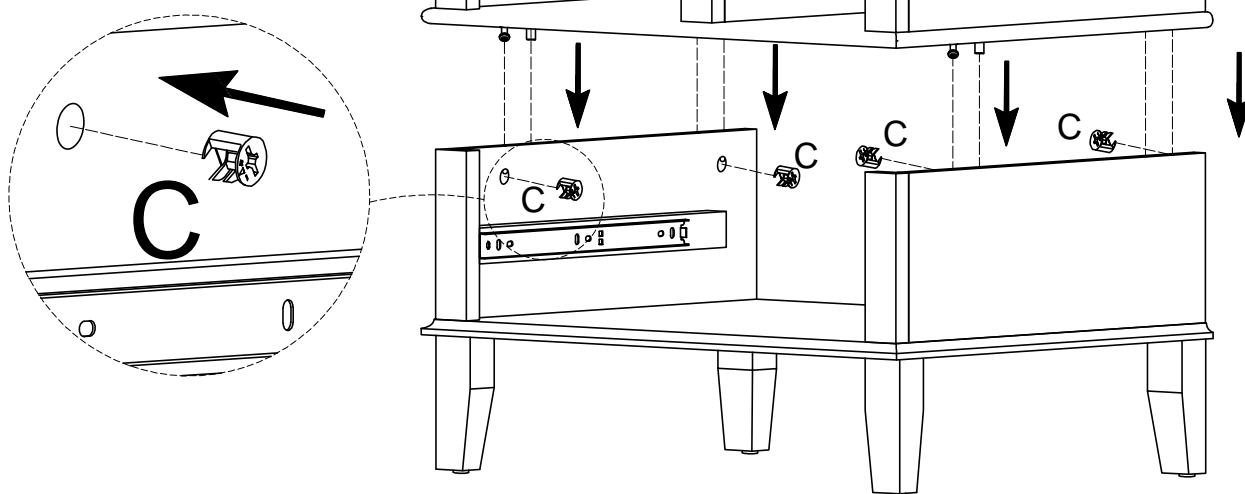

STEP: 11

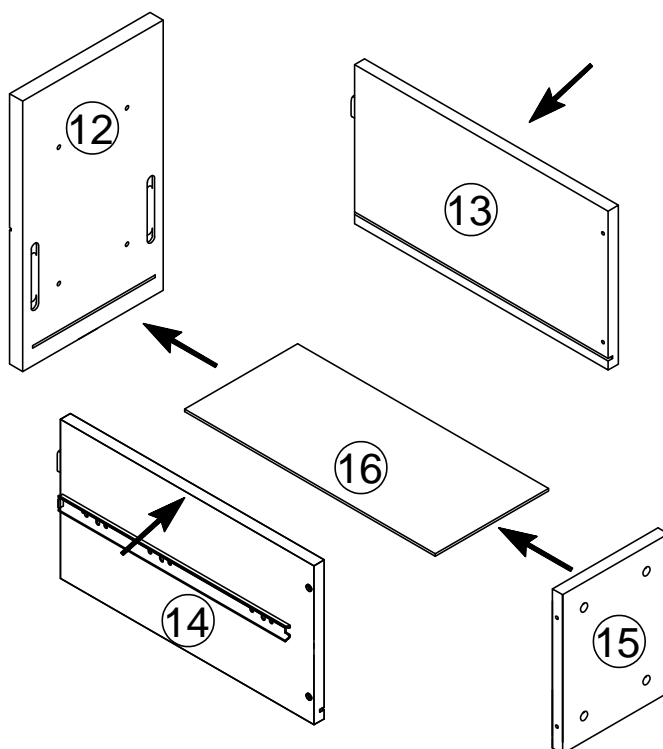


STEP: 12


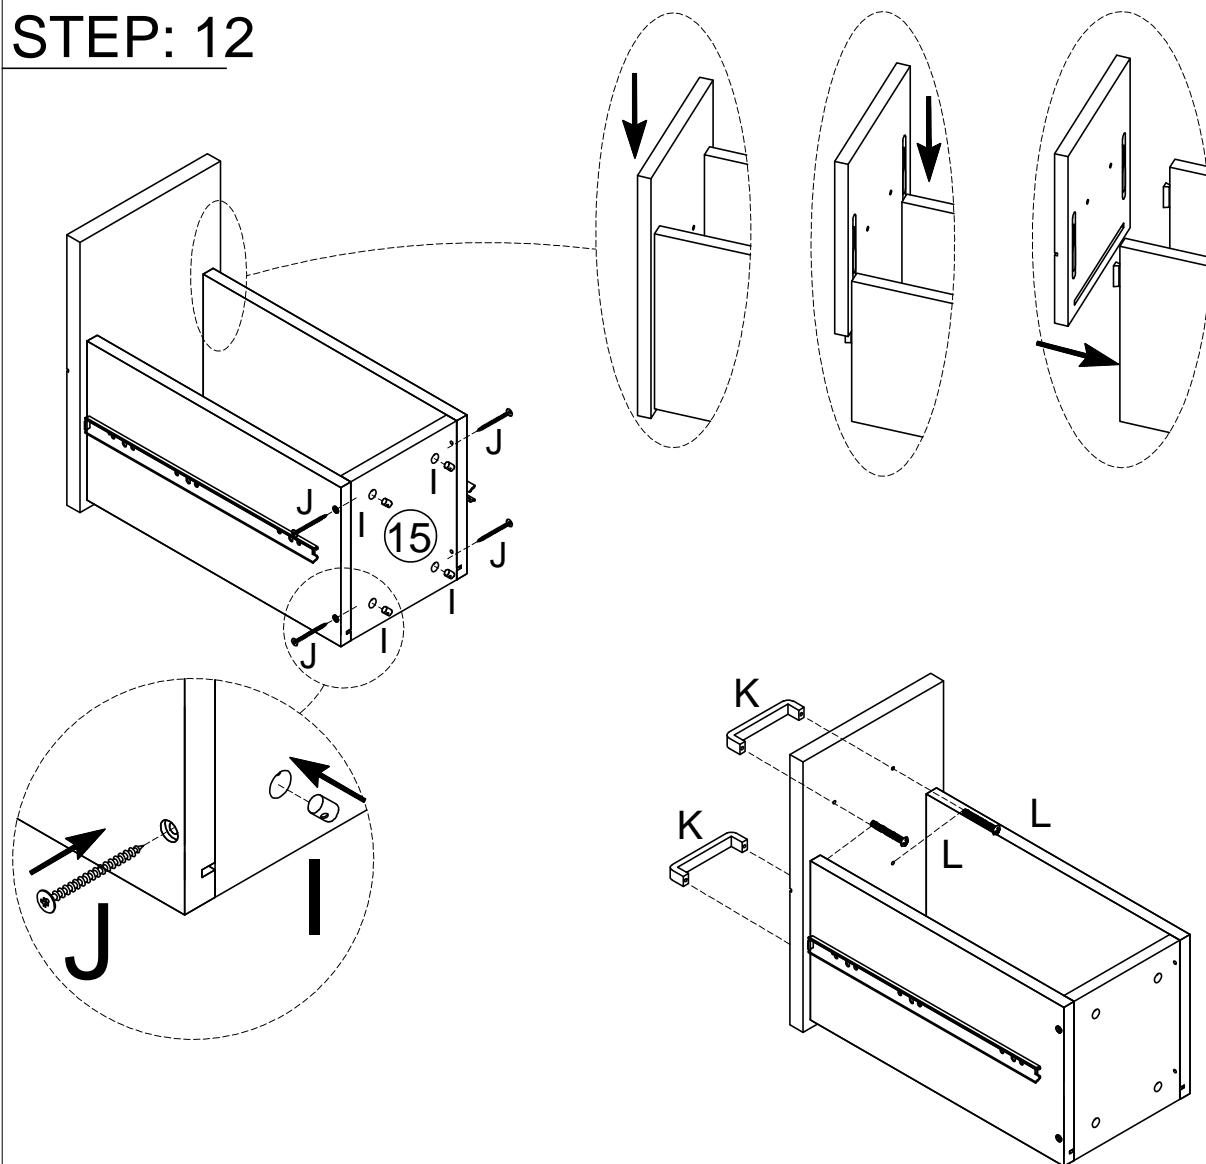


I	
4PCS	
J	
4PCS	
K	
2PCS	
L	
4PCS	


STEP: 13

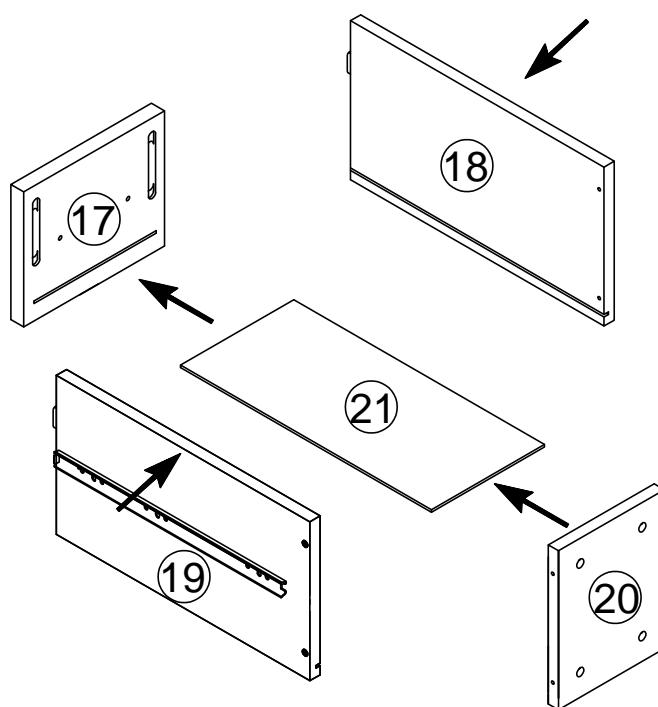


STEP: 14

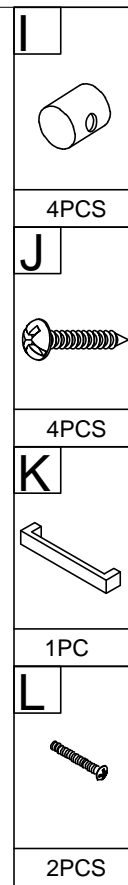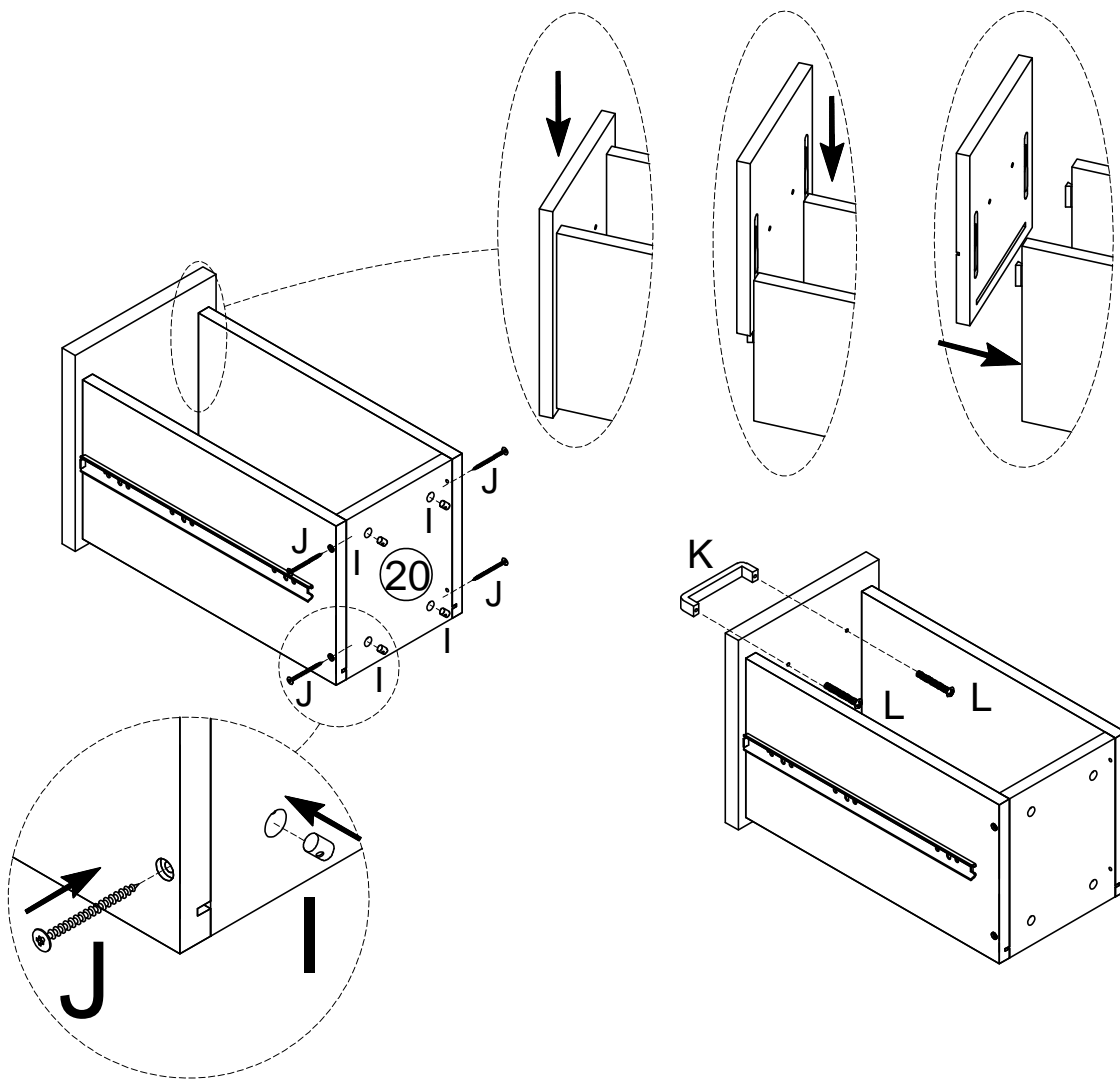


STEP: 15

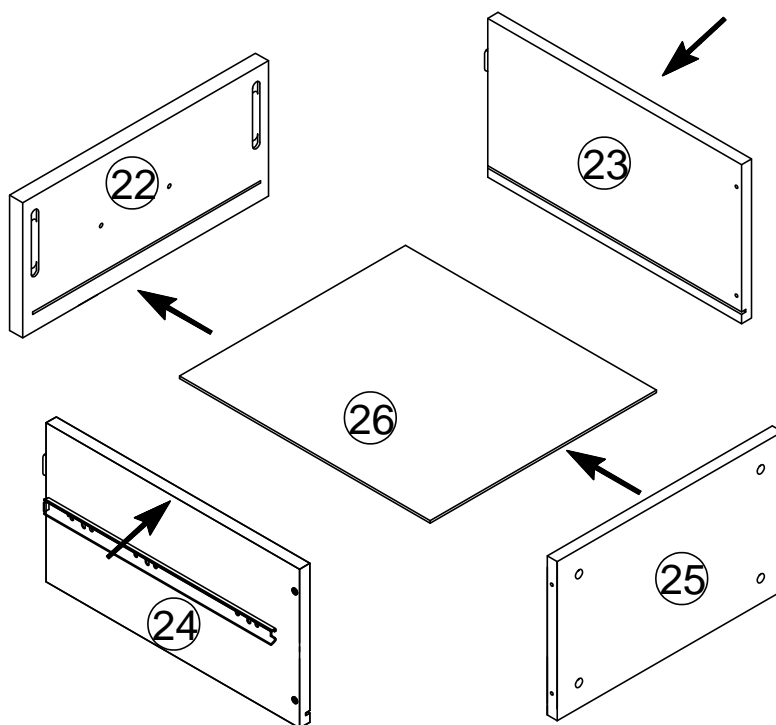


STEP: 16

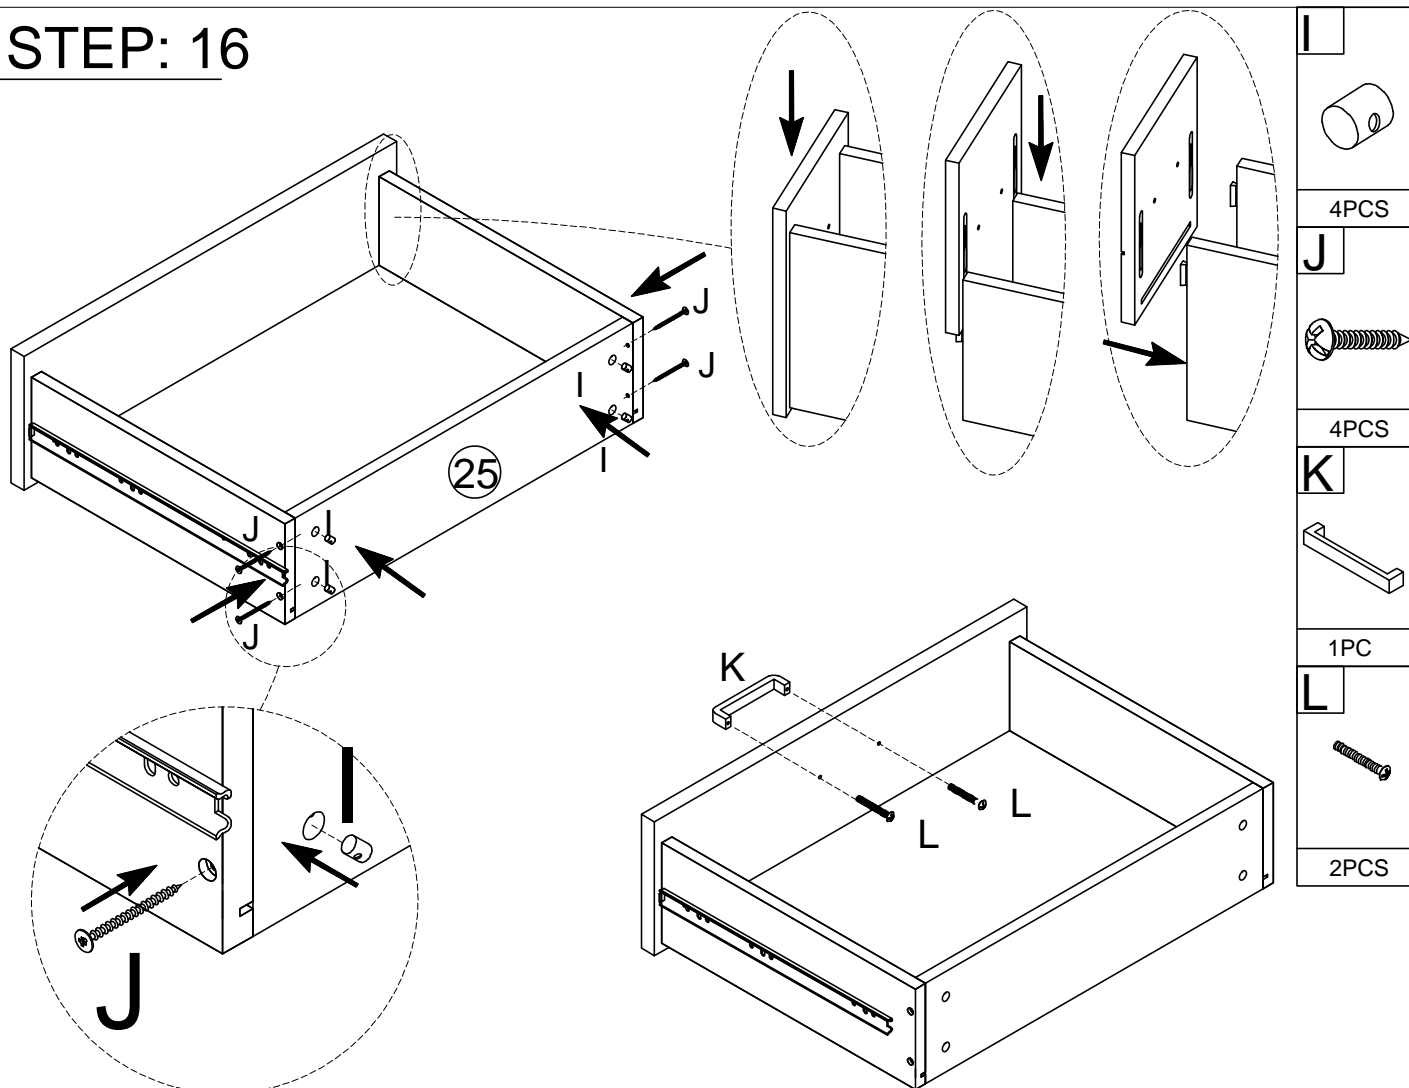

STEP: 17

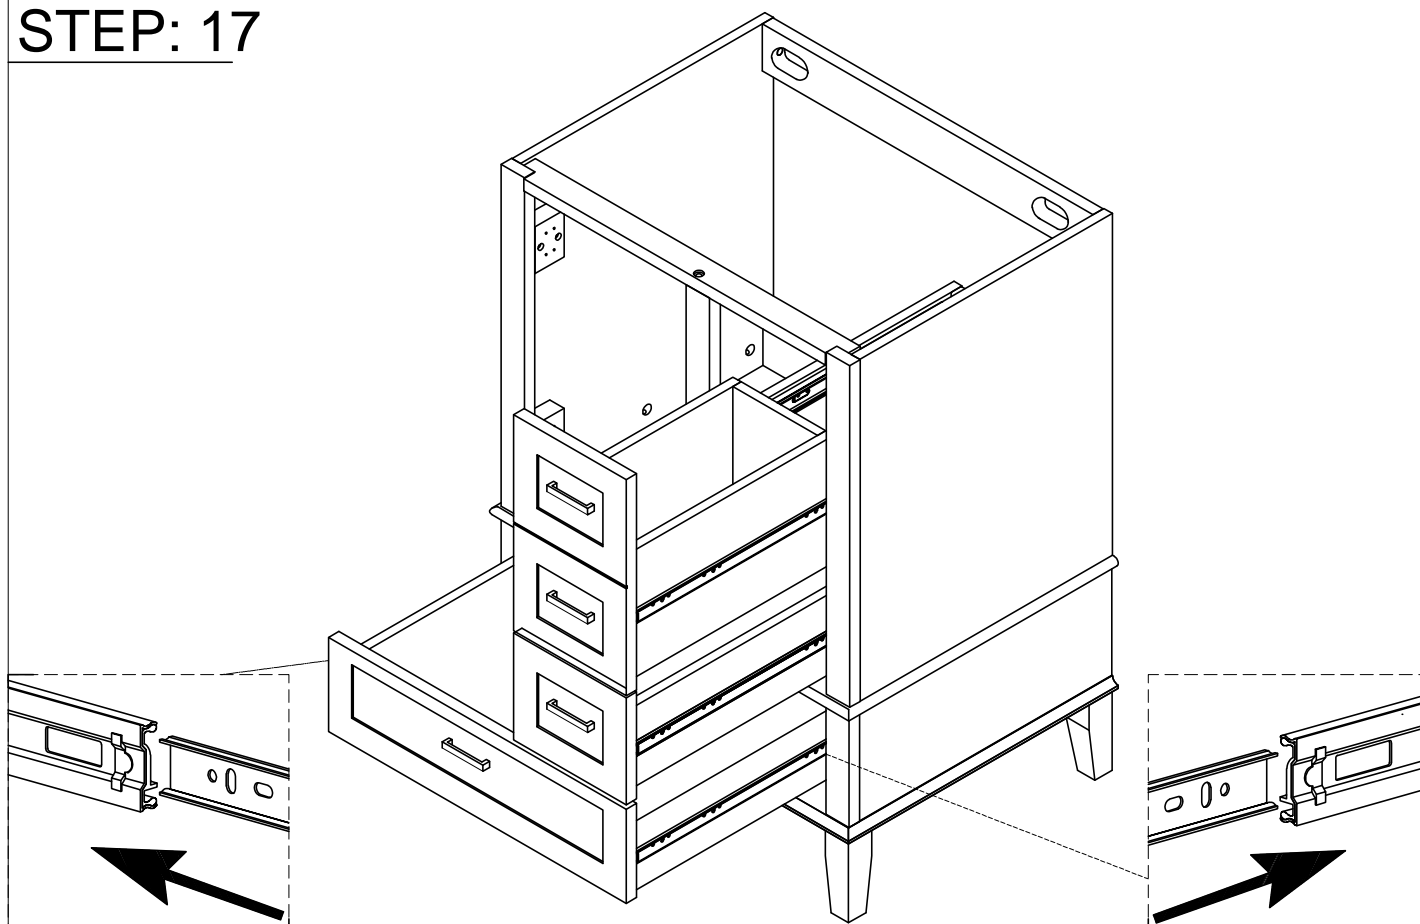

STEP: 18

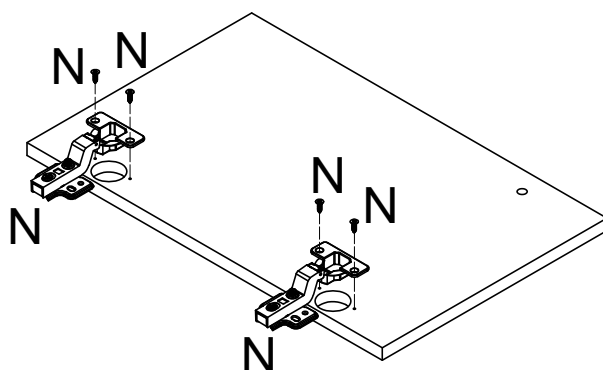

N




2PCS

N



4PCS

STEP: 19

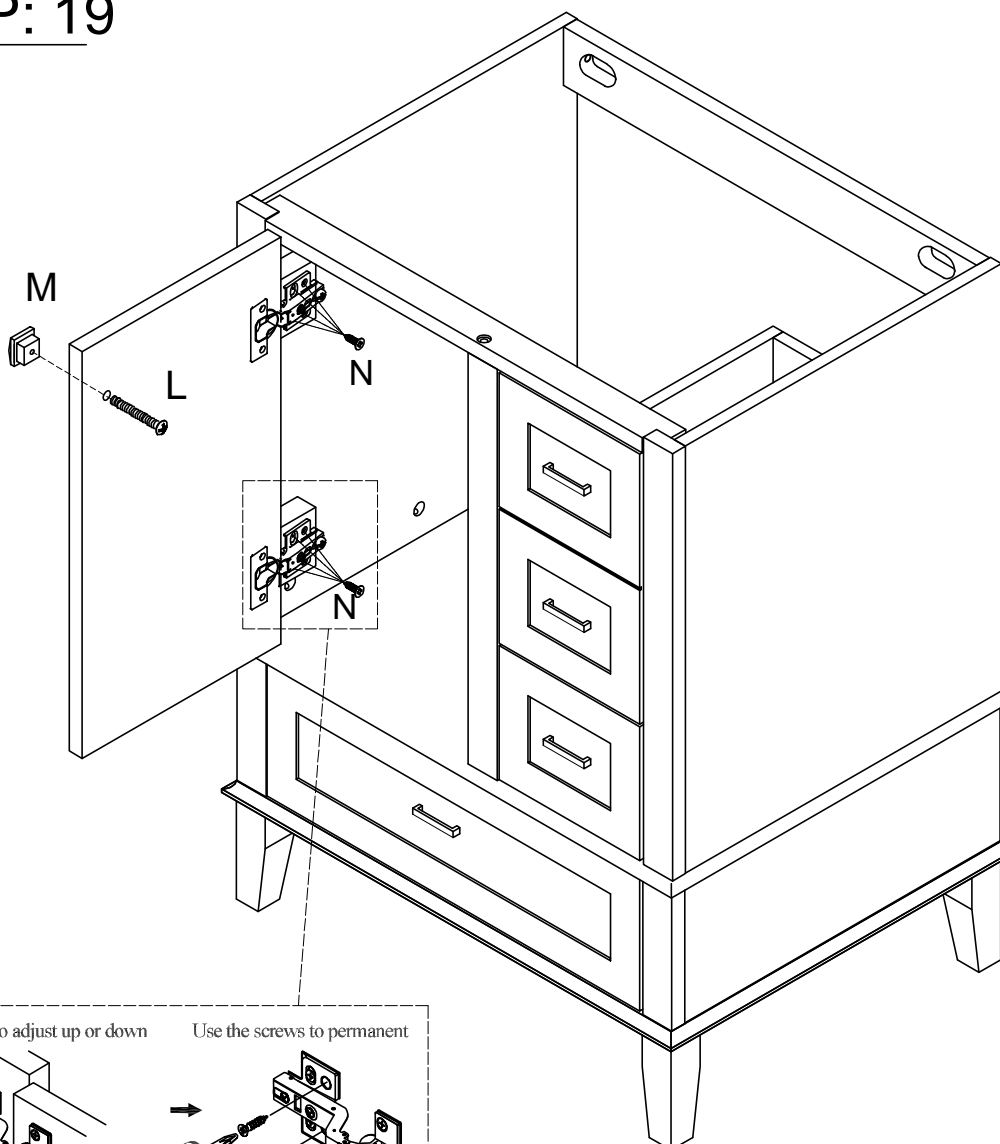

N



8PCS

L



1PC



M



1PC



Use the screws to adjust up or down

Use the screws to permanent

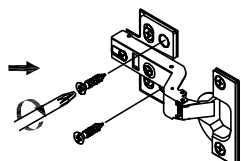
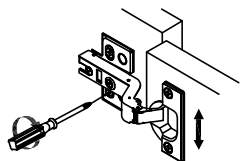


Use the screws to adjust left or right


Use the screws to adjust in or out

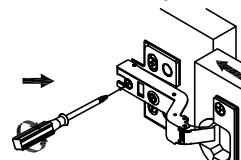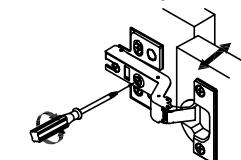

STEP: 20

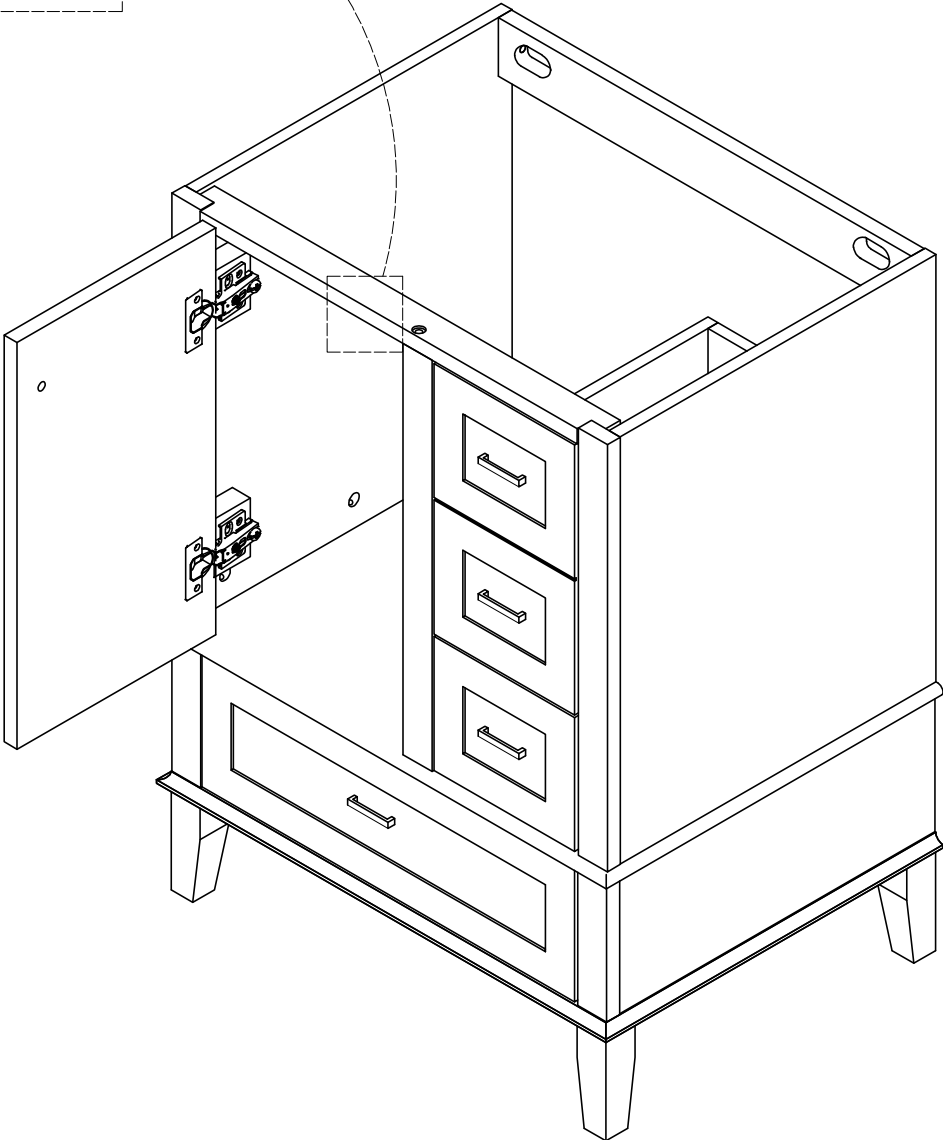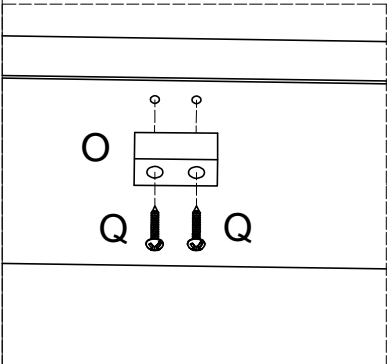

O





1set

Q




2PCS

STEP: 21

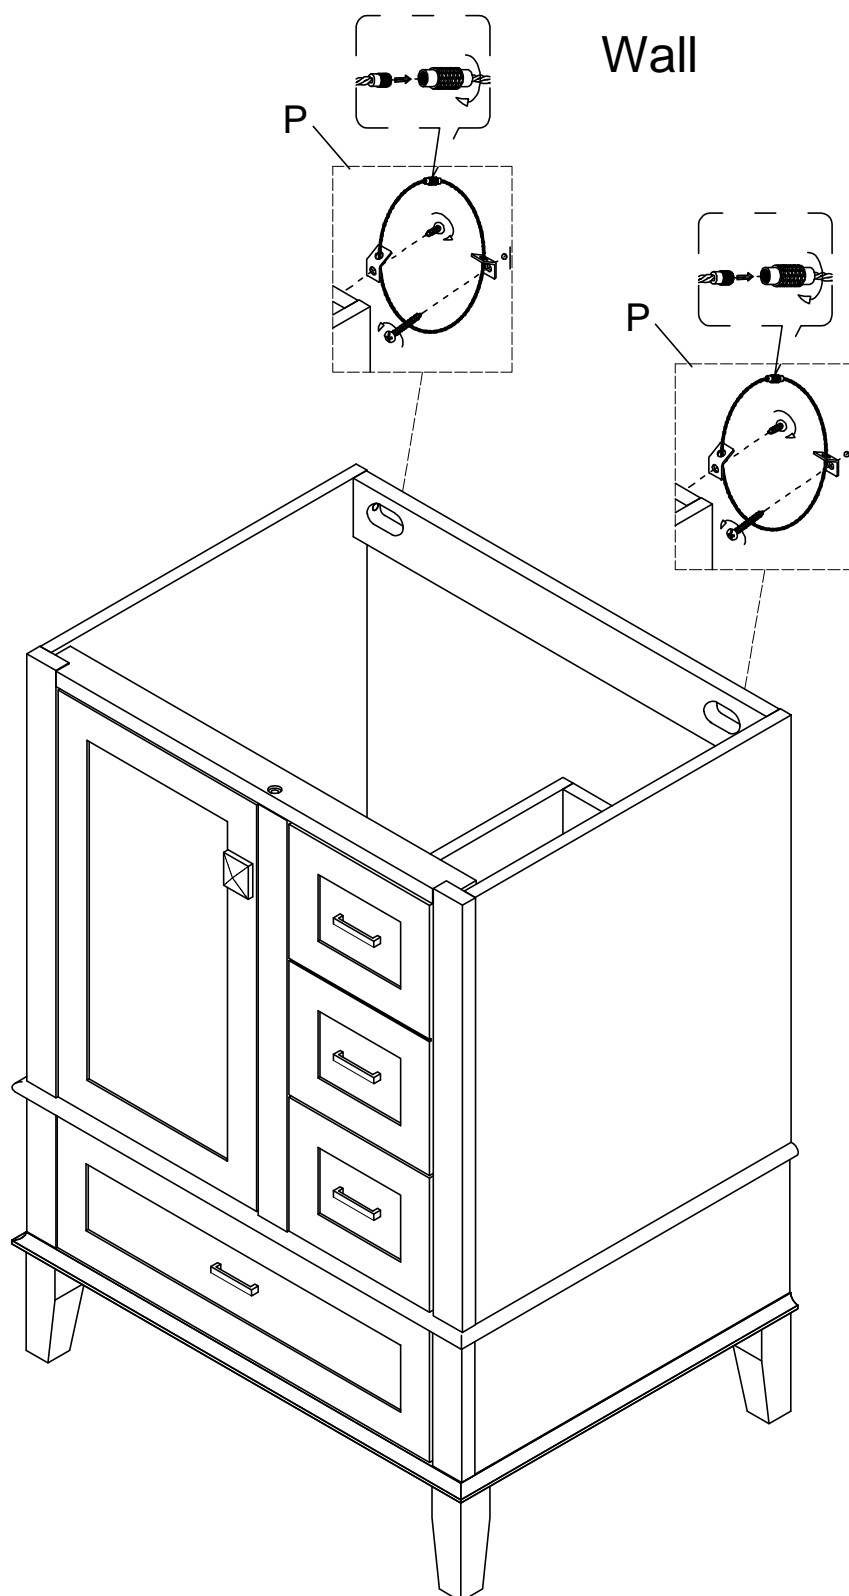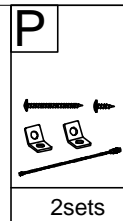



STEP: 22

Install the sink on the cabinet with glue.
Let stand for 24 hours

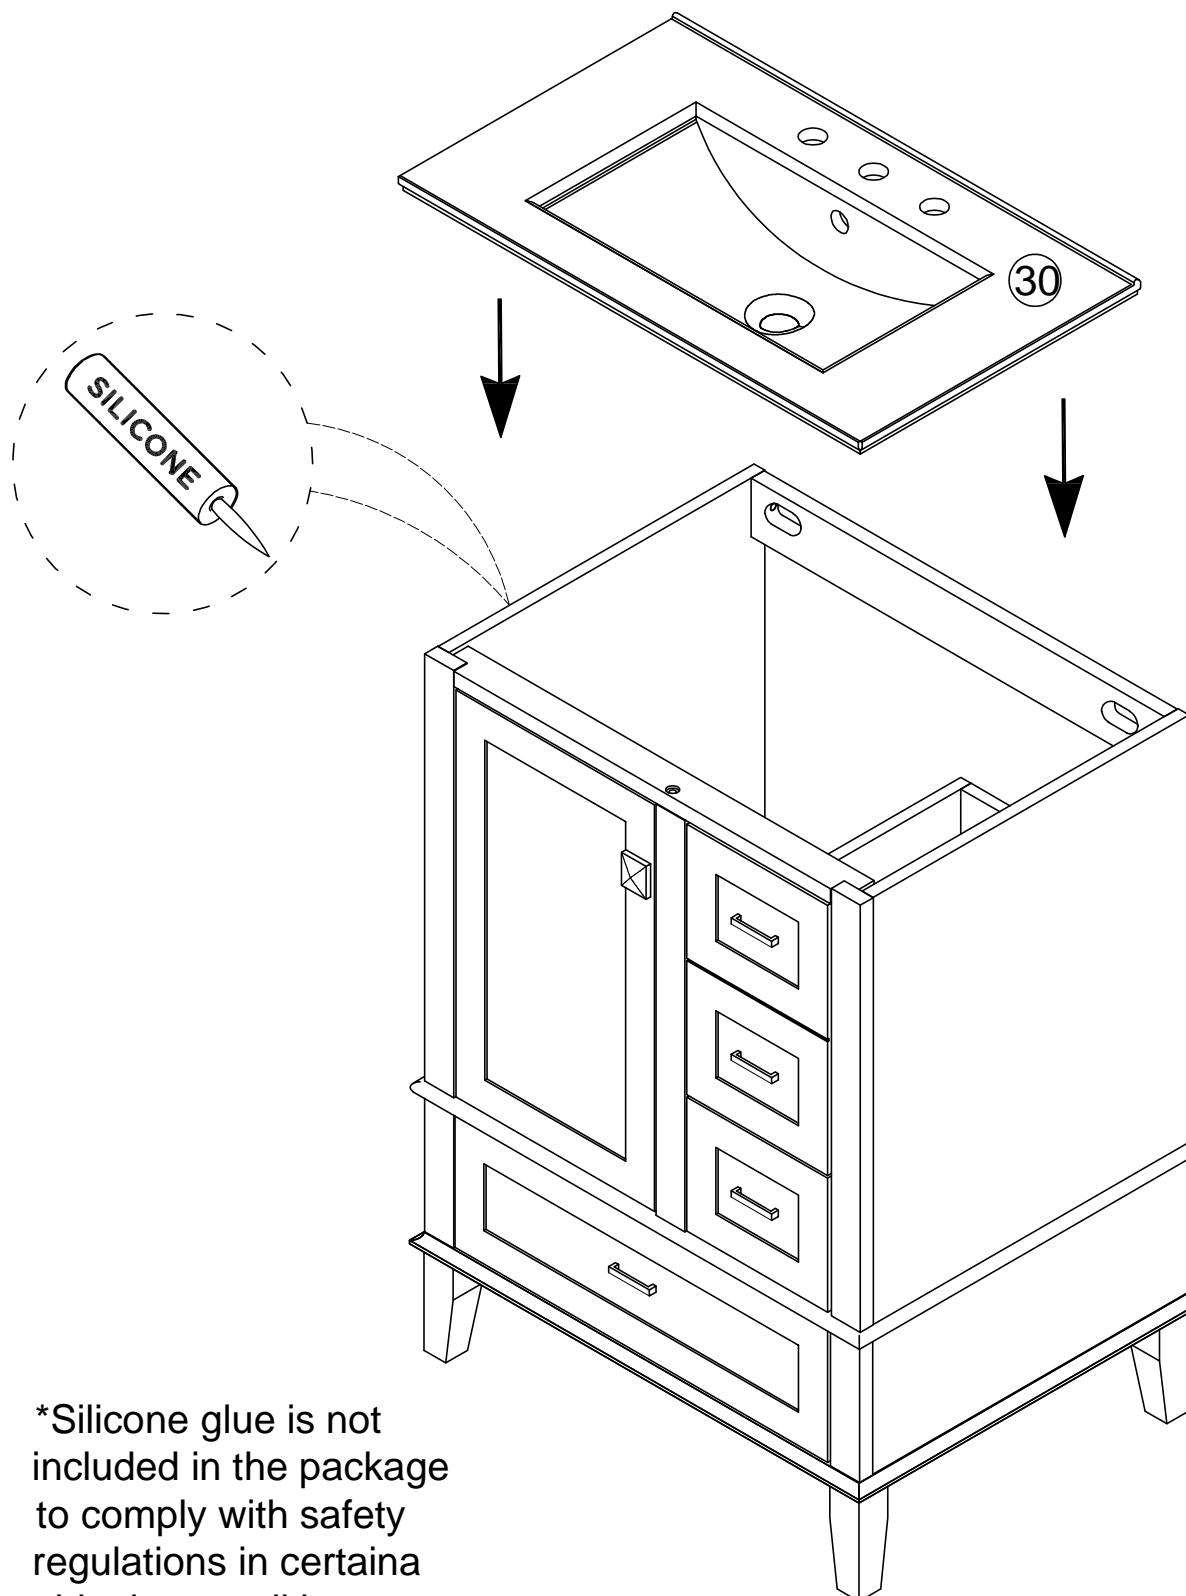


*Silicone glue is not included in the package to comply with safety regulations in certain shipping conditions.

STEP: 23

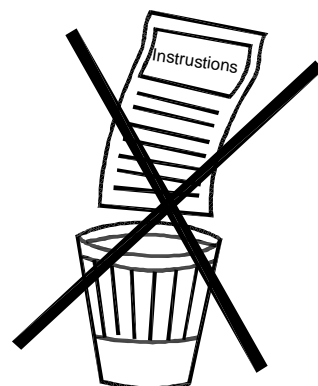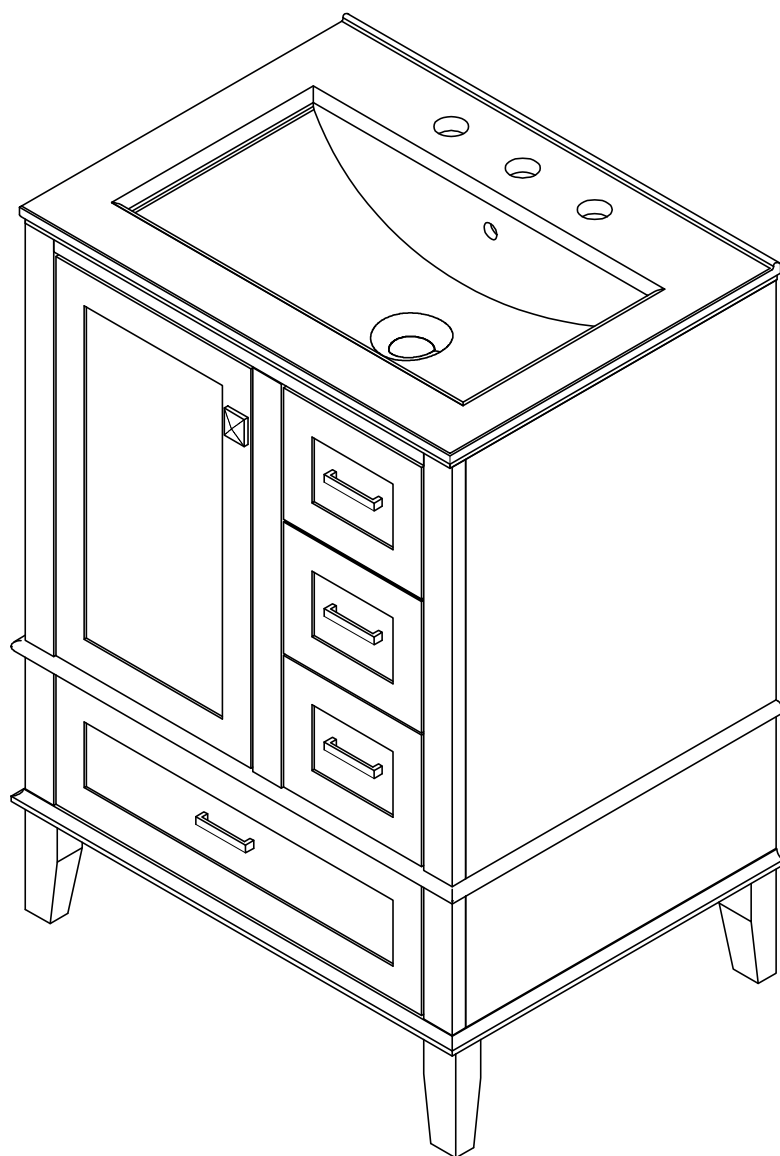


HINGE ADJUSTMENTS

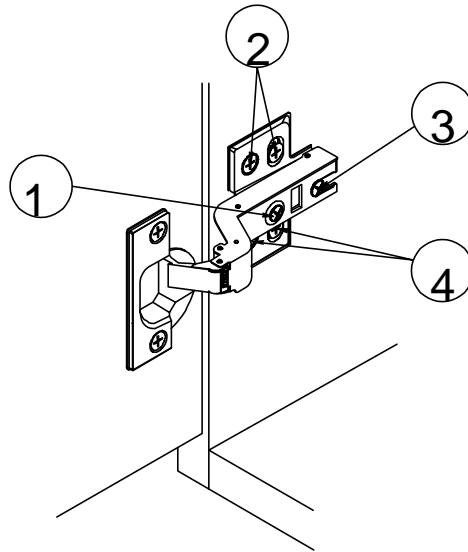


① Sideways / Tilt adjustment

Turn the screw
clockwise to move the door further away from
the side of the cabinet
anticlockwise to move the door closer to the
side of the cabinet

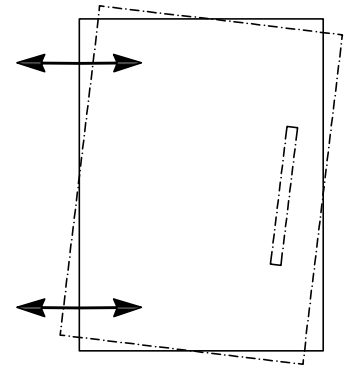

② ④ Height adjustment

While supporting the weight of the door, turn the
screws
clockwise to move the door up
anticlockwise to move the door down

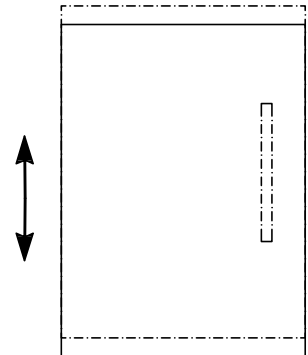

③ Forward and back adjustment

