
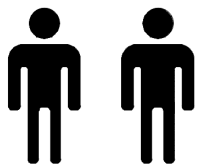


YB804-76#

Bathroom cabinet

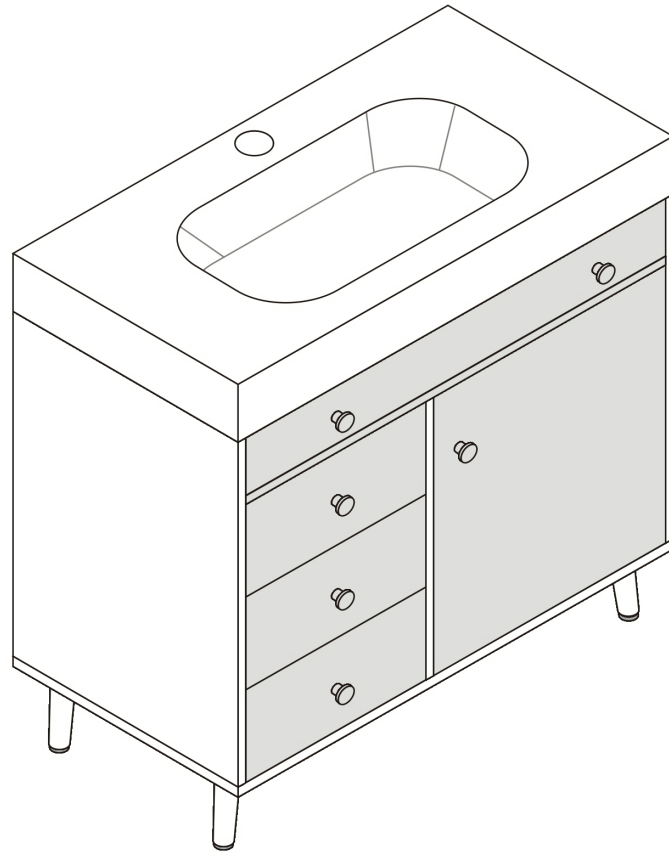


2 Persons


L752*W455*H593MM

Installation Instructions


Notes: Don't tighten screws completely at first, just in case parts were assembled wrongly and need disassemble. Tighten screws at last when all parts are put together.

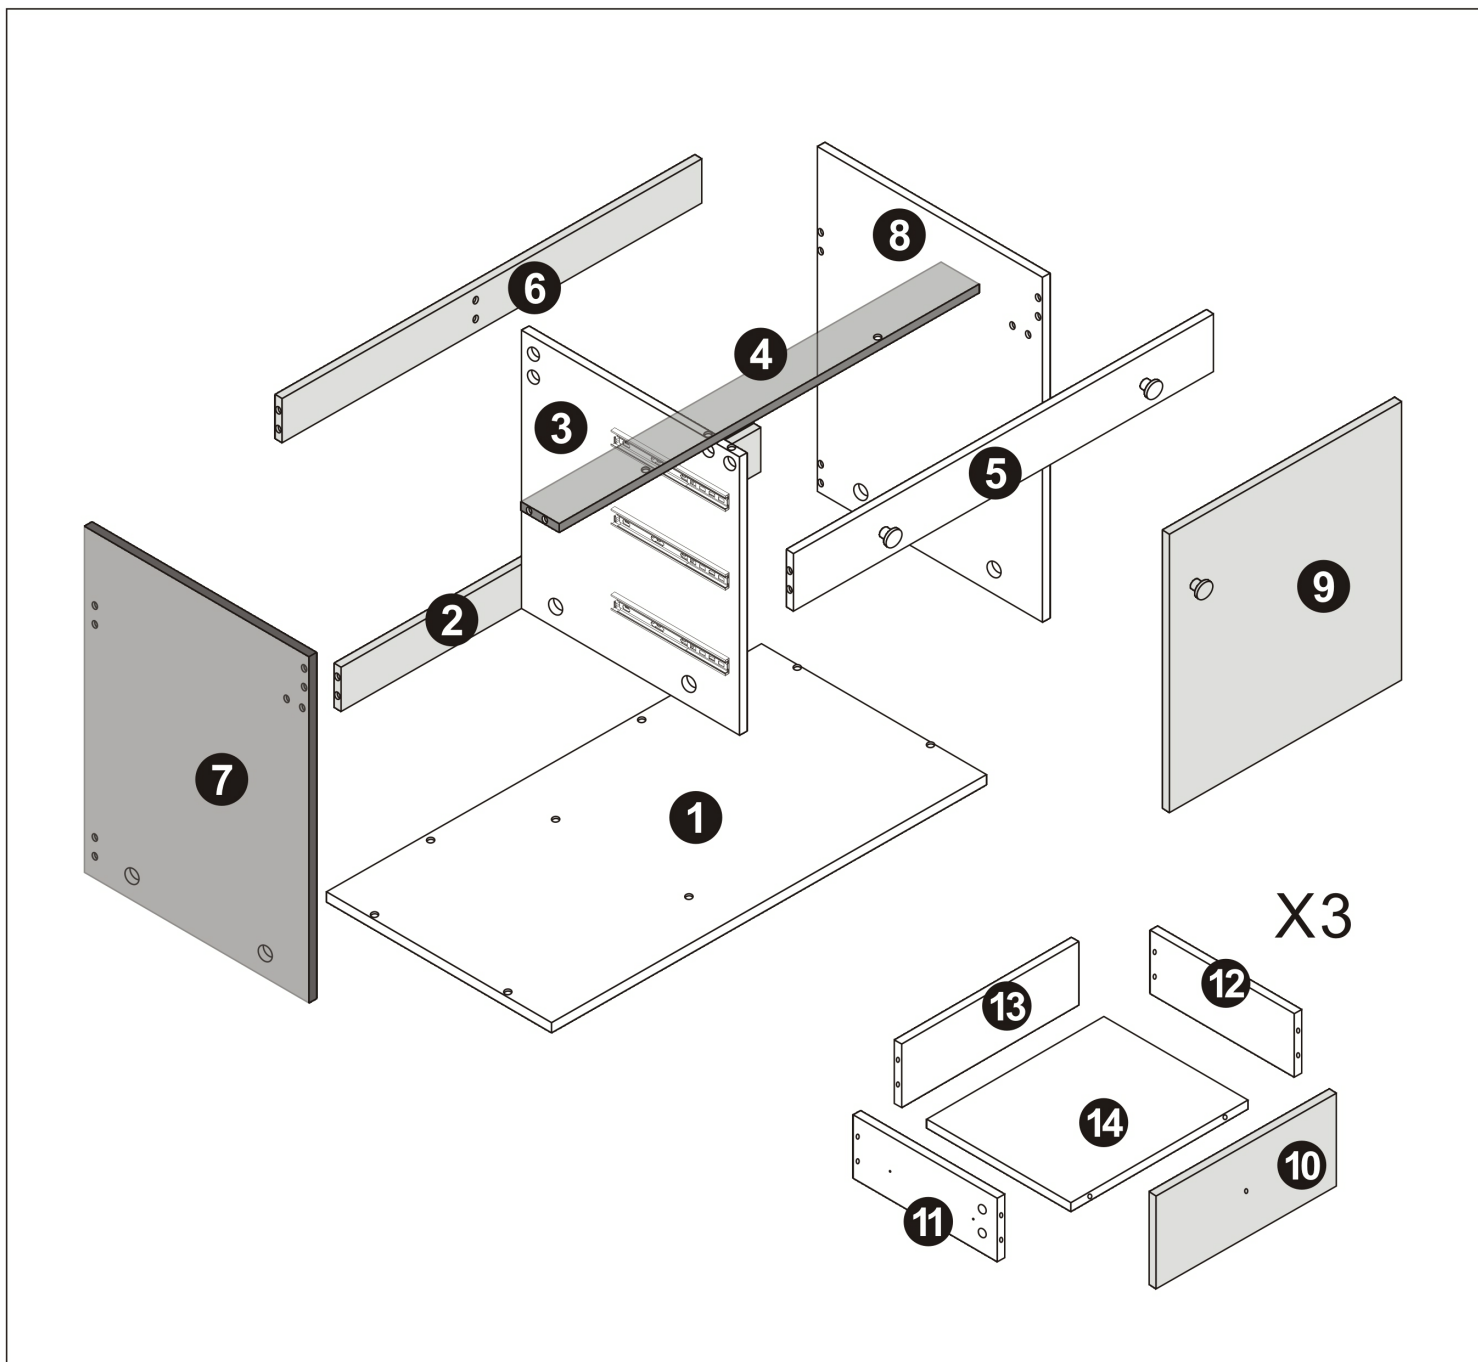

Disassembly and installation of accessories

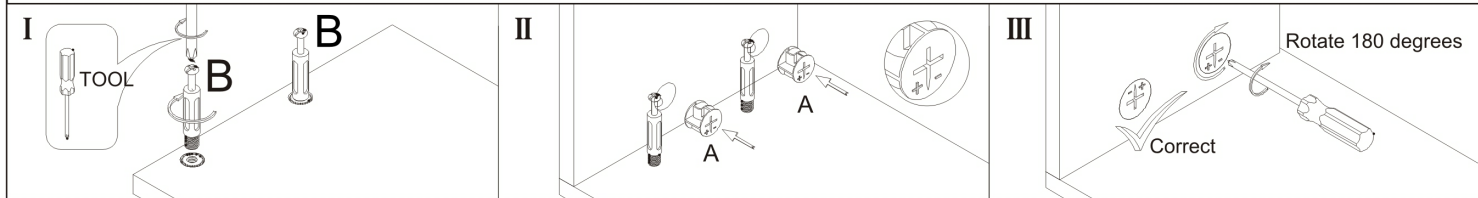


A 48PCS 15*10mm	B 48PCS 6*28mm	C 72PCS 3.5*14mm	D 30PCS 3.5*35mm	E 6PCS 4*18	F 6PCS Handles	G 4PCS Sponge Mat	H 1PCS 8mm
I 2PCS Expansion screw	J 2PCS Corner code	K 3PCS Three-section Rail	L 4PCS Hardware Feet	M 1PCS Hardware Feet	N 2PCS Mid bend		

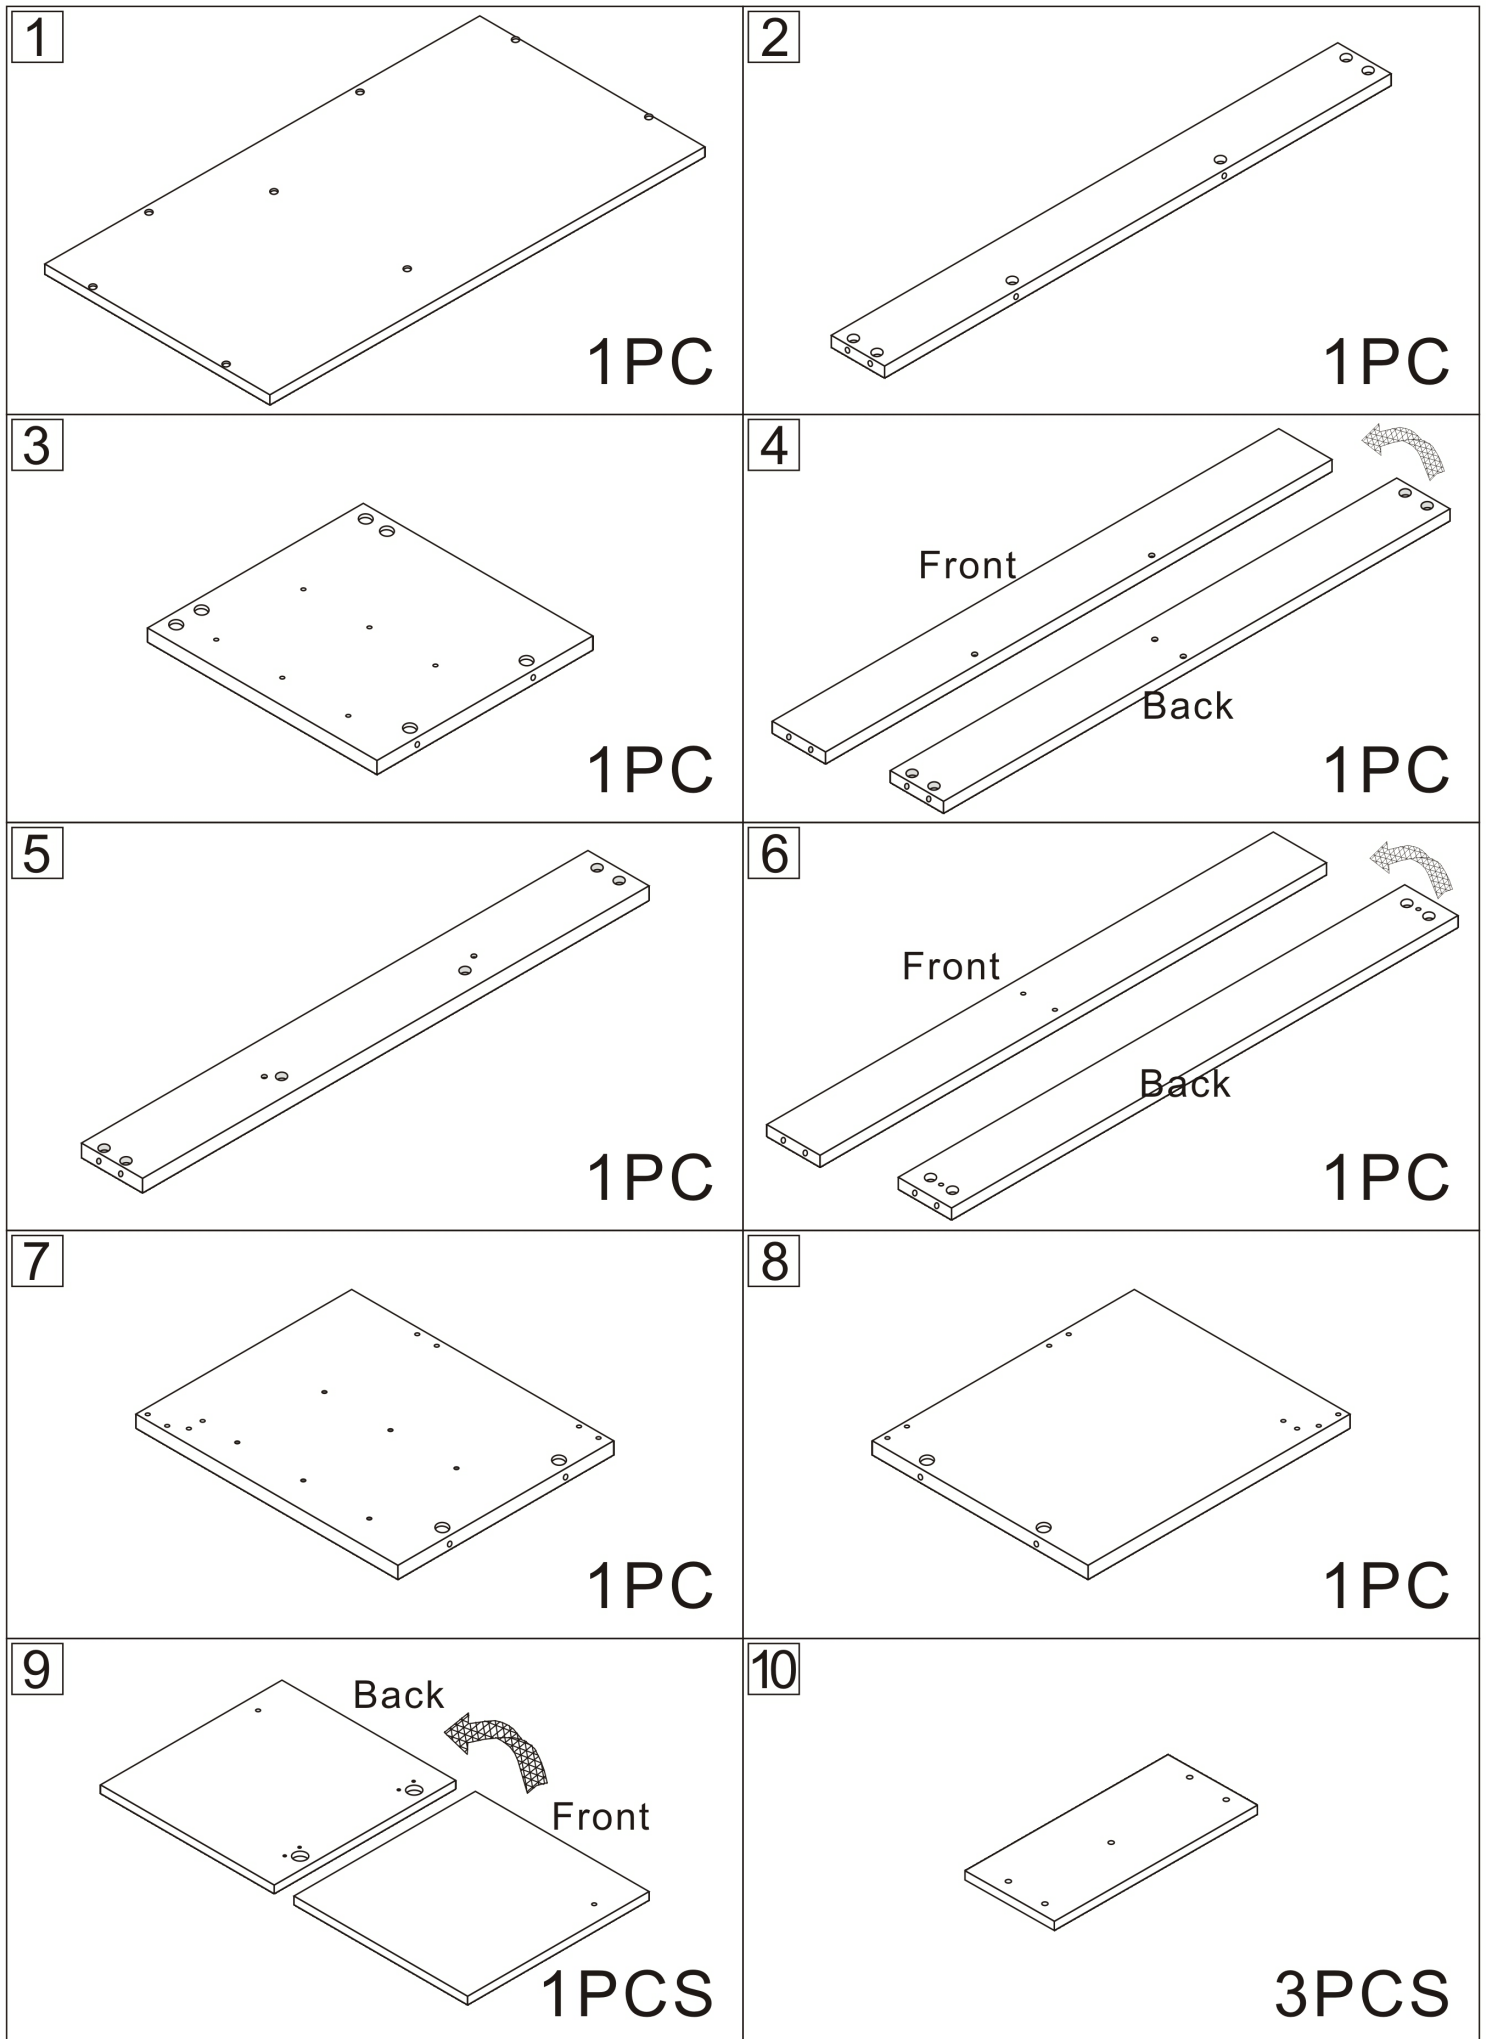


11

right

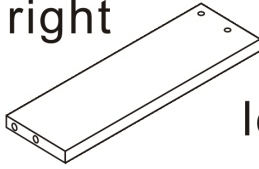


left

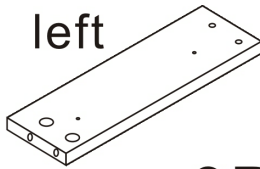


3PCS

12

right

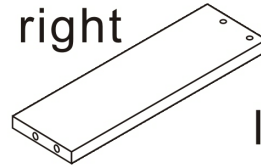


left

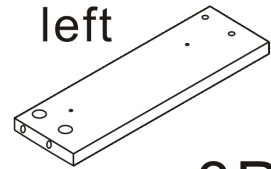

3PCS


13

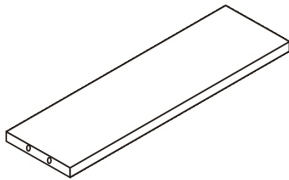


3PCS

14







Front

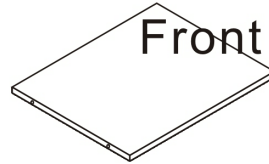

Back
1PC

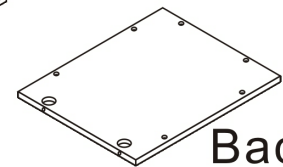


1

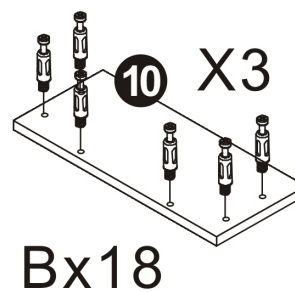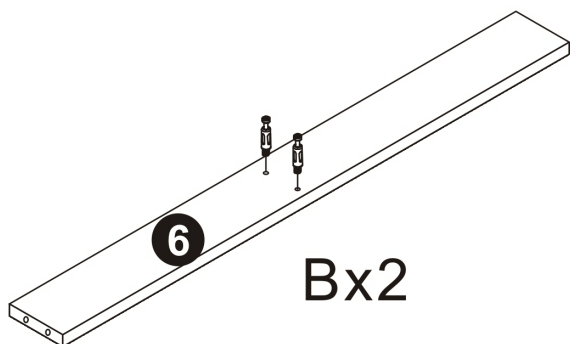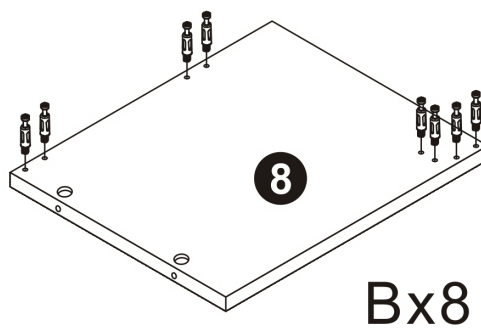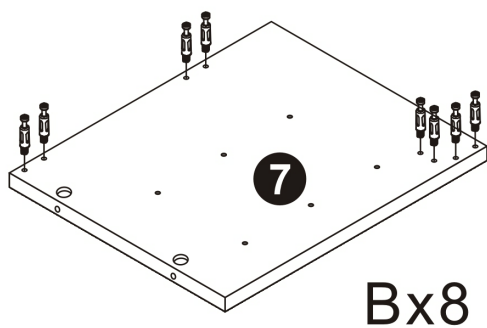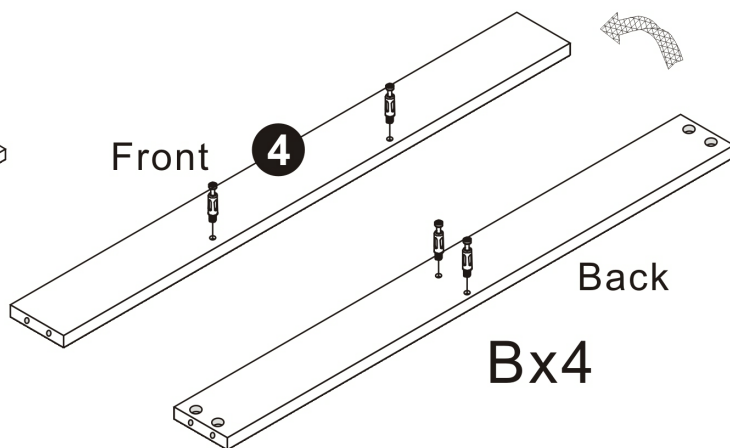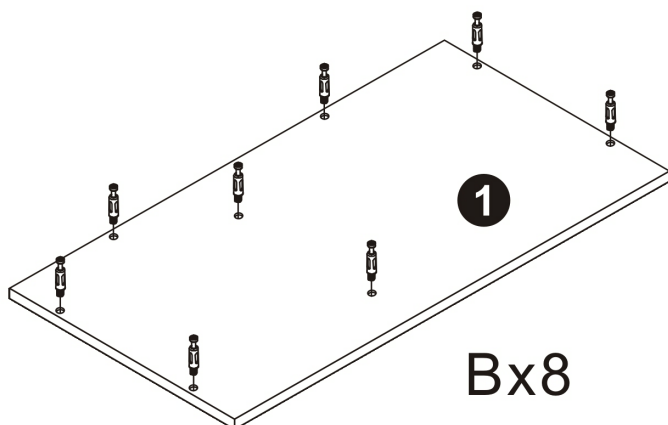


B	48PCS
6*28mm	

2

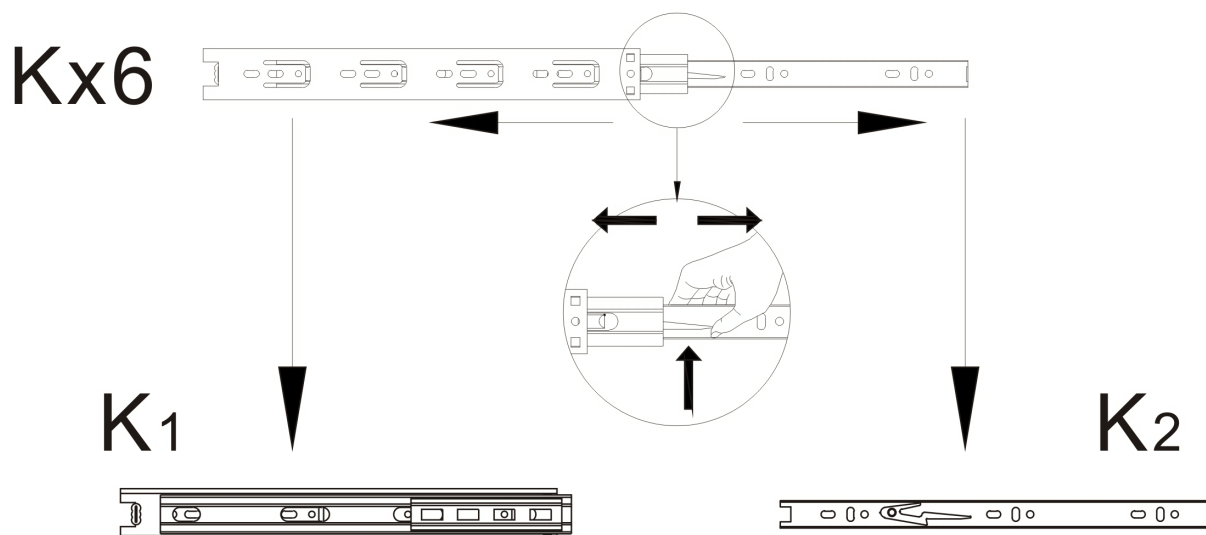

K ₁	3PCS
Three-section Rail	


3

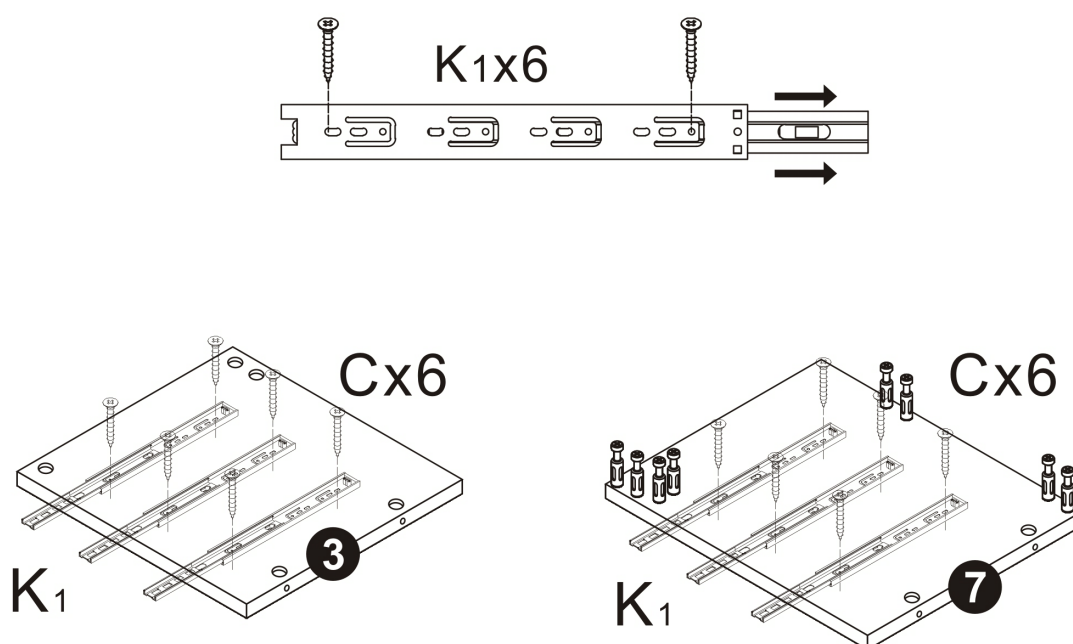

C	12PCS
3.5*14mm	

K ₁	3PCS
12 inch Three-section Rail	

4

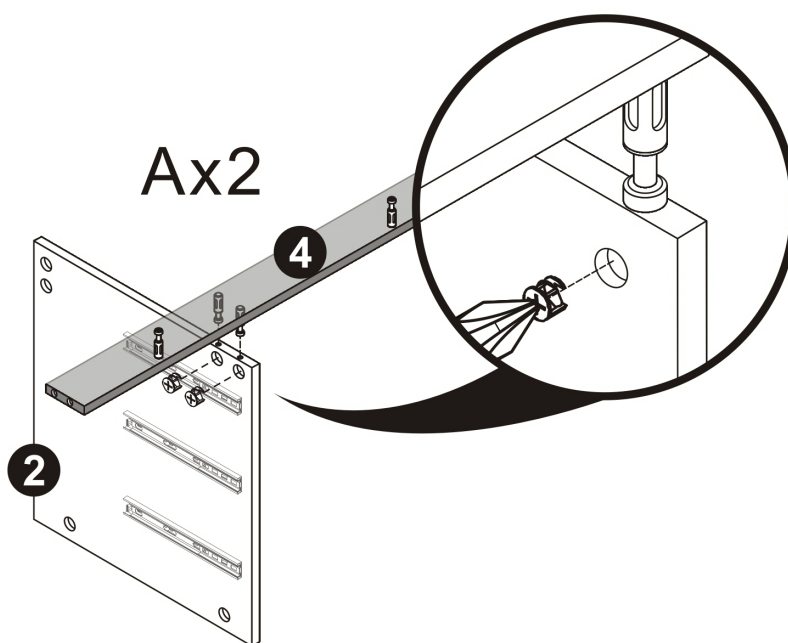


A 2PCS



15*10mm

5

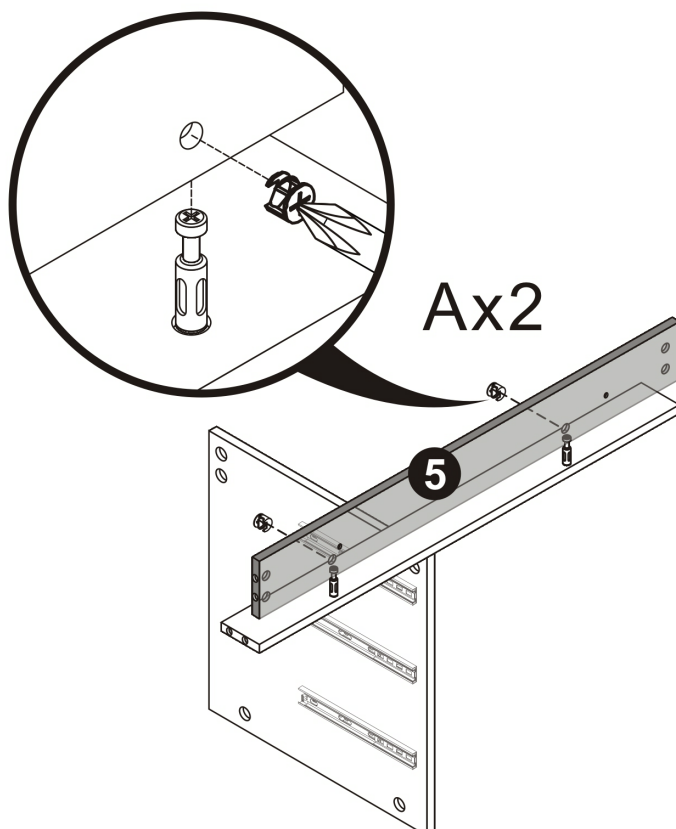


A 2PCS



15*10mm

6

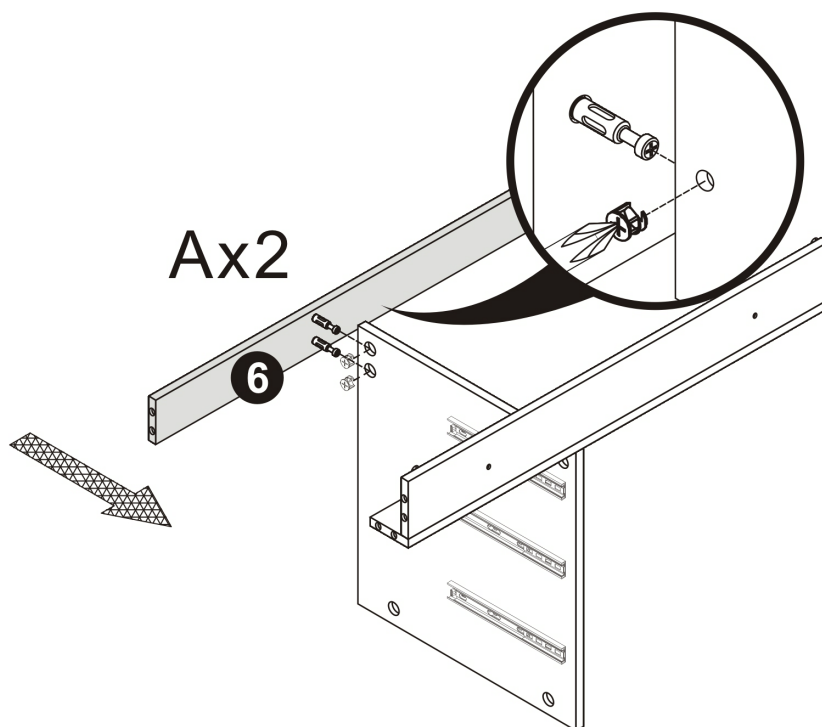


A 2PCS



15*10mm

7

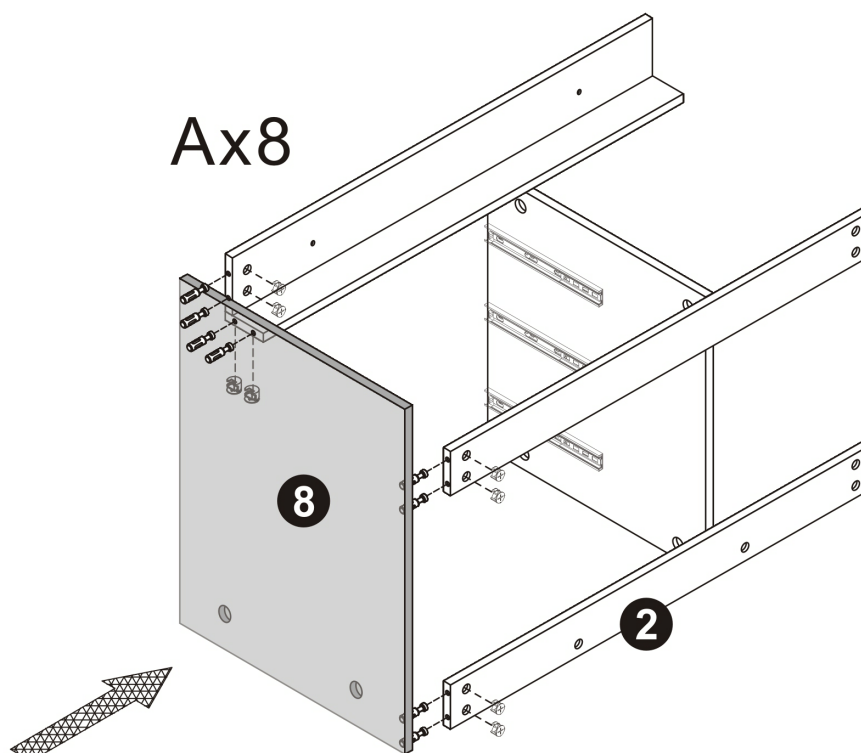


A 8PCS



15*10mm

8

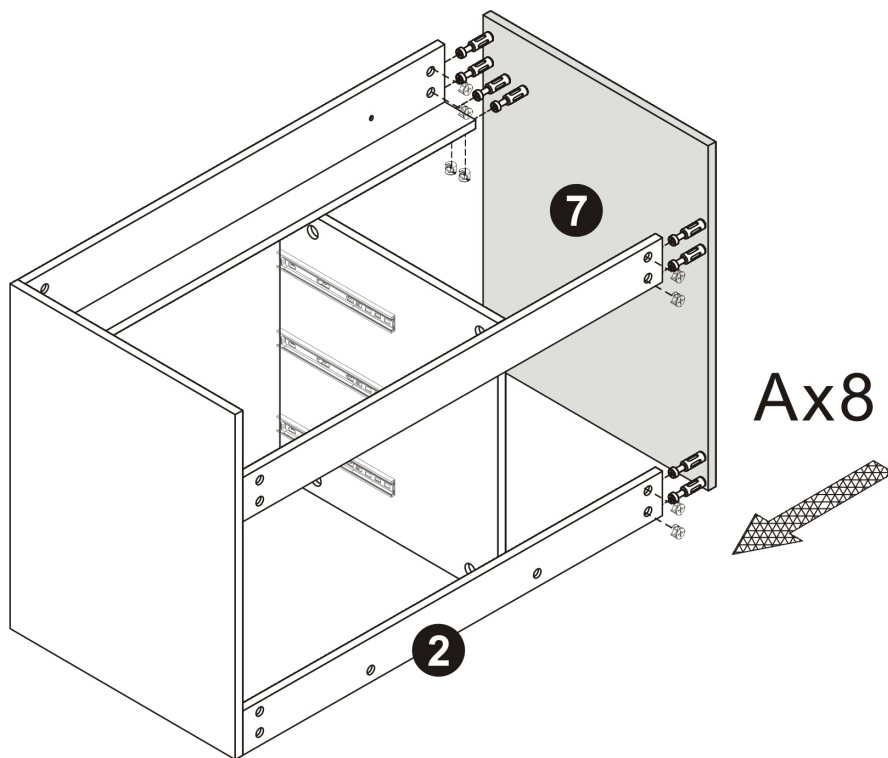


A 8PCS




15*10mm

9

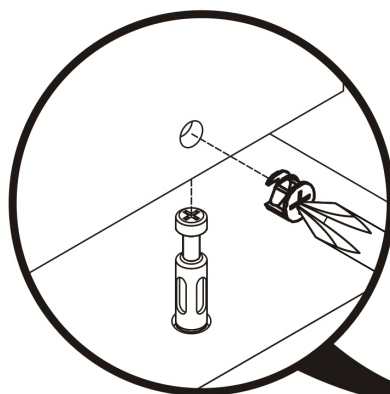

Ax6

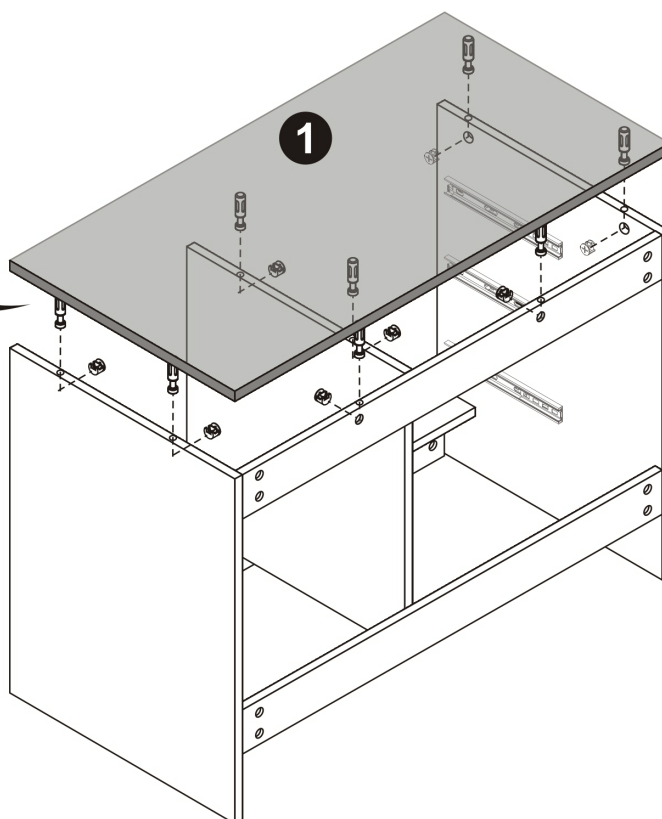


A 8PCS



15*10mm




10

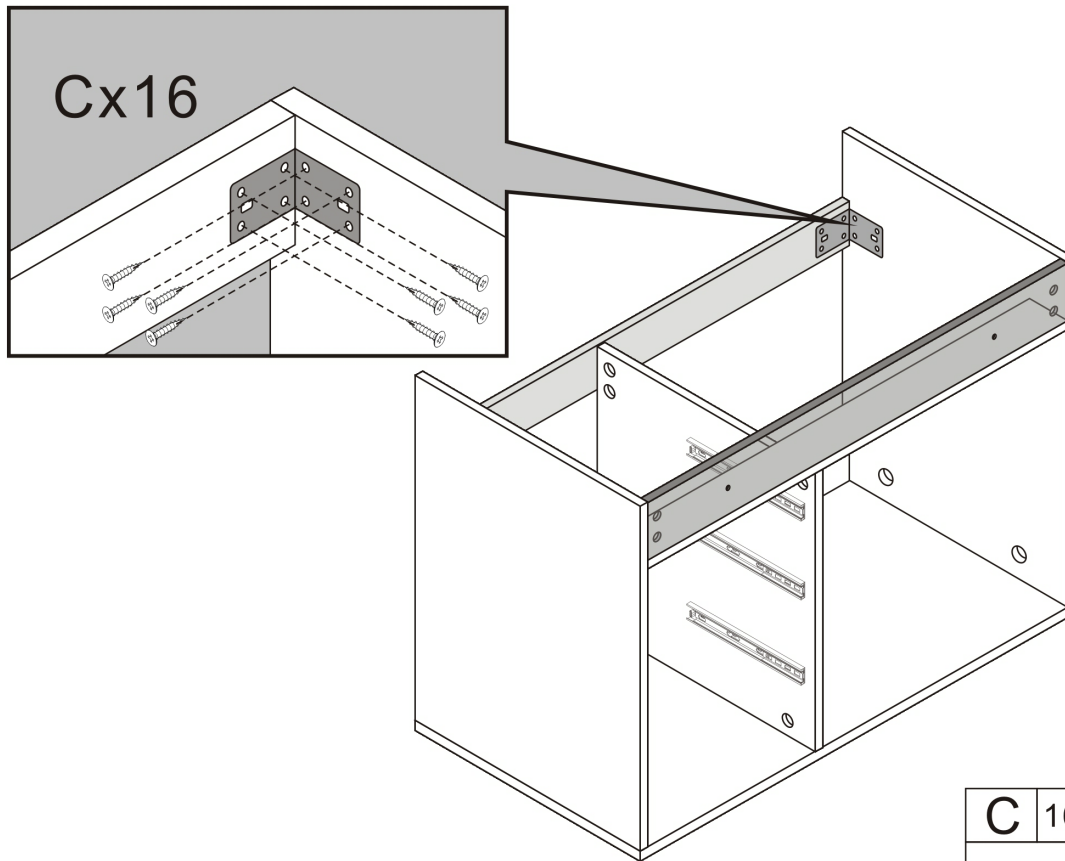




C	16PCS	J	2PCS
			
3.5*14mm		Corner code	


11

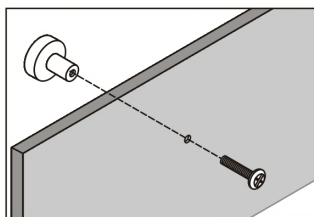


Fx2
Ex2

Nx2
Cx4

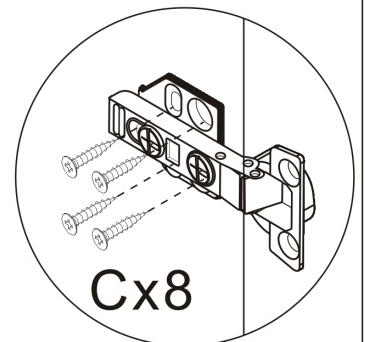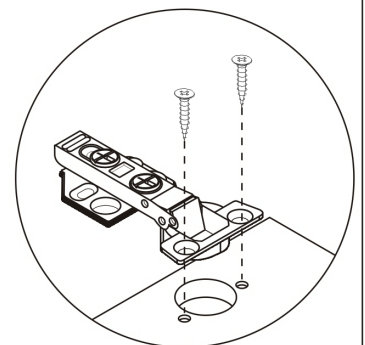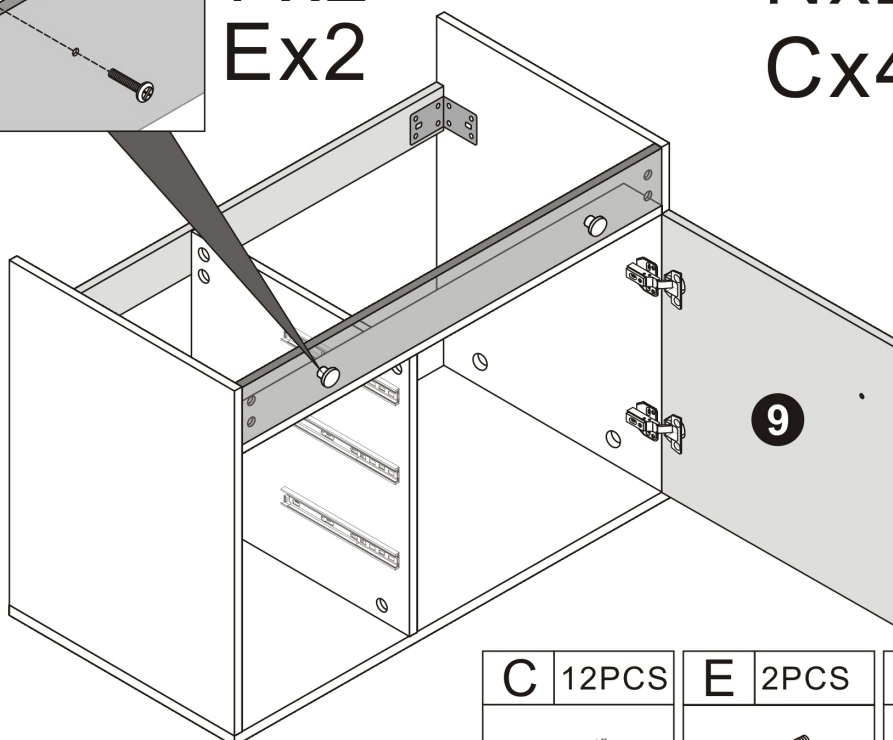

C	12PCS	E	2PCS	F	2PCS	N	2PCS
							
3.5*14mm		4*18		Handles		Mid bend	


12

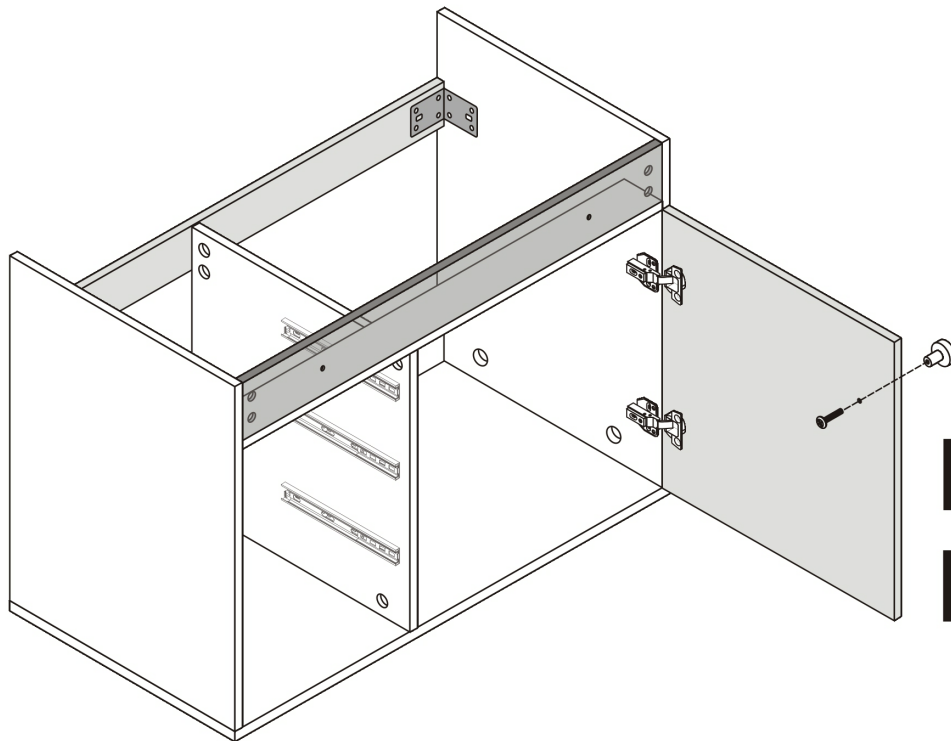

Fx1
Ex1

E	1PCS	F	1PCS
			
4*18		Handles	


13

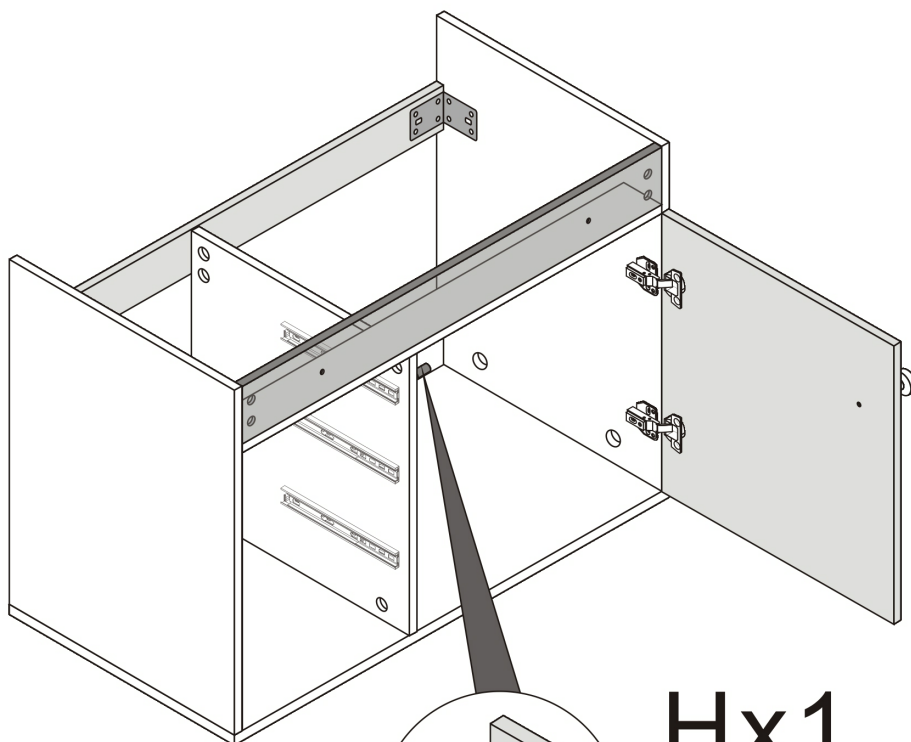

Hx1

H	1PCS
	
8mm	


14

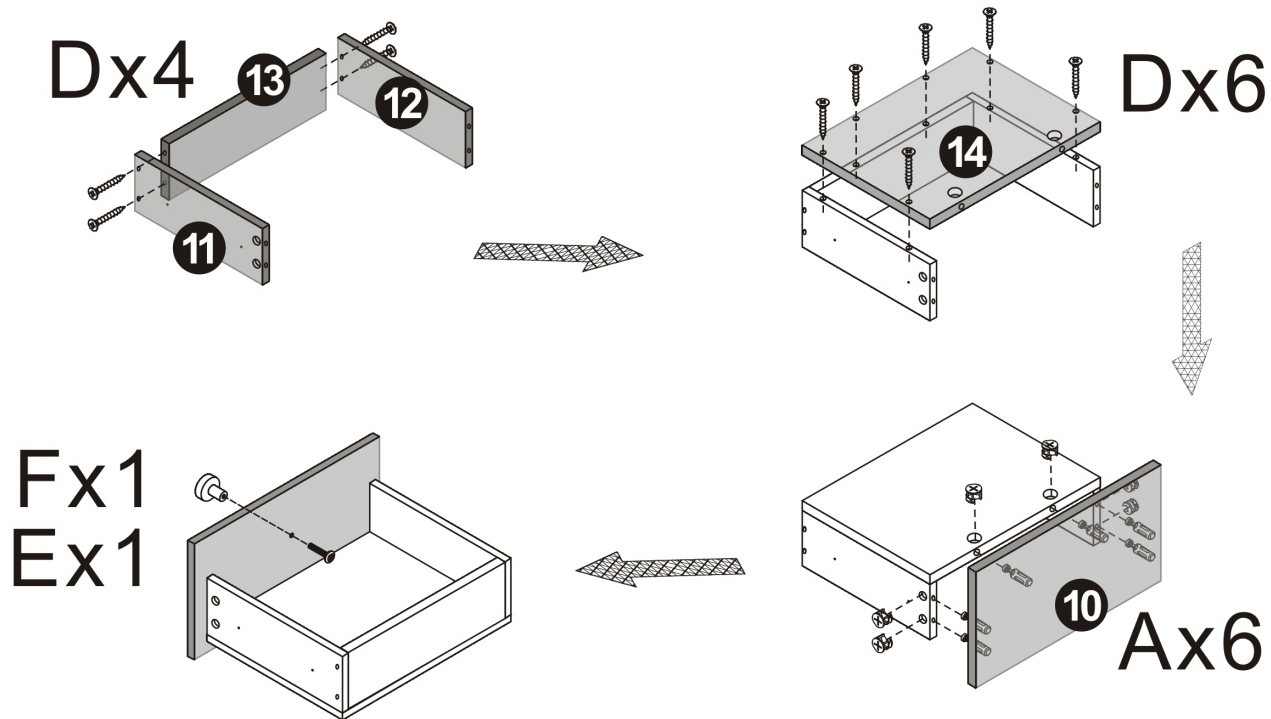

X3


A	18PCS	D	30PCS	E	3PCS	F	3PCS
							
15*10mm		3.5*35mm		4*18		Handles	


15

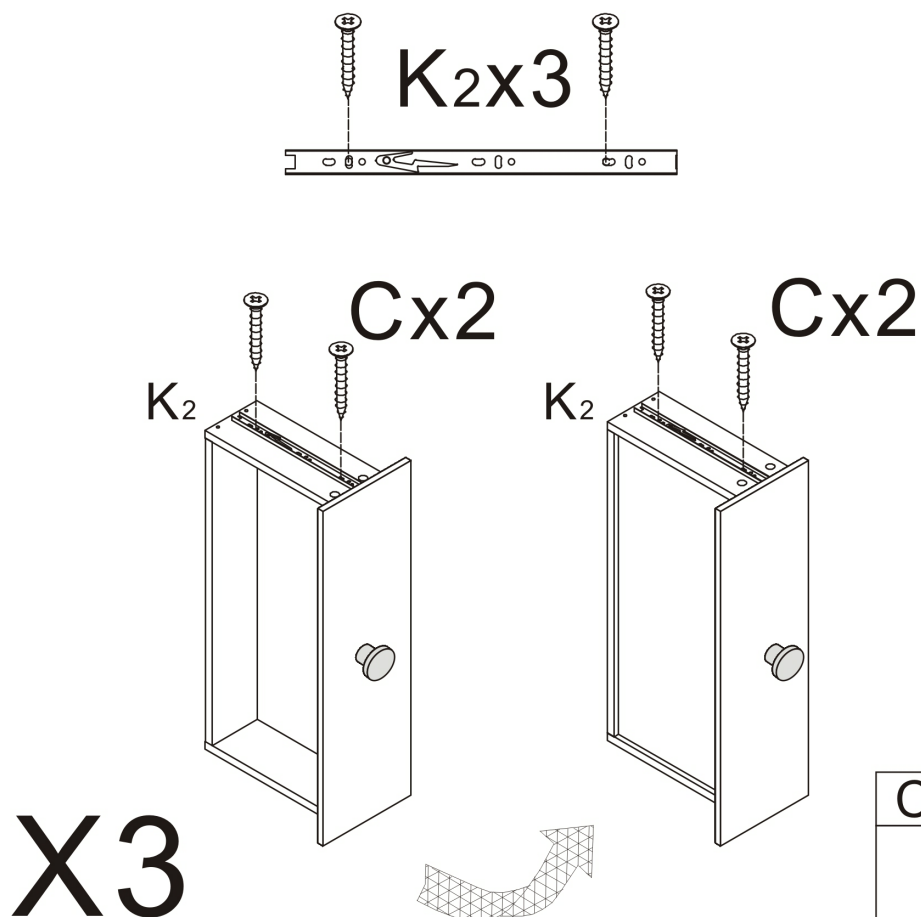

C	12PCS	K	3PCS
			
3.5*14mm		Three-section Rail	

16

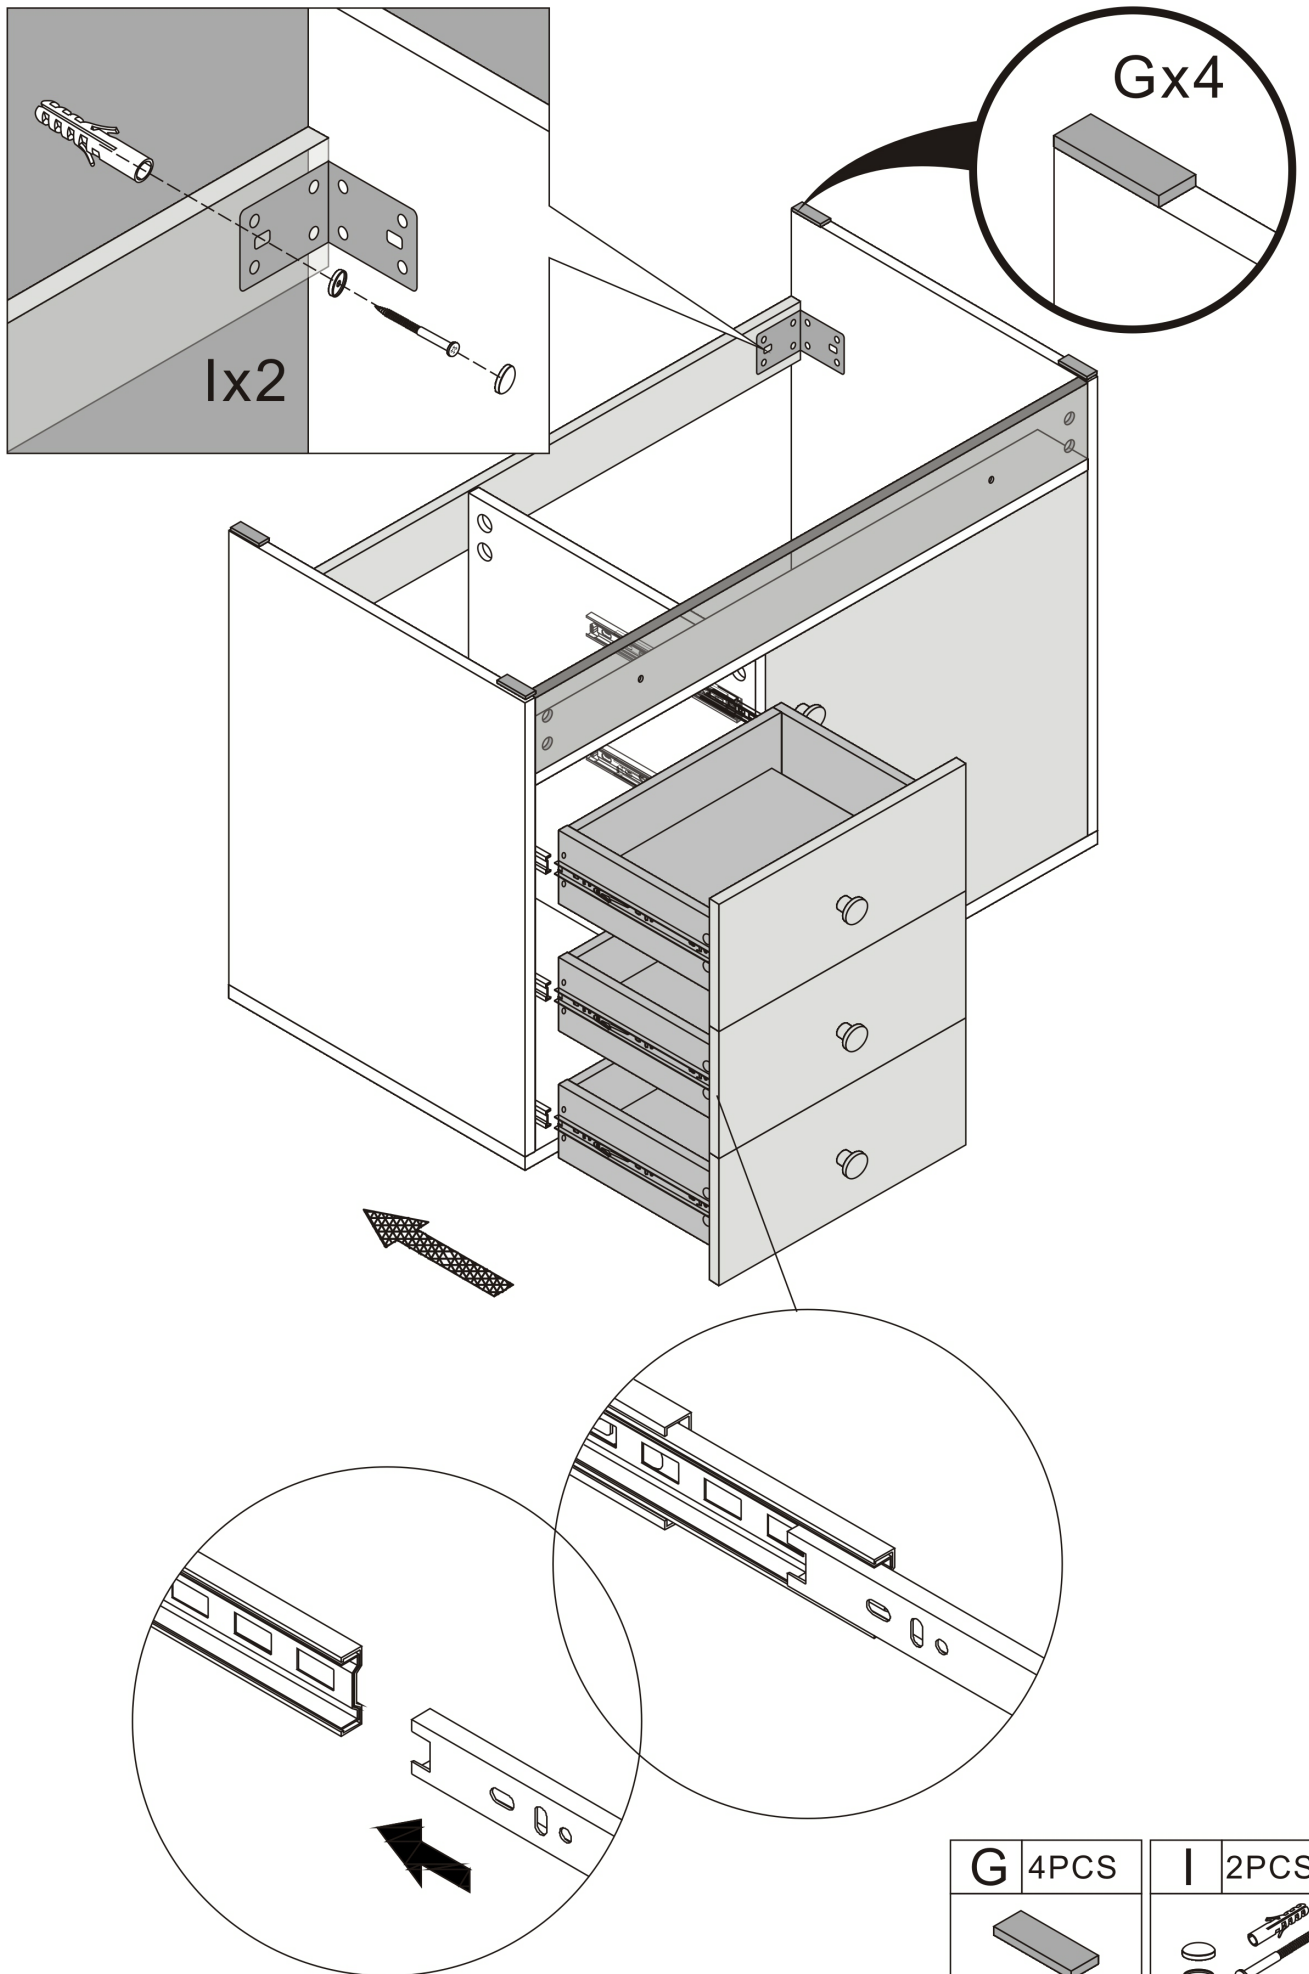



G 4PCS	I 2PCS
	
Sponge Mat	Expansion screw

SPECIAL TIPS FOR DOOR ALIGNMENT


CONSEJOS ESPECIALES PARA LA ALINEACIÓN DE PUERTAS

CONSEILS SPÉCIAUX POUR L'ALIGNEMENT DES PORTES





- A. Lateral adjustment (Moving door left-right) by screw adjusting
 Ajuste lateral (Puerta móvil de izquierda a derecha) mediante tornillo de ajuste
 Réglage latéral (porte mobile gauche-droite) par réglage à vis

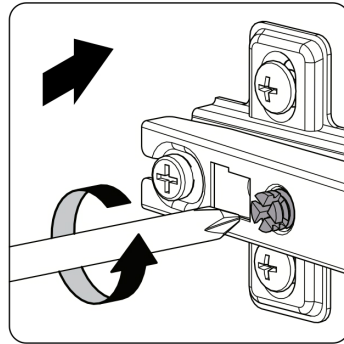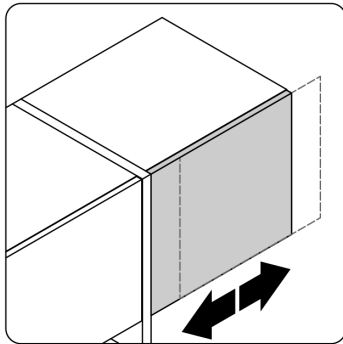





OR

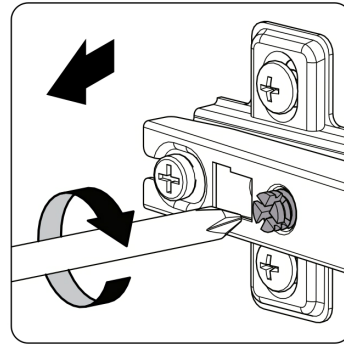


- B. Vertical adjustment (Moving door up-down) via the slot on the mounting plate
 Ajuste vertical (Puerta móvil arriba-abajo) a través de la ranura en la placa de montaje
 Réglage vertical (porte mobile de haut en bas) via la fente sur la plaque de montage

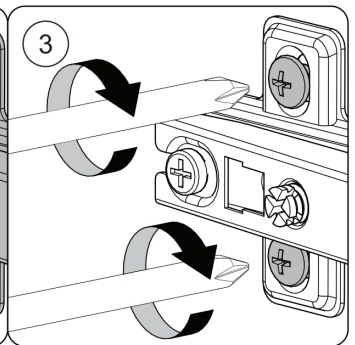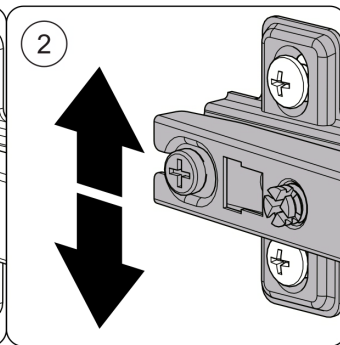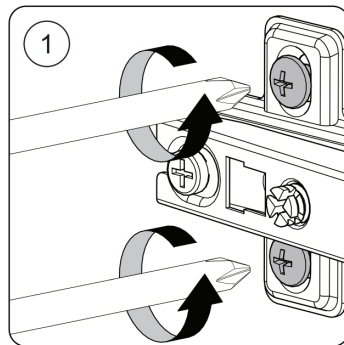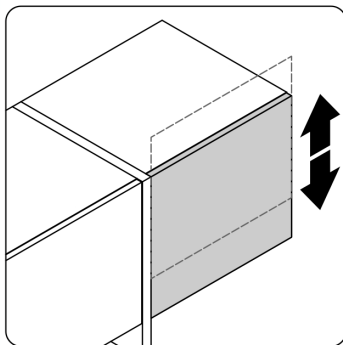

- C. Front-to-back adjustment (Spacing Door Off Cabinet) by slacking the hinge arm mounting screw
 Ajuste de adelante hacia atrás (espaciado entre la puerta y el gabinete) aflojando el tornillo de montaje del brazo de la bisagra
 Ajustement d'avant en arrière (espacement de la porte hors de l'armoire) en desserrant la vis de montage du bras de charnière

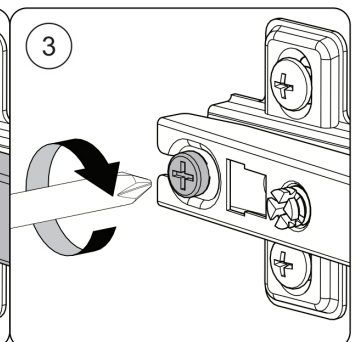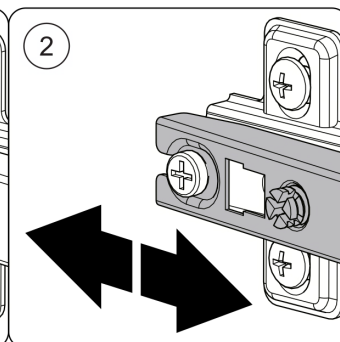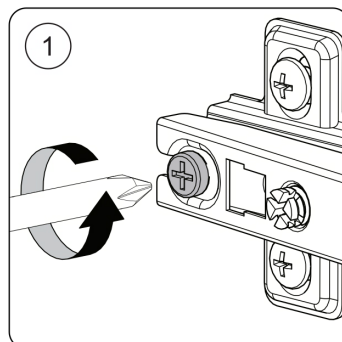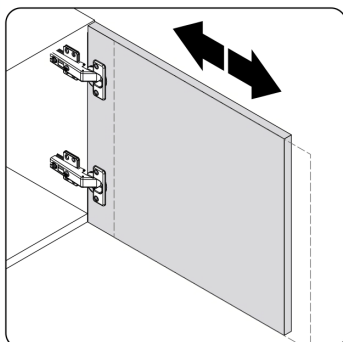


17

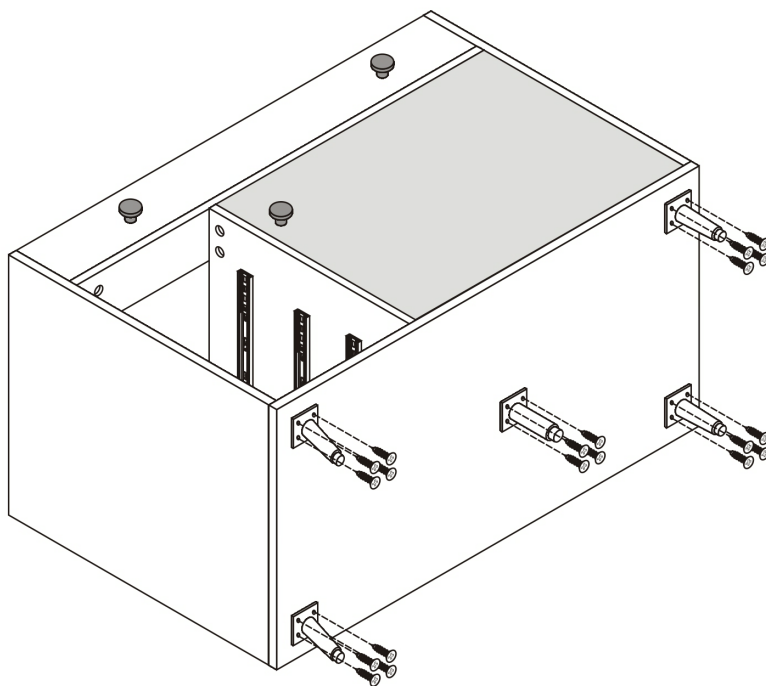

Cx20
Lx4
Mx1

C	20PCS	L	4PCS	M	1PCS
					
3.5*14mm		Hardware Feet		Hardware Feet	

18

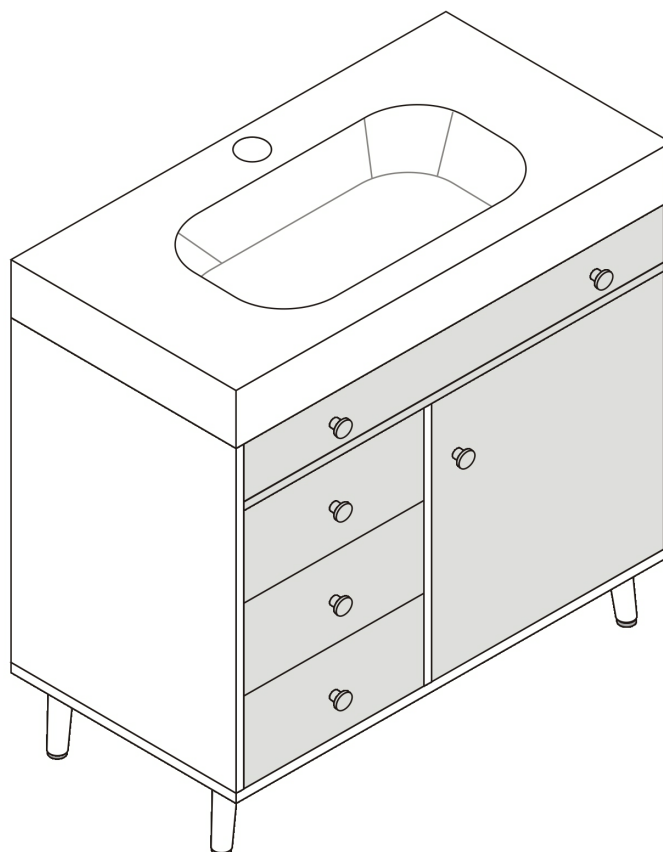

OK