


ASSEMBLY INSTRUCTION BAUANLEITUNG

N710P374714

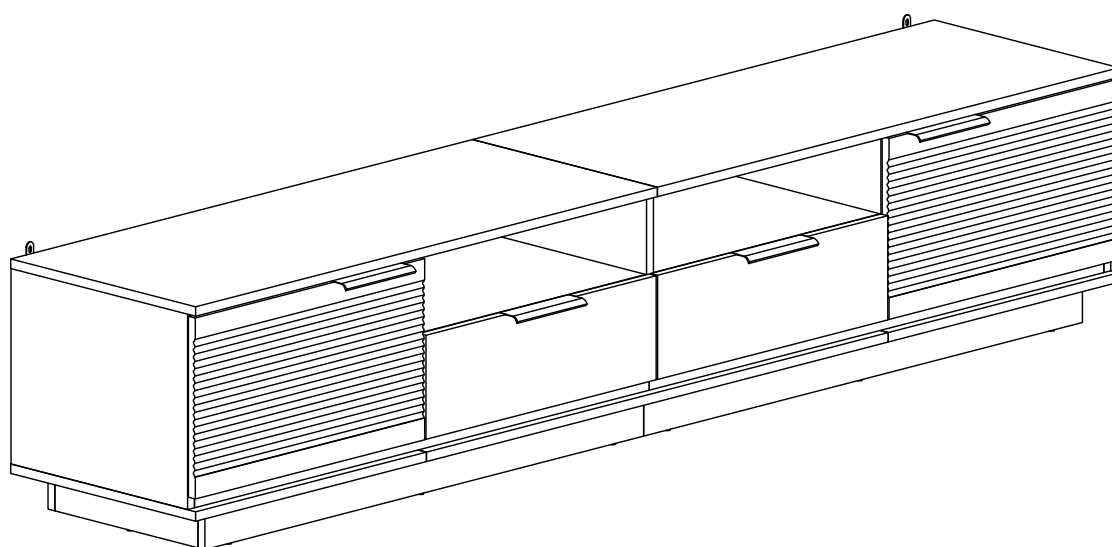

Before Installation

Important-Please read these instructions fully before starting assembly


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.


























- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions



	Diagram A	Insert Cam Bolt into hole as shown in diagram A.
	Diagram B	Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.
		Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.
		Connect the panels together.
	ARROW SIGN	Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
		To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. *Do not use an automatic screwdriver as it may bend or break if too much power is imposed.

Parts list

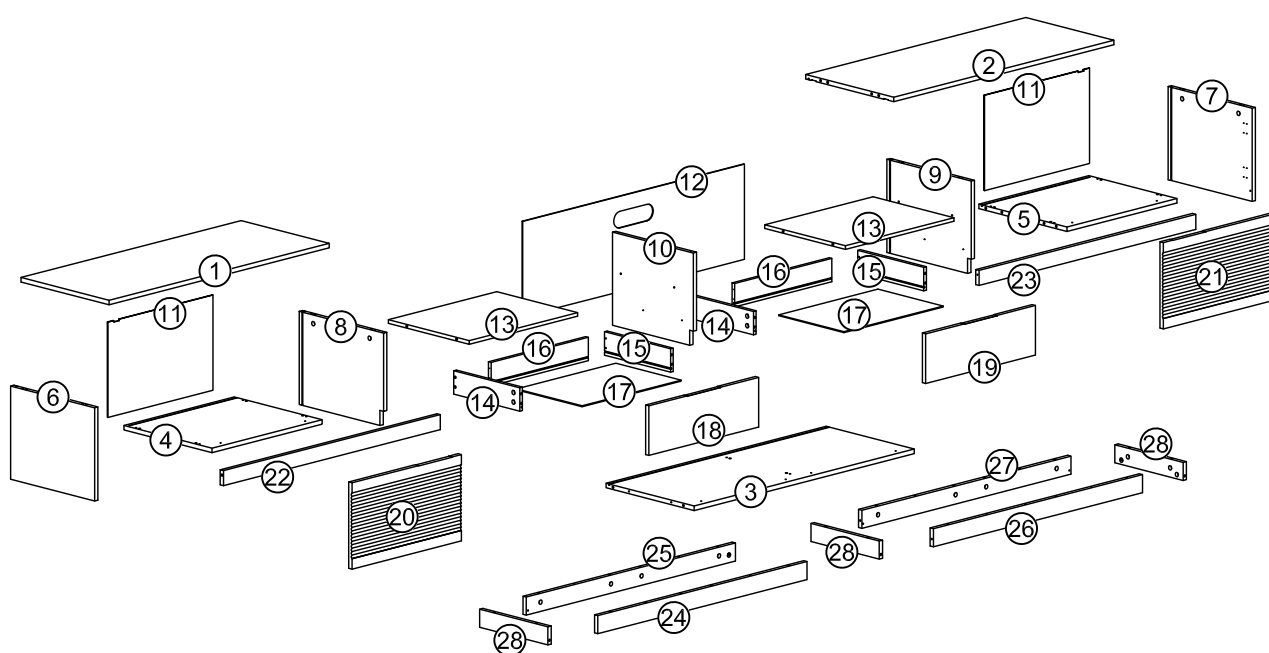

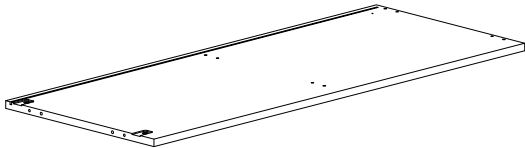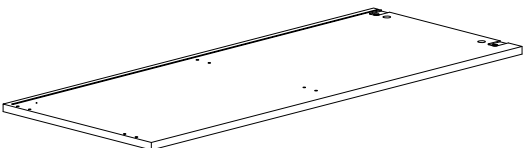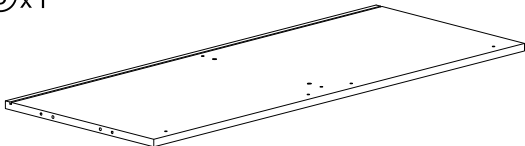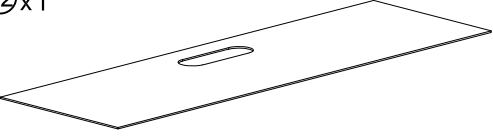①x1 	②x1 	
③x1 	④x1 	⑤x1 
⑥x1 	⑦x1 	⑧x1 
⑨x1 	⑩x1 	⑪x2 
⑫x1 	⑬x2 	⑭x2 
⑮x2 	⑯x2 	⑰x2 
⑱x1 	⑲x1 	⑳x1 
㉑x1 	㉒x1 	㉓x1 
㉔x1 	㉕x1 	㉖x1 
㉗x1 	㉘x3 	

Hardware

A	x 63	B	x 63	C	x 32	D	x 58	E	x 4	F	x 18
											
Φ6x36mm		Φ15mm		Φ6x30mm		Φ3.5x12mm		150mm		Φ4x35mm	
G	x 2	H	x 4	J	x 10	K	x 10	L	x 1	M	x 2
											
Φ4x14mm		M6x10mm		Φ7x48mm		15x10mm		4mm			
N	x 4	P	x 2	Q	x 2	R	x 2	S	x 2	T	x 2
											
		Φ4x45mm		Φ8x35mm				S1 S2		T1 T2	
U	x 16										
											
Φ20mm											

D	x 58
	
Φ3.5x12mm	

G	x 2
	
Φ4x14mm	

(DE) Bitte beachten Sie, dass die Formen der Schrauben D und G ähnlich sind. Bitte installieren Sie entsprechend der Anleitung und unterscheiden Sie sie

(UK) Please note that the shapes of screws D and G are similar. Please install according to the instructions and distinguish them!

(FR) Notez que les vis D et G ont des formes similaires. Veuillez les installer en suivant les instructions pour les séparer!

(IT) Si prega di notare che le forme delle viti D e G sono simili. Si prega di installarle seguendo le istruzioni e di distinguerle!



(ES) Por favor, tenga en cuenta que las formas de los tornillos D y G son similares. Por favor, instálelos de acuerdo con las instrucciones y distíngalos.

(NL) Let op, de vormen van schroeven D en G zijn vergelijkbaar. Installeer volgens de instructies en maak onderscheid tussen ze!

(SE) Observera att formerna på skruvarna D och G är lika. Installera enligt anvisningarna och särskilj dem!



(PL) Zauważ, że kształty śrub D i G są podobne. Zainstaluj zgodnie z instrukcjami i rozróżnij je!

1

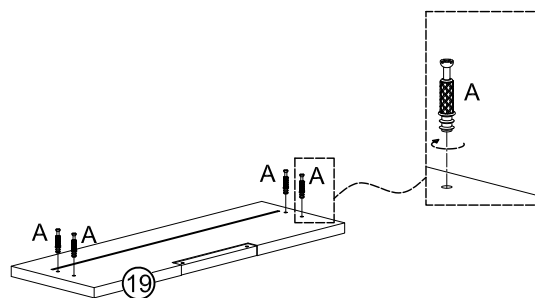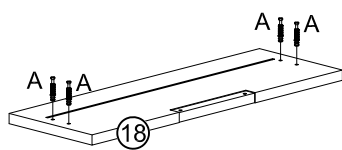



A	x8
Φ6x36mm	

2


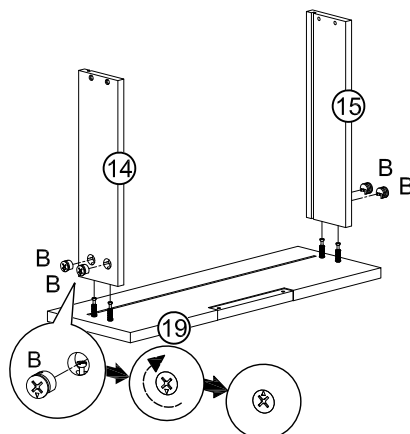
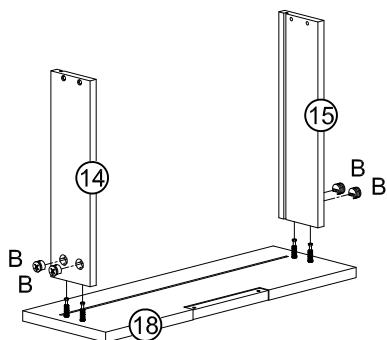


B	x8
Φ15mm	

3

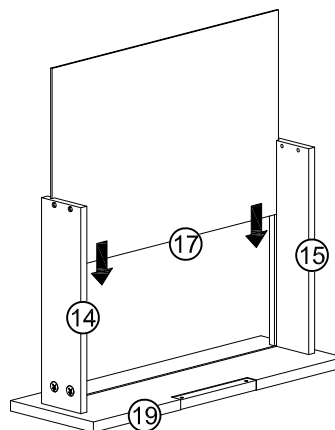
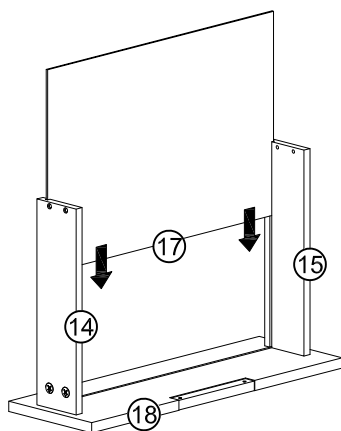


4

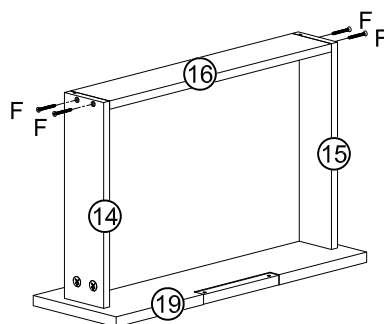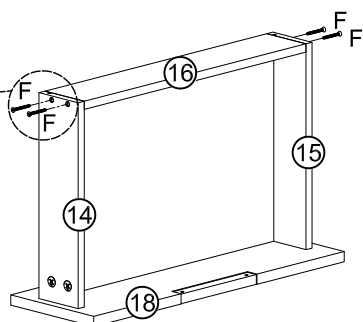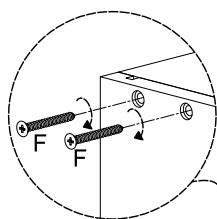







F	x8
	
Φ4x35mm	


5

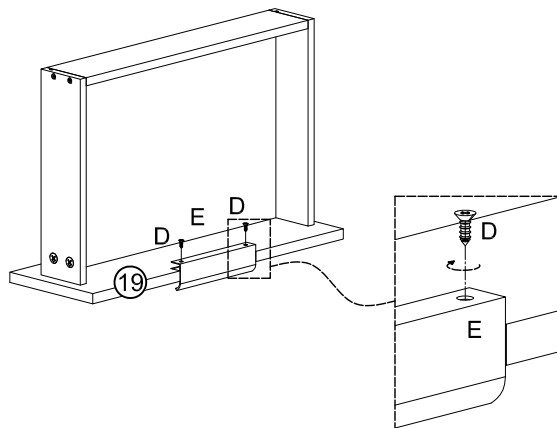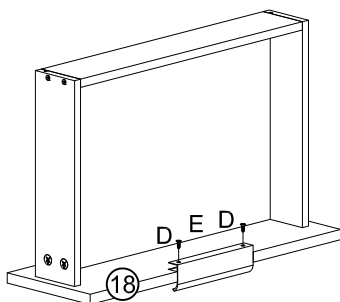


D	x4	E	x2	G	x2
					
Φ3.5x12mm		150mm		Φ4x14mm	

6

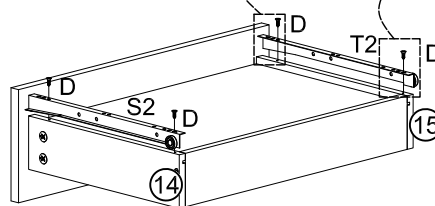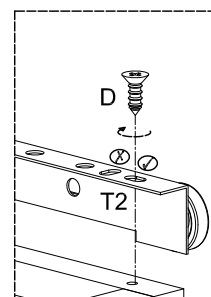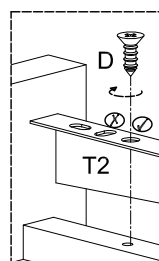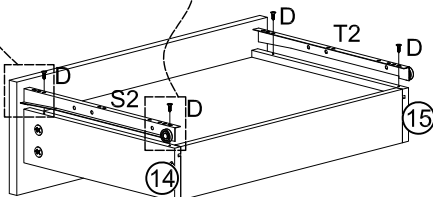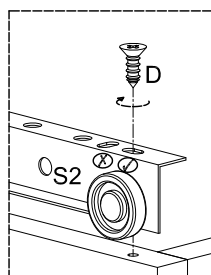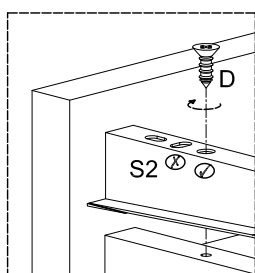


S	x2	T	x2	D	x8	G	x2
							
S2		T2		Φ3.5x12mm		Φ4x14mm	

7

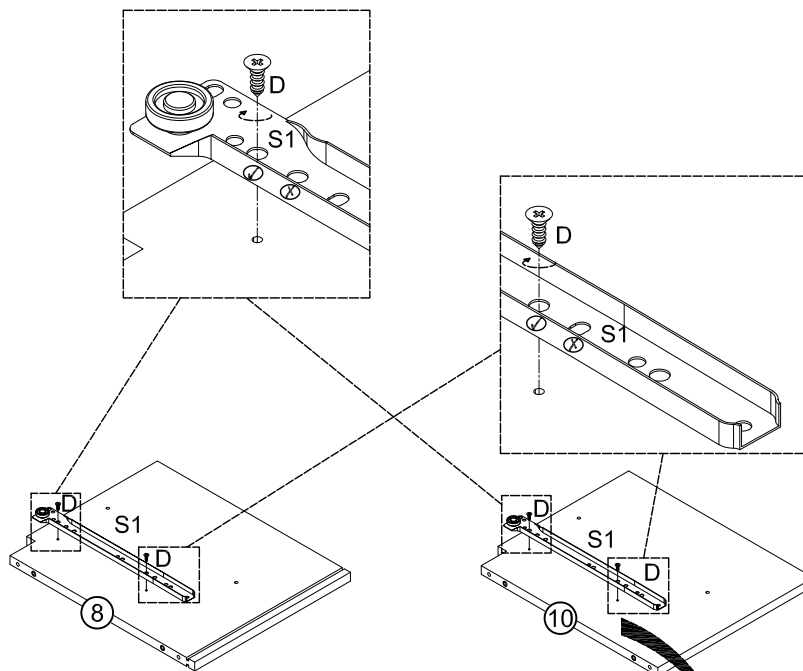


S	x2	D	x4	G	x2
S1					
		$\Phi 3.5 \times 12 \text{mm}$		$\Phi 4 \times 14 \text{mm}$	

8

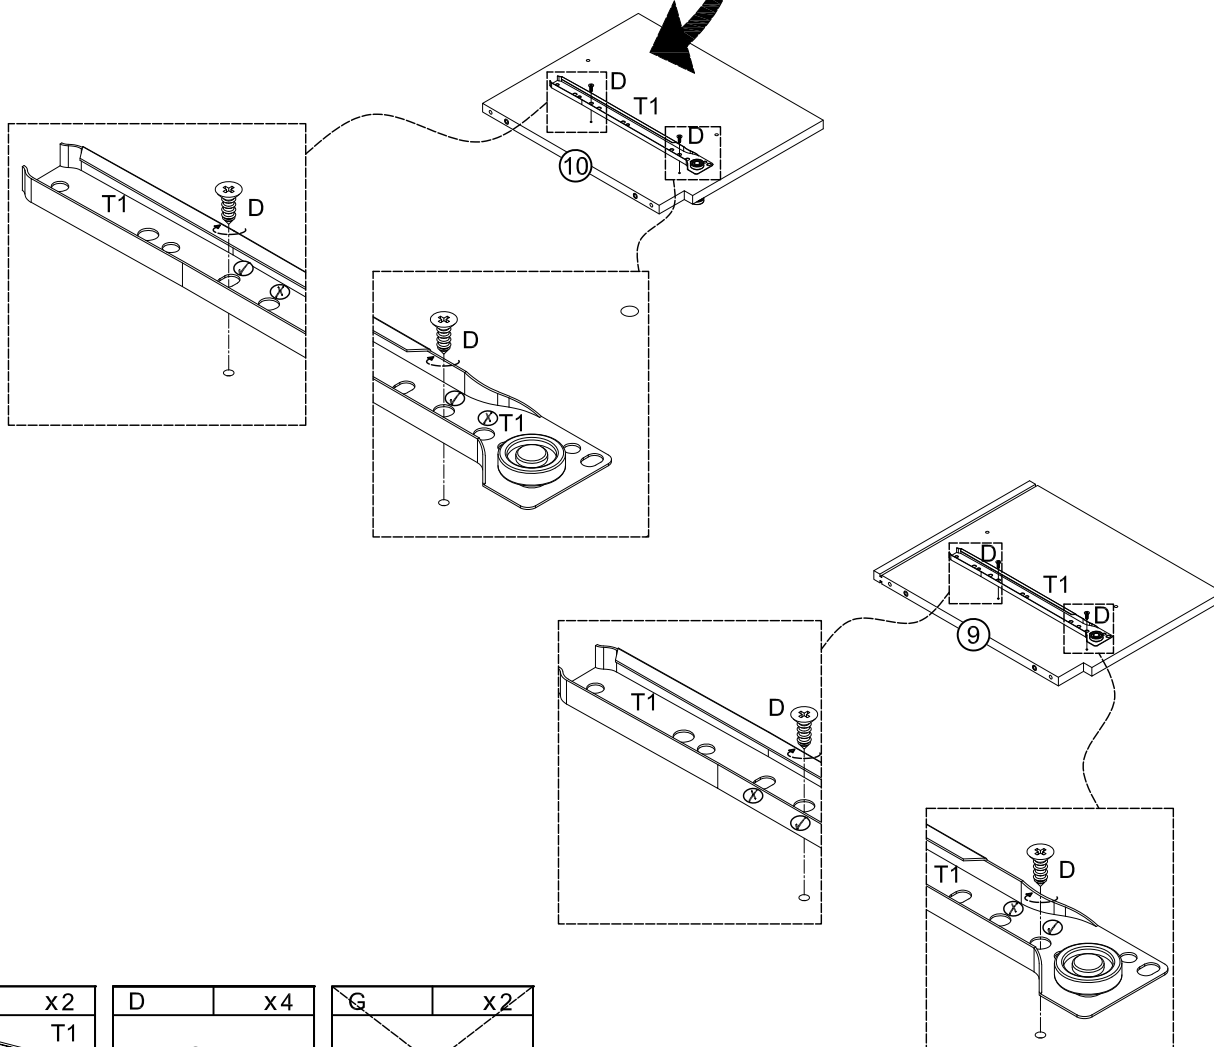



T	x2	D	x4	G	x2
T1					
		$\Phi 3.5 \times 12 \text{mm}$		$\Phi 4 \times 14 \text{mm}$	

9

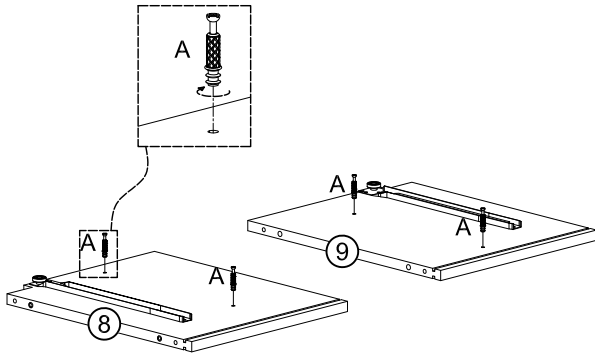

A	x8
	
Φ6x36mm	


10

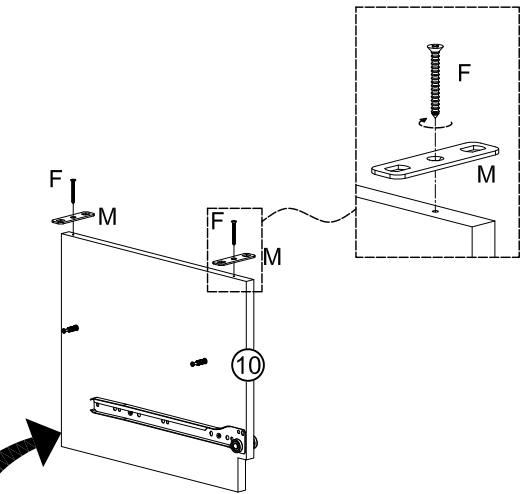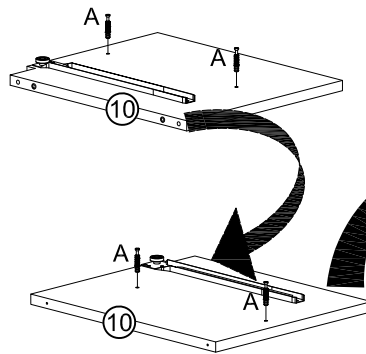

M	x2
	


F	x2
	
Φ4x35mm	

11

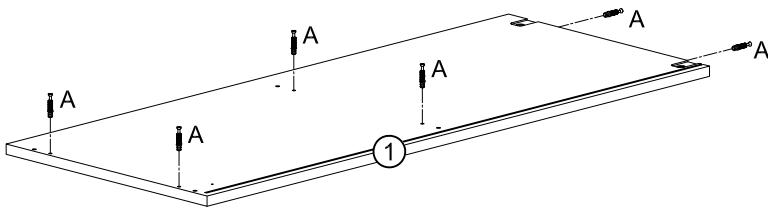

A	x10
	
Φ6x36mm	


12

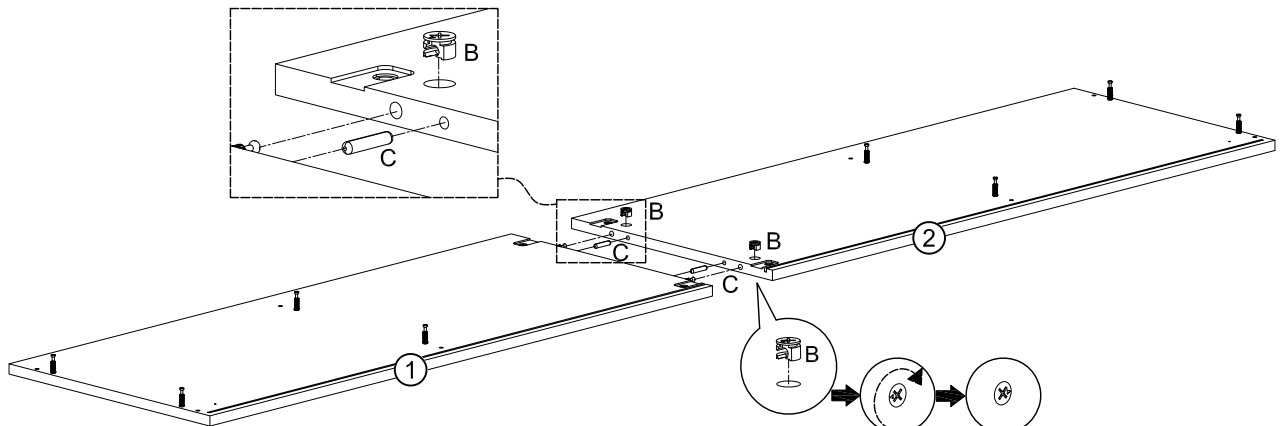

B	x2
	
Φ15mm	


C	x2
	
Φ6x30mm	

13

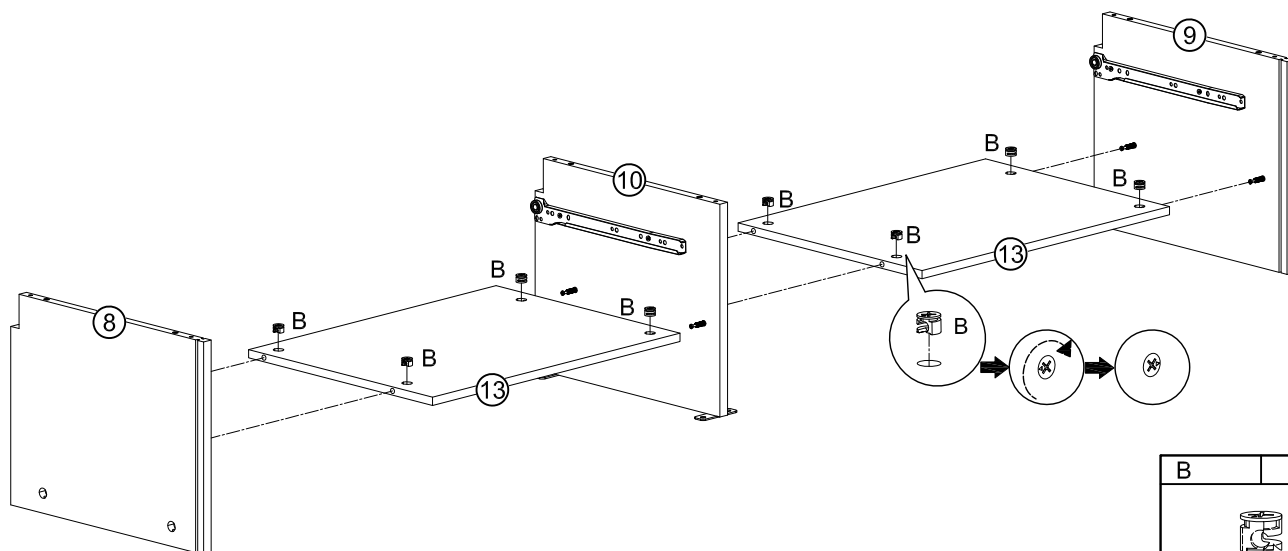


B	x8
	
Φ15mm	

14

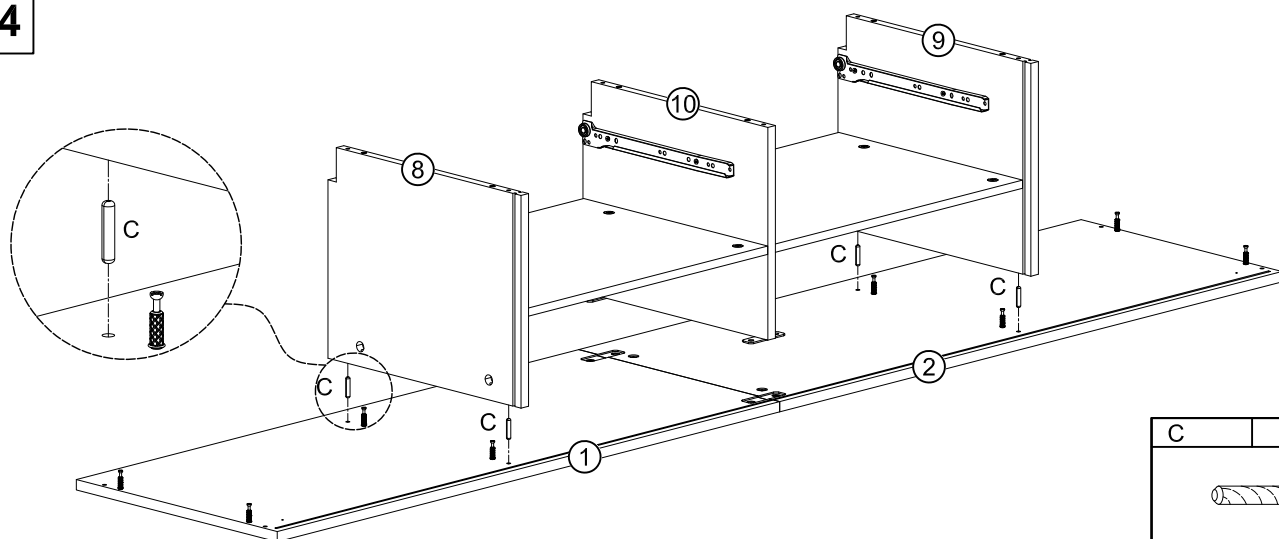

C	x4
	
Φ6x30mm	


15

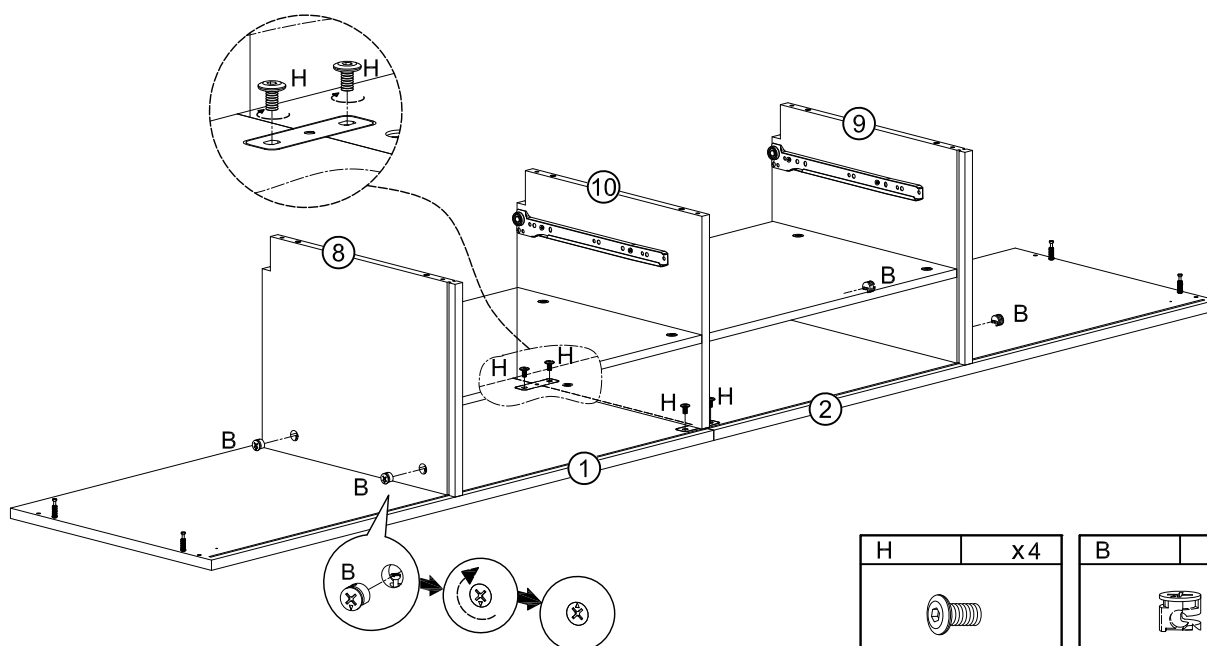

H	x4
	
M6x10mm	


B	x4
	
Φ15mm	

16

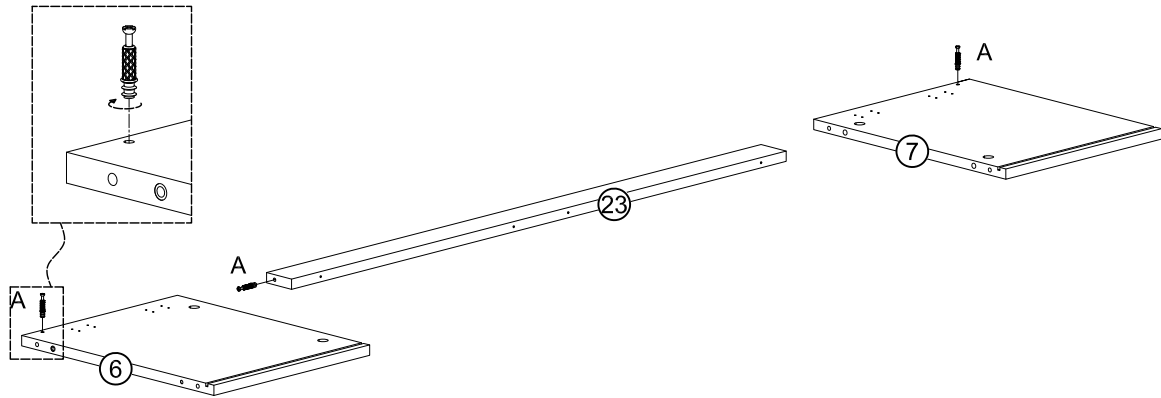


A	x3
Φ6x36mm	

17

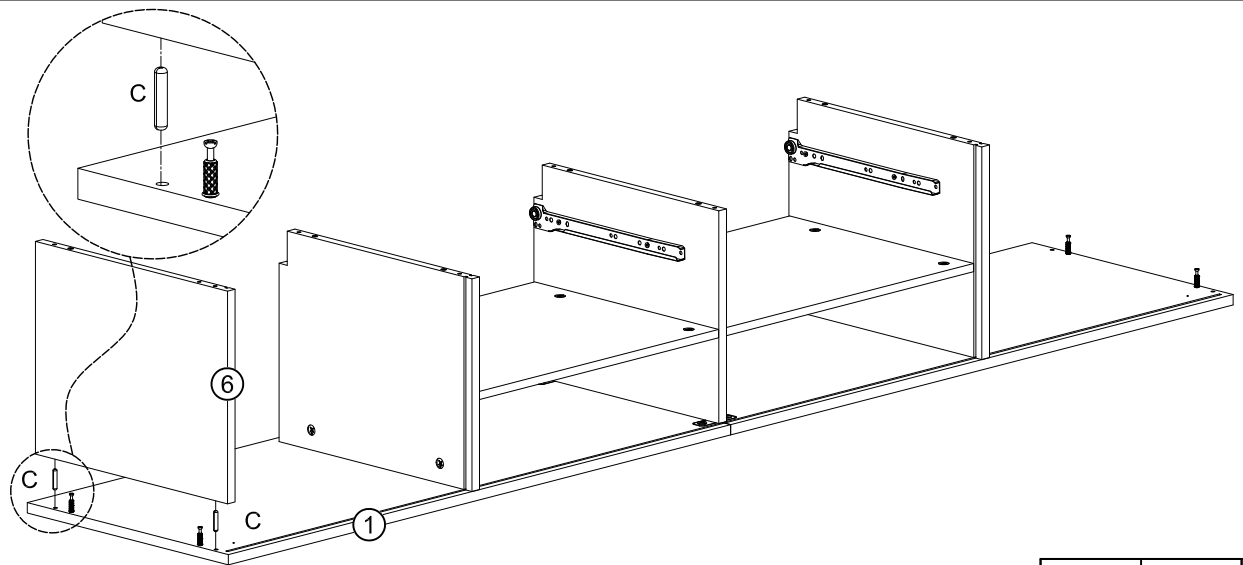


C	x2
Φ6x30mm	

18

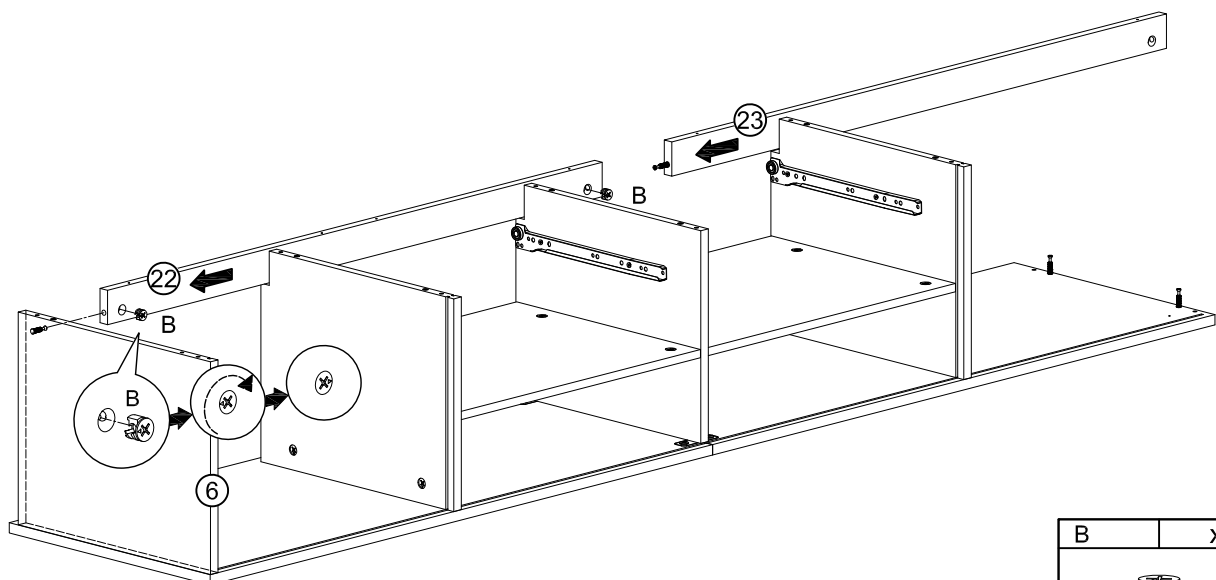


B	x2
Φ15mm	


19

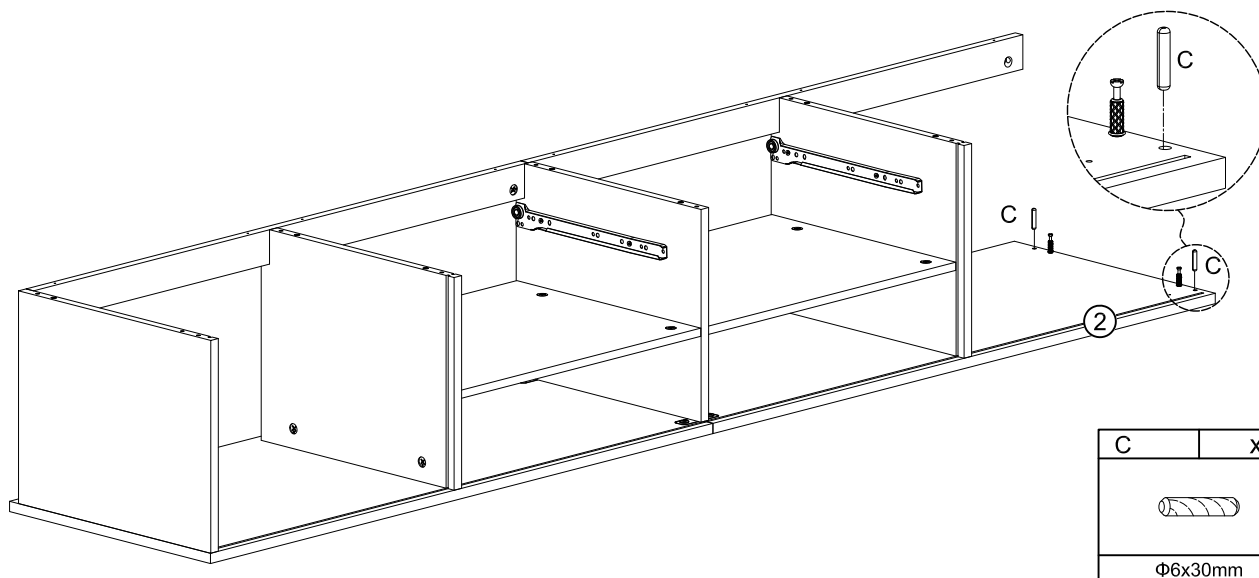


20

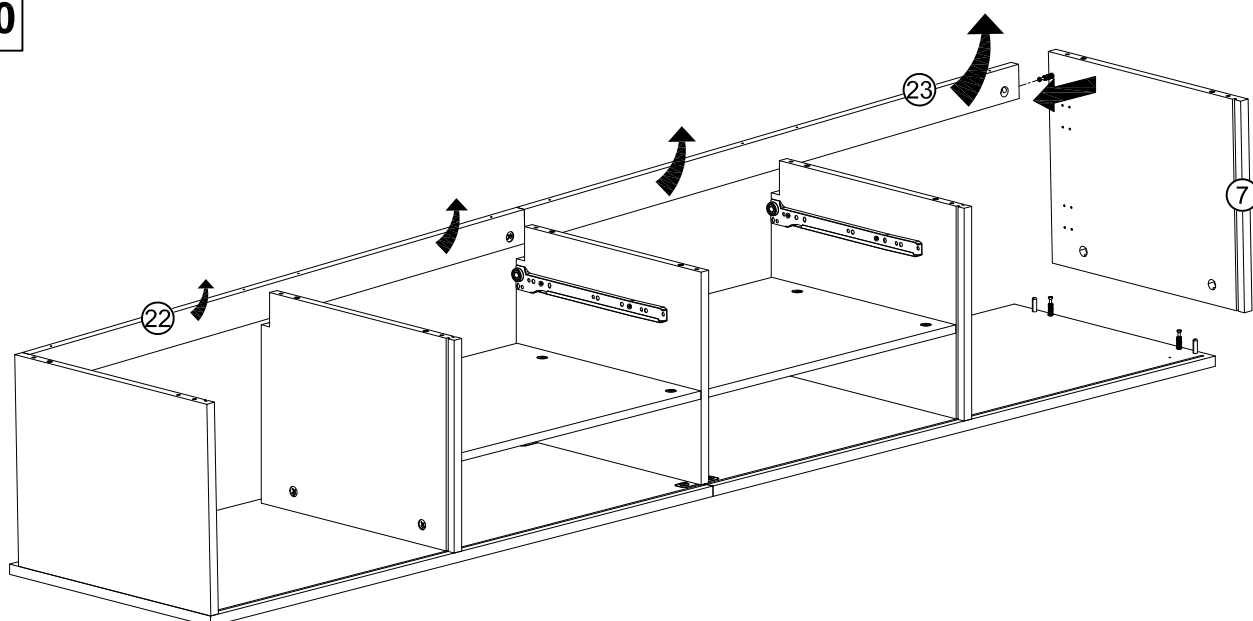

21

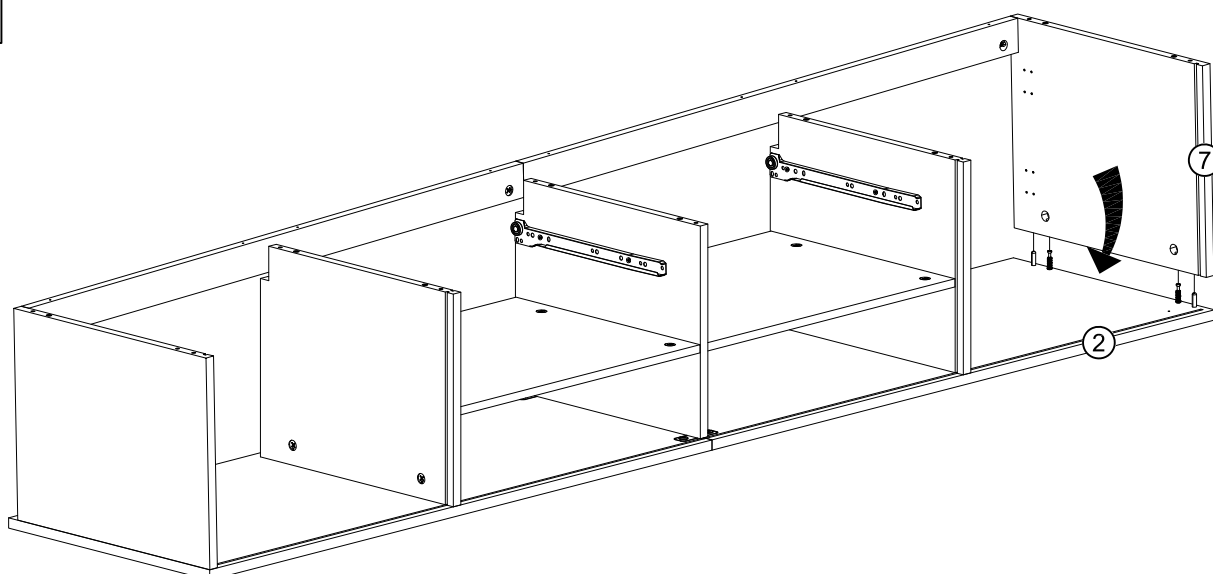


22

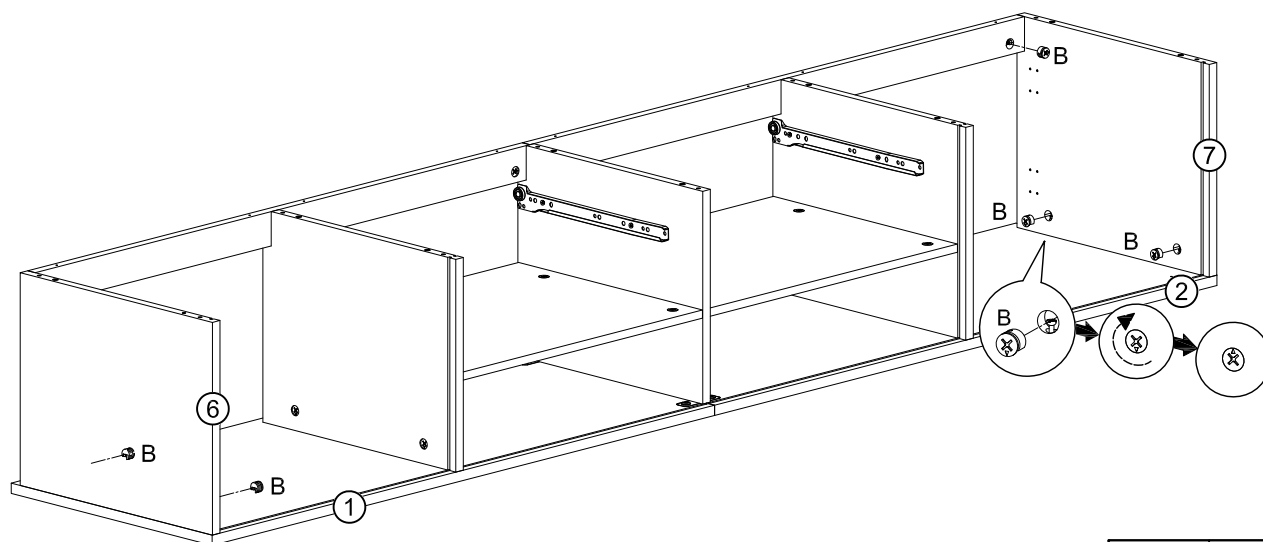


B	x5
	
Φ15mm	

23

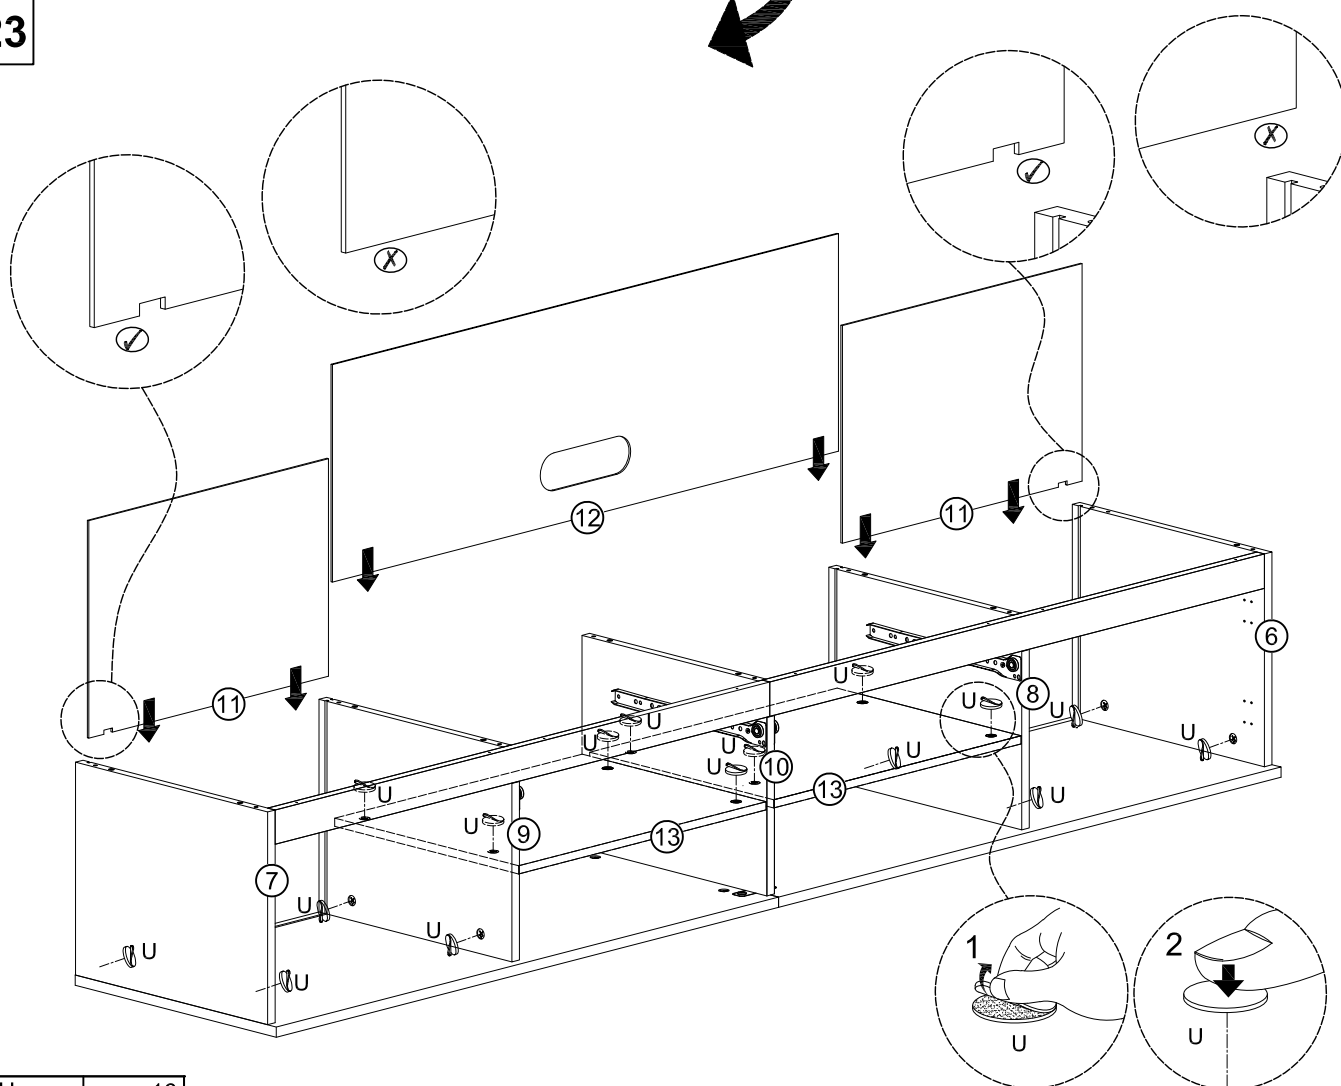


U	x16
	
Φ20mm	


24

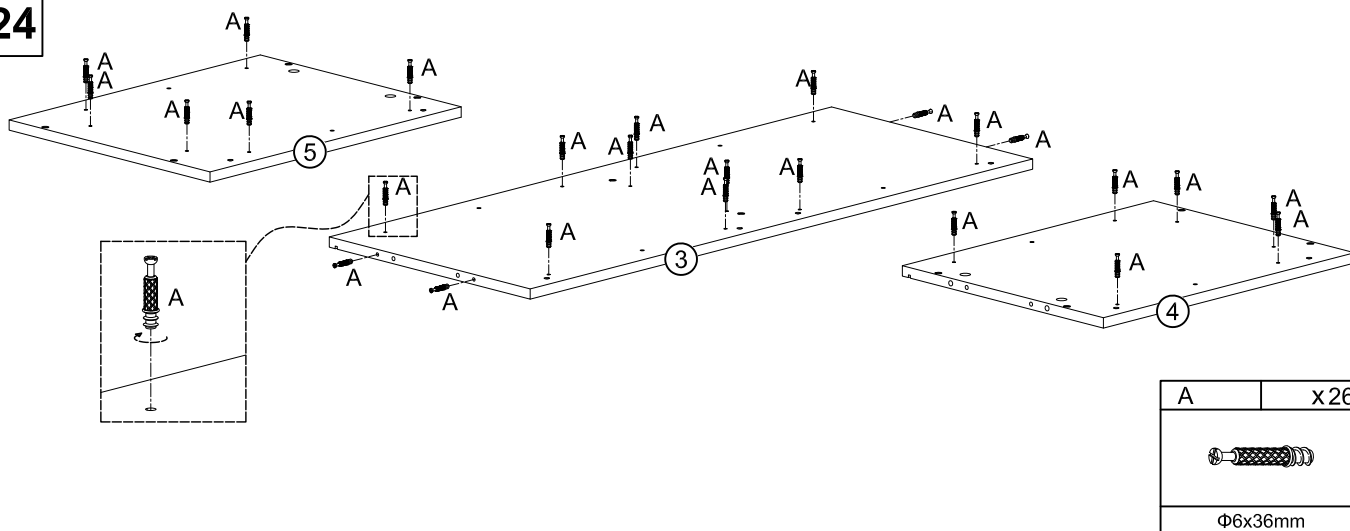


25

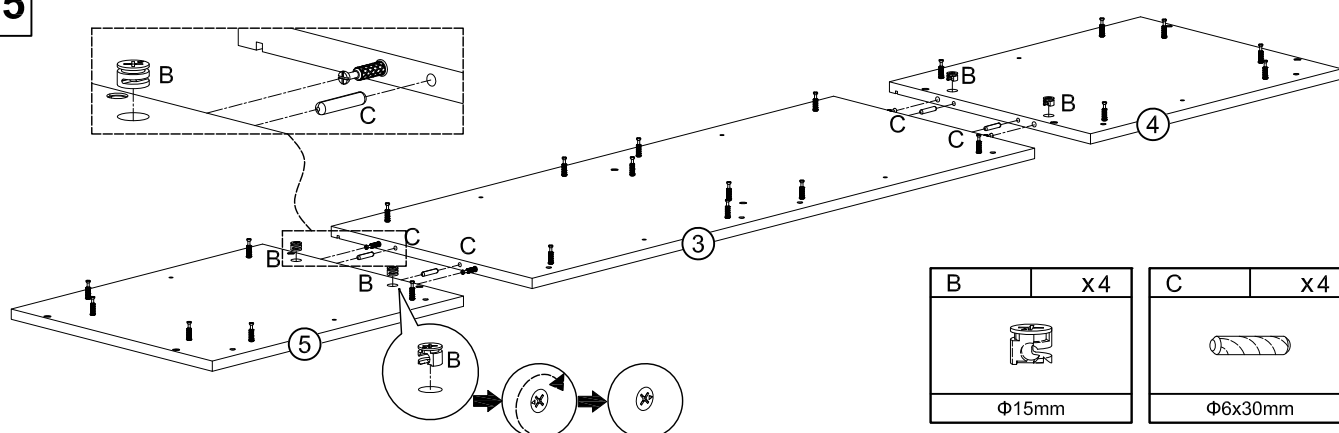


26

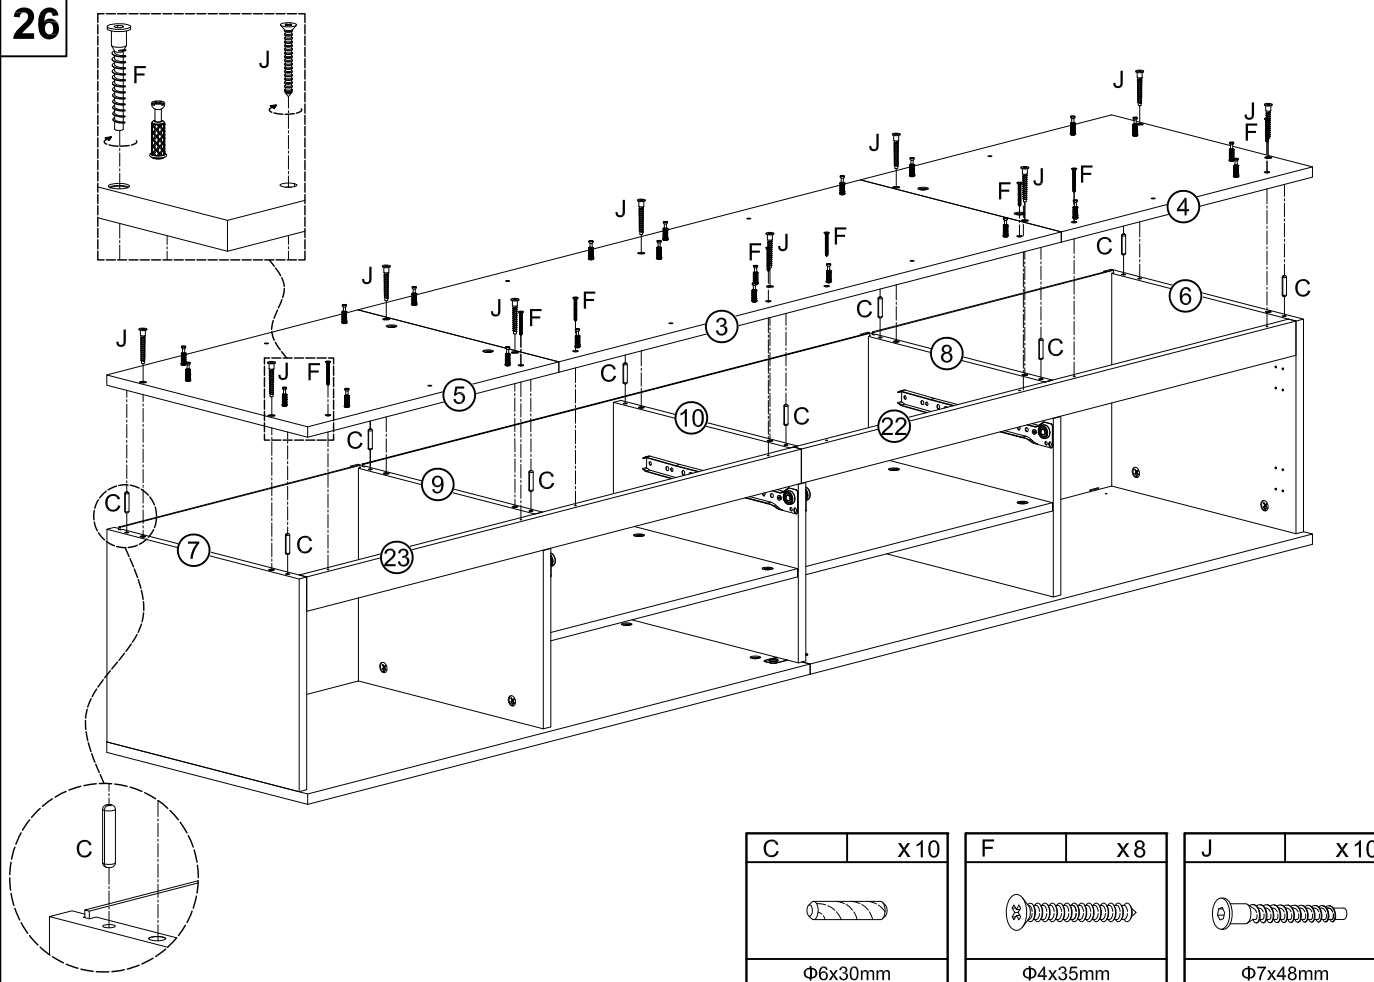


27

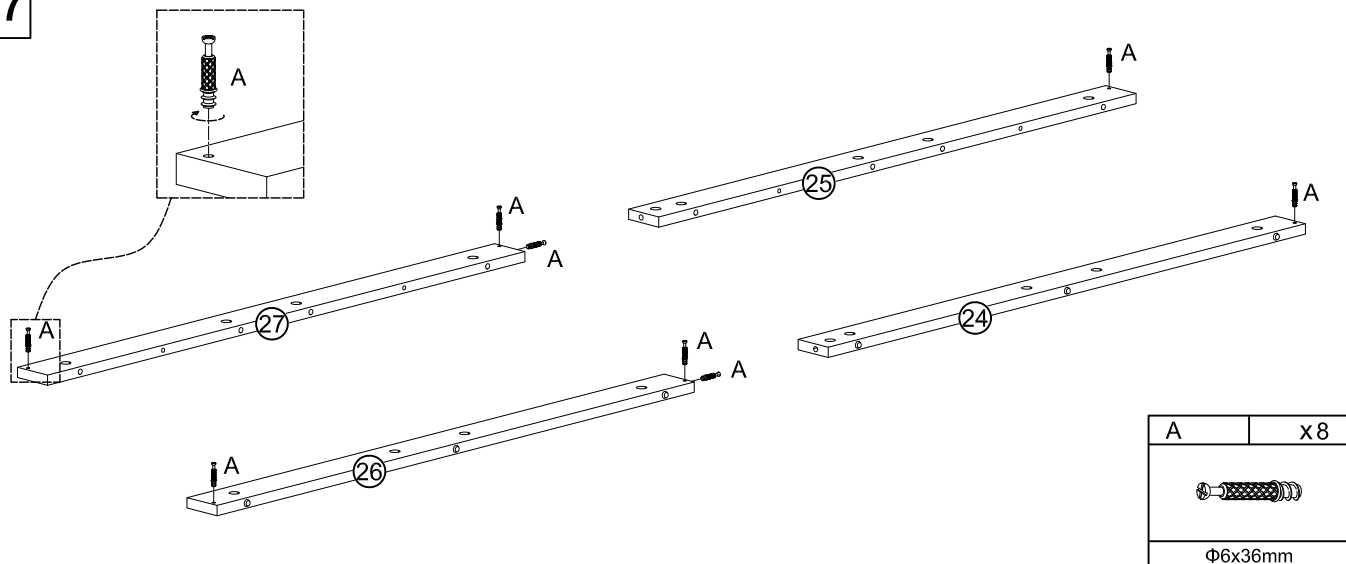


28

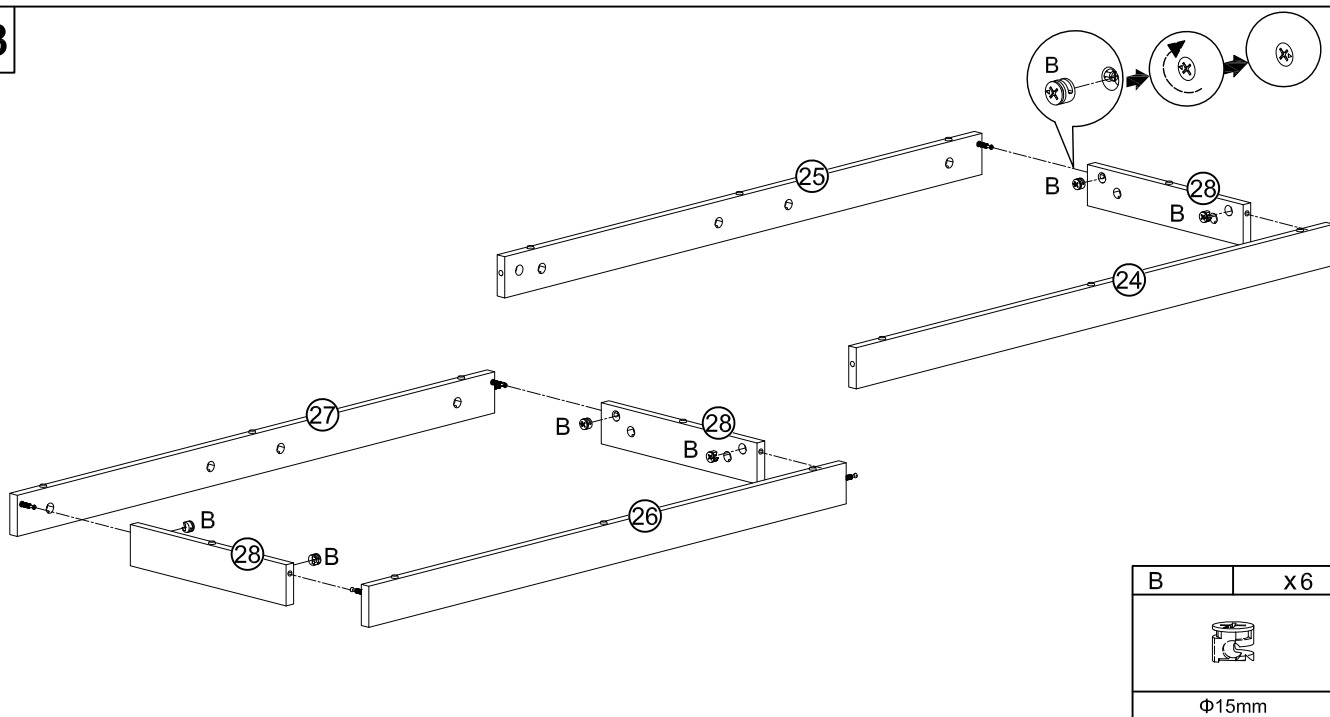

29

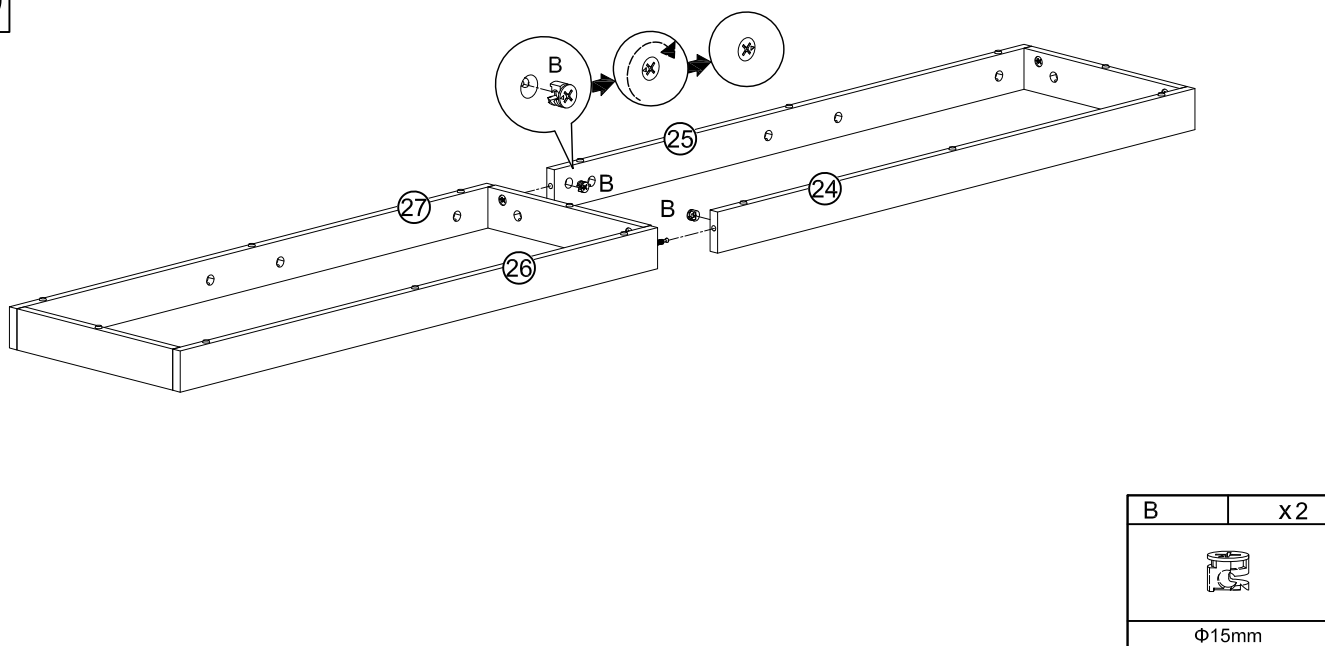


30

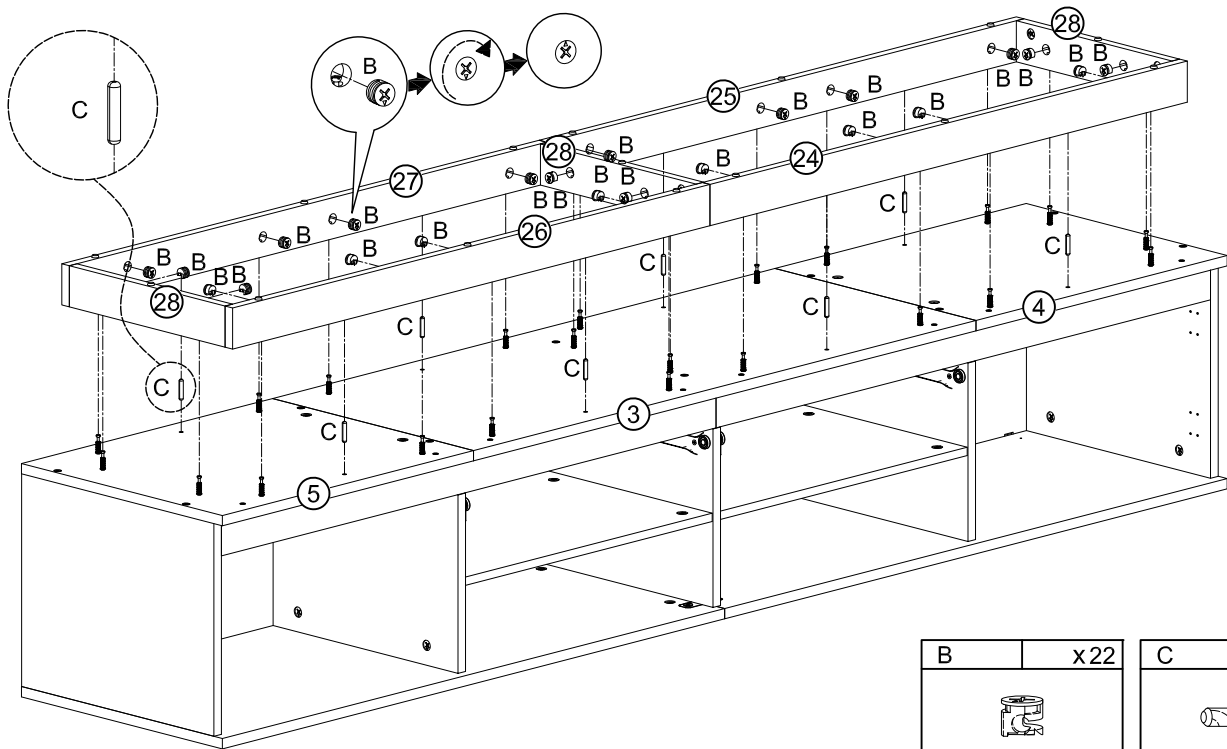


B	x22	C	x8
			
Φ15mm		Φ6x30mm	

31

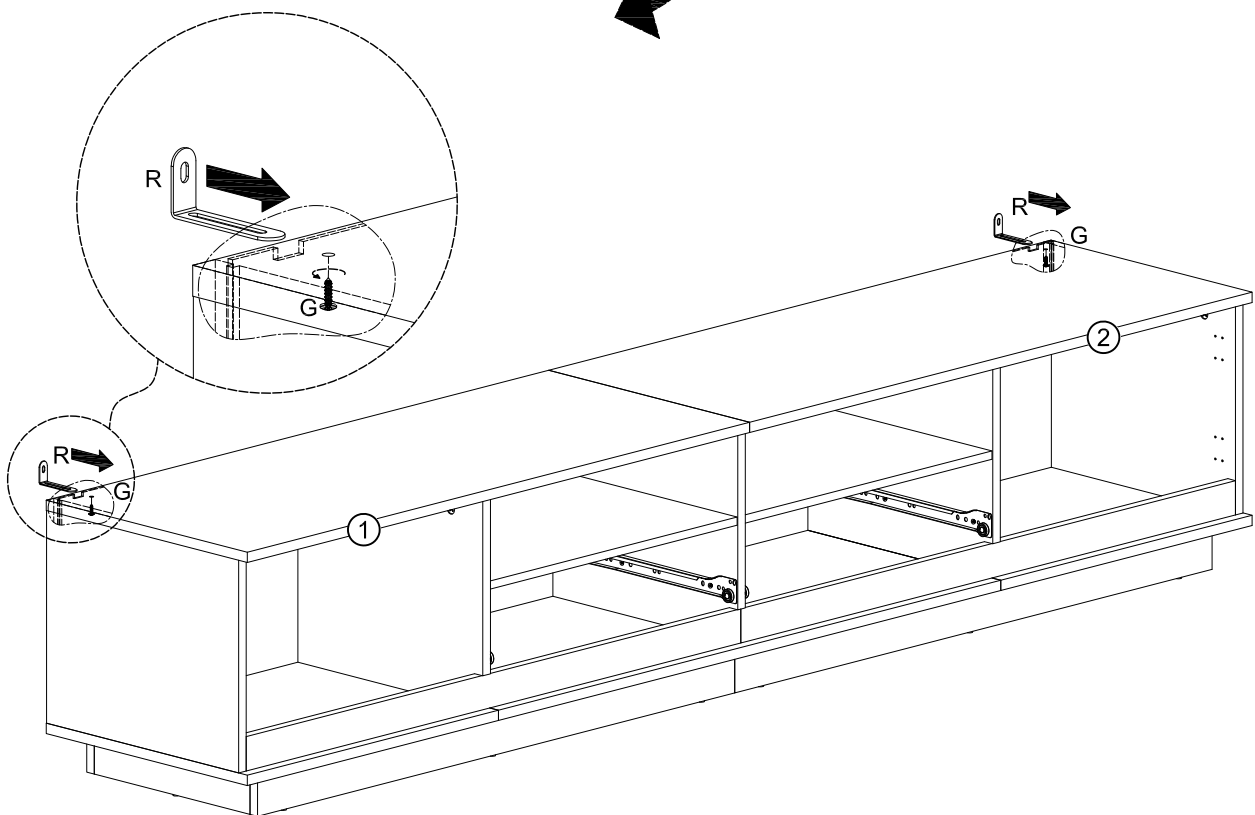


R	x2	G	x2	D	x58
					
		Φ4x14mm		Φ3.5x12mm	

32


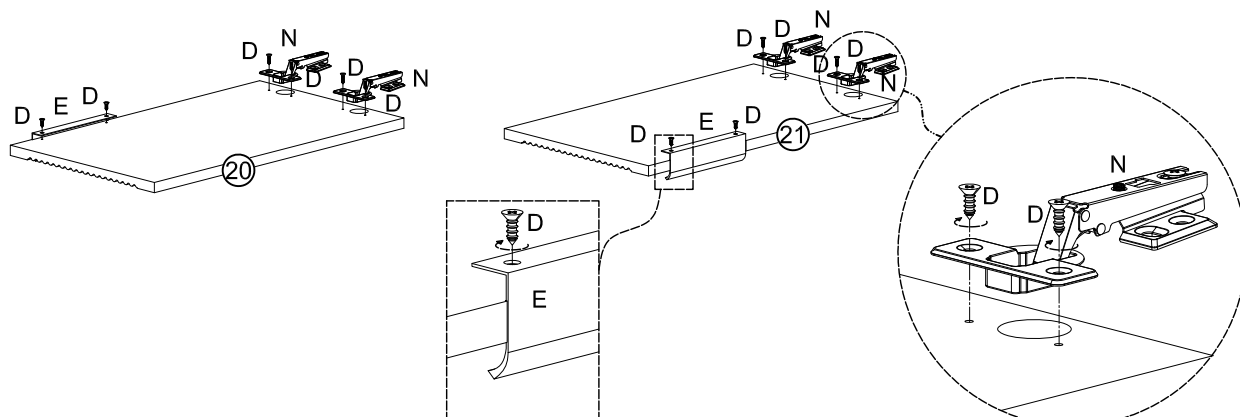


E	x2
	
150mm	

N	x4
	

D	x12
	
Φ3.5x12mm	






33

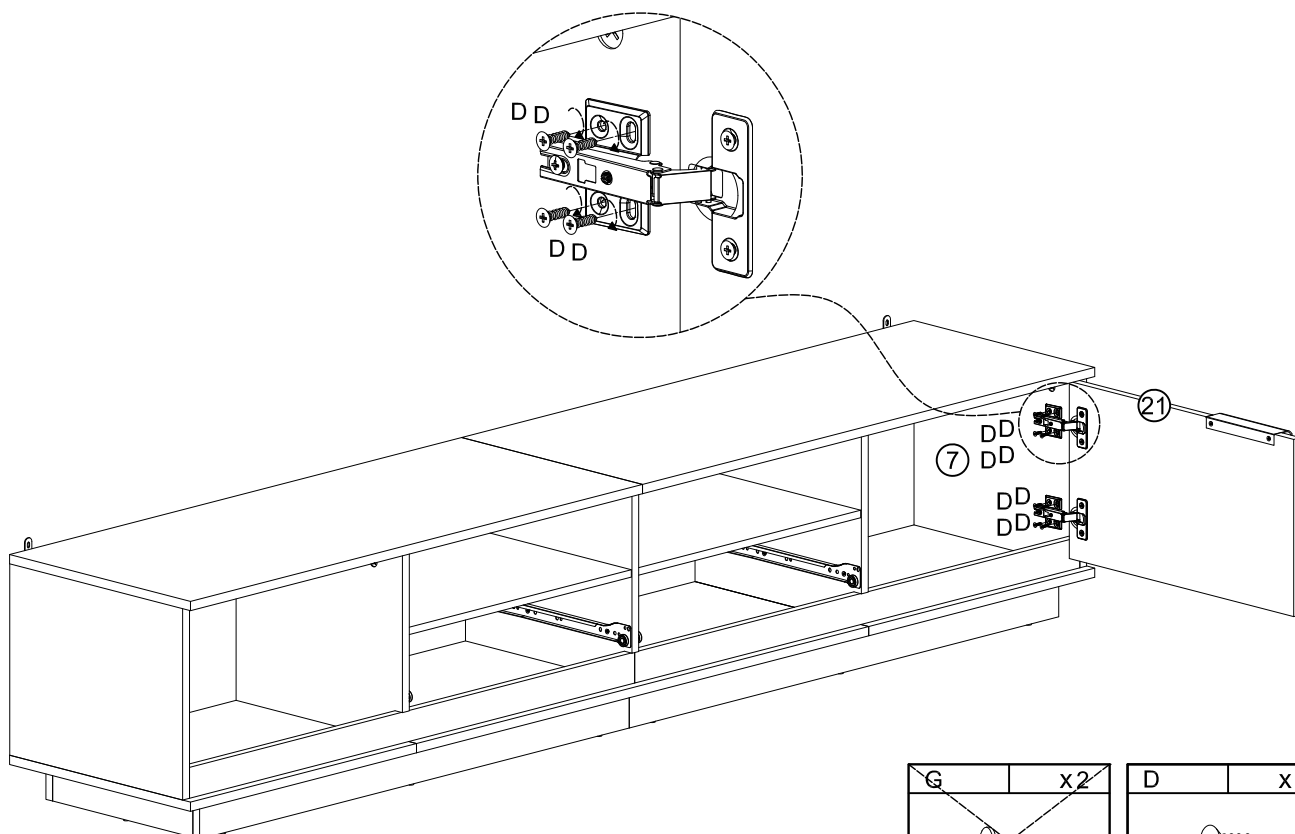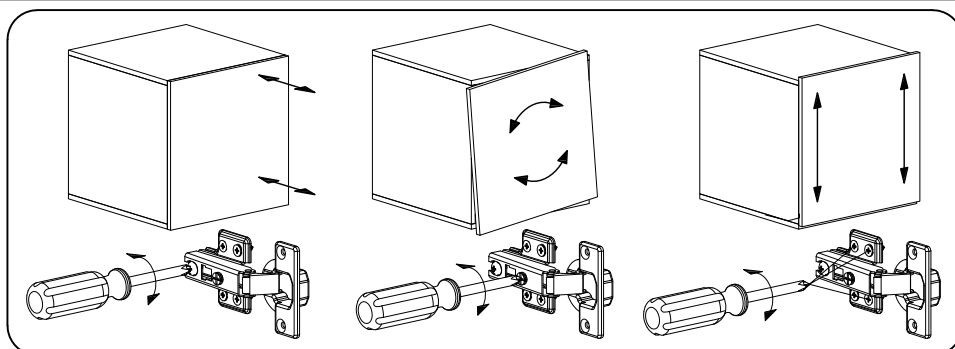


G	x2
	
Φ4x14mm	

D	x8
	
Φ3.5x12mm	


34

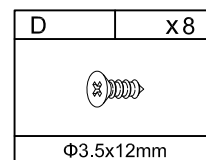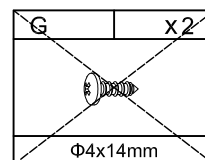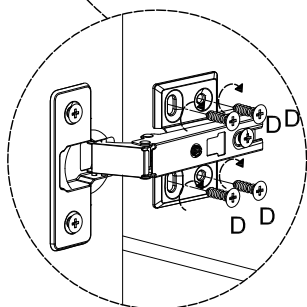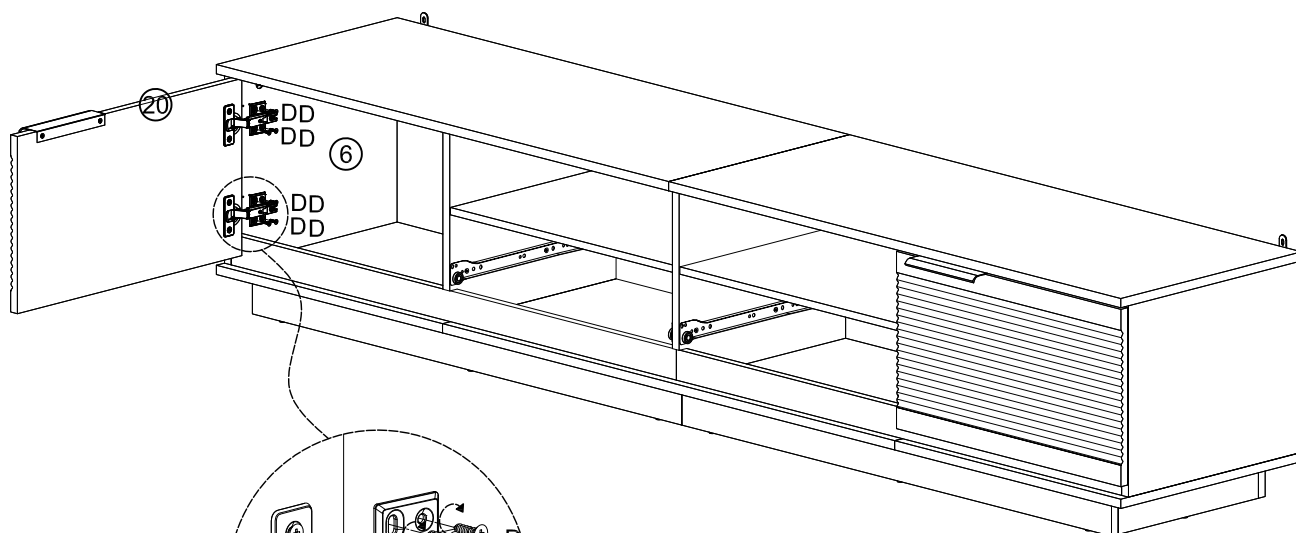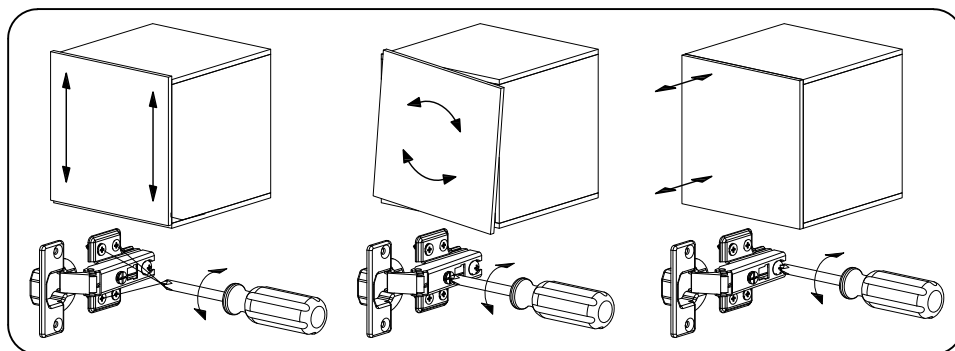

35

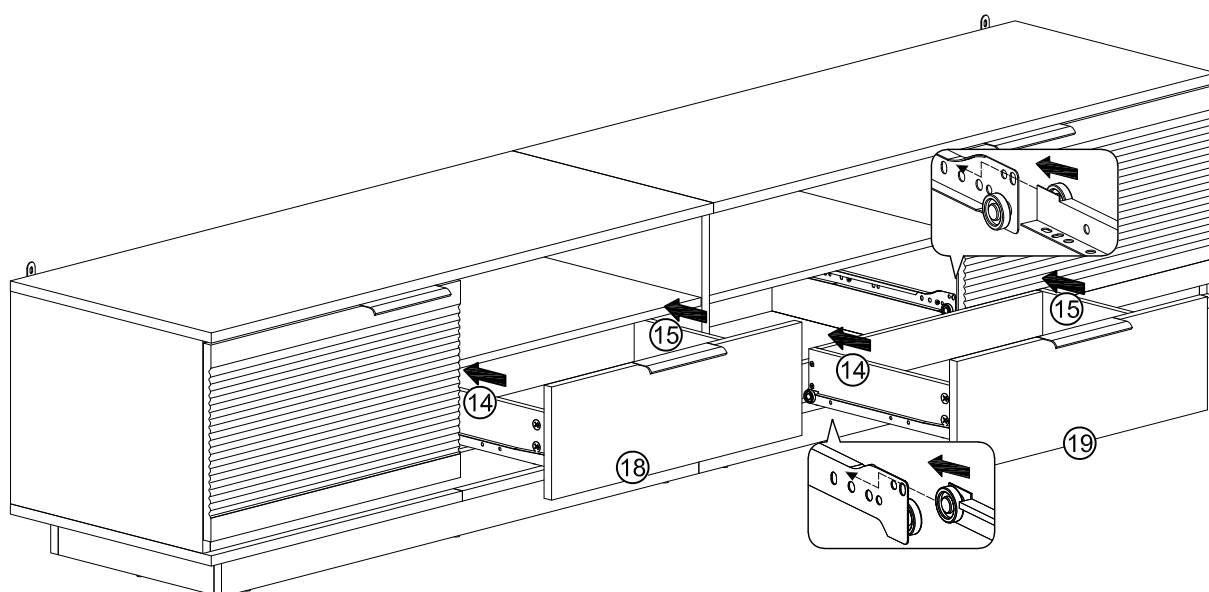

36

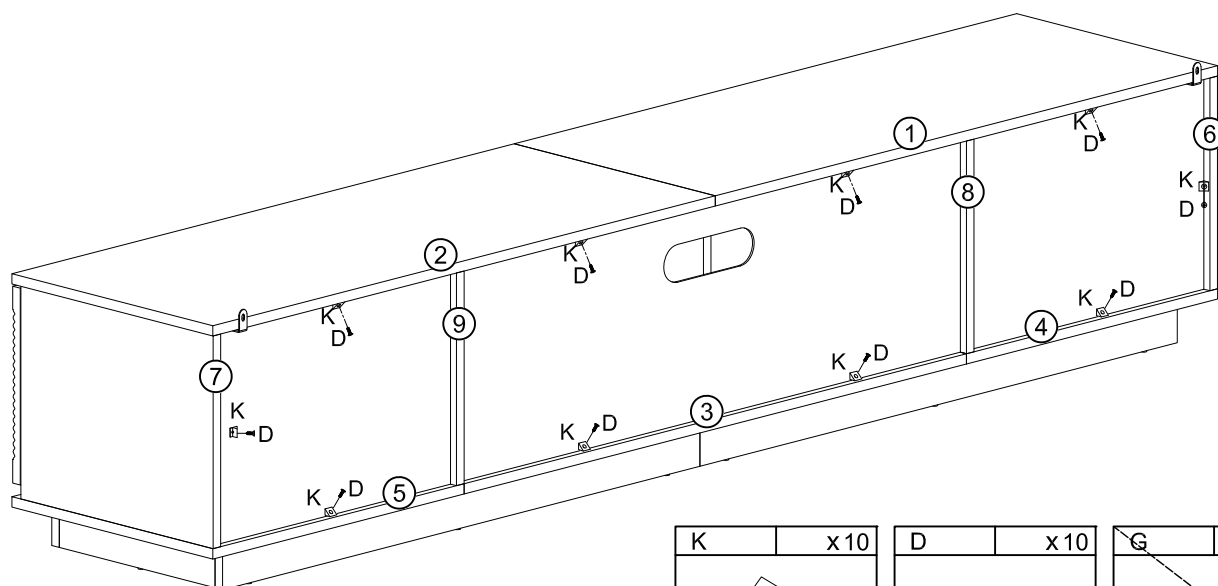


K	x10
	
15x10mm	

D	x10
	
Φ3.5x12mm	

G	x2
	
Φ4x14mm	

37

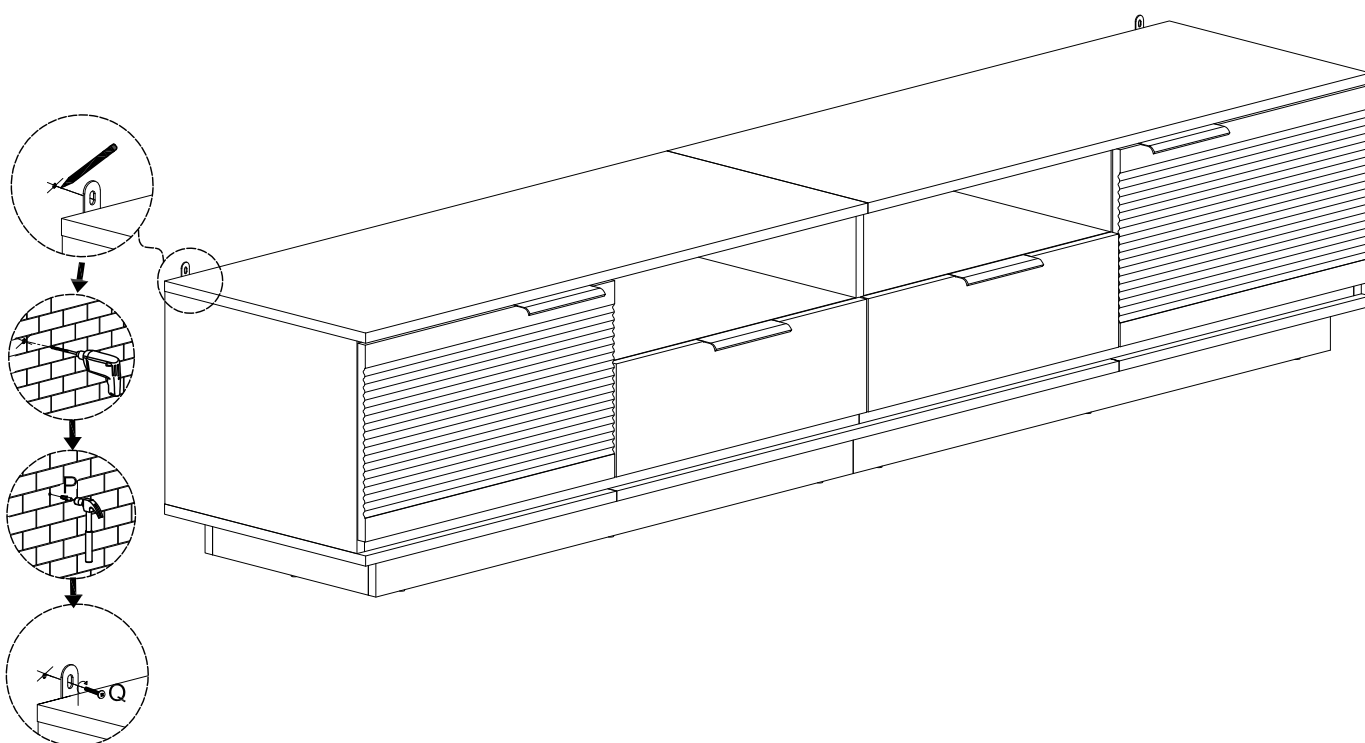

P	x2
	
Φ4x45mm	

Q	x2
	
Φ8x35mm	