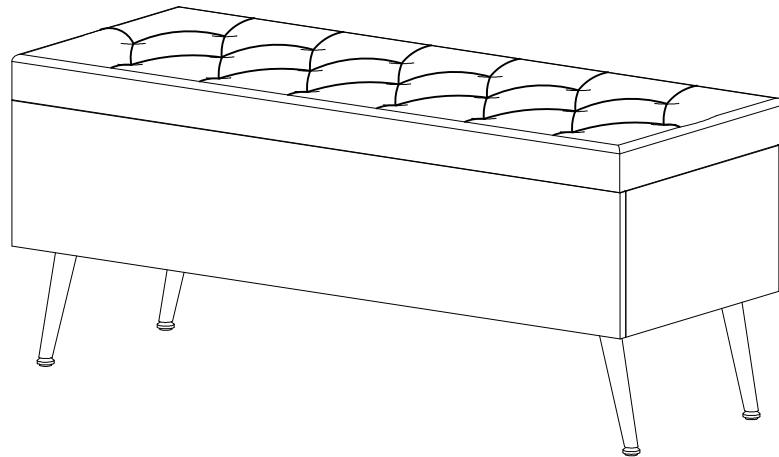


# ASSEMBLY INSTRUCTION

**ITEM#N719P305620**








## Storage Bench Chair







### IMPORTANT NOTE

- \*\* Place all parts on a lean and smooth surface as a rug or carpet to avoid the parts from being scratched.
- \*\* Before you begin, please review the assembly instruction step by step.
- \*\* Return and Warranty Policy:
  - We strive to offer the highest quality products. We also provide positive solutions with replacement or refund if needed.
  - If the item is damaged or defective, please take photos to show the problem and email to the seller.
  - Please do not return back the product before contact the seller.


PART LIST : N719P305620

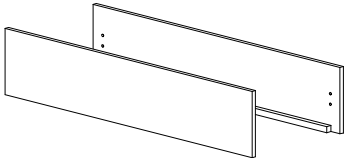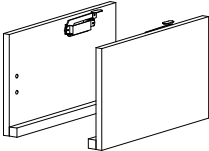Part No.	Part Image	Part Name	QTY
A		Top Cover	1
B		Long Panel	2
C		Short Panel	2
D		Bottom Panel	1
E		Leg	4


## HARDWARE LIST : N719P305620

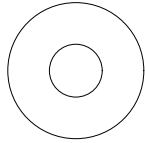Hardware No.	Hardware Image	Hardware Name	QTY
1		JCBC M6 x 20mm	16
2		FLAT WASHER M6	16
3		SPRING WASHER M6	16
4		L-BRACKET	4
5		CSK M4 x 15mm	12
6		CSK M4 x 20mm	12


# Sofa Overall Assembly Drawing

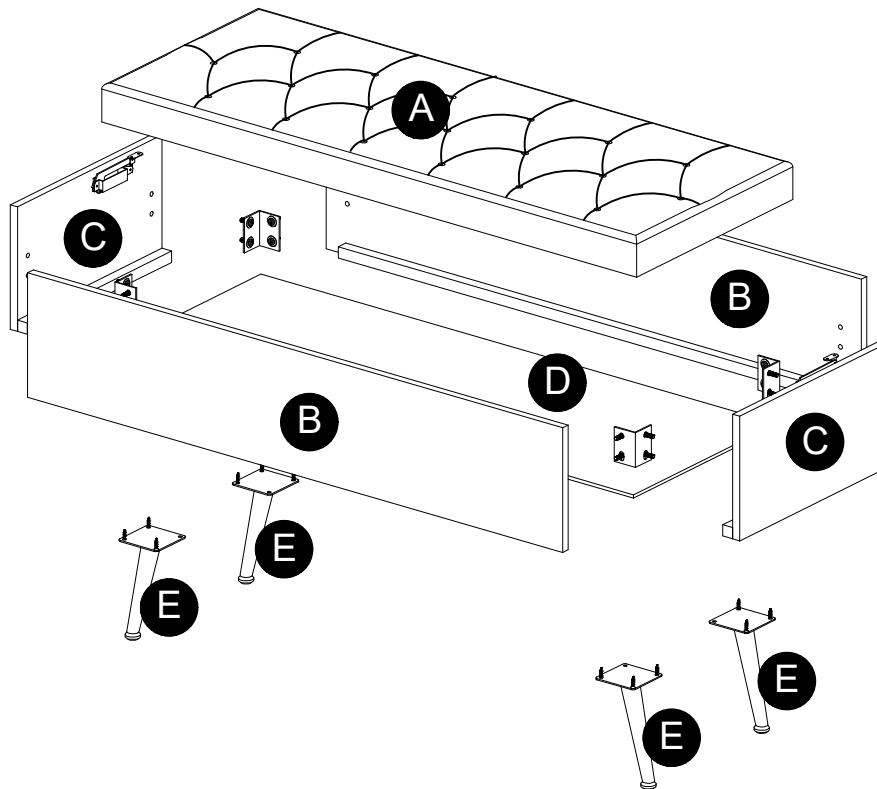


## Step 1

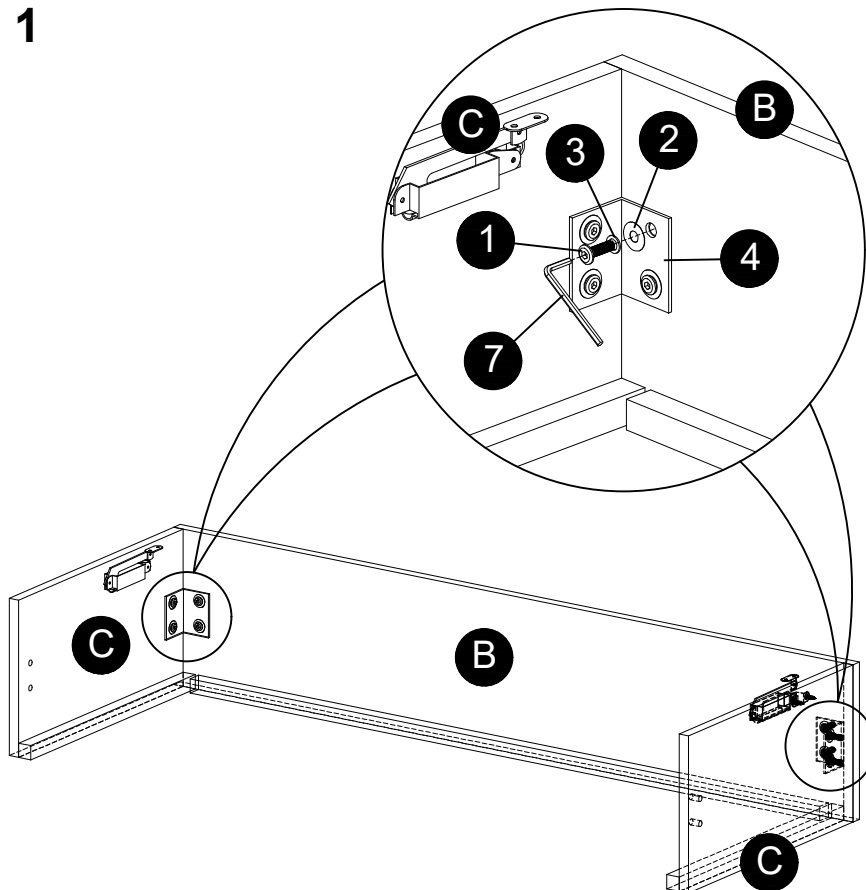


## Step 2

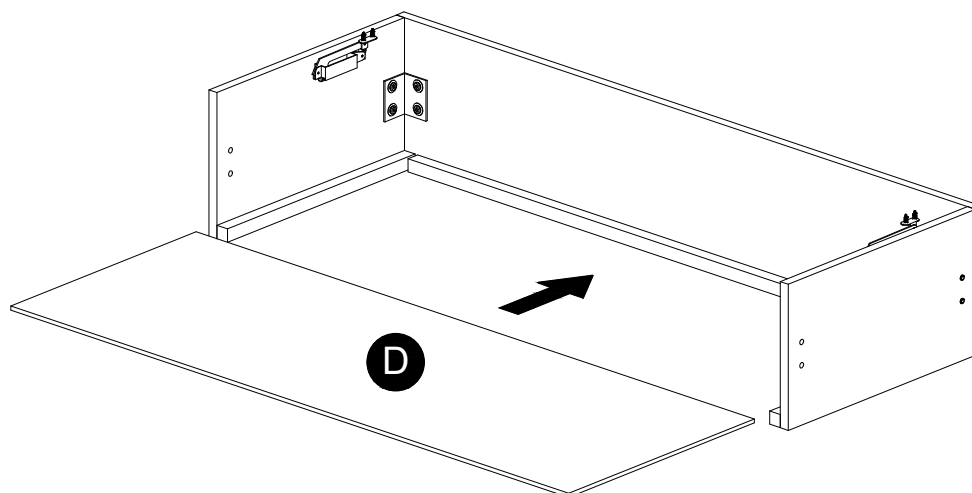


## Step 3

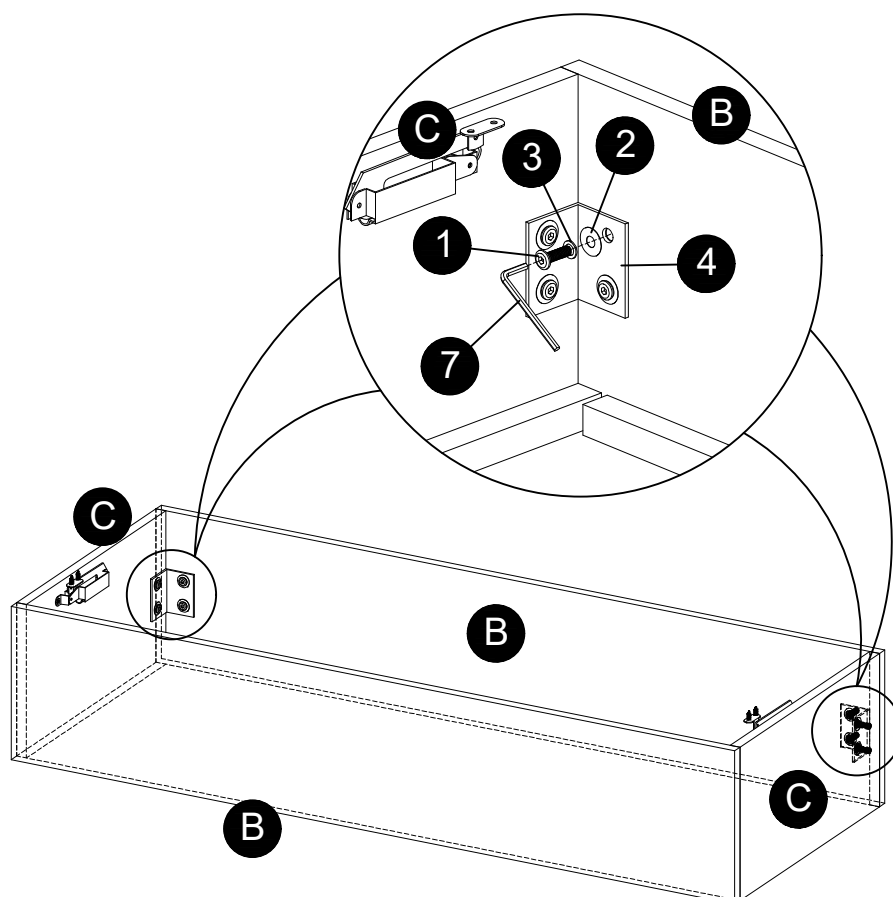


## Step 4

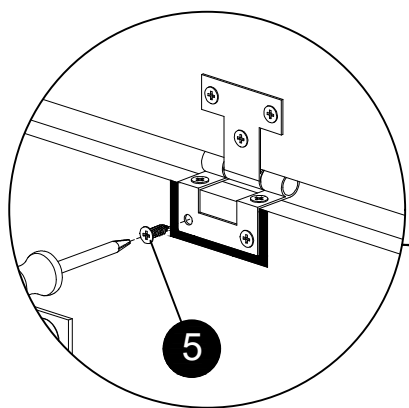


- 1) Place the Bracket to the white mark and tighten the Self Drilling Screw.

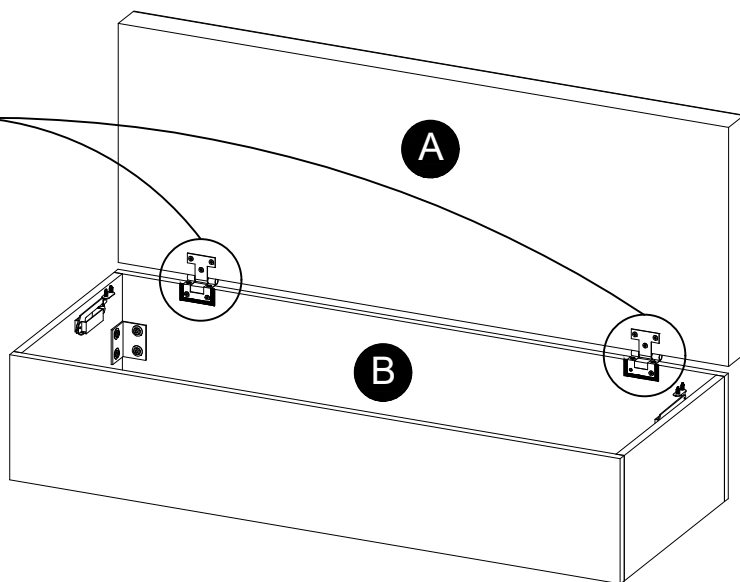


## Step 5

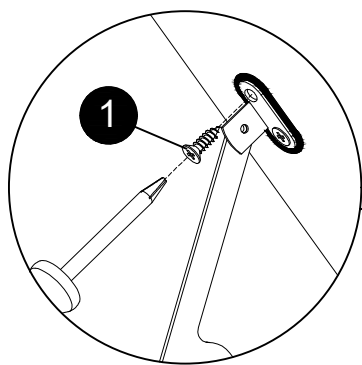


- 1) Place the Bracket to the white mark and tighten the Self Drilling Screw.

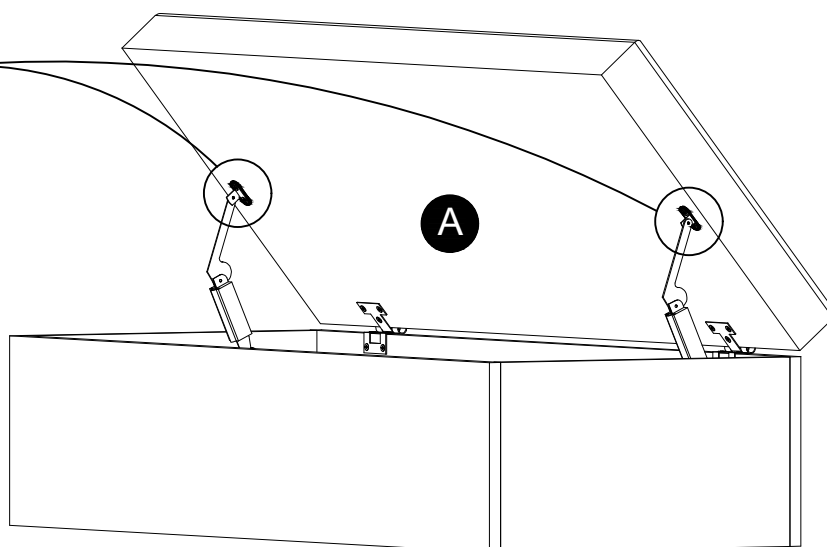

## Step 6

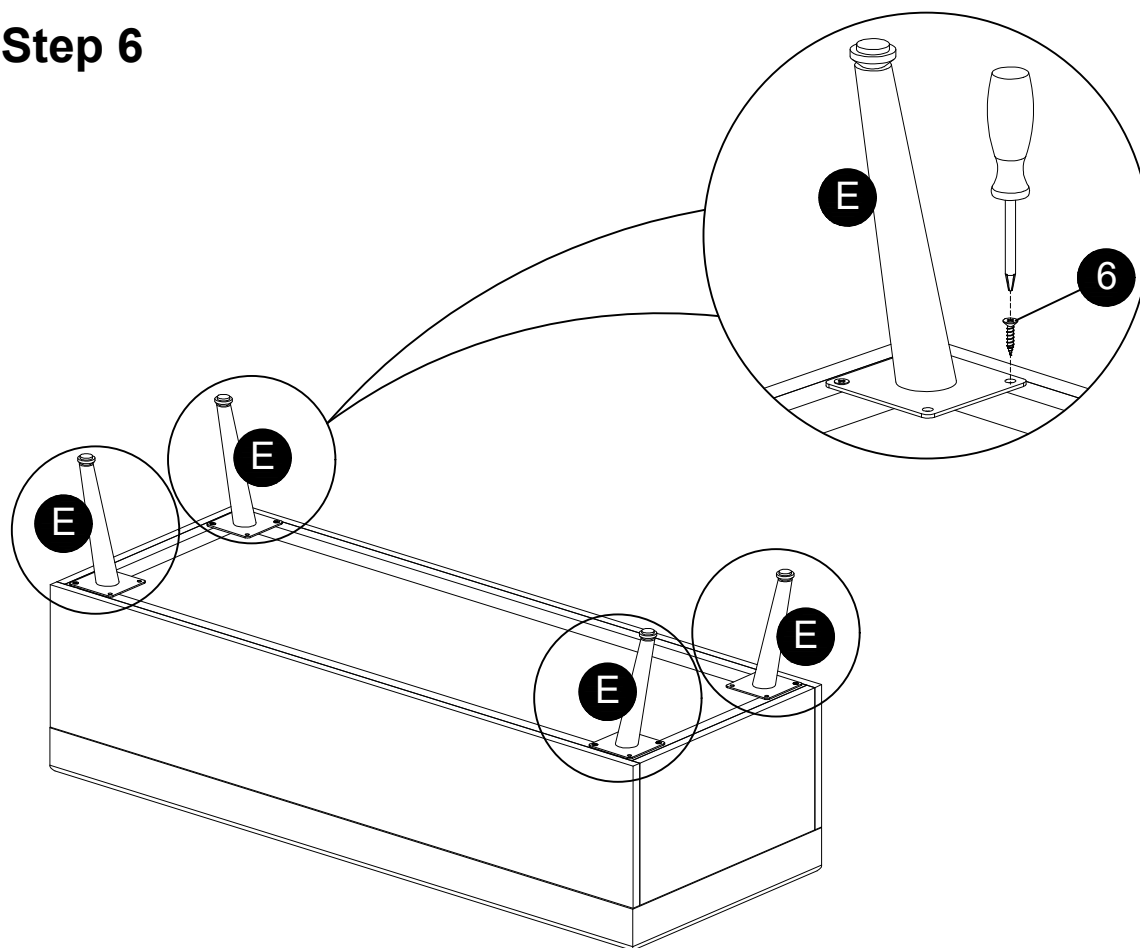

## Step 7

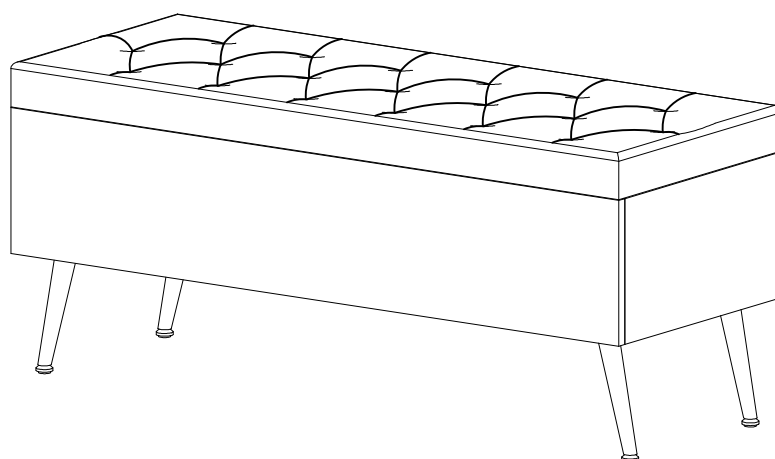

FINISHED