



DJYC2513

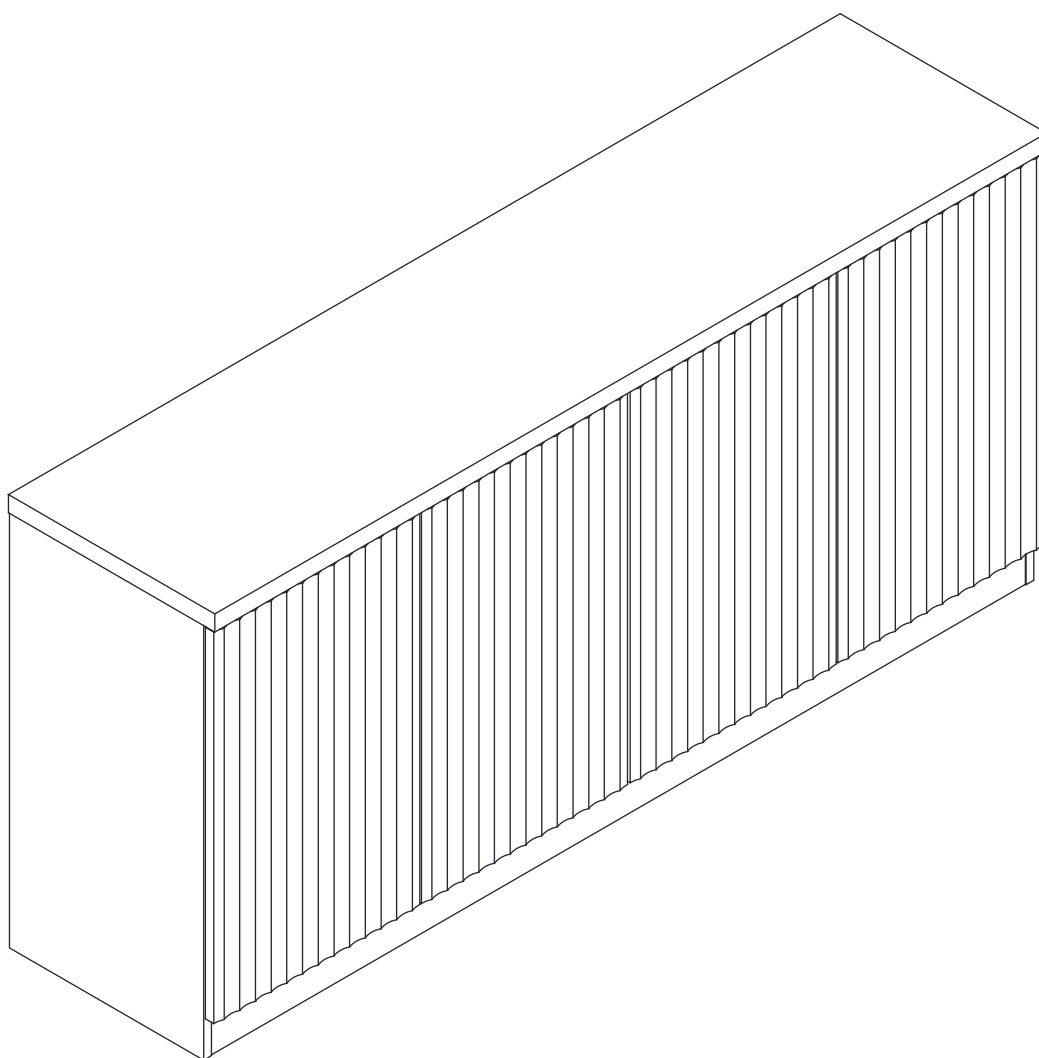










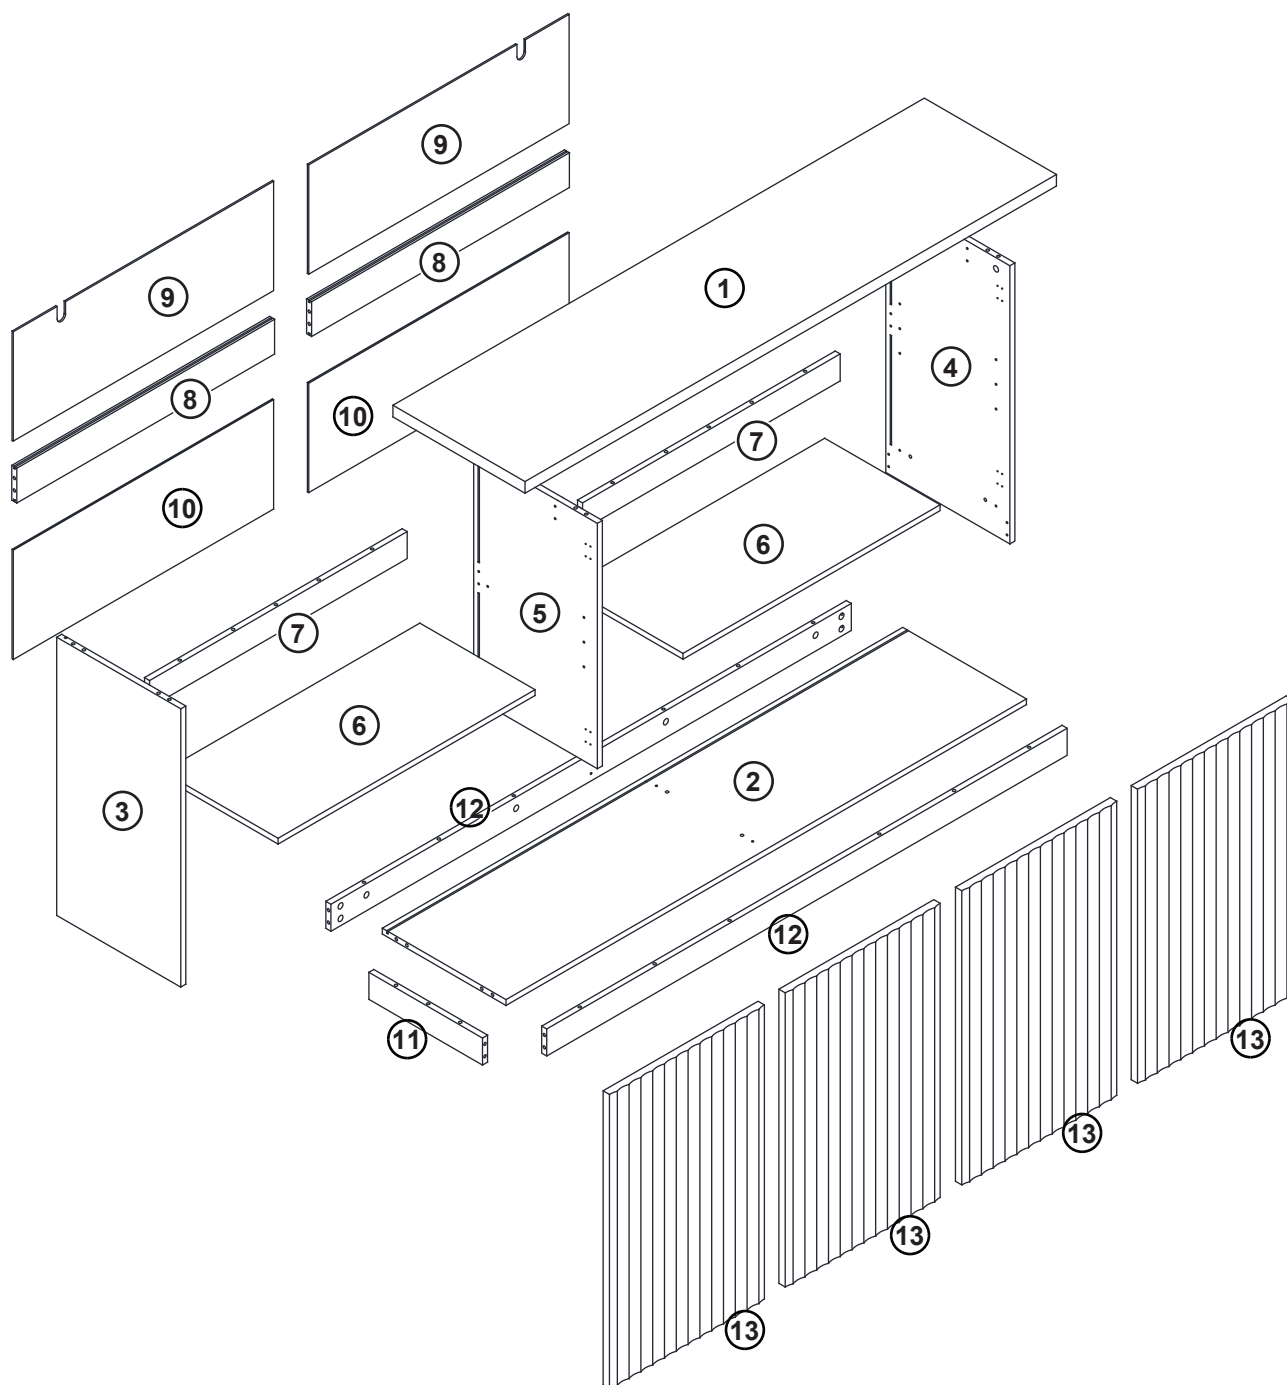


ASSEMBLY INTRODUCTION





Exploded View







Fitting

 A x 53 M6 x 35 mm	 B x 53 φ15 x 10 mm	 C x 22 φ8 x 30 mm	 D x 4 φ4 x 35 mm	 E x 48 φ3.5 x 14 mm
 F x 18 M4 x 14 mm	 G x 4	 H x 2	 J x 16 φ3 x 16 mm	 K x 8
 L x 2	 M x 4	 N x 4	 O x 1	



Step 1

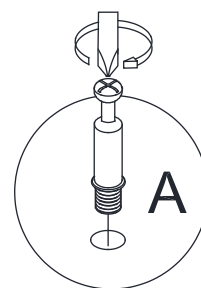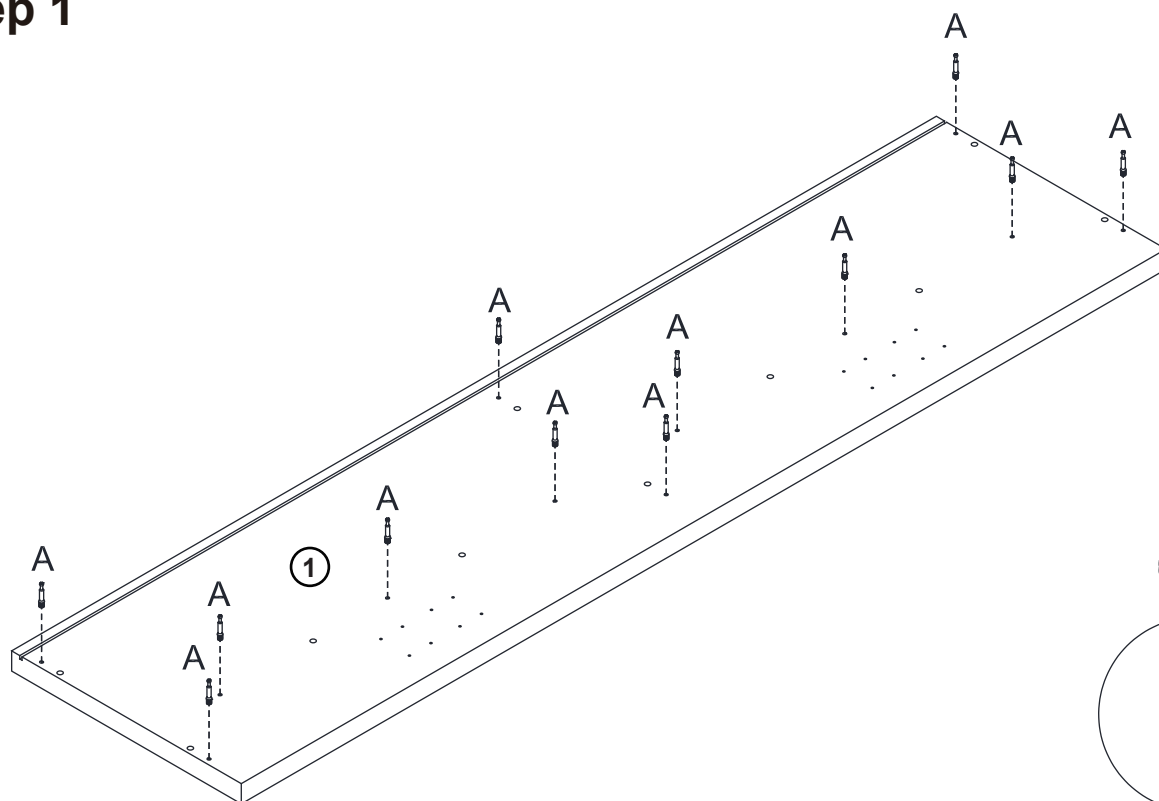



Step 2

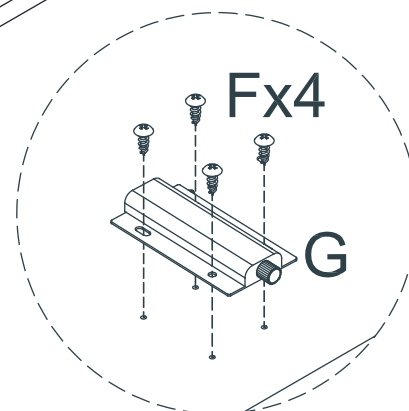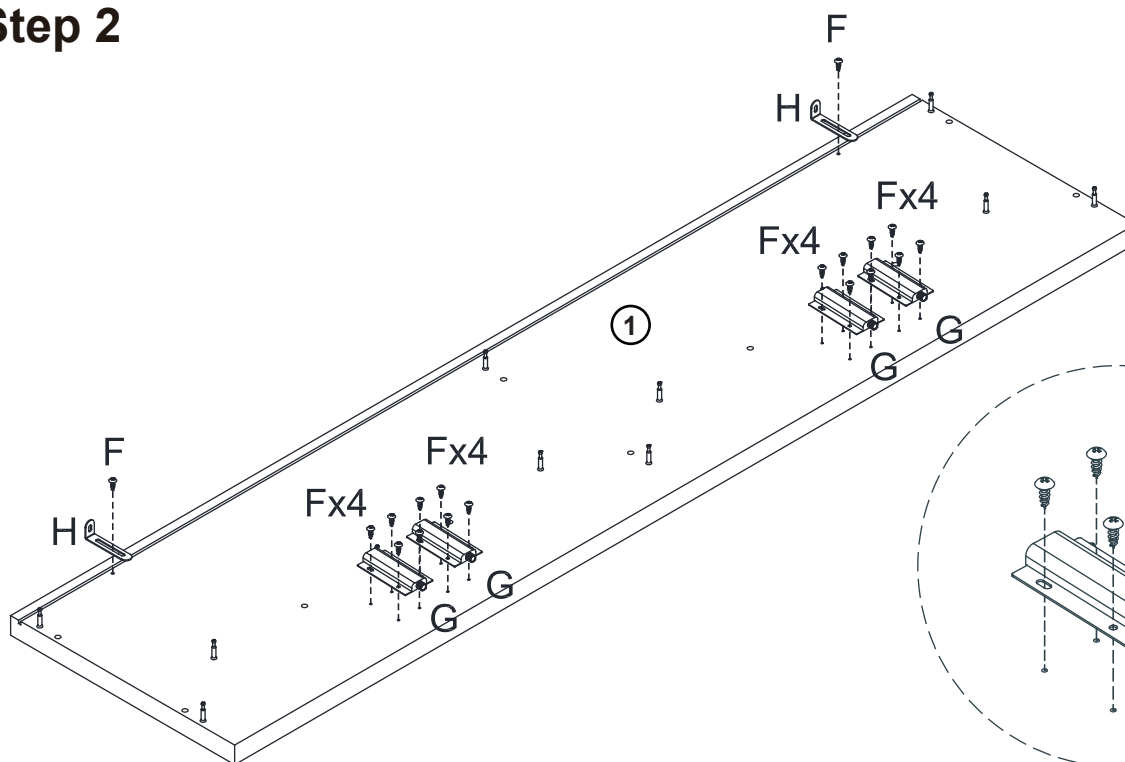



Step 3

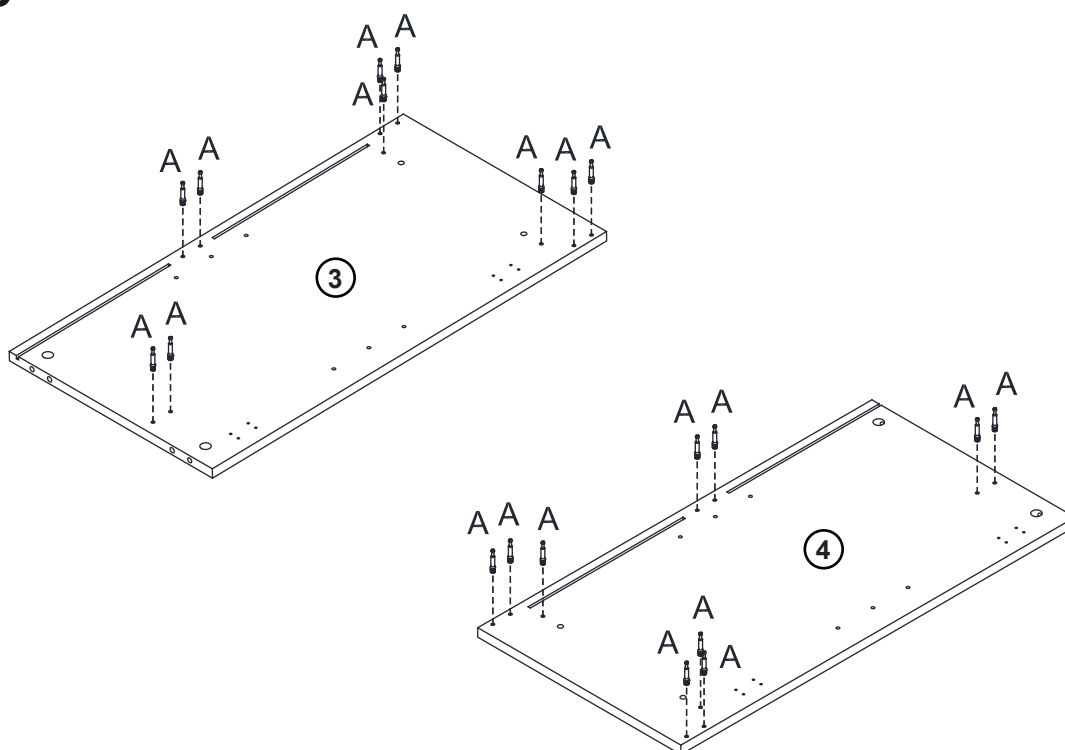



Step 4

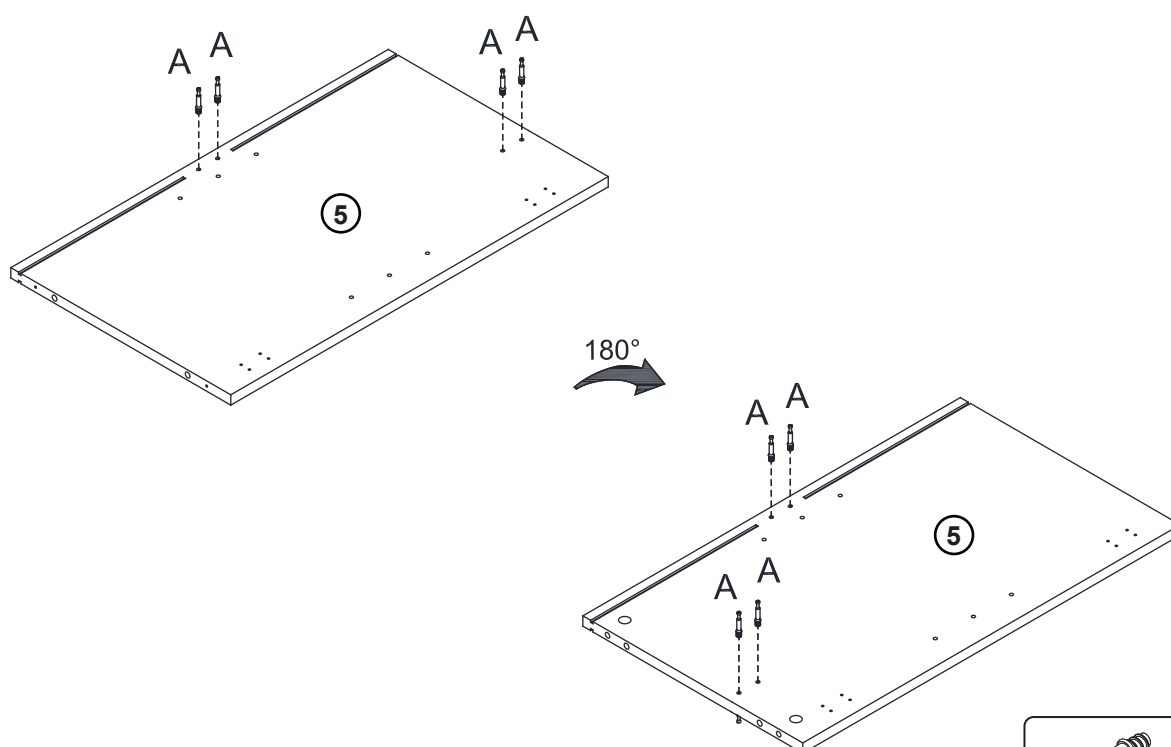


Step 5

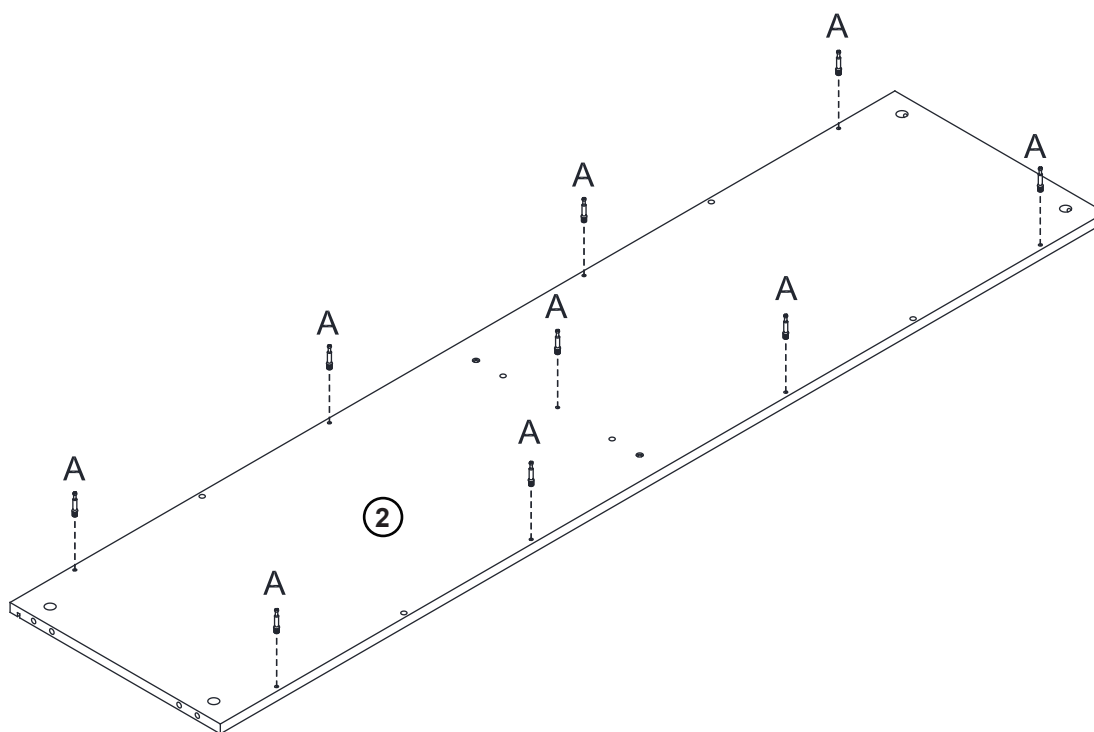


Step 6

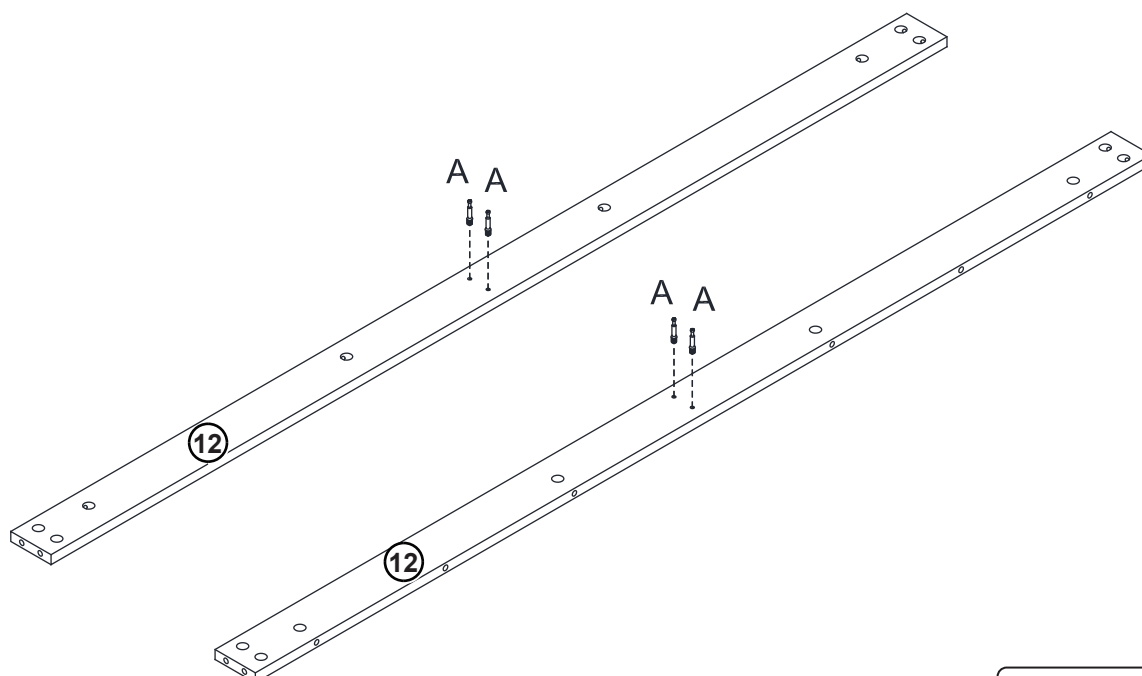




Step 7

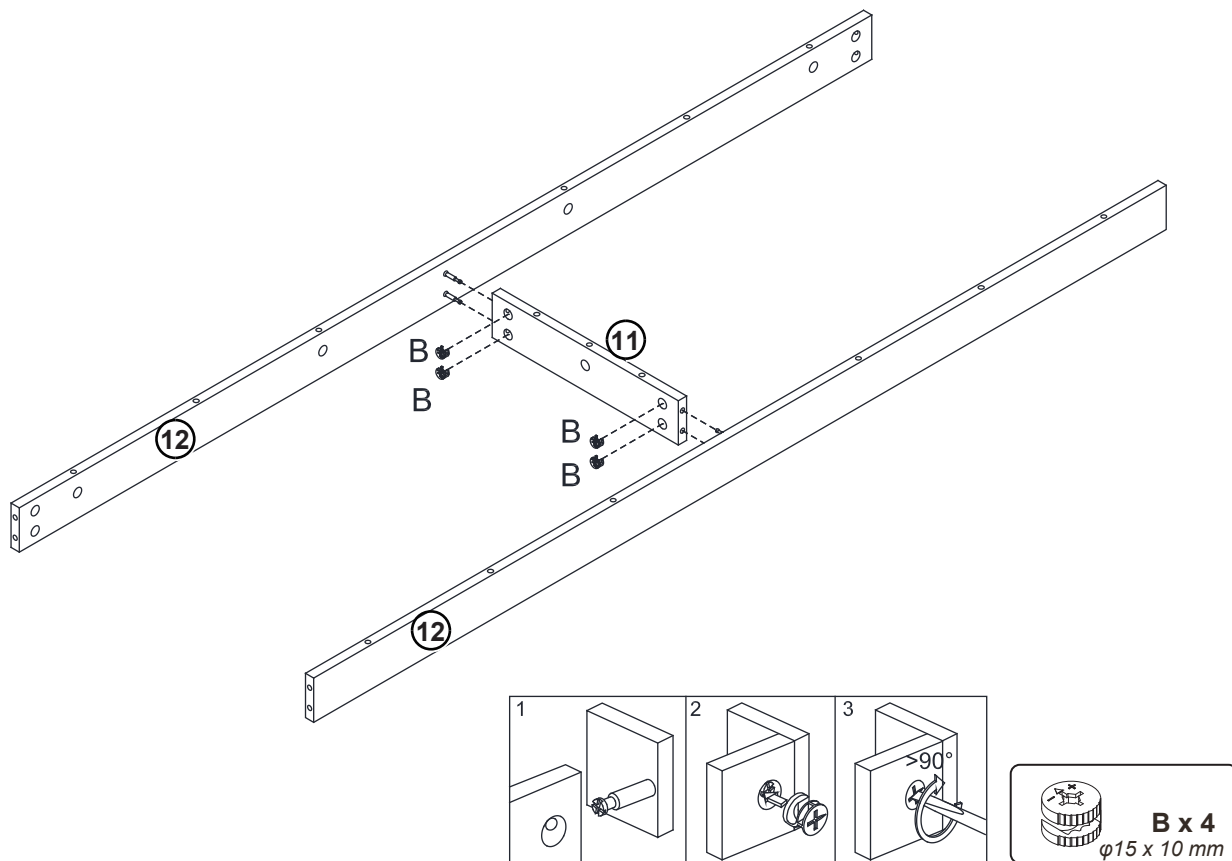

Step 8


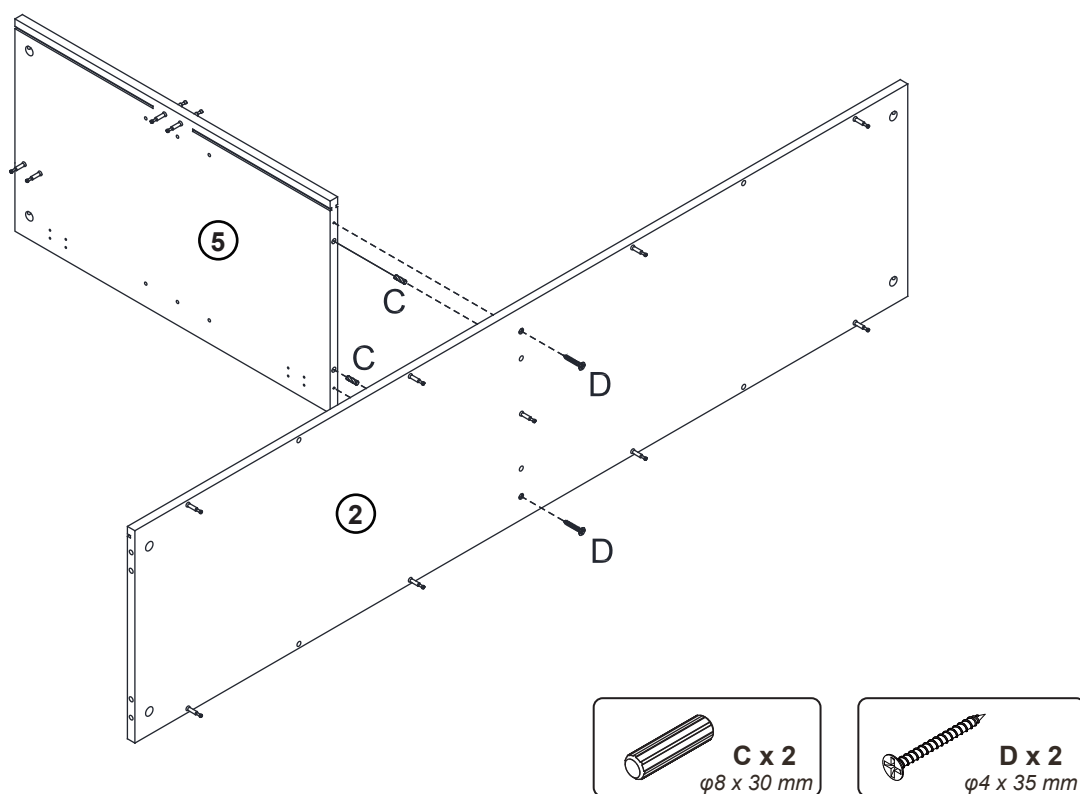


Step 9

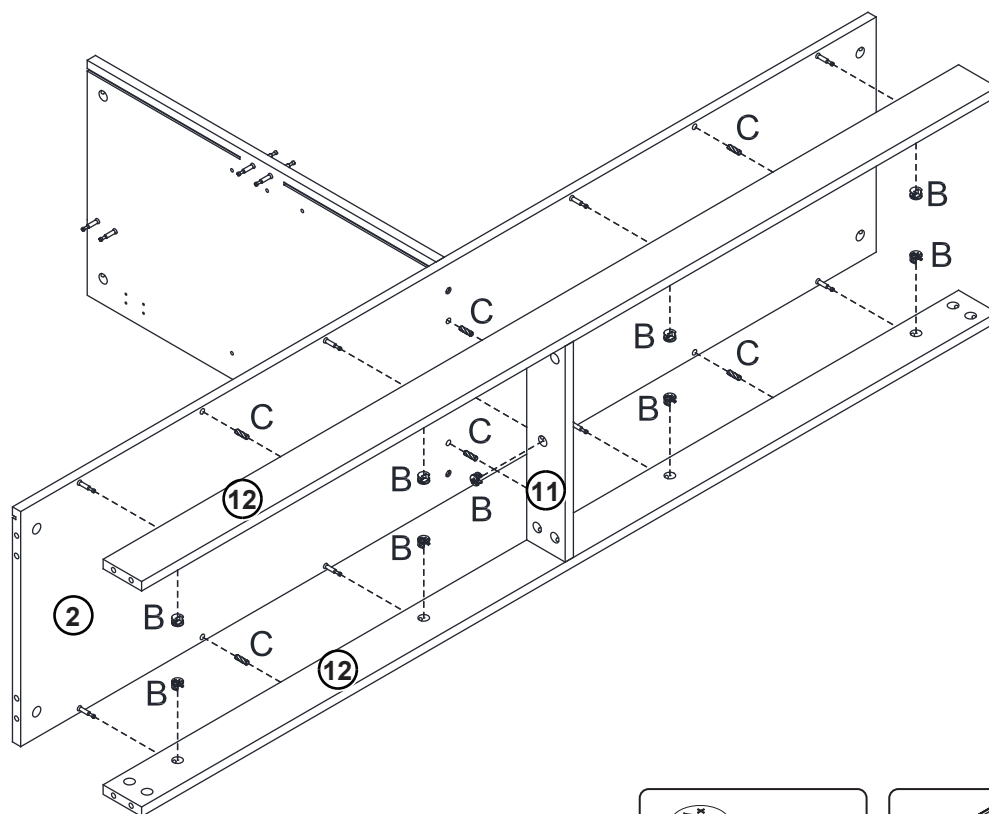


Step 10



Here, the No. 7 and No. 8 boards need to be held by hand.

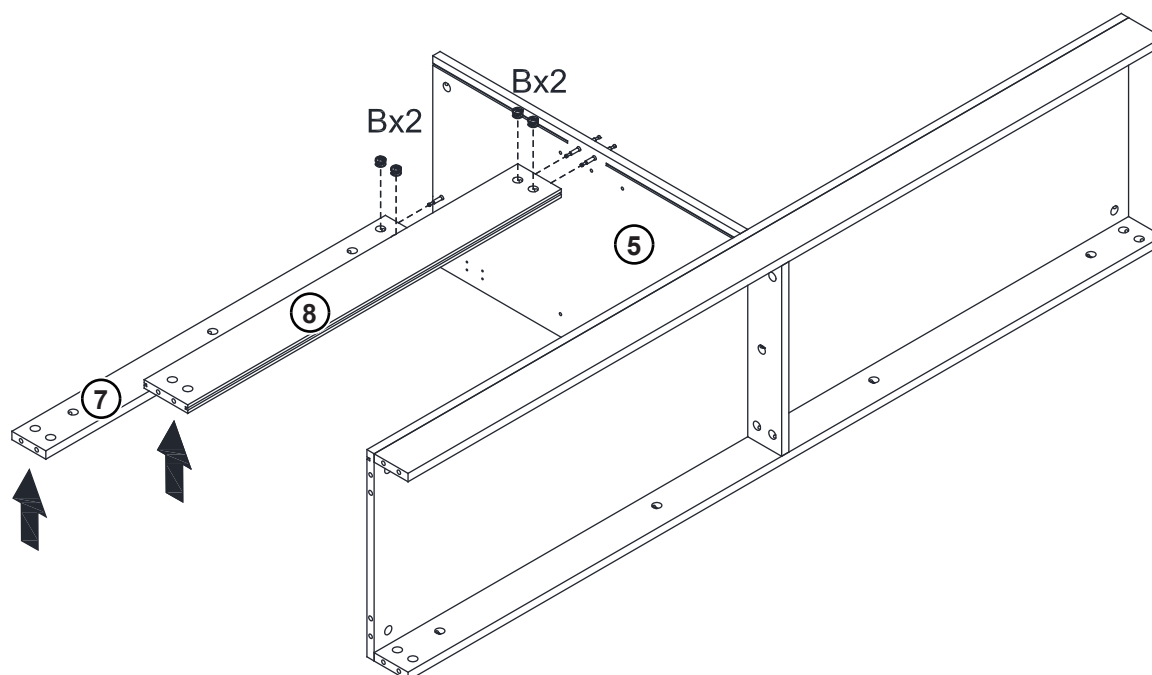

Step 11

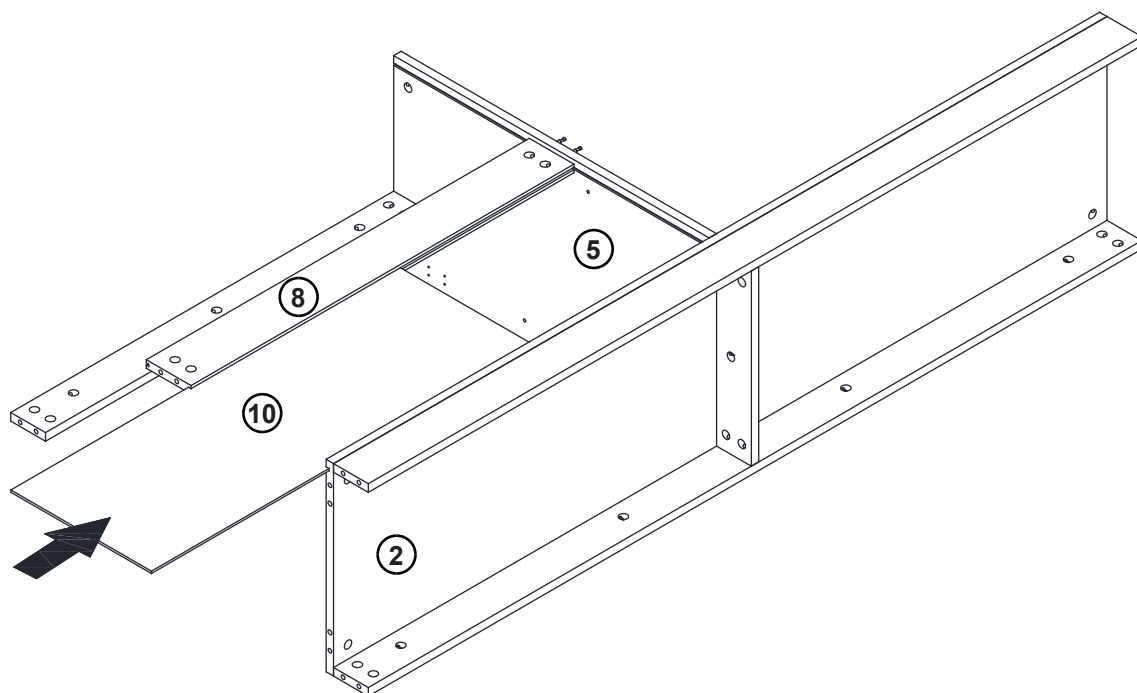


Step 12

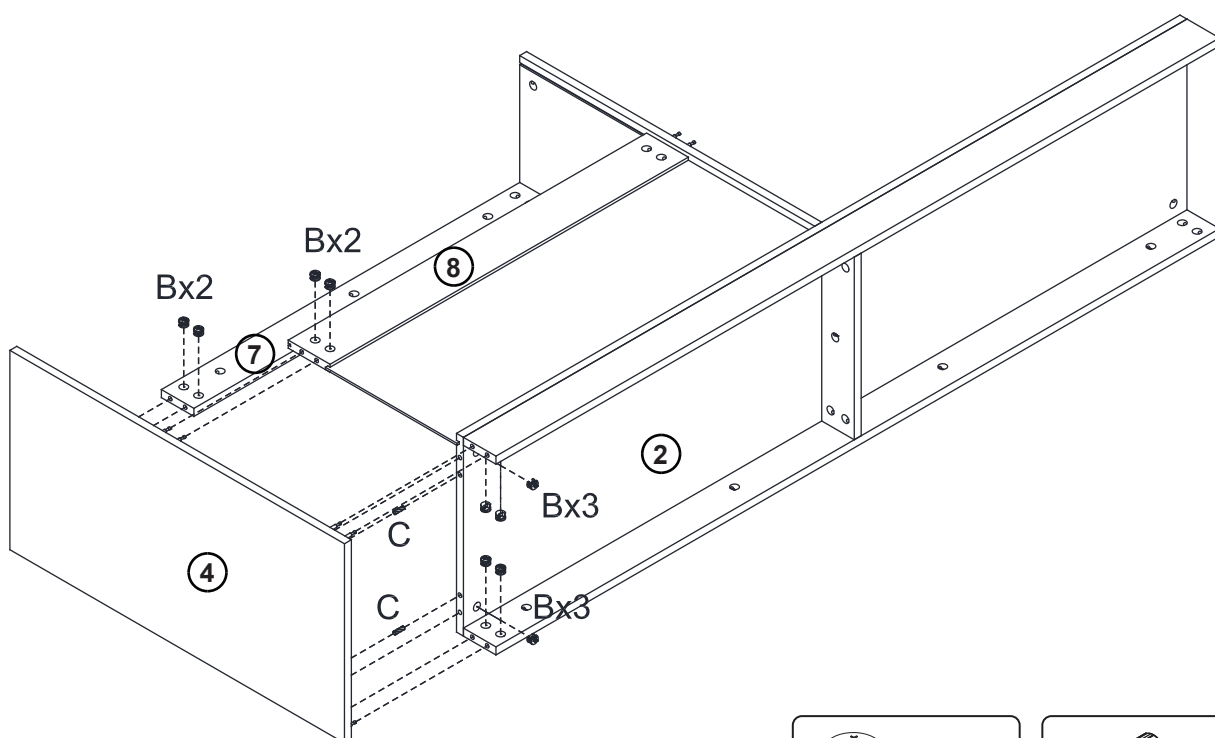


Step 13



Here, the No. 7 and No. 8 boards need to be held by hand.

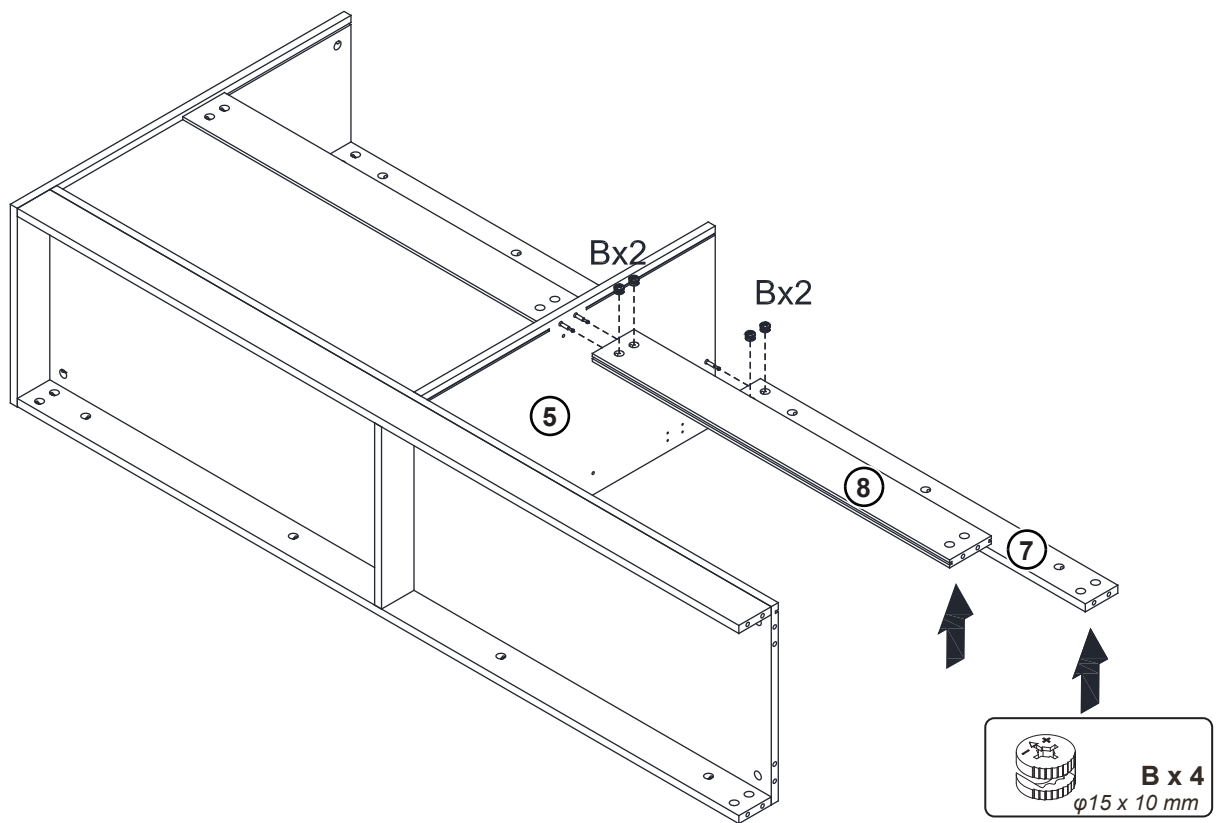


Step 14

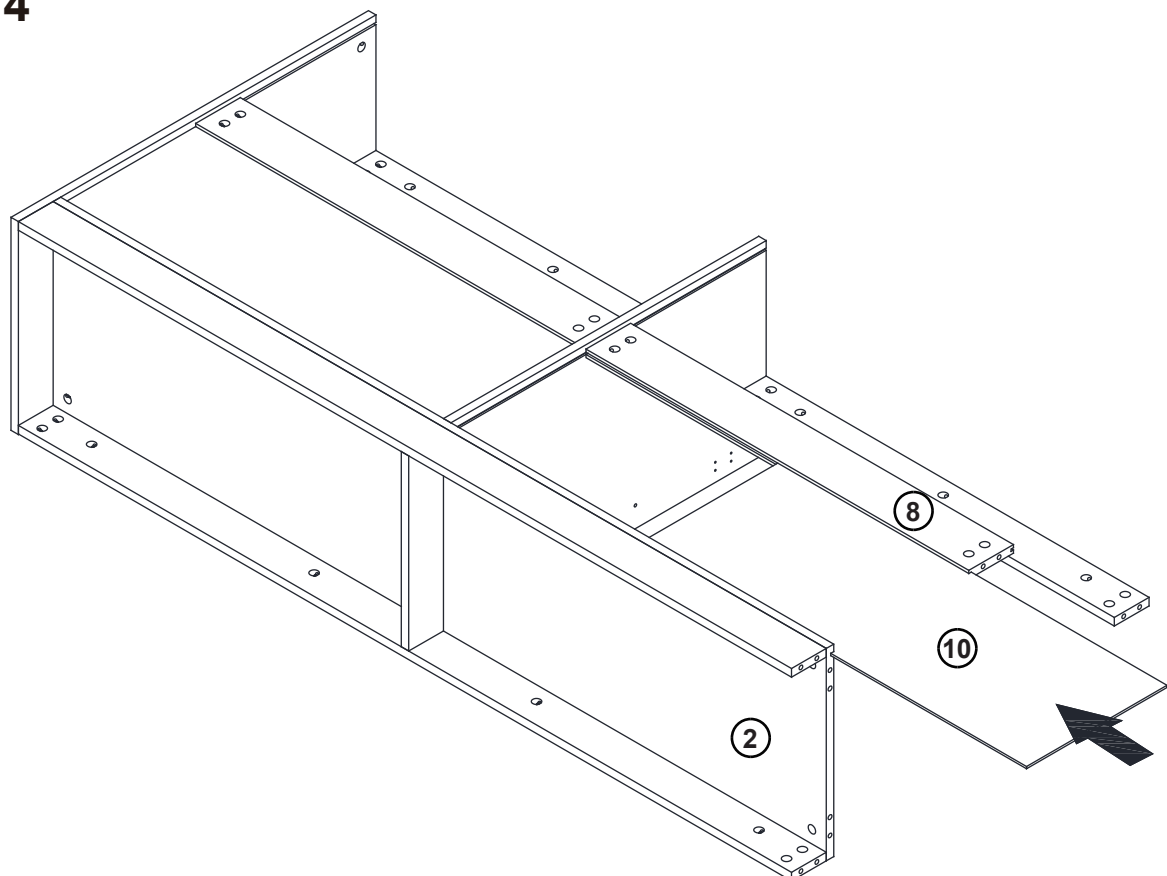



Step 15

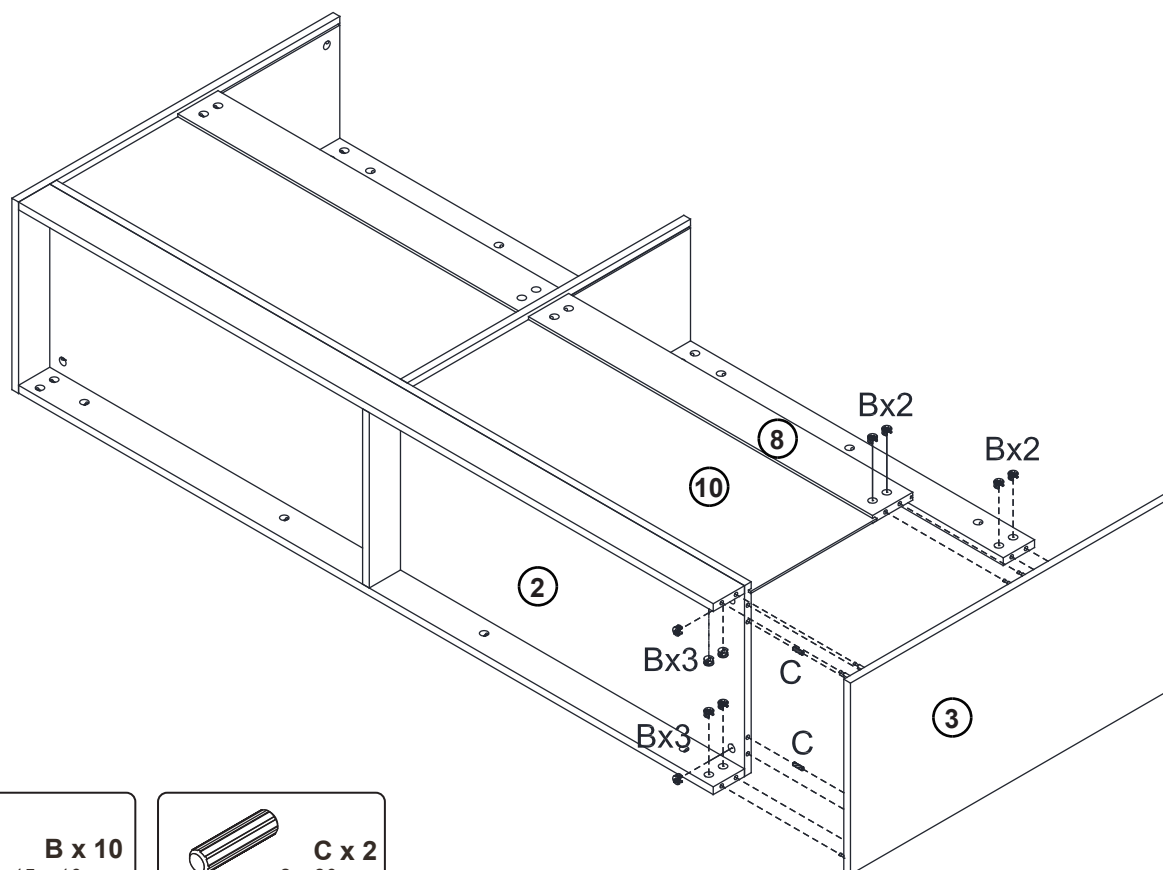



Step 16

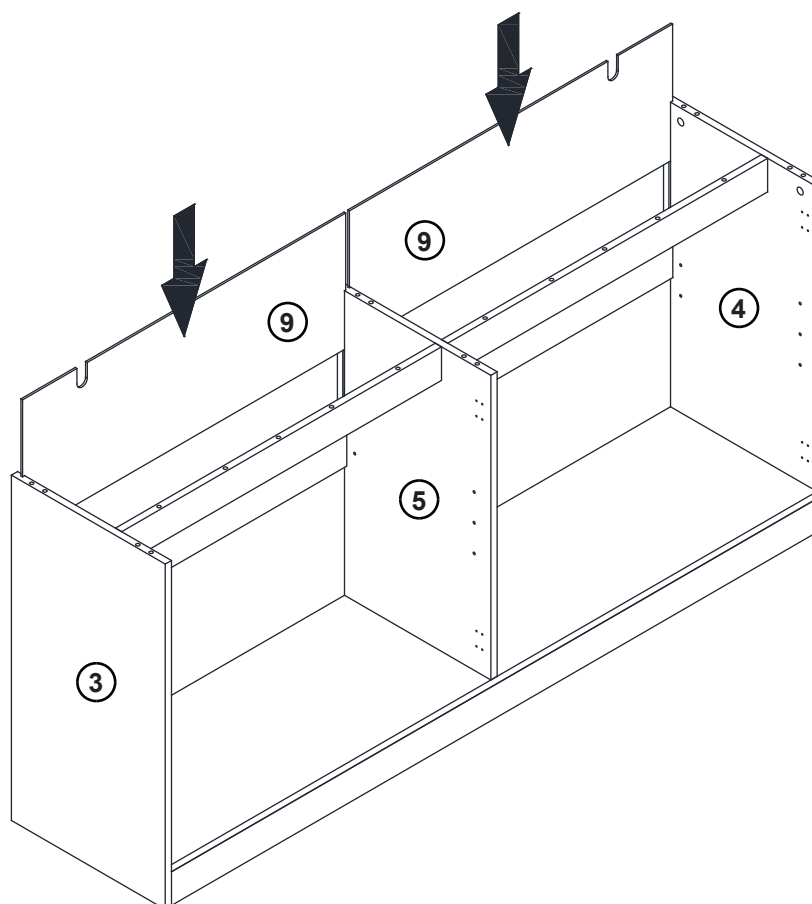


Step 17

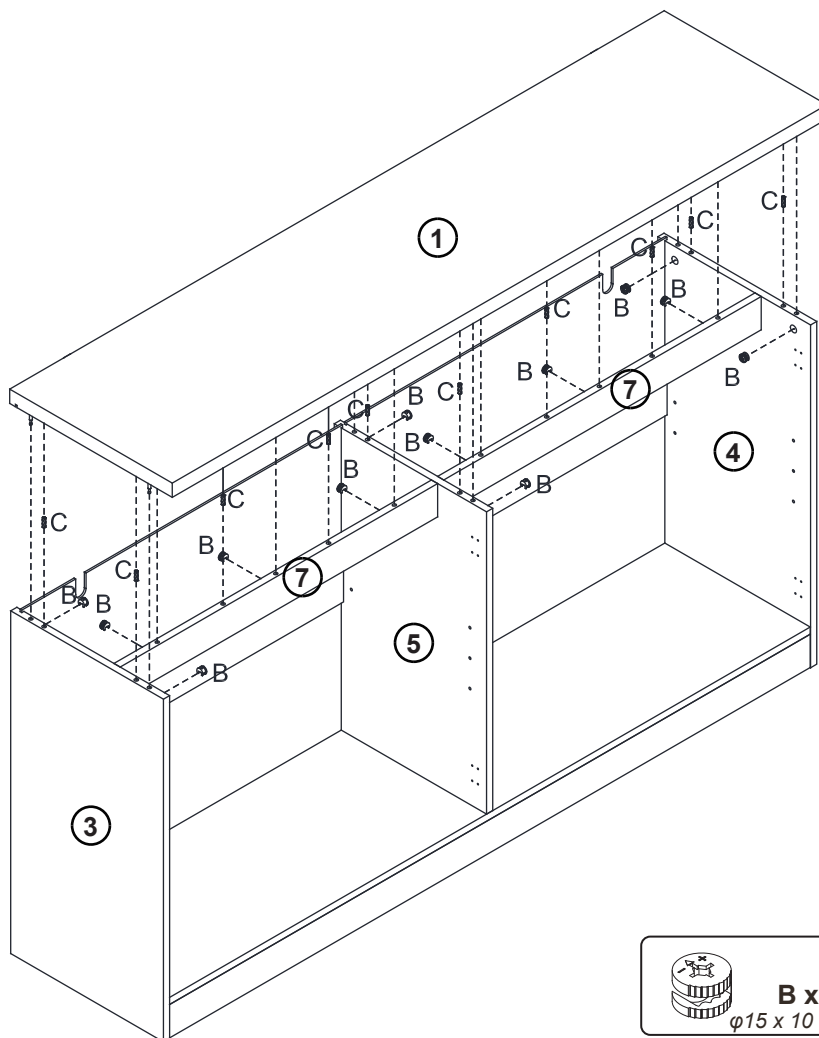


Step 18

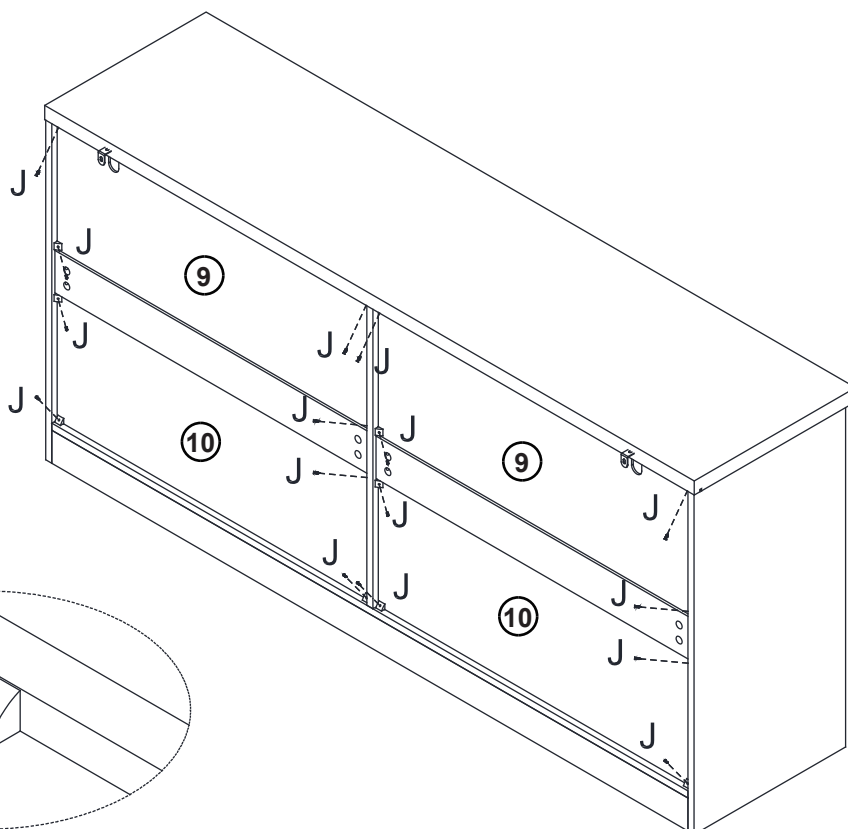


Step 19

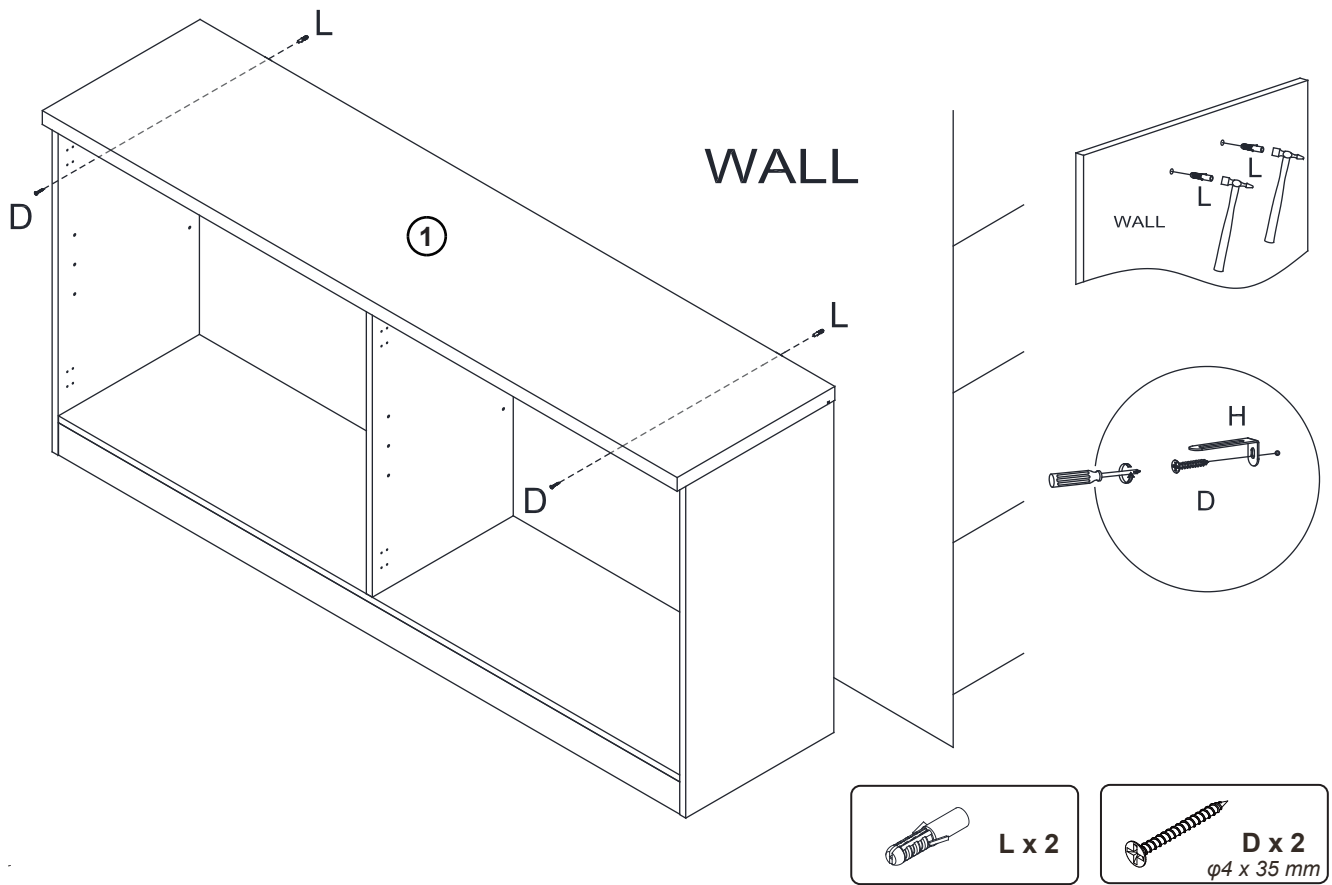

Step 20

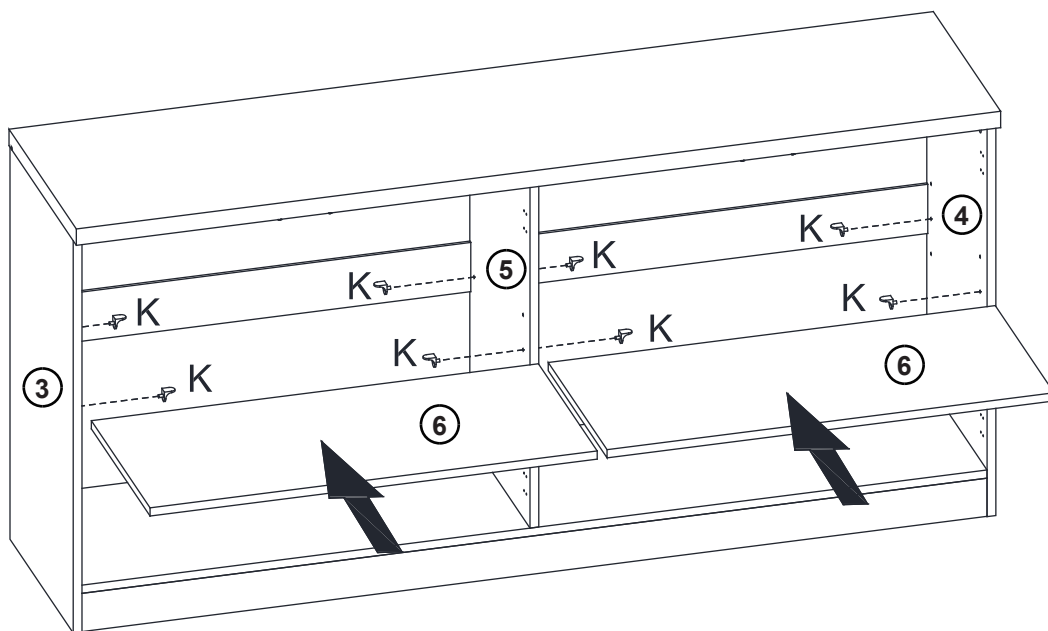

Step 21

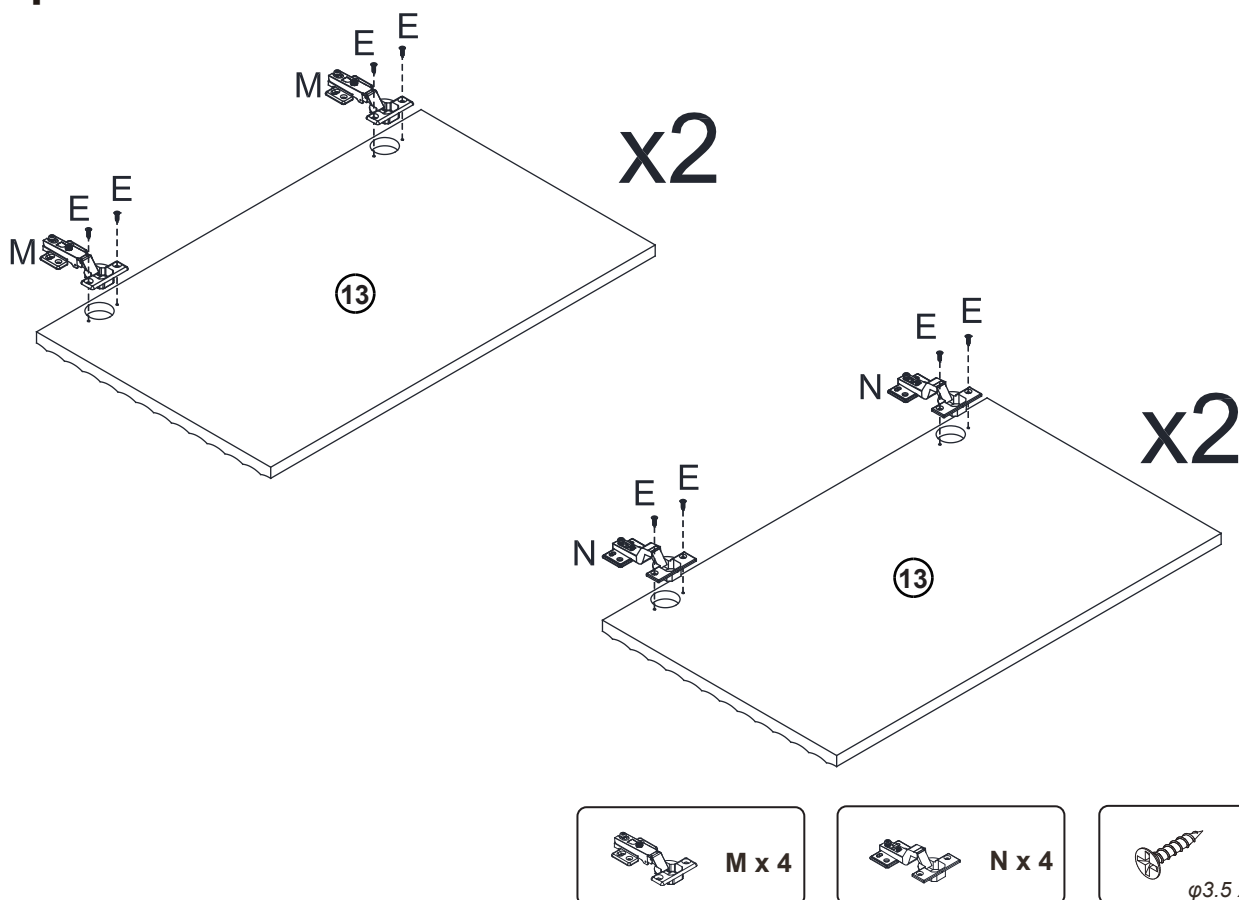

Step 22

