



ASSEMBLY INSTRUCTIONS

SKU CODE: (N710P373605Q)





















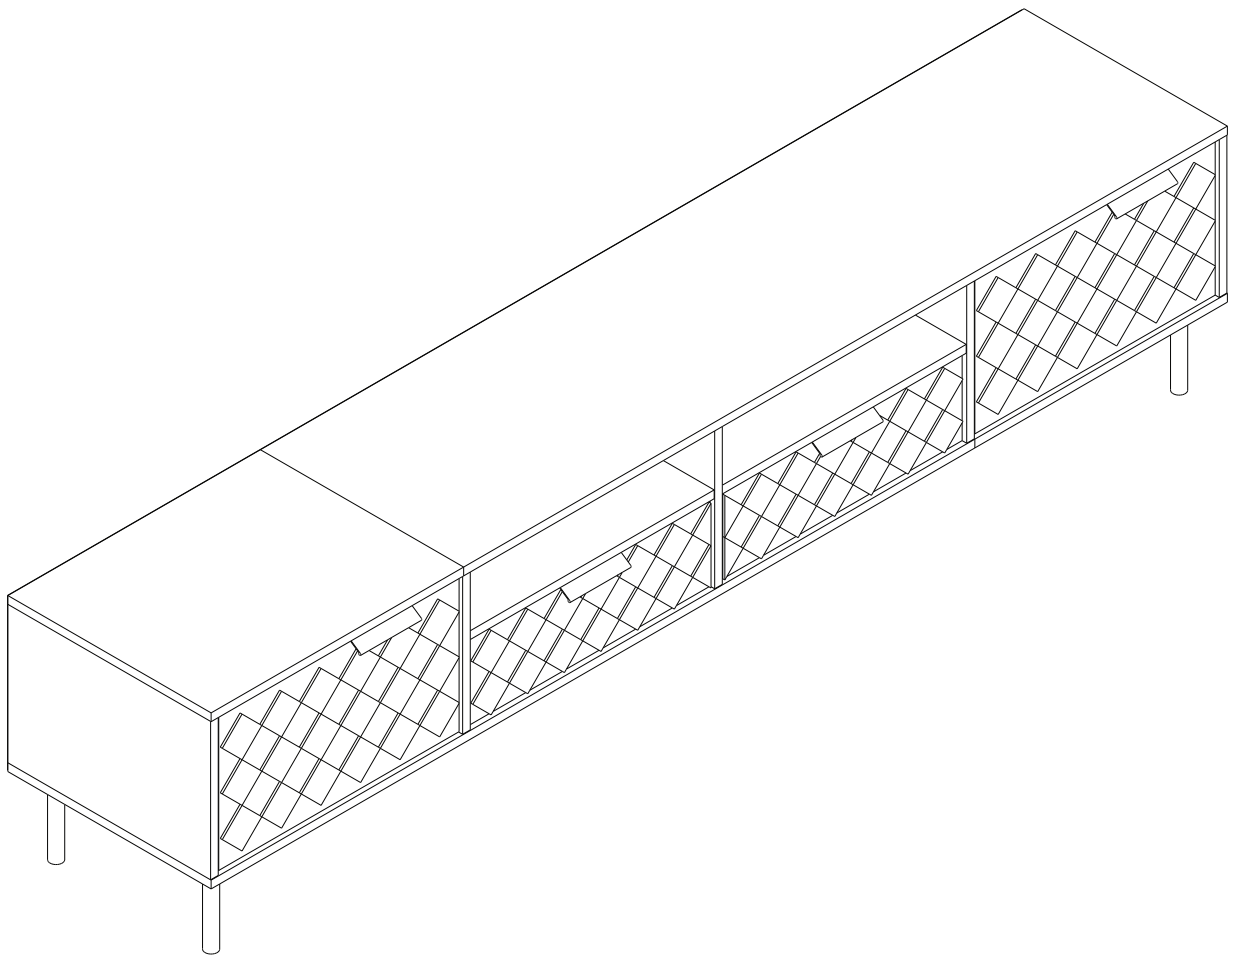


Detail View

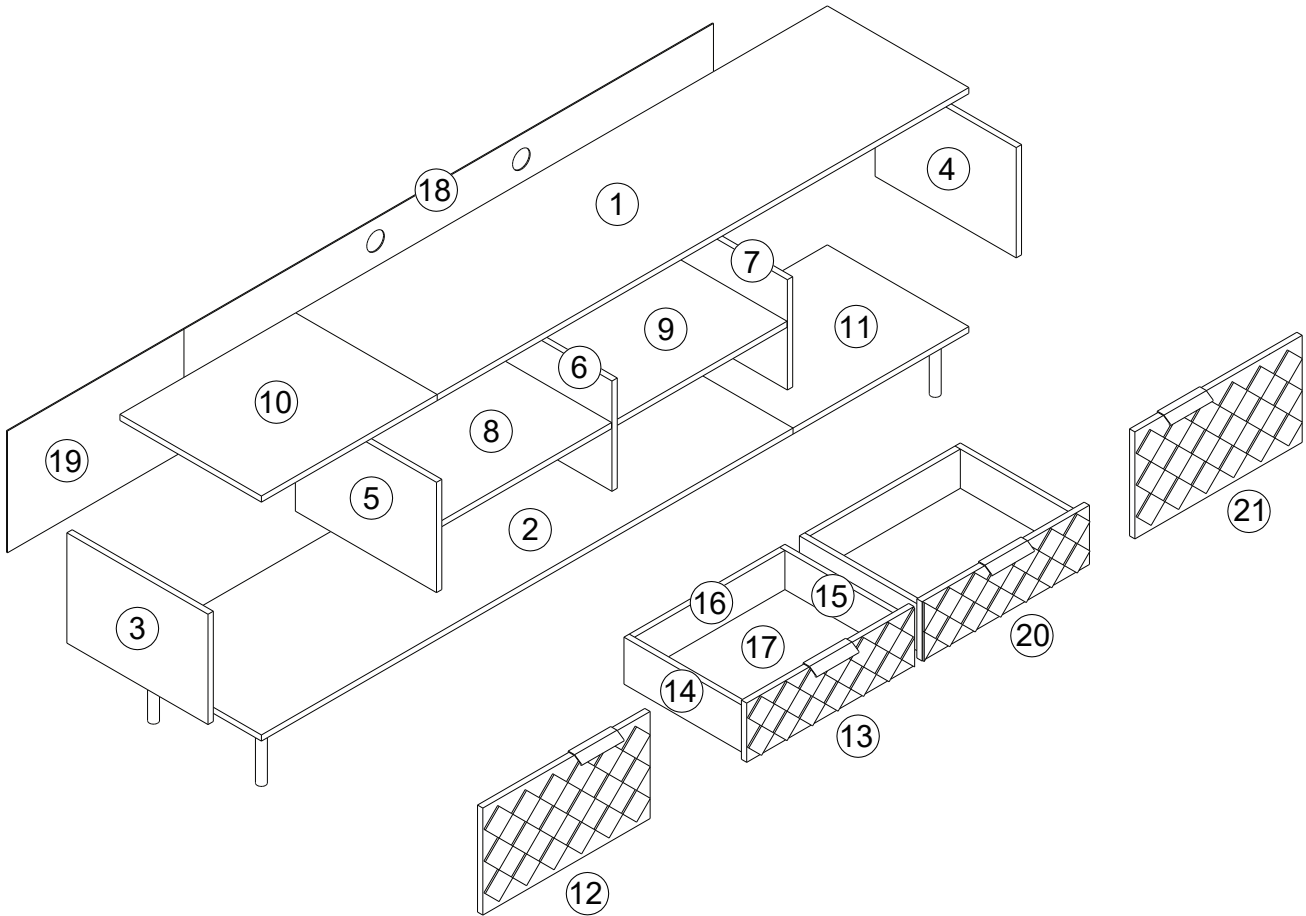















Part List

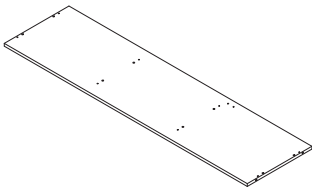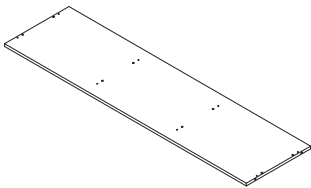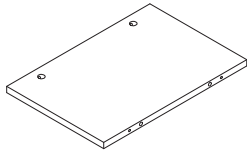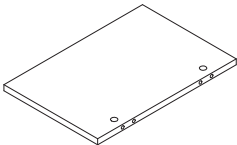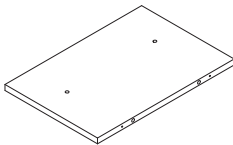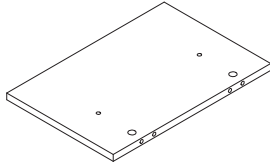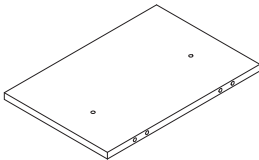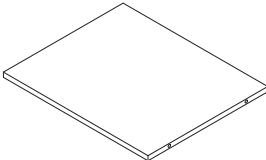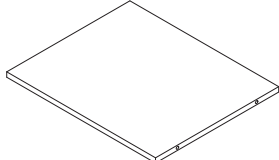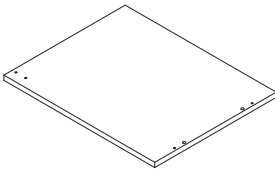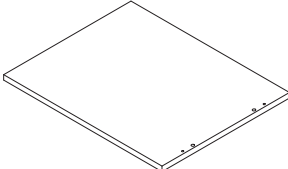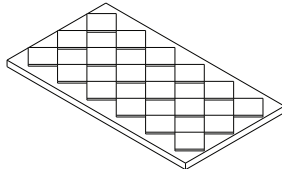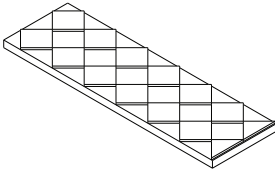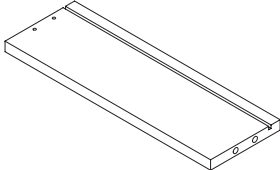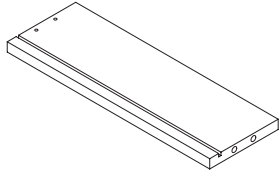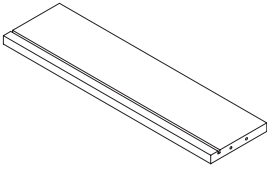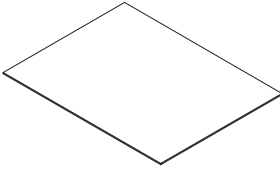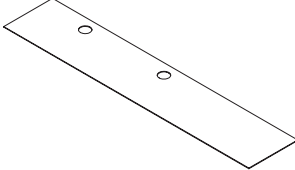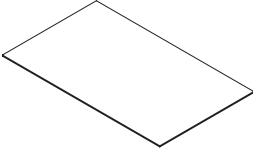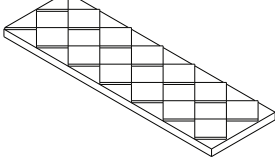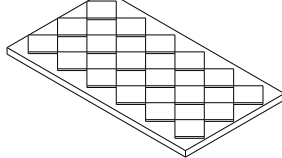
N710P373605Q

1  <p>Top Panel - 1pc</p>	2  <p>Bottom Panel - 1 pc</p>	3  <p>Side Panel (Left) - 1 pc</p>
4  <p>Side Panel (Right) - 1 pc</p>	5  <p>Left Panel (Center) - 1pc</p>	6  <p>Centre Panel - 1pc</p>
7  <p>Right Panel (Center) - 1pc</p>	8  <p>Left Shelf - 1pc</p>	9  <p>Right Shelf - 1pc</p>
10  <p>Horizontal Panel (Top) - 1 pc</p>	11  <p>Horizontal Panel (Bottom) - 1 pc</p>	12  <p>Door Panel (Left) - 1pc</p>
13  <p>Front Panel Drawer (Left) - 1 pc</p>	14  <p>Left Panel Drawer - 2 pcs</p>	15  <p>Right Panel Drawer - 2 pcs</p>
16  <p>Back Panel Drawer - 2 pcs</p>	17  <p>Bottom Panel Drawer - 2 pcs</p>	18  <p>Back Panel - 1 pc</p>
19  <p>Back Panel - 1 pc</p>	20  <p>Front Panel Drawer (Right) - 1 pc</p>	21  <p>Door Panel (Right) - 1 pc</p>

Hardware List N710P373605Q






A  Ø8*30mm Wood Dowel (28 pcs)	B  Cam Nut (18 pcs)	C  Cam Bolt (18 pcs)
D  Ø4 x 45mm Chip Board Screw (10 pcs)	E  Ø4*38mm Chip Board Screw (8 pcs)	F  Ø3.5 x 16mm Chip Board Screw (86 pcs)
G  14" (T1.1) Drawer Slide (Black) (2 sets)	H  7/8" Hydraulic Hinges (4 pcs)	I  PVC Door Stopper (2 pcs)
J  PVC Handle AC110 (Black)(4 pcs)	K  150 X 25mm Metal Leg (Nikel Black) (7 pcs)	L  3/4" Nails (56 pcs)
M  Ø8 X 50mm Wood Dowel (6 pcs)	N  75 X 40 X 2mm Metal Plate (2 pcs)	


ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !



STEP 1 :

F	A	C	M	I
				
2 PCS	8 PCS	14 PCS	4 PCS	2 PCS


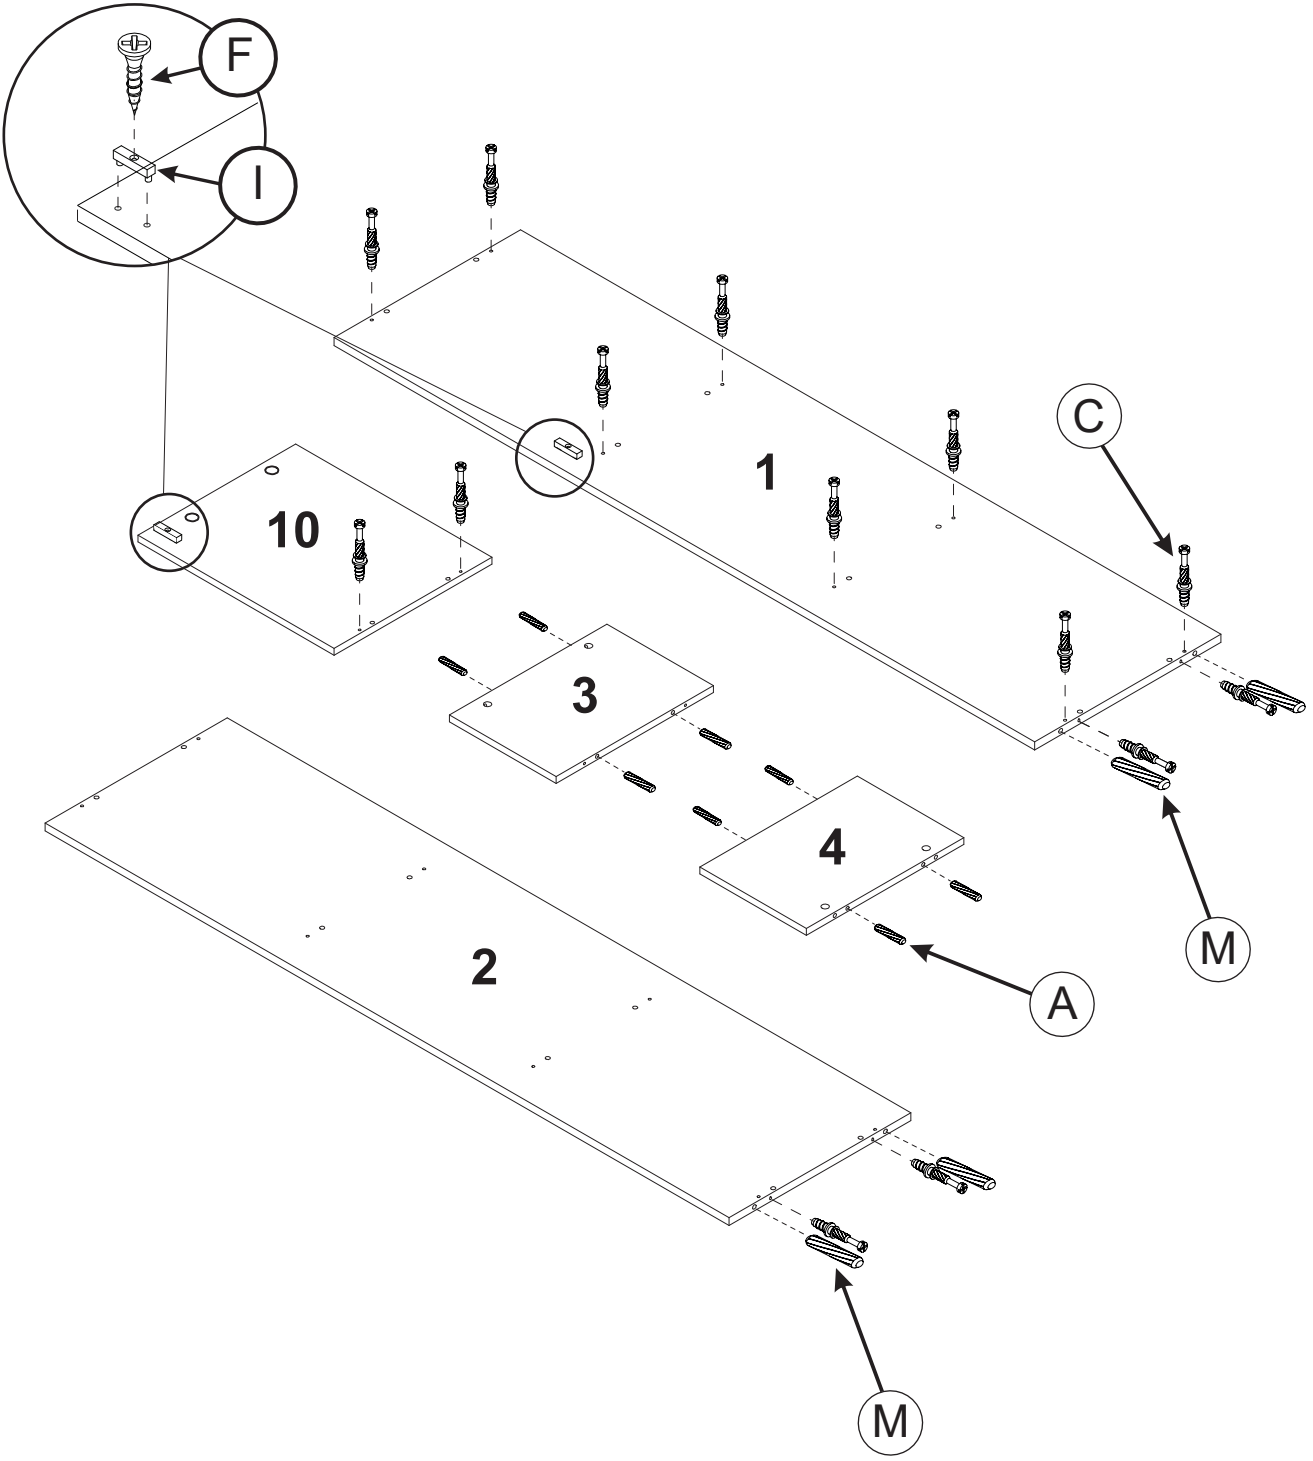






STEP 2 :

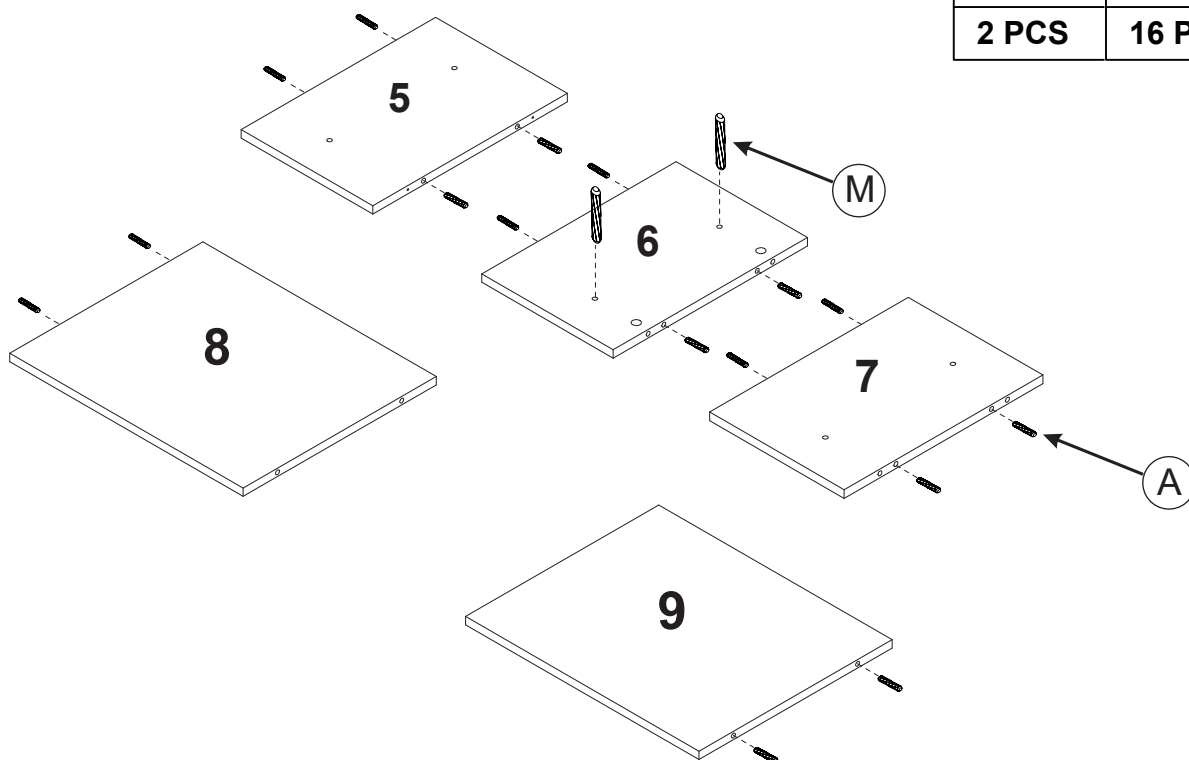

M	A
	
2 PCS	16 PCS





STEP 3 :

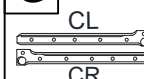G	F
 CL CR	
2 SETS	8 PCS

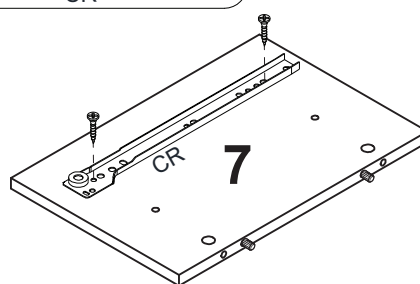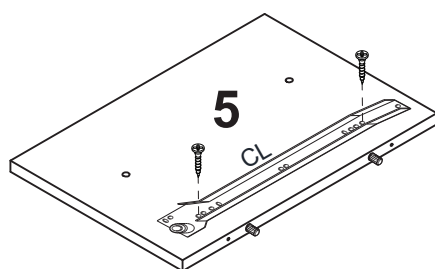


LEFT VIEW


RIGHT VIEW

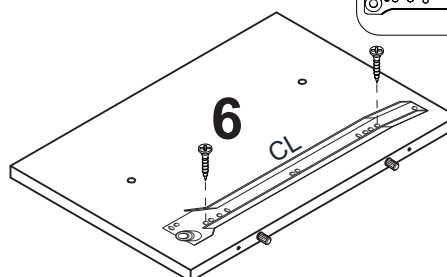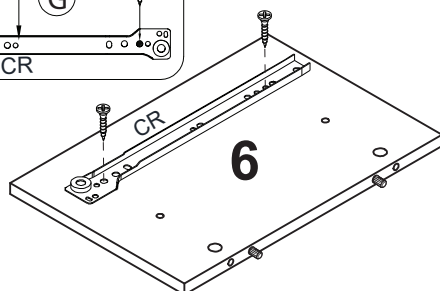


STEP 4 :

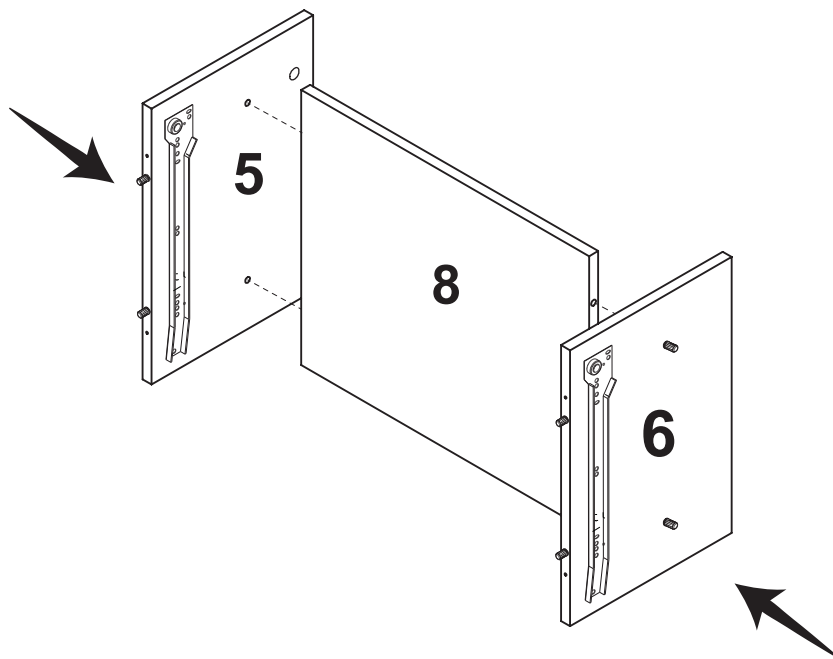

STEP 5 :

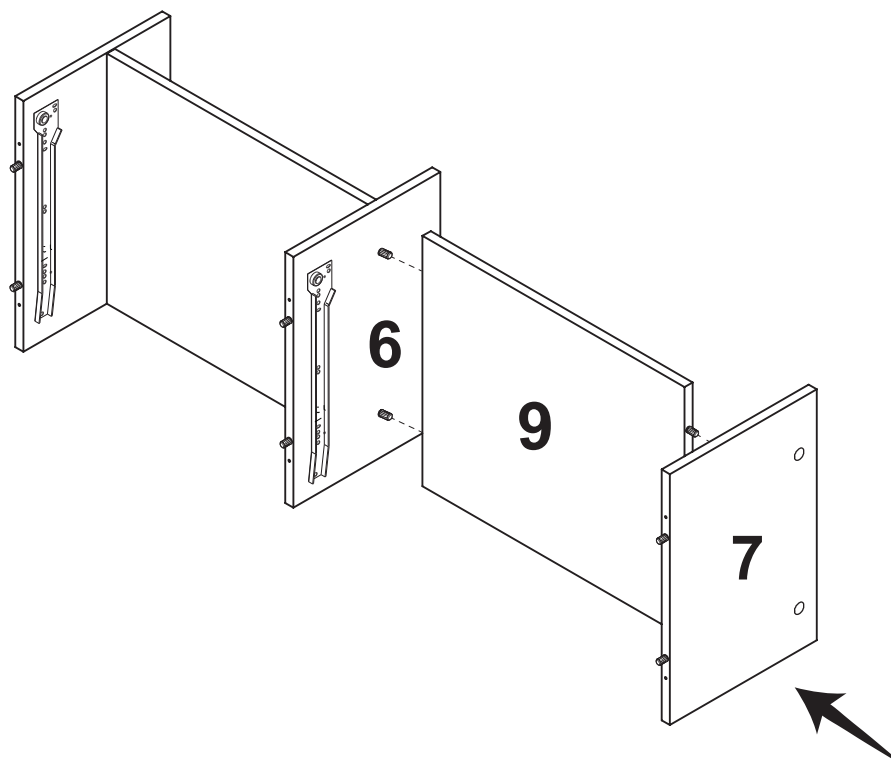


STEP 6 :

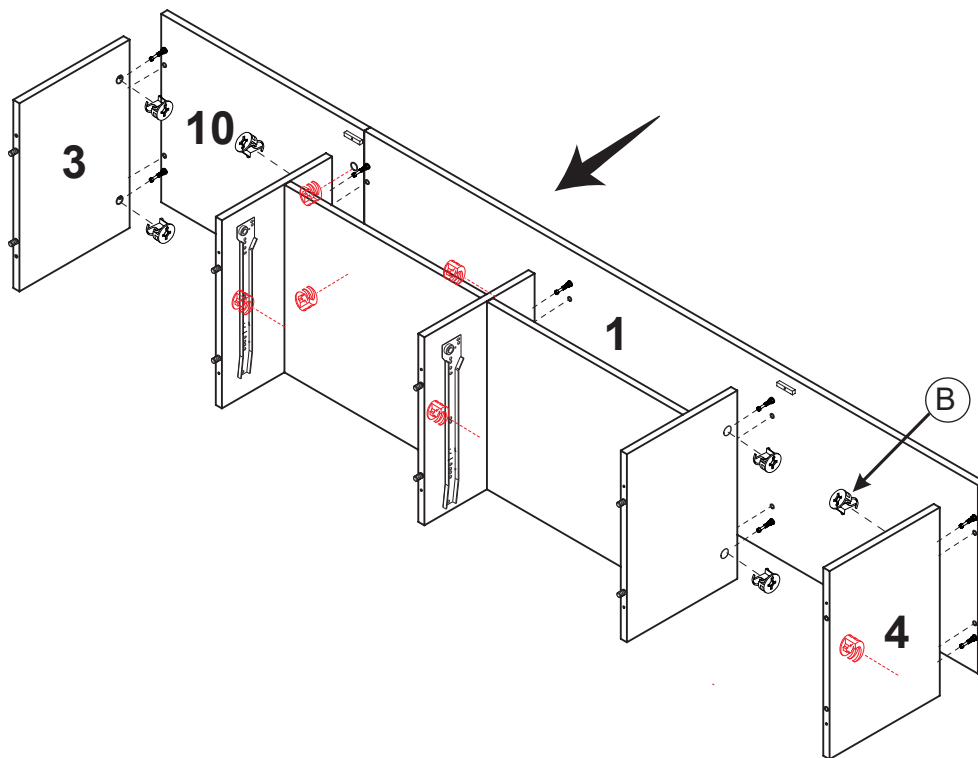


B




12 PCS

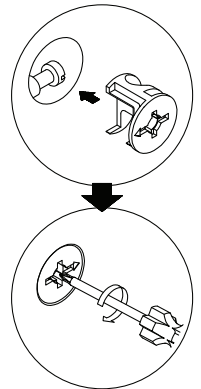

STEP 7 :

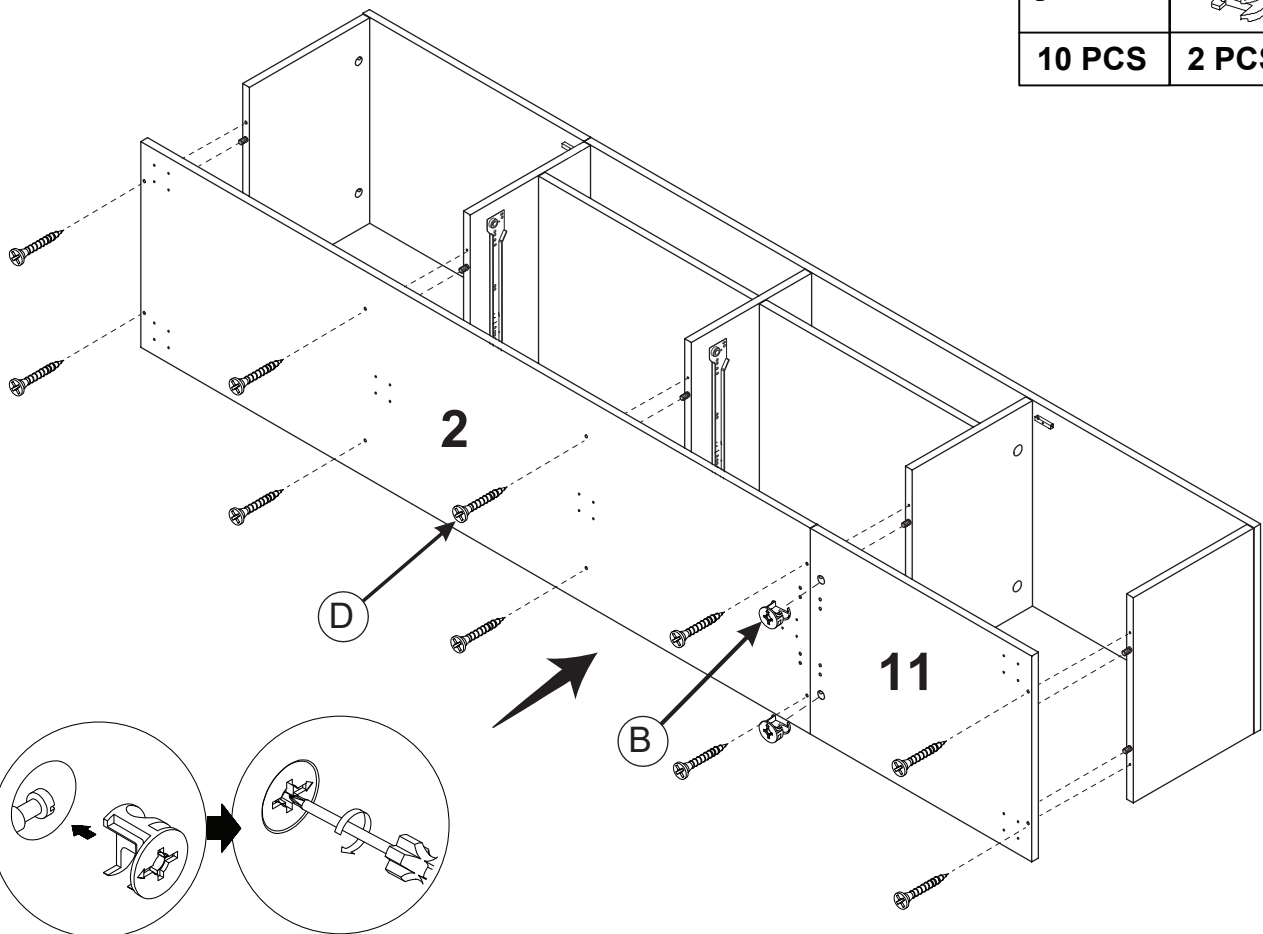

D




10 PCS


B




2 PCS

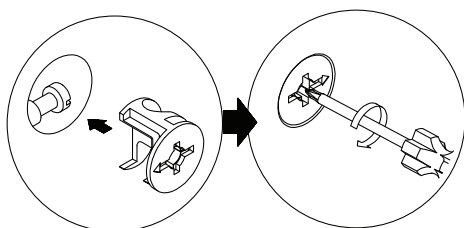





STEP 8 :

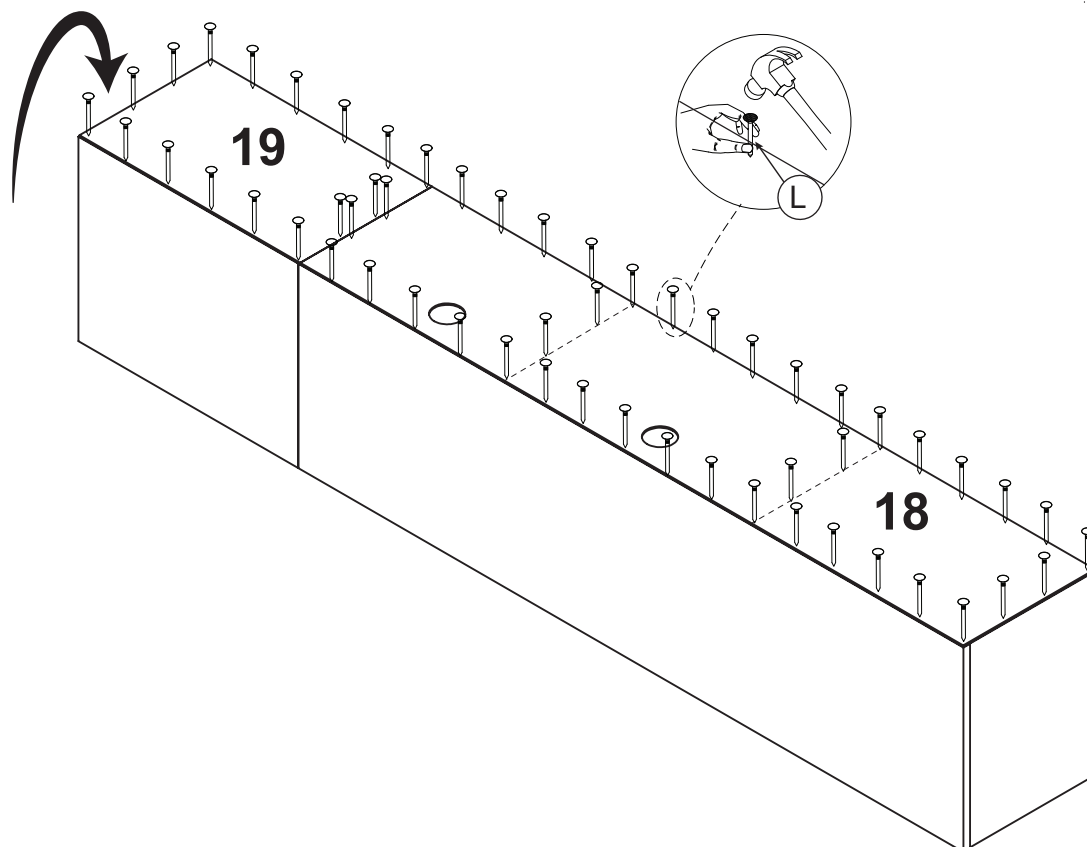

L

56 PCS

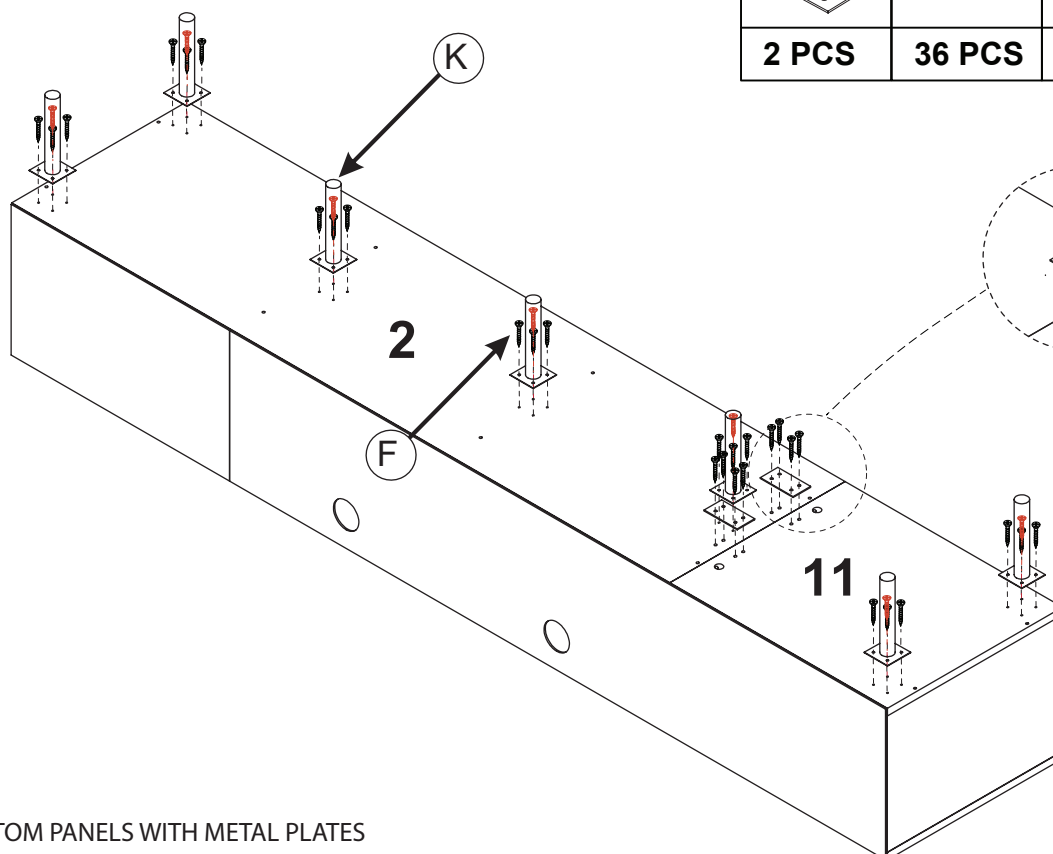

STEP 9 :




N	F	K
		
2 PCS	36 PCS	7 PCS



REMARK!
SECURE BOTTOM PANELS WITH METAL PLATES


STEP 10 :

F	H
	
8 PCS	4 PCS

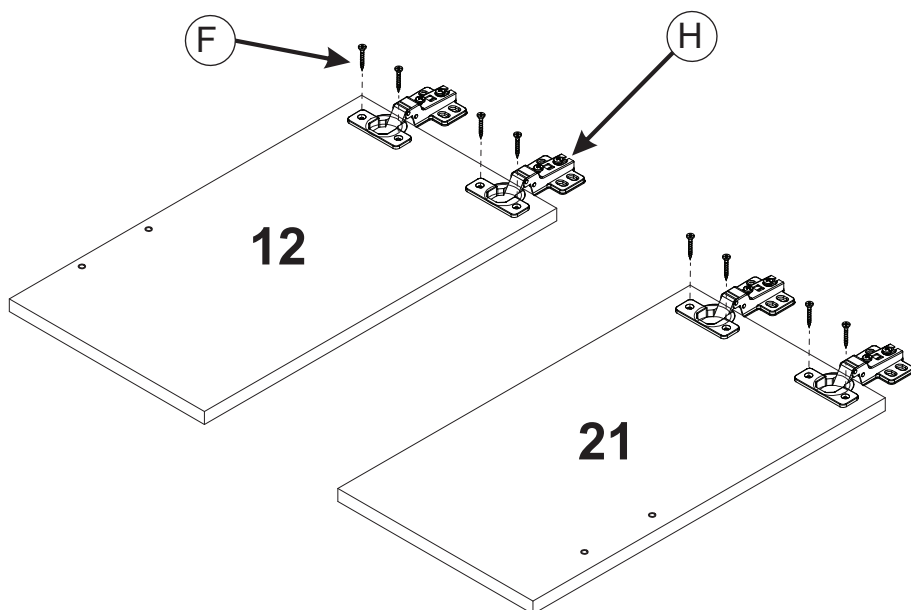




STEP 11 :

J	F
	
2 PCS	20 PCS

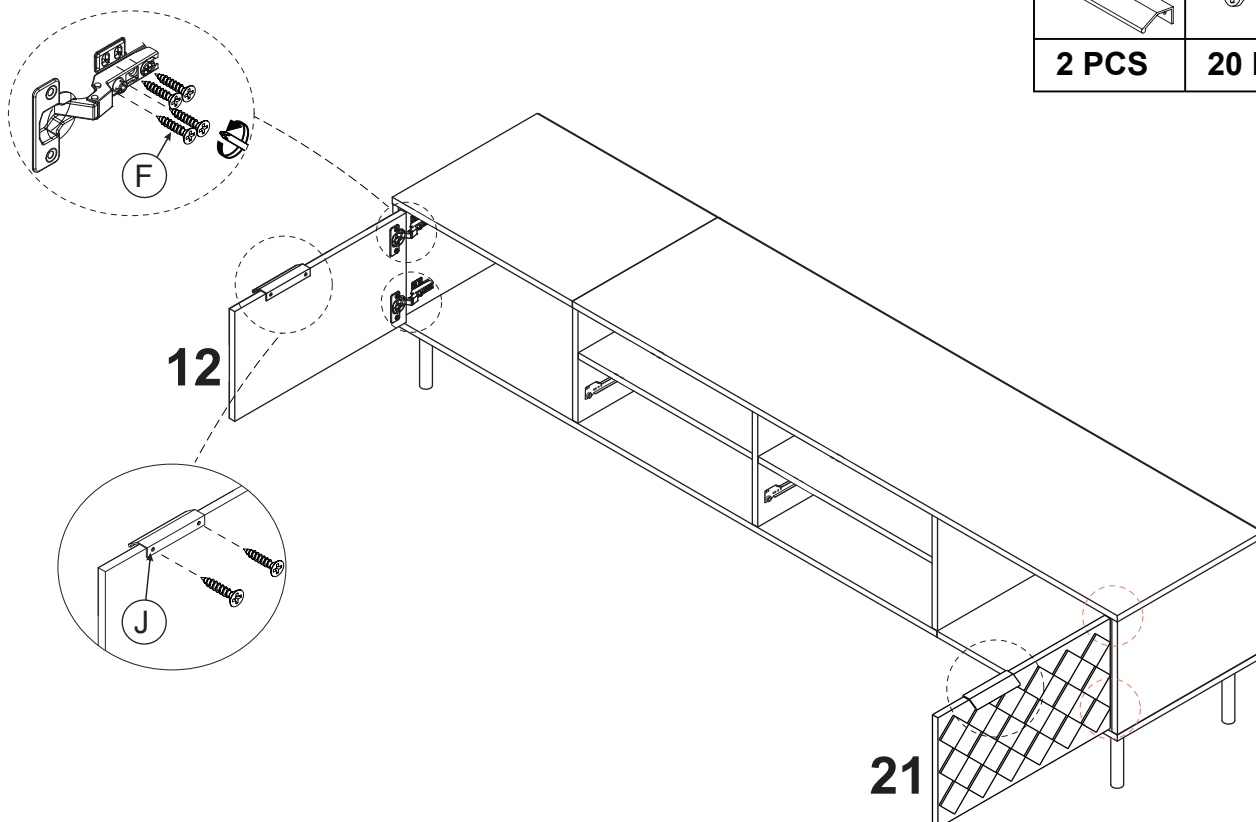


STEP 12 :

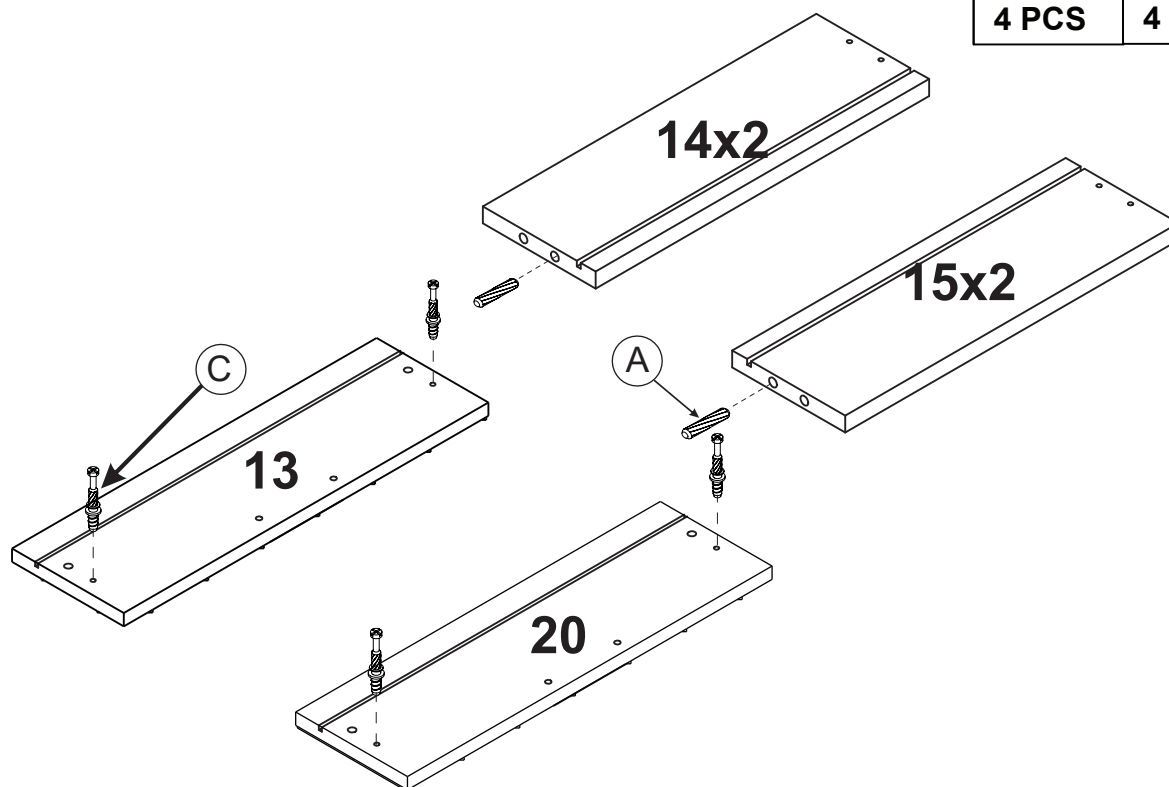


C	A
	
4 PCS	4 PCS


STEP 13 :

x2

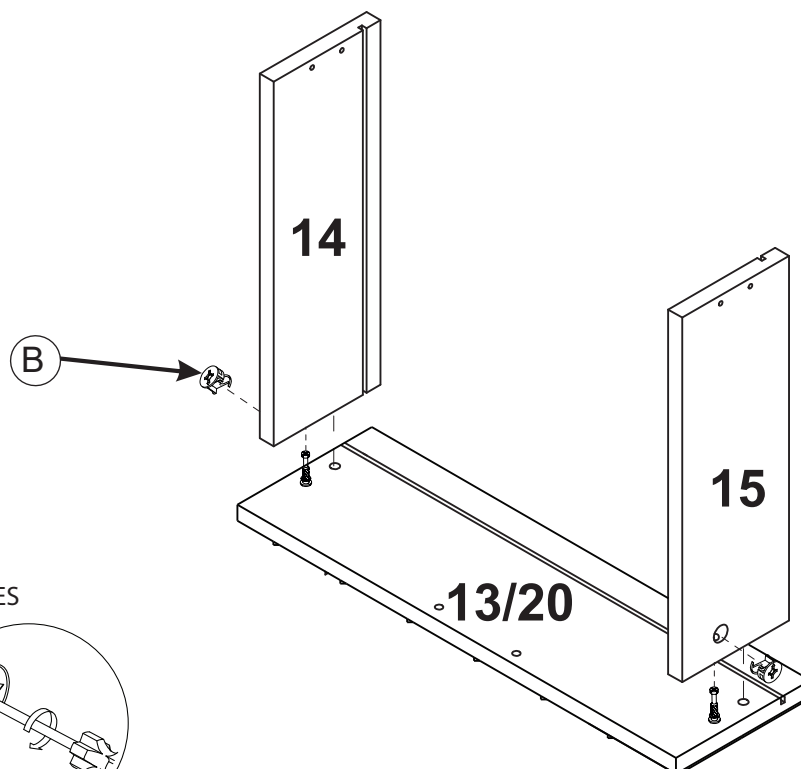


B

4 PCS

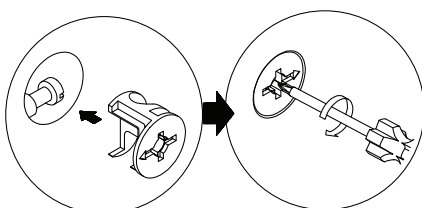REMARK!
TIGHTEN BOTH SIDES




STEP 14 :

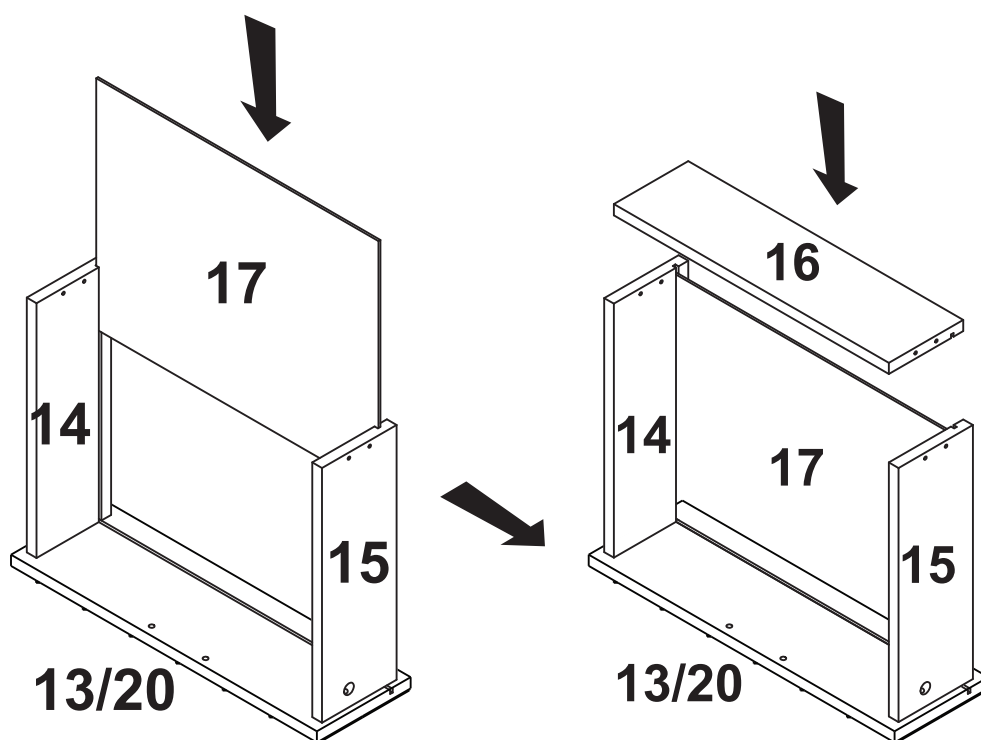x2




STEP 15 :

x2

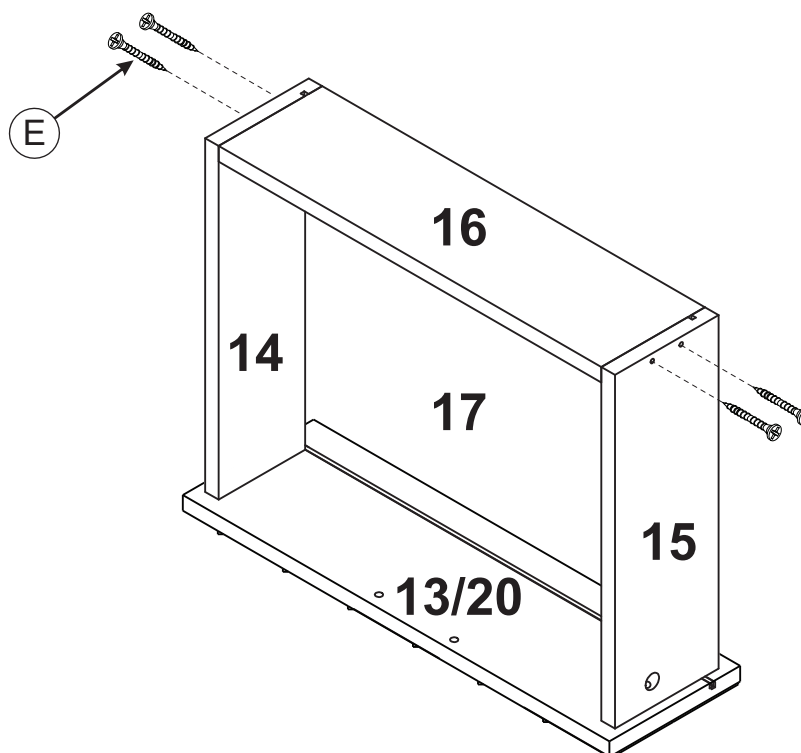


E





8 PCS


STEP 16 :



x2

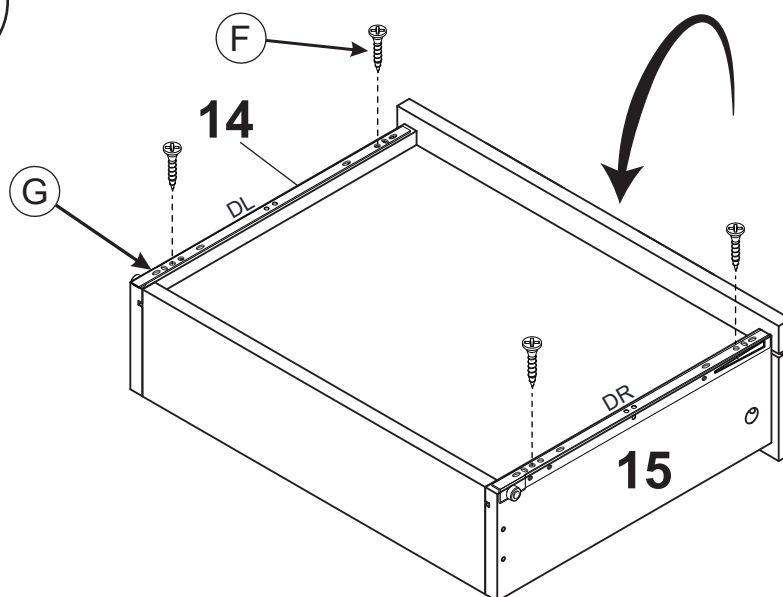

G	F
 DR DL	
2 SETS	8 PCS

STEP 17:

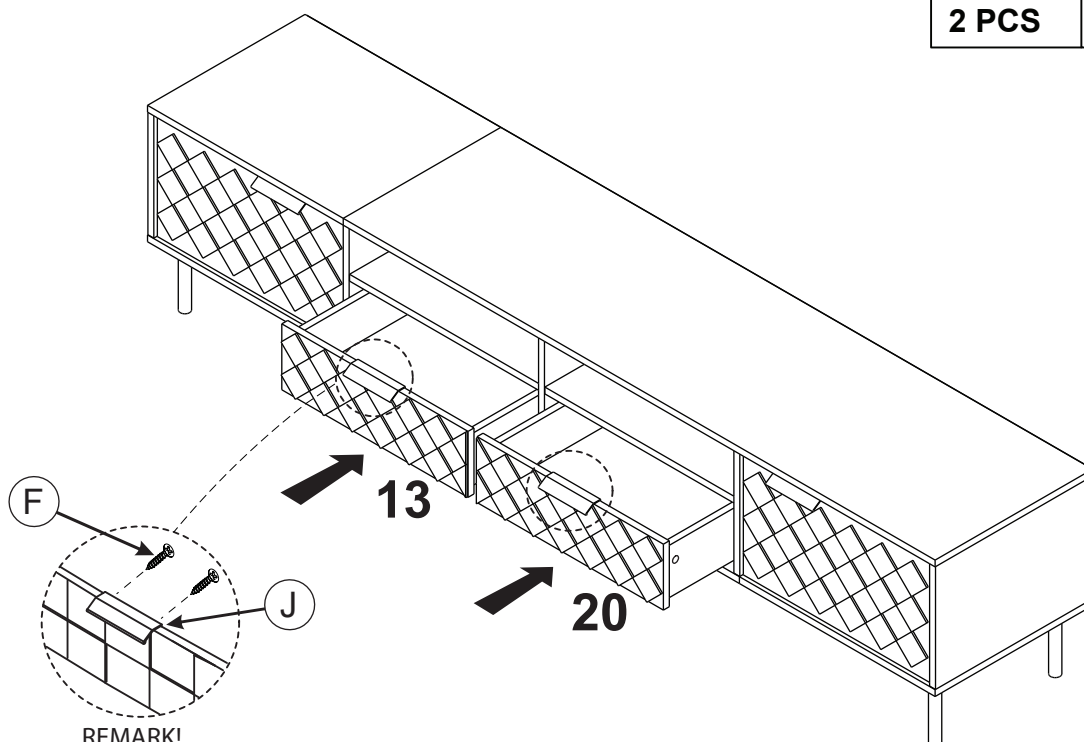

J	F
	
2 PCS	4 PCS

REMARK!
PLACE ON THE CENTRE OF PANELS

STEP 18 :

