



0257-1 Daybed

Assembly Instructions

1 Assembled View

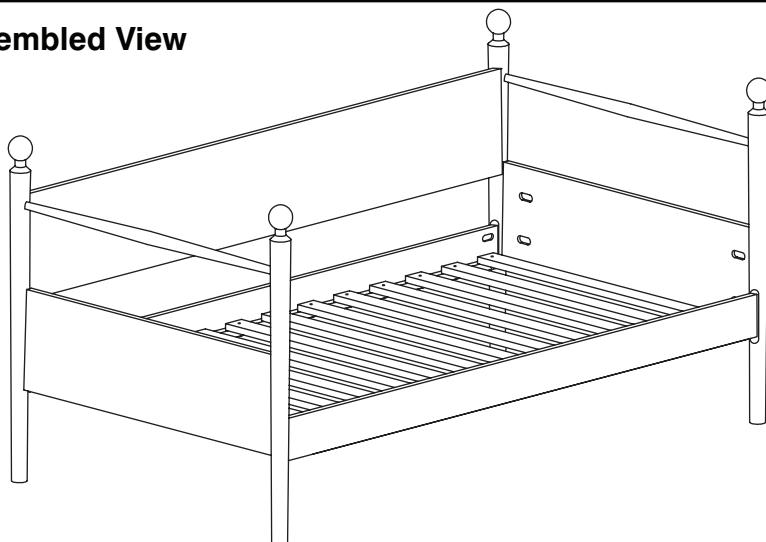


WII-0325

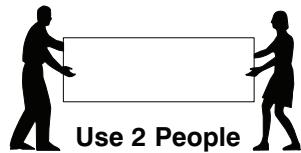

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

2 Parts in this Box




A Back Panel
x 1



B Side Panel x 2



C Side Rail x 2




D Side Panel Bar x 2

F

Rear Post
(Right)
x 1

E
Rear Post
(Left)
x 1

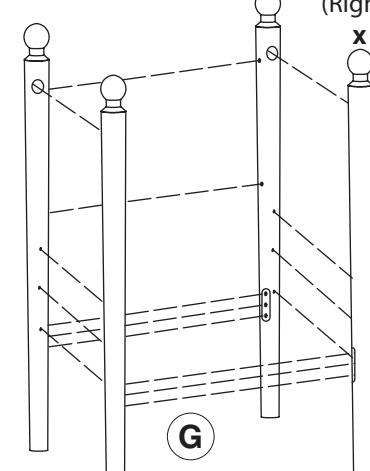

G
Front Post
(Left) x 1


3 Hardware in this Box



1 M6 x 40mm JCB
x 28



2 Wood Dowel
(10 x 40mm)
x 8




3 Wood Screw
(M4 x 32mm)
x 18



4 Allen Key
x 1

Slats are packed in separately in Box B

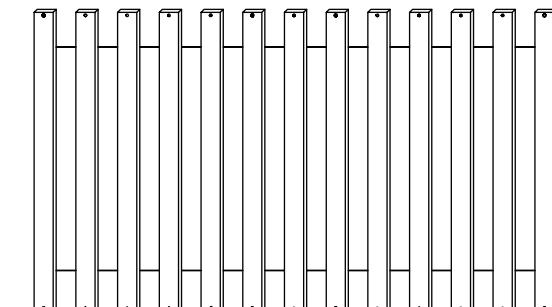


J Set of Slats x 1

0257-1 Daybed


Assembly Instructions

WII-0325

4 Assemble the Rear Post (E & F) to the Side Panel (B) and Side Panel Bar (D).

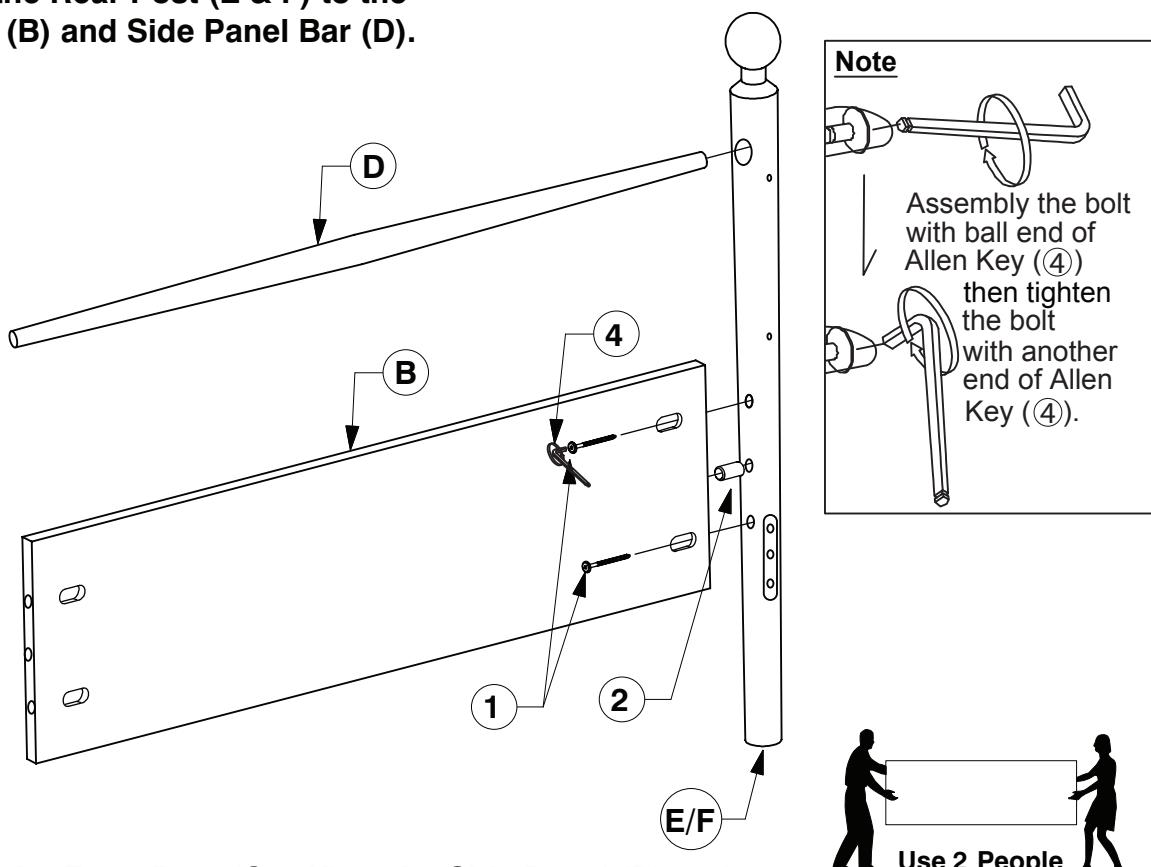

5 Assemble the Front Post (G & H) to the Side Panel (B) and Side Panel Bar (D).


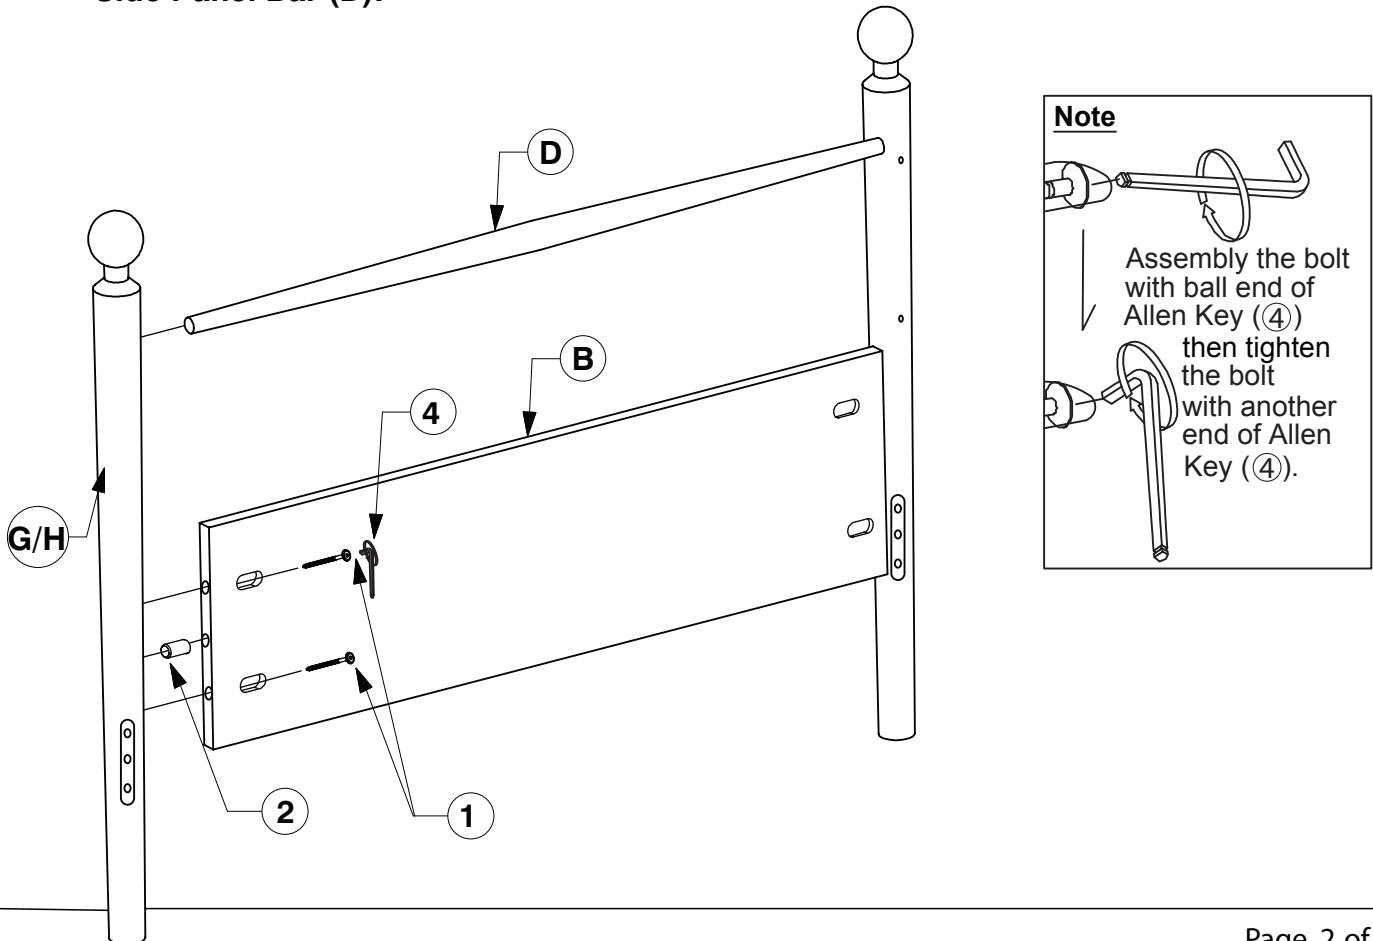


0257-1 Daybed


Assembly Instructions

WII-0325



6 Assemble the Side Panel (B) to the Back Panel (A) and Side Rail (C).

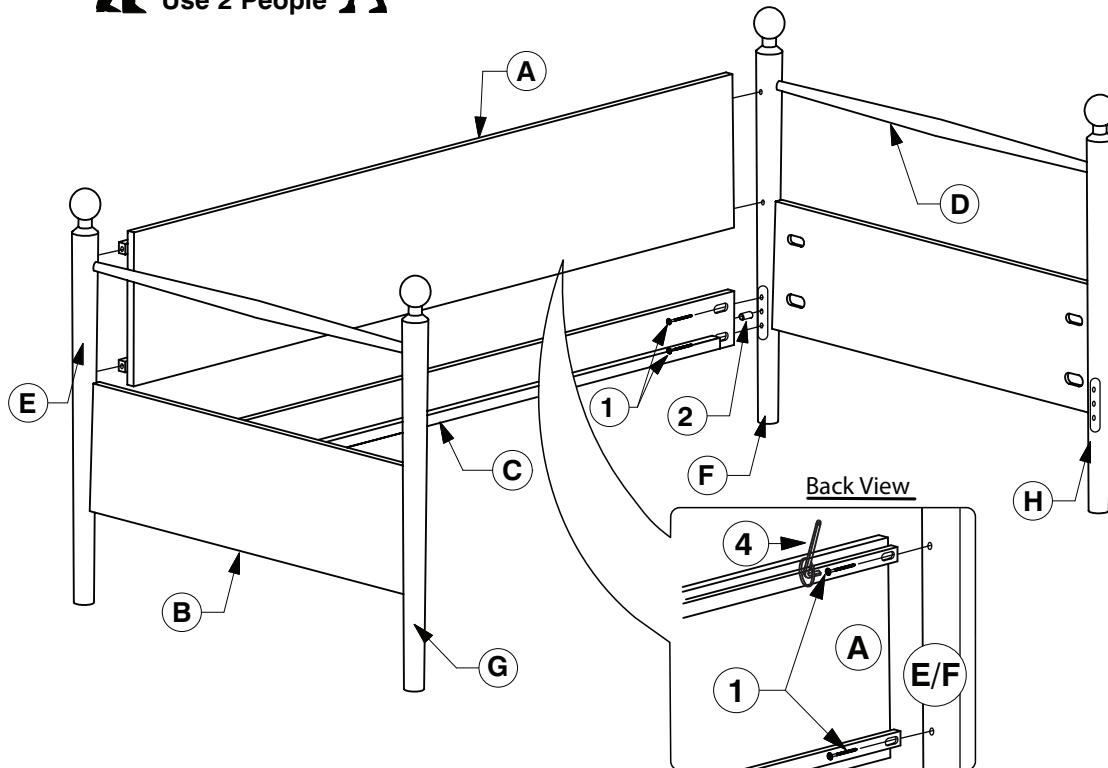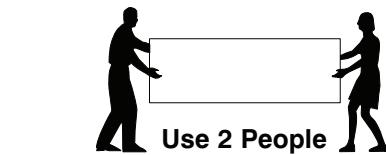


Note

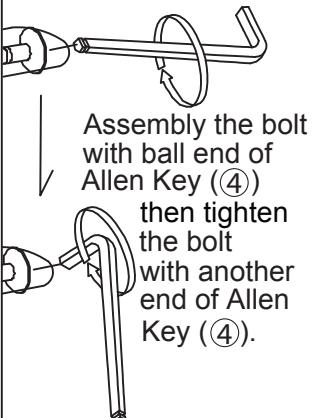

7 Assemble the Side Rail (C) to the Front Post (G & H).

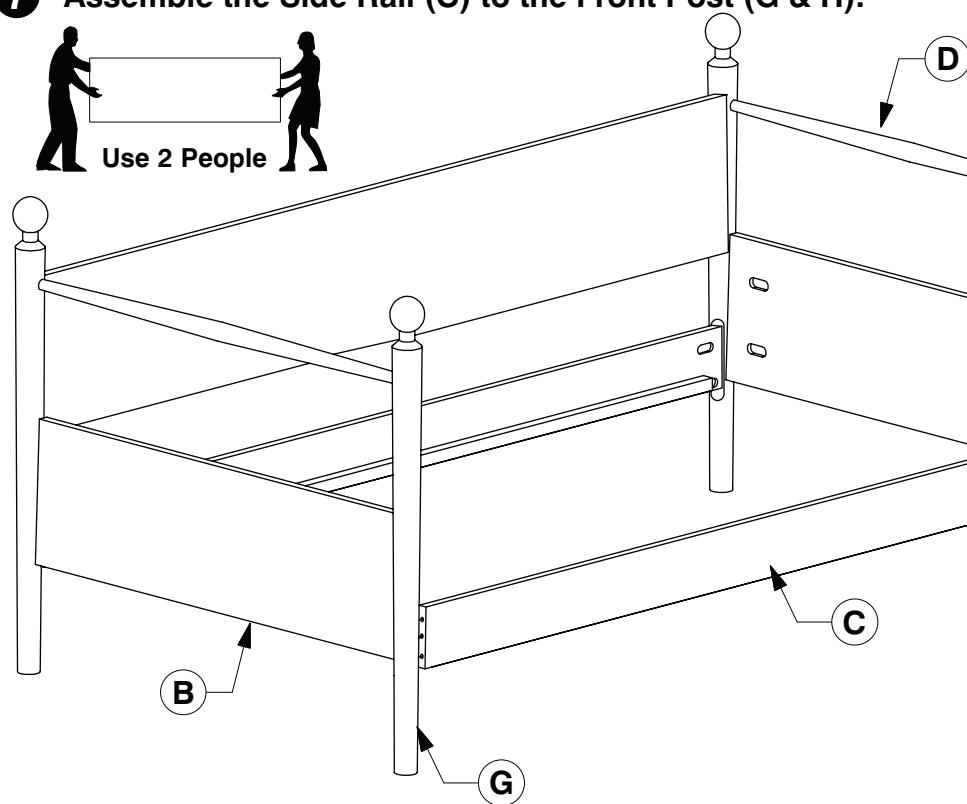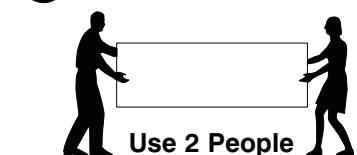

Note

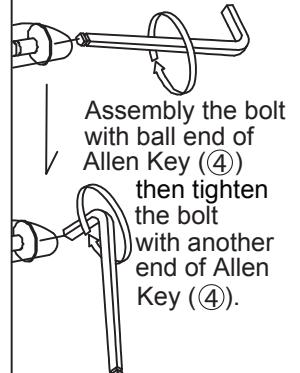


0257-1 Daybed

Assembly Instructions

WII-0325

8 Bolt the Set of Slats (J) between the Side Rail (C).

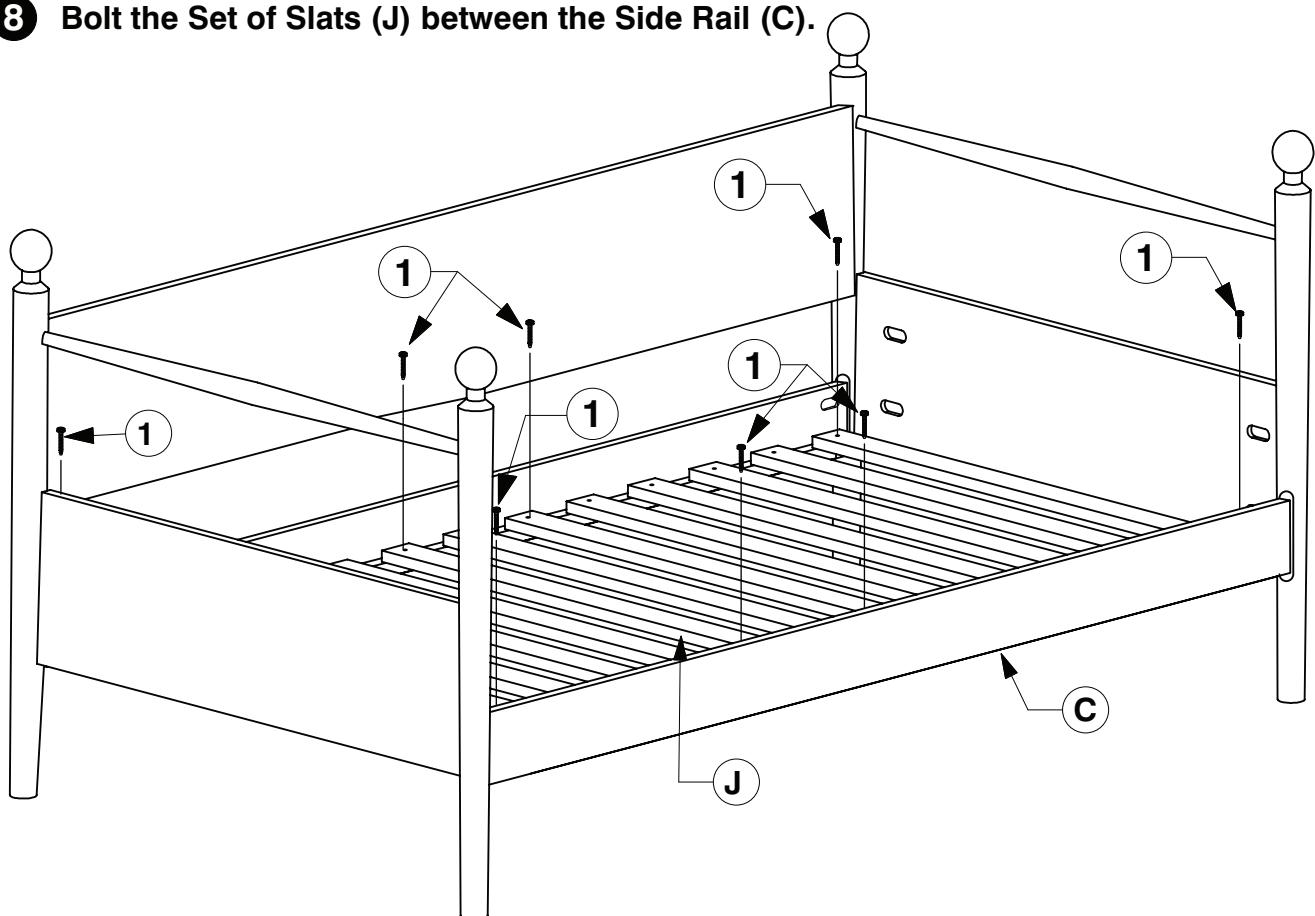

9 Screw the Set of Slats (J) between the Side Rail (C).

