










Assembly installation

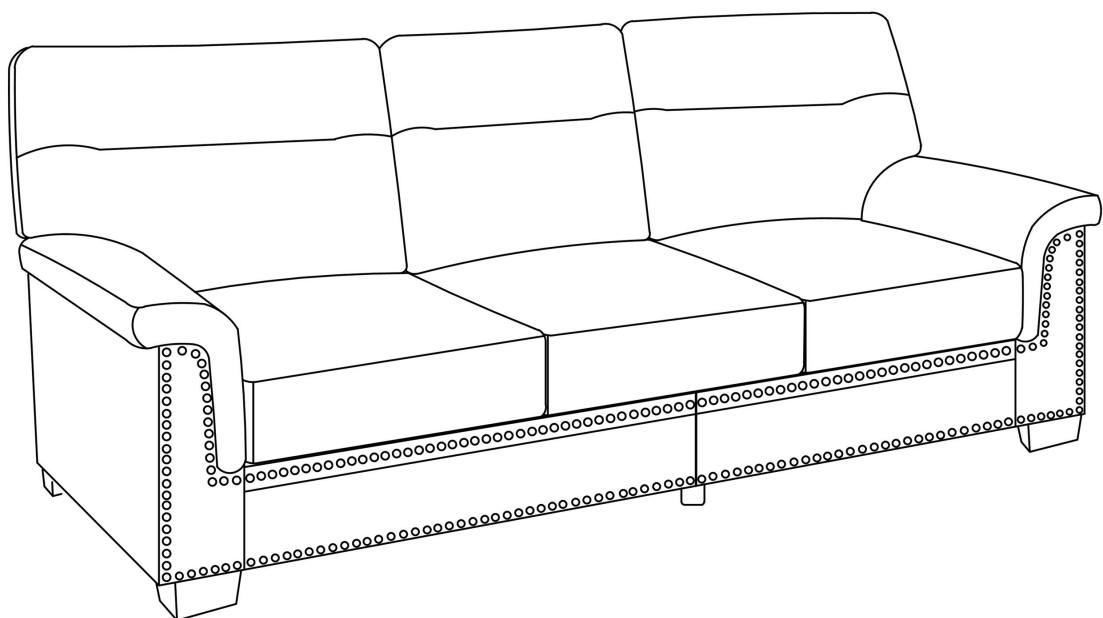



Parts List

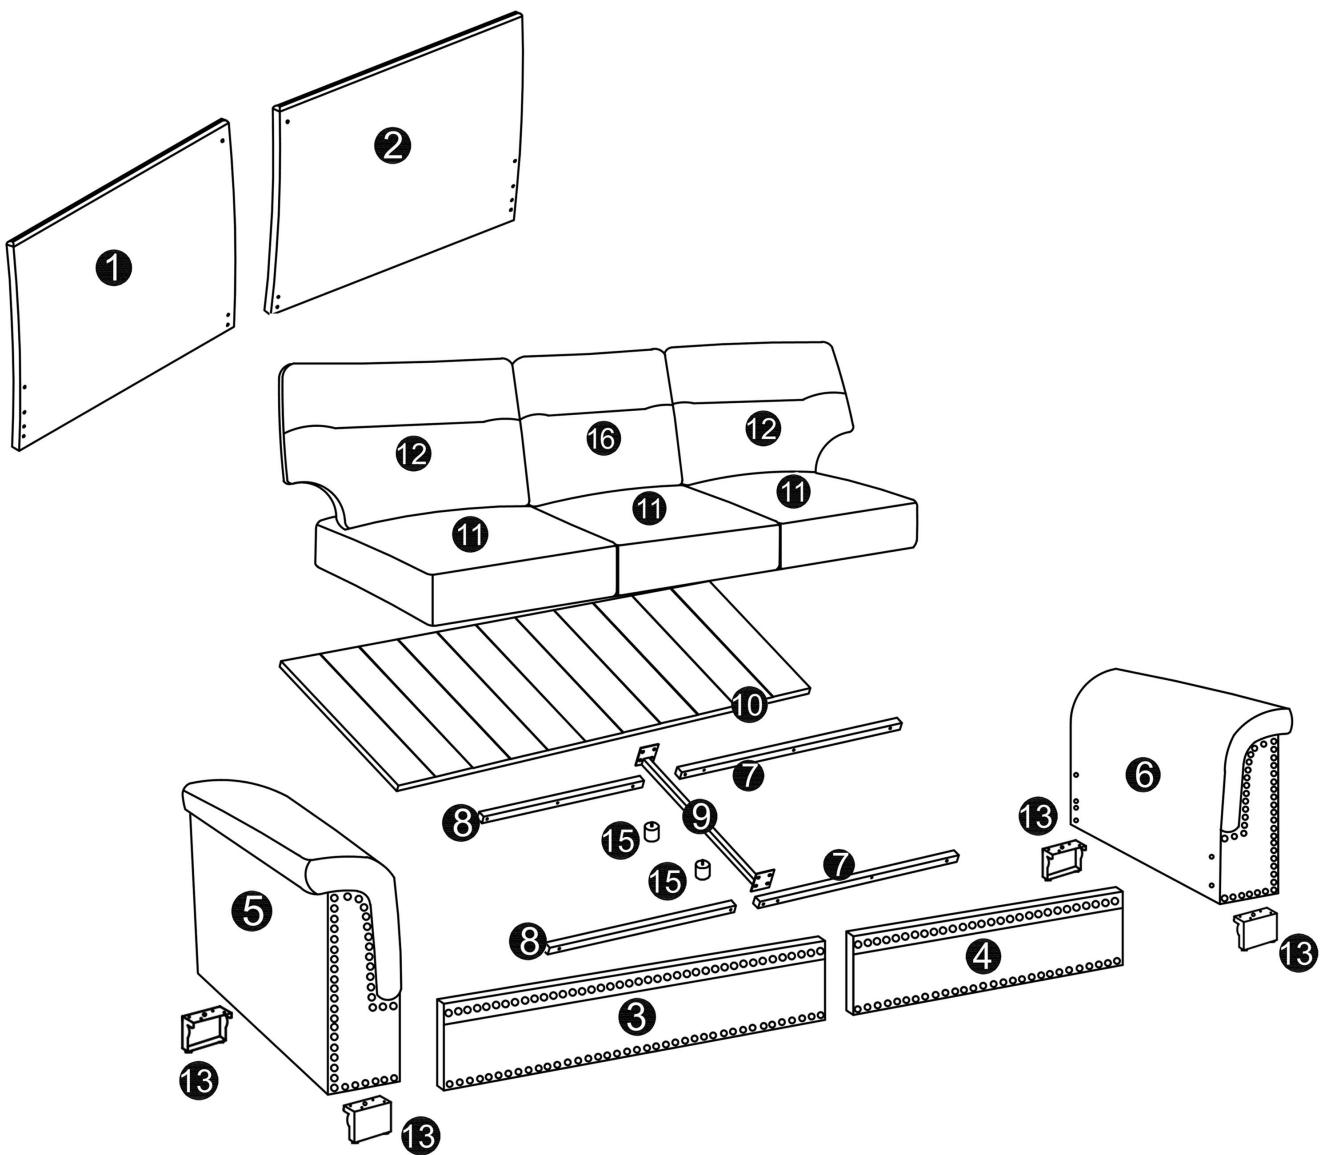

Parts List


| Part Number | Picture | Description | QTY | Part Number | Picture | Description | QTY |
|-------------|---|--------------------------|-----|-------------|---|--------------|-----|
| 1 |  | Backrest (L) | 1 | 9 |  | Metal Frame | 1 |
| 2 |  | Backrest (R) | 1 | 10 |  | Ribs | 1 |
| 3 |  | Vertical water baffle(L) | 1 | 11 |  | SEAT CUSHION | 3 |
| 4 |  | Vertical water baffle(R) | 1 | 12 |  | BACK CUSHION | 2 |
| 5 |  | Armrests(L) | 1 | 13 |  | Couch feet | 4 |
| 6 |  | Armrests (R) | 1 | 15 |  | Midfoot | 2 |
| 7 |  | Long sticks R | 2 | 16 |  | BACK CUSHION | 1 |
| 8 |  | Short sticks L | 2 | | | | |

Hardware List

| Part Number | Picture | Description | QTY | Part Number | Picture | Description | QTY |
|-------------|---|-------------|-----|-------------|---|------------------------------|-----|
| A |  | Screw M8x20 | 38 | F |  | L-shaped corner code (large) | 4 |
| B |  | Screw M8x40 | 14 | G |  | L-shaped corner code (small) | 2 |
| C |  | Gasket | 48 | H |  | Back joint | 1 |
| D |  | Screw M7x25 | 16 | I |  | Inner Hexagon Wrench | 1 |


COUCH FOLDING STEPS

Step1

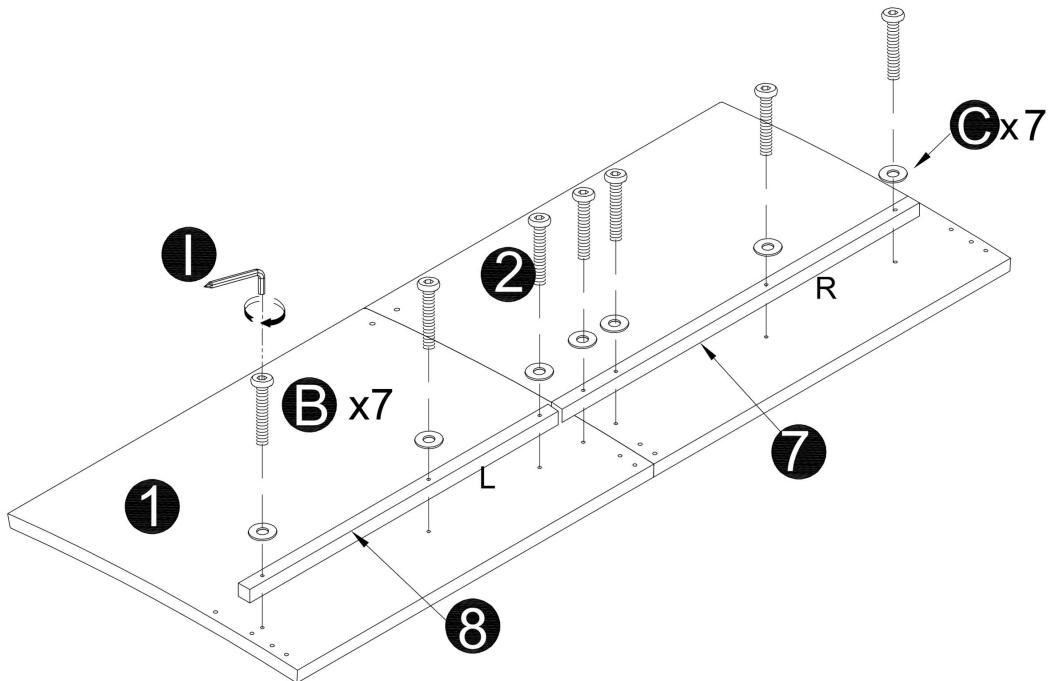

Use hardware B to pass through hardware C and fix numbers 7 and 8 onto numbers 1 and 2


Step2

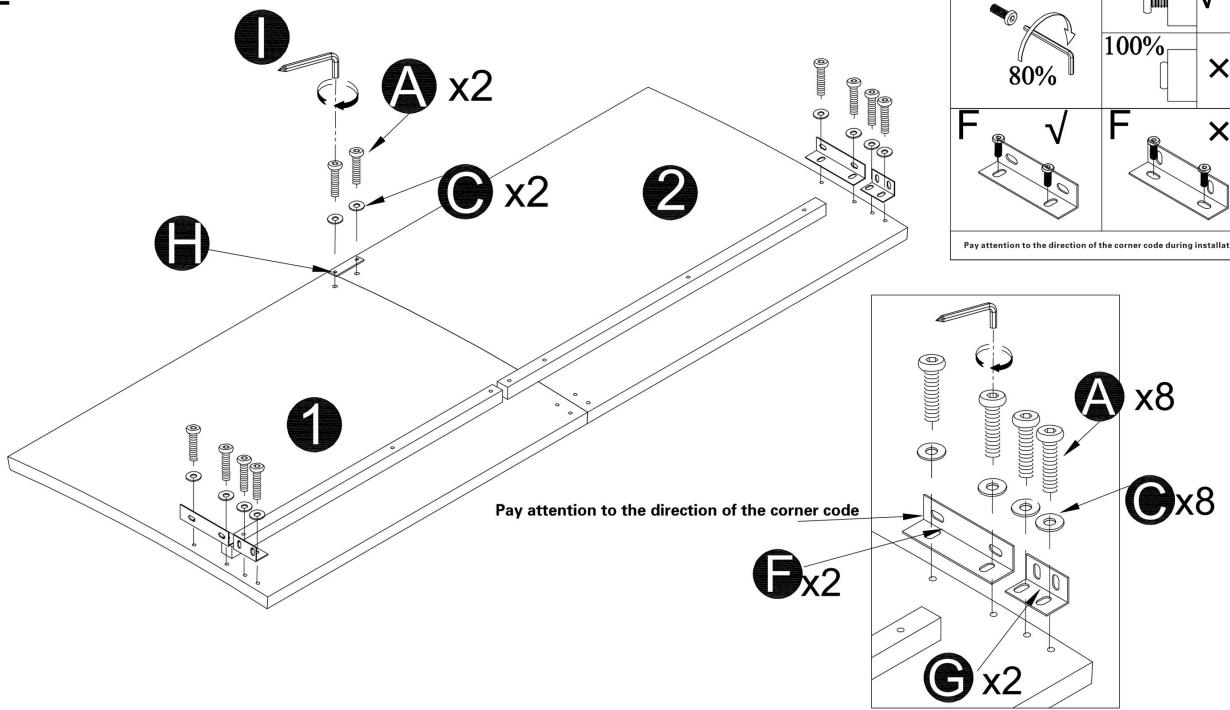

Use hardware A to pass through hardware D and C, and fix hardware I&F&G on screws 1 and 2 as long as they lock to 80%


COUCH FOLDING STEPS

Step3

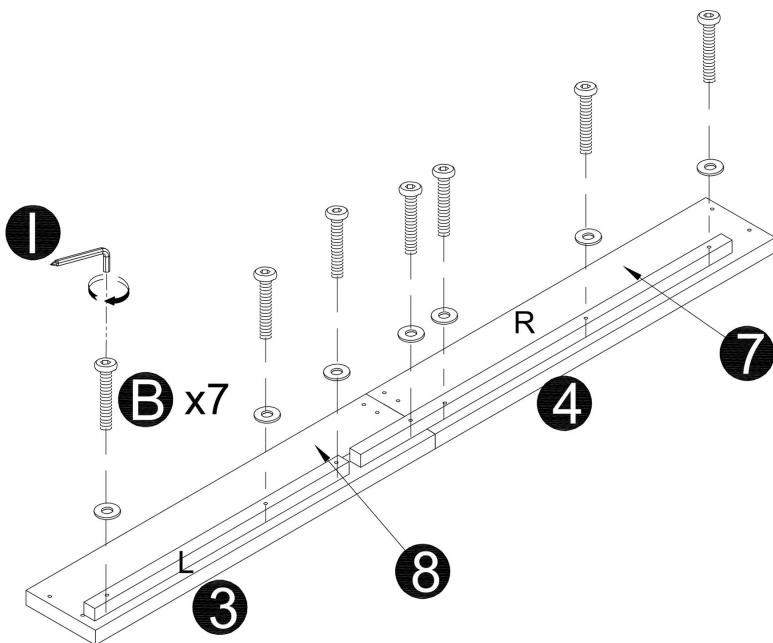

Use hardware B to pass through hardware C and fix numbers 7 and 8 onto numbers 3 and 4


Step4

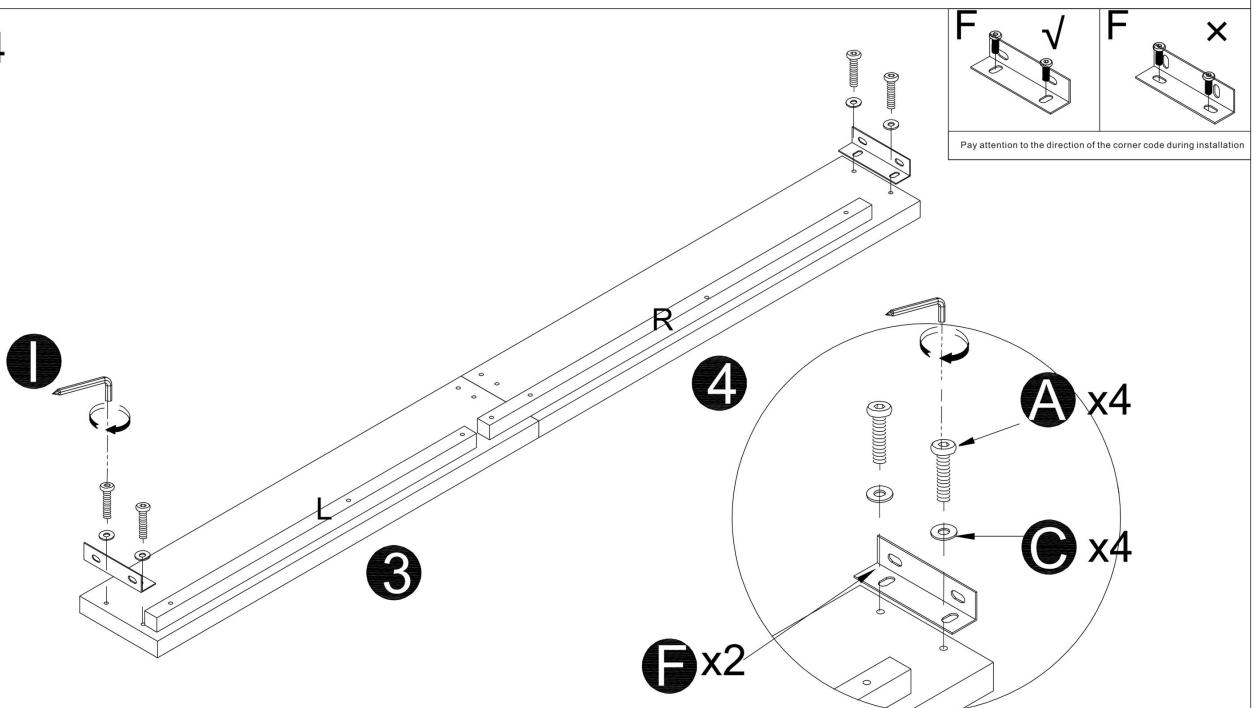

Use hardware A to pass through hardware D and C, and fix hardware F on numbers 3 and 4 (as long as the screw is locked to 80%)


COUCH FOLDING STEPS

Step5

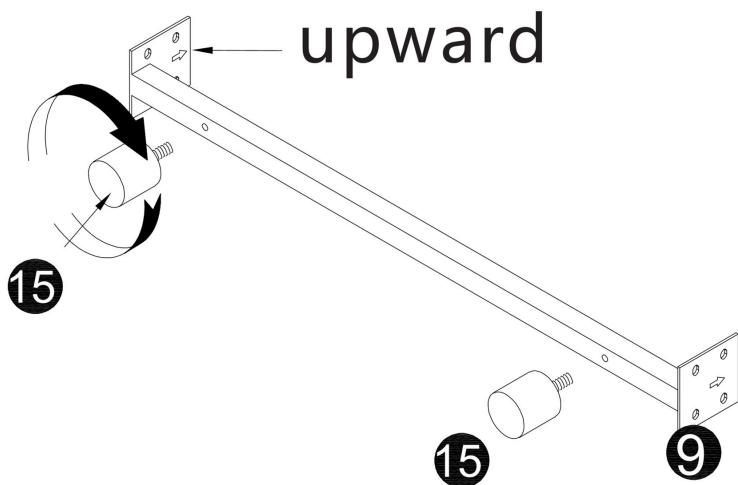

Install No.15 on No.9


Step6

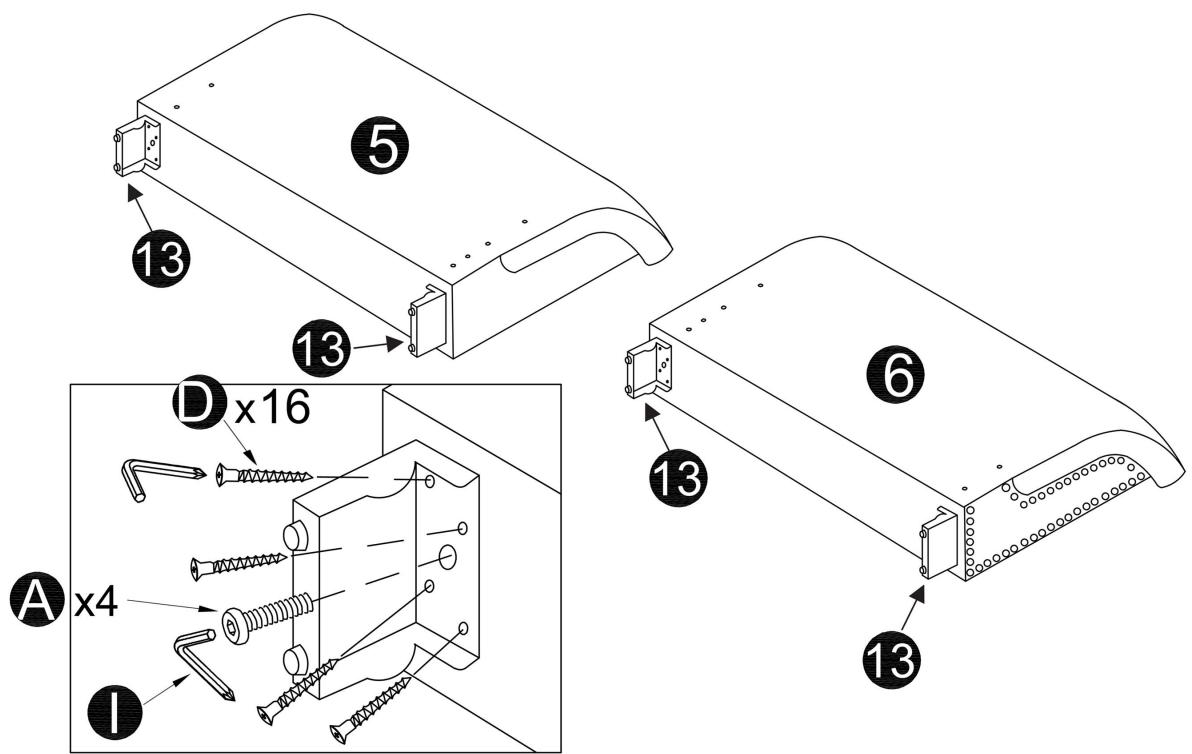

Fix No. 13 onto No. 5 and No. 6 with hardware E


COUCH FOLDING STEPS

Step7

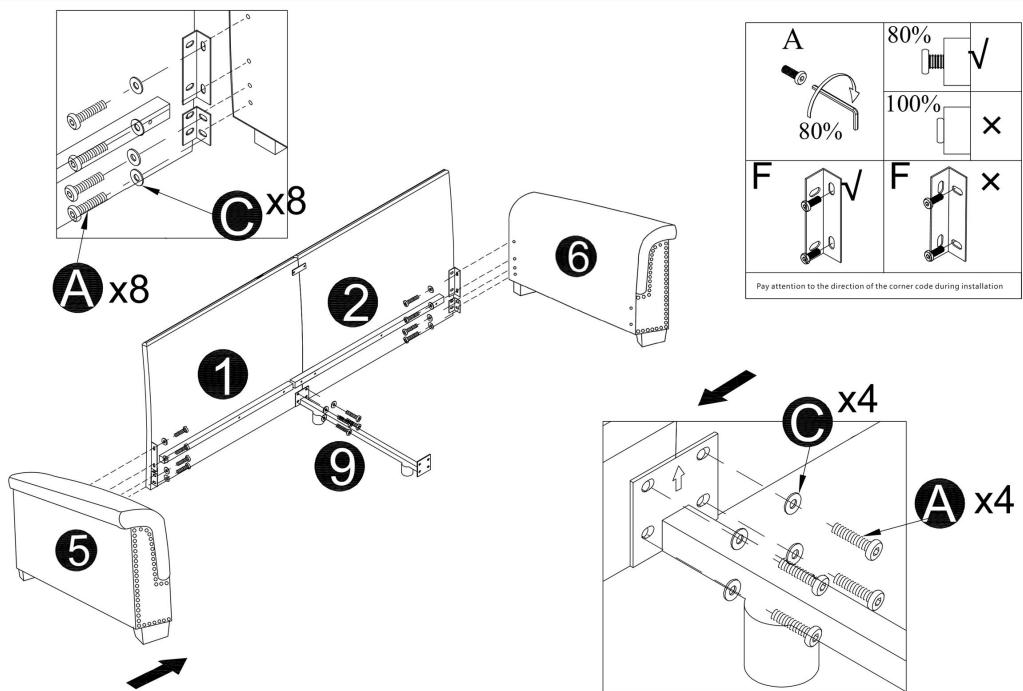

Connect the components of the front group together by threading hardware A through hardware D and C according to the diagram. All screws only need to be locked to 80%


Step8

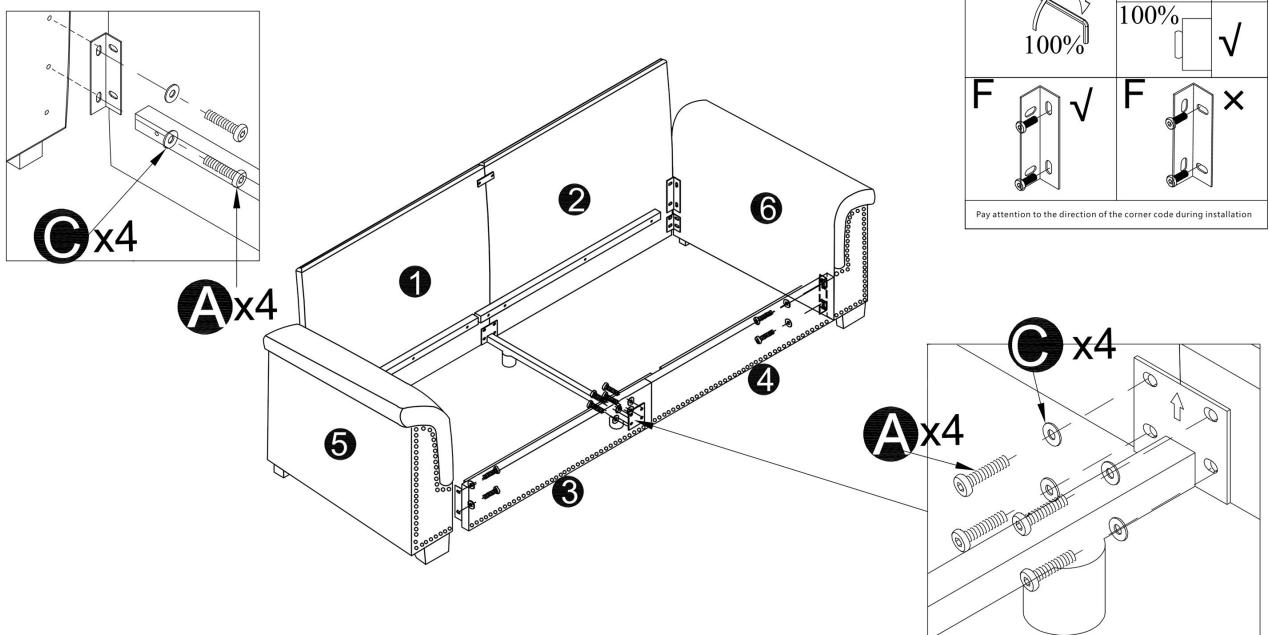

Connect the components of the front group together by threading hardware A through hardware D and C according to the diagram. All screws only need to be locked to 100%

COUCH FOLDING STEPS


Step9

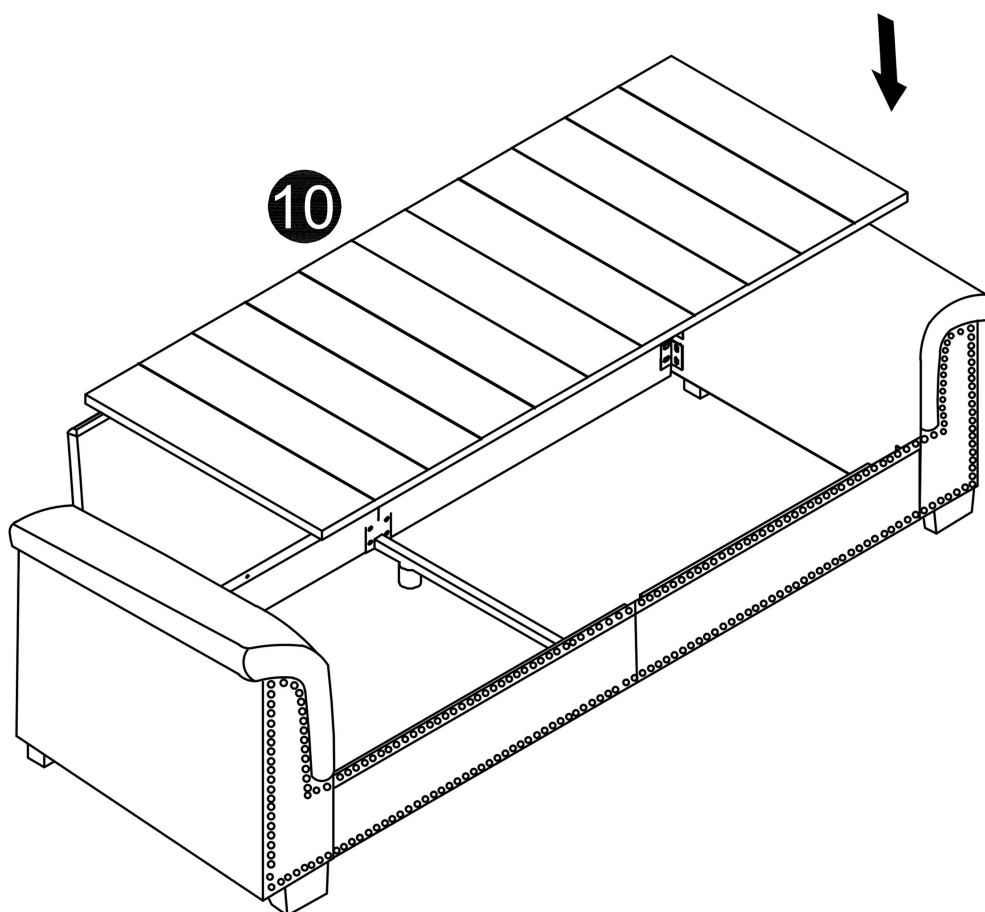

Put the 10th in the group box


COUCH FOLDING STEPS

Step10

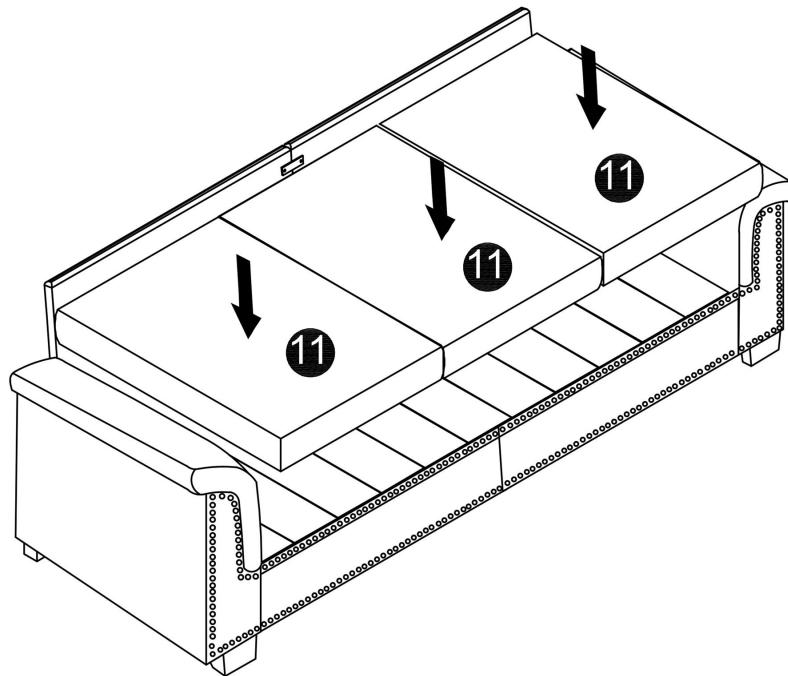

Put the 11th in the group box

Step11

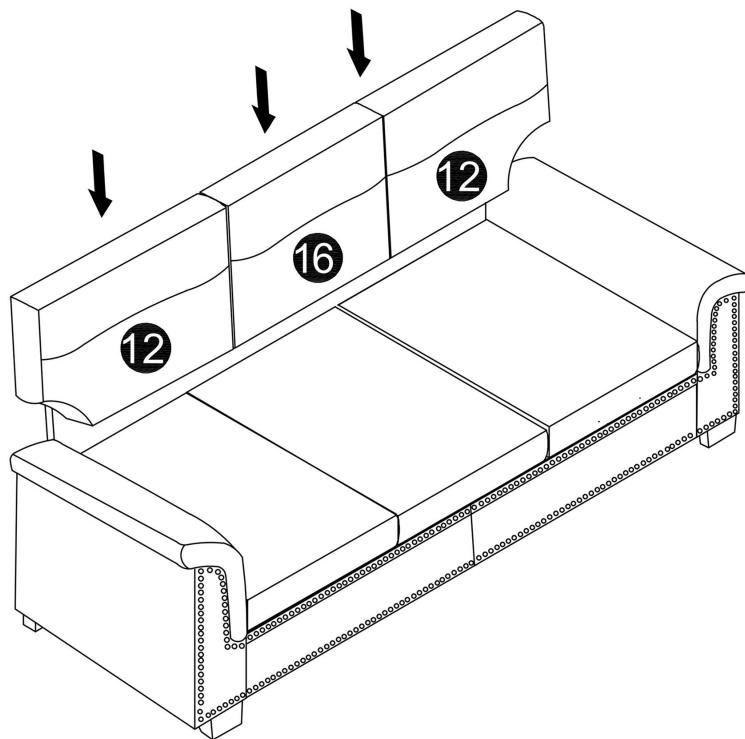

Put the 12th in the group box