
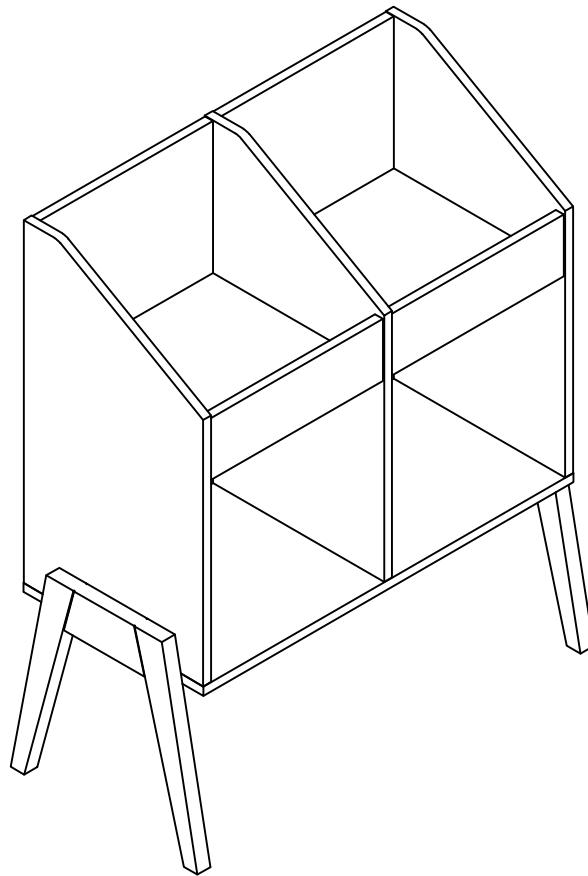











CROSLEY
FURNITURE

Record Storage Stand
CF1187



PARTS LIST


A	B	C	D	E
				
Left Panel 1 PC	Right Panel 1 PC	Partition Panel 1 PC	Shelf 2 PCS	Left Rail 1 PC
F	G	H	I	J
				
Right Rail 1 PC	Left Back Panel 1 PC	Right Back Panel 1 PC	Bottom Panel 1 PC	Rail 1 PC
K	L			
				
Left Leg 1 PC	Right Leg 1 PC			

HARDWARE LIST

#1		#2		#3		#4		#5	
Tapping Bolt 8 PCS (Extra 1)	Cam Bolt 14 PCS (Extra 1)	Cam Lock 14 PCS (Extra 1)	Bolt 6 PCS (Extra 1)	Spring Washer 6 PCS (Extra 1)					
#6		#7		#8		#9		#10	
Flat Washer 6 PCS (Extra 1)	Short Wood Dowel 26 PCS (Extra 1)	Long Wood Dowel 5 PCS (Extra 1)	Flat Head Screw 2 PCS (Extra 1)	Allen Wrench 1 PC					
#11		#12							
Cam Sticker 20 PCS (Extra 1)	Safety Strap Kit 1 SET								

ADDITIONAL TOOLS (Not Provided)

Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver


Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

Step 1. Insert cam bolts (part #2) into pre-drilled holes of panels (parts A, B, C, K & L) using phillips head screwdriver.


Note: Do not over tighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.

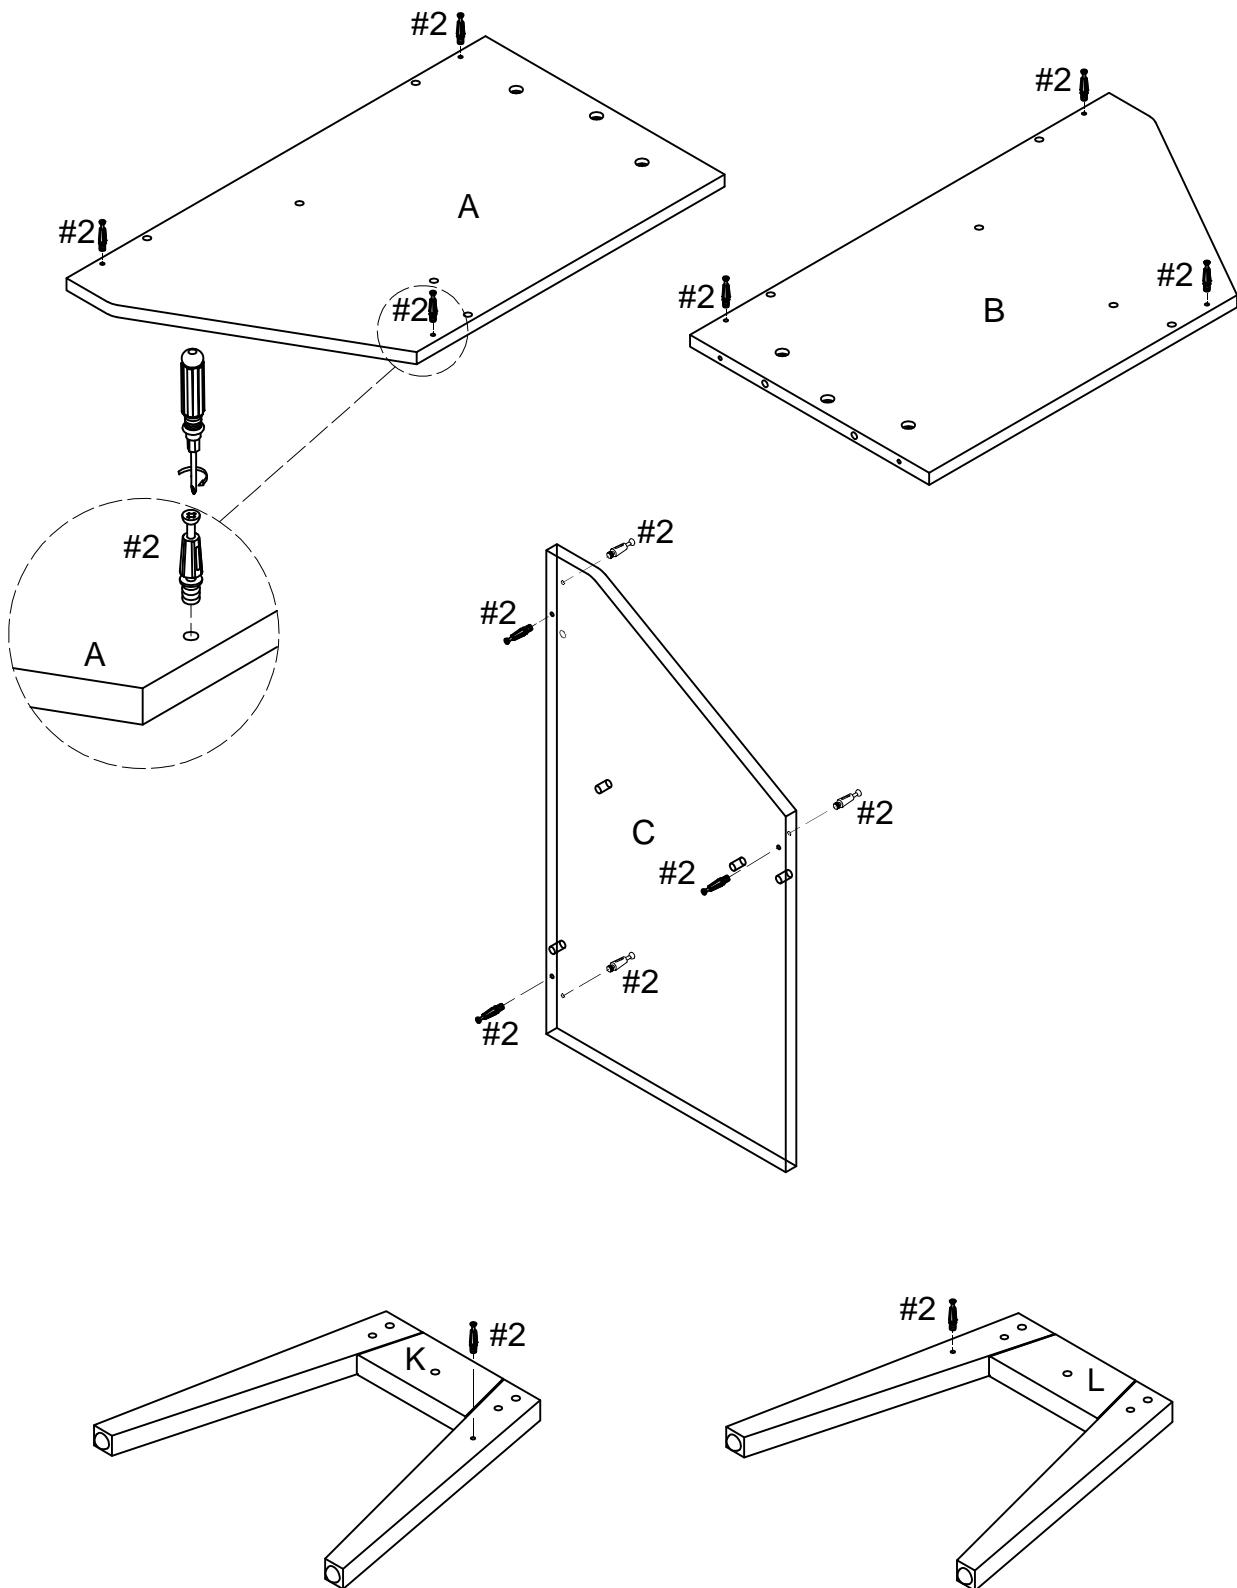

Step 2. Attach rail (part J) to bottom panel (part I) using short wood dowels (part #7), flat head screws (part #9) and phillips head screwdriver.

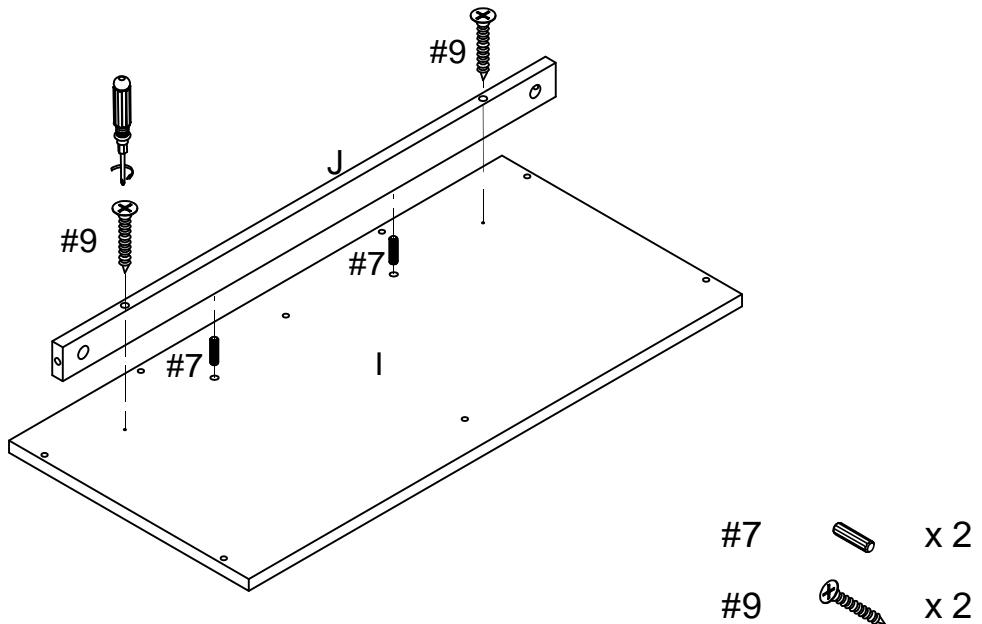


Step 3. Attach right rail (part F) to shelf (part D) using short wood dowels (part #7).
 Attach assembled unit (parts D & F) to right panel (part B) using cam lock (part #3), short wood dowels (part #7) and phillips head screwdriver.
 Note: Cam locks must rotate a full 180°. See pictured insert.

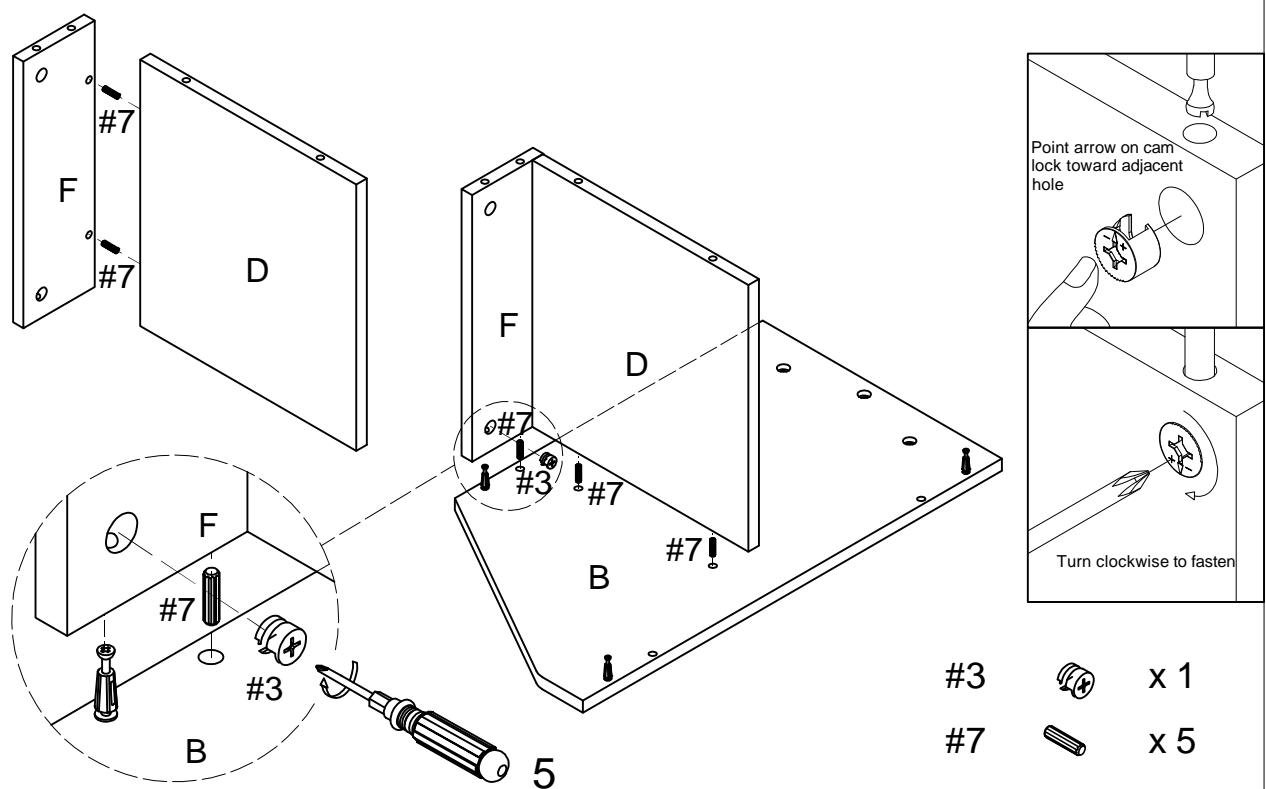

Step 4. Attach left back panel (part H) to right panel (part B) using cam locks (part #3), short wood dowels (part #7) and phillips head screwdriver.


Note: Cam locks must rotate a full 180°. See pictured insert.

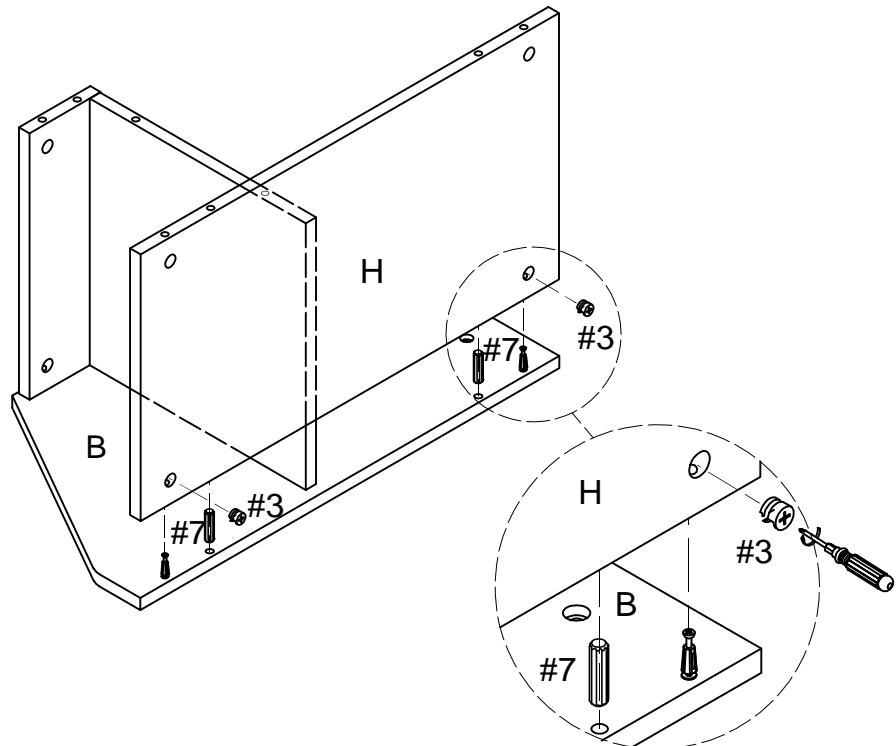

#3  x 2
#7  x 2

Step 5. Attach partition panel (part C) to assembled unit (parts D, F & H) using cam locks (part #3), long wood dowels (part #8) and phillips head screwdriver.


Note: Cam locks must rotate a full 180°. See pictured insert.

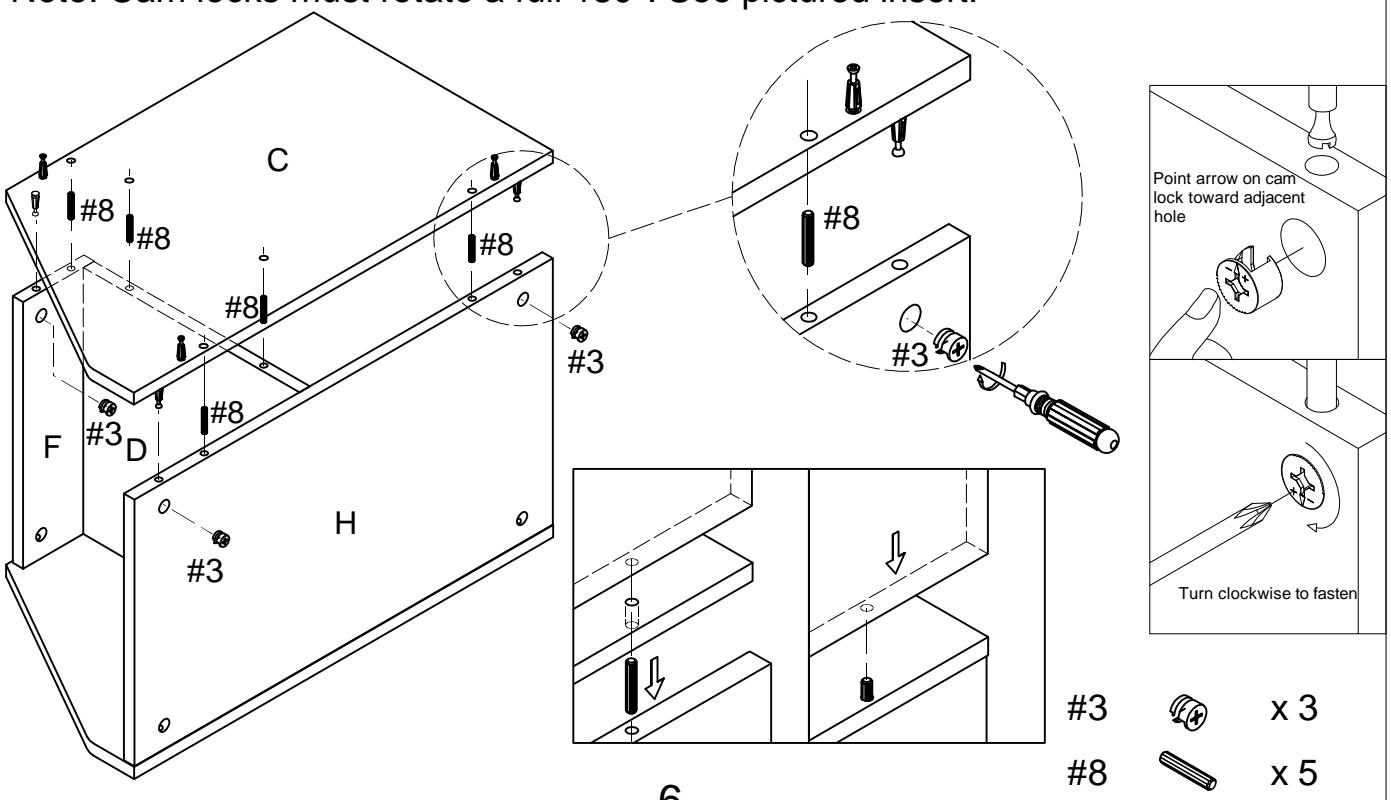

#3  x 3
#8  x 5


Step 6. Attach left rail (part E) to shelf (part D) using short wood dowels (part #7).
 Attach assembled unit (parts D & E) to partition panel (part C) using cam lock (part #3) and phillips head screwdriver.

Note: Cam locks must rotate a full 180°. See pictured insert.

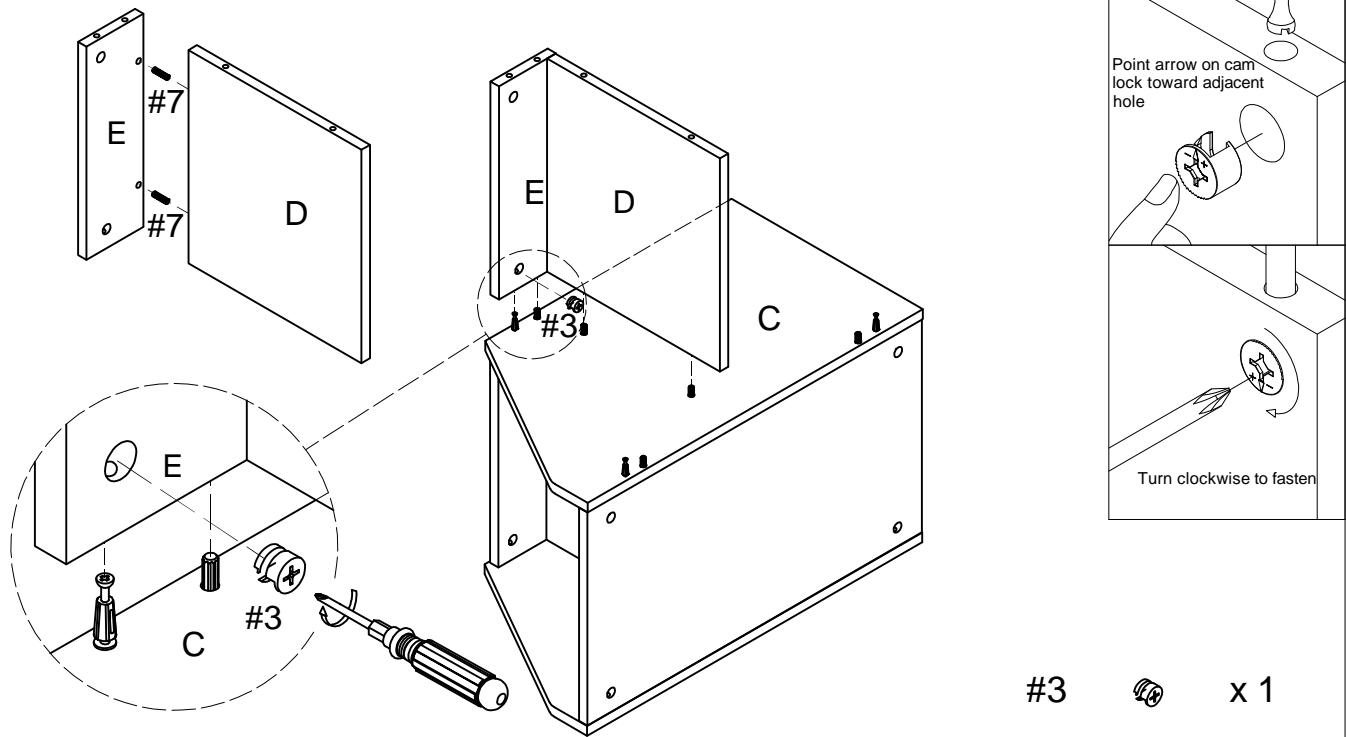


Step 7. Attach left back panel (part G) to partition panel (part C) using cam locks (part #3) and phillips head screwdriver.

Note: Cam locks must rotate a full 180°. See pictured insert.

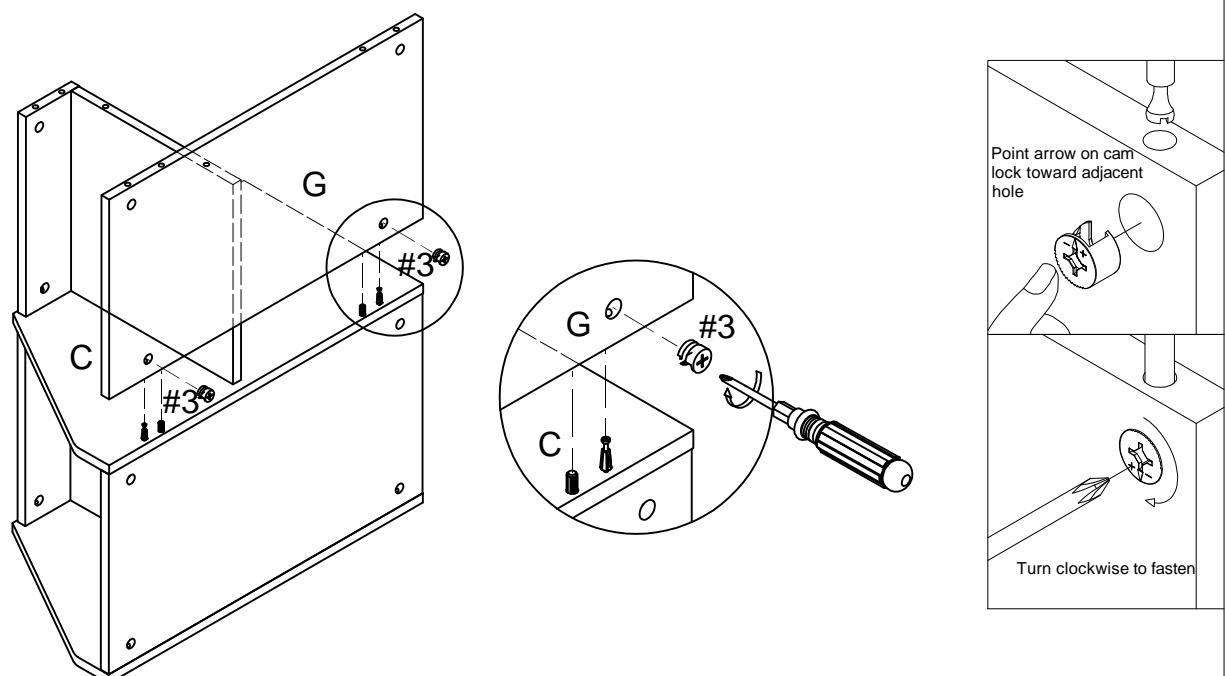


Step 8. Attach left panel (part A) to assembled unit (parts D, E & G) using cam locks (part #3), short wood dowels (part #7) and phillips head screwdriver.

Note: Cam locks must rotate a full 180°. See pictured insert.


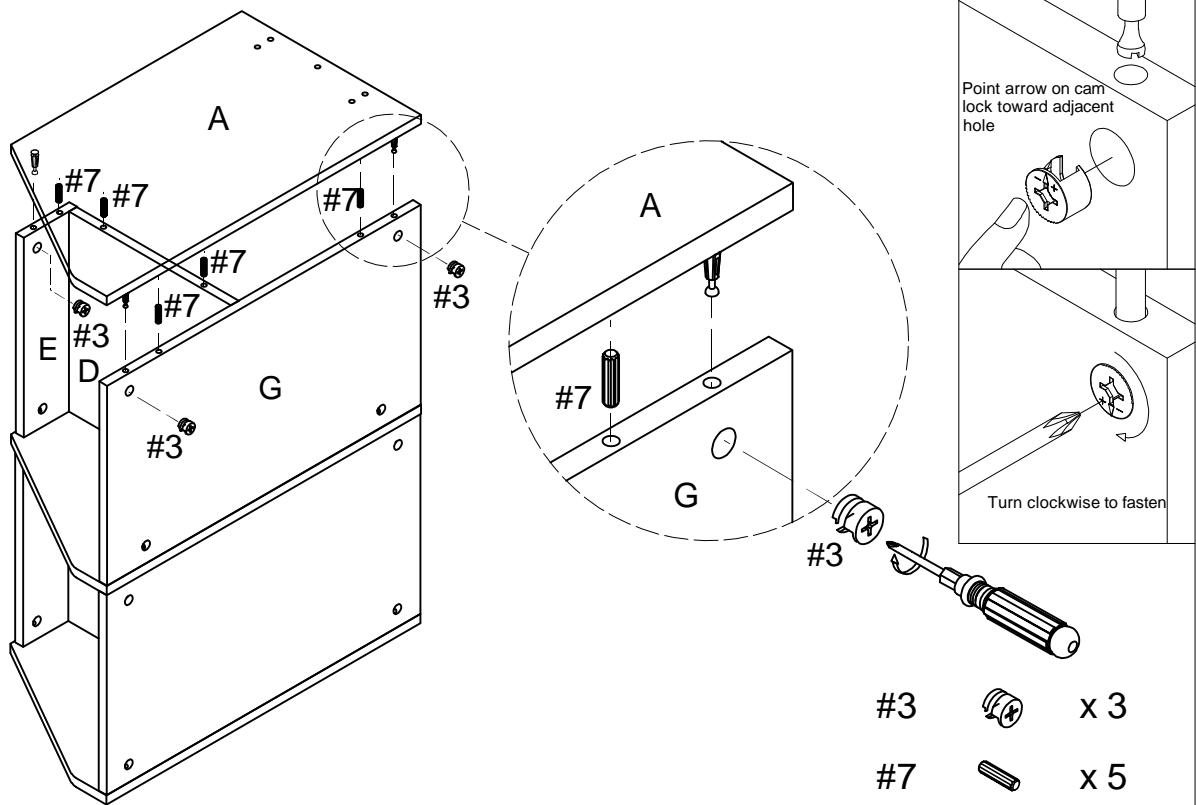


Step 9. Attach bottom panel (part I) to assembled unit (parts A, B, C, G & H) using tapping bolts (part #1), short wood dowels (part #7) and allen wrench (part #10).

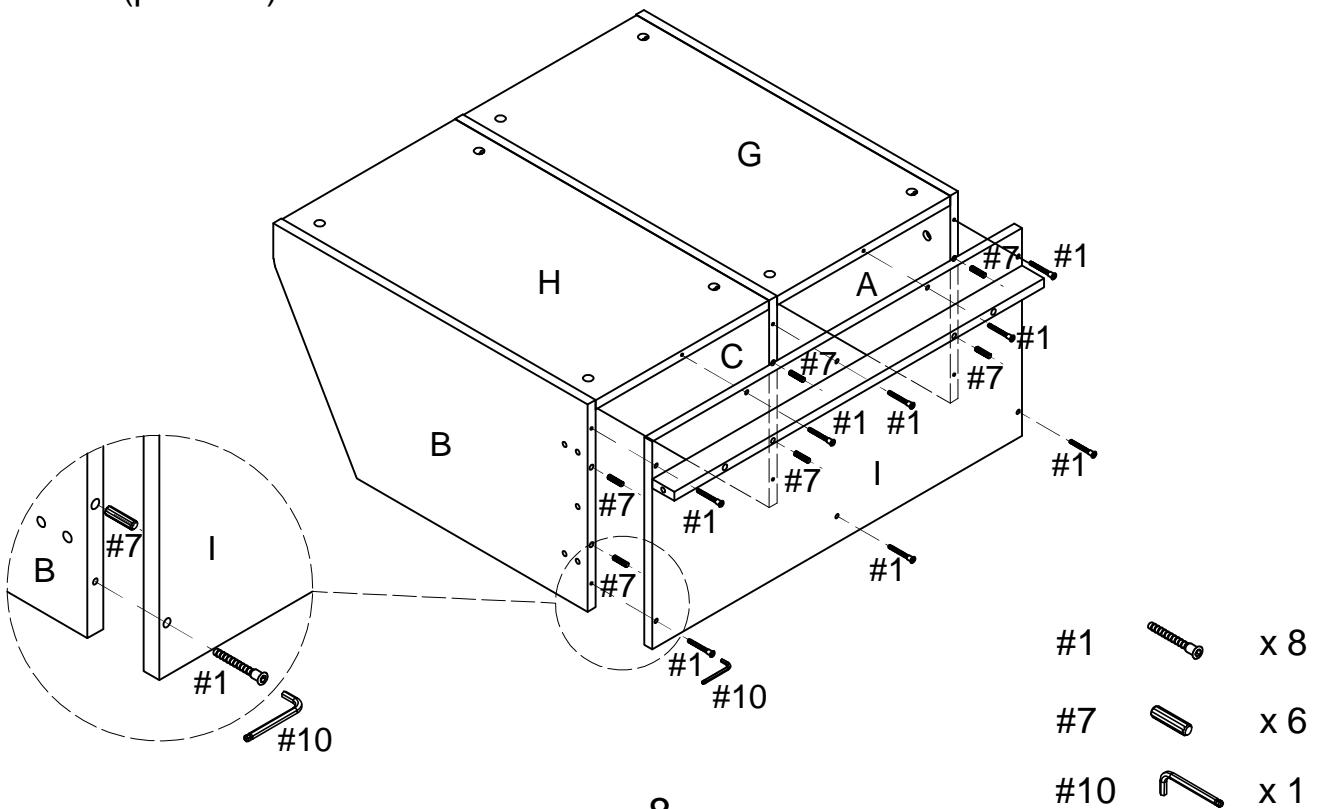

Step 10. Attach legs (parts K & L) to assembled unit (parts A, B & J) using cam locks (part #3), bolts (part #4), spring washer (part #5), flat washer (part #6), short wood dowels (part #7), allen wrench (part #10) and phillips head screwdriver.

Note: Cam locks must rotate a full 180°. See pictured insert.

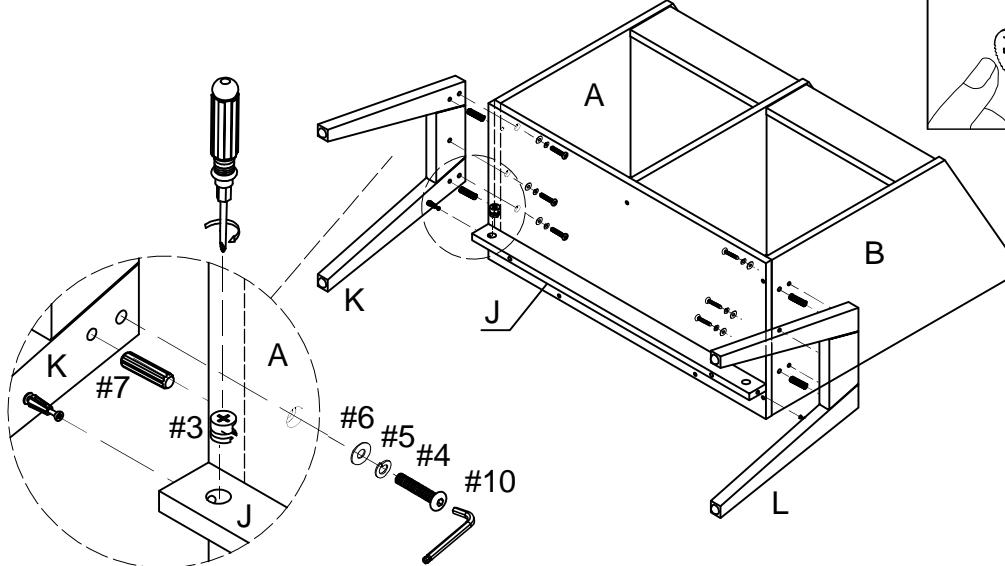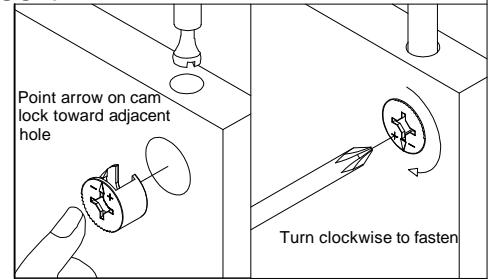

#3		x 2
#4		x 6
#5		x 6
#6		x 6
#7		x 4
#10		x 1


Step 11. Carefully turn unit upright. Using cam stickers (part #11) cover cam locks (part #3) and bolts (part #4).

Important: Safety strap kit (part #12) must be installed to prevent tipping damage and/or injury.

NOTE: It is important to adjust levelers once fully assembled and upright.

Extend adjustable leveler until it's firmly in contact with the floor.

If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

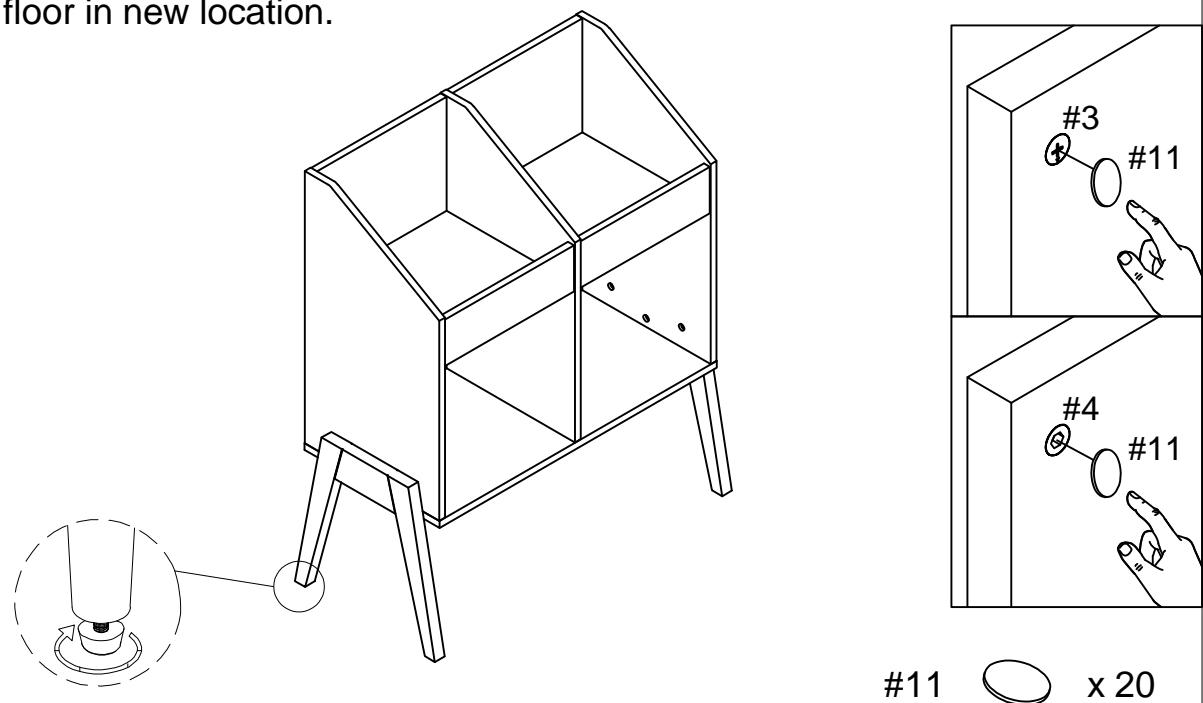

#11		x 20
-----	--	------

#12	A	B	C	D	E
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Bracket 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to partition panel (part C) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in partition panel (part C) where bracket (B) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.

Note: This item is not intended for clothing storage use.

