

Assembly Instructions


Caution: You must read this before you proceed

Care & Maintenance

| | |
|---|---|
|  | <ul style="list-style-type: none">Not for commercial use. For residential use only. |
|  | <ul style="list-style-type: none">Furniture may scratch floors. We recommend using furniture pads to protect your floors. |
|  | <ul style="list-style-type: none">Do not put hot items directly on furniture surface. |
|  | <ul style="list-style-type: none">Do not clean furniture with harsh cleansers or polish. |
|  | <ul style="list-style-type: none">Do not place furniture under direct sunlight. |
|  | <ul style="list-style-type: none">Do not place furniture near heating or cooling vents. |
|  | <ul style="list-style-type: none">Do not write on furniture without a padded barrier to protect the surface. |
|  | <ul style="list-style-type: none">Do not place furniture outside . For indoor use only. |
|  | <ul style="list-style-type: none">Stains may be removed with mild soap solution and damp cloth. |
|  | <ul style="list-style-type: none">Children should not climb or jump on the furniture. |
|  | <ul style="list-style-type: none">Dust and pick-up spills using a clean, non-colored, lint-free cloth. |




Please look in the magic tape pouch for hardware packs and legs.
Sets often ship in multiple boxes and may arrive a day or two apart.

SECTIONAL SOFA



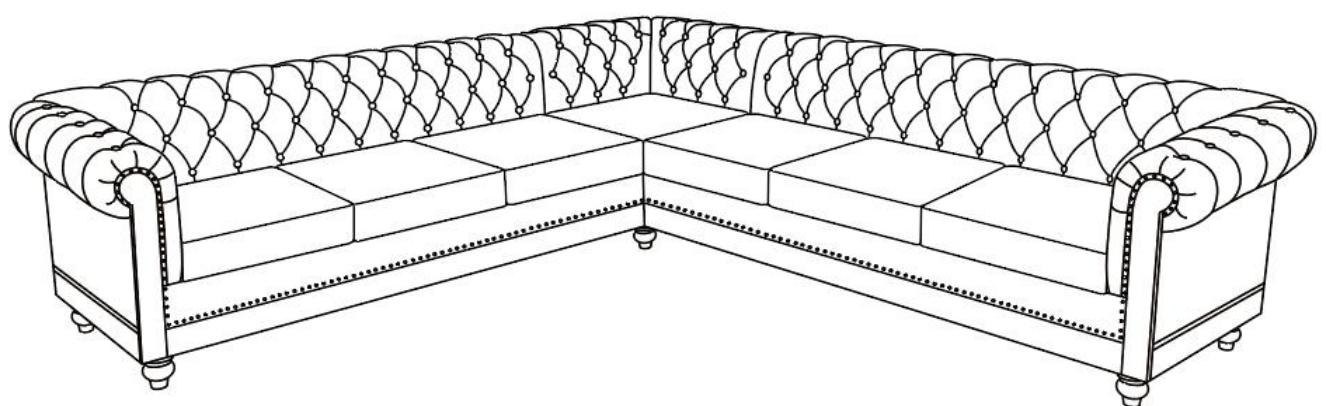


Part List




| Label | Picture | Description | QTY |
|-------|---------|-----------------------|-----|
| A | | Left Backrest | 1 |
| B | | Right Backrest | 1 |
| C | | Left Corner Backrest | 1 |
| D | | Right Corner Backrest | 1 |
| E | | Left Armrest | 1 |
| F | | Right Armrest | 1 |
| G | | Corner Seat Frame | 1 |
| H | | Seat | 2 |
| I | | Left Front Rail | 1 |
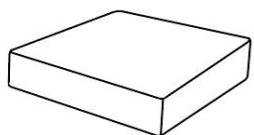
| | | | |
|---|--|------------------|---|
| J |  | Right Front Rail | 1 |
| K |  | Wooden Batten | 4 |
| L |  | Cushion | 6 |
| M |  | Corner Cushion | 1 |
| N |  | Leg | 8 |

PARTS LIST N760P285759
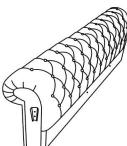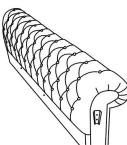
| | | | |
|---|---|------------------|---|
| A |  | Left Backrest | 1 |
| B |  | Right Backrest | 1 |
| H |  | Seat | 2 |
| I |  | Left Front Rail | 1 |
| J |  | Right Front Rail | 1 |

PARTS LIST N760P285760

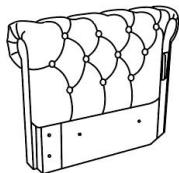
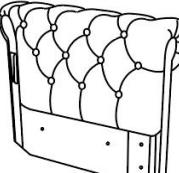
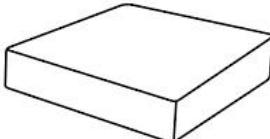
| | | | |
|---|---|---------------|---|
| E |  | Left Armrest | 1 |
| F |  | Right Armrest | 1 |
| L |  | Cushion | 2 |

HARDWARE LIST N760P285761




| Label | Picture | Description | QTY |
|-------|---|----------------|-----|
| ① |  | Plastic Washer | 8 |
| ② | | Bolt(M8*40MM) | 16 |
| ③ | | Bolt(M8*25MM) | 4 |
| ④ | | Flat Washer | 16 |
| ⑤ | | Spring Washer | 16 |
| ⑥ | | Allen Wrench | 1 |

PARTS LIST N760P285761

| Label | Picture | Description | QTY |
|-------|---------|-------------------|-----|
| G | | Corner Seat Frame | 1 |

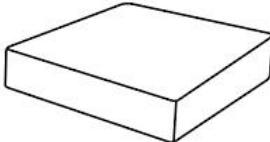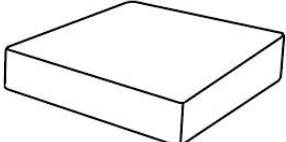
| | | | |
|---|---|----------------|---|
| L |  | Cushion | 3 |
| K |  | Wooden Batten | 4 |
| M |  | Corner Cushion | 1 |
| N |  | Leg | 8 |

PARTS LIST N760P285762
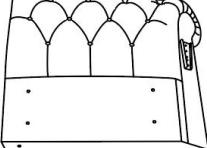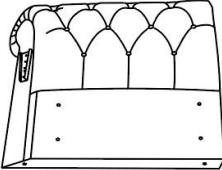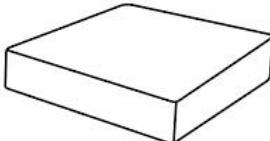
| | | | |
|---|---|-----------------------|---|
| C |  | Left Corner Backrest | 1 |
| D |  | Right Corner Backrest | 1 |
| L |  | Cushion | 1 |

Assembly Preparation

Before Beginning Assembly:

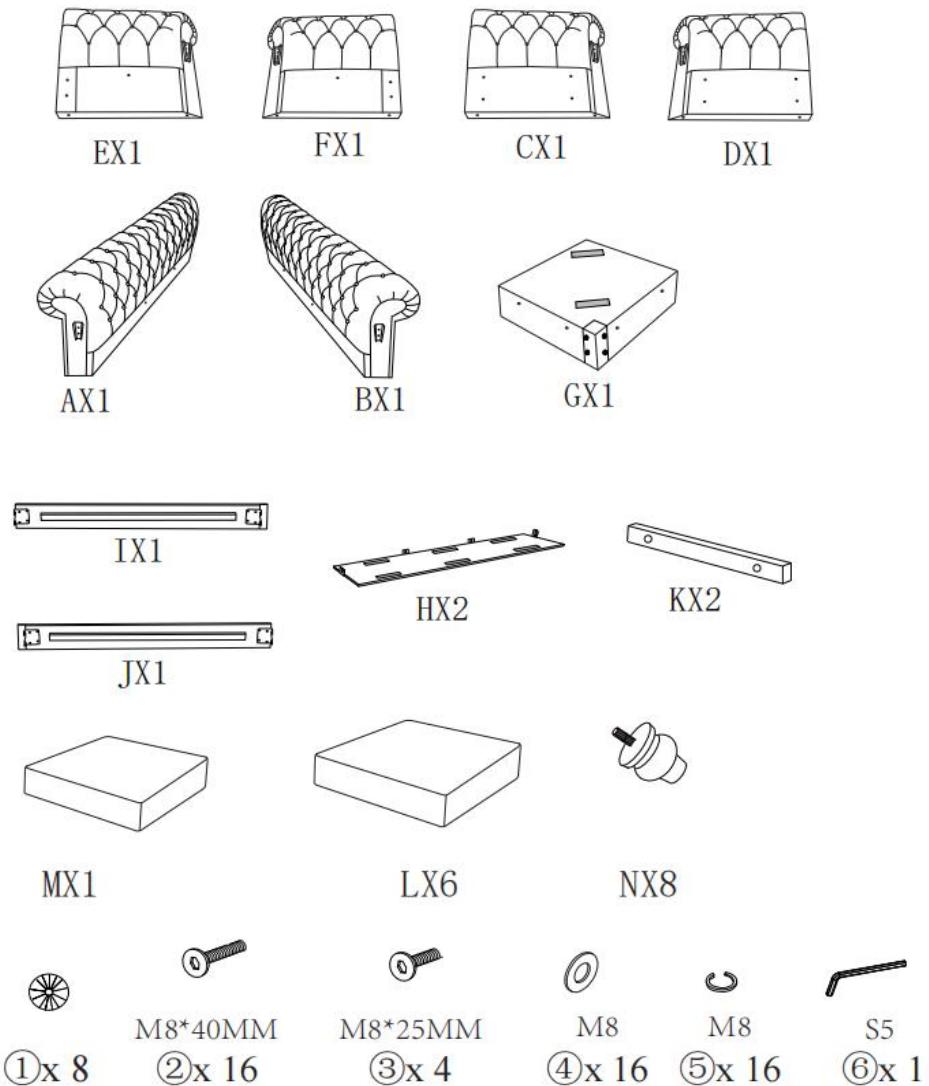


- **Read instructions, cover to cover-**
- **Have 2 adults on hand for assembly-**
- **Do not assemble on flooring or carpet-**
- **Assemble on a clean non-marring surface (packing foam)-**
- **Save all packaging until finished-**



Assembly Steps


OVERVIEW

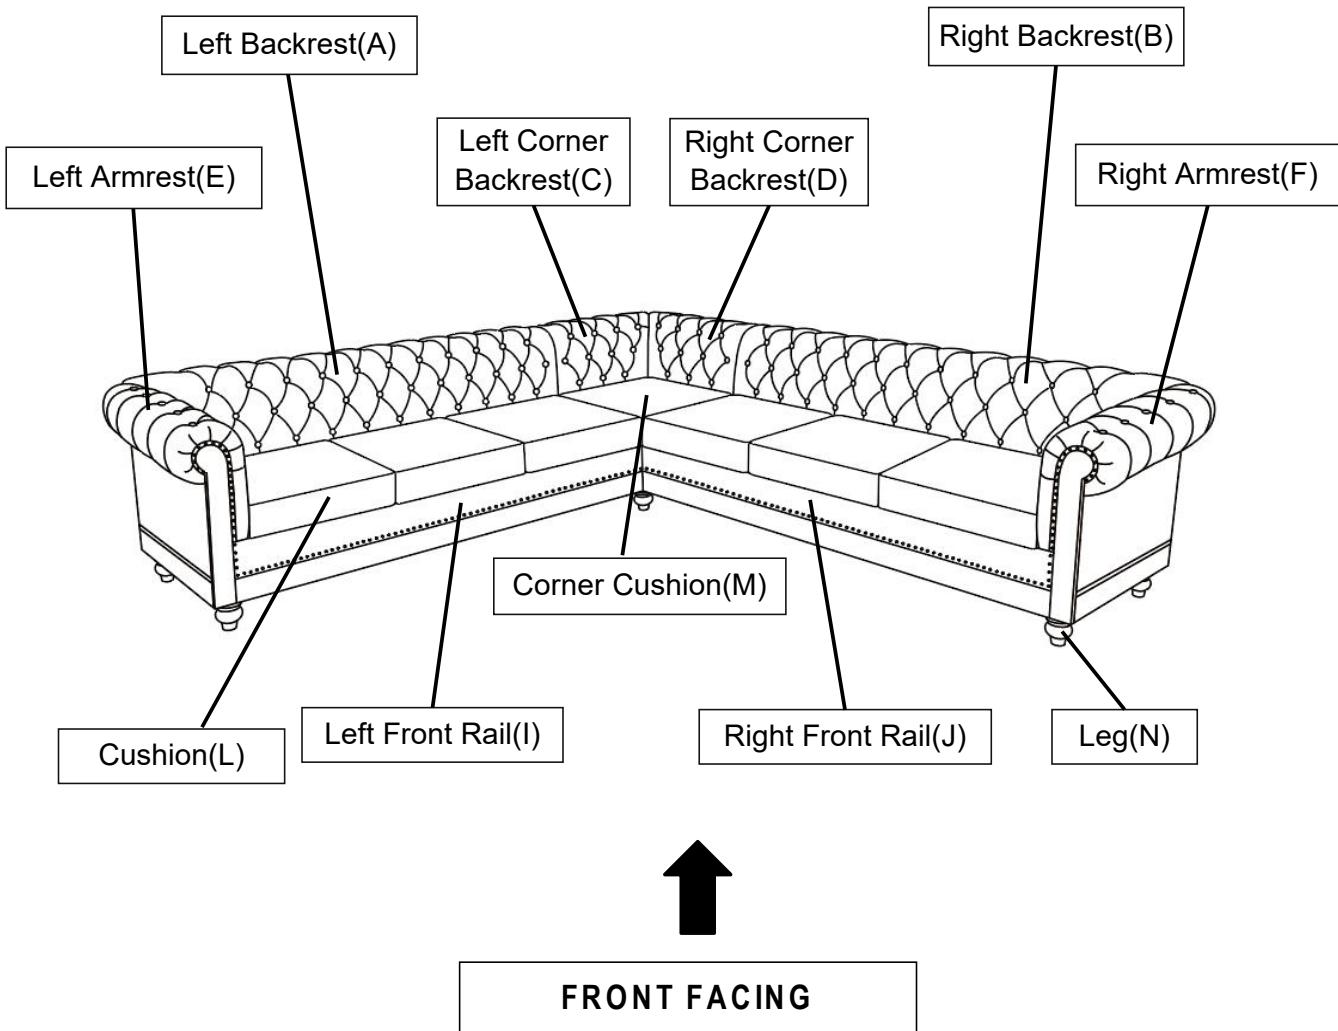

This Sofa has multiple parts and may require up to 60 minutes to assemble. To give you an overview of the sofa parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.


Note: It is recommended that you have an adult partner to assist during the entire assembly process.

Step 1

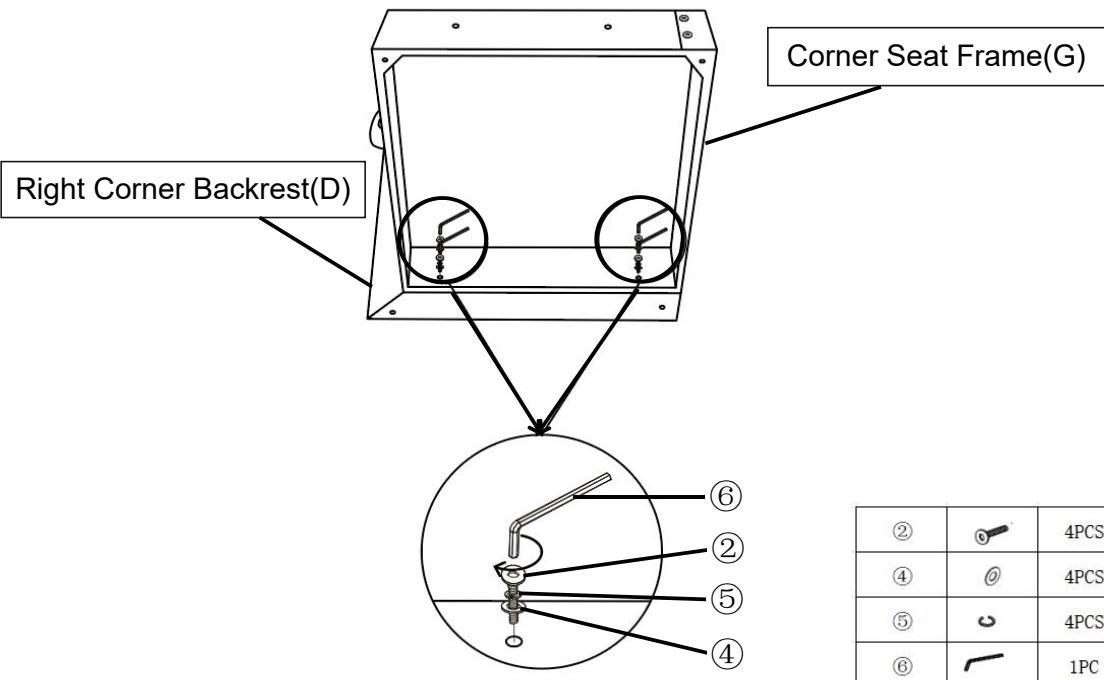


Attach the Right Corner Backrest(D) to the Corner Seat Frame(G), using Bolt(M8*40MM)(②) ,Spring Washer(⑤),Flat Washer(④),with Allen Wrench(⑥),turning clockwise until tight.

Step 2

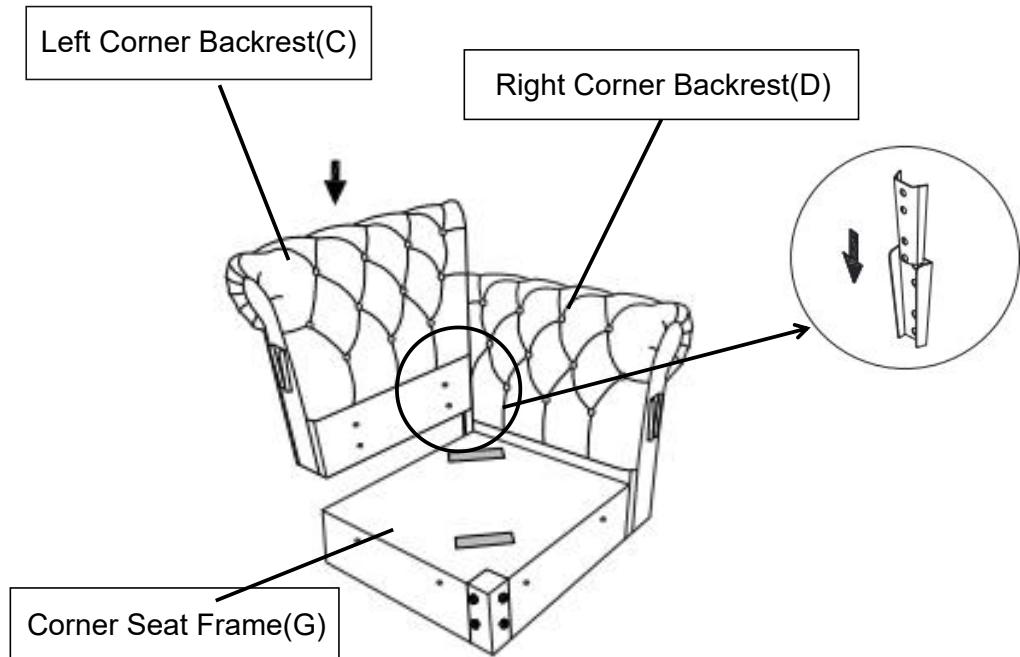

Slide the tapered connector on the Left Corner Backrest(C) into the tapered connector on the Right Corner Backrest(D) as shown in the picture above.


Step 3

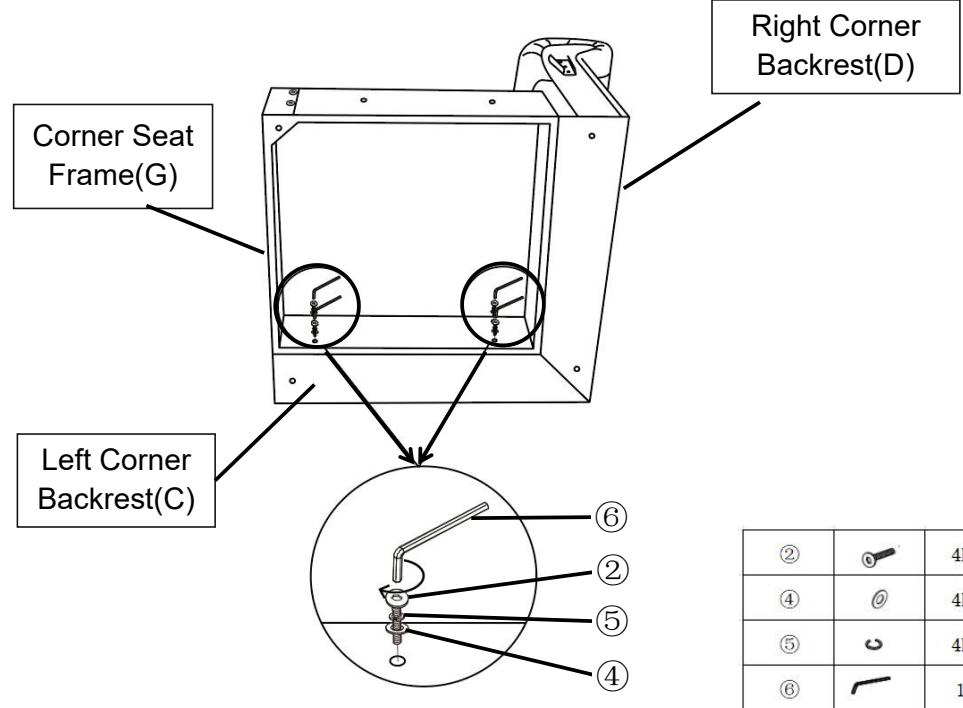

Position the sofa bottom up on a flat surface as shown.


Attach the Left Corner Backrest(C) to the Corner Seat Frame(G) using Bolt(M8*40MM)(②),Spring Washer(⑤),Flat Washer(④),with Allen Wrench(⑥),turning clockwise until tight.

Step 4

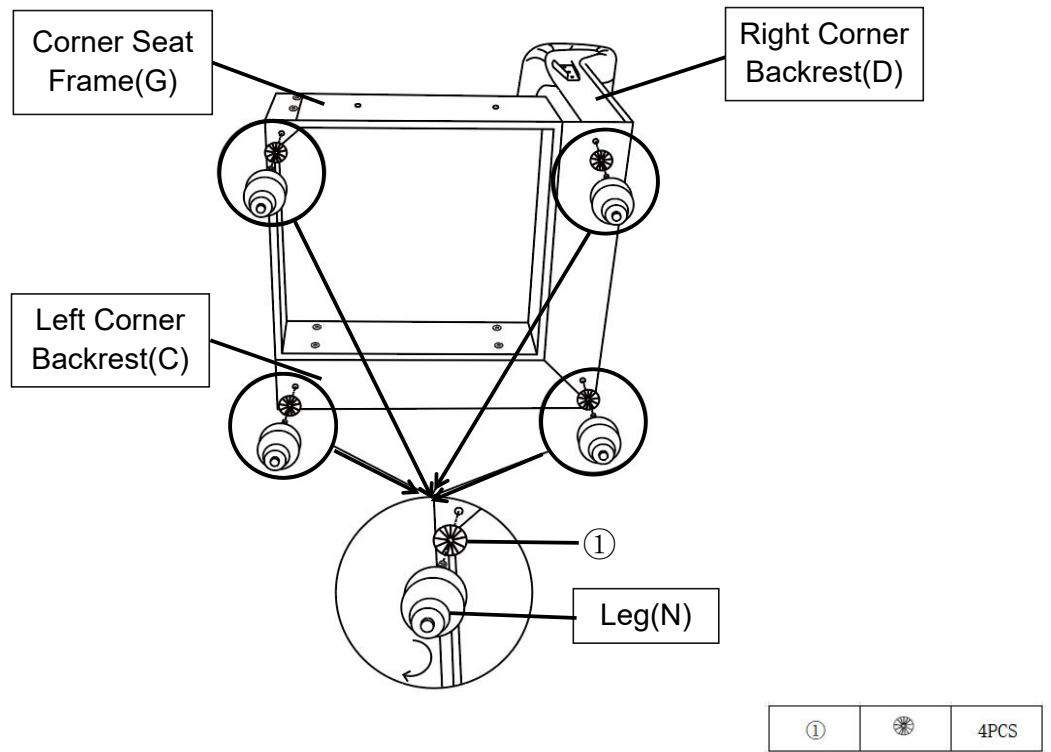

Install the Leg(N) at the bottom of sofa by placing Plastic Washer(①) on the threaded stem as shown above.


Step 5

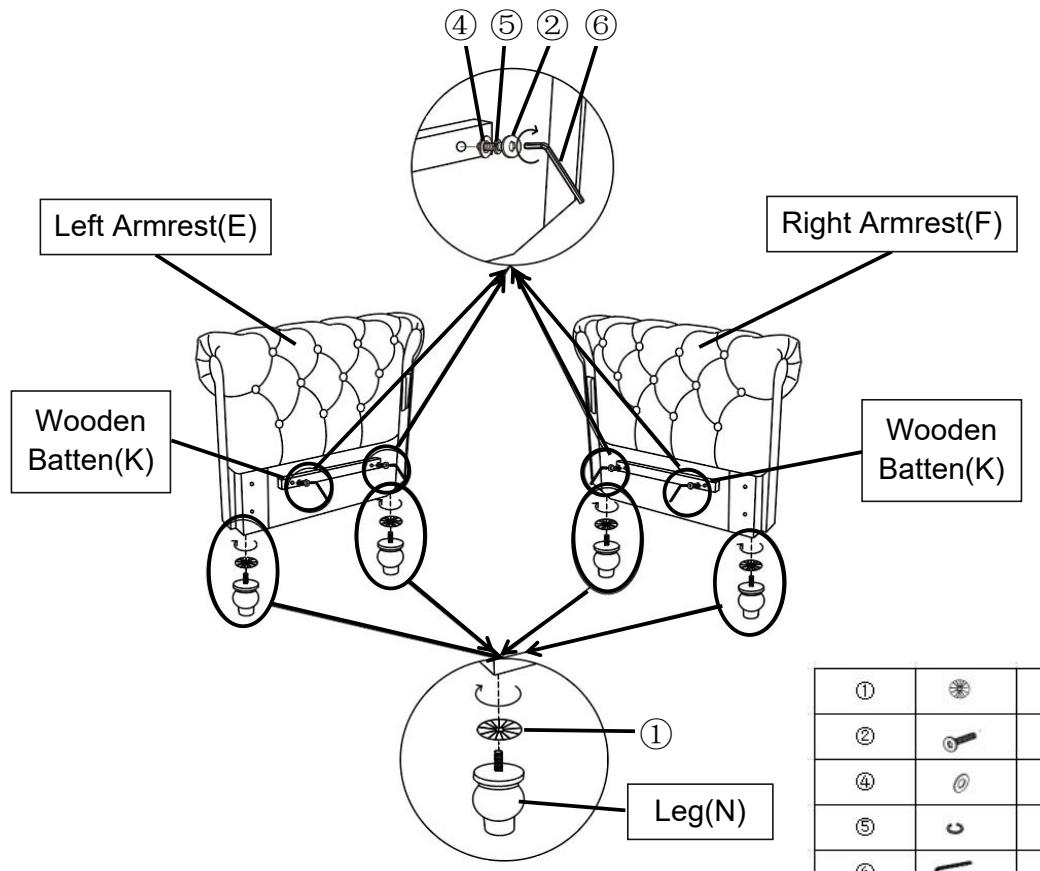

Install the Wooden Batten(K) to the Left Armrest(E) and Right Armrest(F) by using Bolt(M8*40MM)(②), Spring Washer(⑤), Flat Washer(④), with Allen Wrench(⑥) as shown above, turning clockwise until tightened.

Install the Leg(N) at the bottom of the armrests by placing Plastic Washer(①) on the threaded stem, turning clockwise until tightened.


Step 6

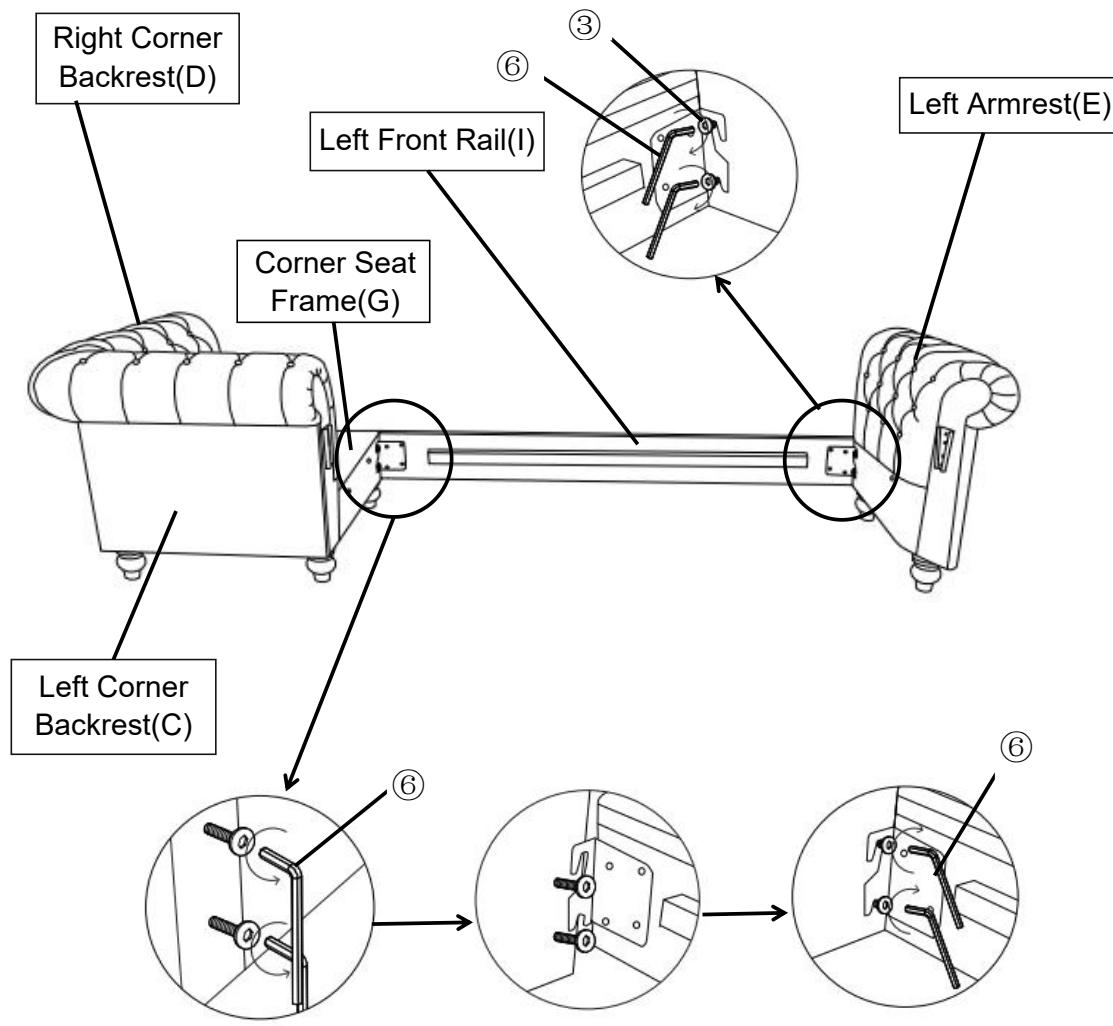

| | | |
|-----|---|------|
| (3) | ⑥ | 2PCS |
| (6) | ⑥ | 1PC |


- 6.1 Loosen the bolts in Corner Seat Frame(G) around half inch by Allen Wrench(⑥).
- 6.2 With the assistance of your partner, slide the hook in the end of Left Front Rail(I) into the bolts on Corner Seat Frame(G).
- 6.3 Align the mounting positions on the hook and Left Armrest(E), attach them with 2 pcs Bolt(M8*25MM)(③) with Allen Wrench(⑥) as shown.
- 6.4 After ensuring the hooks on both ends of Left Front Rail(I) are securely fastened with Corner Seat Frame(G) and Left Armrest(E), tighten all bolts with Allen Wrench(⑥) as picture shown.

Step 7

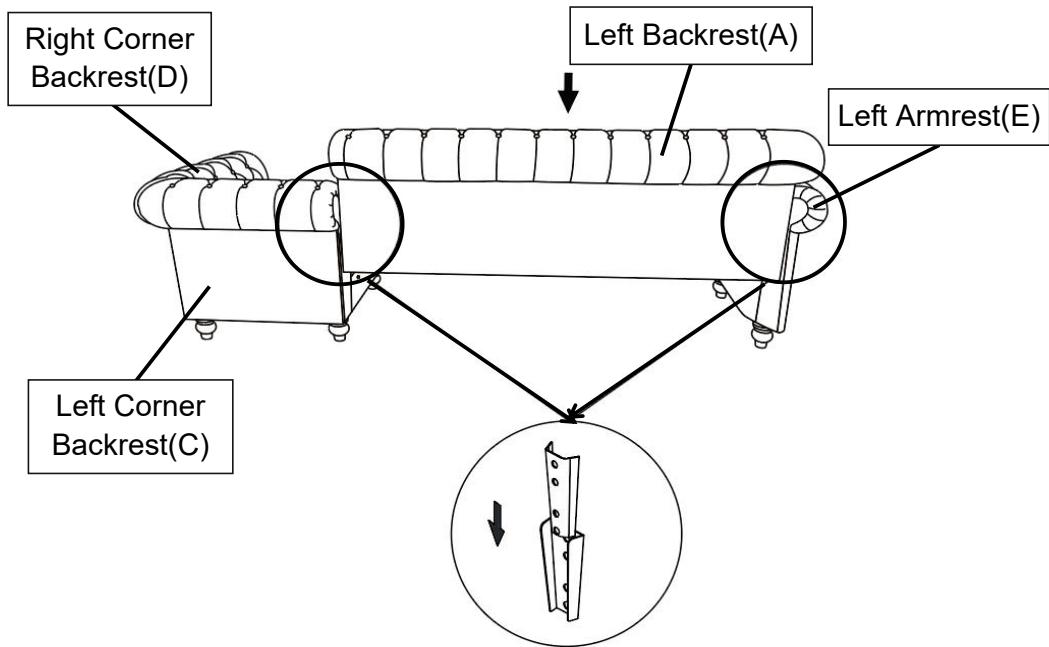


Slide the Tapered Connectors on the Left Backrest(A) into the Tapered Connectors on the Left Corner Backrest(C) and Left Armrest(E) as shown in the picture.

Step 8

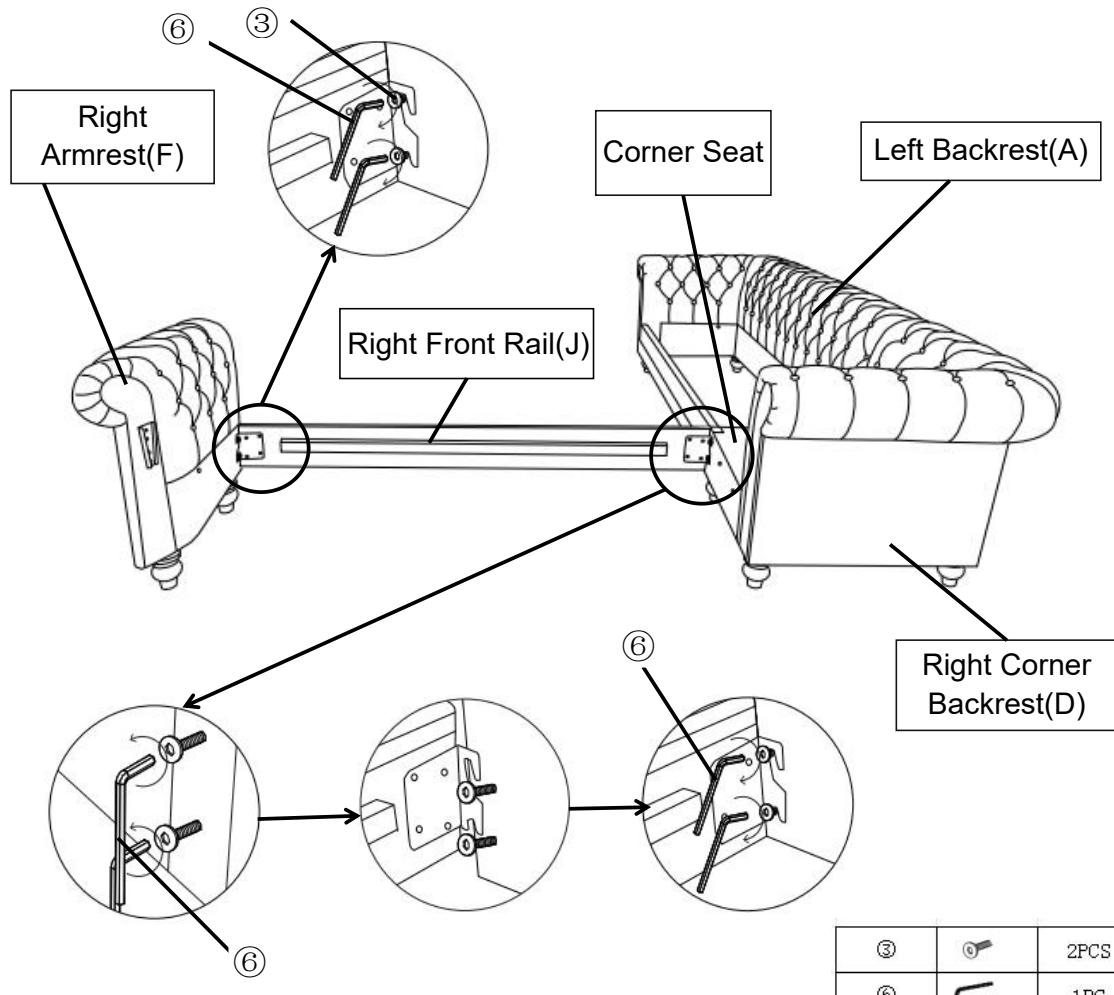


7.1 Loosen the bolts in Corner Seat Frame(G) around half inch by Allen Wrench(⑥).
 7.2 With the assistance of your partner, slide the hook in the end of Right Front Rail(J) into the bolts on Corner Seat Frame(G).
 7.3 Align the mounting positions on the hook and Right Armrest(F), attach them with 2 pcs Bolt(M8*25MM)(③) with Allen Wrench(⑥) as shown.
 7.4 After ensuring the hooks on both ends of Right Front Rail(J) are securely fastened with Corner Seat Frame(G) and Right Armrest(F), tighten all bolts with Allen Wrench(⑥) as picture shown.

Step 9

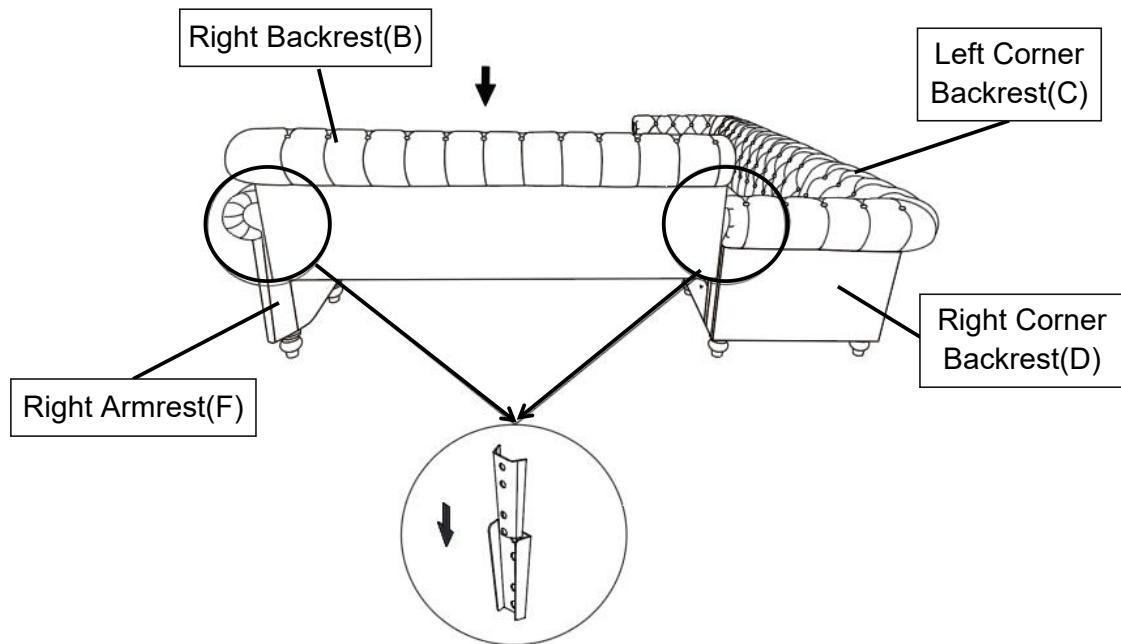


Slide the Tapered Connectors on the Left Backrest(B) into the Tapered Connectors on the Right Corner Backrest(D) and Right Armrest(F) as shown in the picture.

Step 10

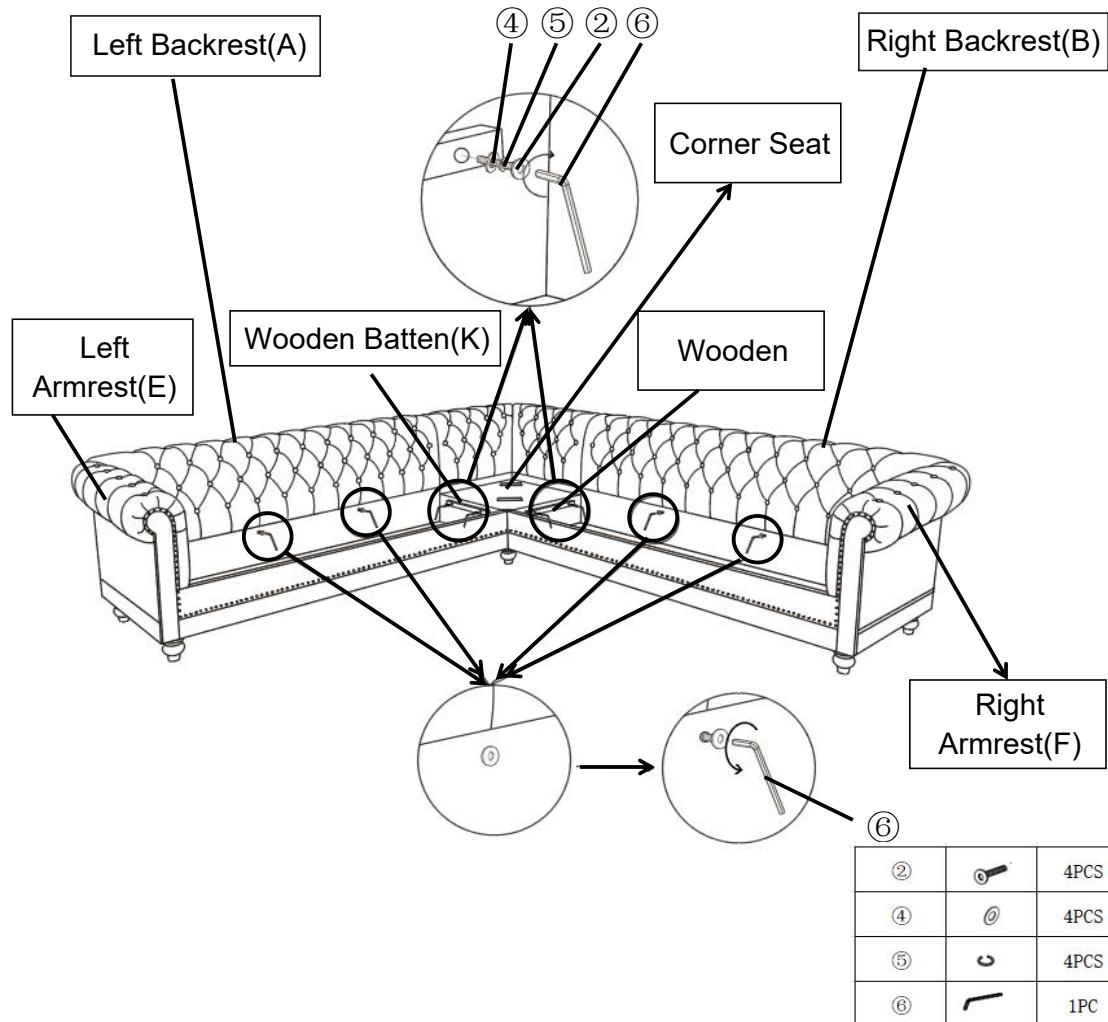


Install 2 pcs Wooden Batten(K) to the Corner Seat Frame(G) by using Bolt(M8*40MM)(②), Spring Washer(⑤), Flat Washer(④), with Allen Wrench(⑥) as shown above, turning clockwise until tightened. Loosen the 2 bolts in Left Backrest(A) around half inch by Allen Wrench(⑥) as shown. Repeat the same step to loosen 2 bolts in Right Backrest(B).

Step 11

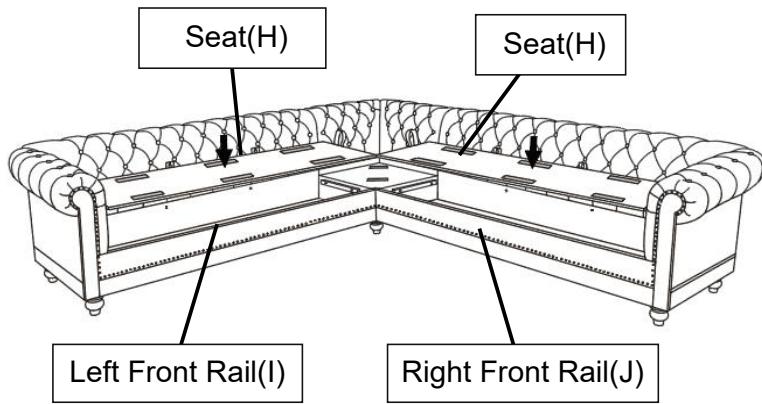


With the assistance of your partner, lift the rope on the two sides of the Seat(H) by hand. Place the seat (H) onto the Wooden Batten(K) of sofa, and then slowly place it down as shown above.

Step 12

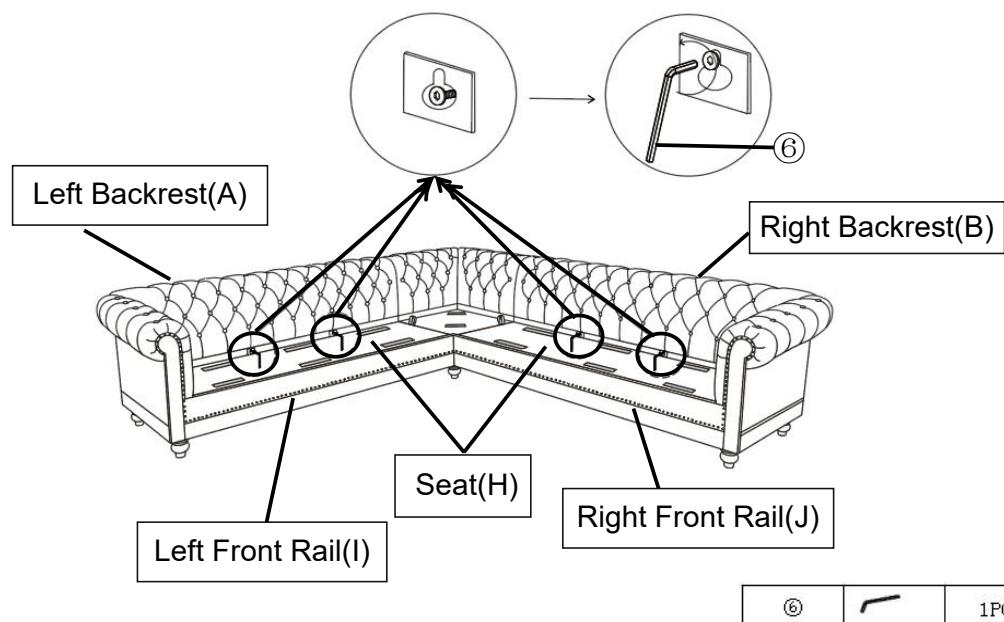


Hang the hook of the Seat(H) onto the bolts of Left Backrest(A) and Right Backrest(B). Tighten all bolts with Allen Wrench(⑥) as picture shown.

Step 13

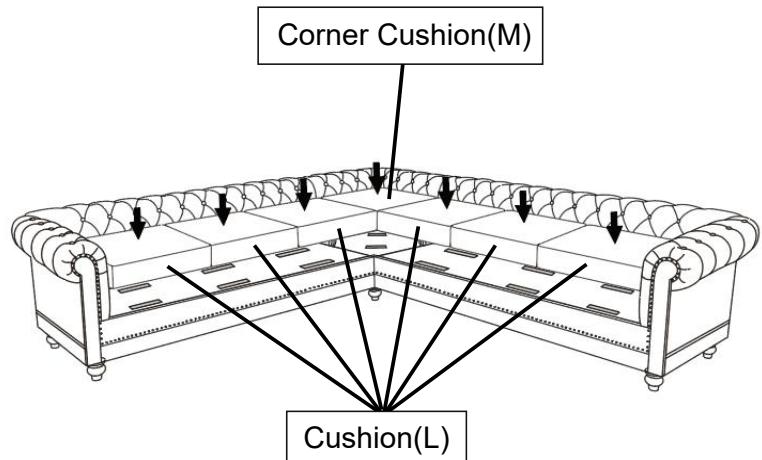

Place the Cushions(L) and Corner Cushion(M) on the Sofa.

Step 14

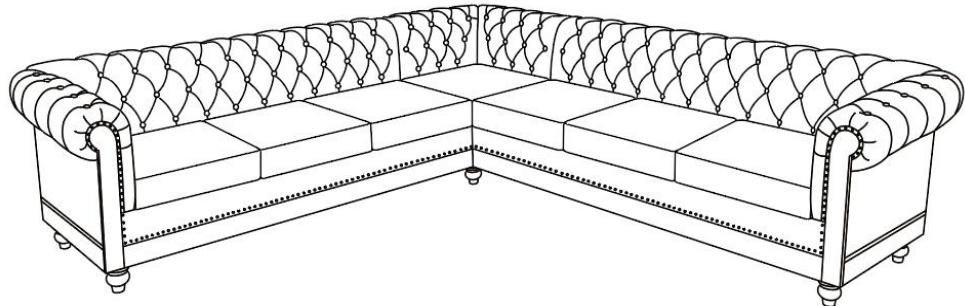

Your Sofa is ready for use.

This Sofa can only be used on a flat, level surface.