


S013-1

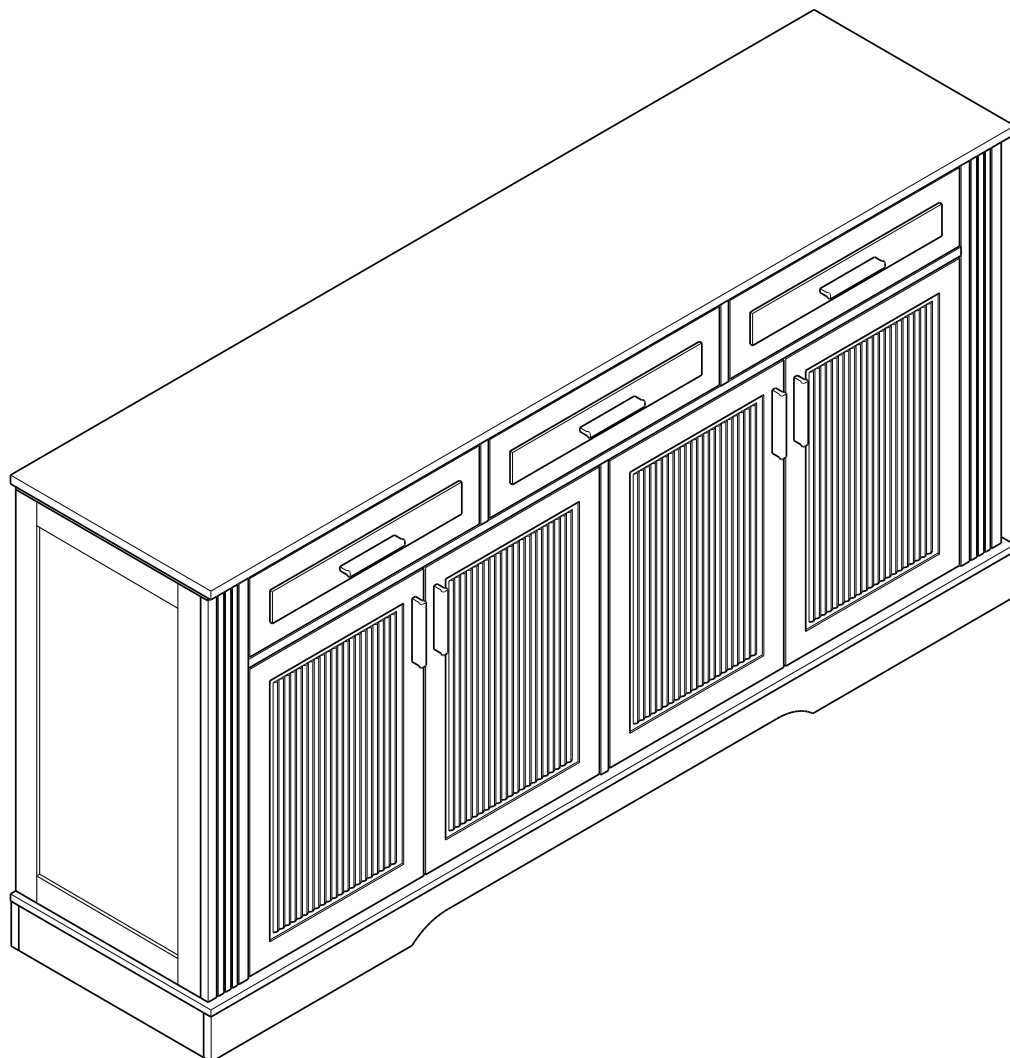

As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully.

Before You Start

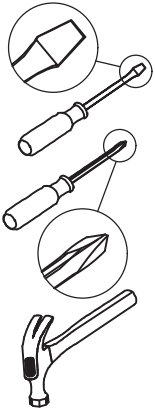

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. (Assembly speed can be increased by using electric screwdriver)


Helpful Hints

PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Never push, pull, or drag your furniture.


Board Identification

Not actual size

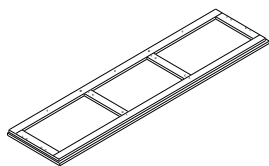


①

Qty:1

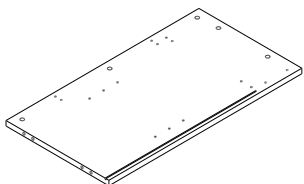


②

Qty:1

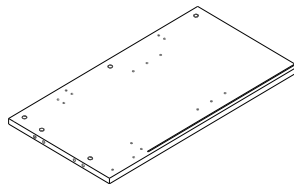


③

Qty:1

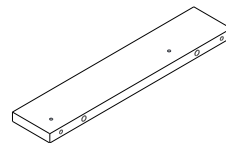


④

Qty:1

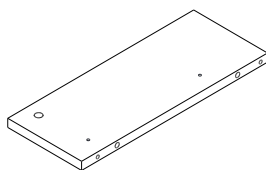


⑤

Qty:2

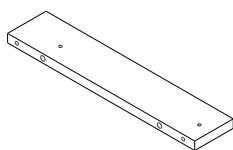


⑥

Qty:1

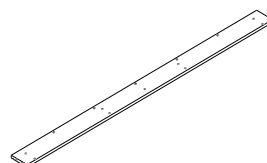


⑦

Qty:1

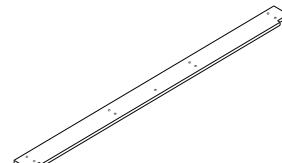


⑧

Qty:1

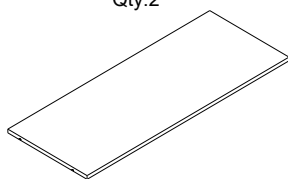


⑨

Qty:2

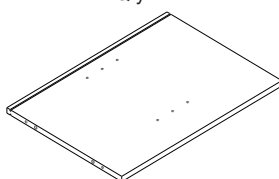


⑩

Qty:1

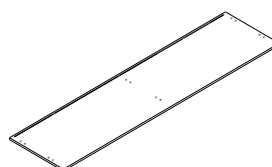


⑪

Qty:1

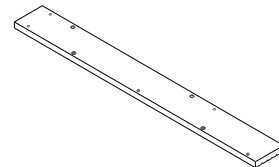


⑫

Qty:1

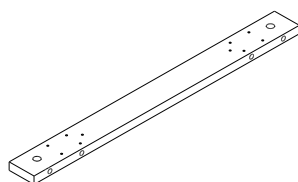


⑬

Qty:1

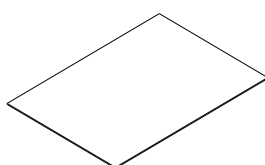


⑭

Qty:2

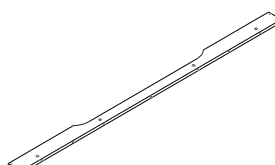


⑮

Qty:1

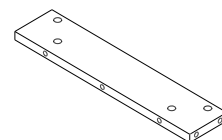


⑯

Qty:2




⑰

Qty:2




⑱

Qty:2

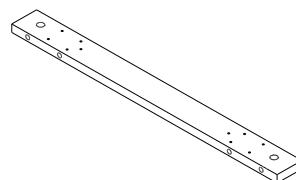

⑲

Qty:1

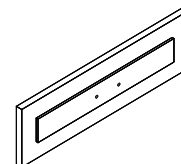


⑳

Qty:3


Board Identification

Not actual size

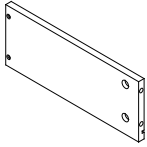


21

Qty:3

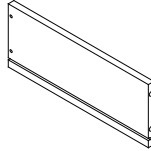


22

Qty:3

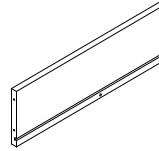


23

Qty:3




24

Qty:3

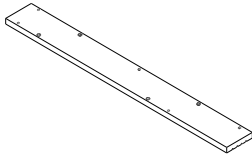


25

Qty:1

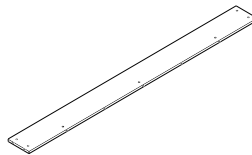


26

Qty:1

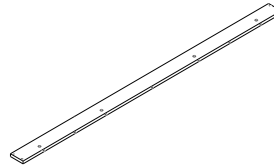


27

Qty:1

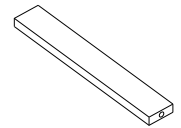


28

Qty:3

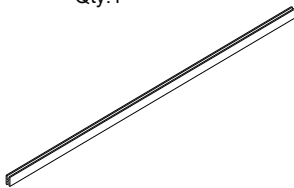

29


Qty:2

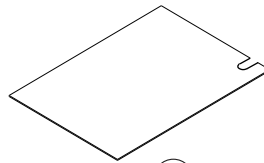





30

Qty:2

Board Identification

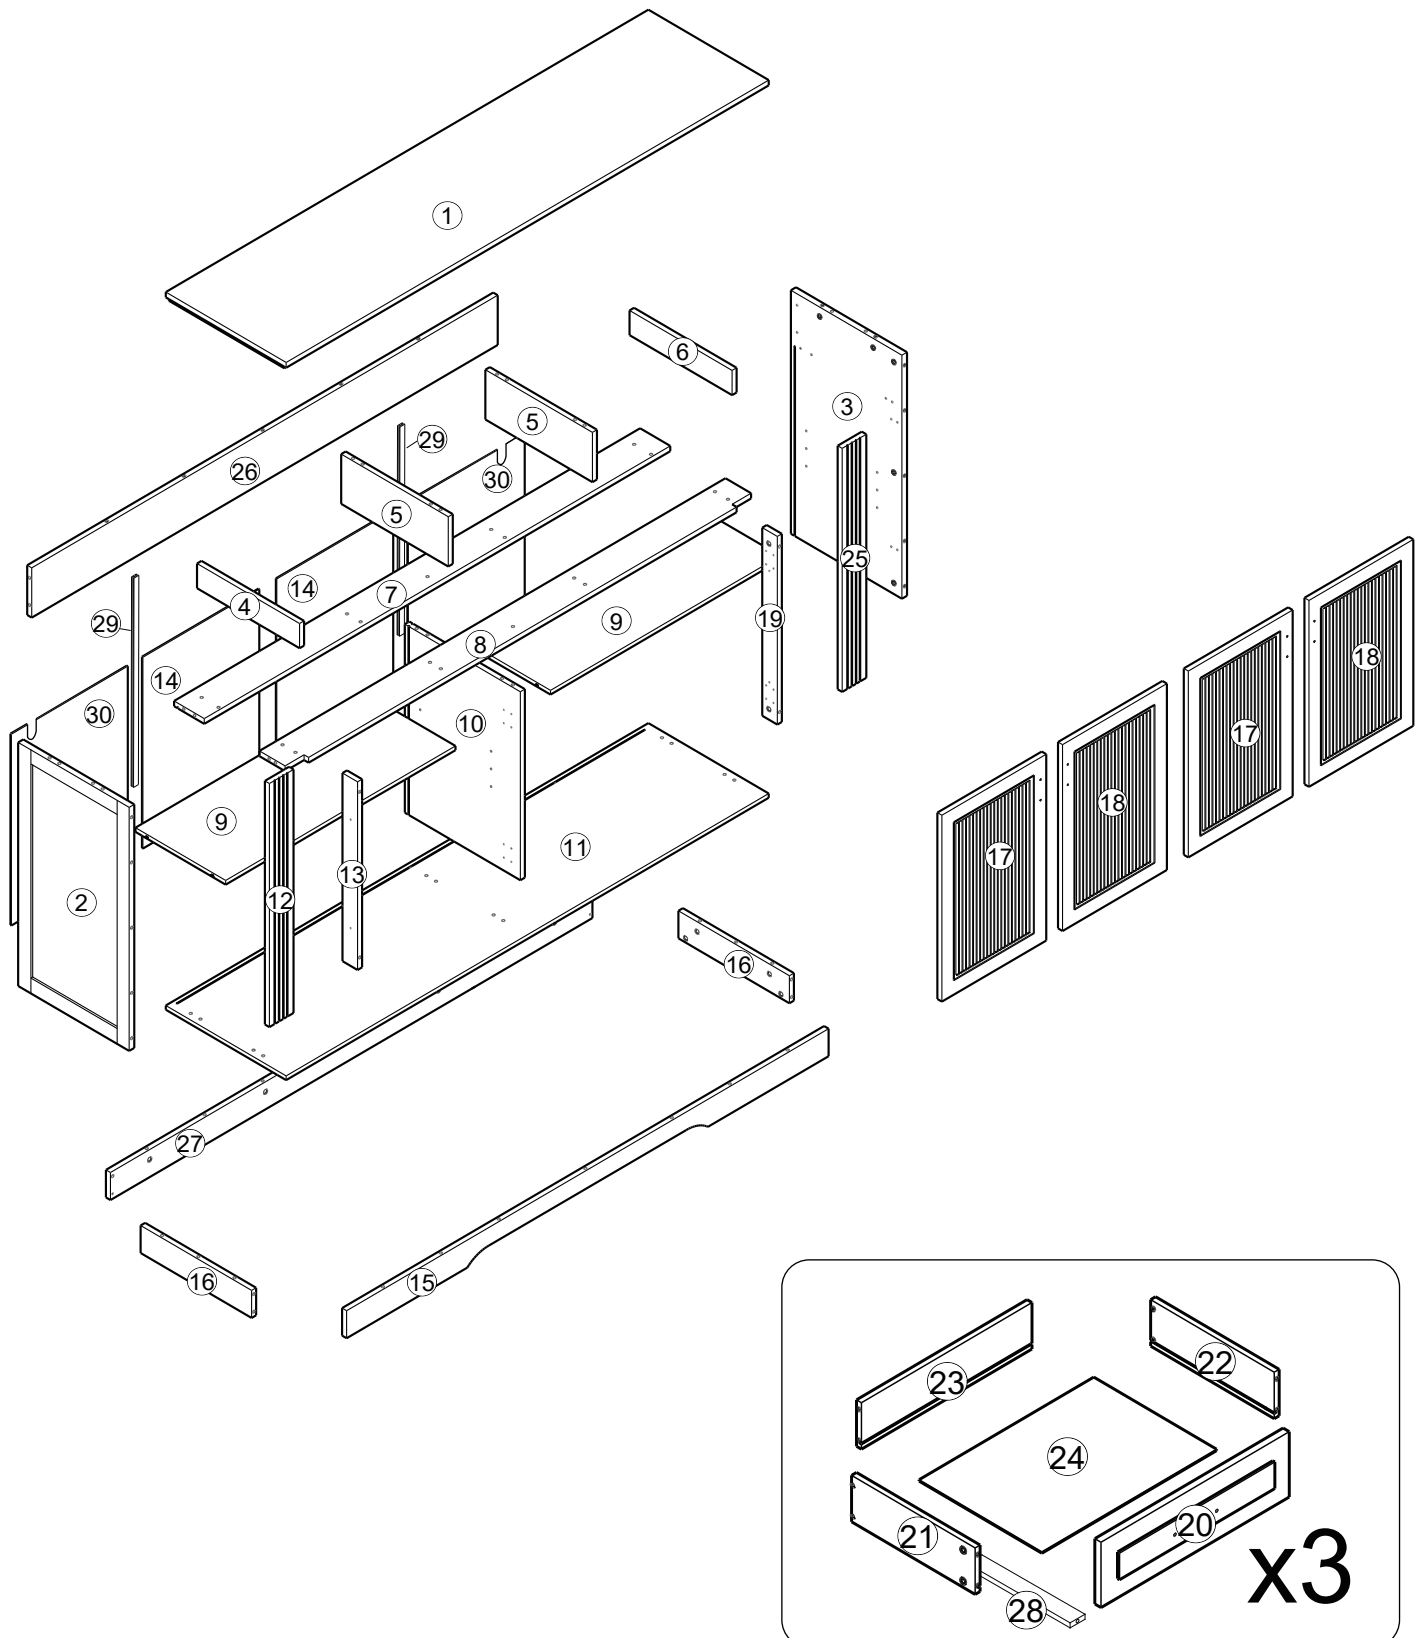


Part List





 A x51	 B x62	 Ø6x30mm C x50	 Ø3x10mm D x36	 Ø4x35mm E x36
 Ø3.5x12mm F x48	 G x8	 Ø4x18mm H x8	 I x7	 J x2
 K-1 Ø3.5x12mm K x8	 L x2	 M x8	 O x4	 P x6
 Q x11	 Ø4x22mm R x6			

Cam Lock Fastening System







Insert the cam bolt into the hole first, then insert the cam lock and lock it.

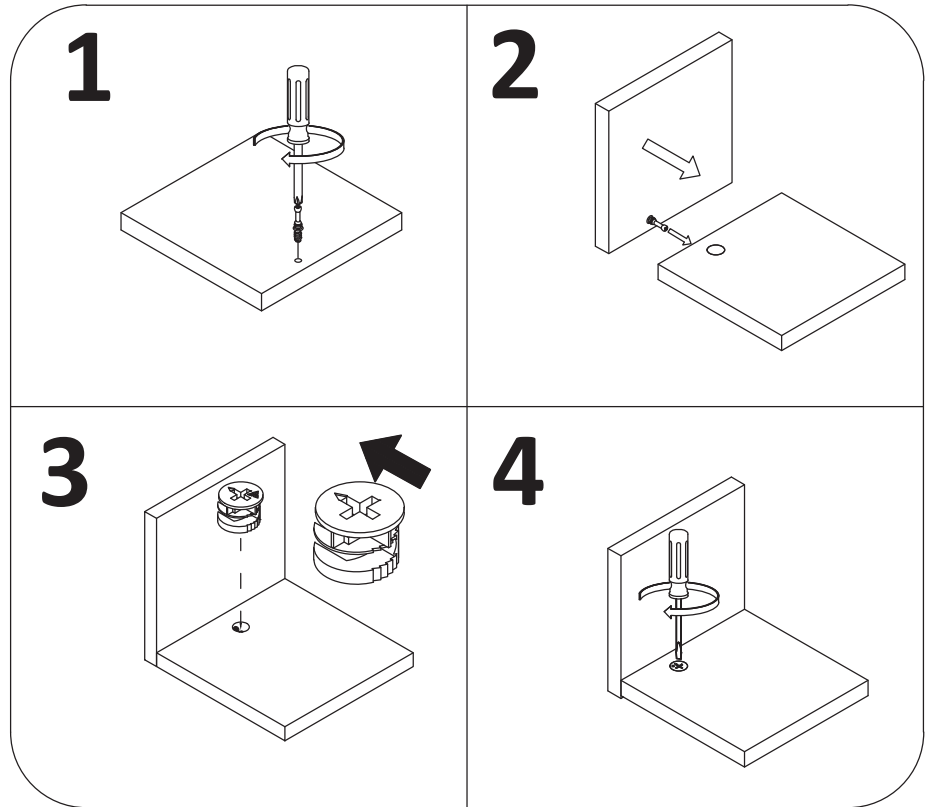





STEP 1

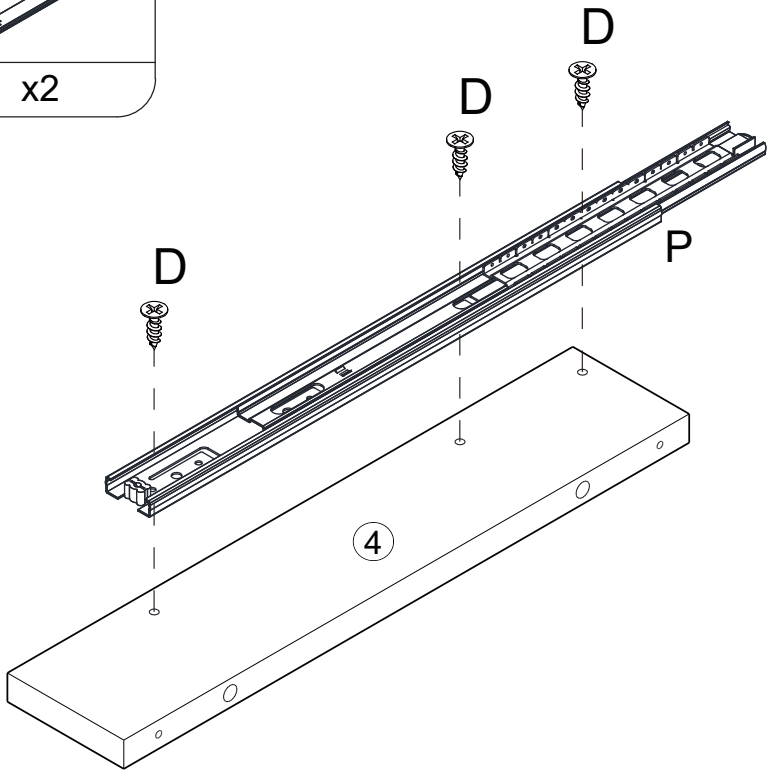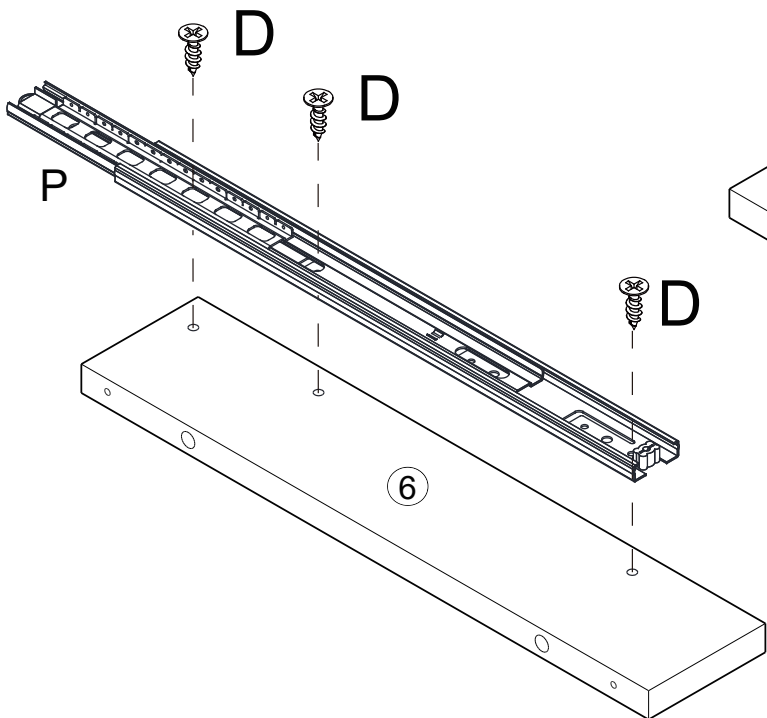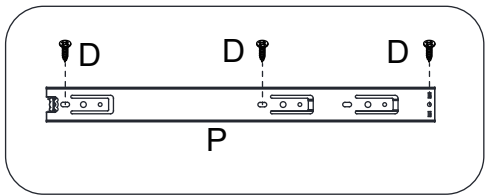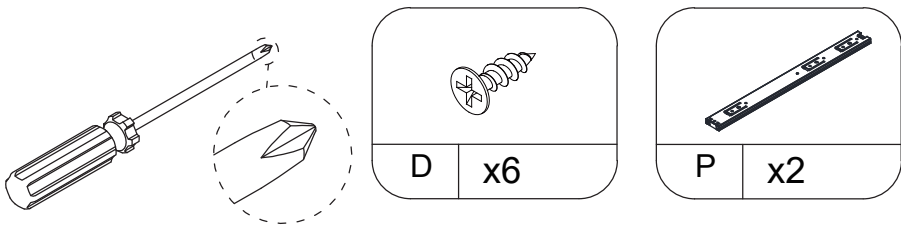





STEP 2

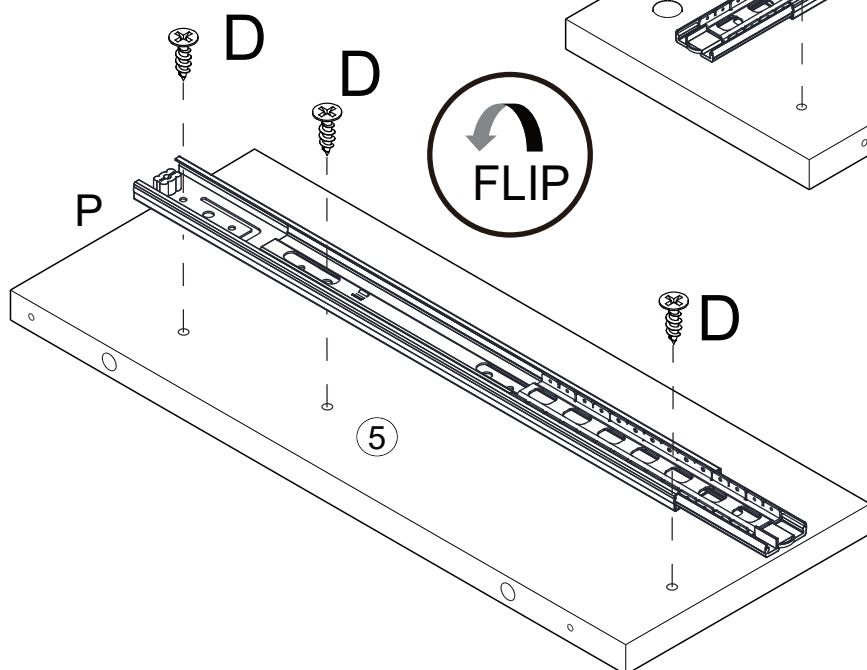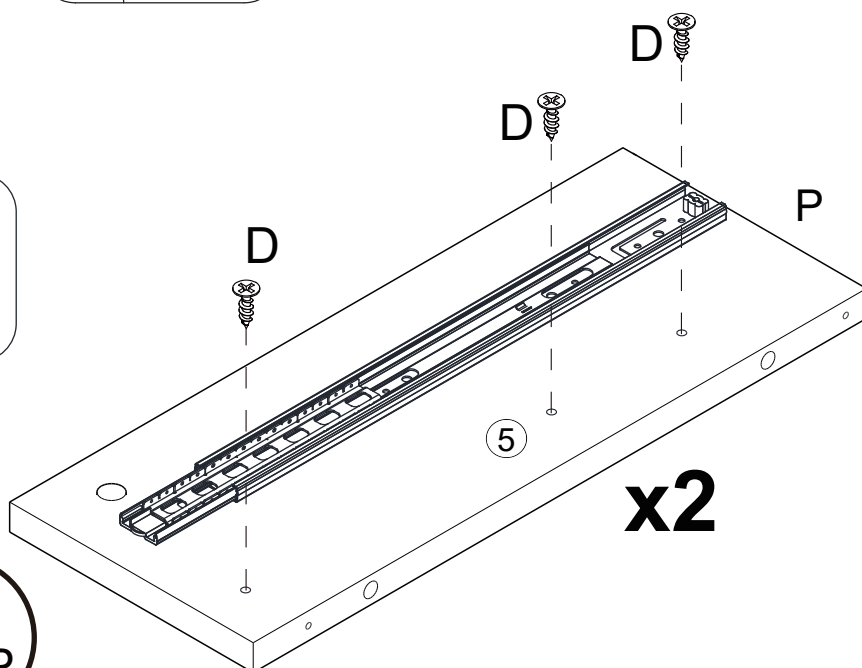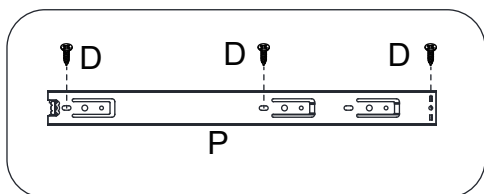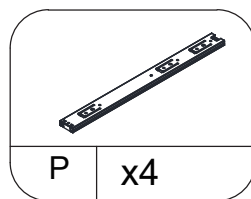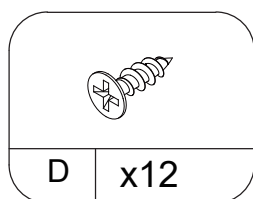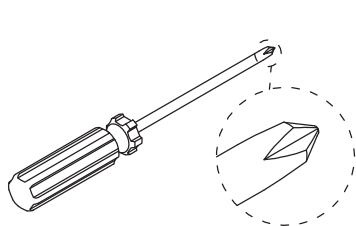


STEP 3

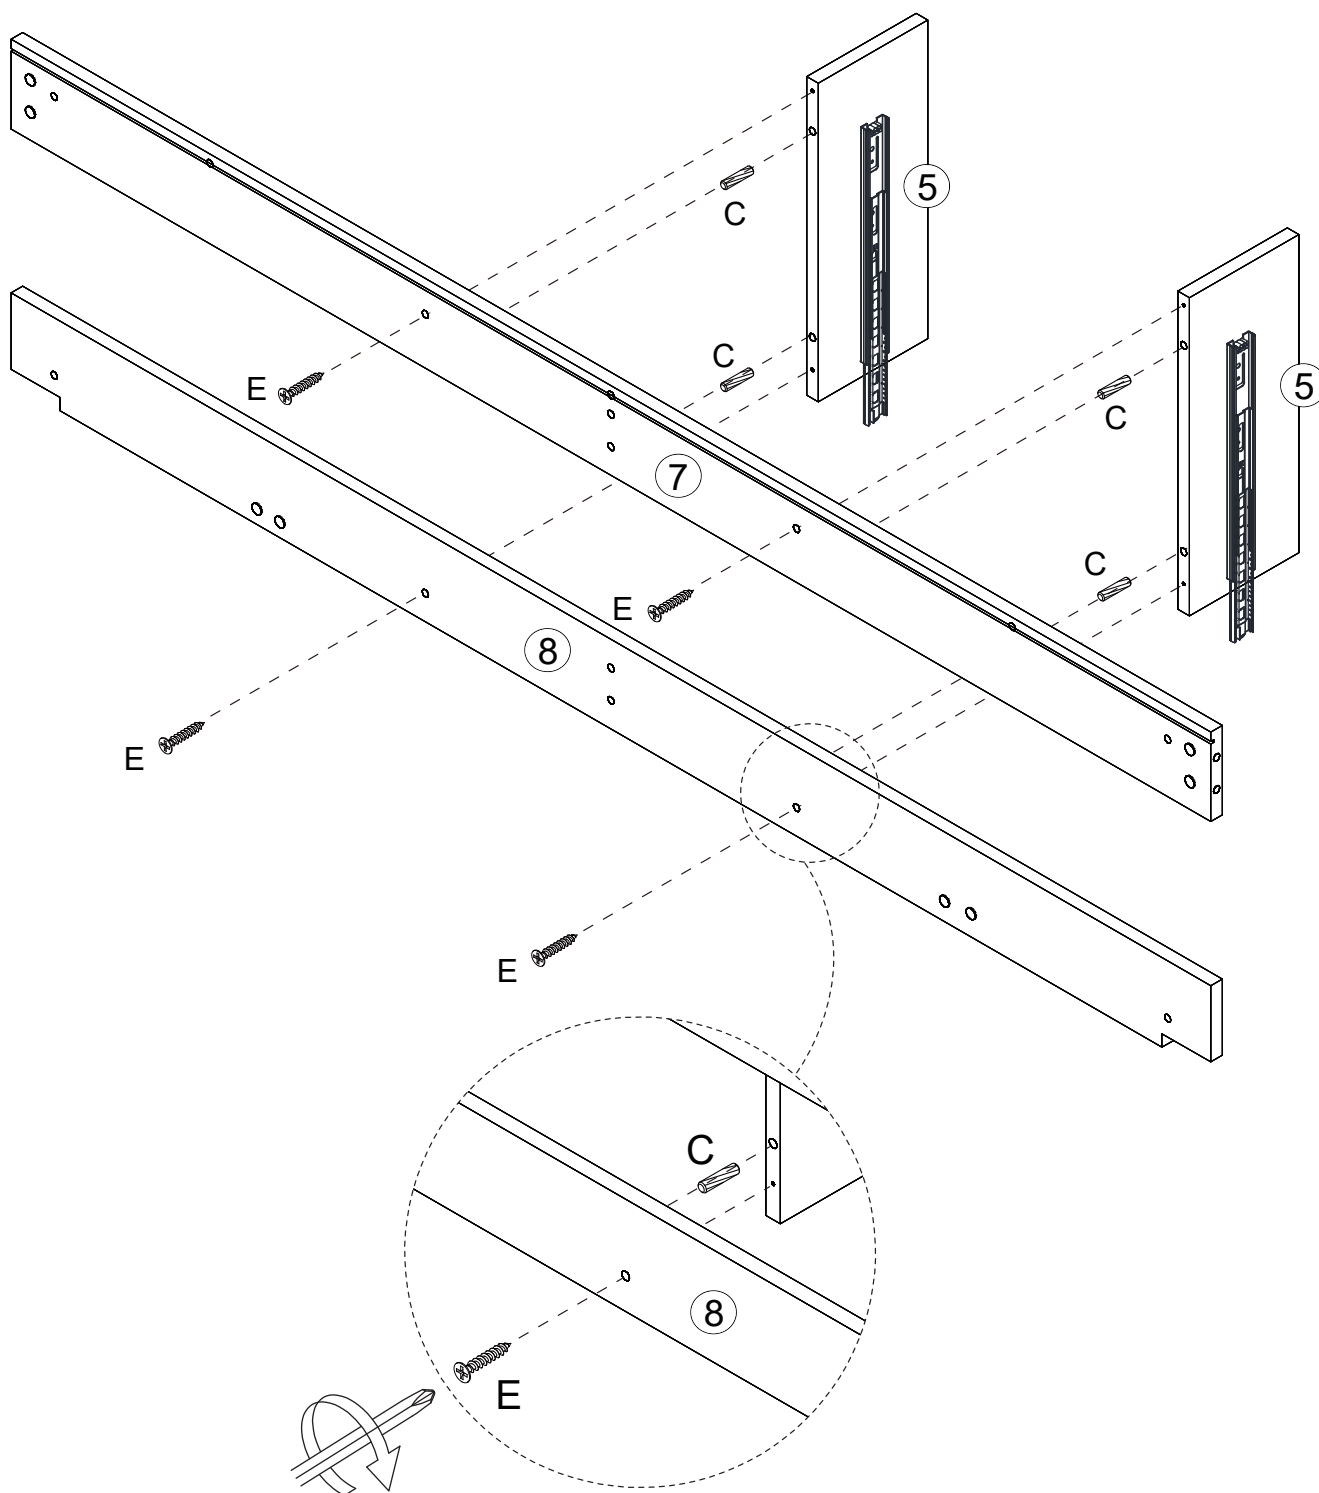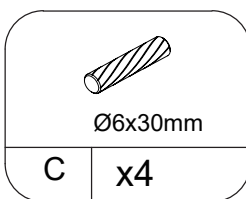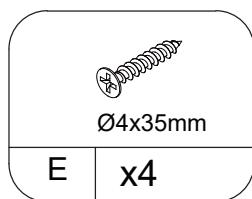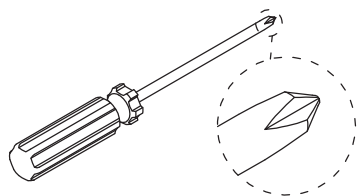





STEP 4

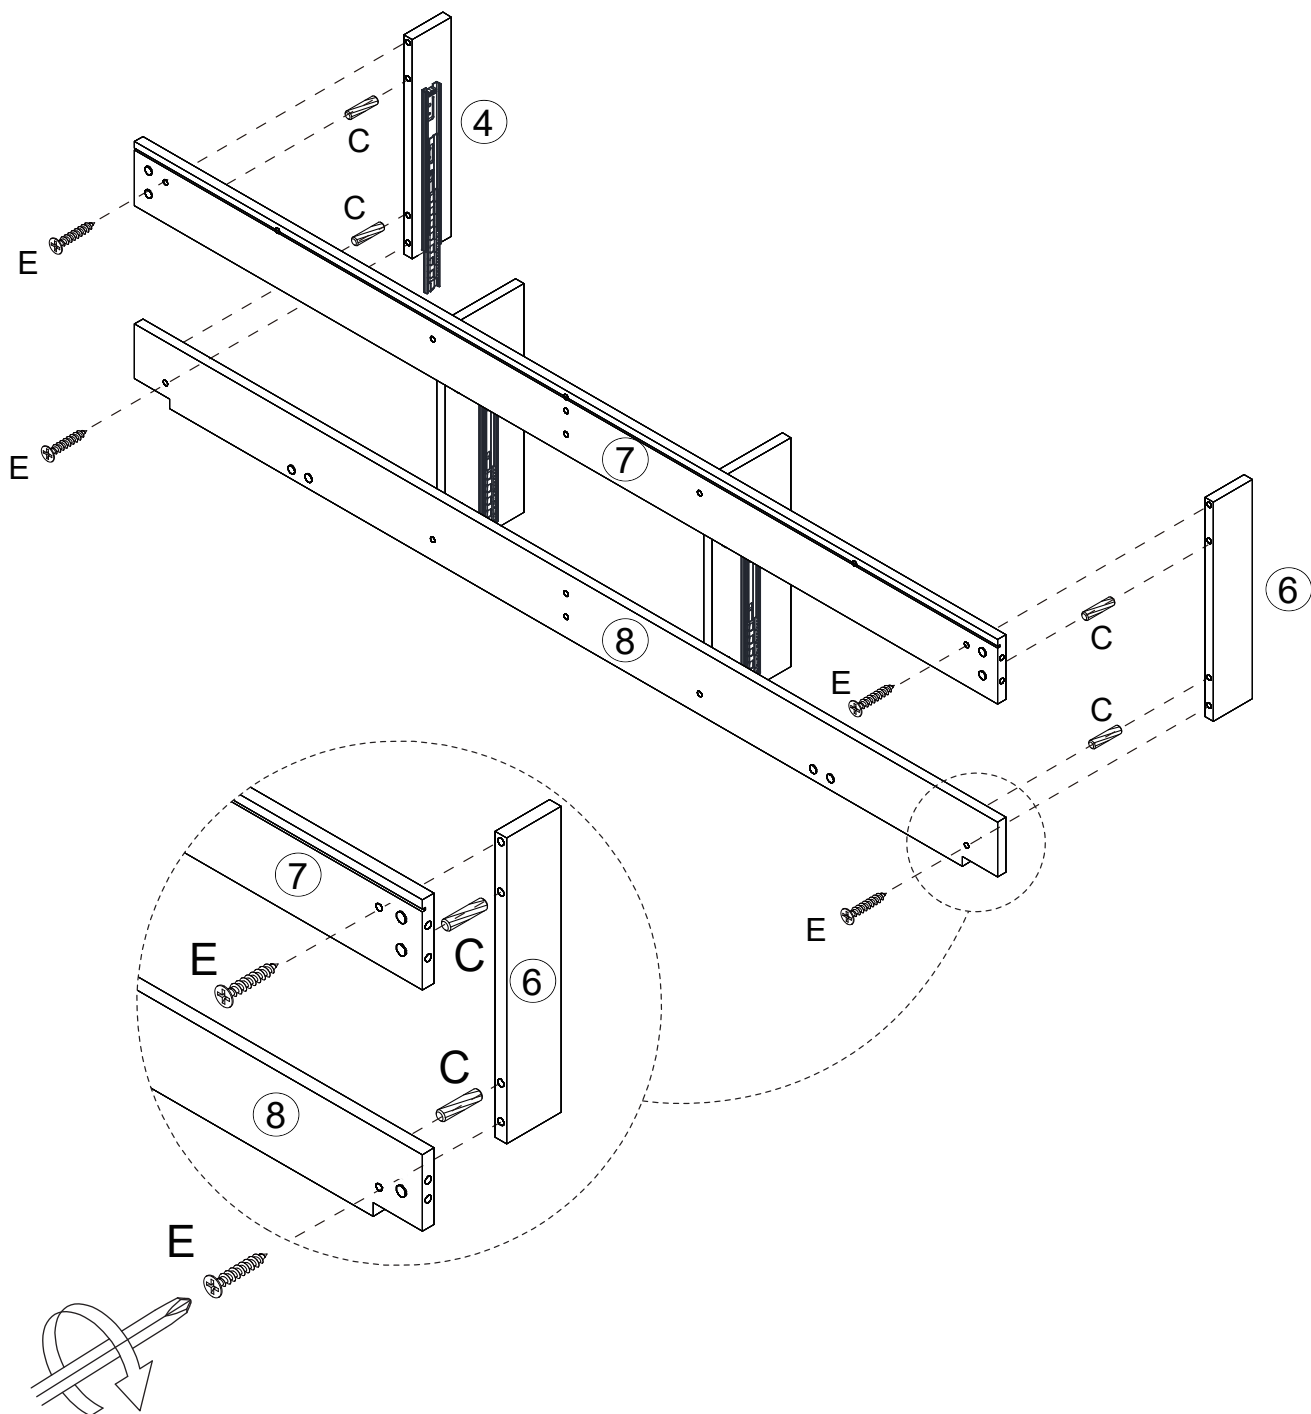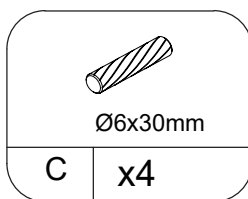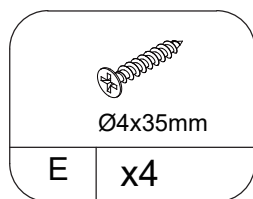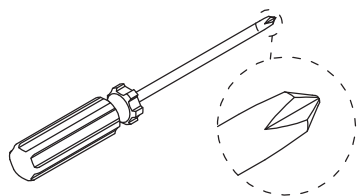




STEP 5

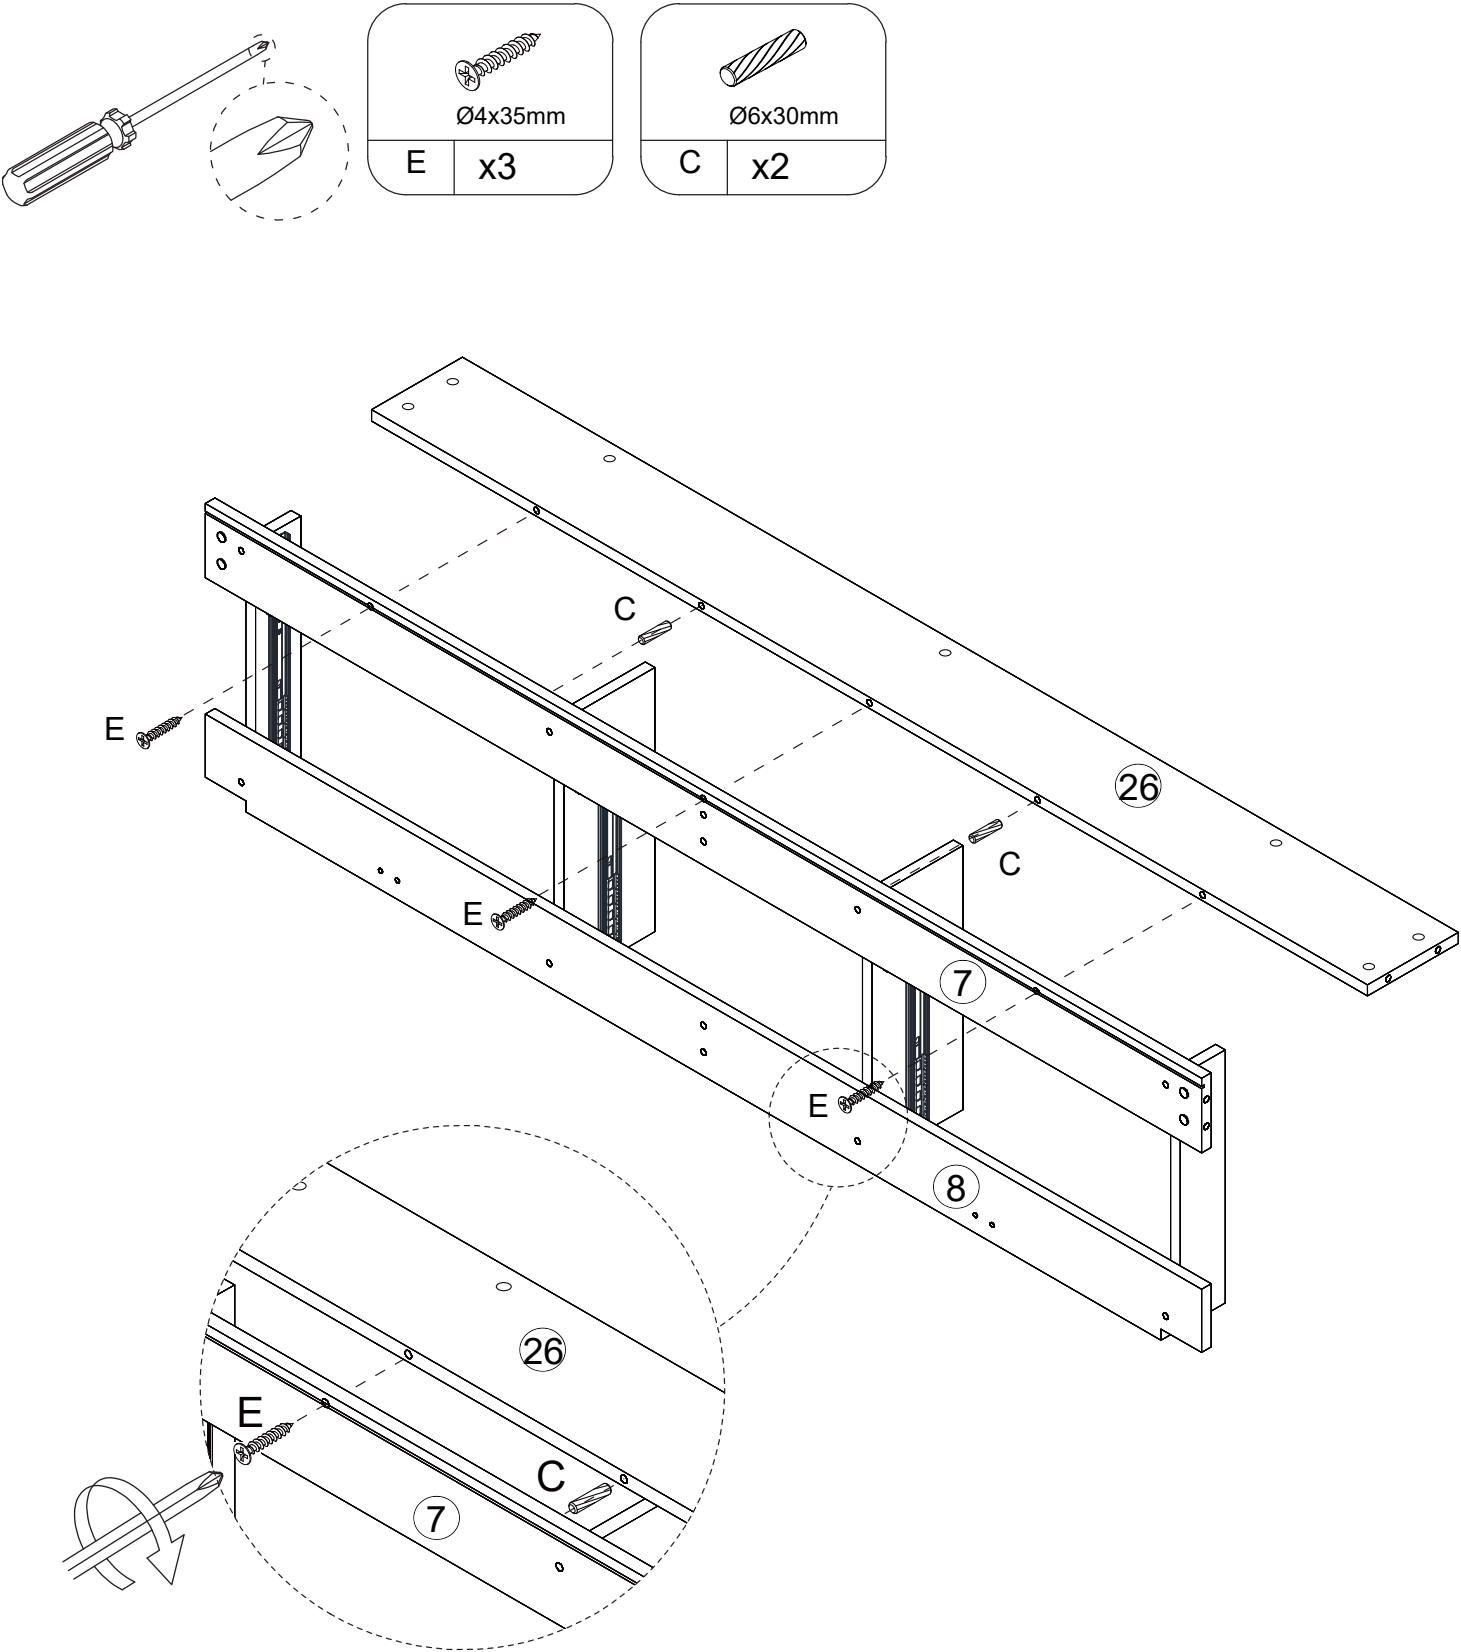





STEP 6

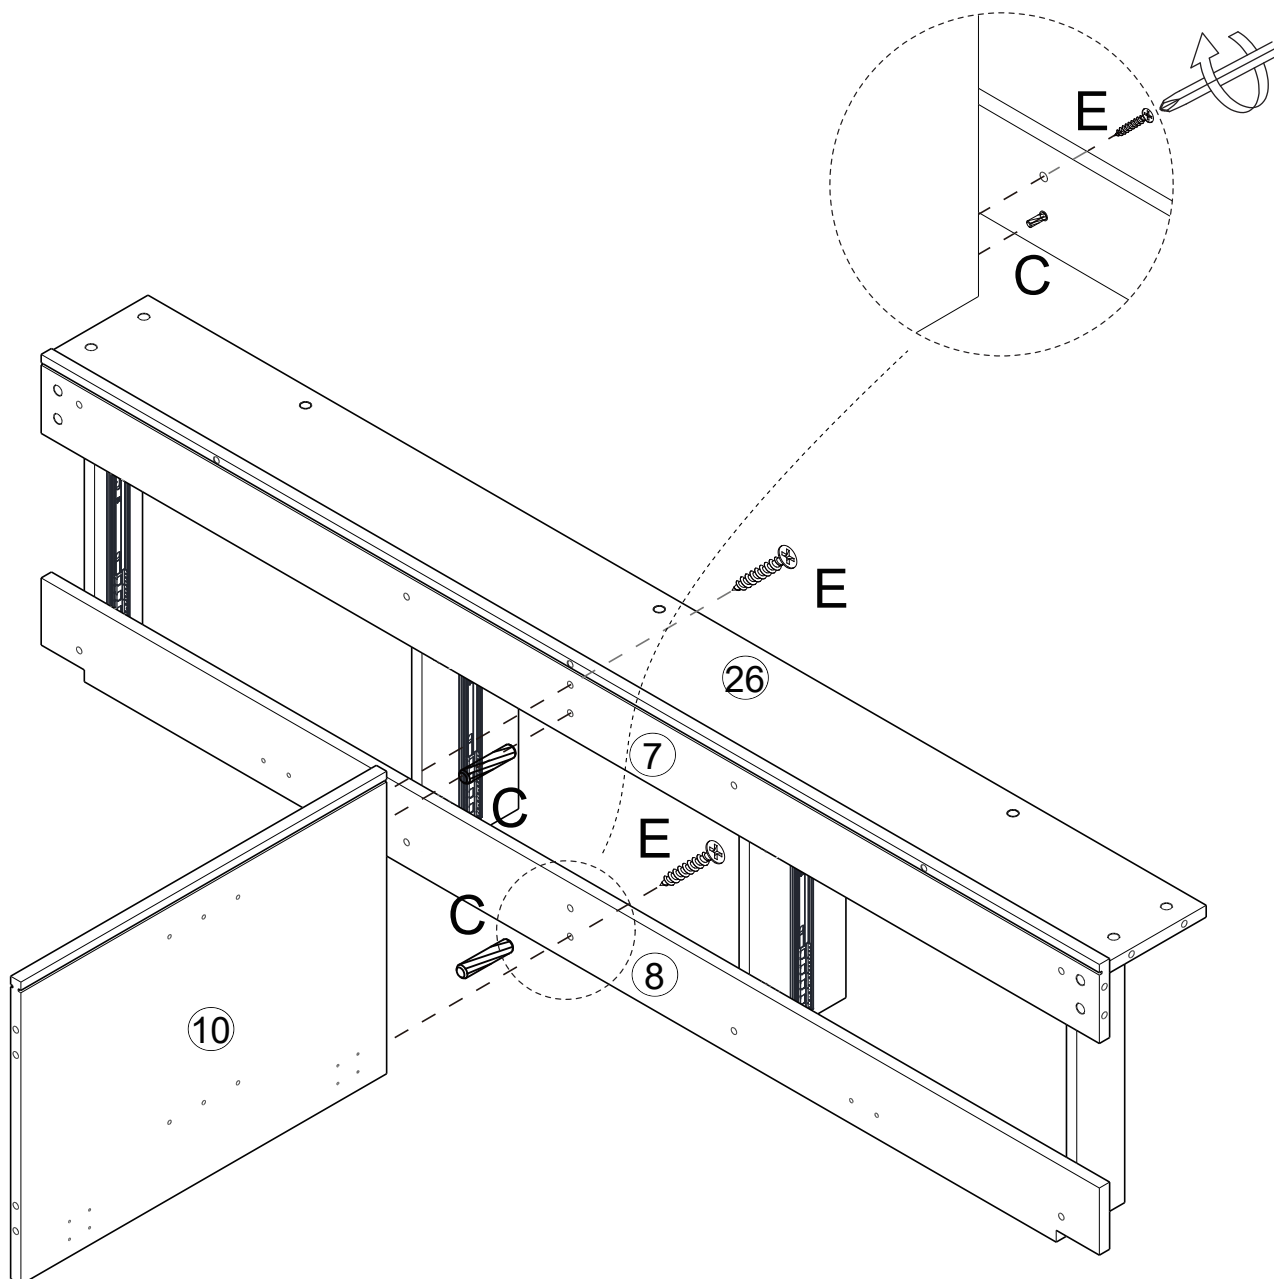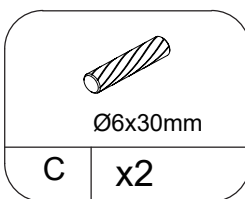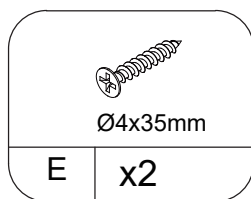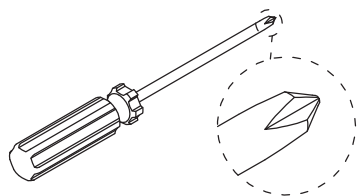







STEP 7

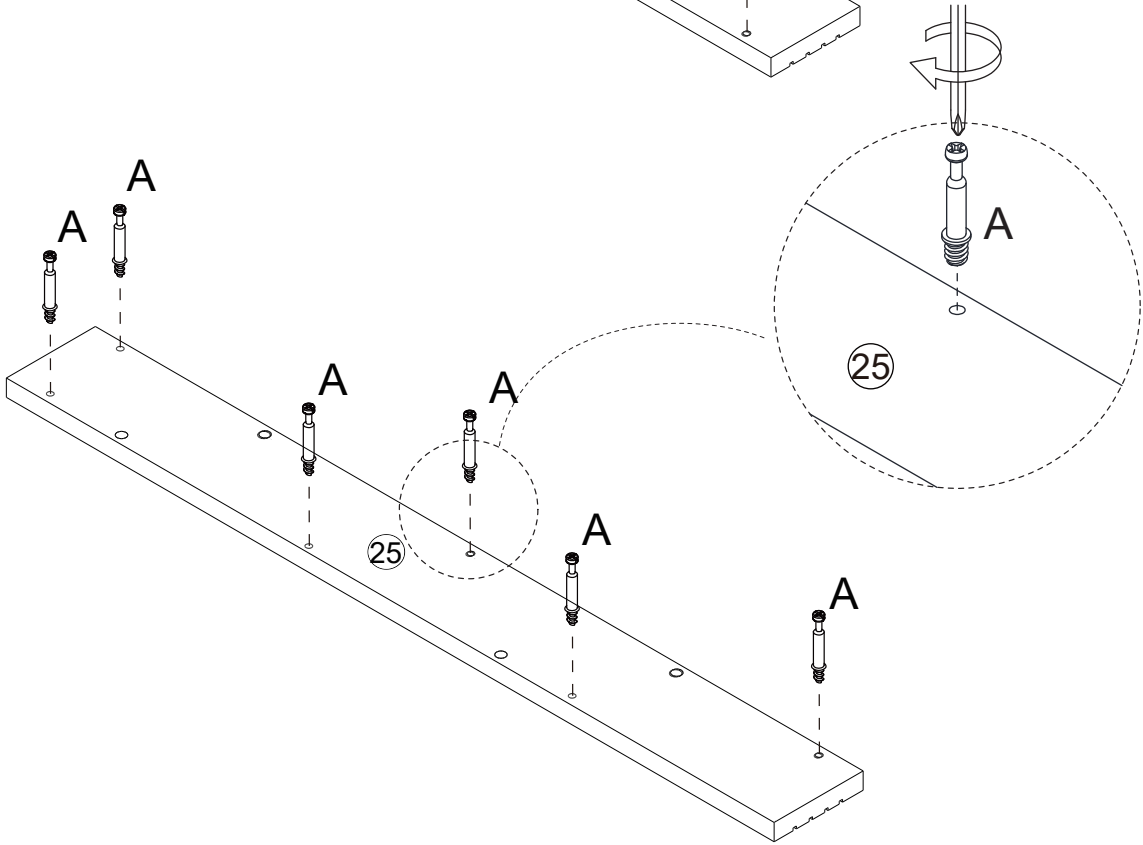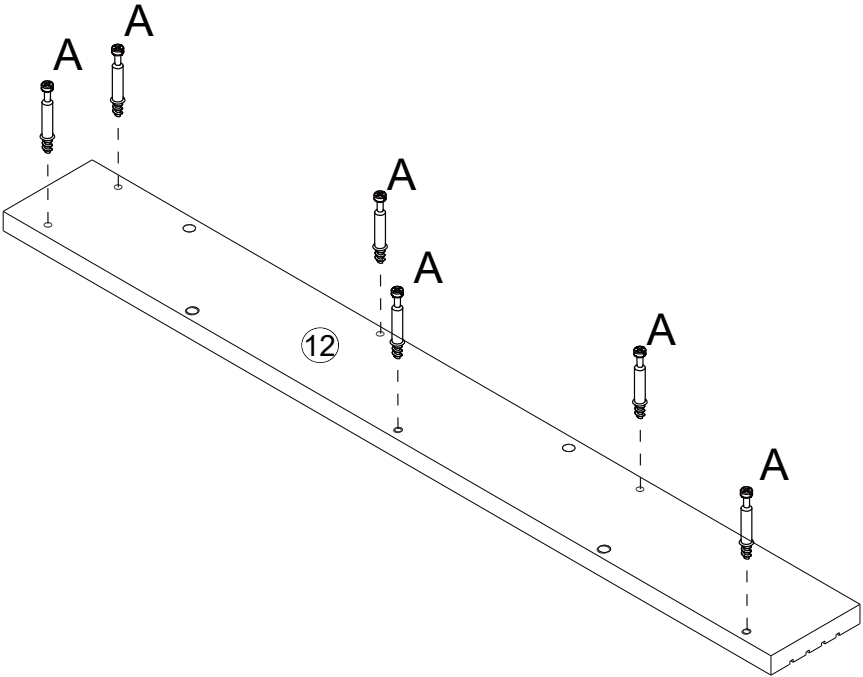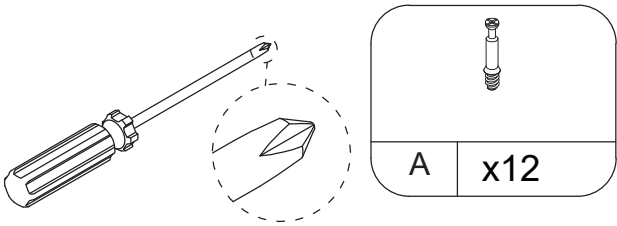


STEP 8

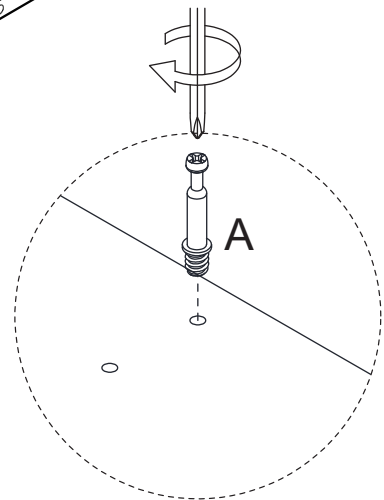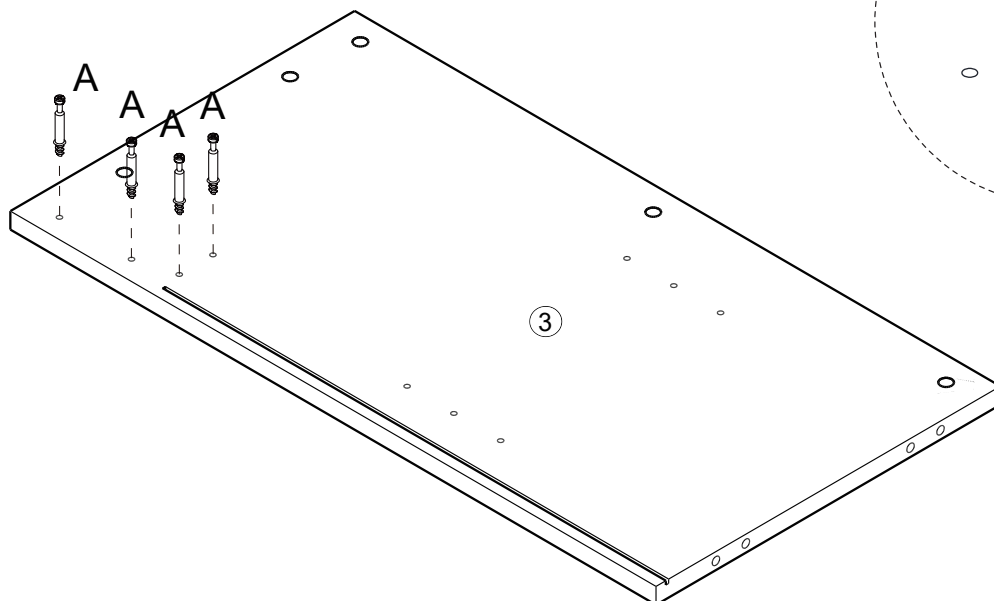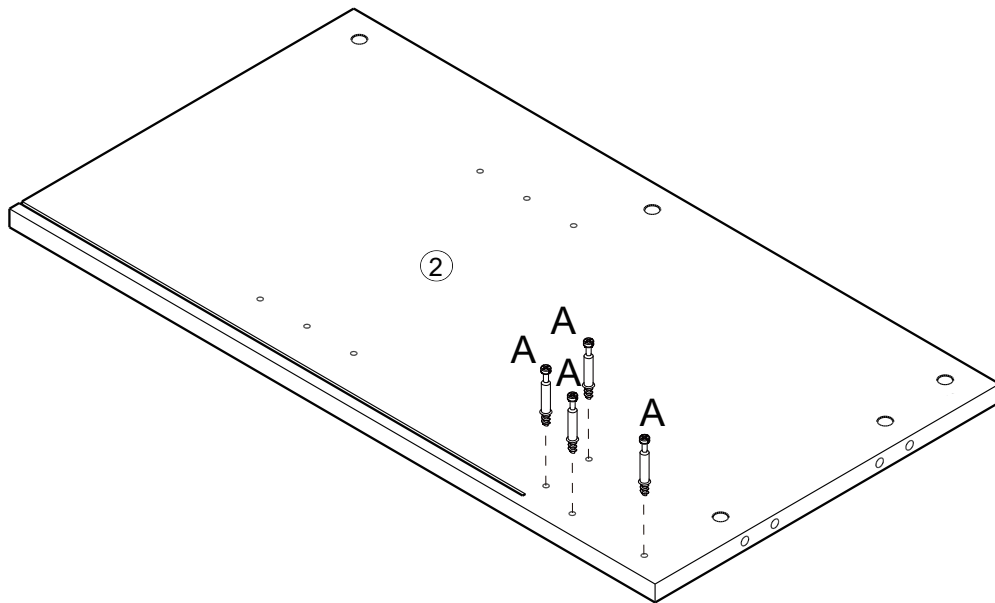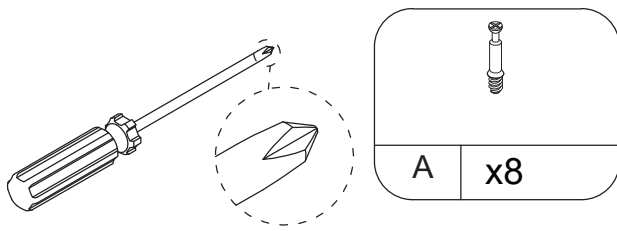




STEP 9

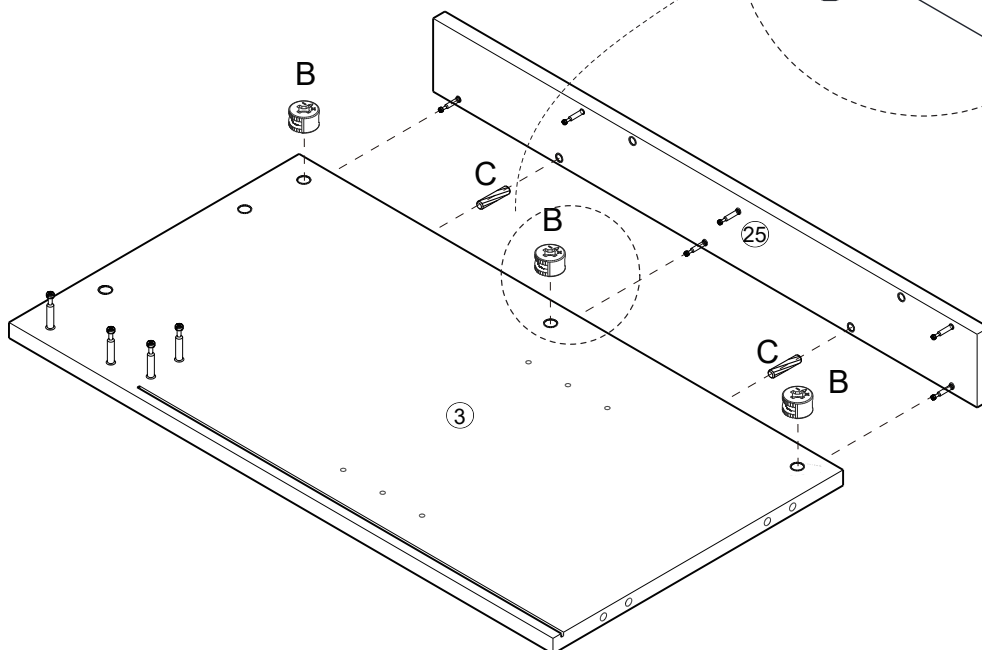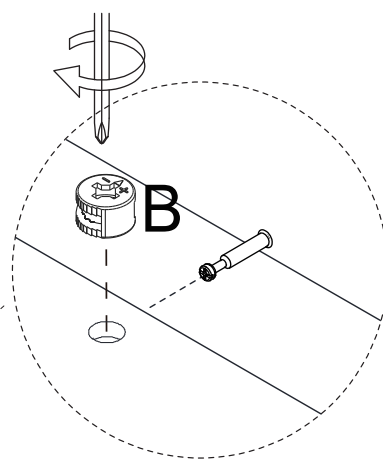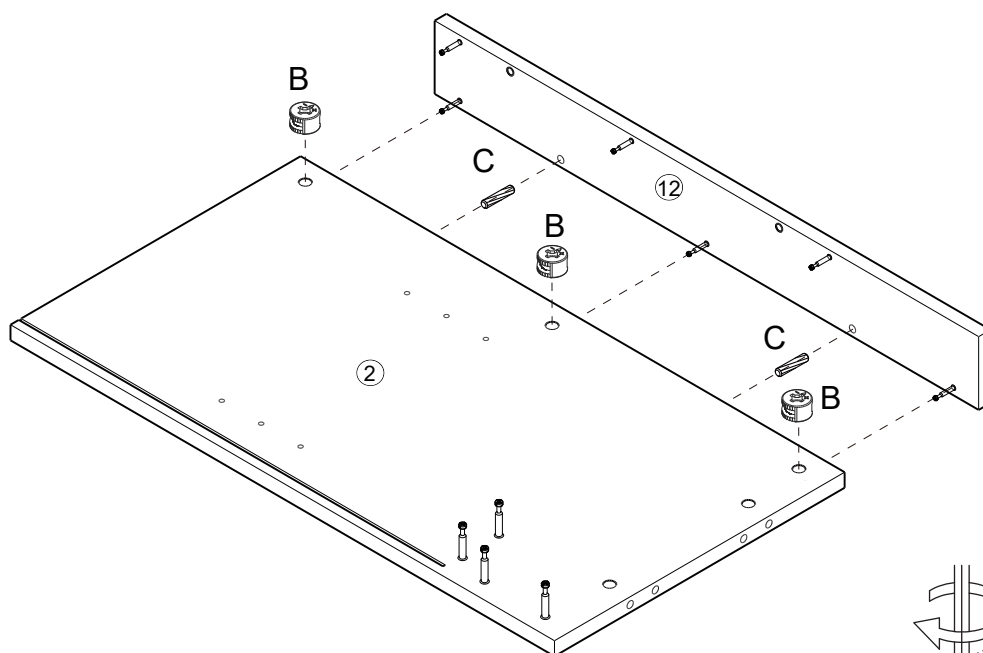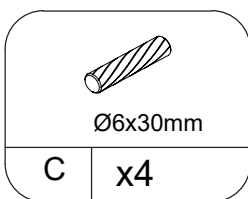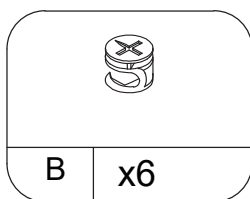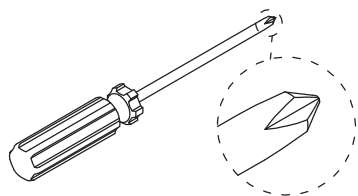



STEP 10

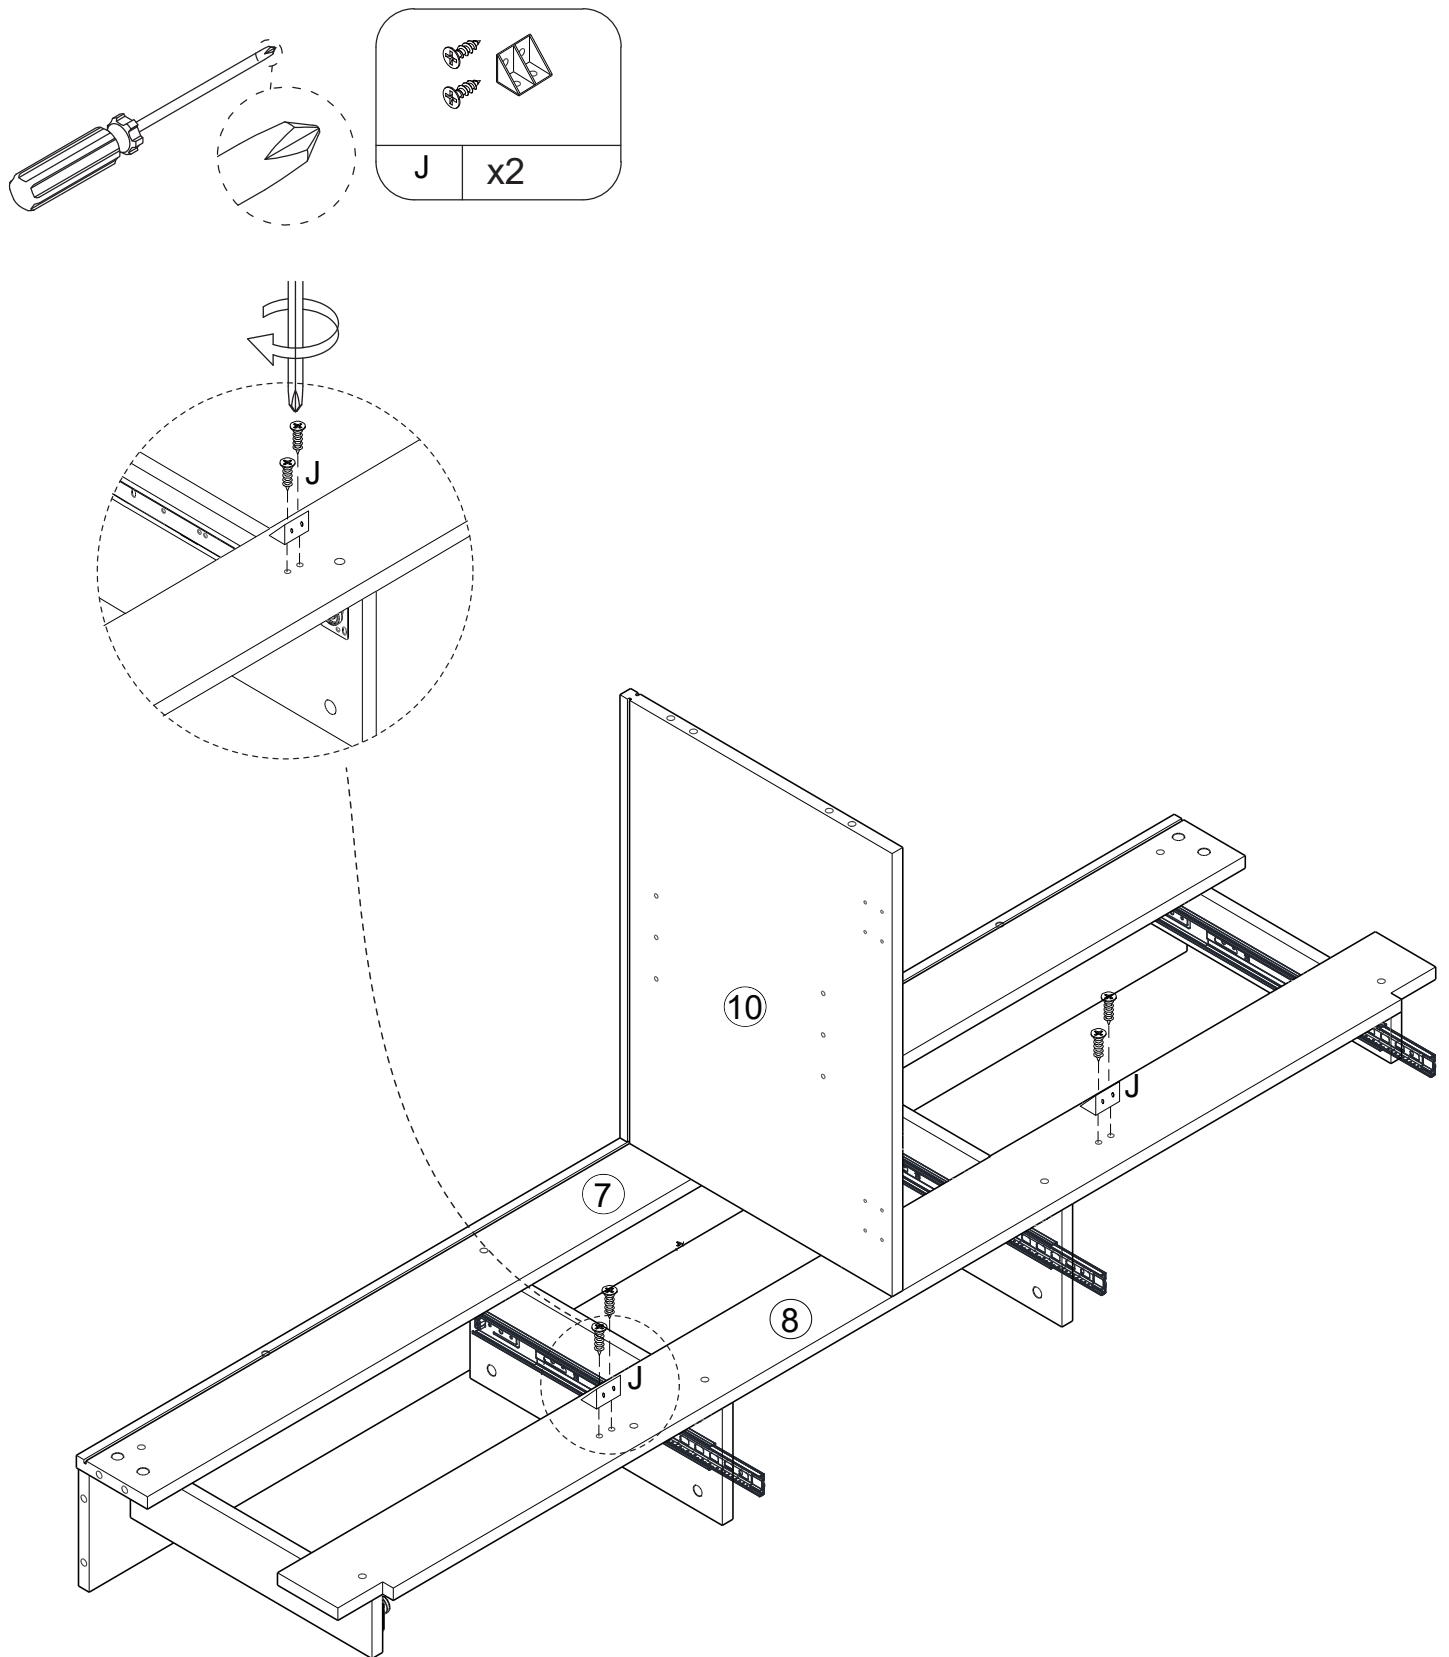



STEP 11

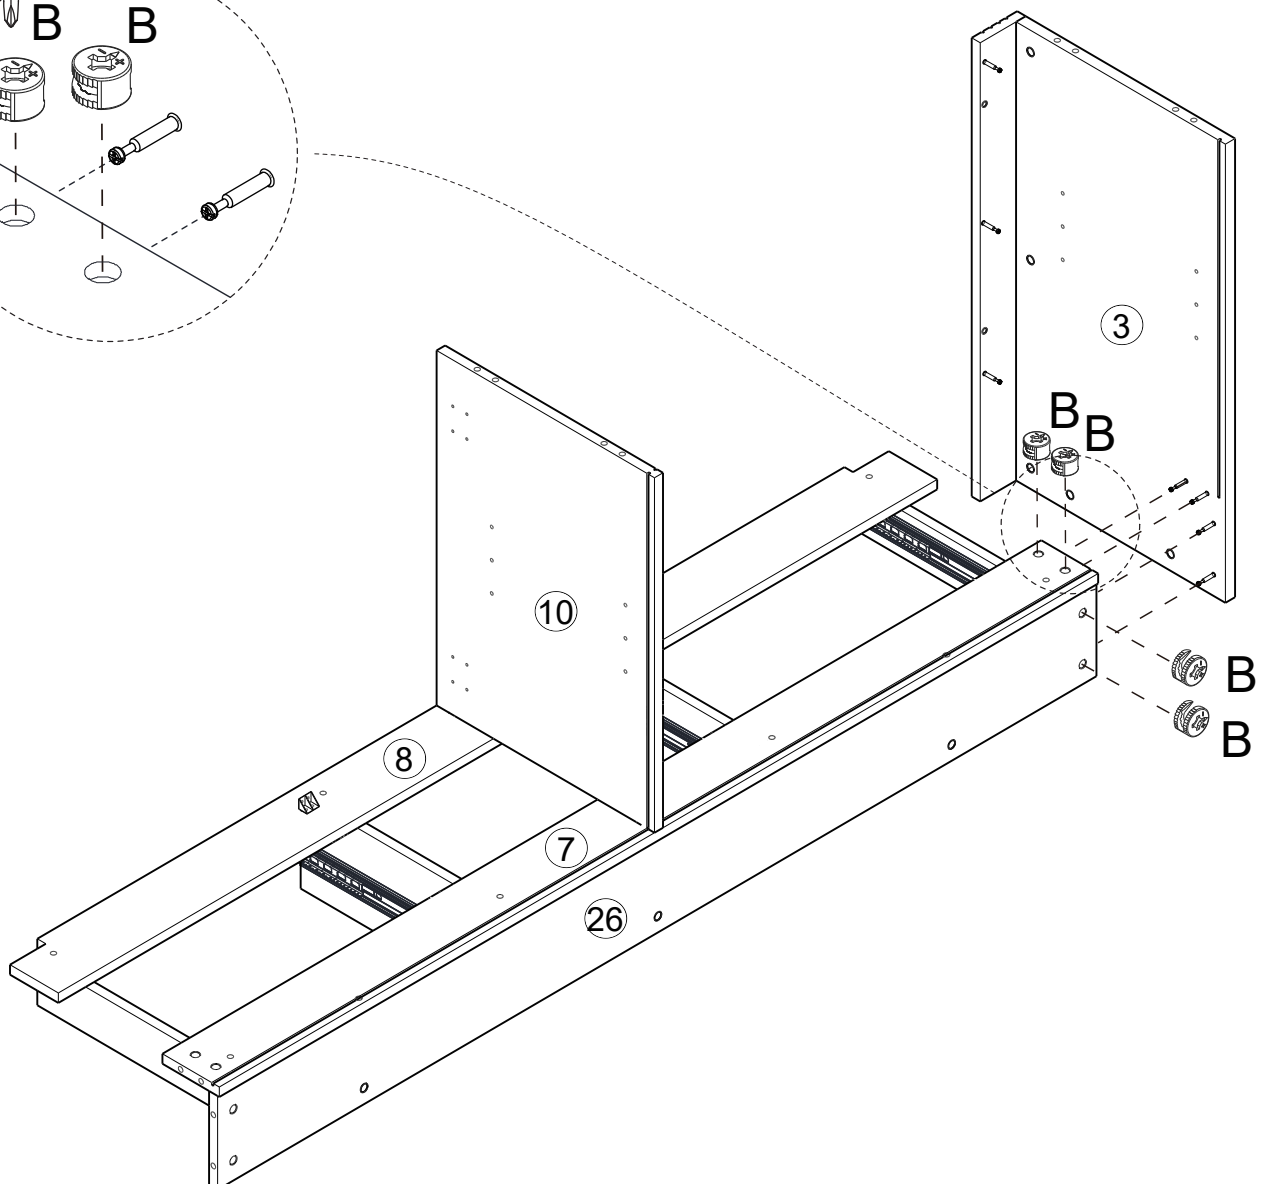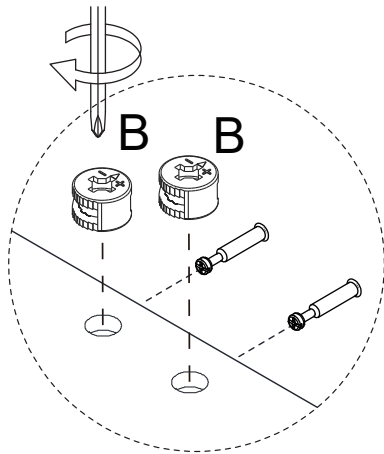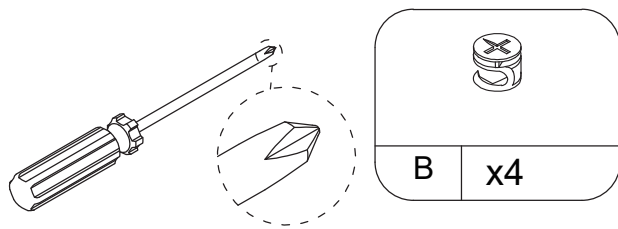


STEP 12

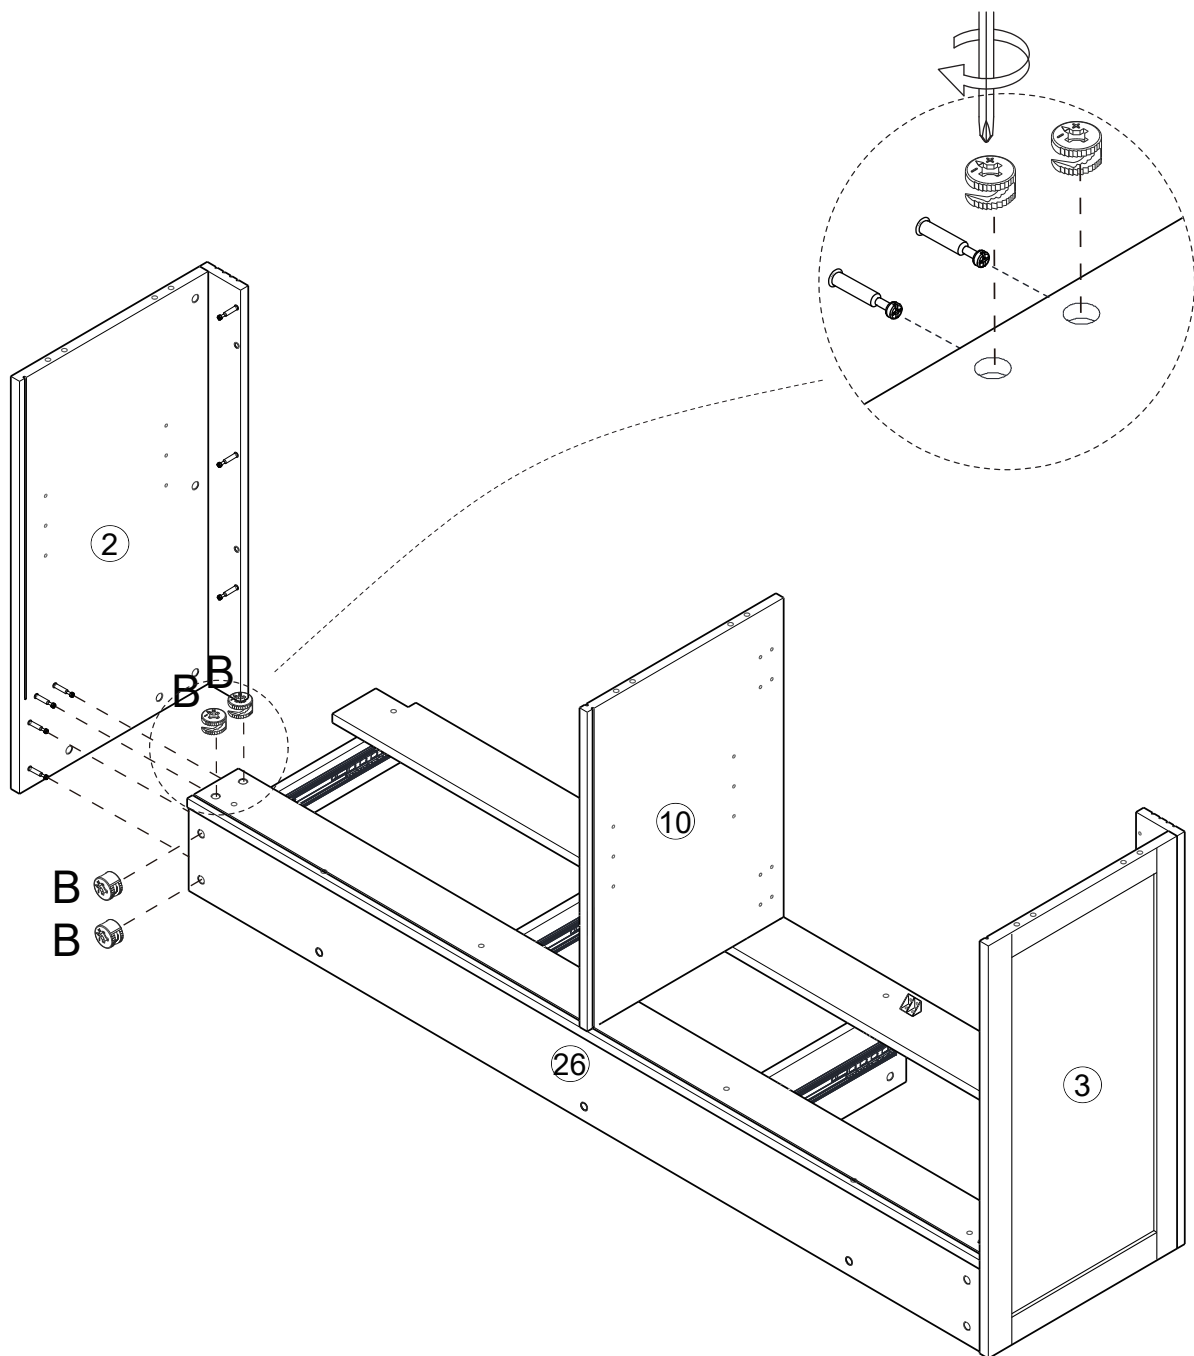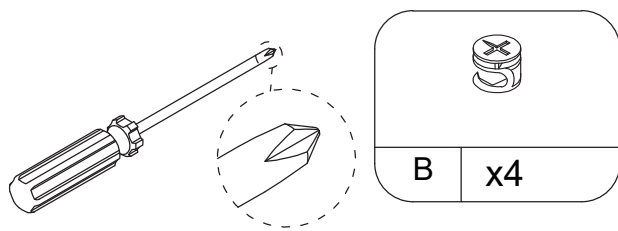



STEP 13

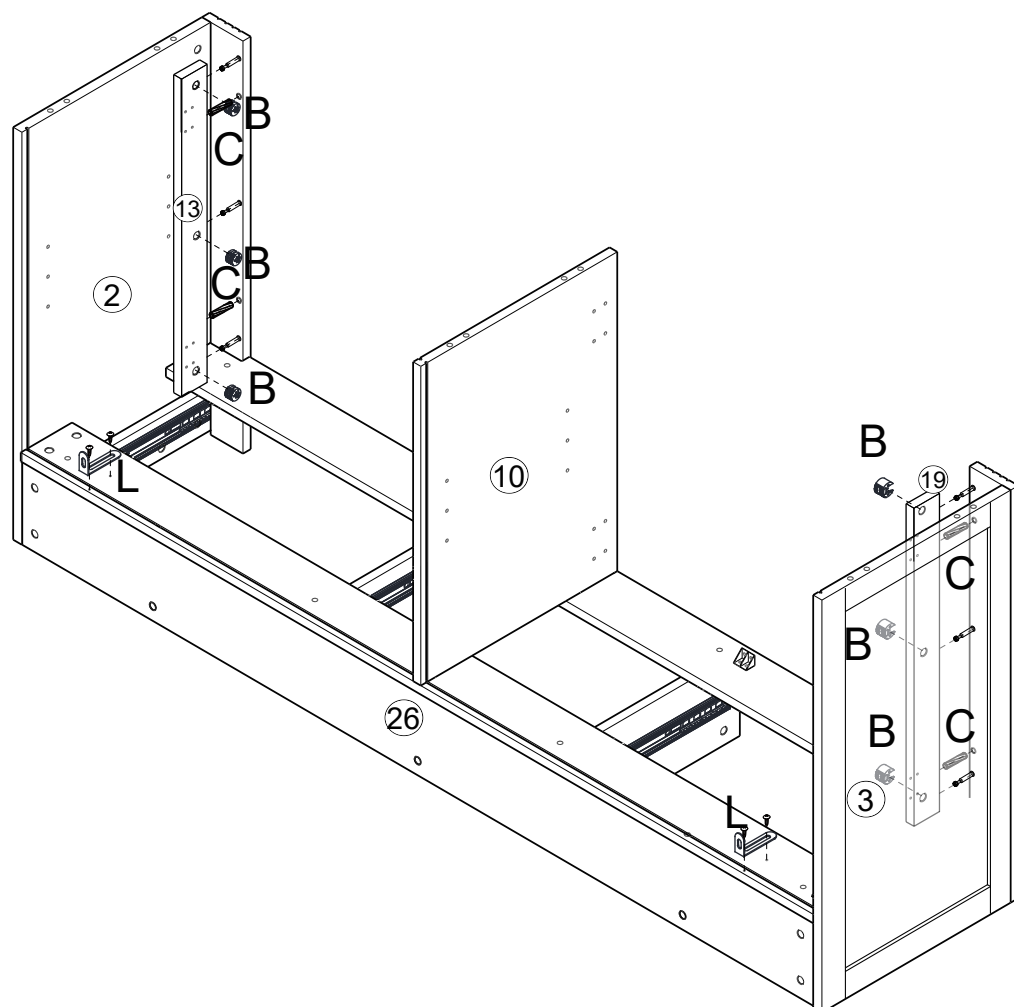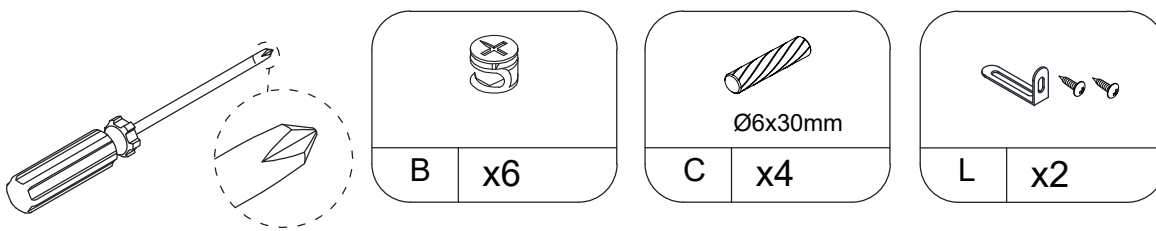





STEP 14

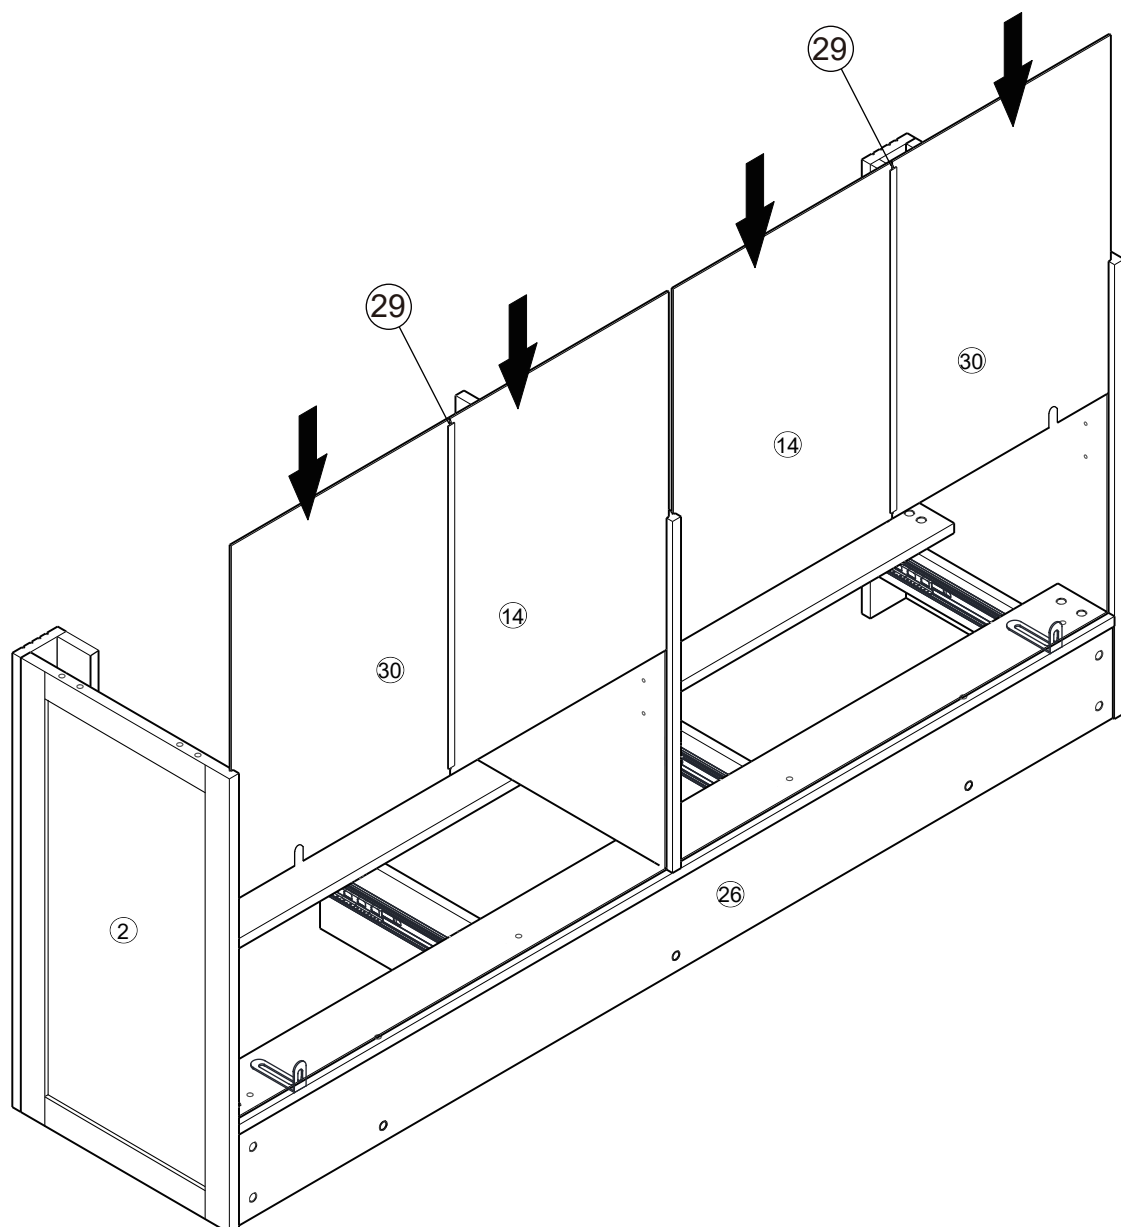


STEP 15

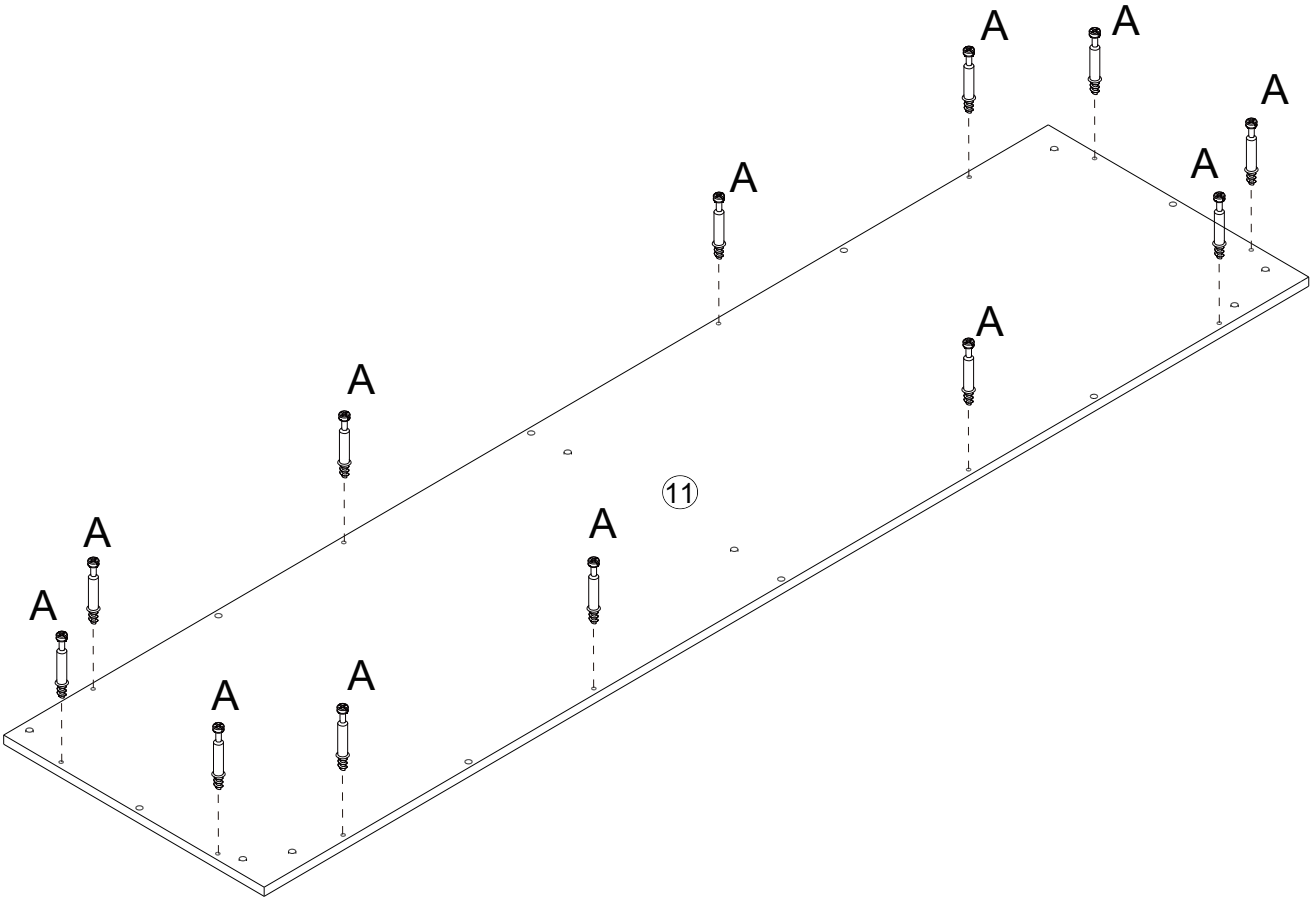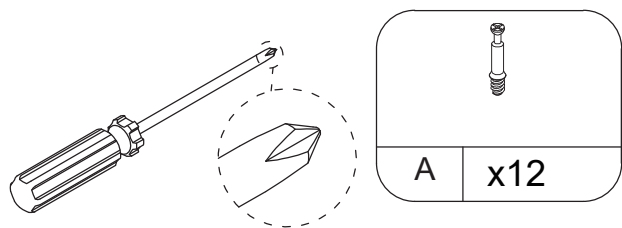







STEP 16

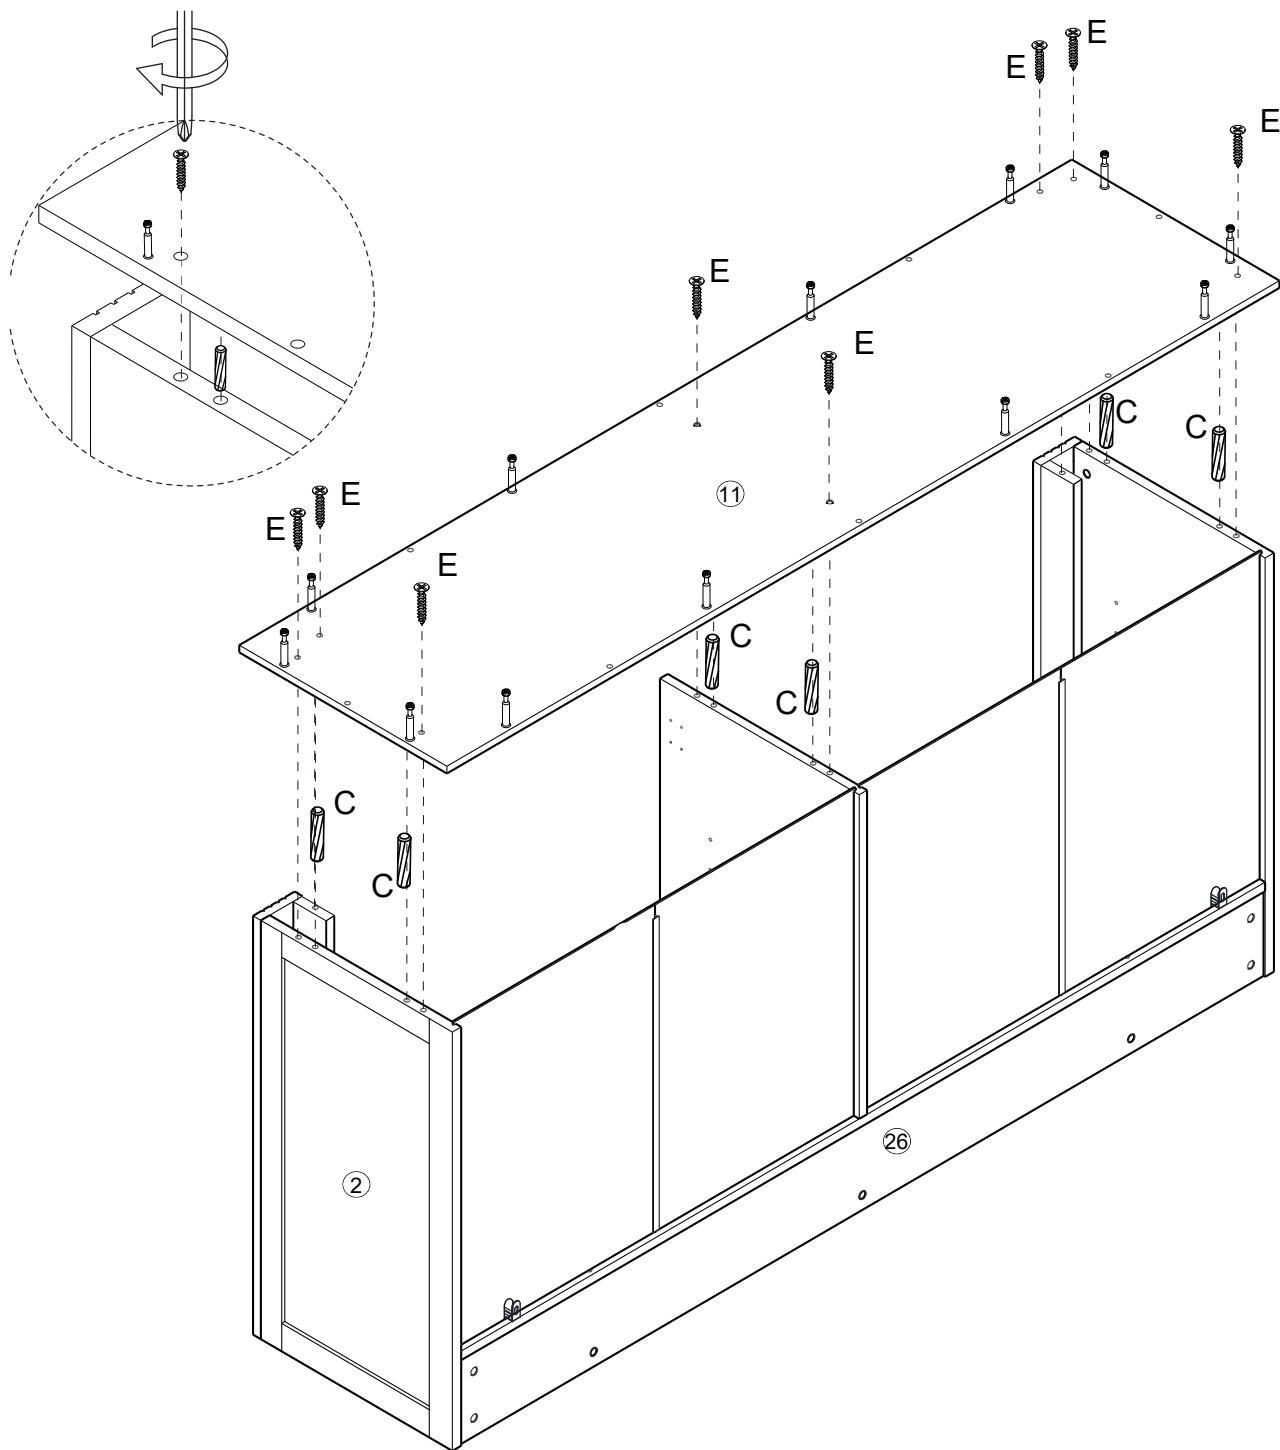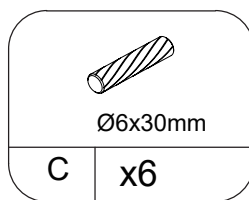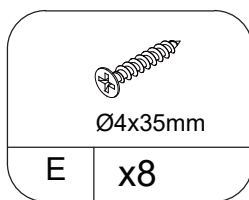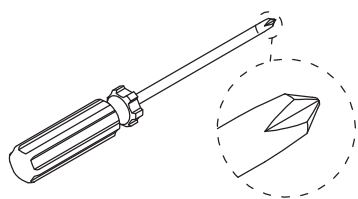



STEP 17

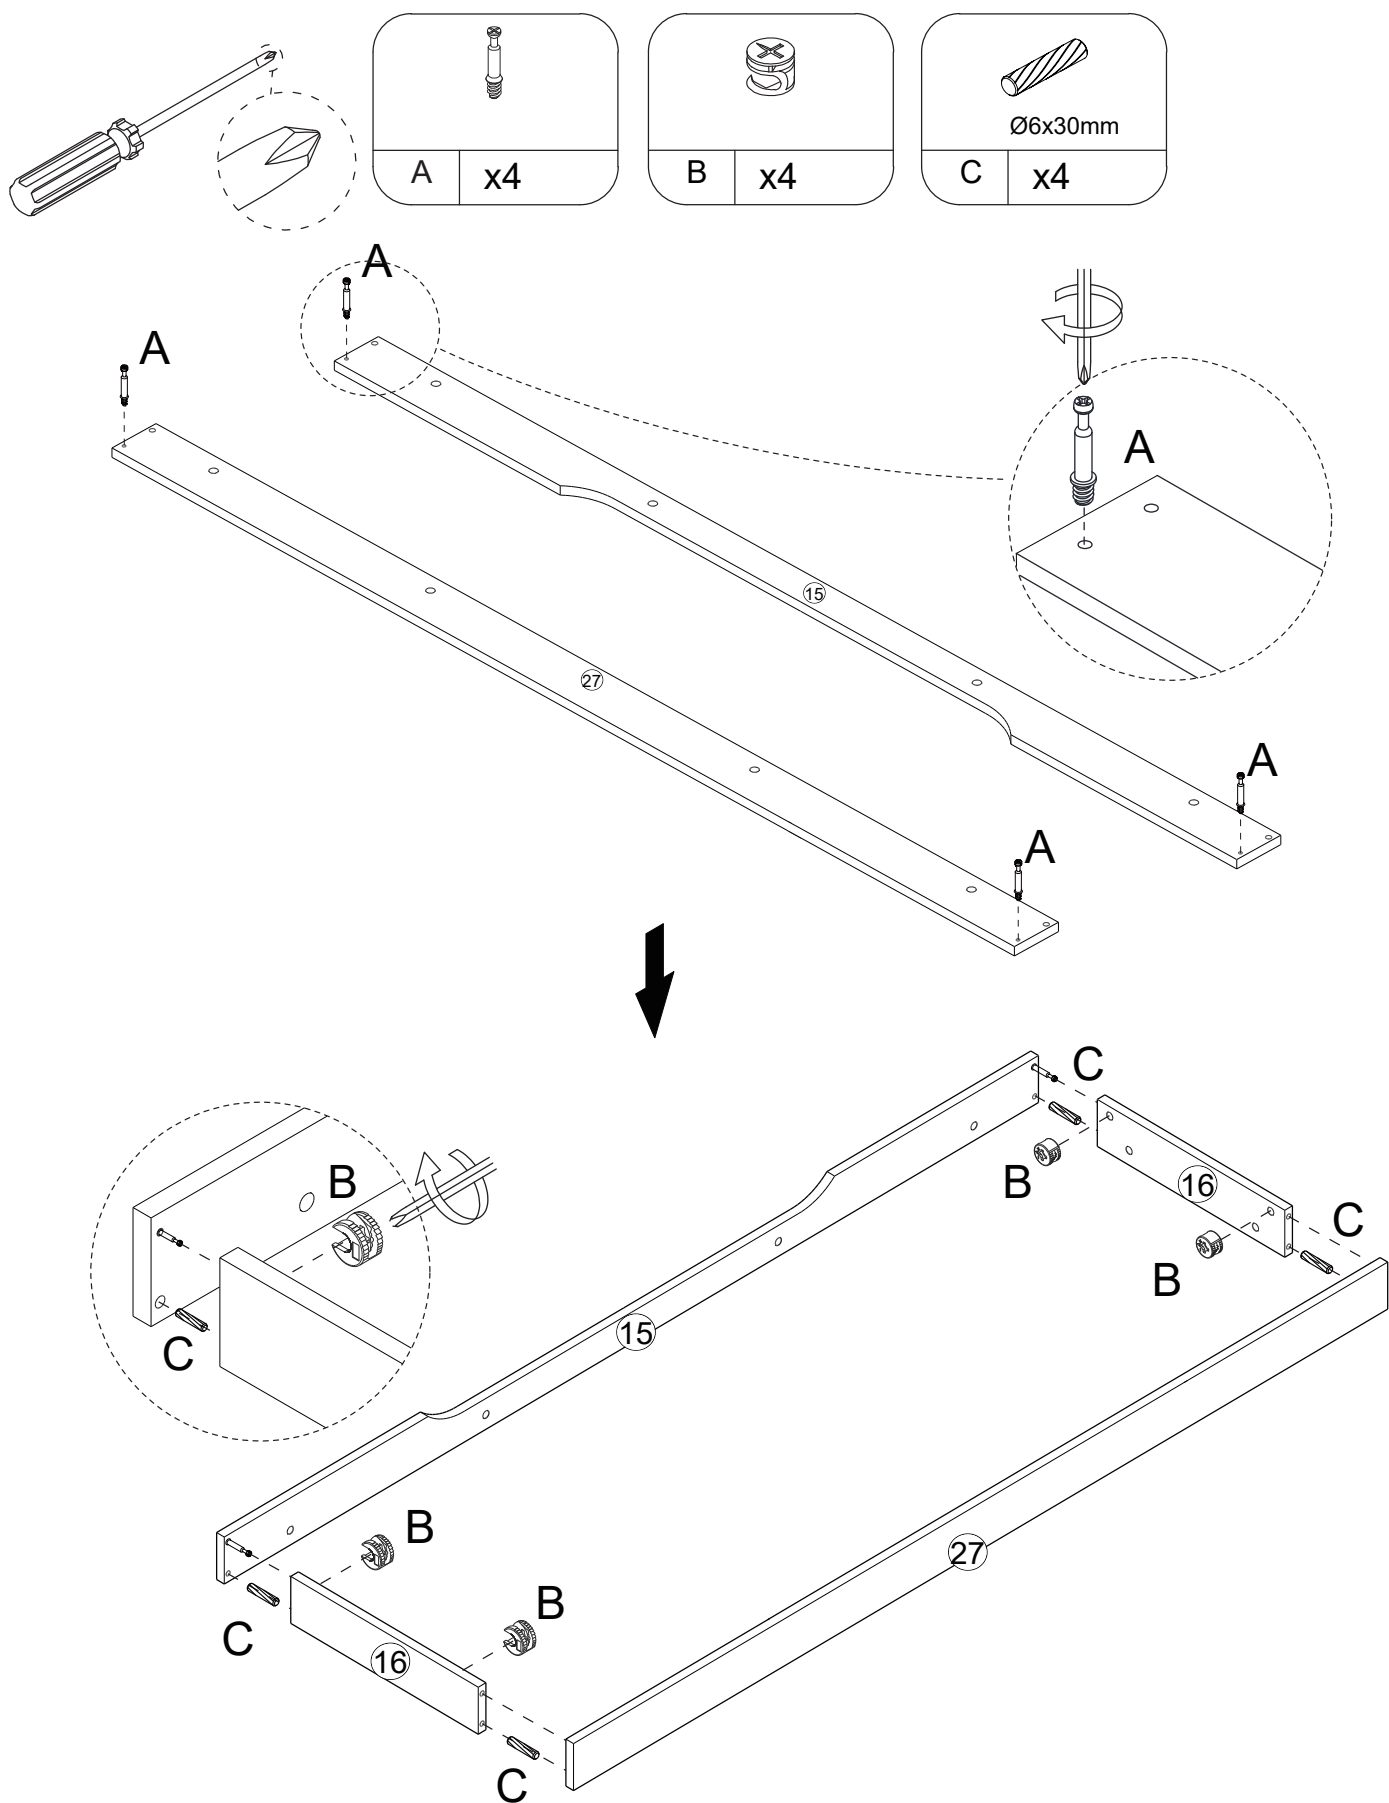





STEP 18

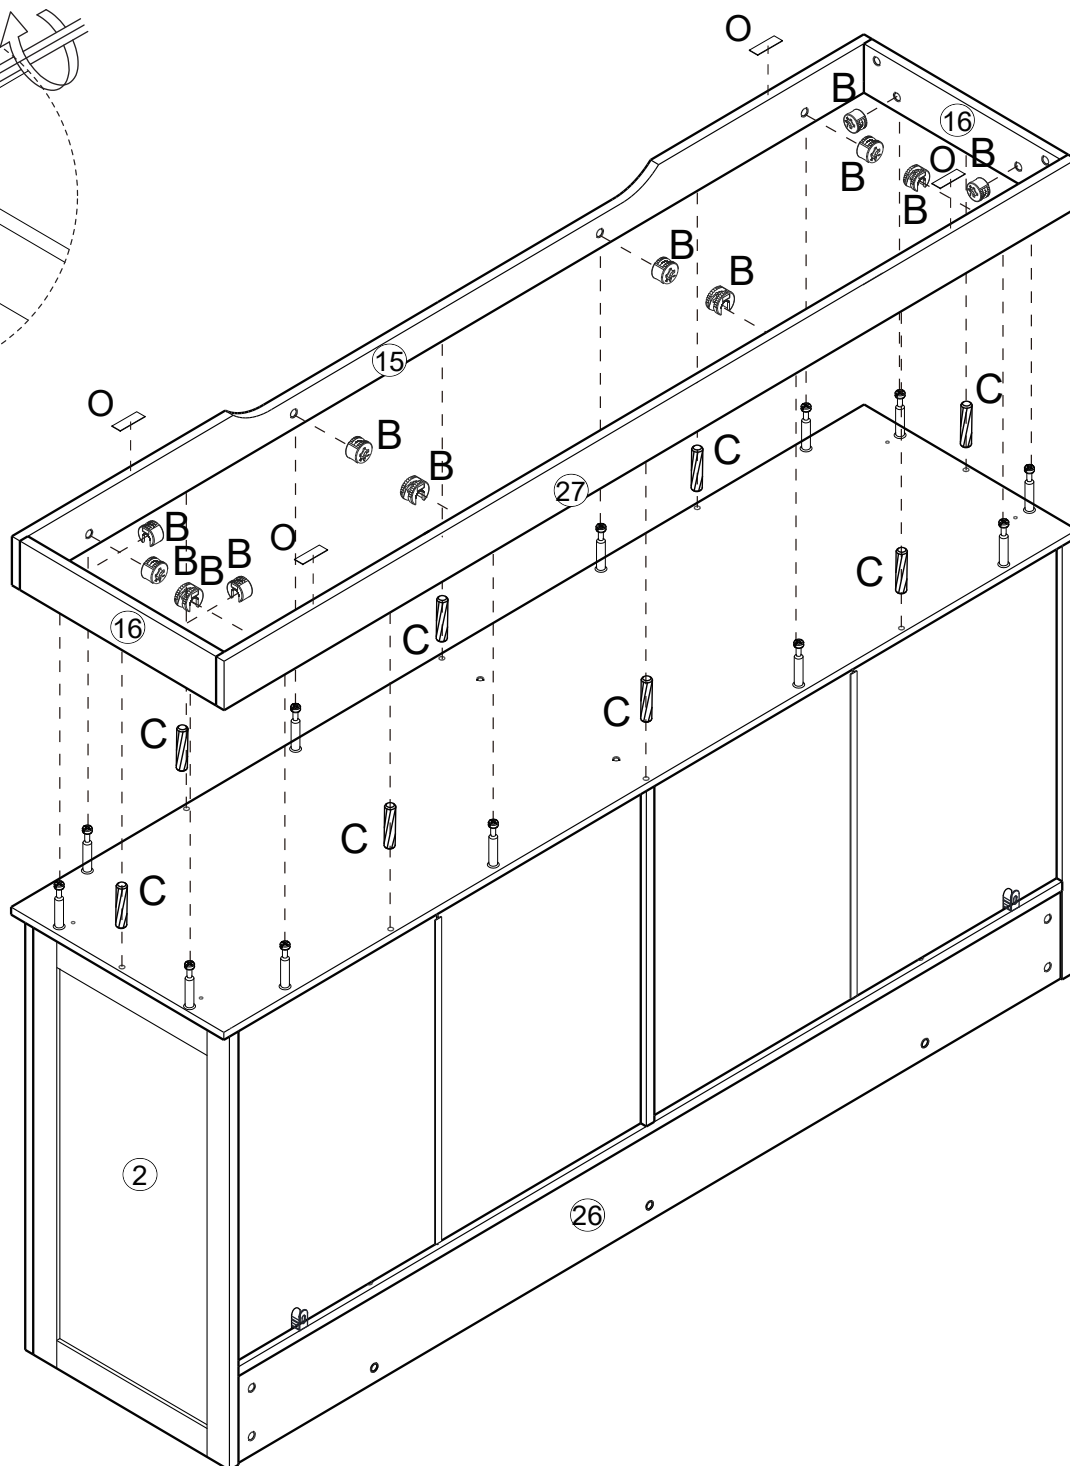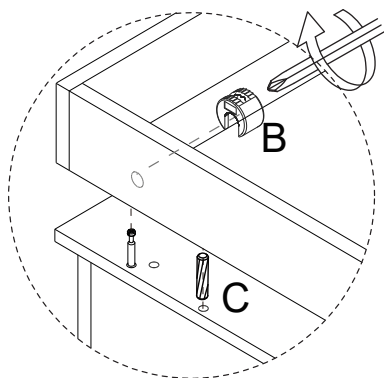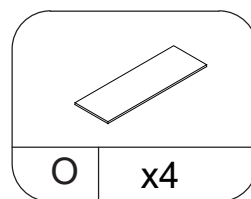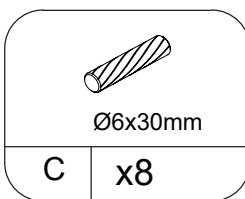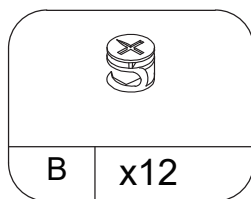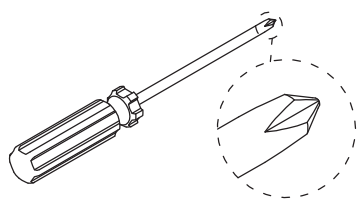



STEP 19

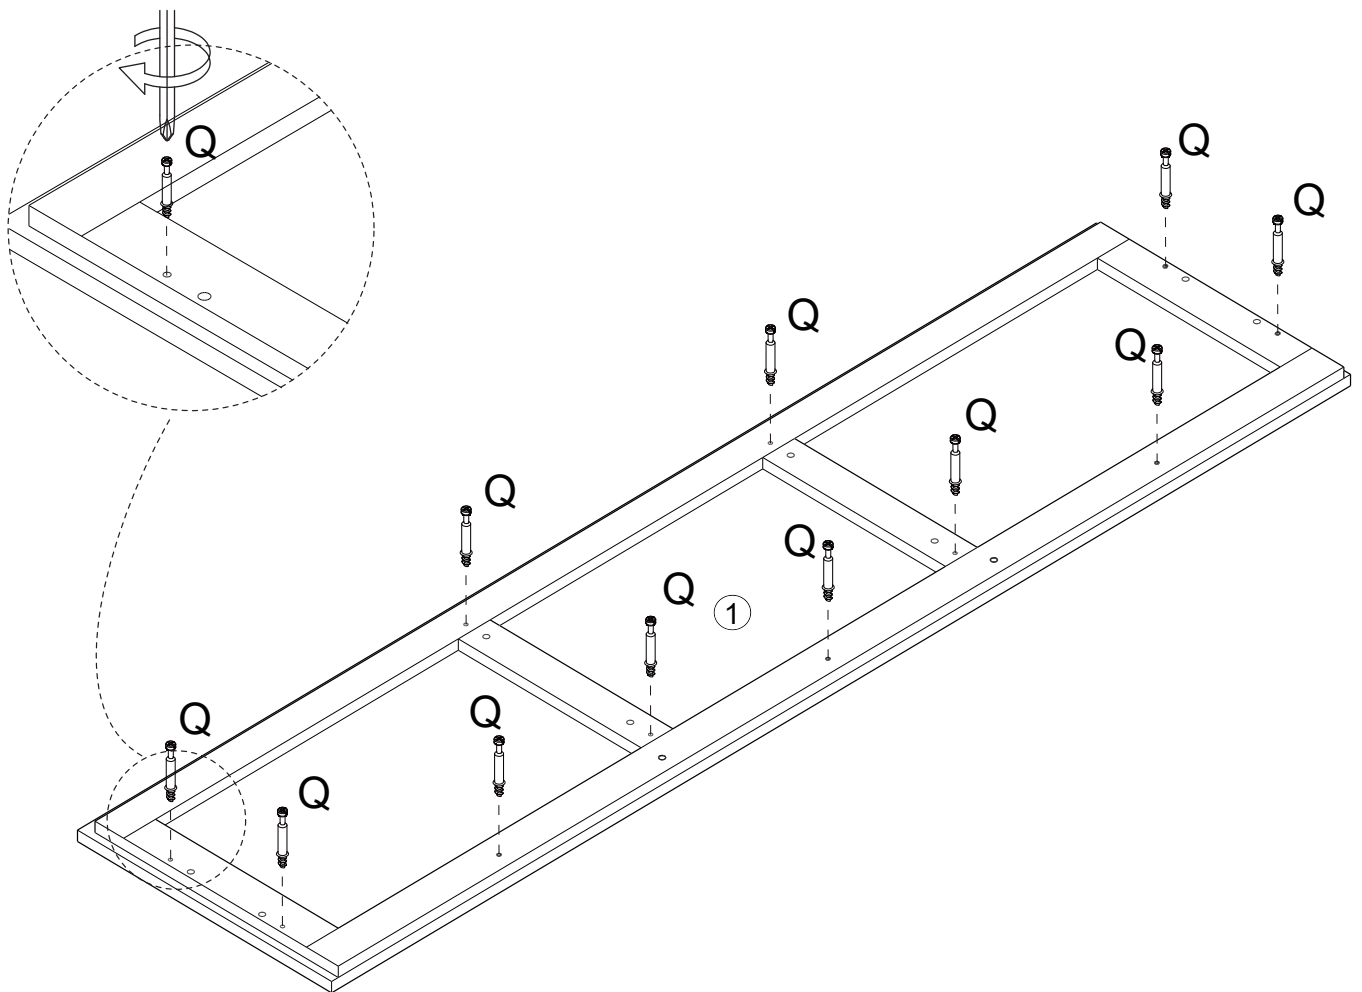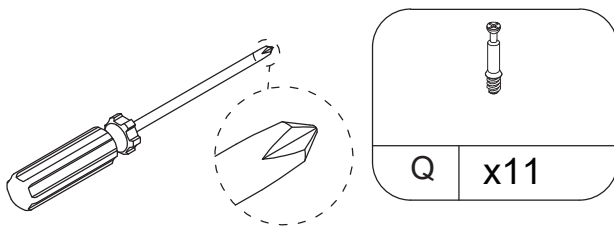










STEP 20

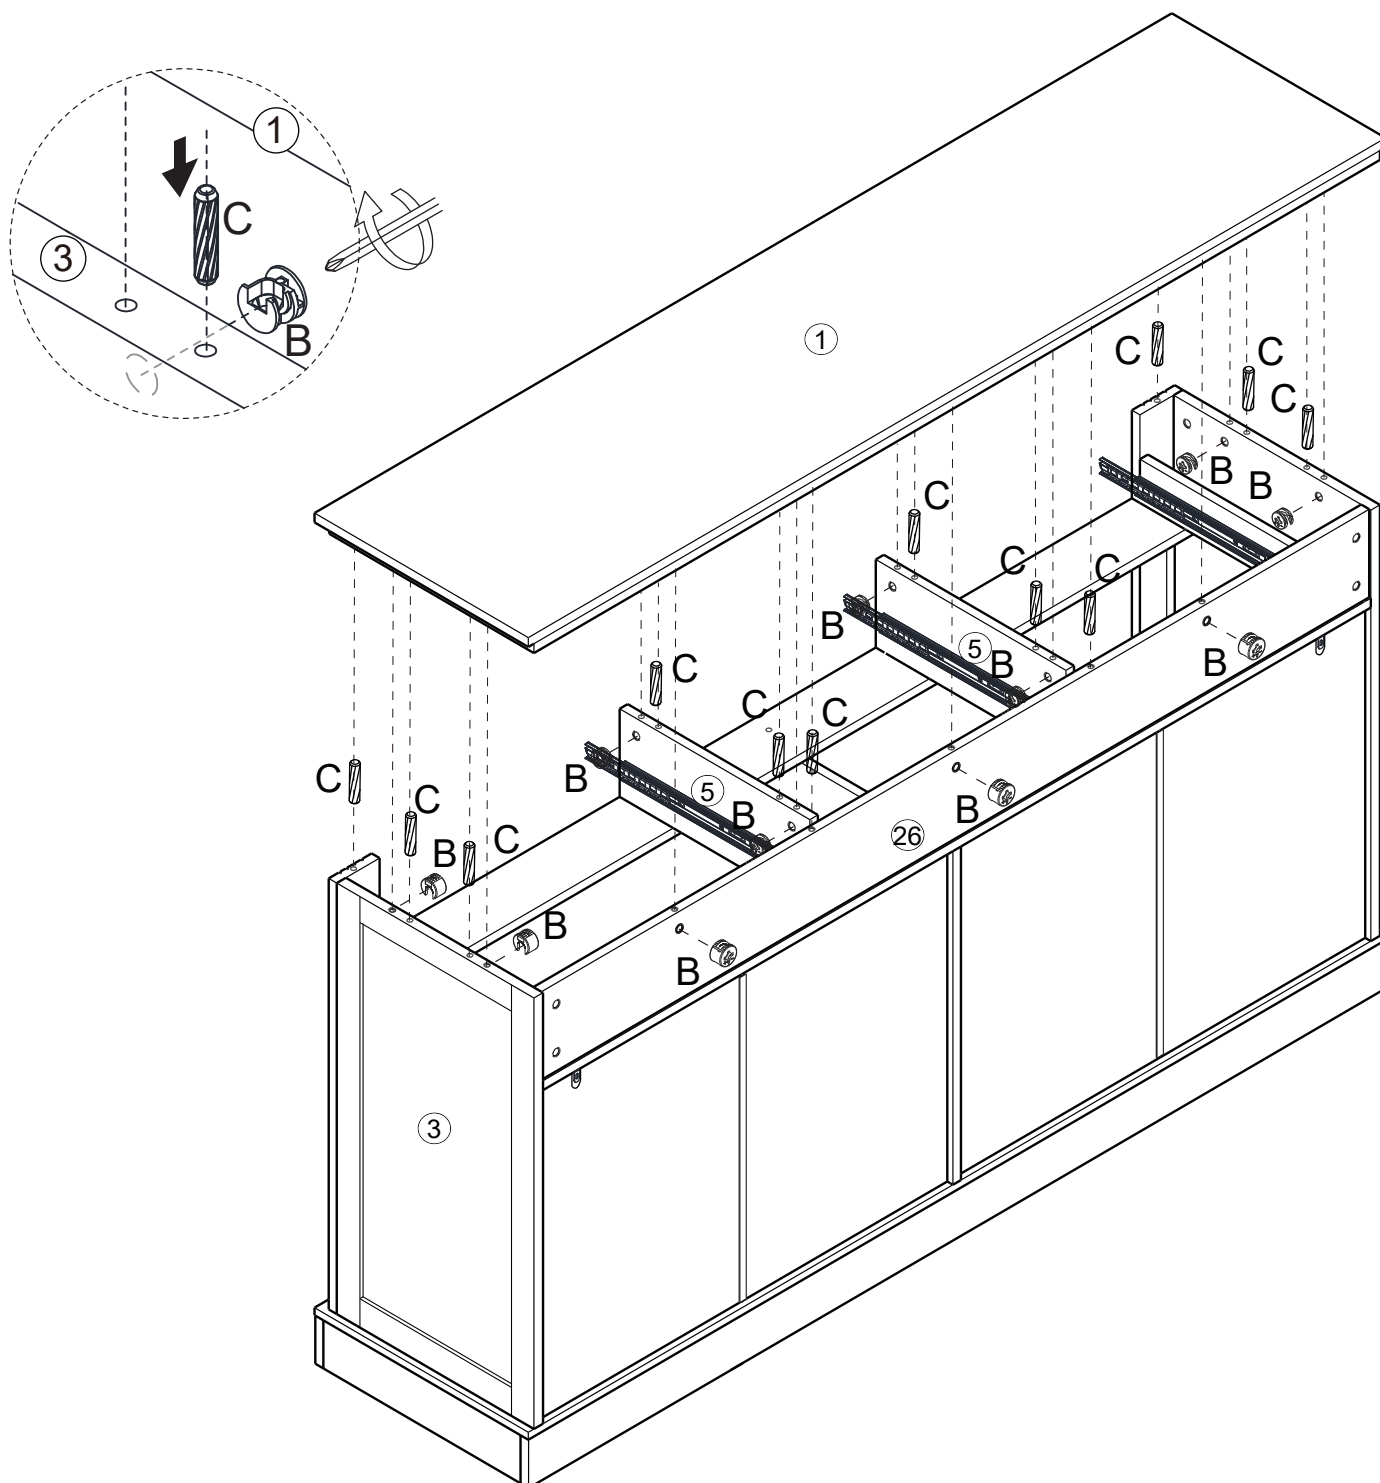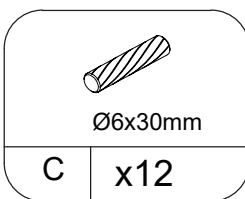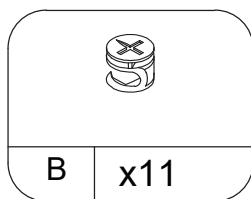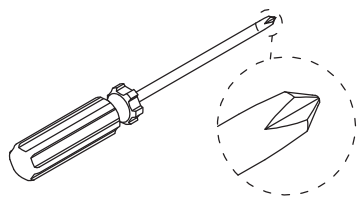




STEP 21

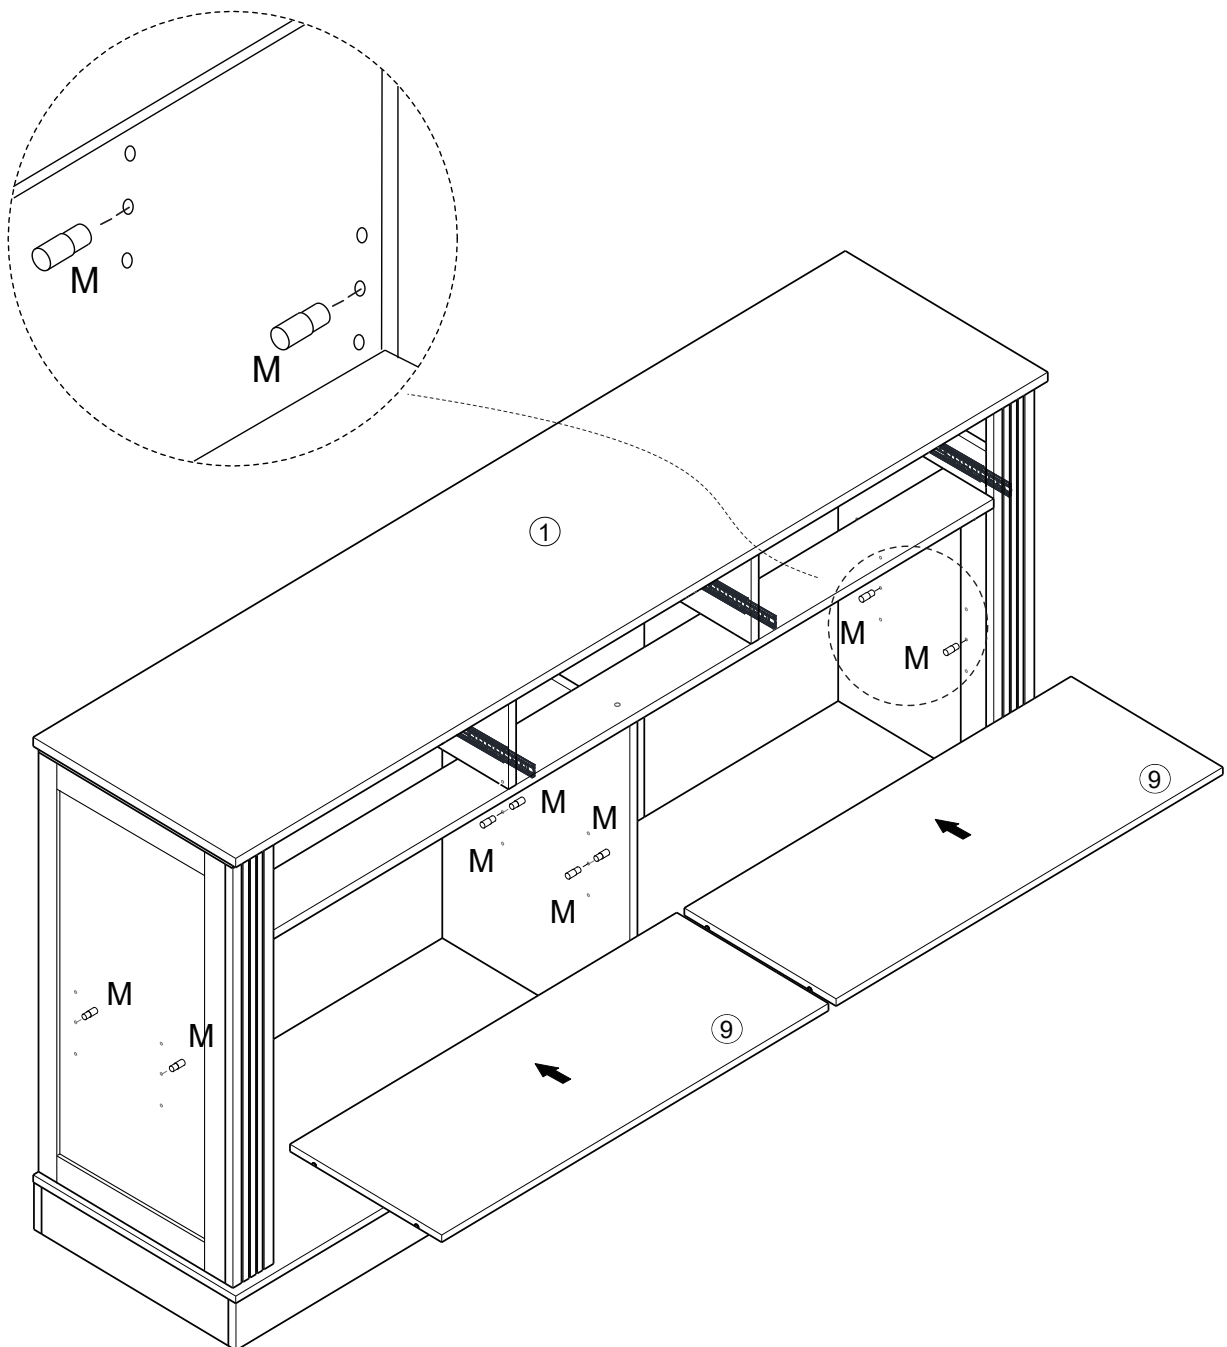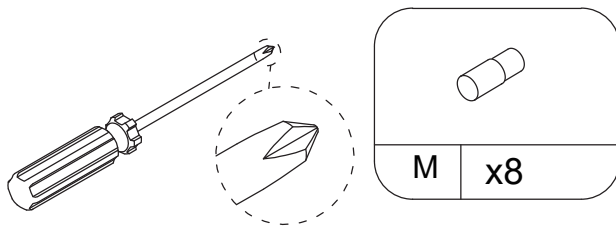




STEP 22

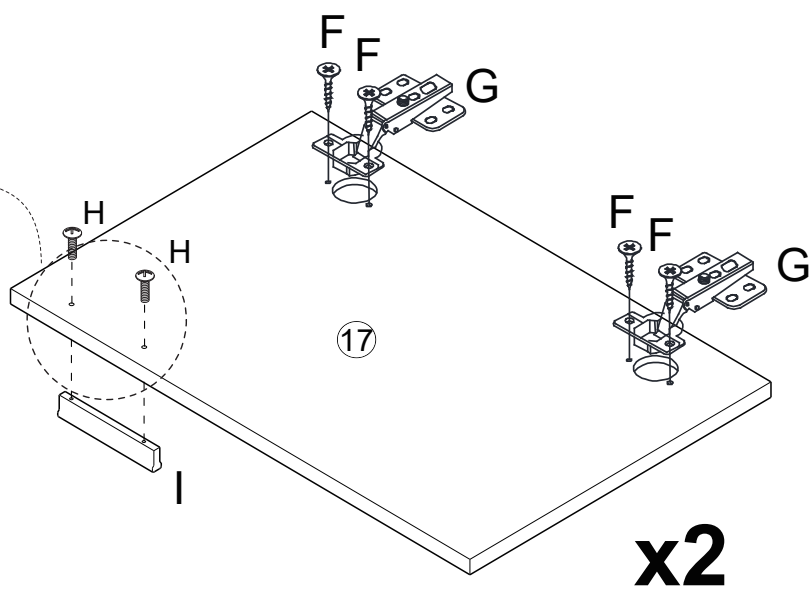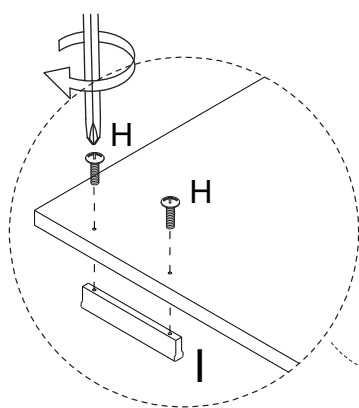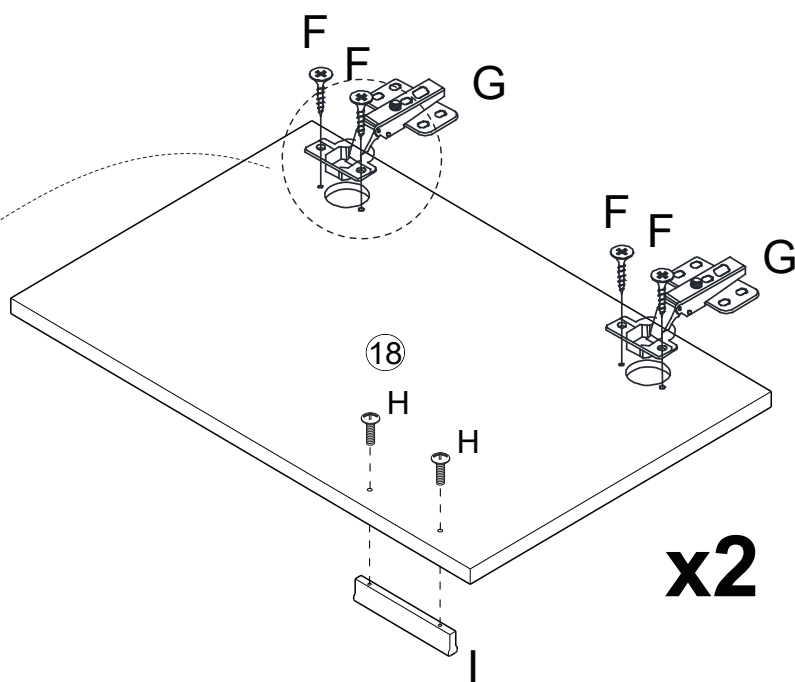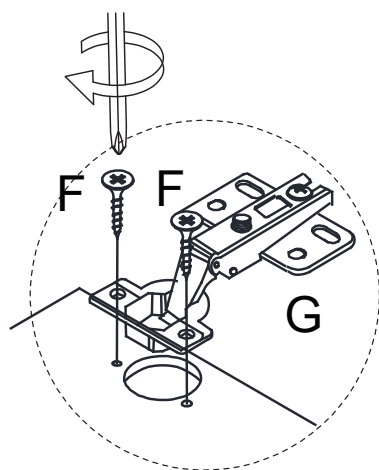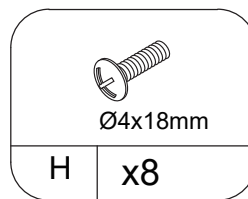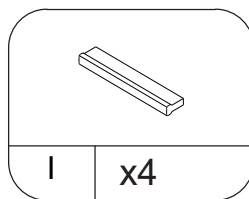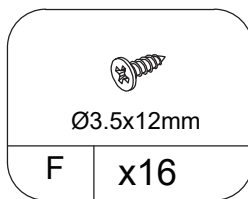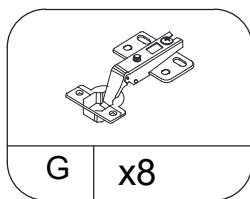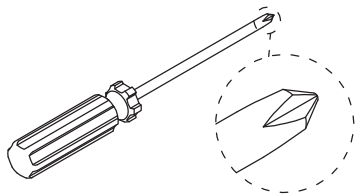


STEP 23

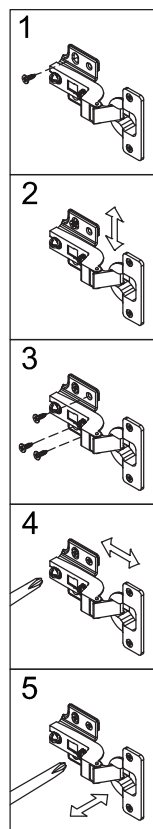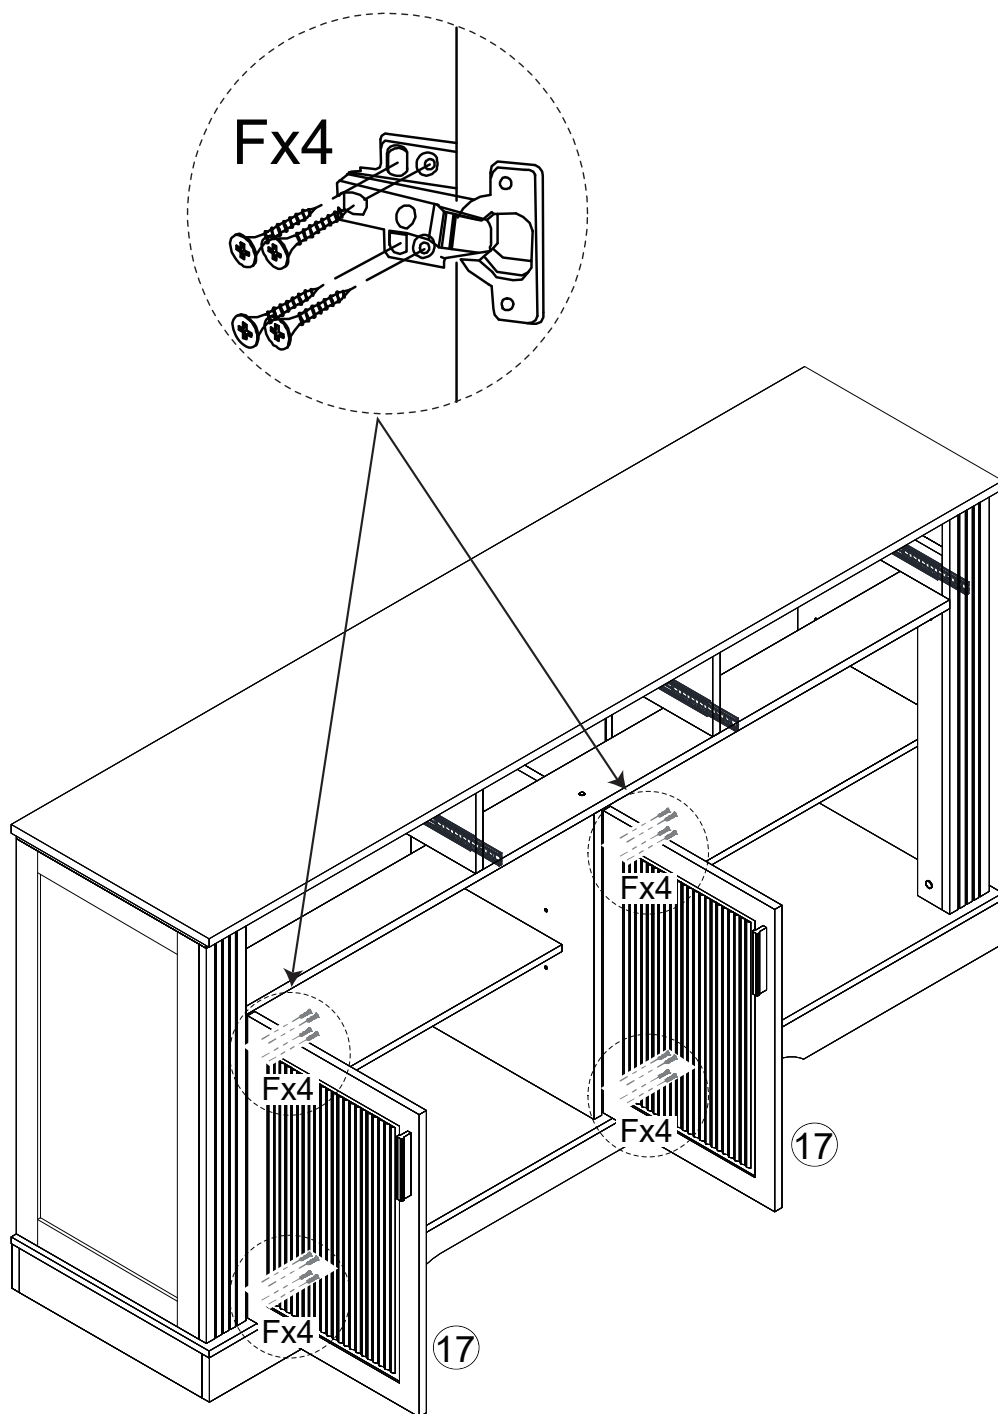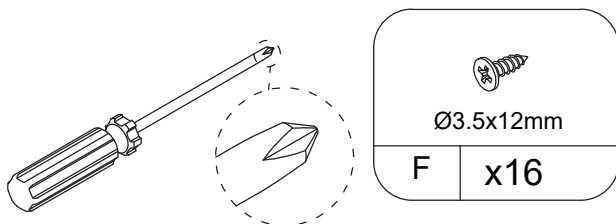


STEP 24

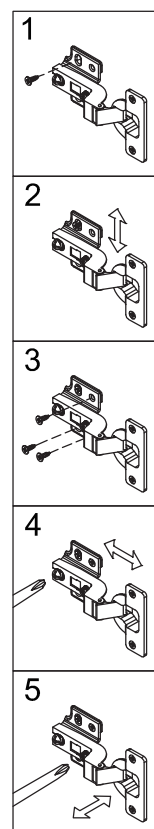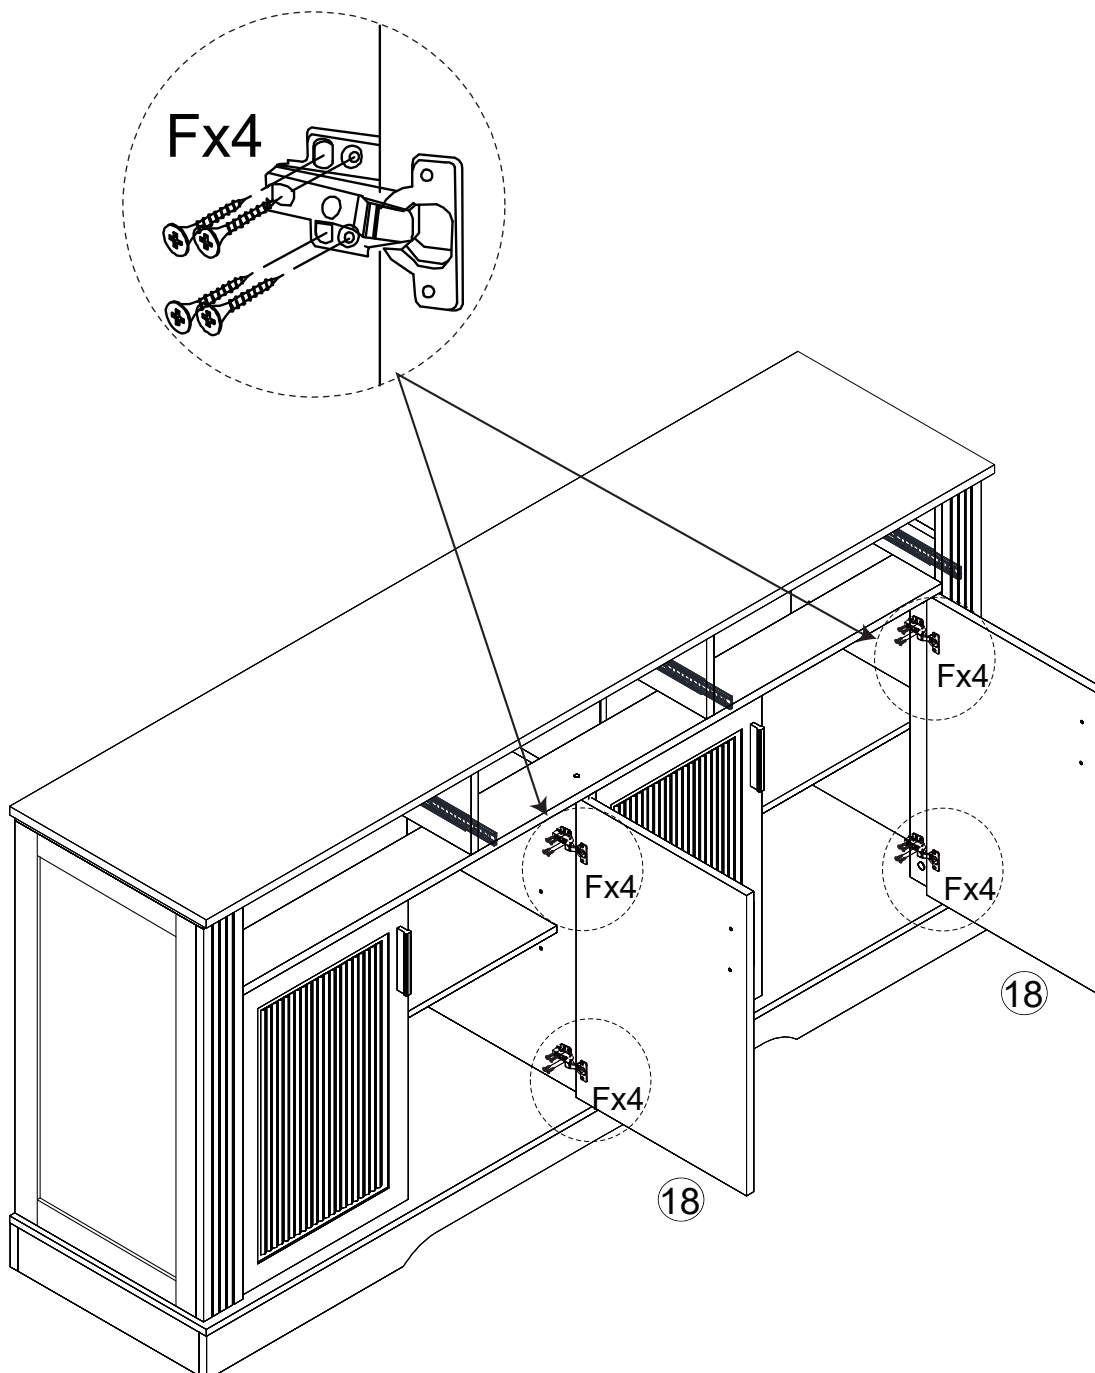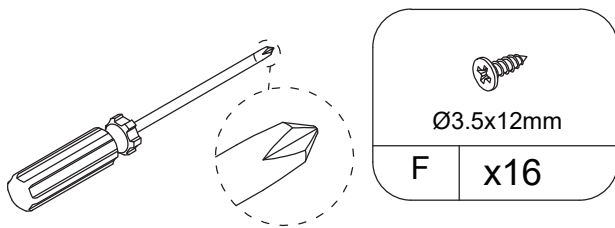





STEP 25

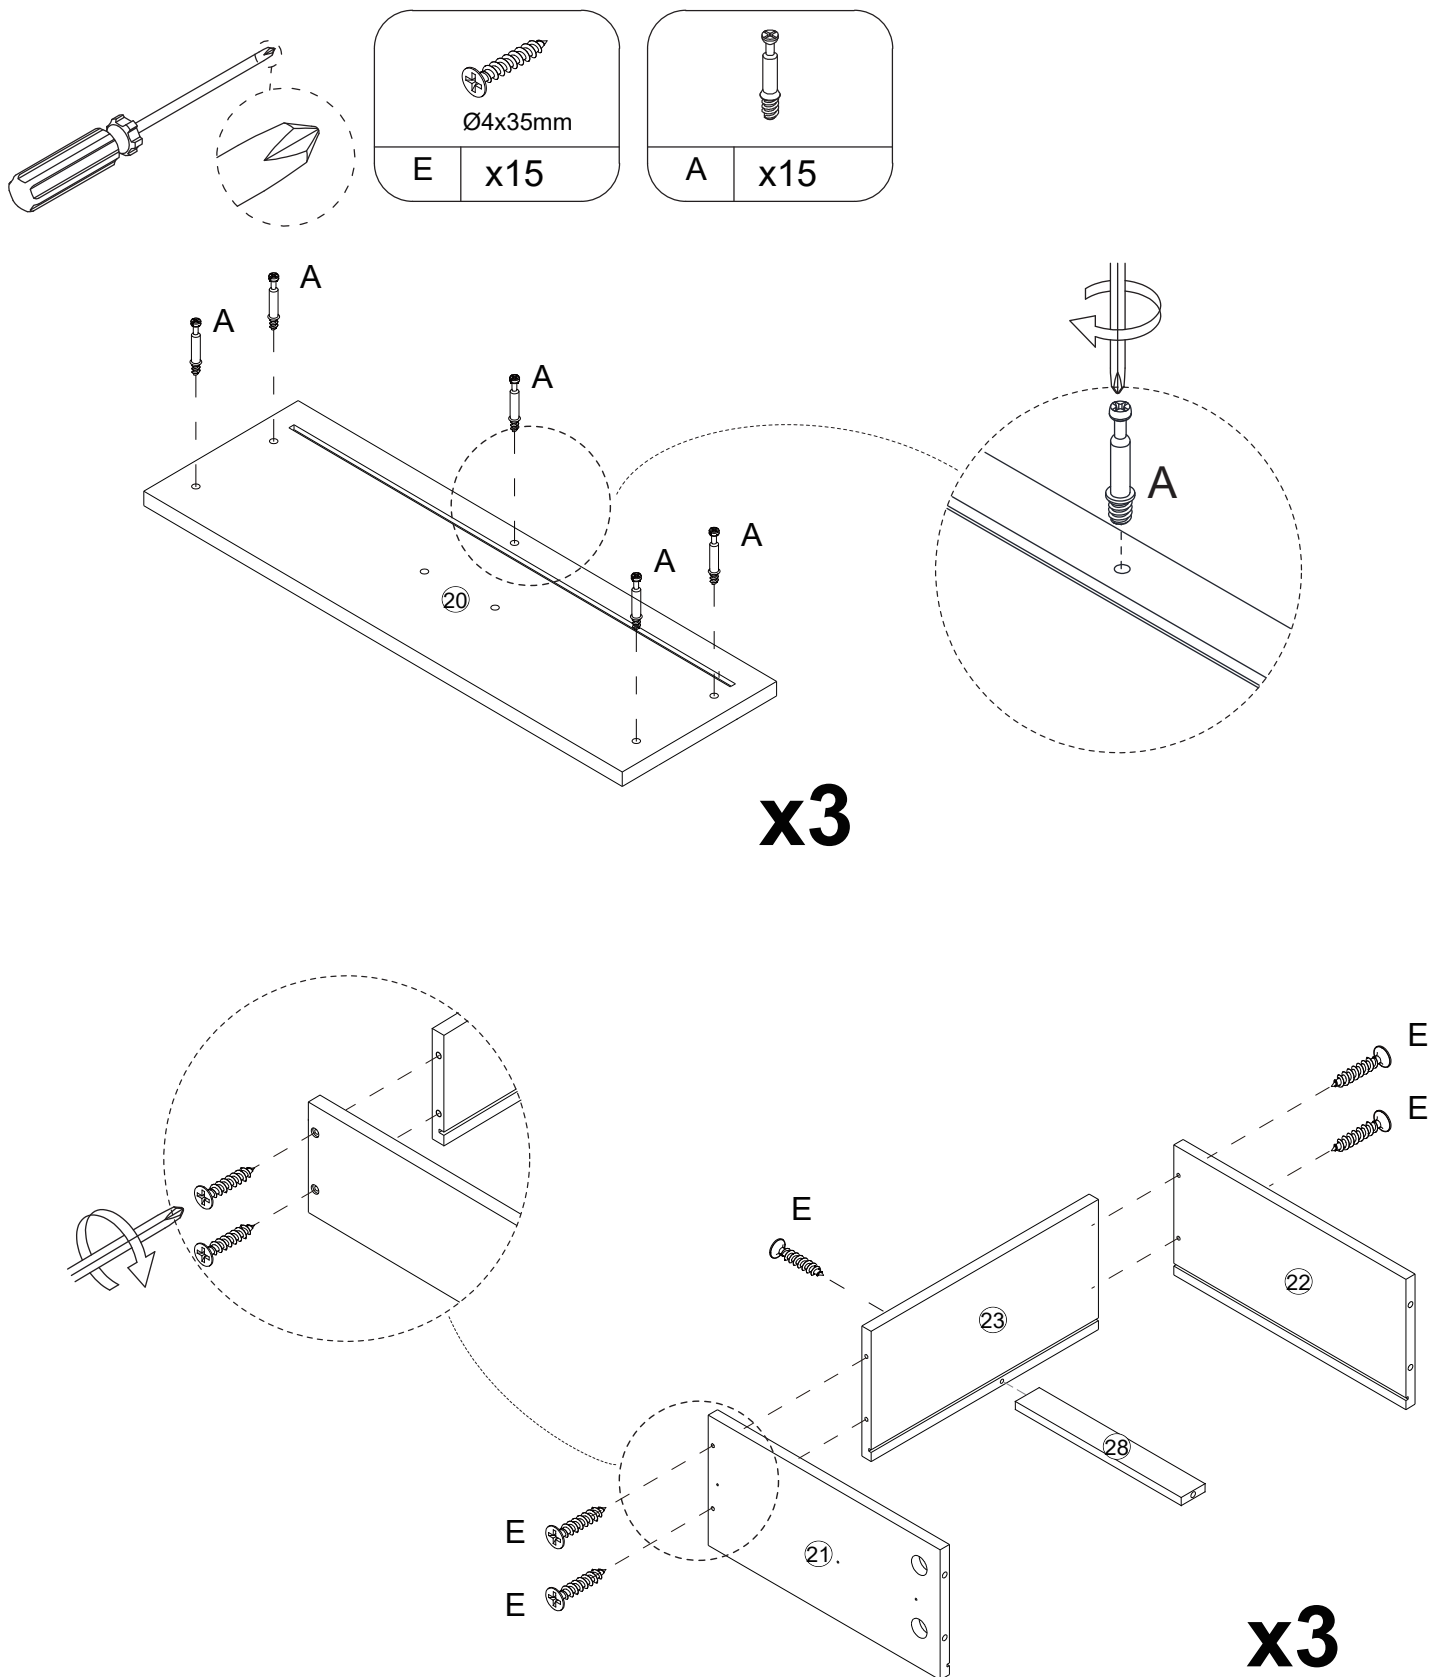

STEP 26

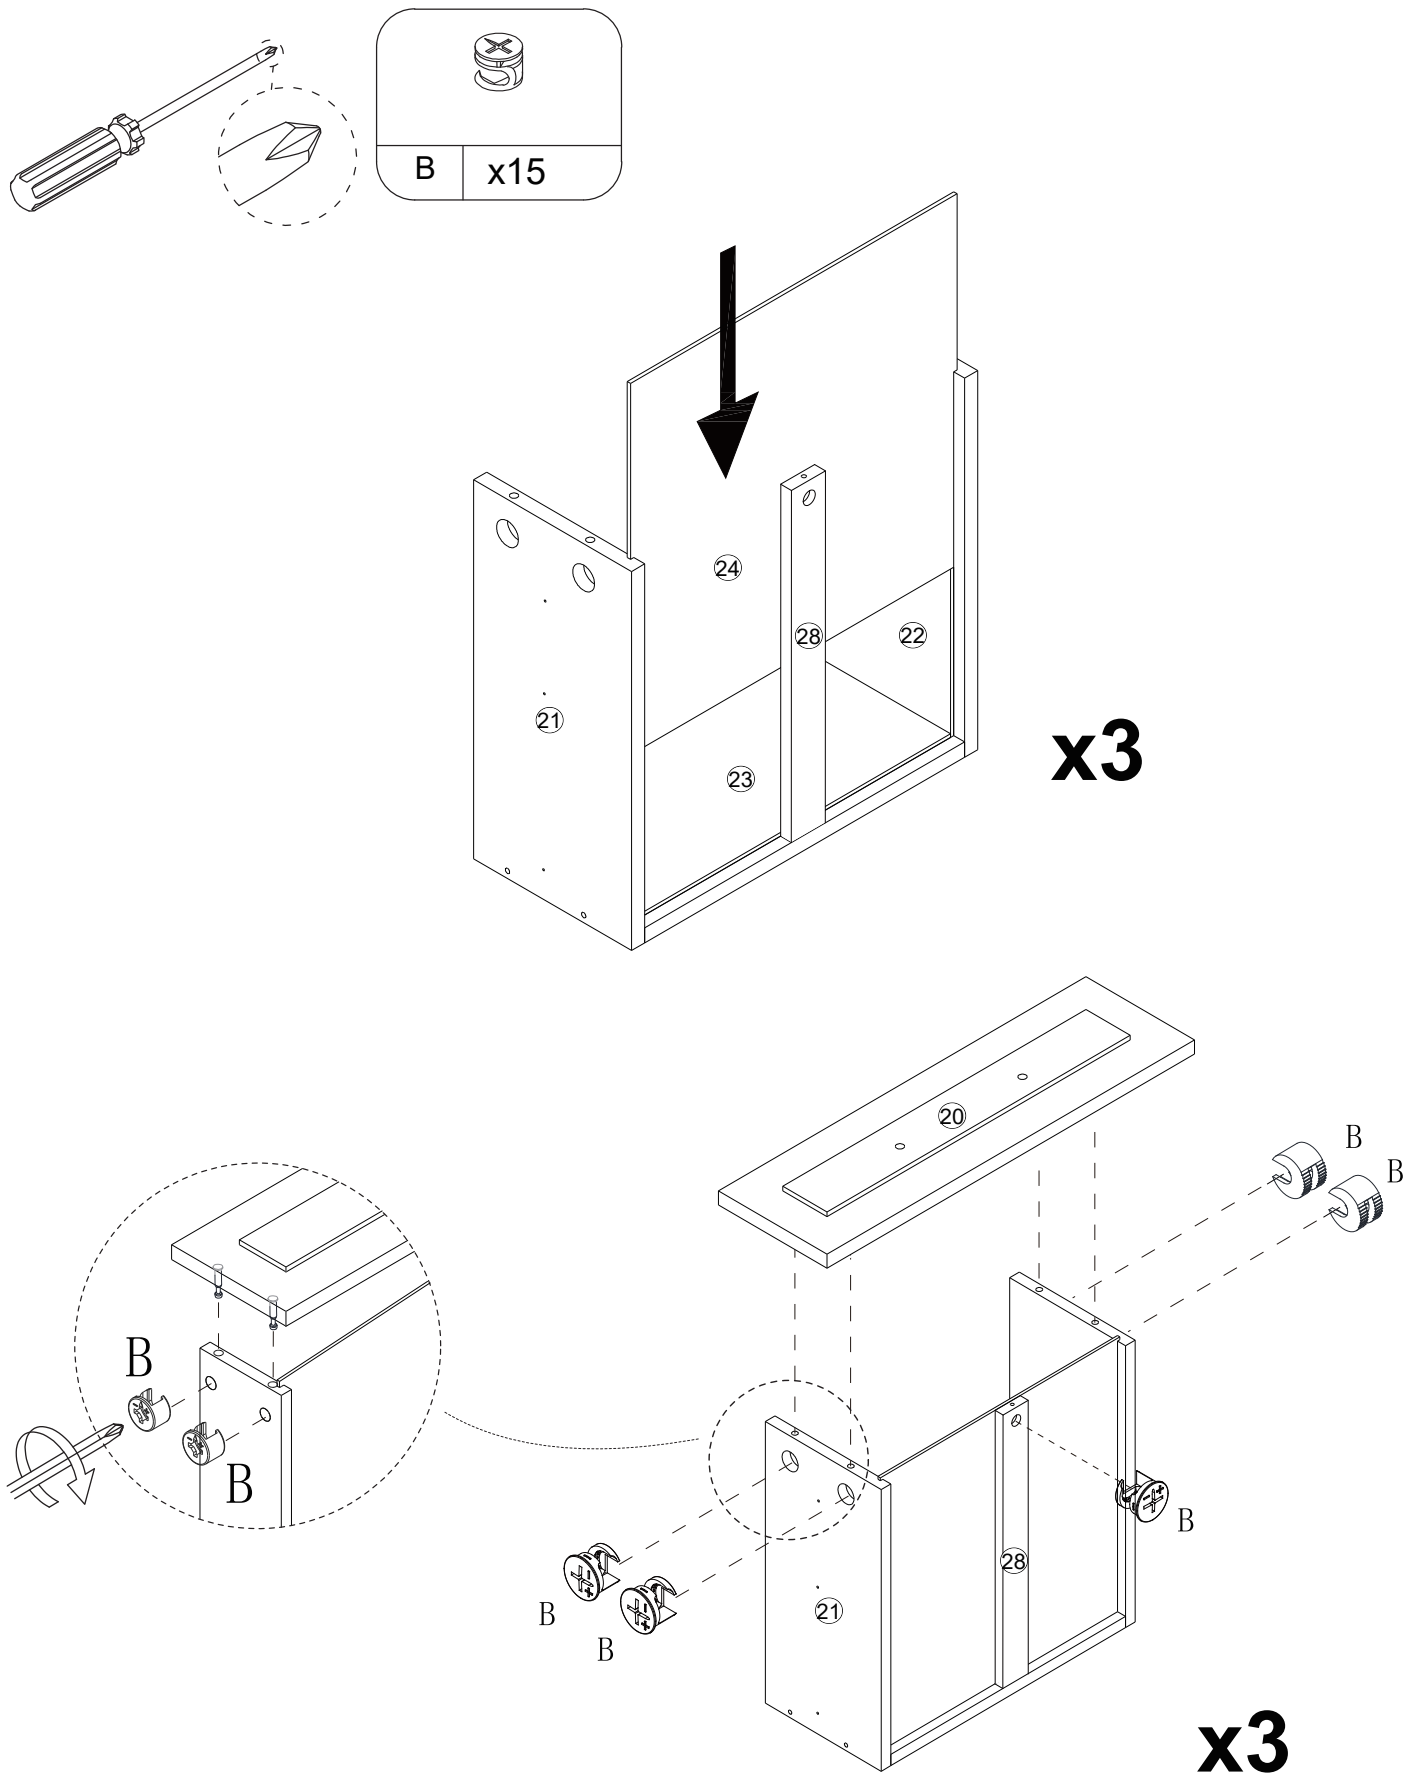

STEP 27

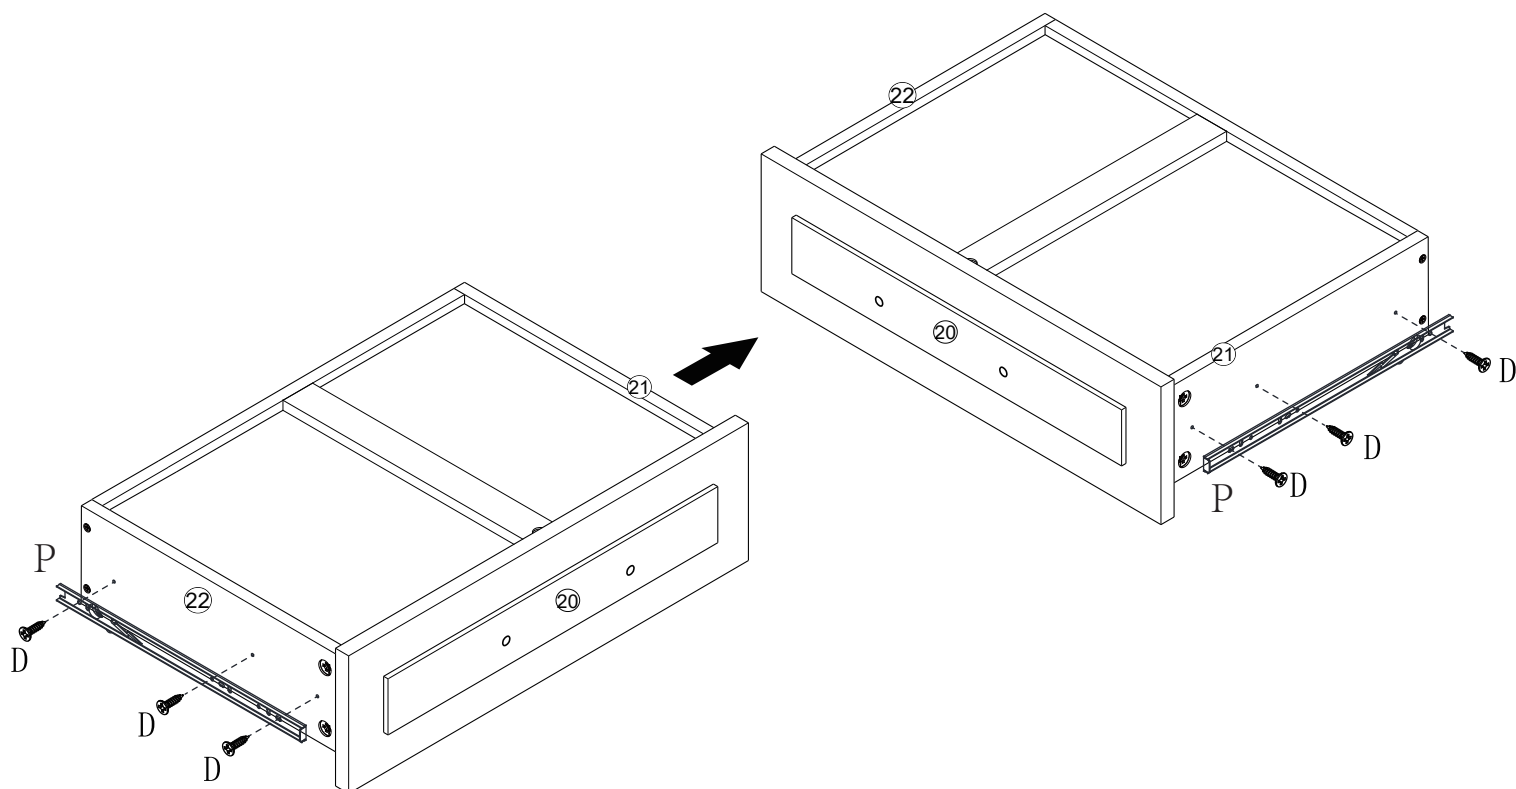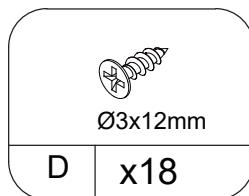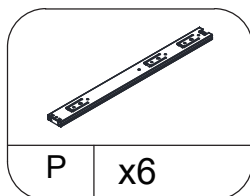
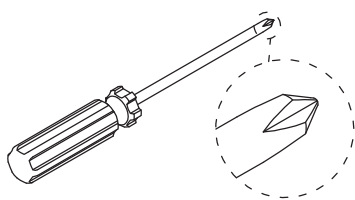


x3

REMARK:




STEP 28


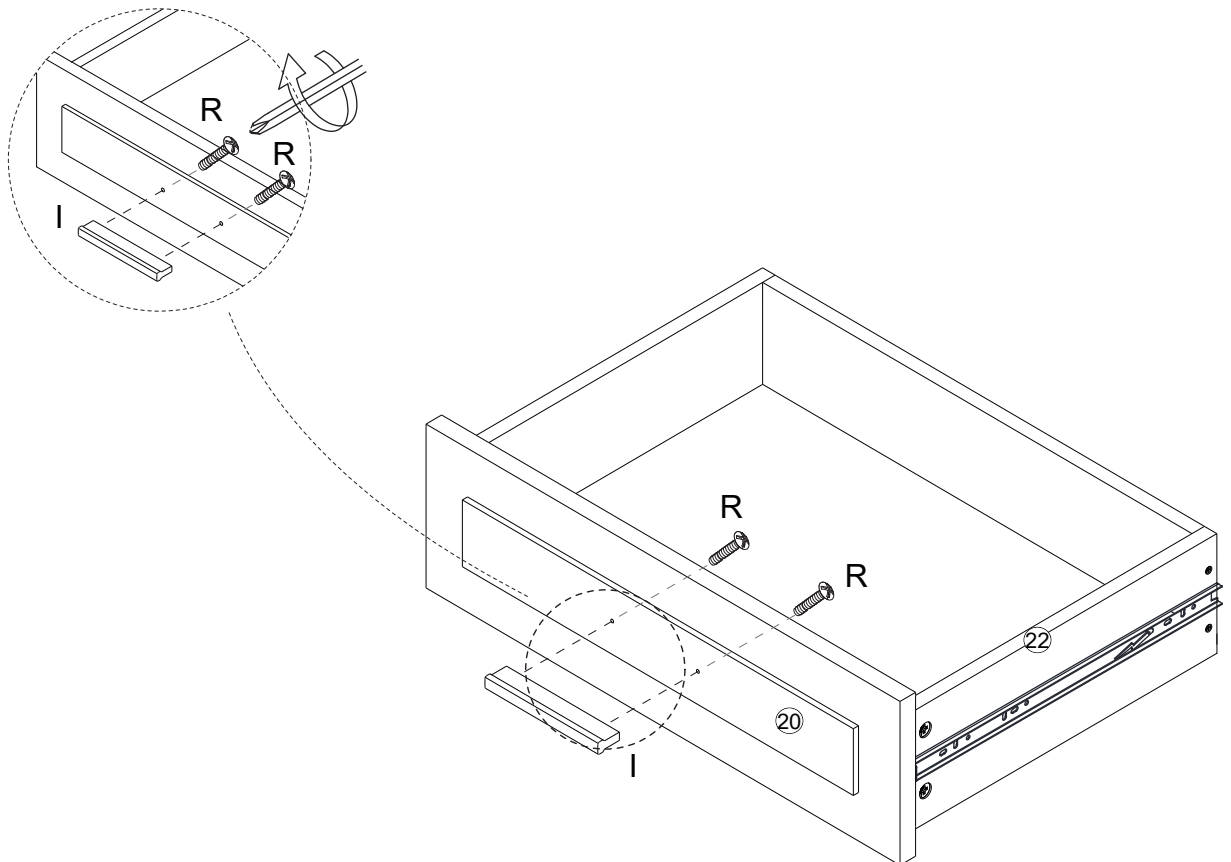
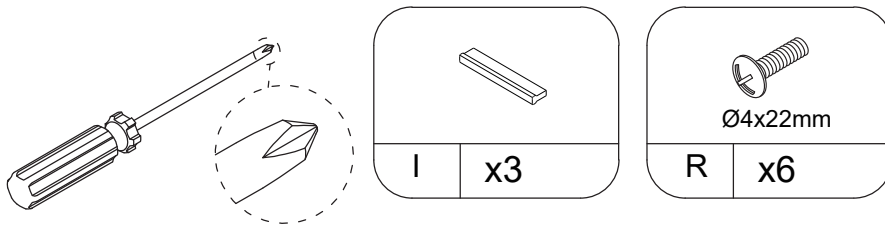


x3




STEP 29

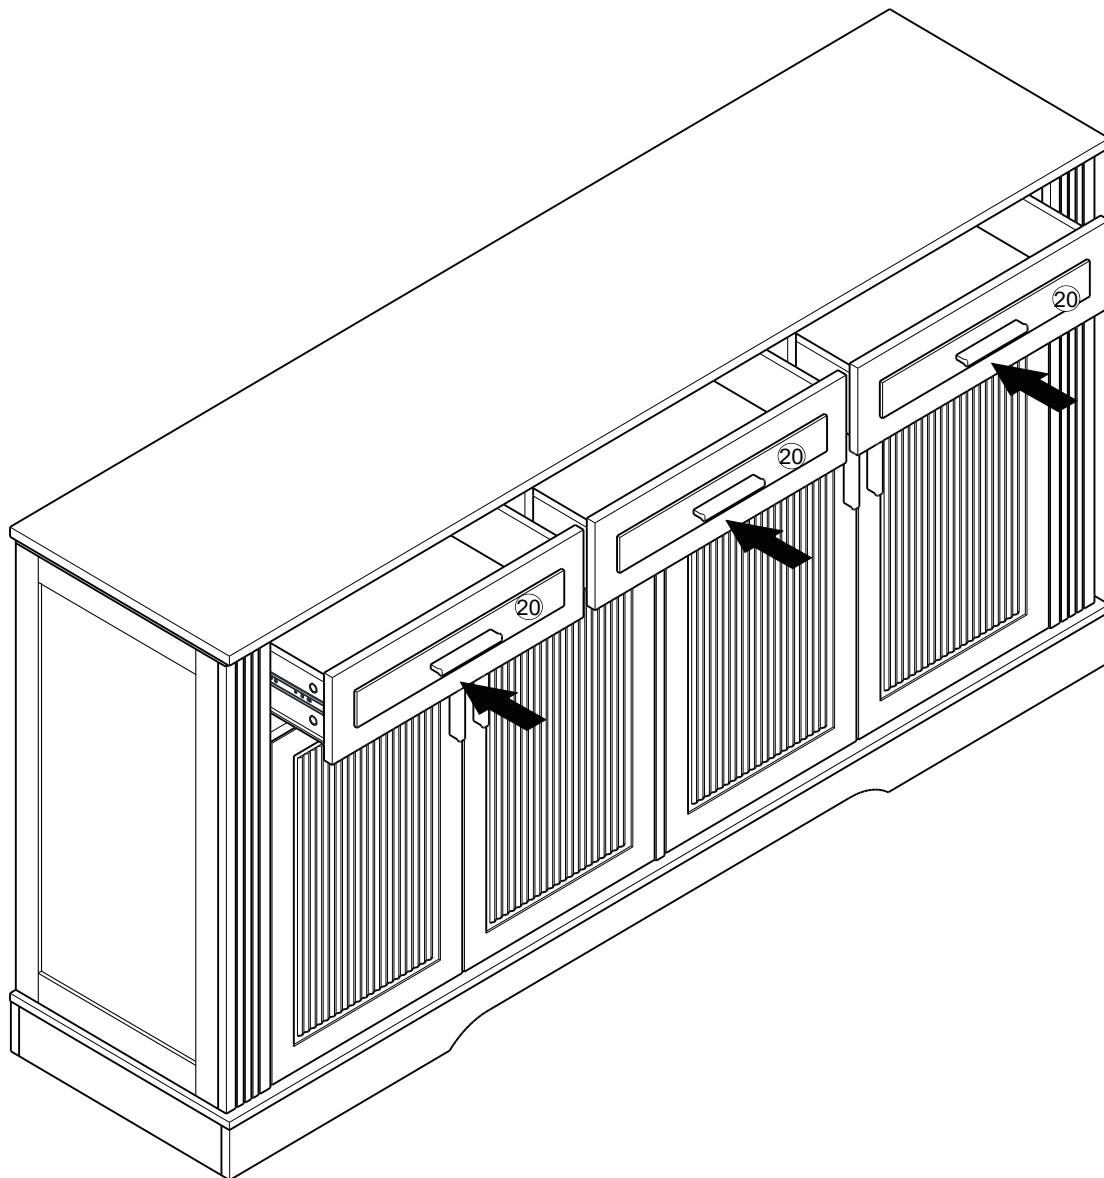

STEP 30

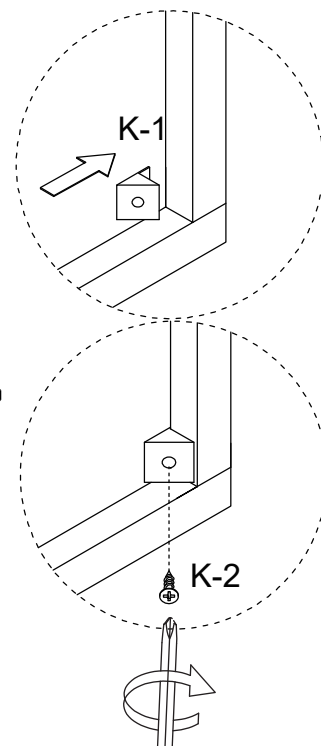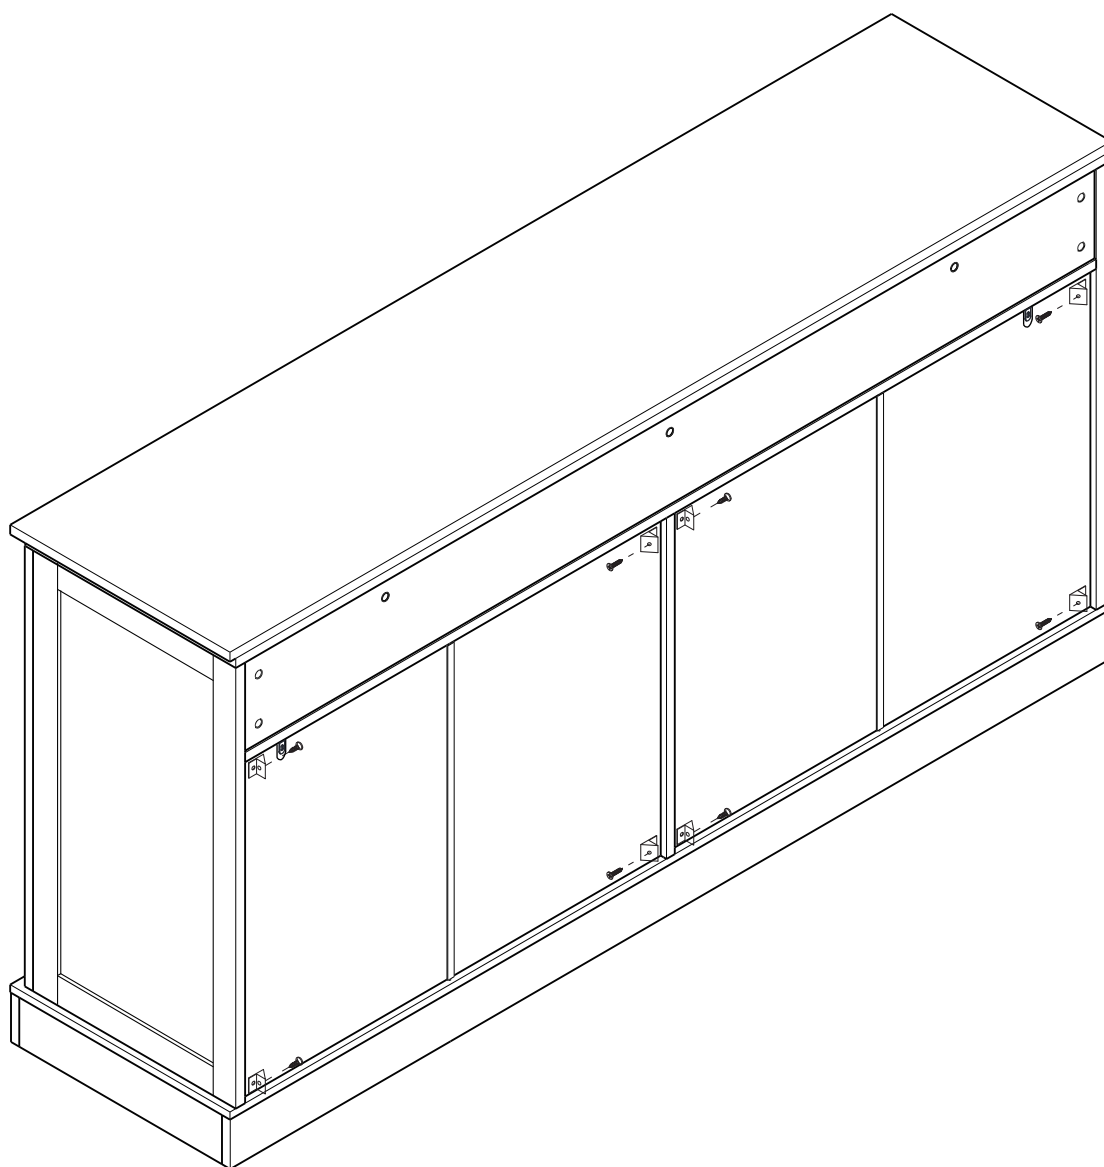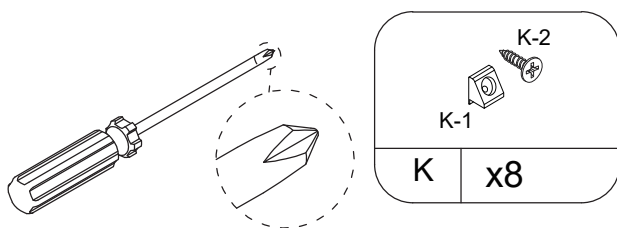

STEP 31

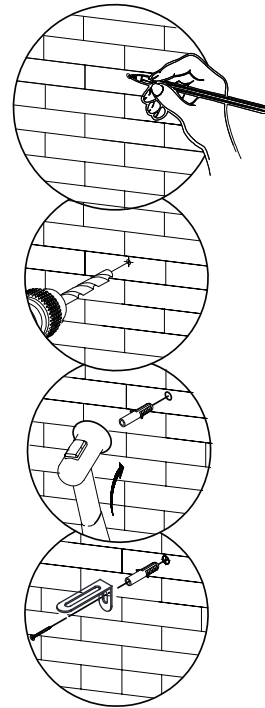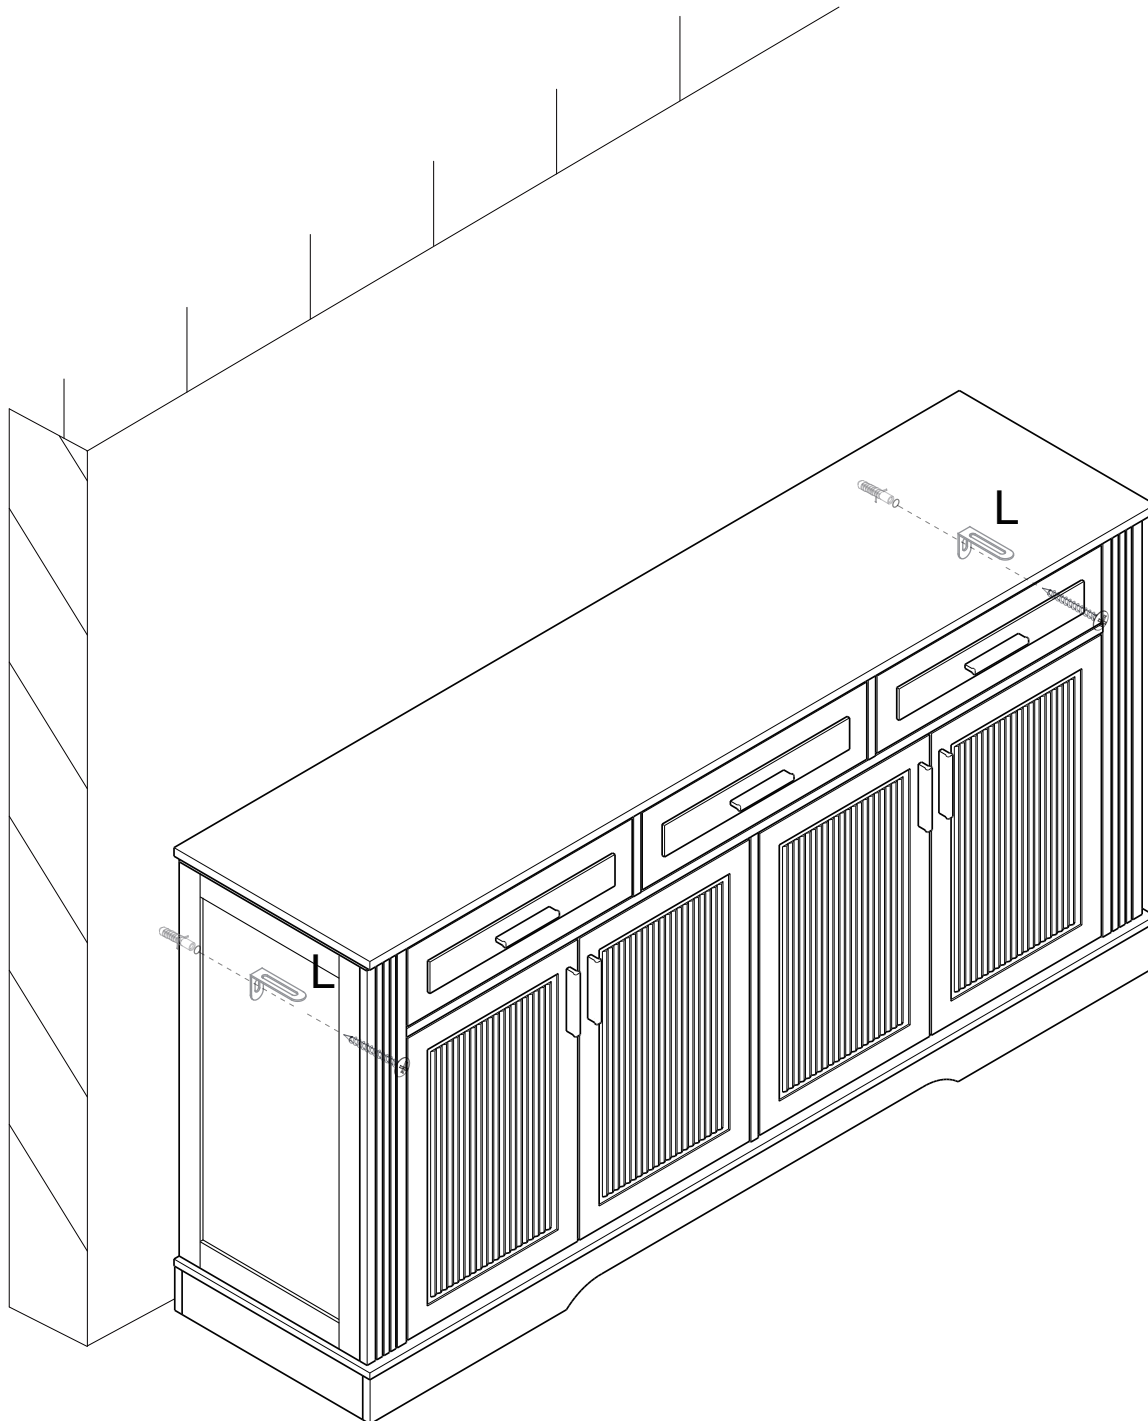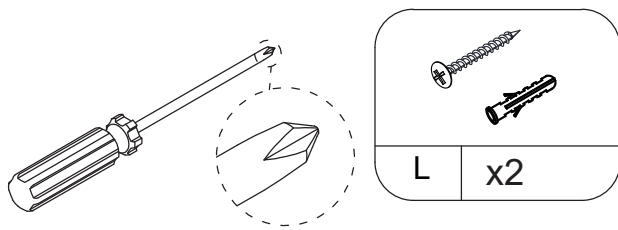

STEP 32

