

WARNING!!

Children have died from furniture tipover. Tip restraints have been included with this product; you must install the tip restraints according to these instructions in order to minimize the risk of furniture tipping.

NEVER allow children to climb or hang on furniture, including drawers or cabinet doors.

In addition to installing the restrains , to help prevent tip-over

1. Do not stand on the product.



WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:












- ALWAYS install anti-tip device provided
- For use with televisions weighing 88.18lb(40kg) or less. Use with heavier televisions may result in instability causing tip-over resulting in death or serious injury.
- NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label. Do not remove!

Assembly Instructions


Caution : You must read this before you proceed

Care & Maintenance

















- ⊘  ● Not for commercial use. For residential use only.
- ✓  ● Furniture may scratch floors. We recommend using furniture pads to protect your floors.
- ⊘  ● Do not put hot items directly on furniture surface.
- ⊘  ● Do not clean furniture with harsh cleansers or polish.
- ⊘  ● Do not place furniture under direct sunlight.
- ⊘  ● Do not place furniture near heating or cooling vents.
- ⊘  ● Do not write on furniture without a padded barrier to protect the surface.
- ⊘  ● Do not place furniture outside . For indoor use only.
- ⊘  ● Stains may be removed with mild soap solution and damp cloth.
- ⊘  ● Children should not climb or jump on the furniture.
- ✓  ● Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in carton for hardware packs and legs.



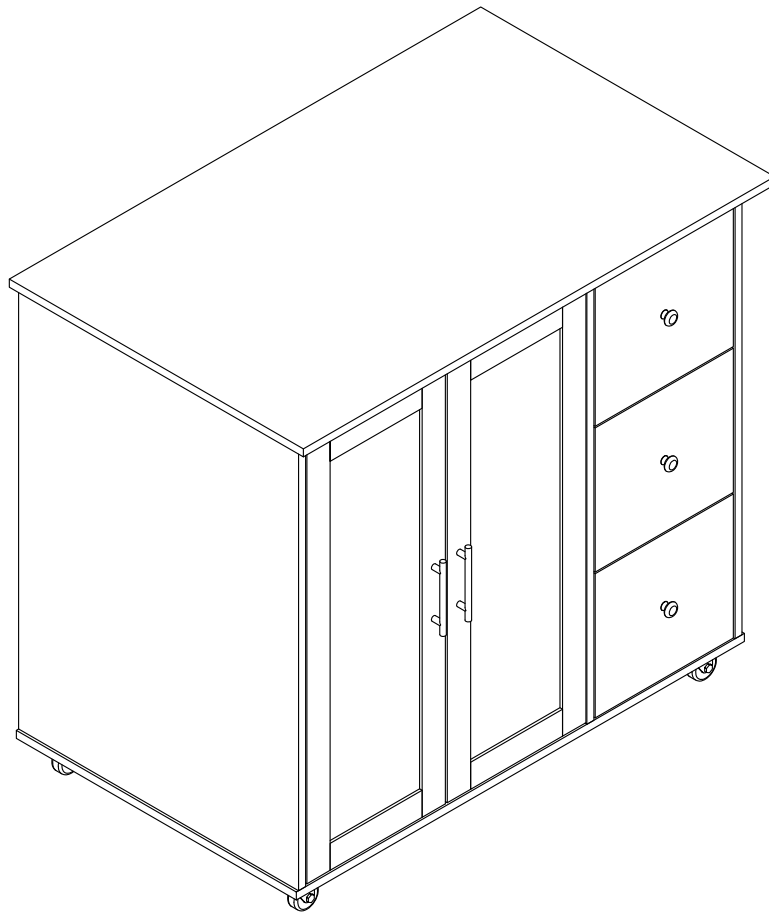






















Kitchen Cart



Parts List



Label	Picture	Description	QTY
1		Top panel	1
2		Bottom panel	1
3		Left side panel	1
4		Vertical partition	1
5		Right side panel	1
6		Partition	1
7		Left door panel	1
8		Right door panel	1
9		Drawer panel	3
10		Left side panel of drawer	3
11		Right side panel of drawer	3
12		Drawer back panel	3
13		Drawer bottom plate	3
14		Back pull strip	1
15		Left backboard	2
16		Right backboard	1

Hardware

Label			QTY
Ⓐ		Two-in-one screw	25
Ⓑ		Eccentric Wheel	13
Ⓒ		Dowel	12
Ⓓ		3.5x14mm	76
Ⓔ		Single-hole handle	3
Ⓕ		4*30mm	12
Ⓖ		Long pull handle	2
Ⓗ		4*18mm	7
Ⓙ		4*20mm	2
Ⓚ		Large hinge	4
Ⓛ		Backplate buckle	18
Ⓜ		Shelf bracket	4
Ⓝ		3x12mm	18
Ⓟ		Universal wheel (without brake)	3
Ⓠ		Universal wheel (with brake)	2
Ⓡ	R1  R2 	Magnetic door stopper	2
Ⓢ		Towel rack	1
Ⓣ		Wood screw	9
ⒸⓁ ⒸⓇ ⒹⓁ ⒹⓇ	350mm    	Base slide rail	3
Ⓤ		Dot Sticker	25
Ⓥ		Eccentric Wheel	12

Assembly Preparation

Before
Beginning
Assembly:

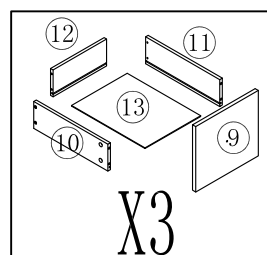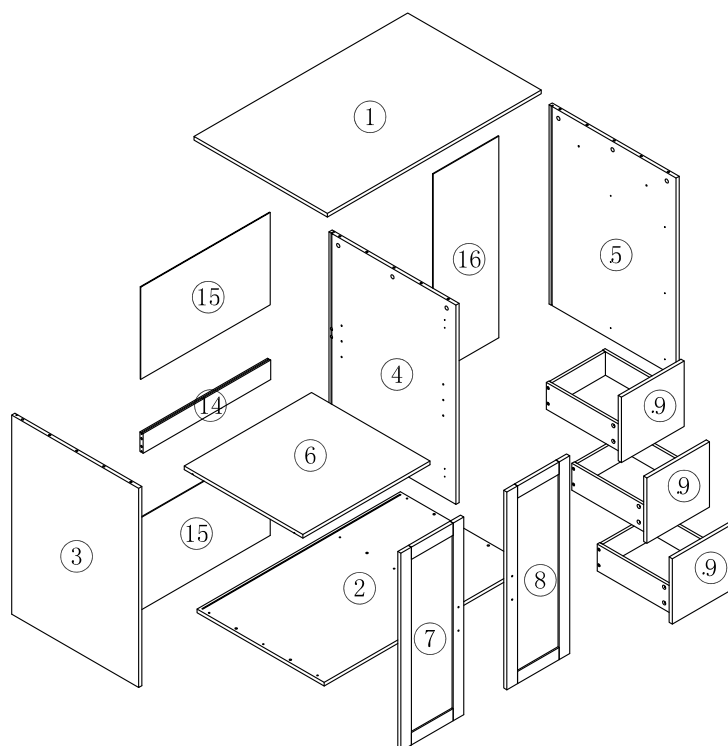

A		X25
B		X13
C		X12
D		X76
E		X3
F		X12
G		X2
H		X7
I		X2
K		X4
L		X18
M		X4
N		X18
P		X3
Q		X2
R		X2
S		X1
T		X9
CL		X3
CR		
DL		
BR		
U		X25
V		X12



• Read instructions, cover to cover-



• Have 2 adults on hand for assembly-



• Do not assemble on flooring or carpet-




• Assemble on a clean non-marring surface (packing foam)-



• Save all packaging until finished-

Assembly Steps


Overview

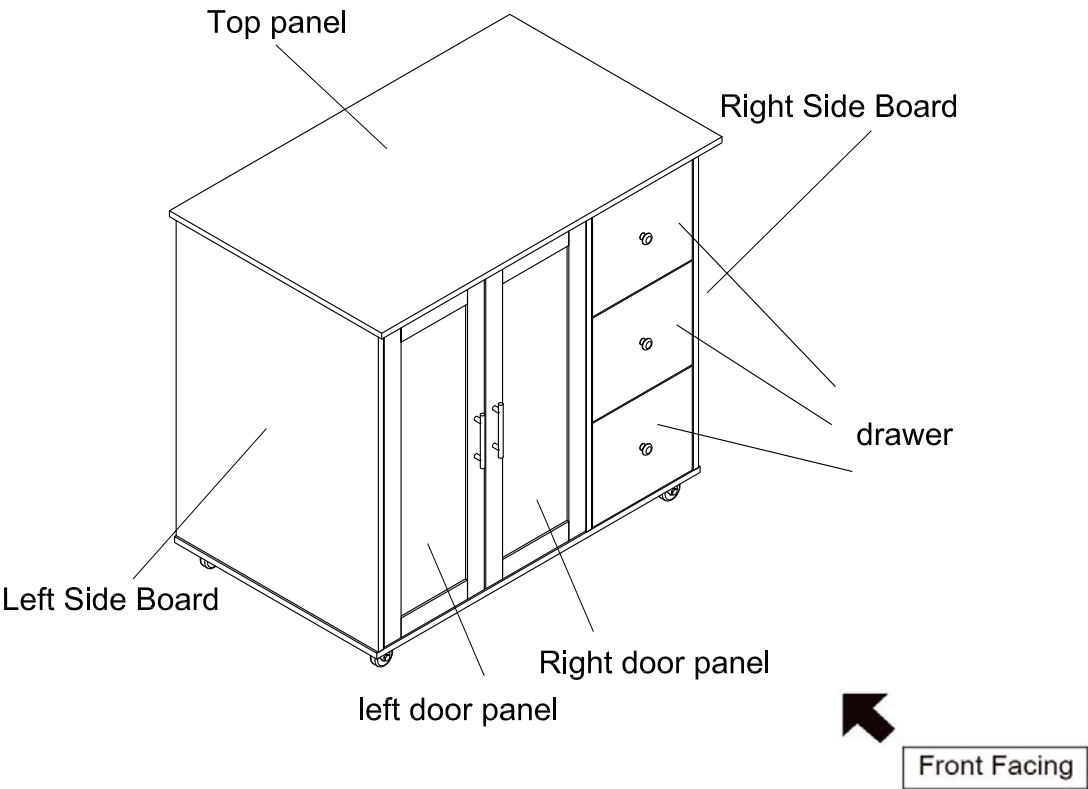

This Cabinet has multiple parts and may require up to 50 minutes to assemble. To give you an overview of the cabinet parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Step 1


Dx4
R2x2
Ax9

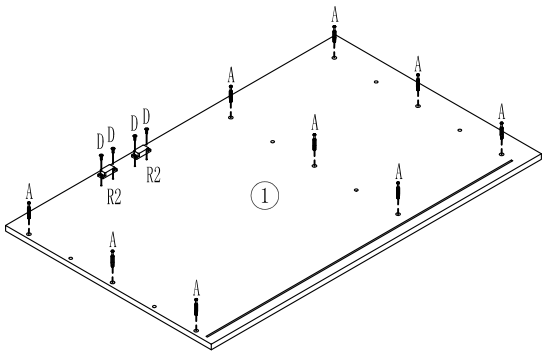

Install A on board 1, and install R2 with D on board 1.

Step 2

Jx2
Sx1
Dx6
CRx3
Cx8
Ax2

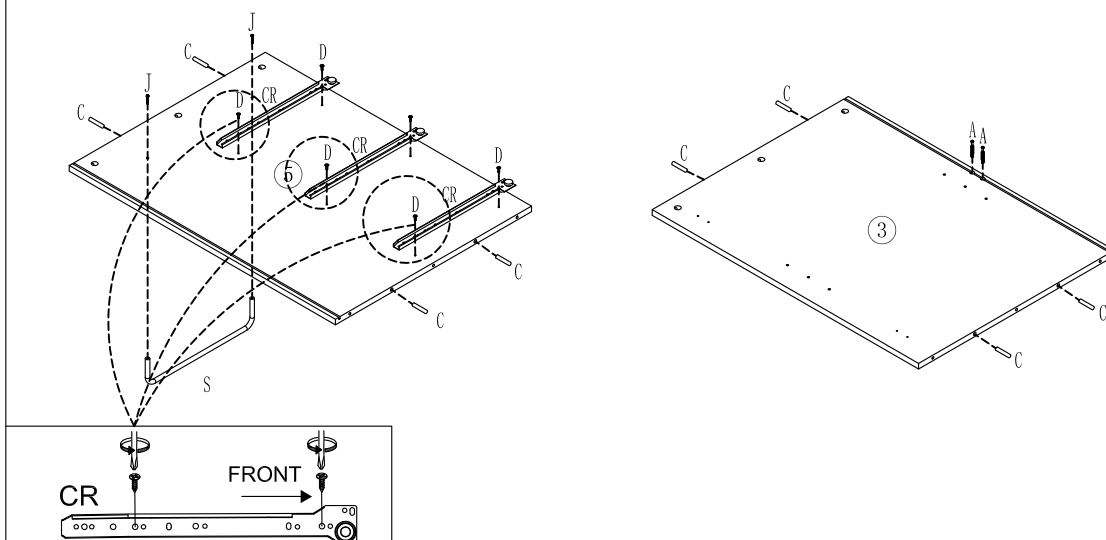


Install C on board 5, install CR with D on board 5,
and install S with J on board 5.

Install C on board 3, and install A on board 3.

Step 3



Dx6
CLx3
Cx4
Ax2

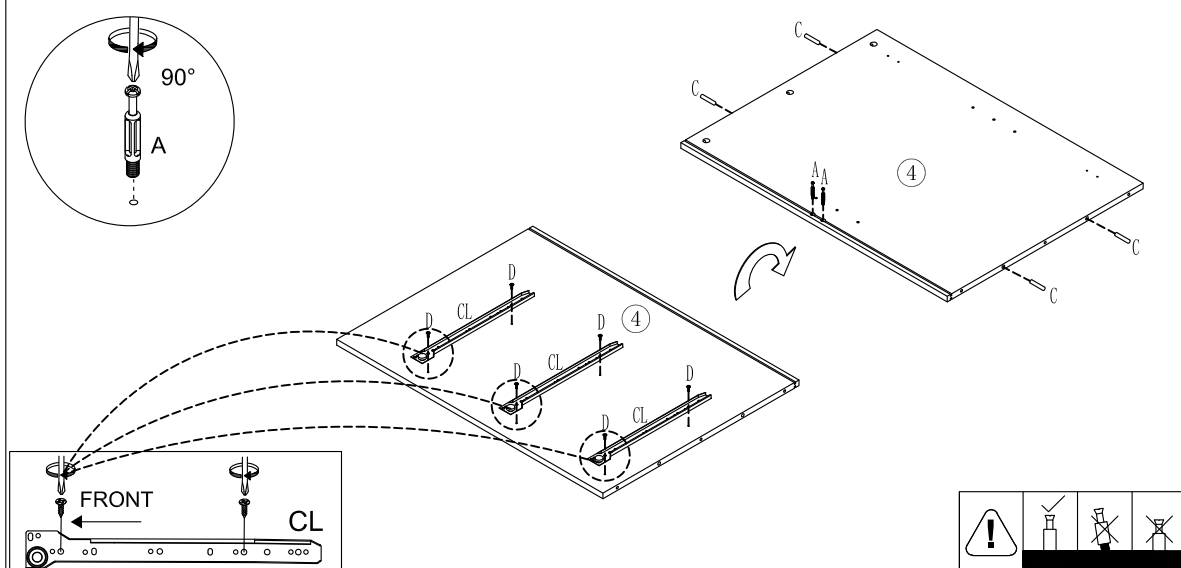

First, install CL with D on board 4,
then flip the board over and
install A+C on the other side of board 4.

Step 4



Bx2

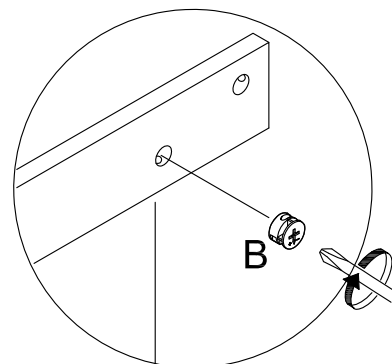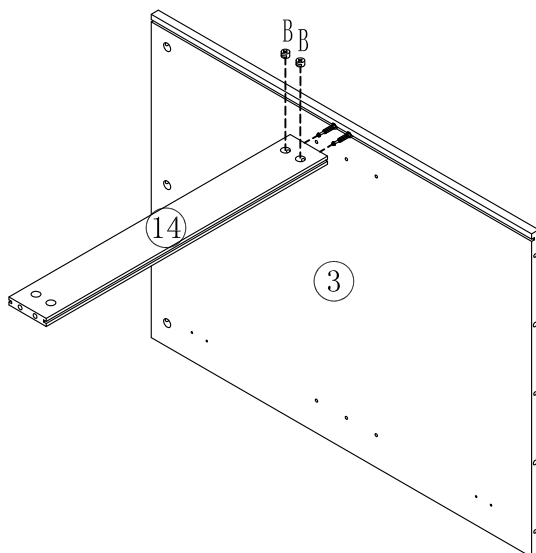

Connect plate 14 to plate 3 using B.


Step 5

Bx2

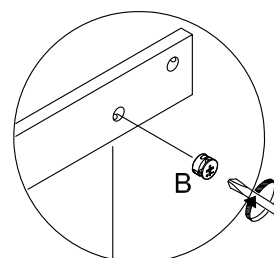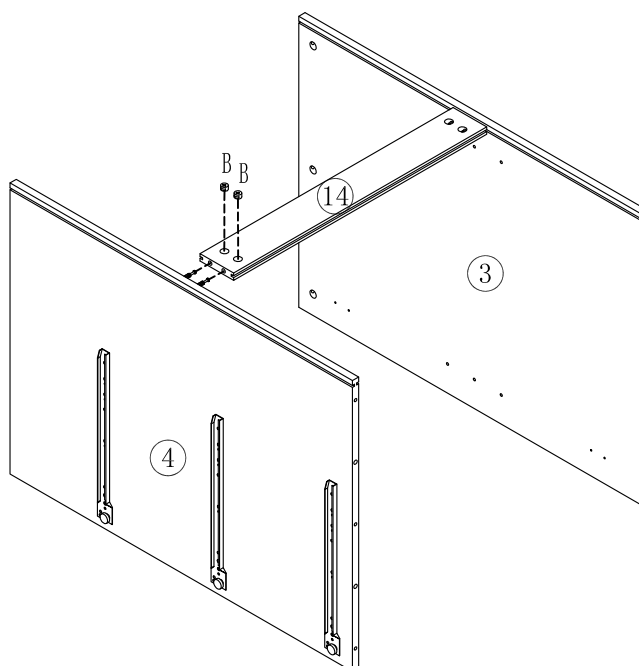

Connect plate 14 to plate 4 using B.


Step 6

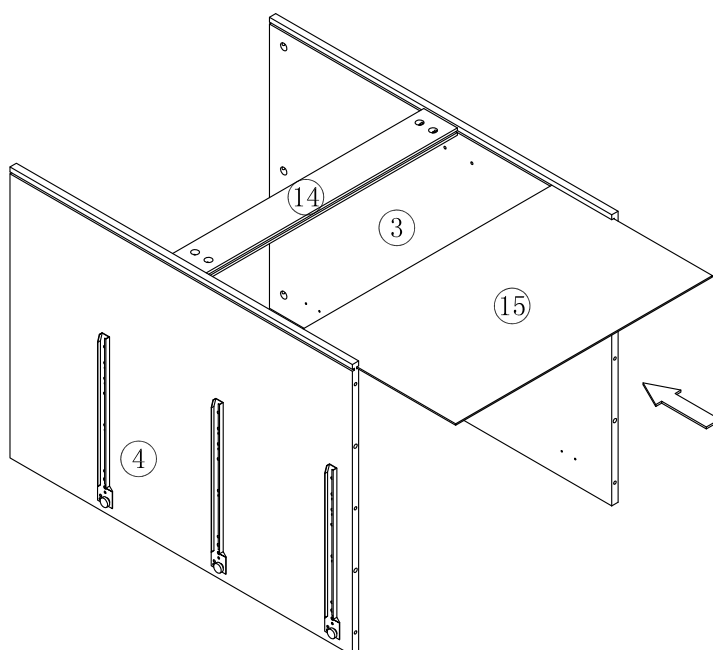

Insert the backplane board number 15 into the corresponding slot.

Step 7


Tx9

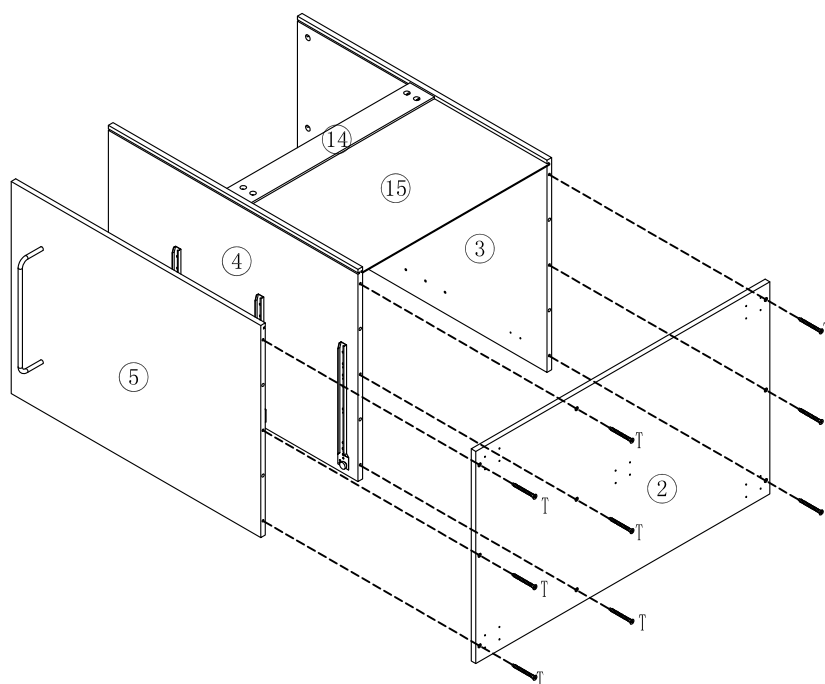

Use T to connect plate 2 with plate 5/plate 4/plate 3 together.


Step 8

Dx20
Qx2
Px3

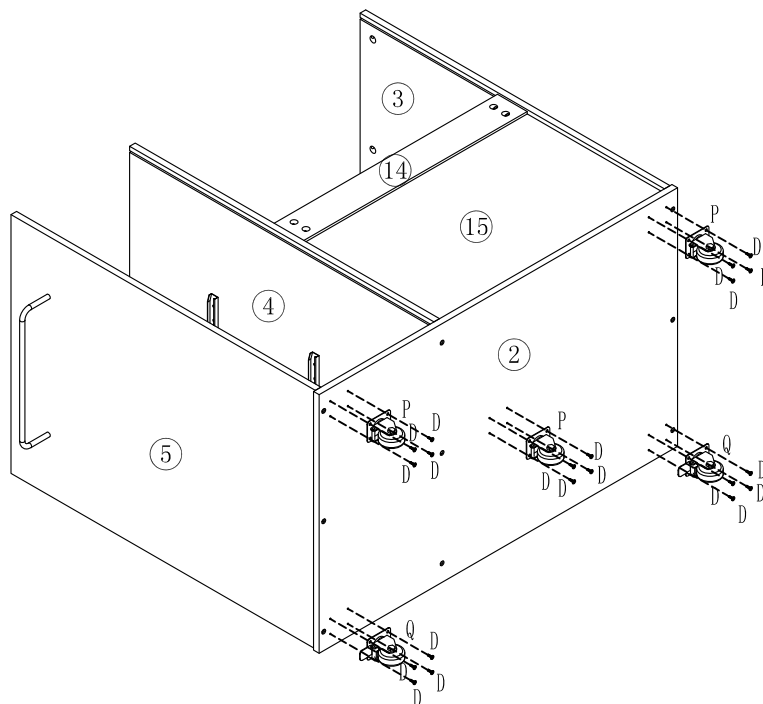

Install P and Q onto Board 2 using D.



Step 9

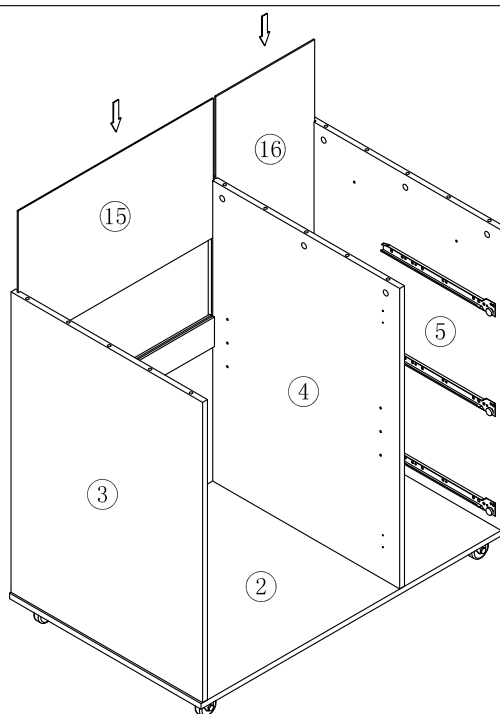

Insert backplane 15 and backplane 16 into their respective slots.

Step 10

Bx9

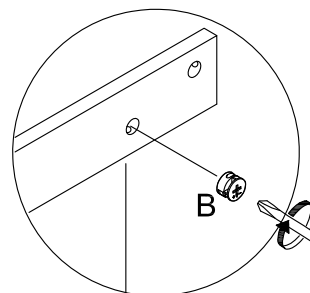
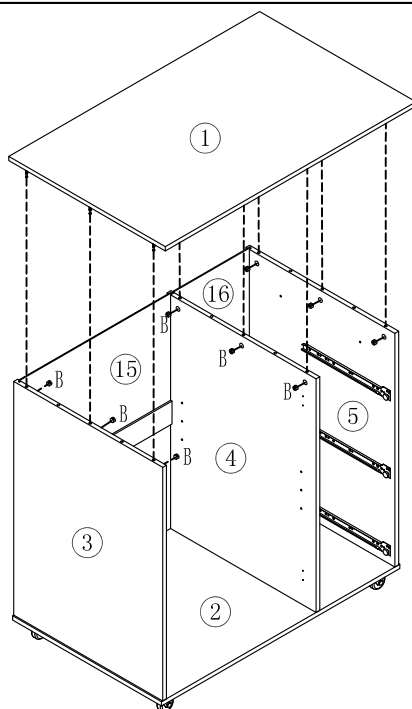


Connect plate 1 with plate 3, plate 4, and plate 5, using B.

Step 11

Ax12
Ex3
Fx12
Hx3


X3

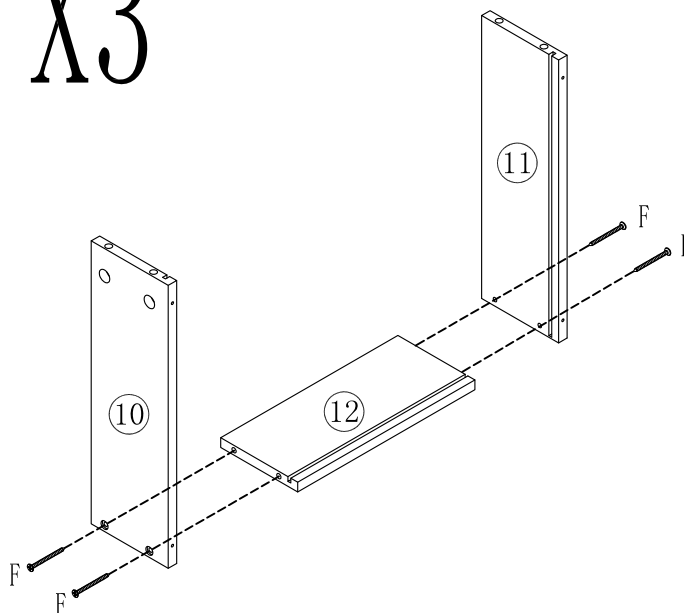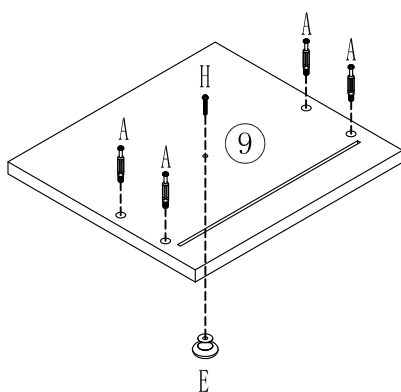

Install A onto board 9, and use H to install E onto board 9.
Use F to connect plate 10 and plate 11 to plate 12.

Step 12


Vx12

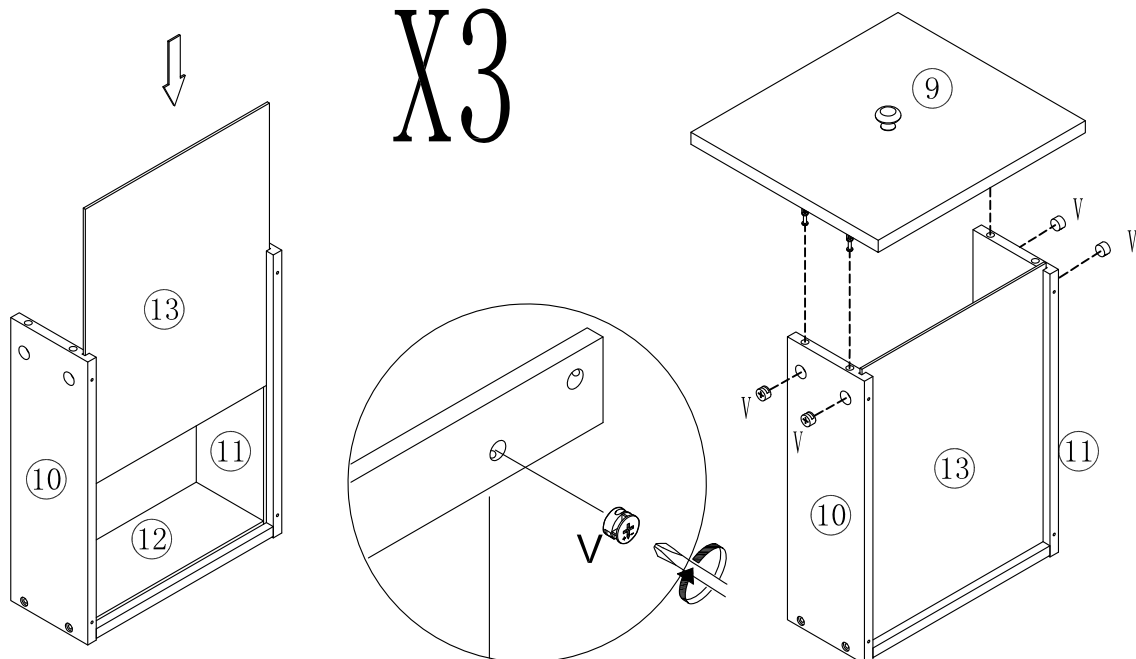

Insert the backplane 13 into the corresponding slot.
Connect plate 9 to plates 10 and 11 using V.


Step 13

DLx3
DRx3
Dx12

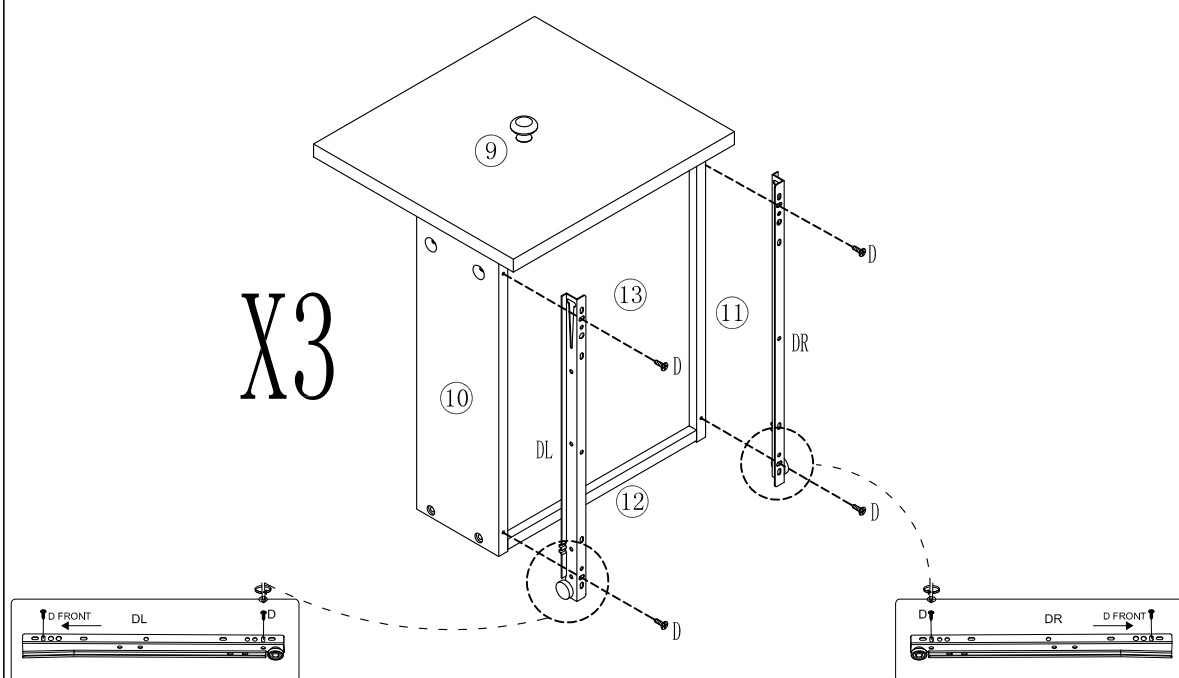

Connect DL and DR to boards No. 10 and No. 11 using D.


Step 14

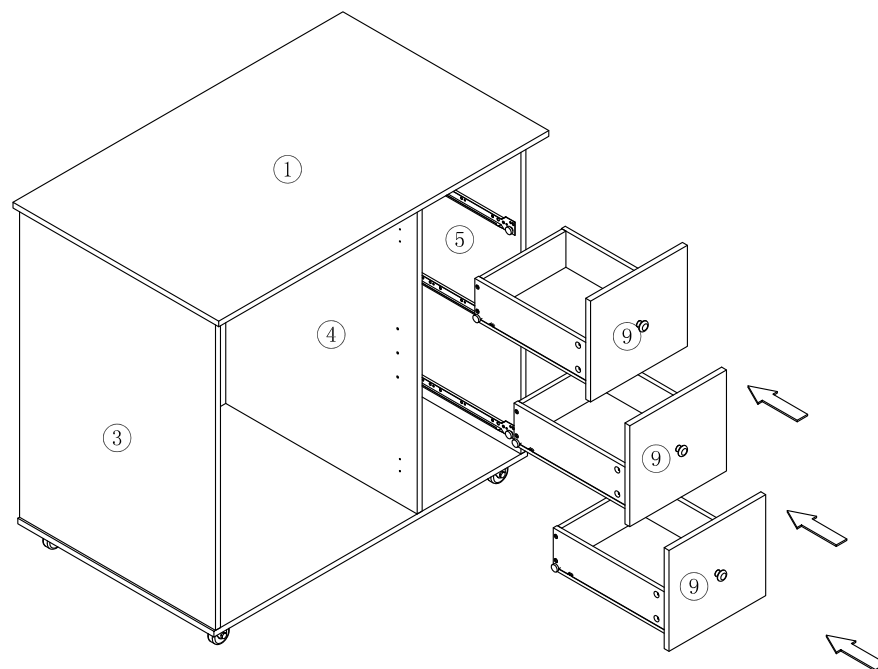

Place the drawer into the track to complete the slide rail installation.


Step 15

Mx4

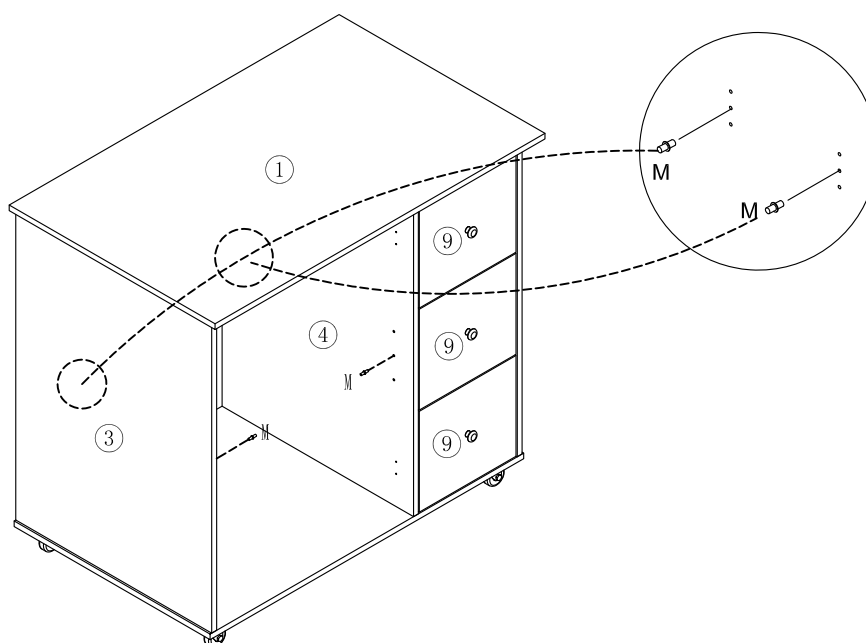

Install M onto Board 3 and Board 4.


Step 16

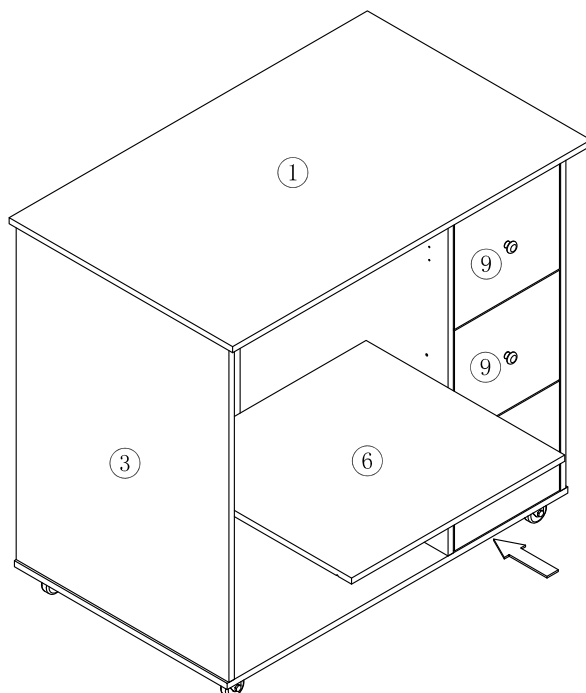

Install the No. 6 movable partition into its corresponding position.

Step 17


R1x2
Dx12
Gx2
Hx4
Kx4

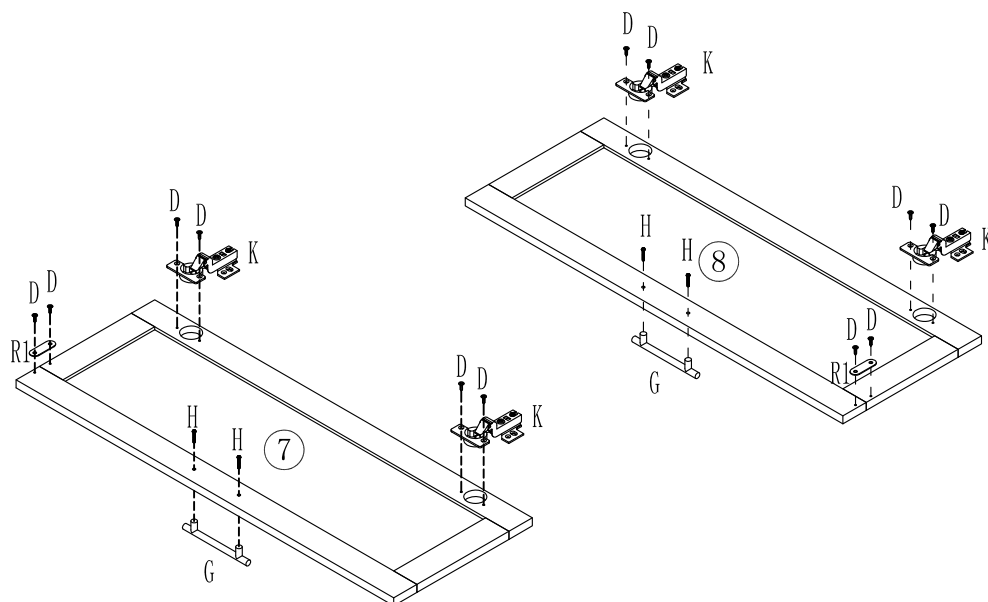

Install R1 with D onto door panel No. 7 and door panel No. 8.
Install K with D onto door panel No. 7 and door panel No. 8.
Fix G onto board 7 and board 8 with H.

Step 18


Dx16

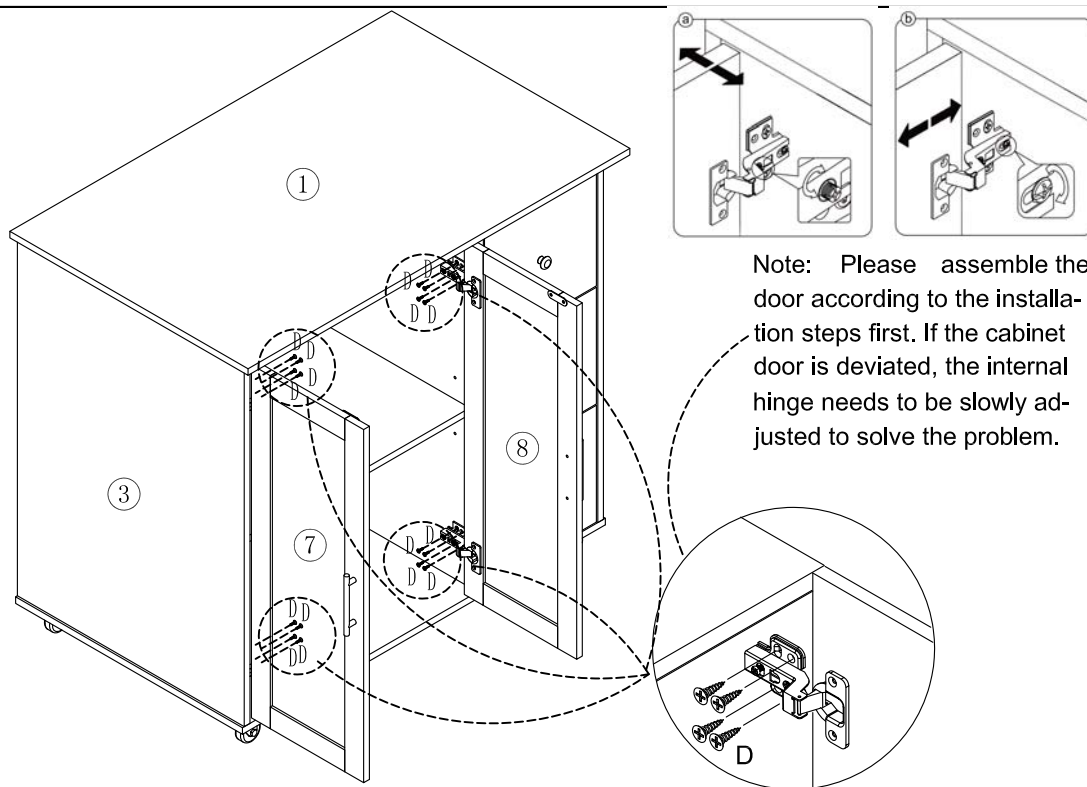

Install the door panel No. 7 and door panel No. 8 onto the side panel No. 3 and vertical partition No. 4 using D.

Step 19


Lx18
Nx18

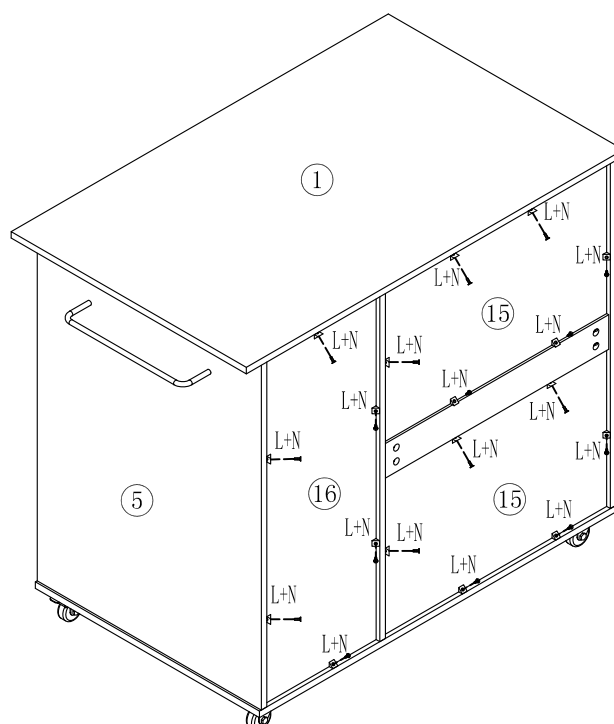

Fix the backboard with L and N.

Step 20

Ux25

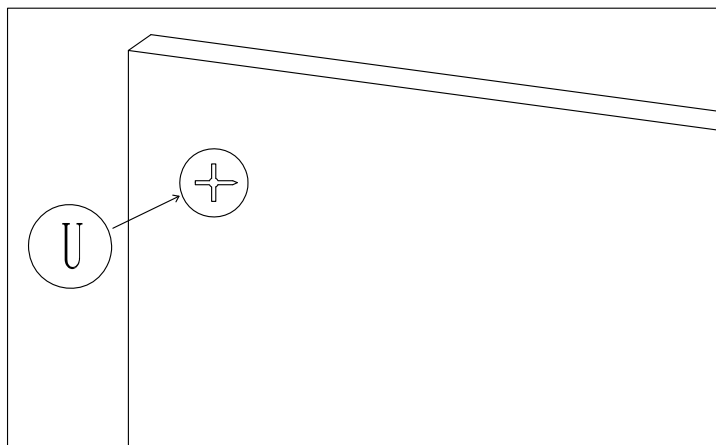

After installing the product, stick the number U on the perforated position