


ASSEMBLY INSTRUCTIONS

FULL LOFT BED WITH DESK, WARDROBE, STAIRS AND USB

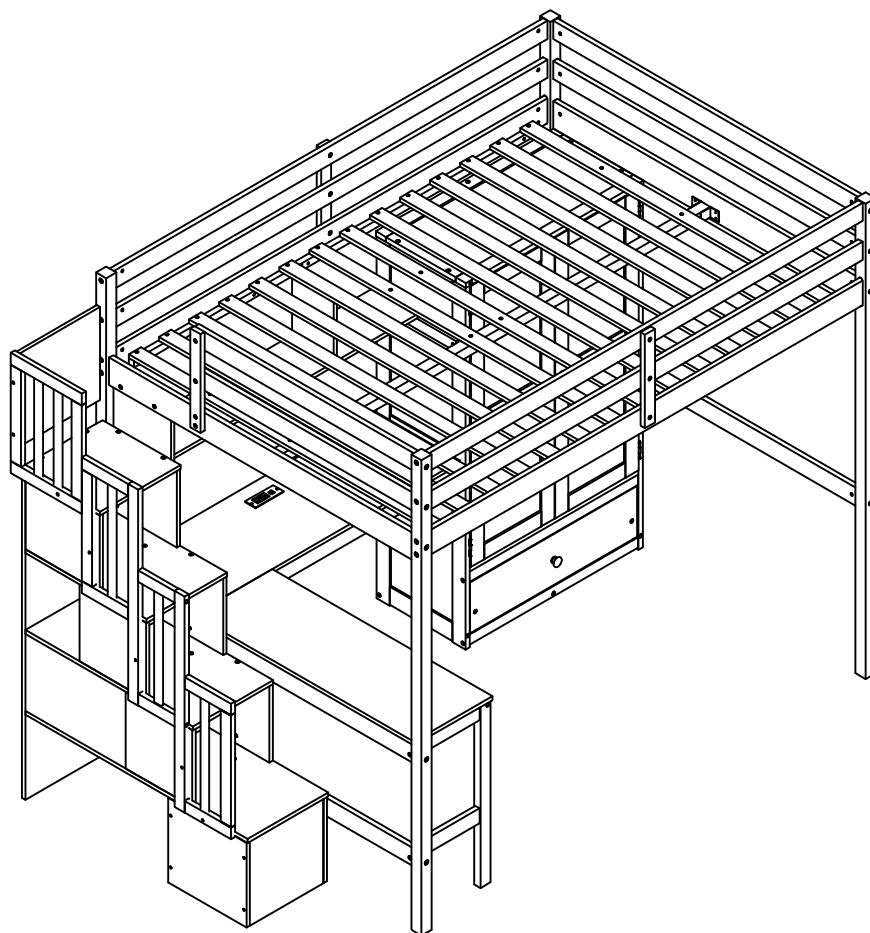

SA11840



SAFETY WARNING




1. This bed is designed for use only mattress (es) meeting the following specifications on the upper bunk:

Up bed (Bunk bed and tribed included)

Bed type	Length	Width	Thickness
Full Standard	74"-75"	54"	6" max










2. Replacement parts, including additional guardrails, maybe obtained from any of our dealers of GigaCloud Technology , USA /18961 ARENTH AVENUE,CITY OF INDUSTRY, CA, 91748
3. Follow the information on the warnings appearing on the upper bunk bed end structure and on the carton. Do not remove warning label from bed.
4. Always use the recommended size mattresses or mattress supports, or both, to help prevent the likelihood of entrapment or falls.
5. Surface of mattress must be at least 5" (127mm) below the upper edge of guardrails.
6. Do not allow children under 6 years of age to use the upper bunk.
7. Periodically check and ensure that the guardrail, ladder, and other components are in their proper position, free from damage, and that all connectors are tight.
8. Do not allow horseplay on or under the bed and prohibit jumping on the bed.
9. Always use the ladder for entering and leaving the upper bunk.
10. Do not use substitute part. Contact the manufacture or dealer for replacement part.
11. Use of a night light may provide added safety precaution for a child using the upper bunk.
12. Always use guardrails on both long sides of the upper bunk. If the bunk bed will be placed next to the wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and wall.
13. The use of water or sleep flotation mattresses is prohibited.
14. STRANGULATION HAZARD - Never attach or hang items to any part of the bunk bed that are not designed for use with the bed; for example, but not limited to, hook, belts and jump ropes.
15. Keep these instruction for future reference.
16. Prohibit more than one person on upper bunk
17. We recommend assembling your bunk bed on the shipping carton to protect your floor or carpet.
18. Be certain all staples are out of the box before beginning assembly on the shipping carton.


Detail View

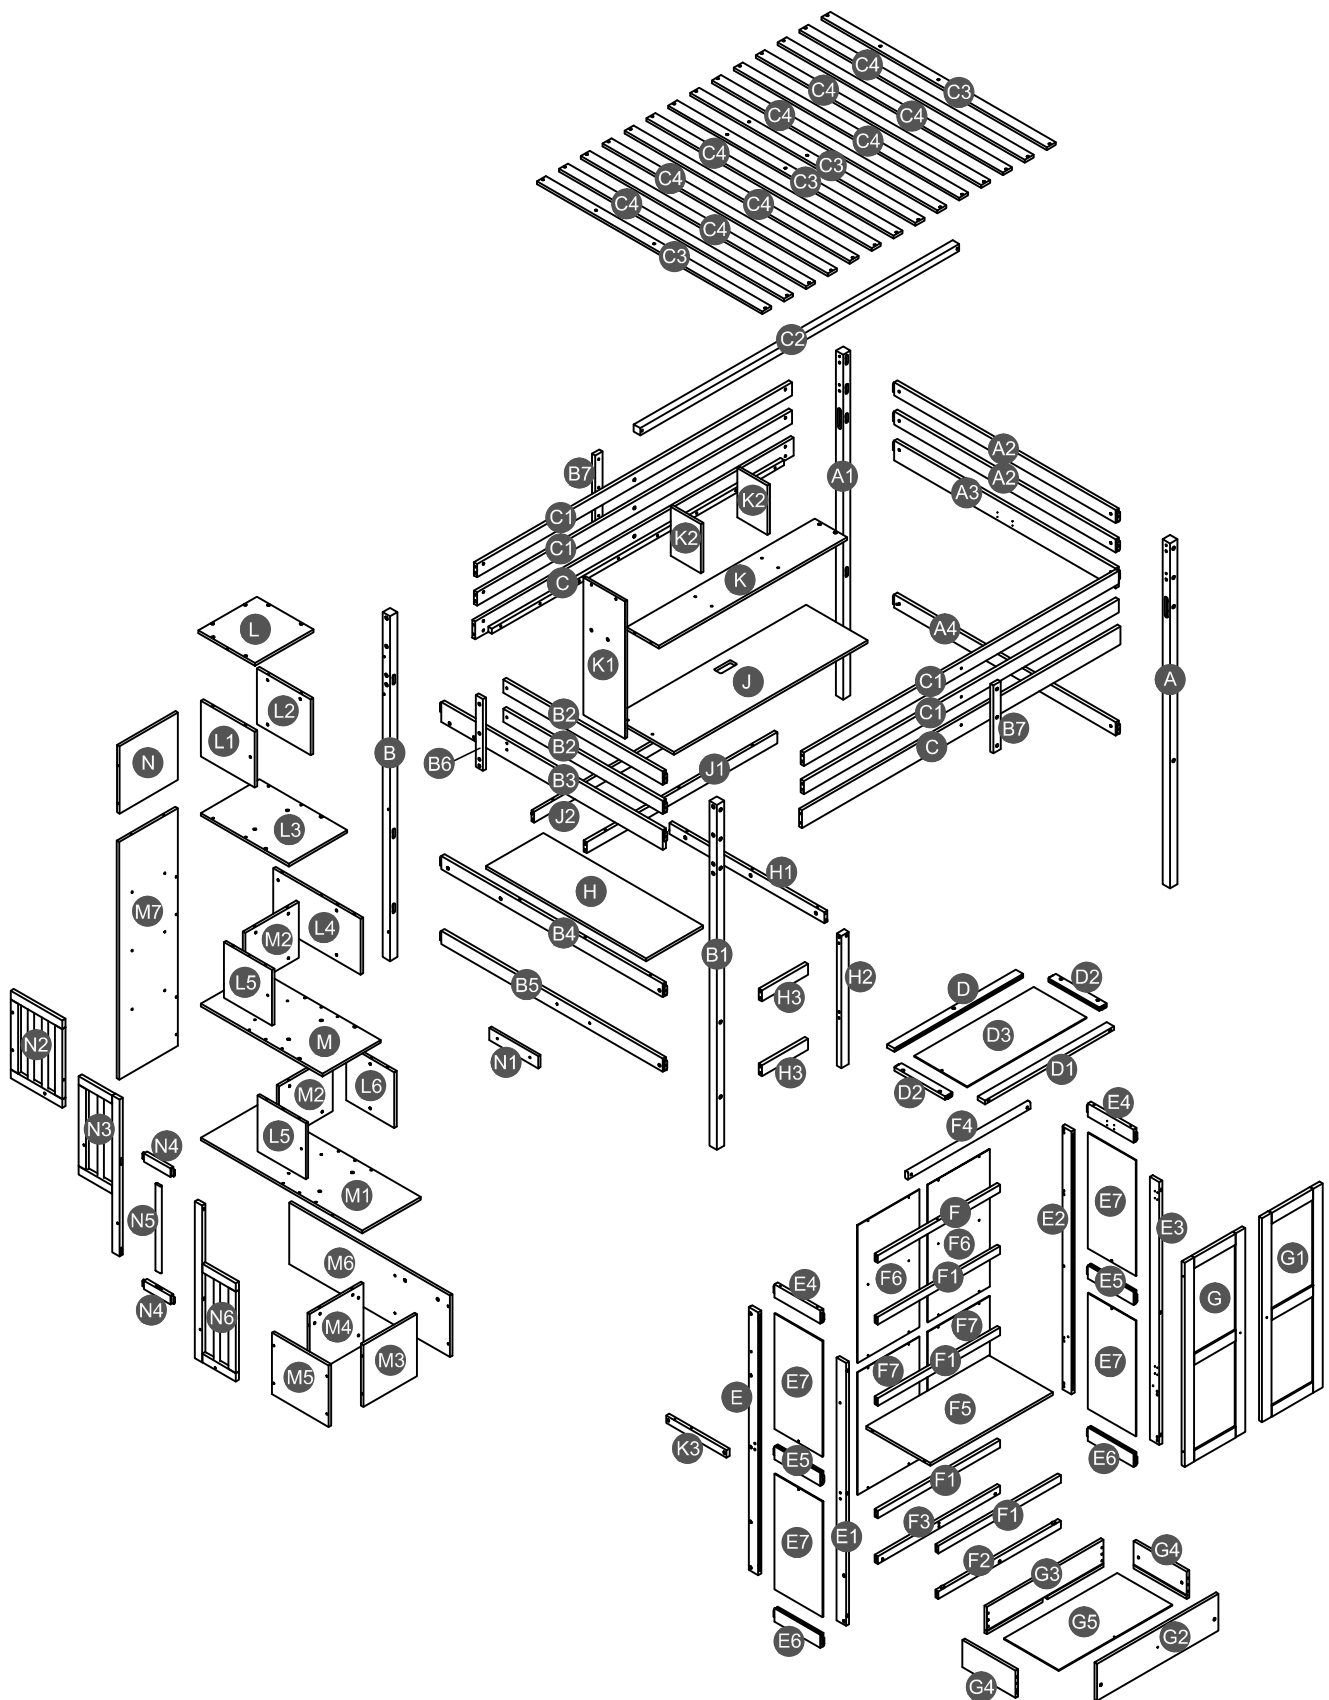










Part List

SA11840 (1-3)

A  Leg HB (Right front) - 1pc	A1  Leg HB (Right back) - 1pc	B  Leg FB (Left back) - 1pc
B1  Leg FB (Left front) - 1pc	B6  Vertical guard rail - 1pc	B7  Vertical guard rail - 2pcs
C  Side rail - 2pcs	C1  Long guard rail - 4pcs	C2  Lower support slat - 1pc
D  Upper horizontal bar (back) - 1pc	D1  Upper horizontal bar (front) - 1pc	D2  Upper horizontal bar (left/right)- 2pcs
E  Vertical bar (left back) - 1pc	E1  Vertical bar (left front) - 1pc	E2  Vertical bar (right back) - 1pc
E3  Vertical bar (right front) - 1pc	E4  Upper horizontal bar - 2pcs	E5  Divider horizontal bar - 2pcs
E6  Lower horizontal bar - 2pcs	E7  Side panel (Wardrobe) - 4pcs	H1  Apron - 1pc
H3  Horizontal bar (front) - 2pcs	J1  Apron (front) - 1pc	J2  Apron (back) - 1pc
K2  Divider panel - 2pcs	K3  Support bar - 1pc	L1  Upper left side panel - 1pc










L2  Upper right side panel - 1pc	L4  Upper center right side panel - 1pc	L5  Center left side panel - 2pcs
L6  Lower center right side panel - 1pc	N2  Guard rail -1pc	N3  Guard rail -1pc
N4  Guard rail - 2pcs	N5  Guard rail -1pc	N6  Guard rail -1pc

Hardware List SA11840 (2-3)









C3  Slats - 4pcs	C4  Slats - 10pcs	D3  Top panel (Wardrobe) - 1pc
F5  Shelf panel (Wardrobe) - 1pc	F6  Upper back panel (Wardrobe) - 2pcs	F7  Lower back panel (Wardrobe) - 2pcs
G  Door (left) - 1pc	G1  Door (right) - 1pc	G2  Drawer front - 1pc
G3  Drawer back - 1pc	G4  Drawer (left/right) - 2pcs	G5  Drawer bottom - 1pc
H  Top table - 1pc	K  Shelf panel - 1pc	K1  Side panel (left) - 1pc



Part List

SA11840 (3-3)


A2  Upper horizontal bar HB - 2pcs	A3  Divider horizontal bar HB - 1pc	A4  Lower horizontal bar HB - 1pc
B2  Upper horizontal bar FB - 2pcs	B3  Upper horizontal bar FB - 1pc	B4  Divider horizontal bar FB - 1pc
B5  Lower horizontal bar FB - 1pc	F  Upper horizontal bar (back) - 1pc	F1  Divider horizontal bar - 4pcs
F2  Lower horizontal bar (front) - 1pc	F3  Lower horizontal bar (back) - 1pc	F4  Hanging bar - 1pc
H2  Leg table (front) - 1pc	J  Top table - 1pc	L  Upper step ladder panel -1pc
L3  Upper center step ladder panel -1pc	M  Lower center step ladder panel -1pc	M1  Lower step ladder panel -1pc
M2  Center back panel - 2pcs	M3  Lower front panel - 1pc	M4  Lower back panel - 1pc
M5  Lower left side panel - 1pc	M6  Lower right side panel - 1pc	M7  Back panel - 1pc
N  Upper guard back - 1pc	N1  Support - 1pc	

Hardware List SA11840 (2-3)

1	 Ø10*40mm Wood dowel (8pcs)	2	 Ø10*20mm Wood dowel (1pc)	3	 Ø8*30mm Wood dowel (45pcs)
4	 (Ø15)1/4"*100mm Hex-Head bolts (16pcs)	5	 (Ø15)1/4"*80mm Hex-Head bolts (23pcs)	6	 (Ø12)1/4"*60mm Hex-Head bolts (80pcs)
7	 (Ø12)1/4"*40mm Hex-Head bolts (4pcs)	8	 (Ø12)1/4"*30mm Hex-Head bolts (17pcs)	9	 (Ø12)1/4"*15mm Hex-Head bolts (2pcs)
10	 1/4"*15 (9.5mm) Horizontal-Hole bolts(118pcs)	11	 (Ø12)1/4"*65mm Hex-Head bolts (16pcs)	12	 (Ø12)1/4"*50mm Hex-Head bolts (2pcs)
13	 (Ø12)1/4"*40mm Hex-Head bolts (13pcs)	14	 Ø4*30mm Wood screws (34pcs)	15	 Ø3.5*15mm Wood screws (61pcs)
16	 Ø3.5*15mm Wood screws (20pcs)	17	 (Ø13)1/4"*14mm Connect bolt (4pcs)	18	 116*40*27mm Metal bracket (2pcs)
19	 63*40*30mm Metal bracket (2pcs)	20	 40*17*17*1.6mm Metal bracket (1pc)	21	 42*12*1mm Metal magnet (2pcs)
22	 70*37*28mm (135°) Metal bracket (4pcs)	23	 140*41*21mm Stopper door (1pc)	24	 Ø38*31mm Pine Knob (3pcs)
25	 3/16"*25mm Ph zinc(Knob) (3pcs)	26	 24*28*28*2mm Metal bracket (2pcs)	27	 365*58*28 mm Lower slider drawer (1pc)

28  340*30mm	29  1500*125*47*43mm	30  Ø7"*35mm
Upper slider drawer (1pc)	Power outlet	Cam lock (16pcs)
31  Ø14*9mm Cam lock (16pcs)	32  (1/4")4.5*58mm Allen key (2pcs)	



ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)



PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !


STEP 1:

5		10		15		18	
6PCS		6PCS		4PCS		1PC	

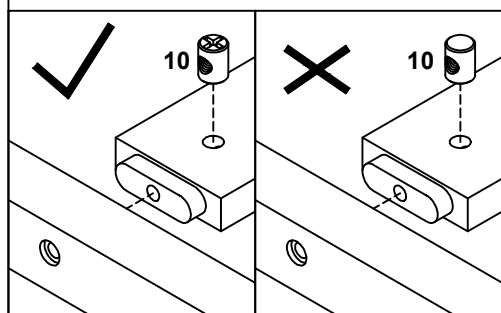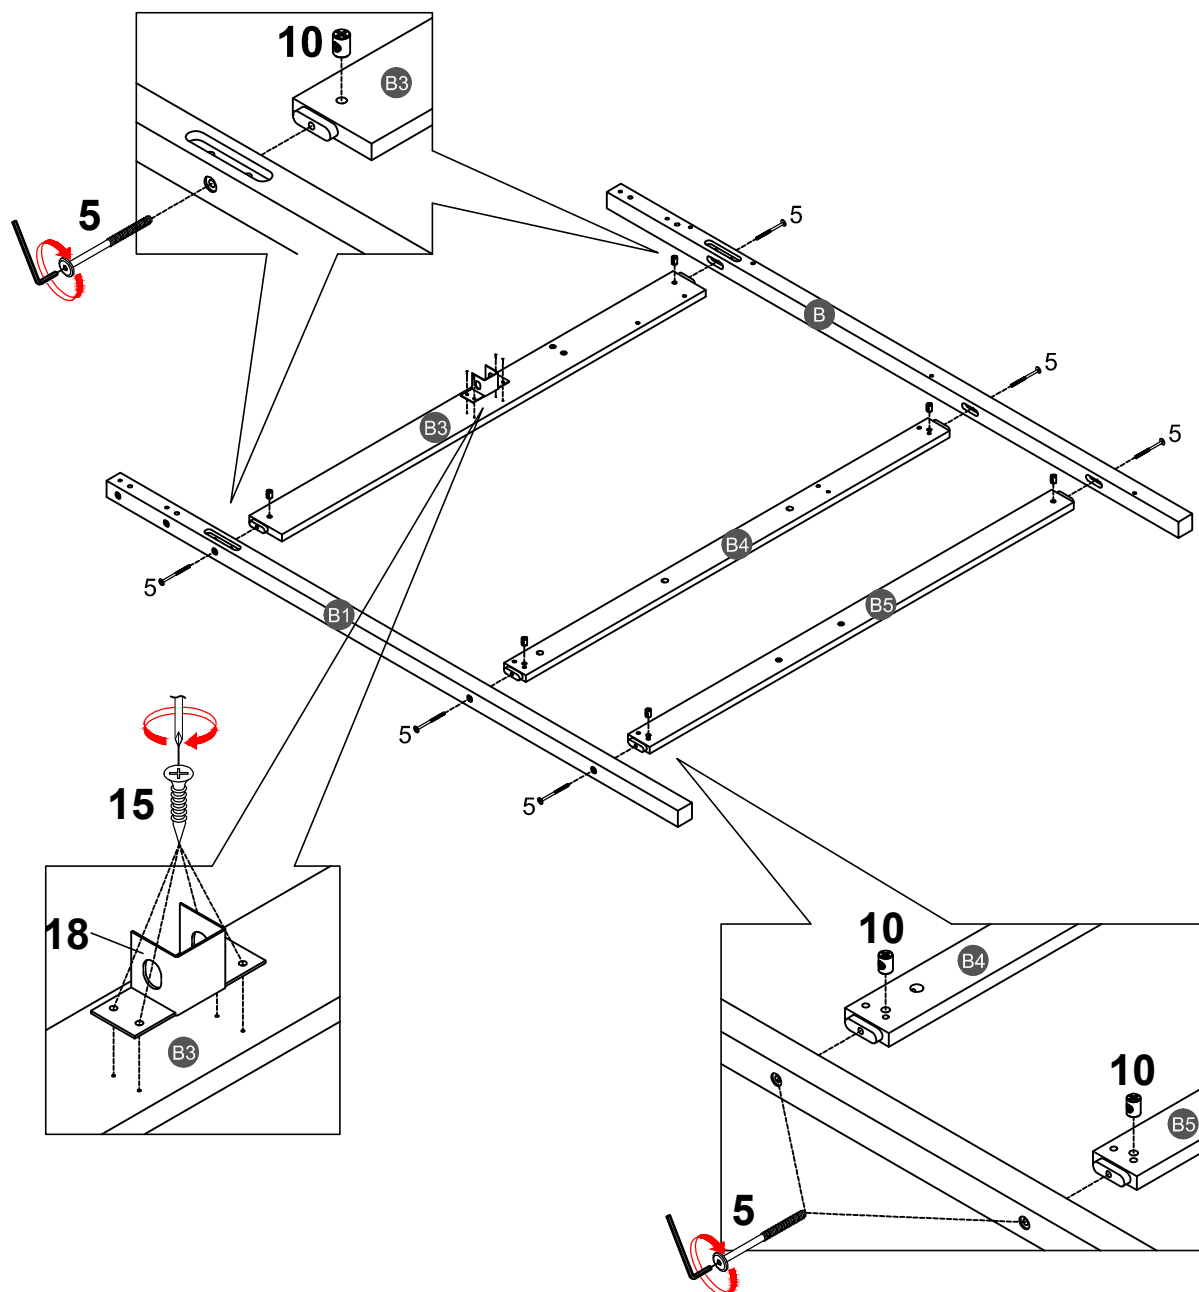


STEP 2:

5		10		15		18	
8PCS		8PCS		4PC		1PC	

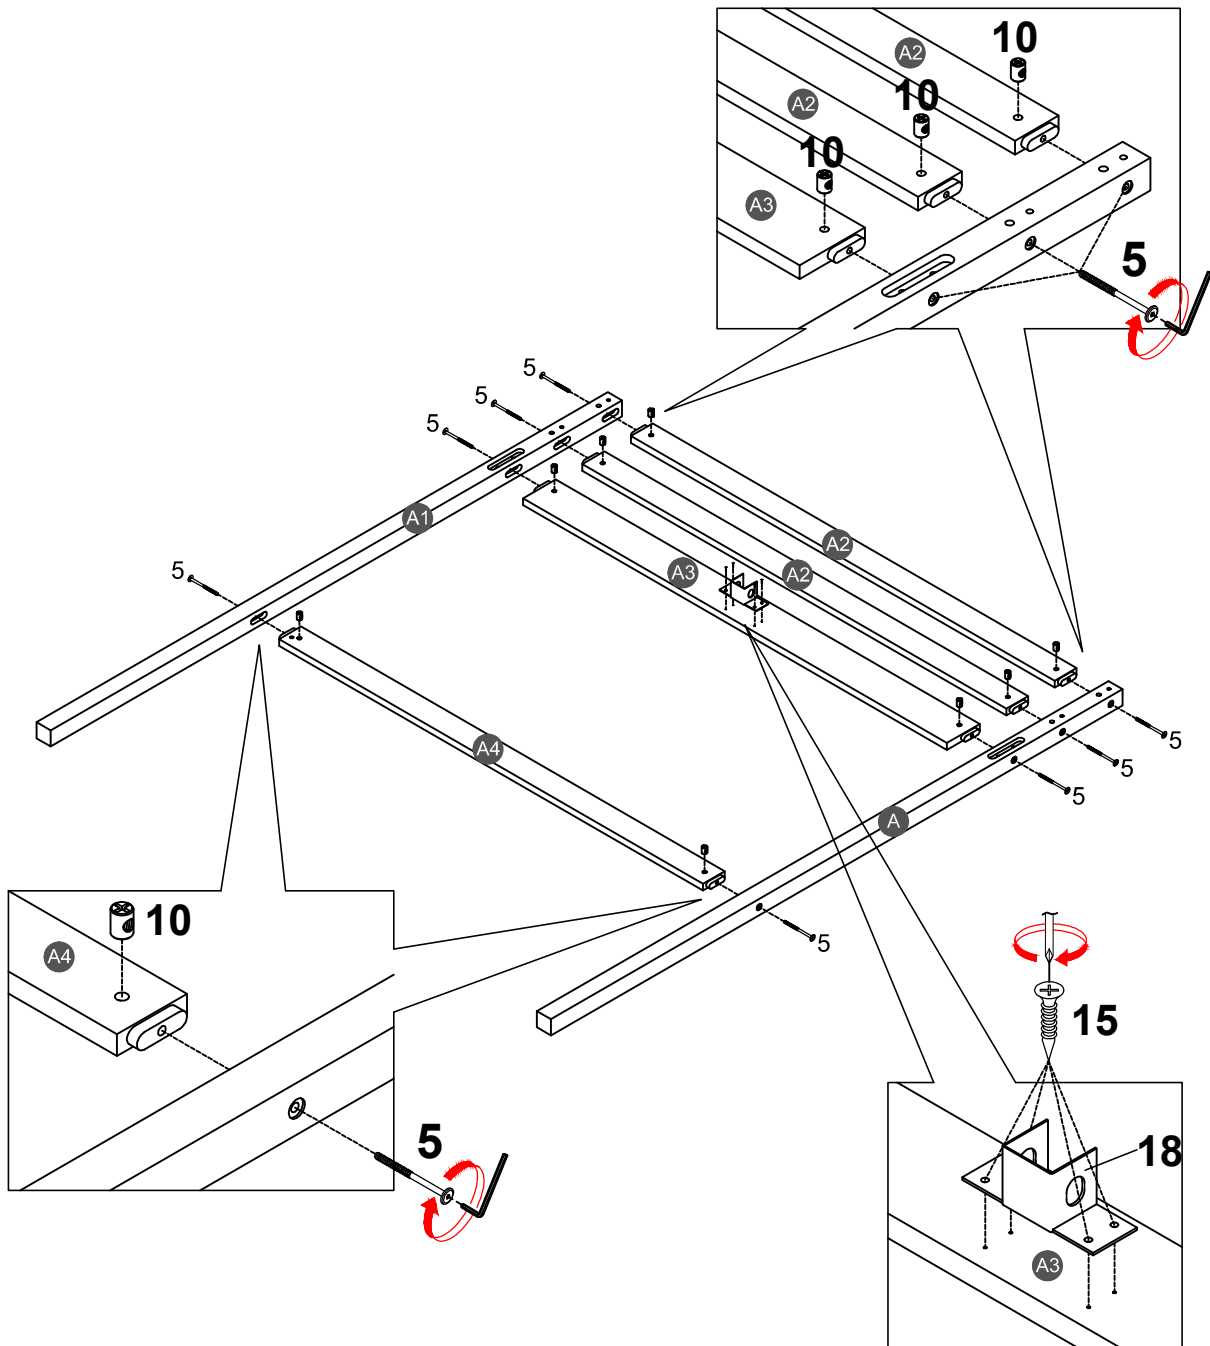


STEP 3:

1		4		10	
8PCS		16PCS		16PCS	

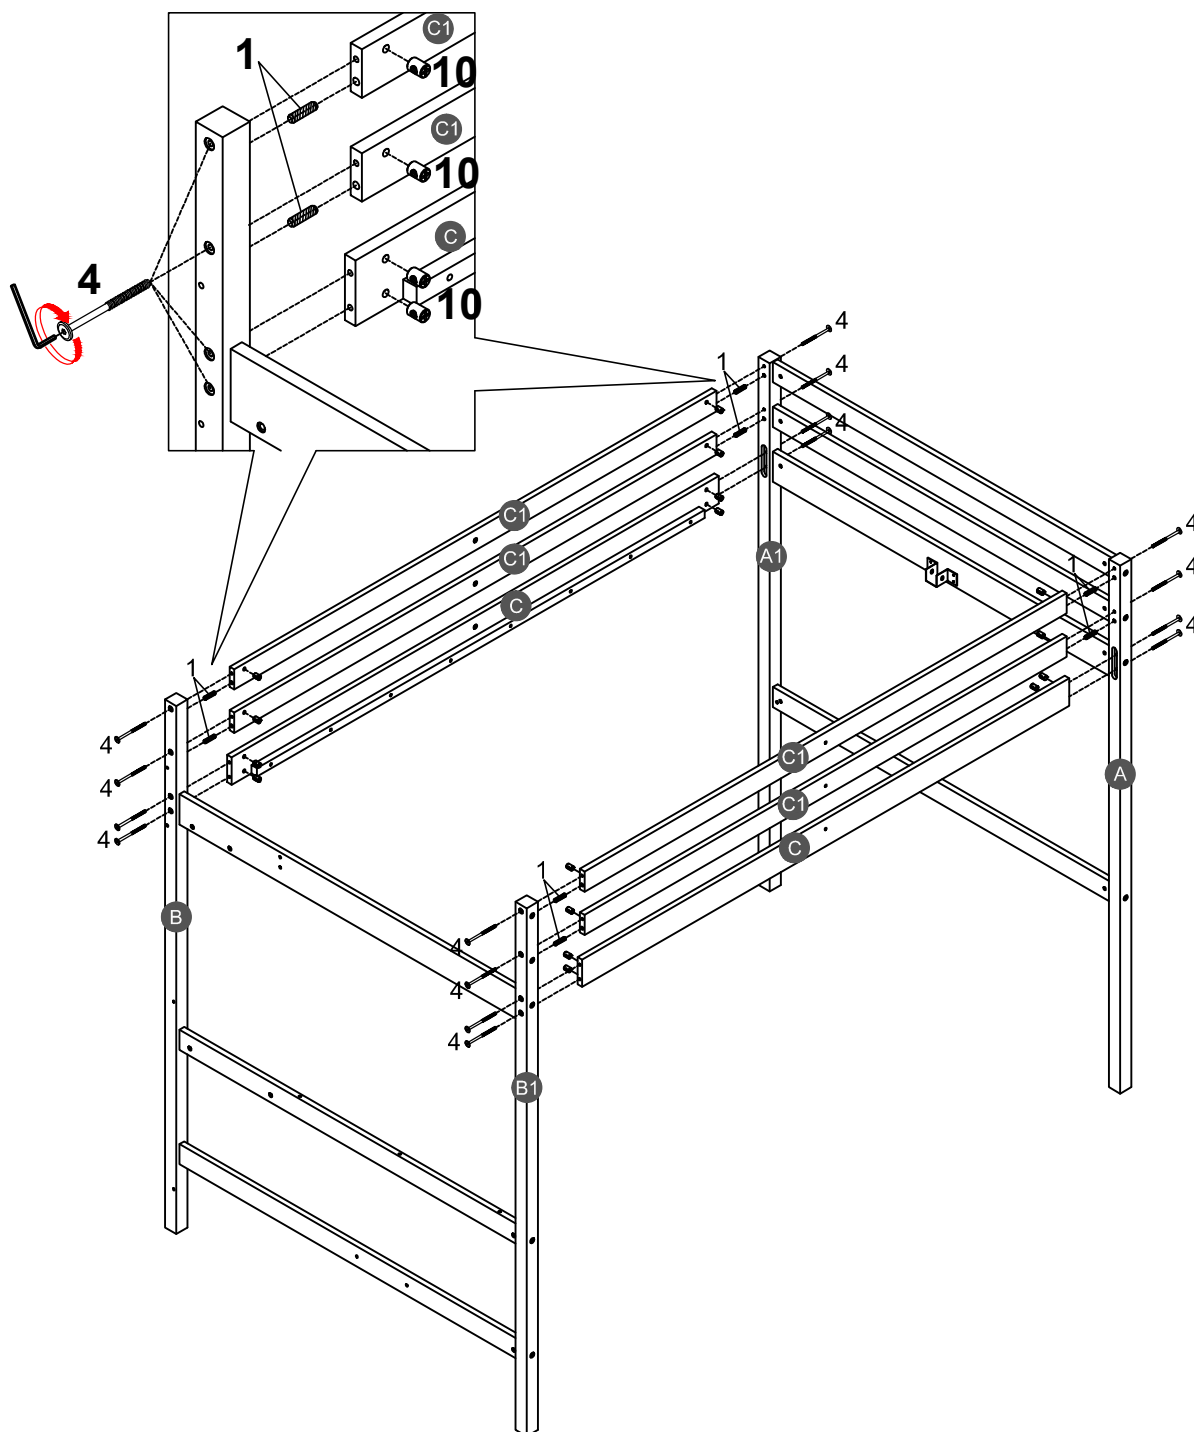

STEP 4:

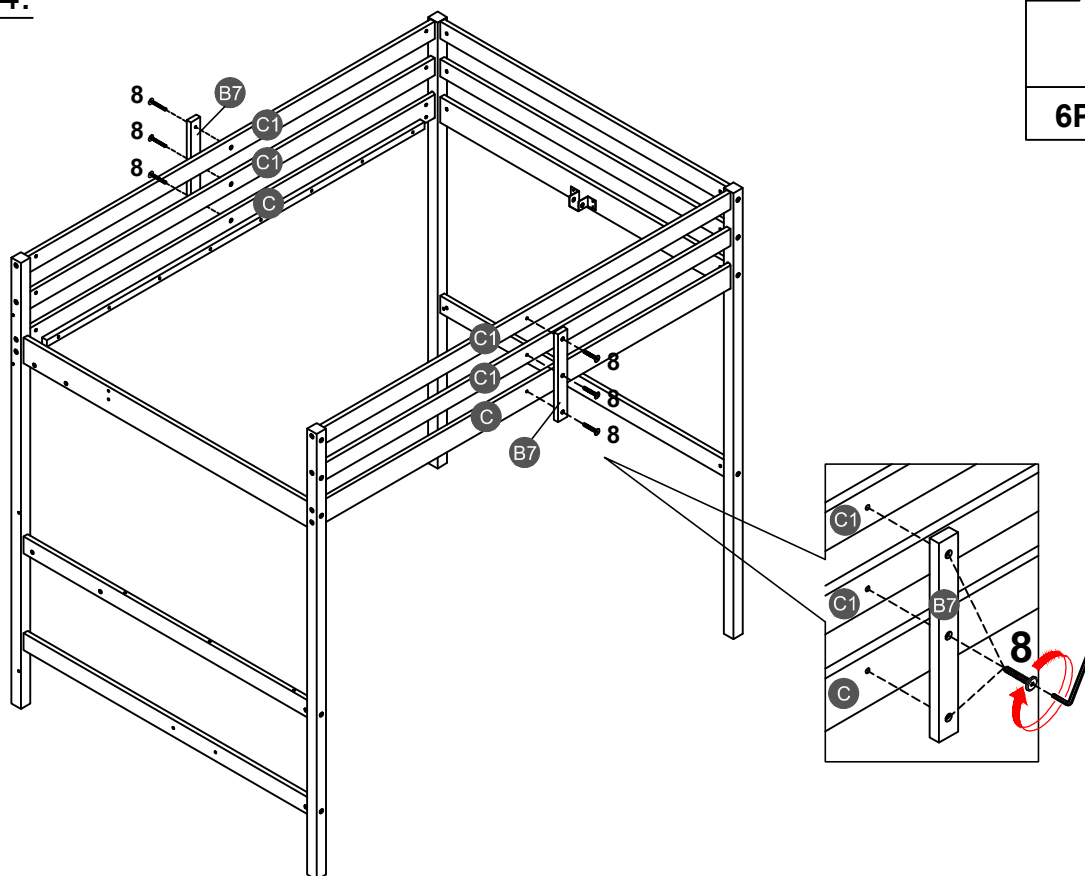


8



6PCS

STEP 5:

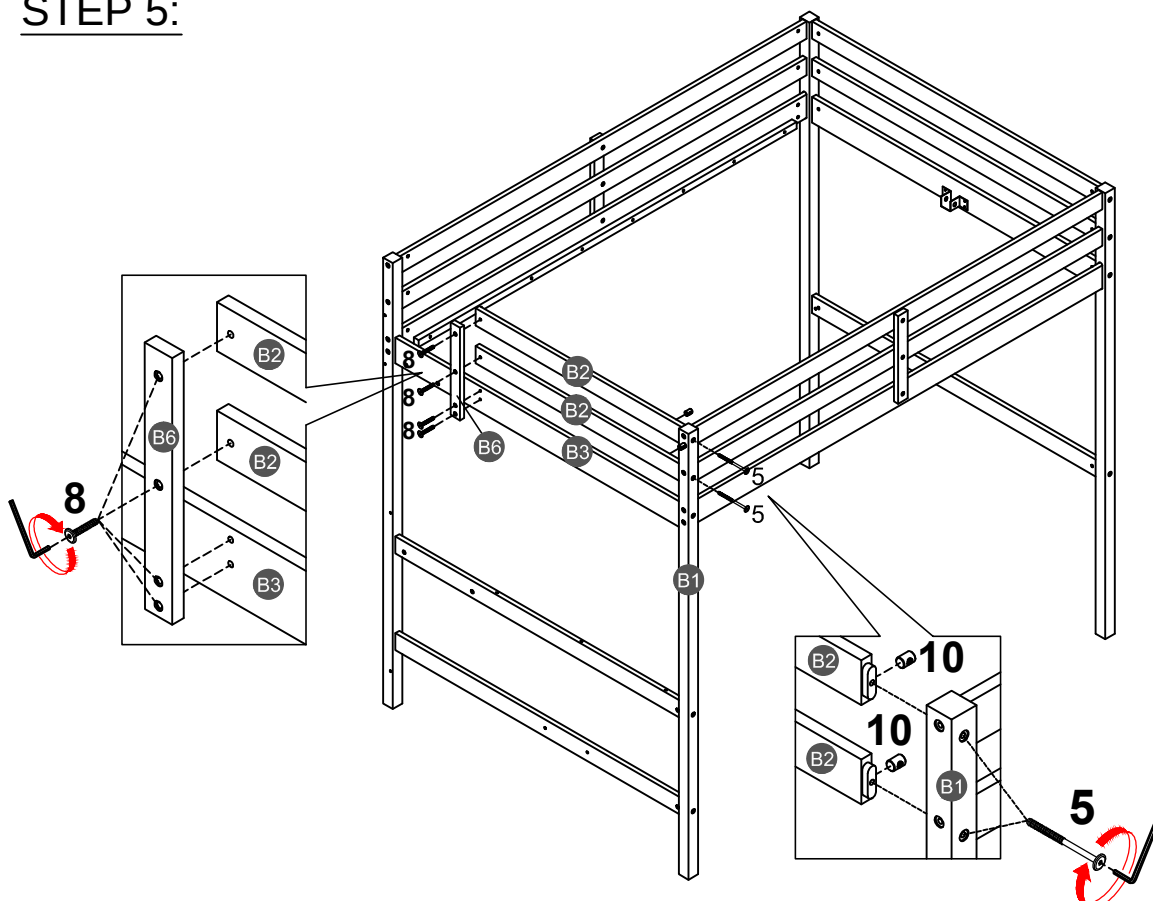

8



4PCS

5




2PCS

10




2PCS

STEP 6:

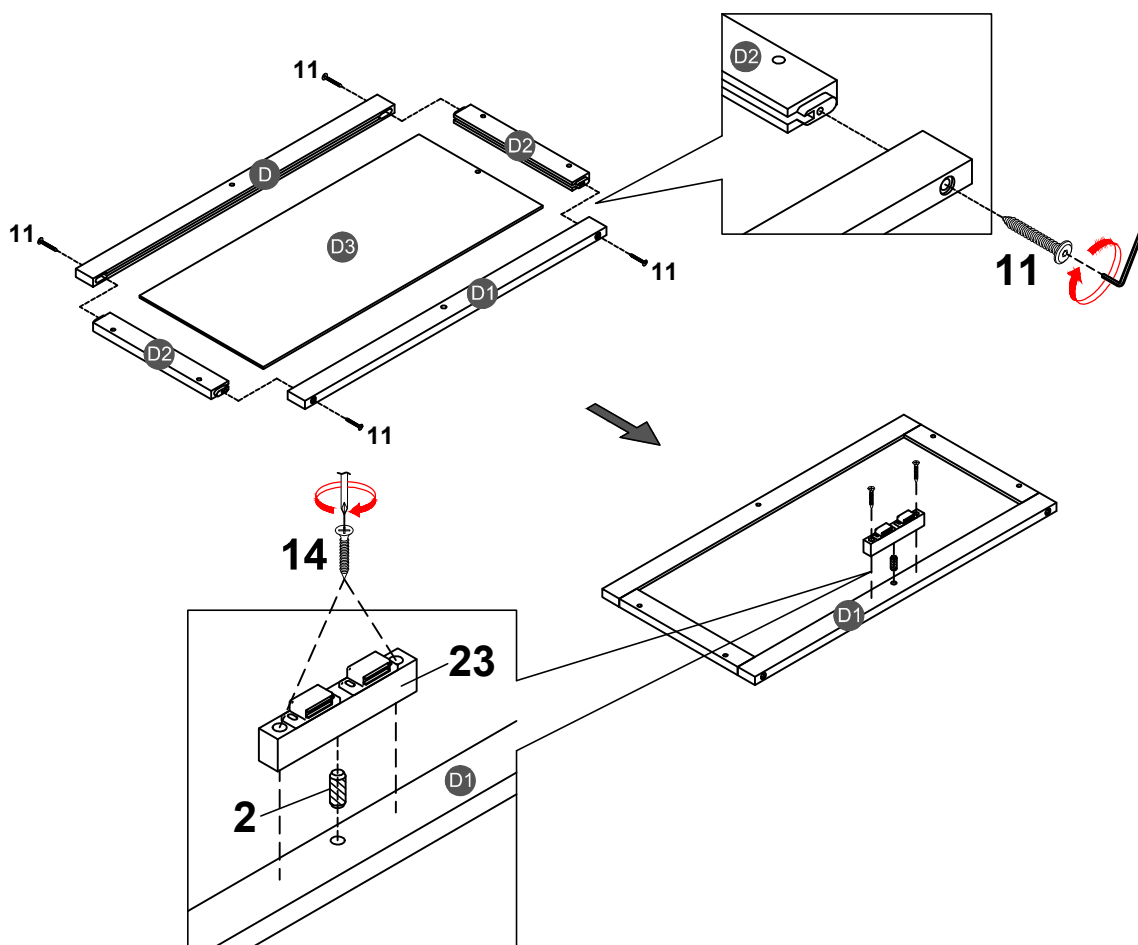


2	
1PC	
11	
4PCS	
14	
2PCS	
23	
1PC	

STEP 7:

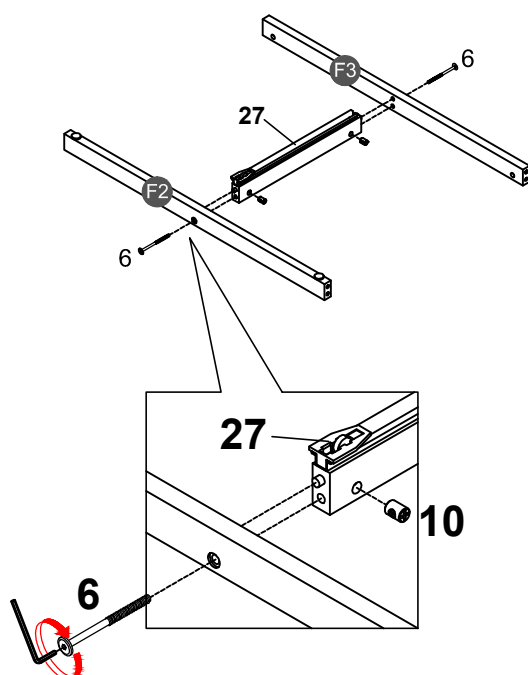

6	
2PCS	
10	
2PCS	
27	
1PC	

STEP 8:


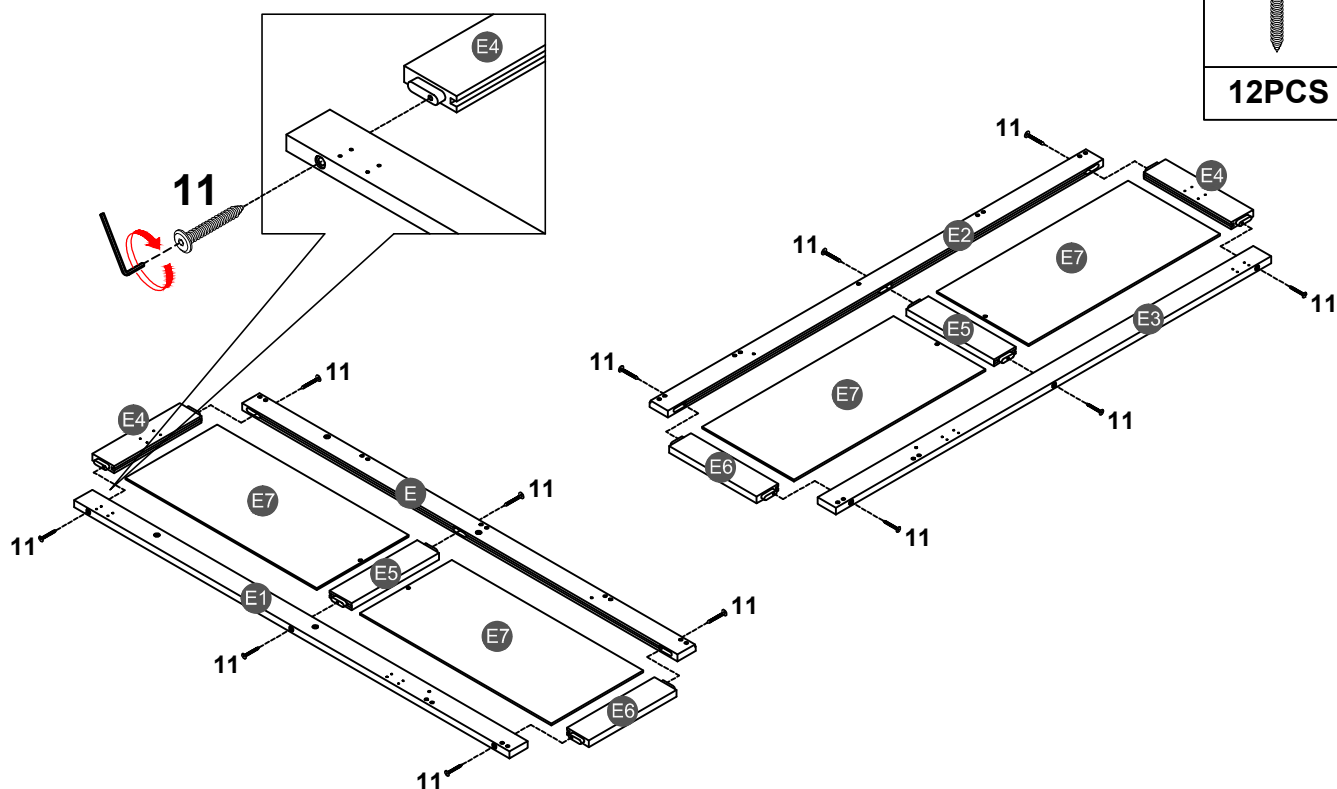


11

12PCS


STEP 9:

15	19	30
		
8PCS	2PCS	4PCS

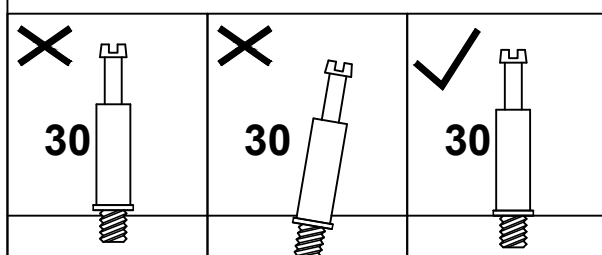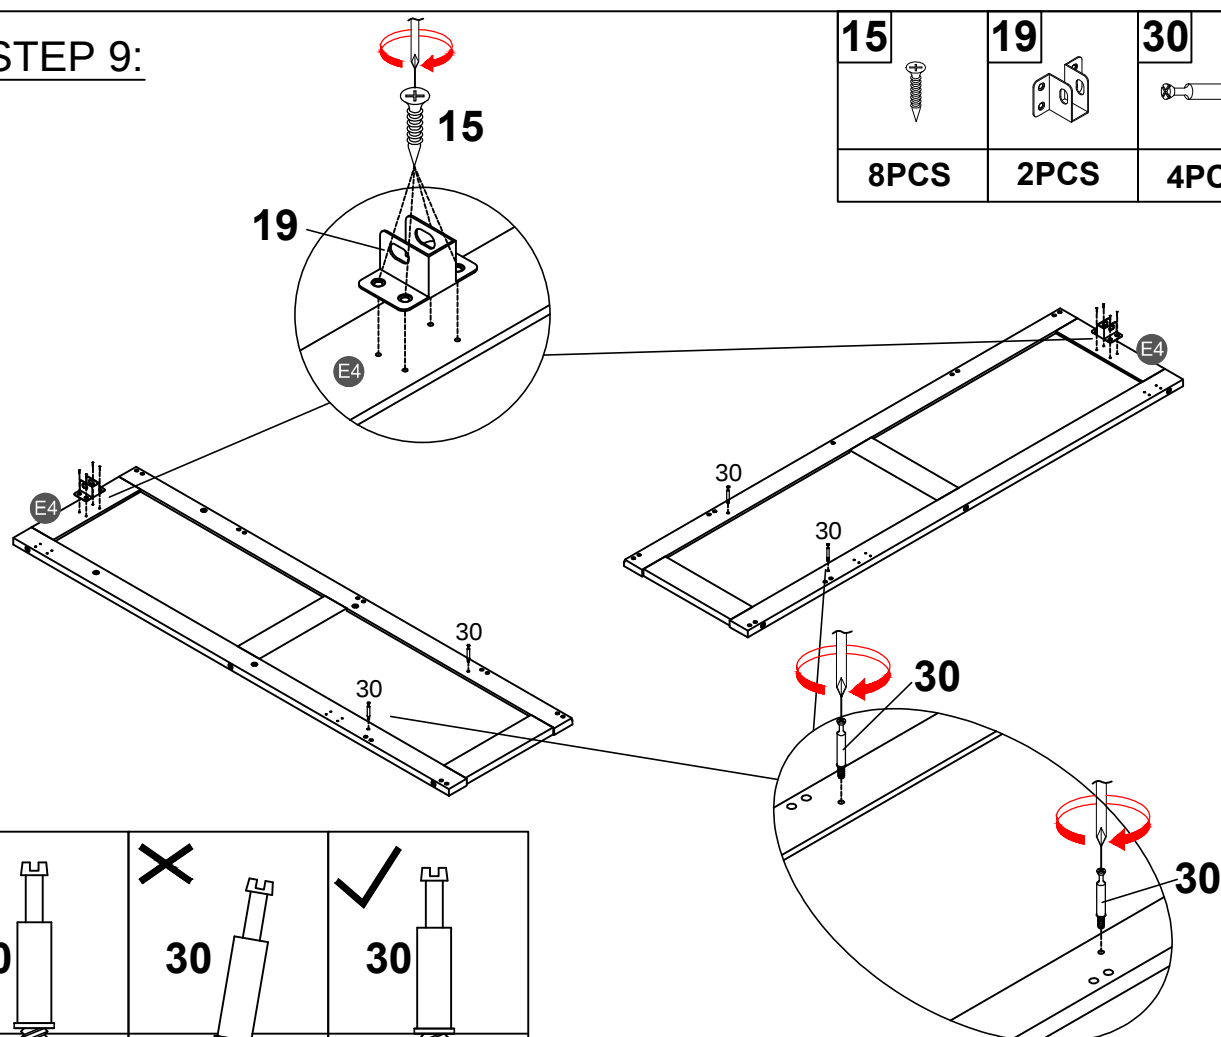

STEP 10:

3		6		10	
6PCS		6PCS		6PCS	

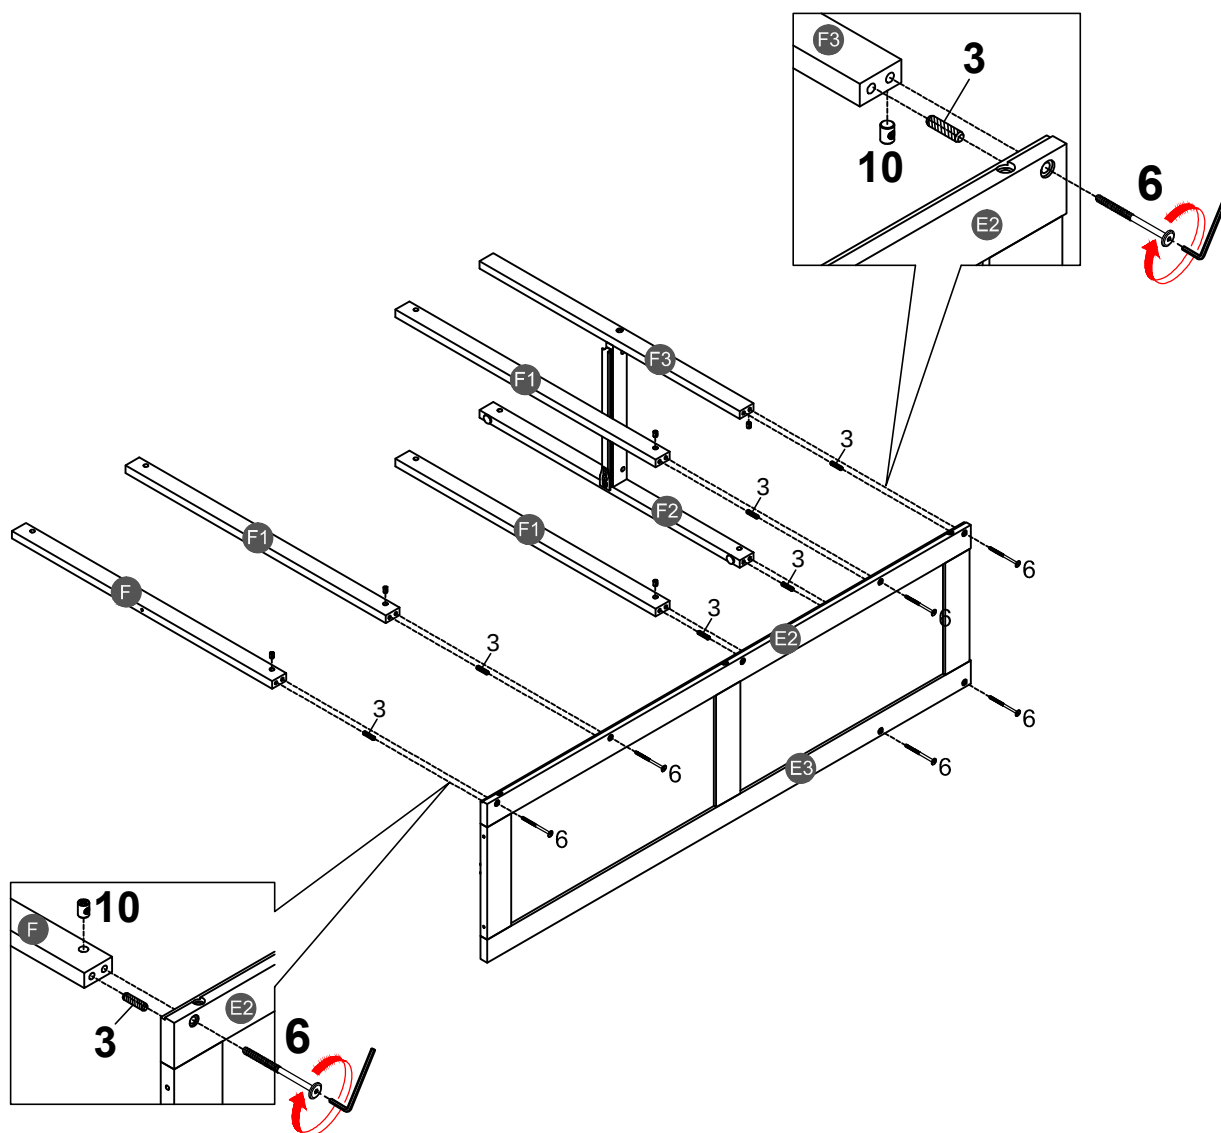


STEP 11:


31



2PCS

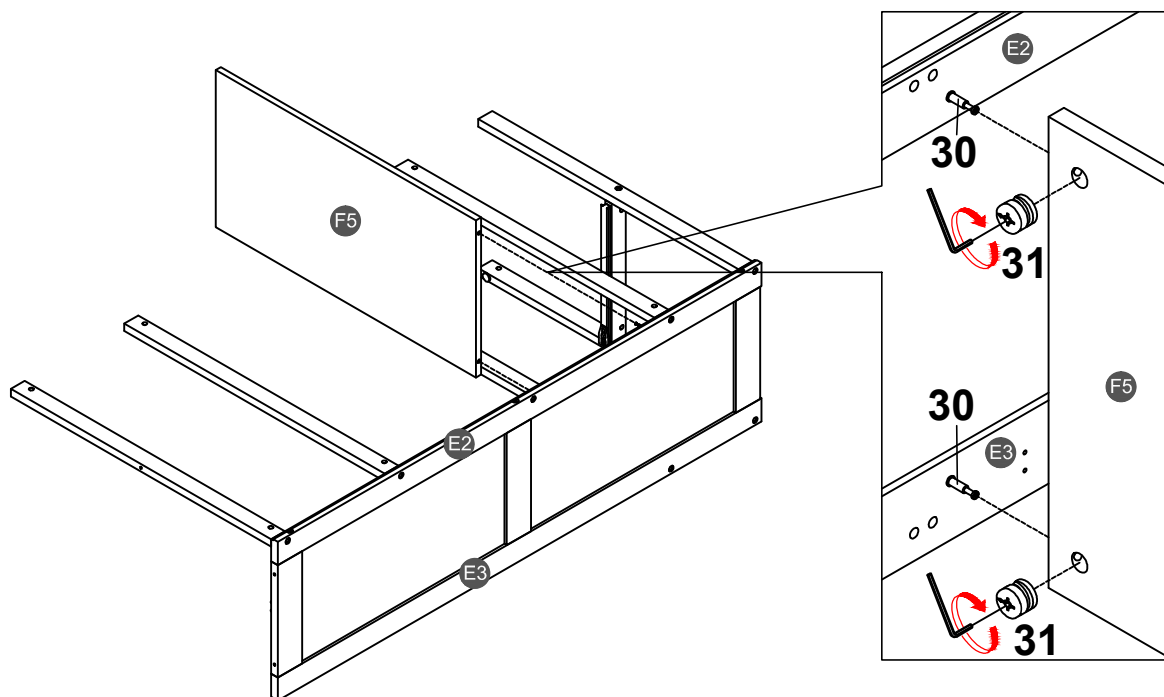


Note: Place hardware #31 with the "X" face outward, and make sure that the arrowhead is upward. Then, place hardware #31 into the hole of hardware #30 and tighten it clockwise with a hand screwdriver. (Please do NOT use an electric screwdriver.)


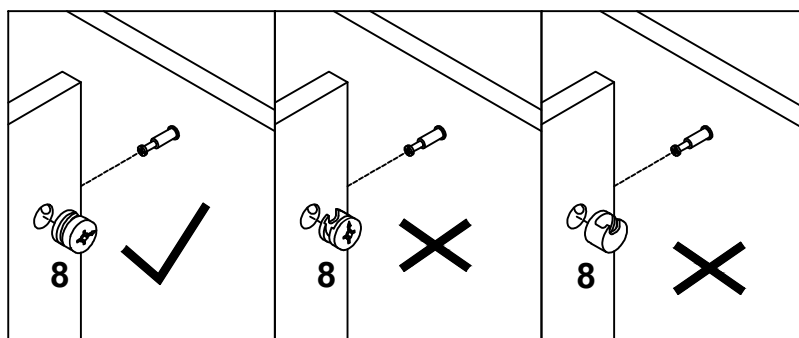


STEP 12:

3		6		10		31	
6PCS		6PCS		6PCS		2PCS	


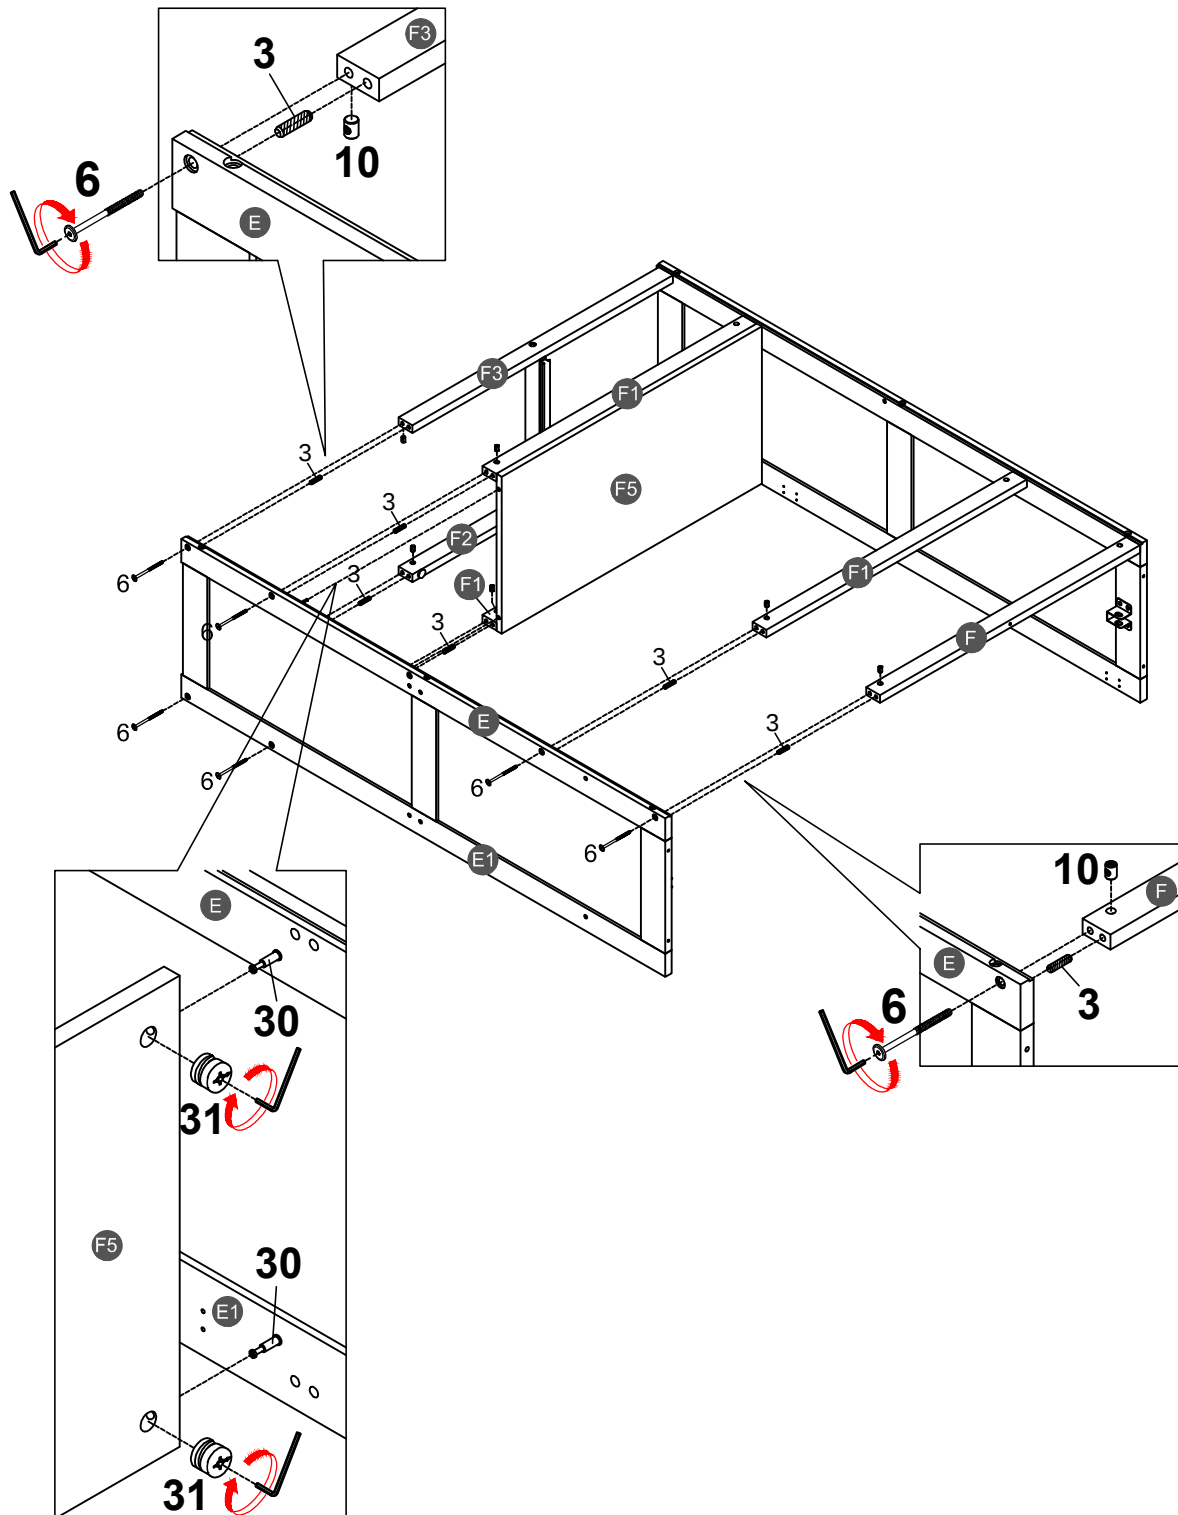


STEP 13:

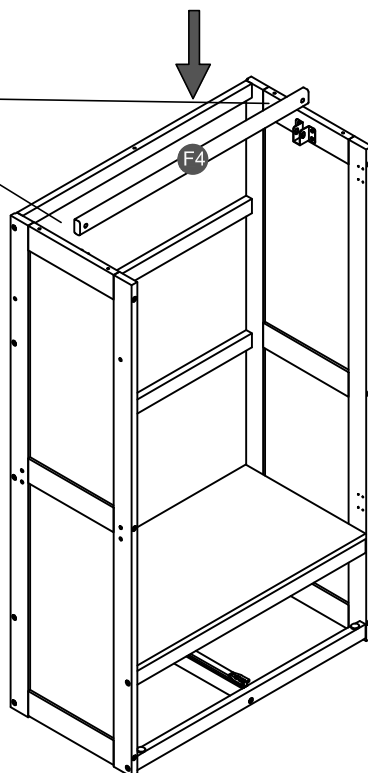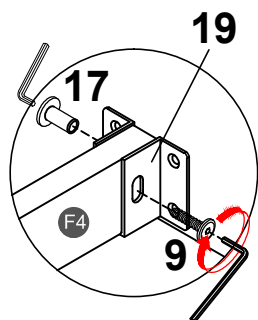


9		17	
2PCS		2PCS	

STEP 14:

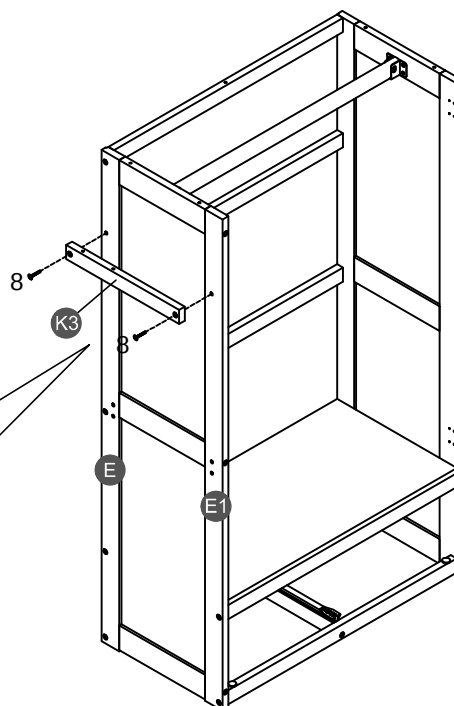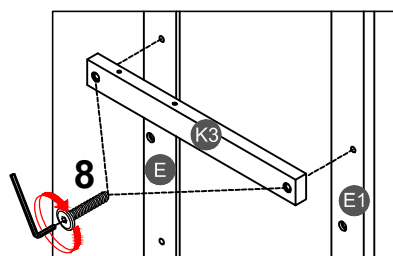


8	
2PCS	


STEP 15:

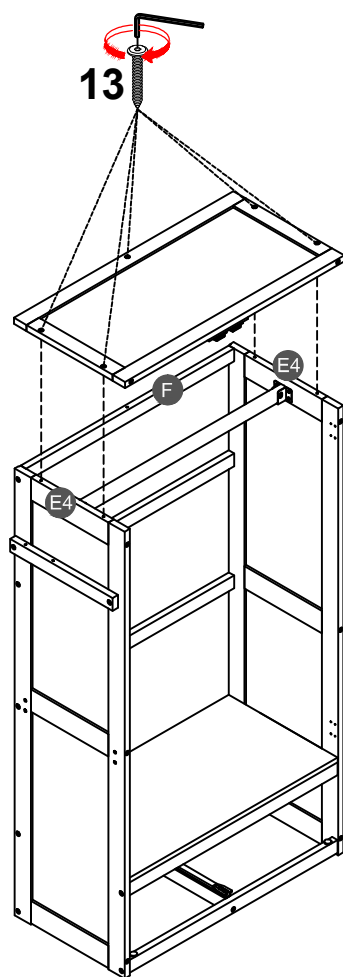13**5PCS**

STEP 16:

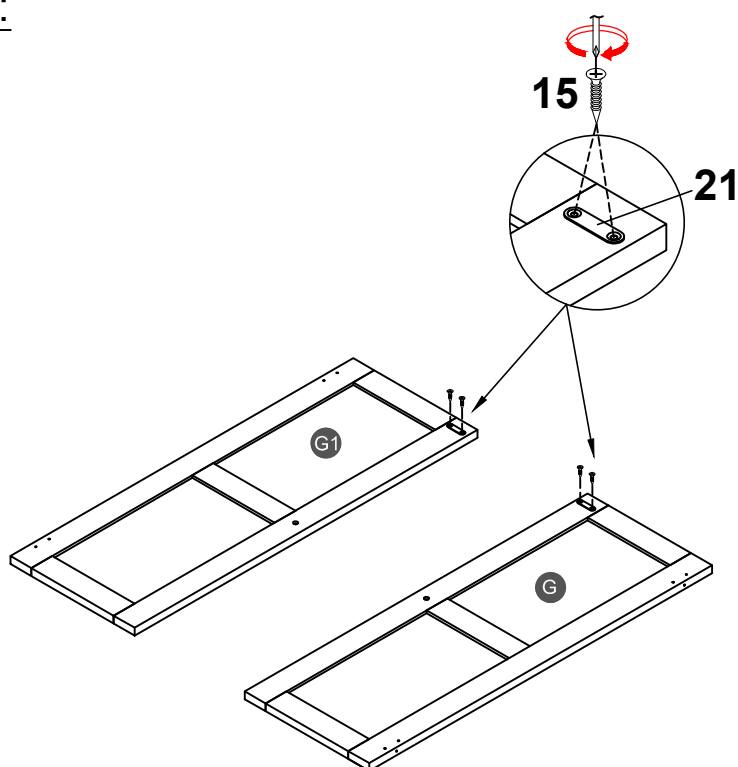
15**4PCS****21****2PCS**

STEP 17:

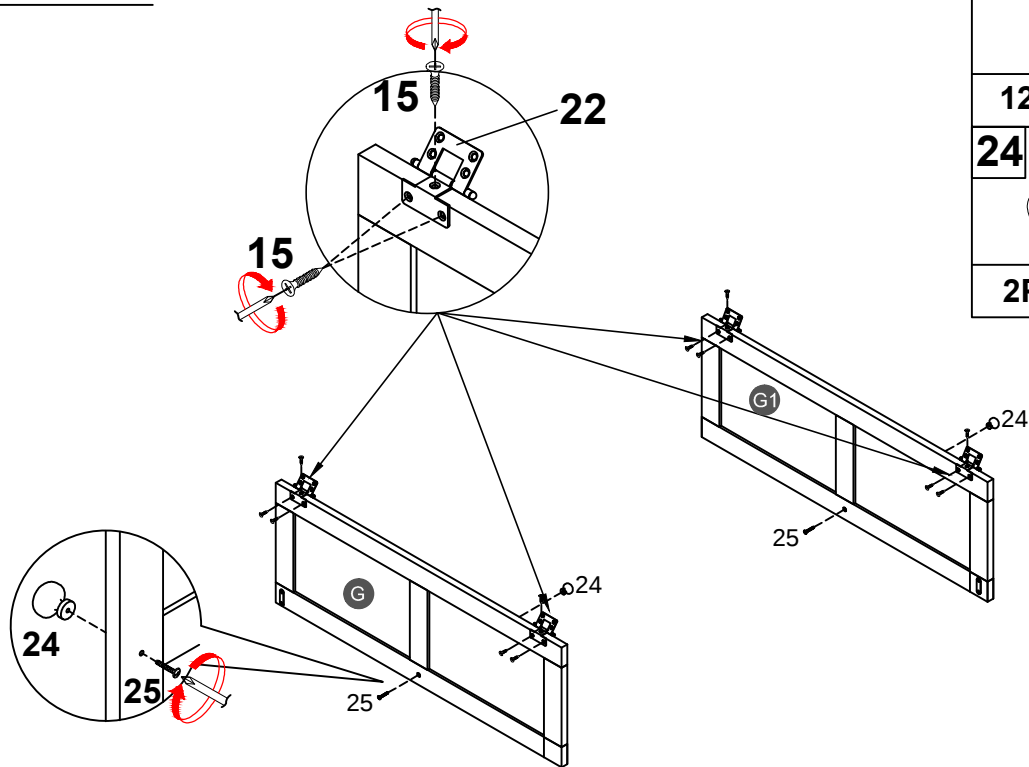


15		22	
12PCS		4PCS	
24		25	
2PCS		2PCS	

STEP 18:

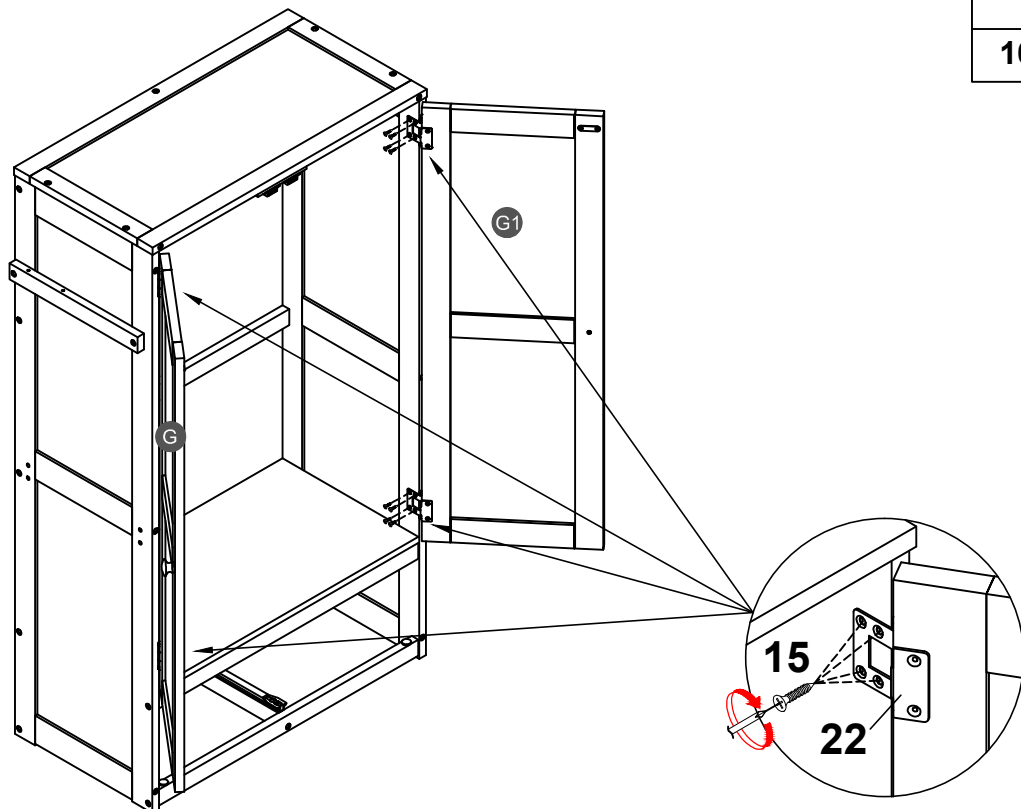


15	
16PCS	

STEP 19:

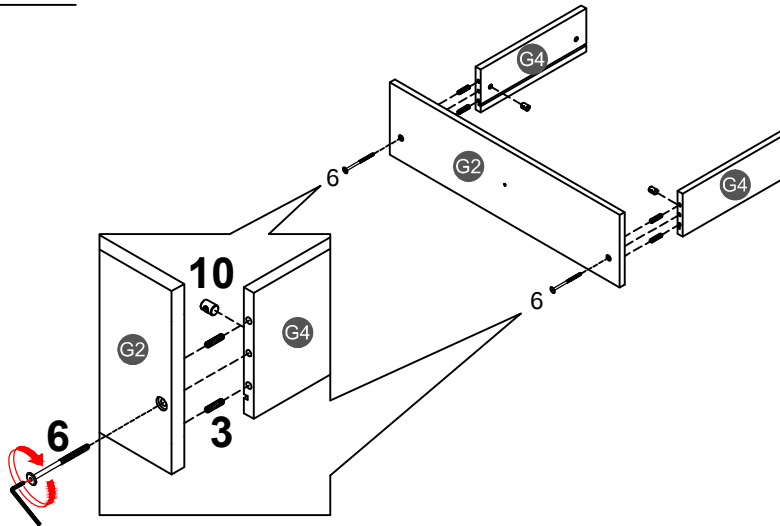


3		6	
4PCS		2PCS	
		10	
		2PCS	

STEP 20:


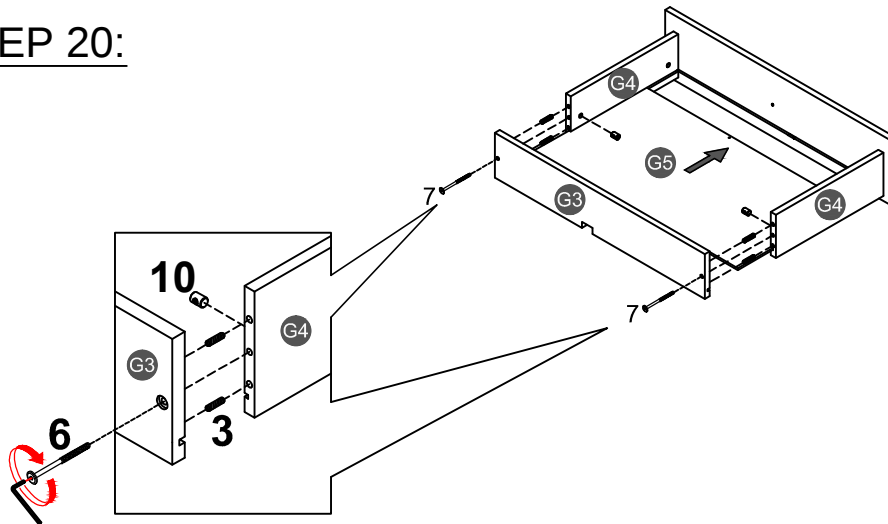


3		6	
4PCS		2PCS	
		10	
		2PCS	


STEP 21:

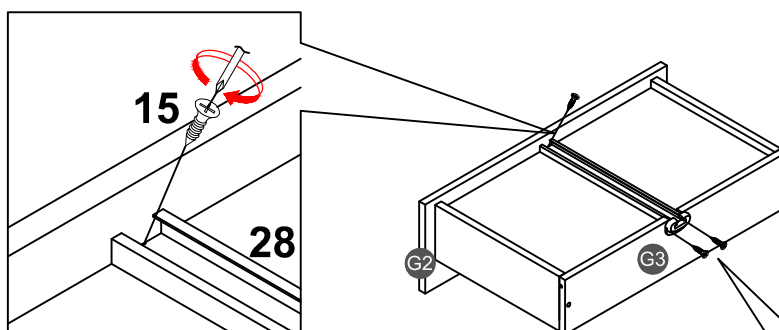


15		28	
3PCS		1PC	

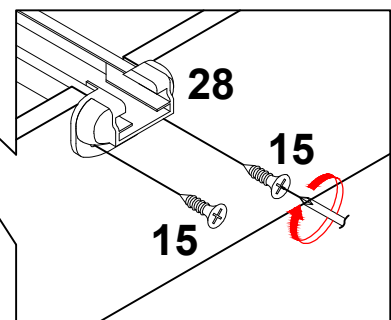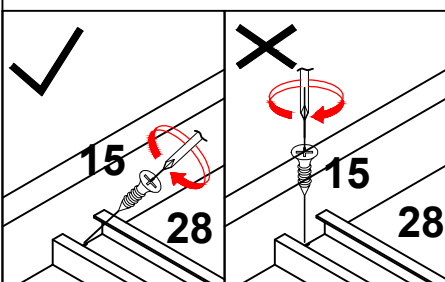


STEP 22:

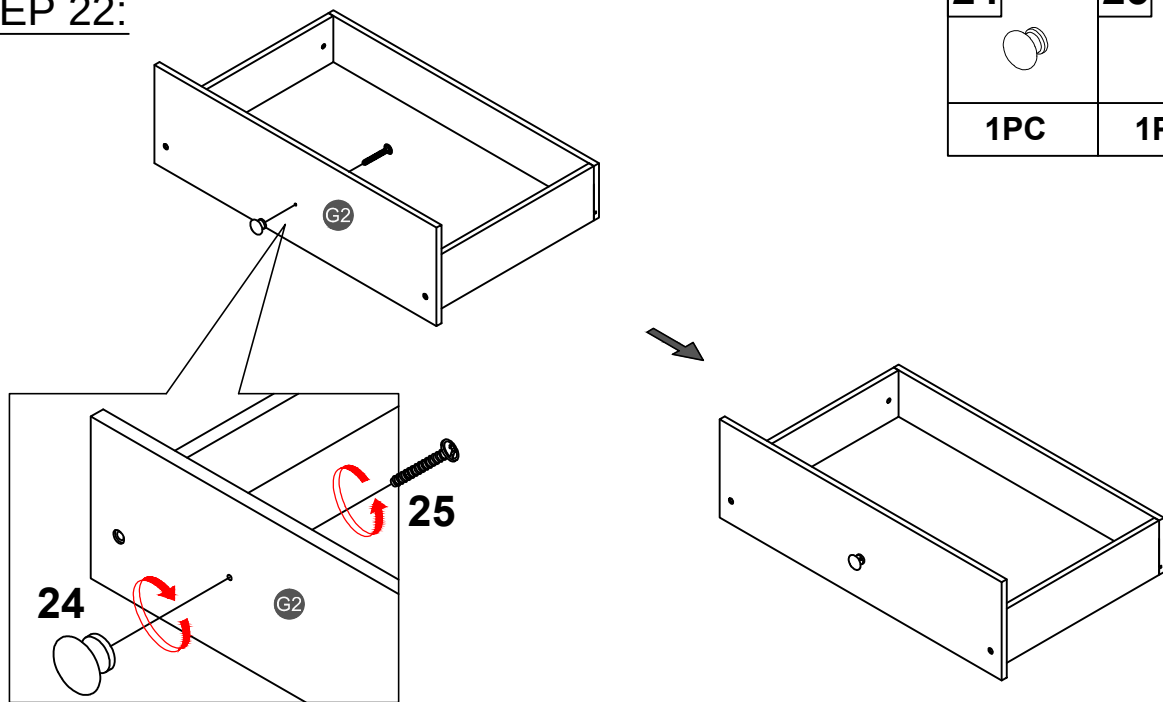


STEP 23:

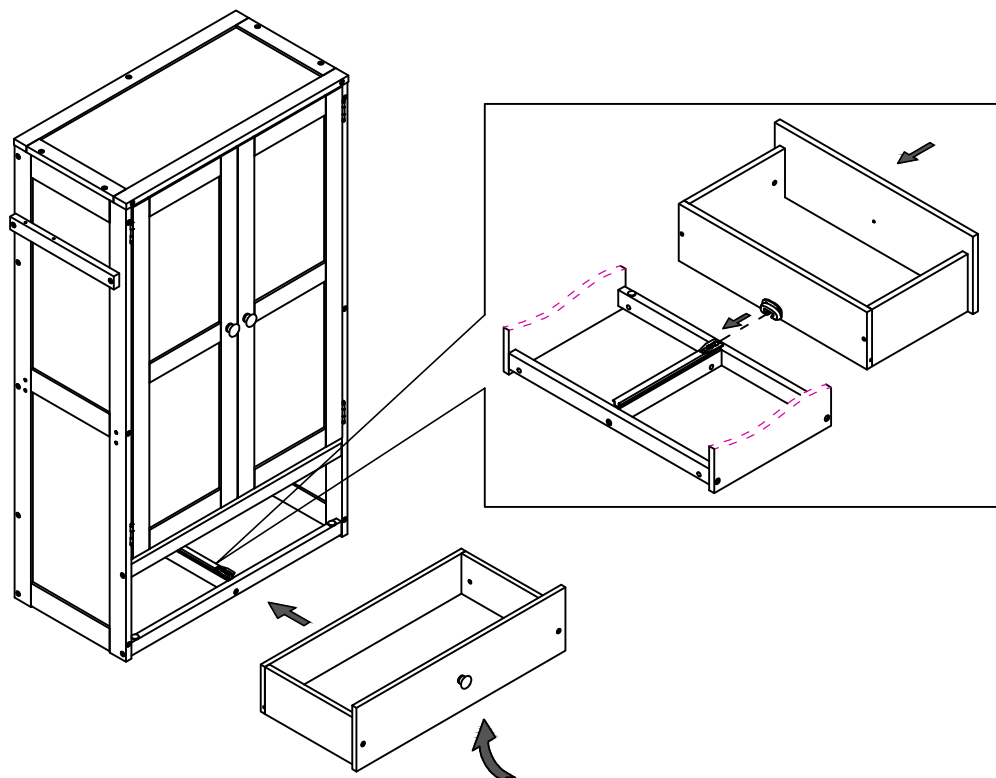


Align the slide rail at the bottom of the drawer and ensure it is secure, then push the drawer in firmly to make the slide rails smoothly on the track.

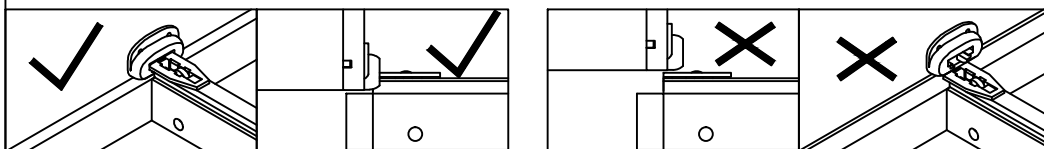


STEP 24:

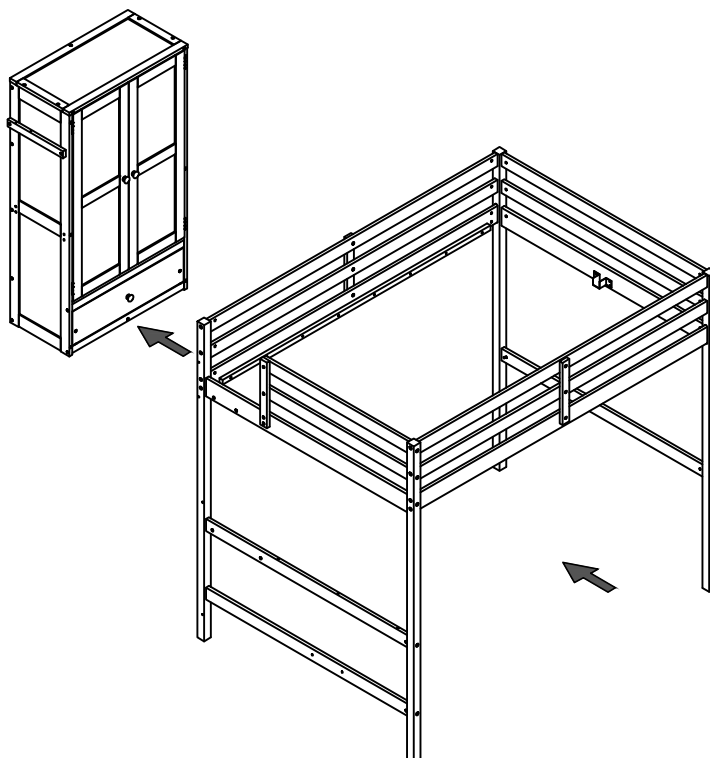


STEP 25:

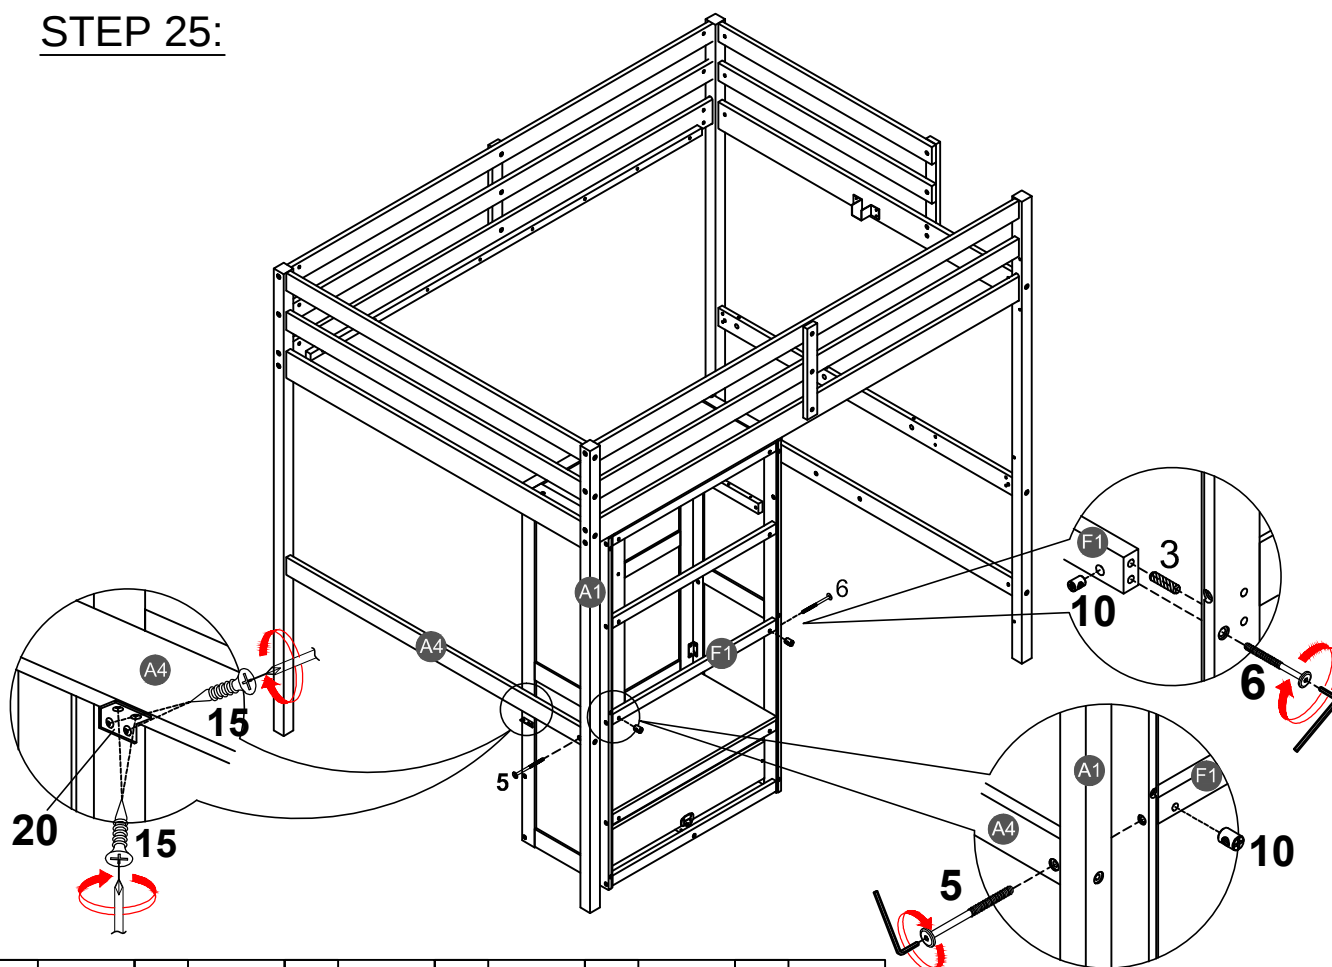


3		5		6		10		15		20	
1PC		1PC		1PC		2PCS		4PCS		1PC	

STEP 26:

30



12PCS

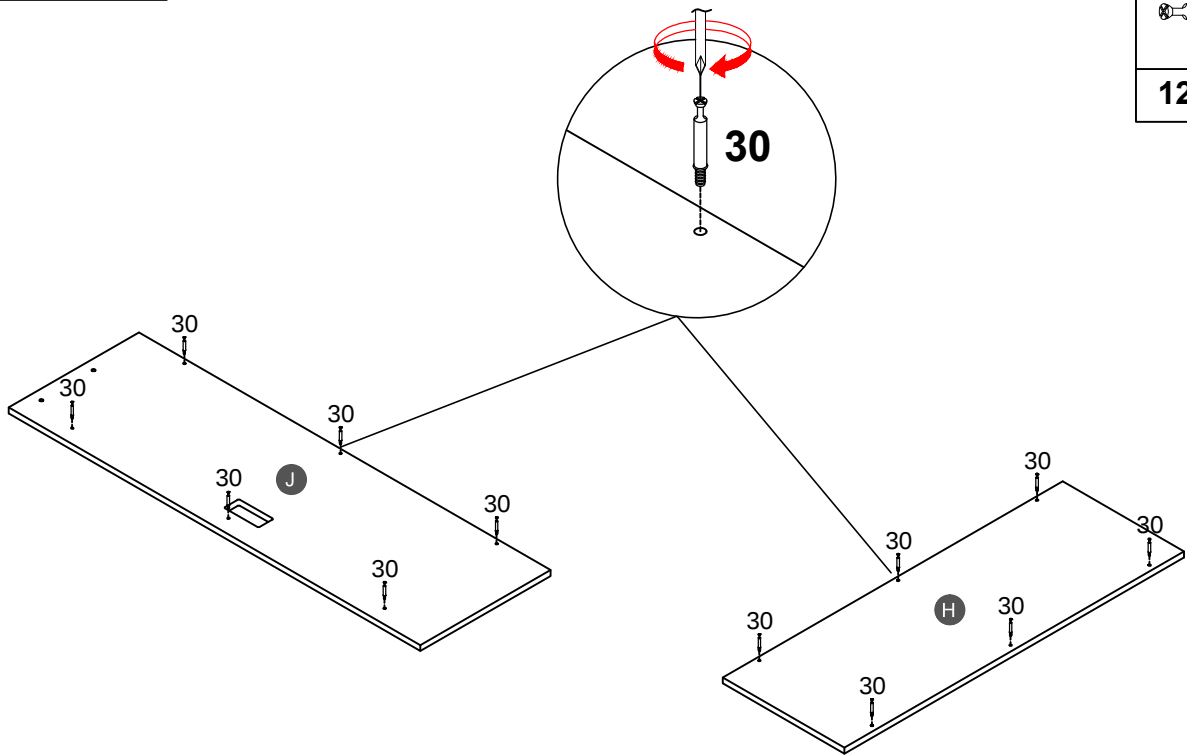

STEP 27:

3



2PCS

5




2PCS

10




2PCS

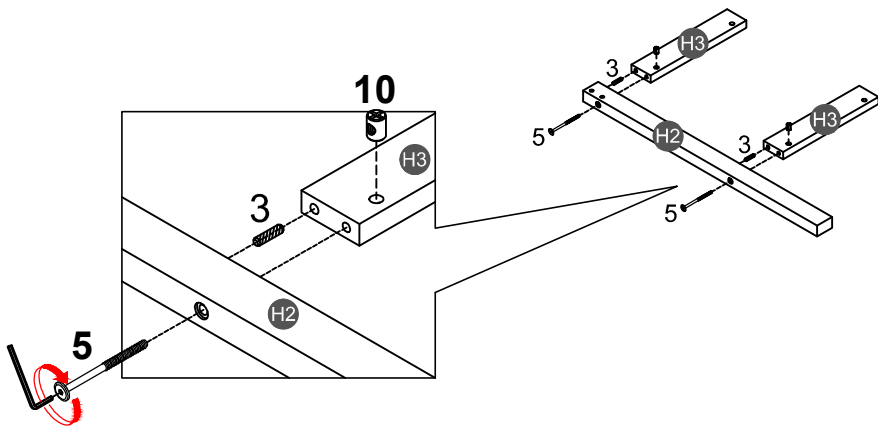


STEP 28:

3		6		10	
2PCS		2PCS		2PCS	

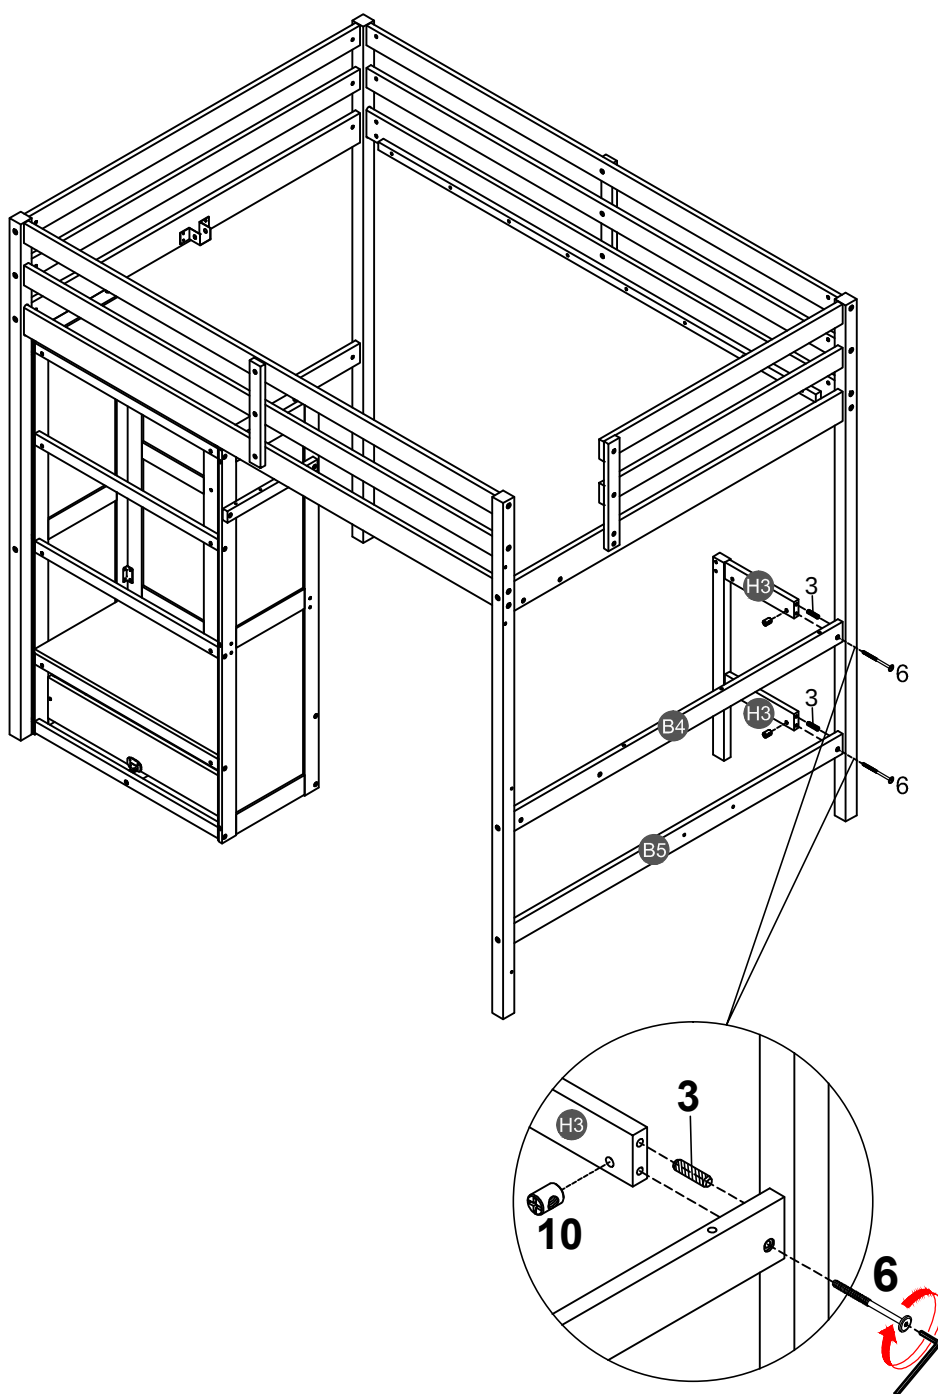

STEP 29:

6		10		12	
4PCS		4PCS		2PCS	



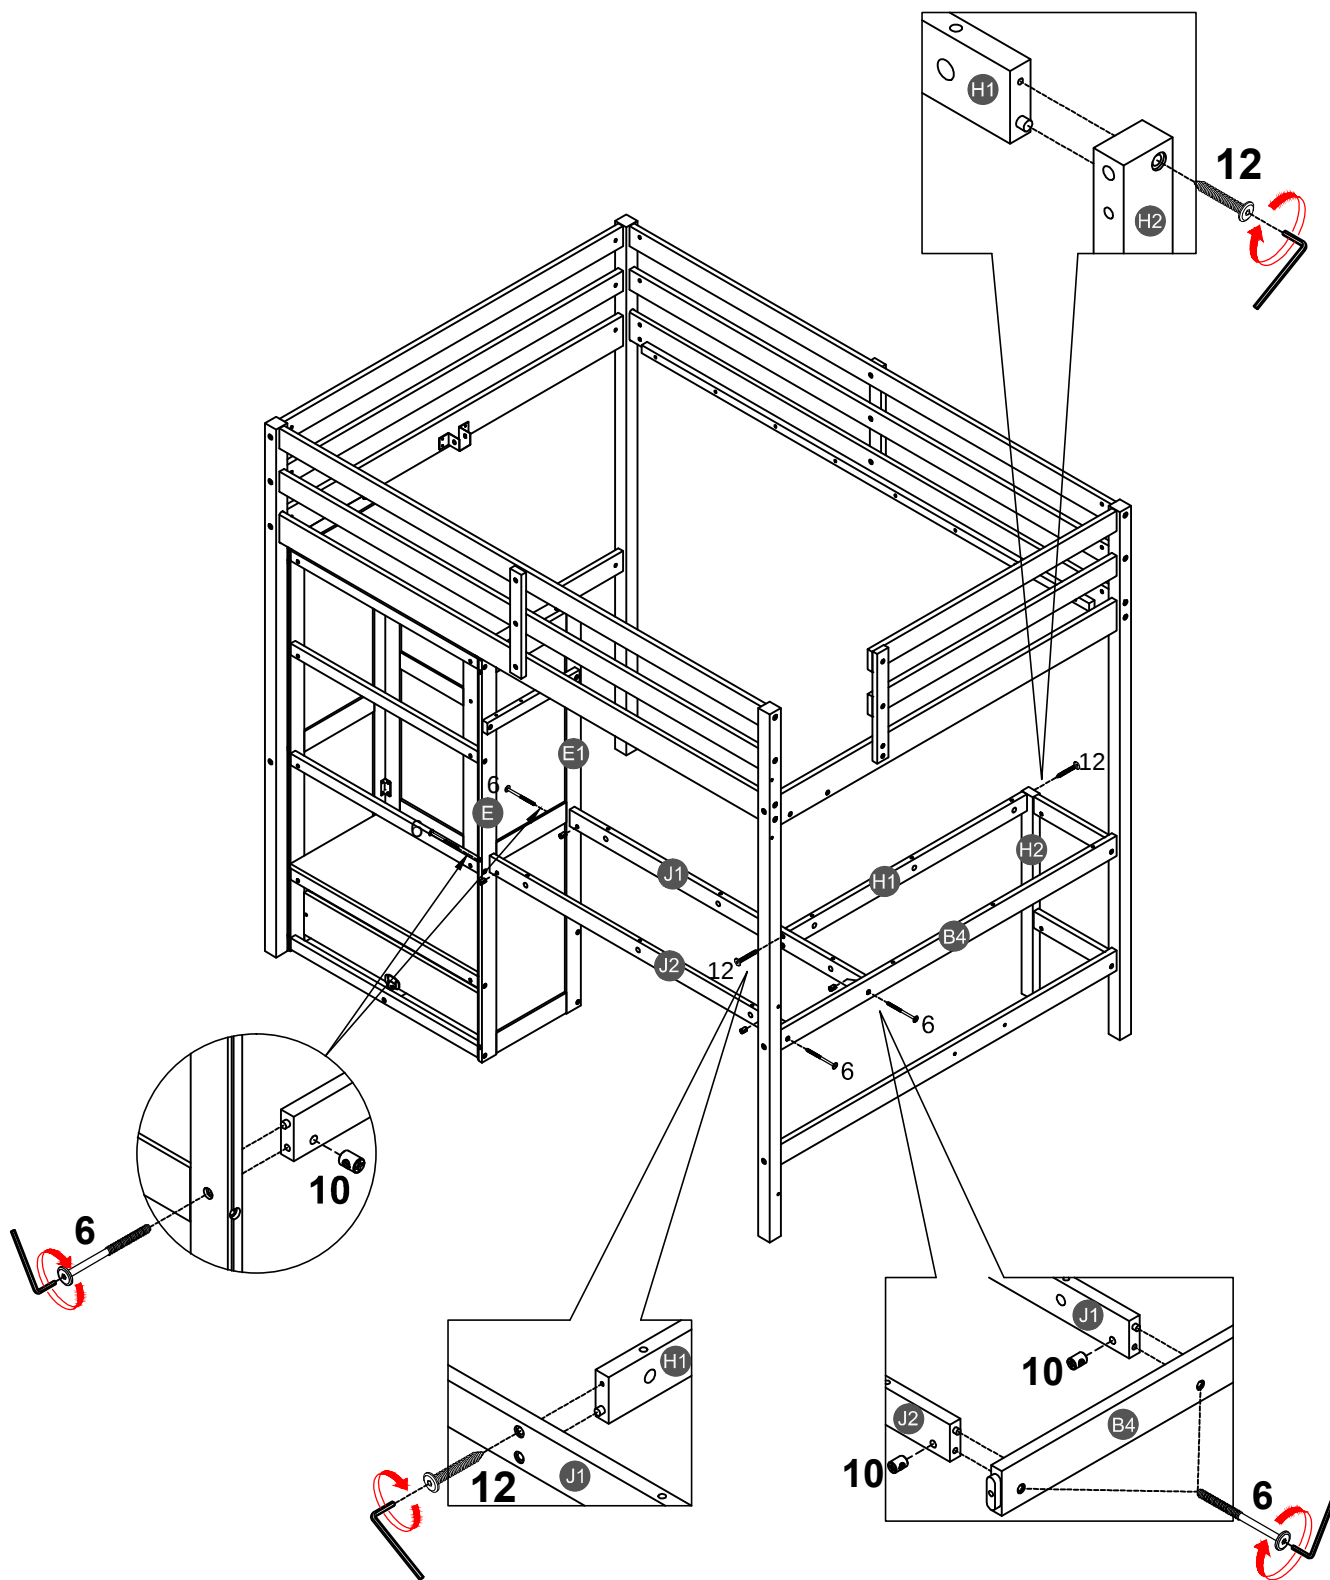


STEP 30:

31




12PCS

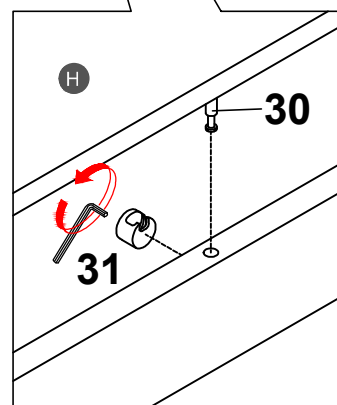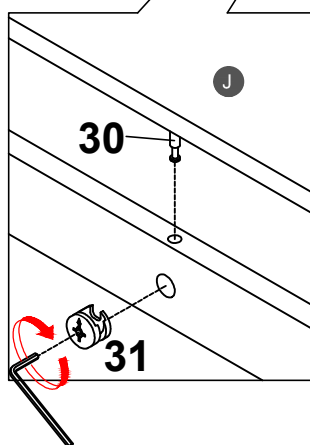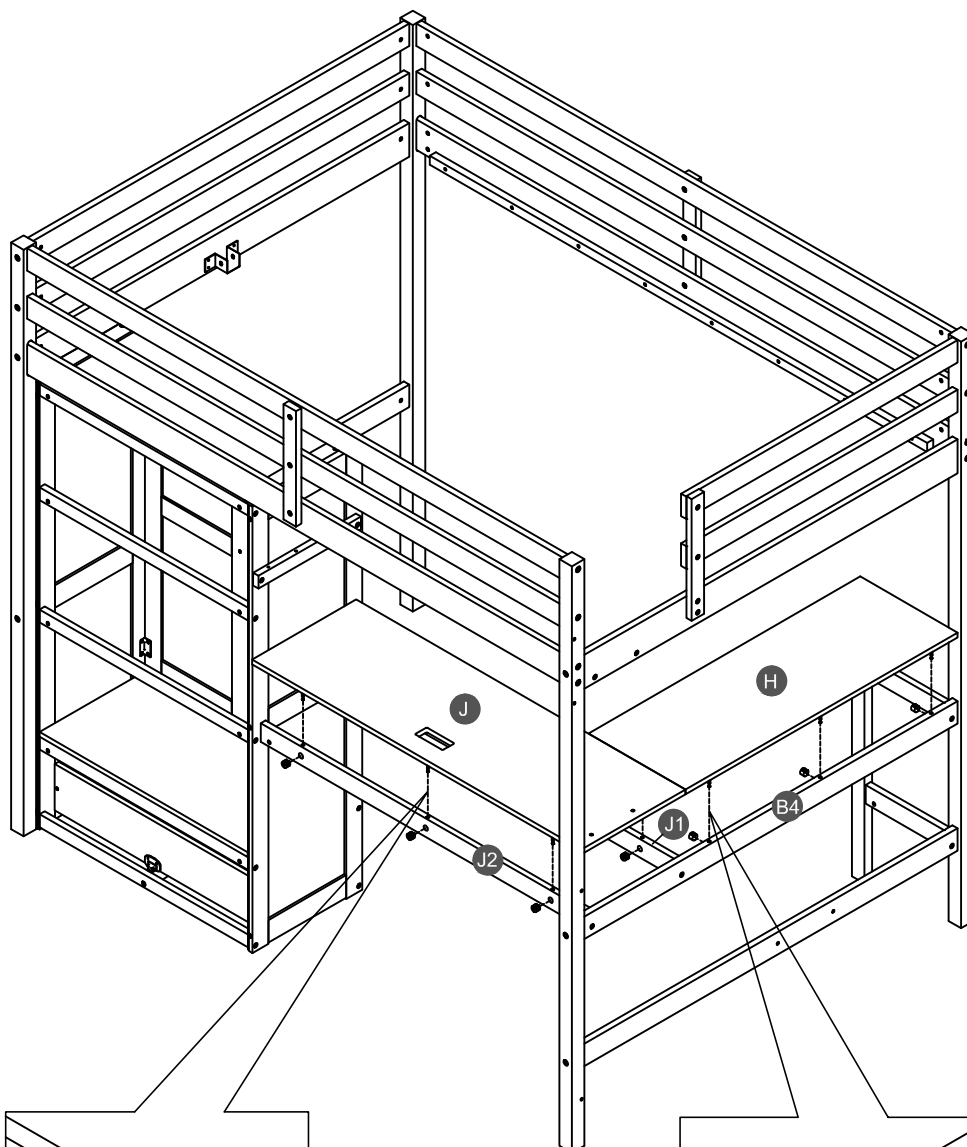


STEP 31:

6		8		10	
2PCS		2PCS		2PCS	

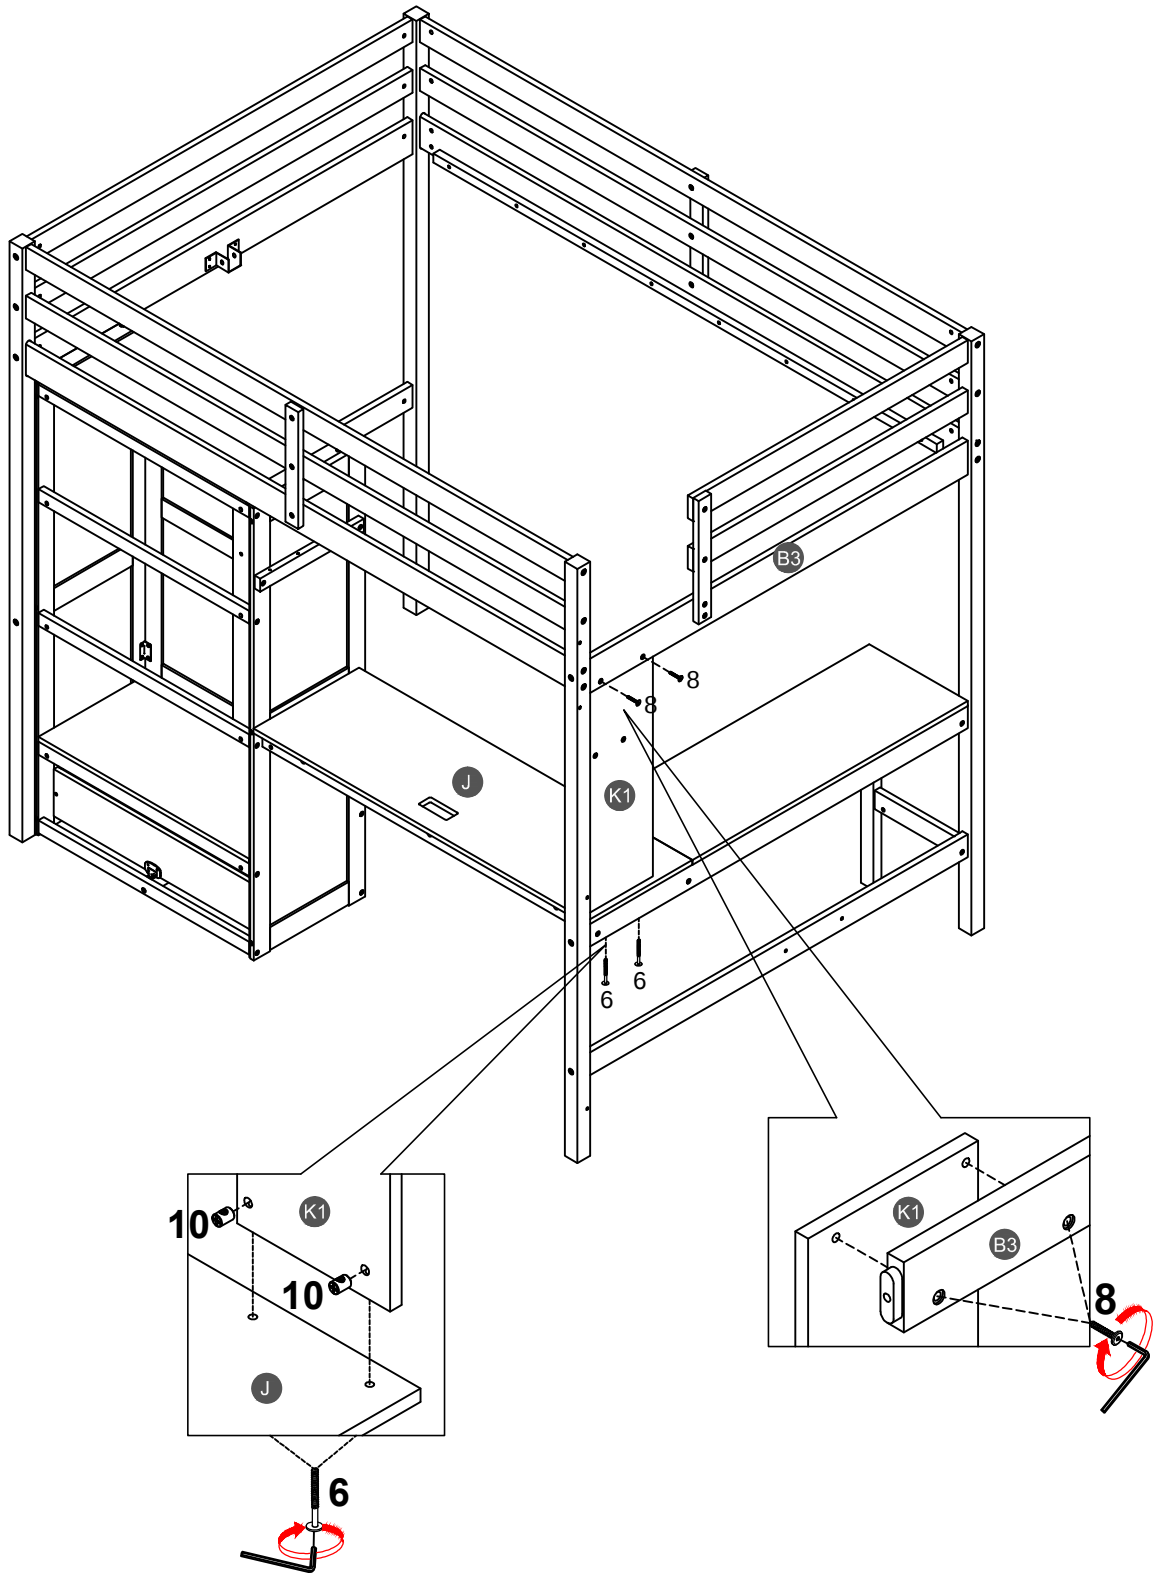


STEP 32:

6		10		13	
2PCS		2PCS		2PCS	

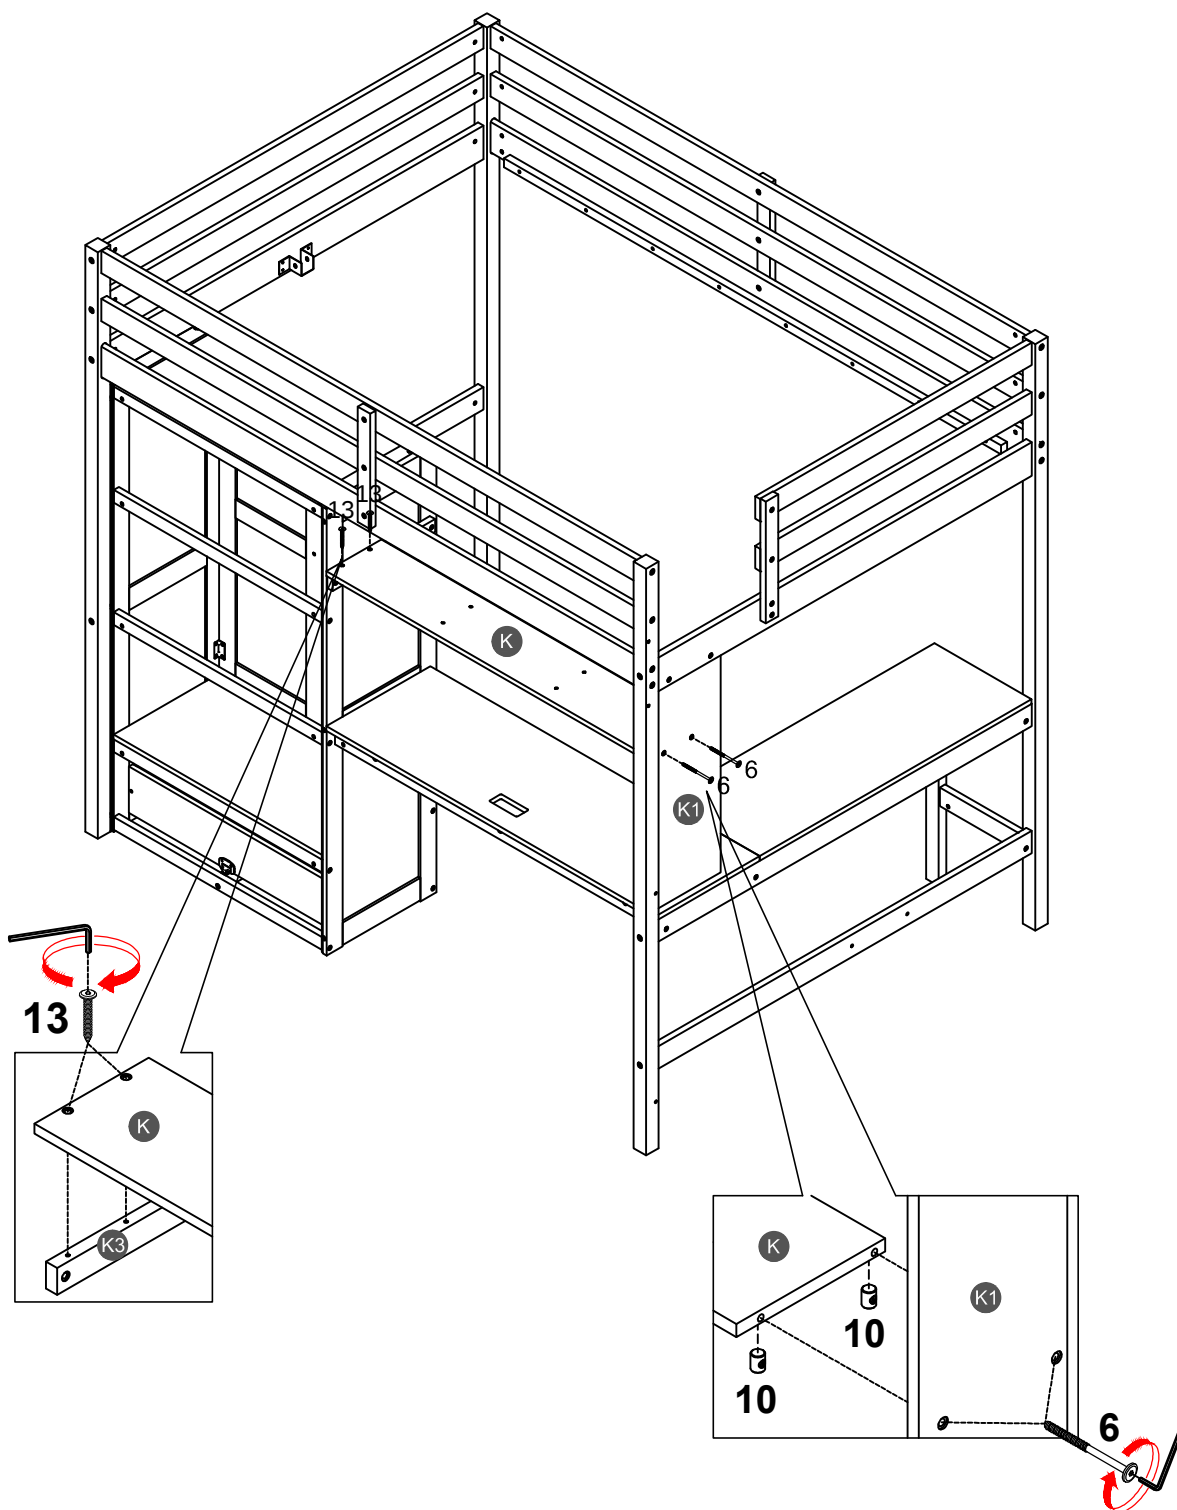


STEP 33:

6		10	
4PCS		4PCS	

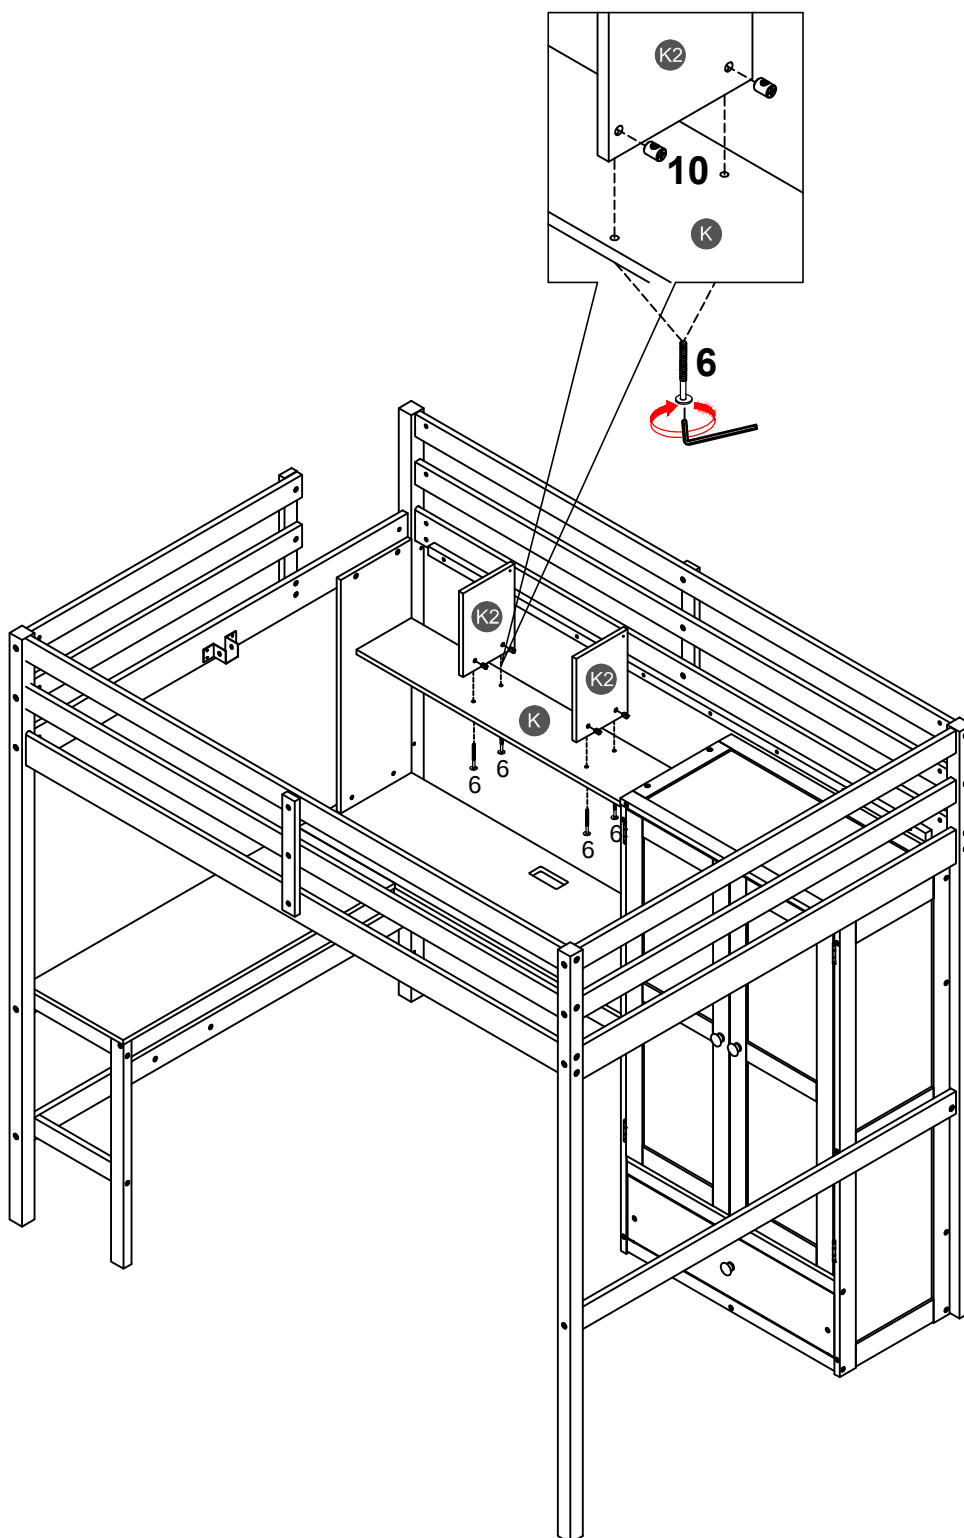


STEP 34:

15		26	
4PCS		2PCS	

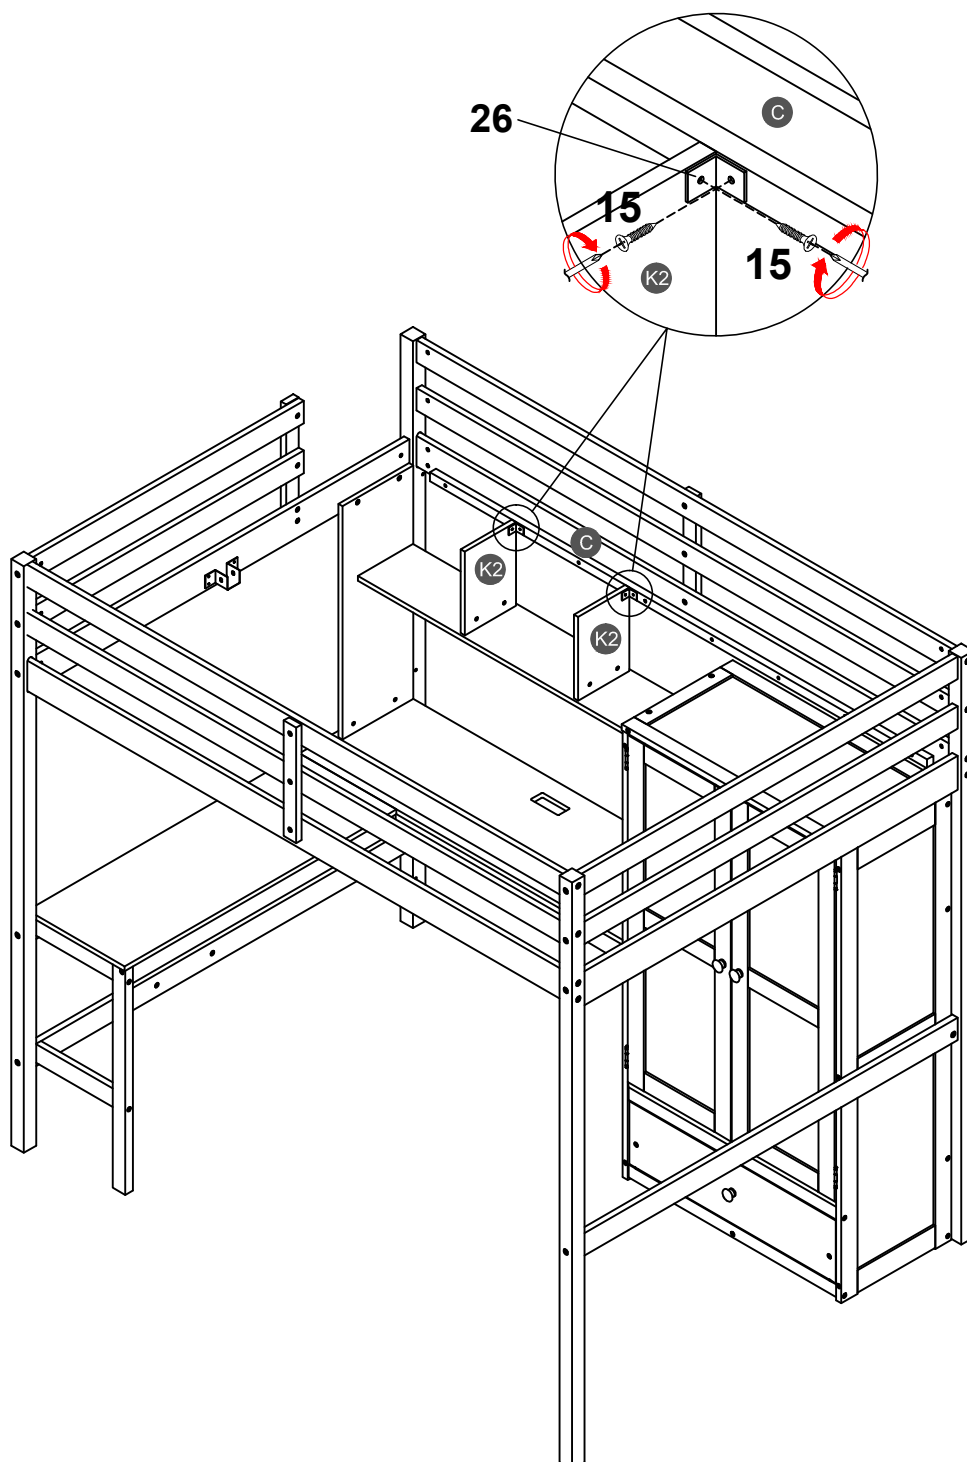

STEP 35:

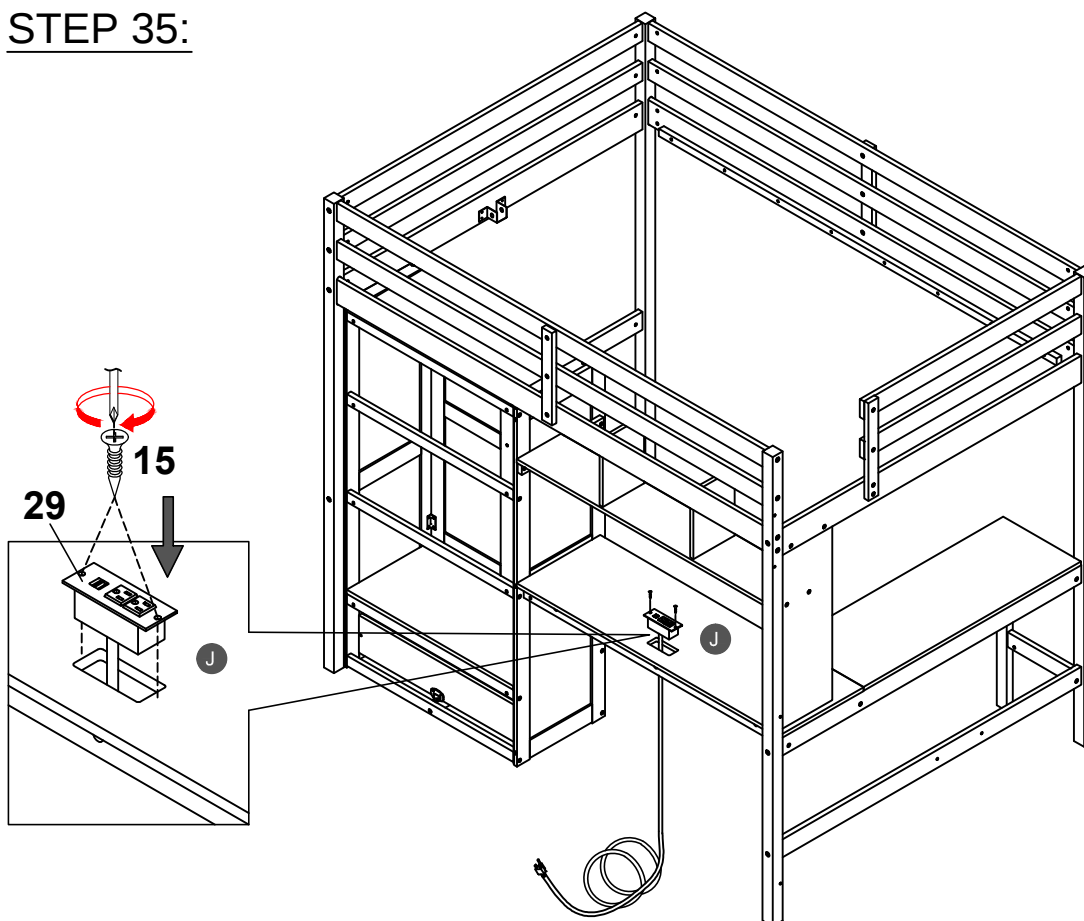

15




2PCS

29



1PC

STEP 36:

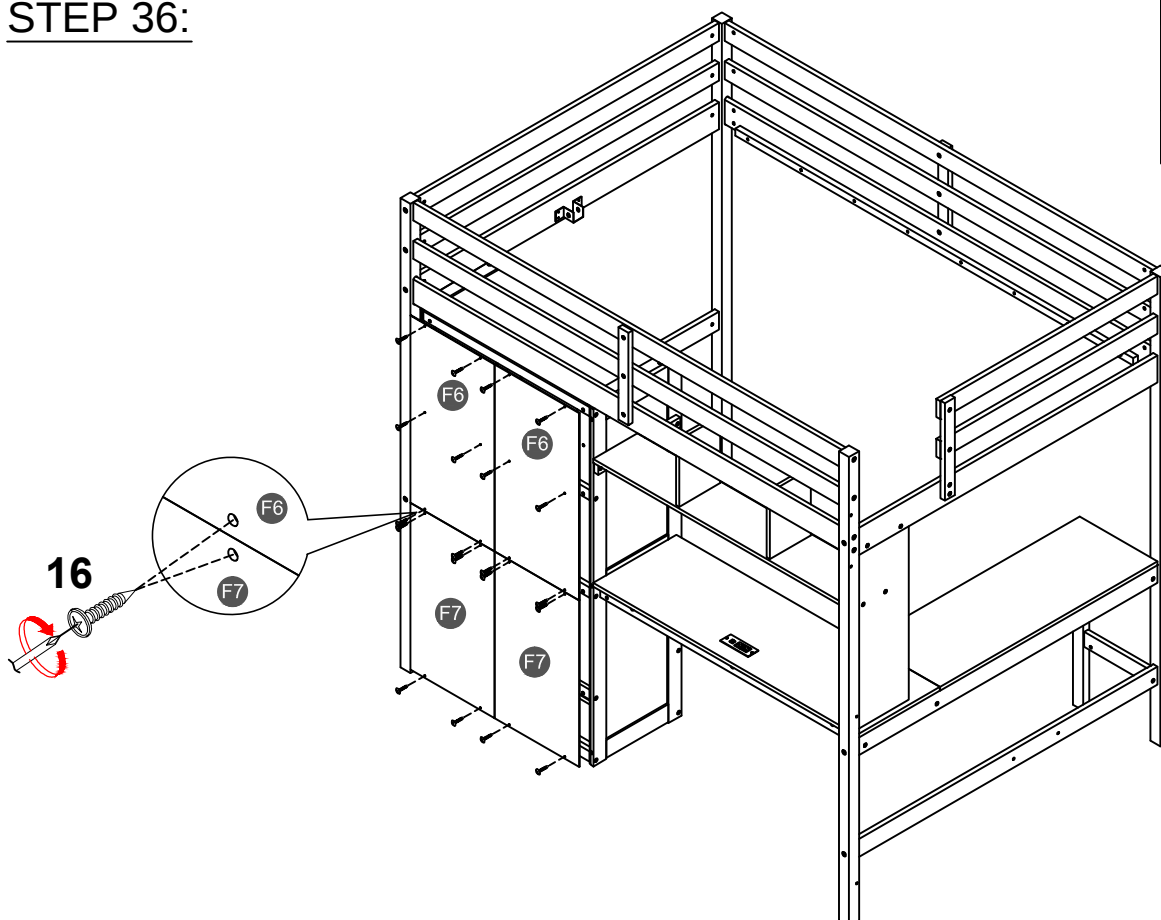


16




20PCS

STEP 37:

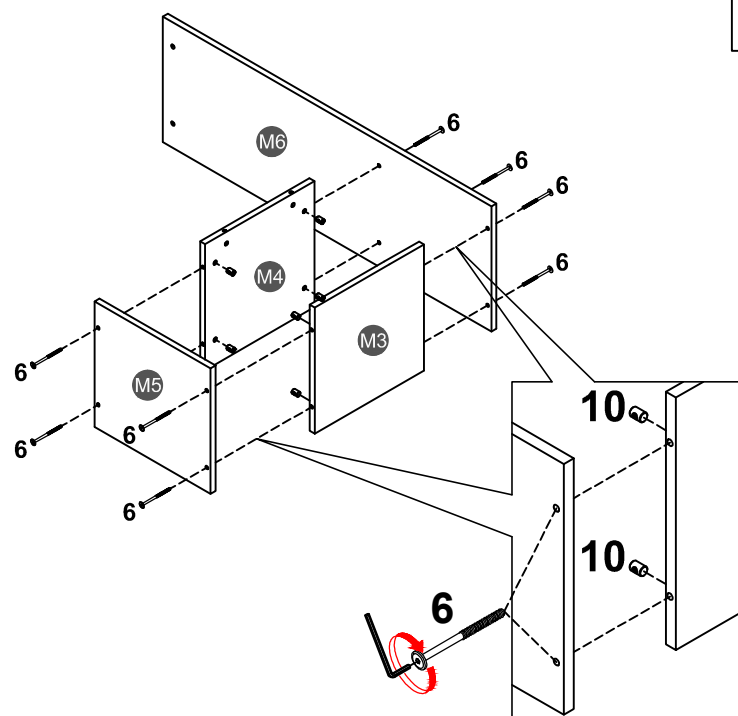

6		10	
8PCS		8PCS	


STEP 38:

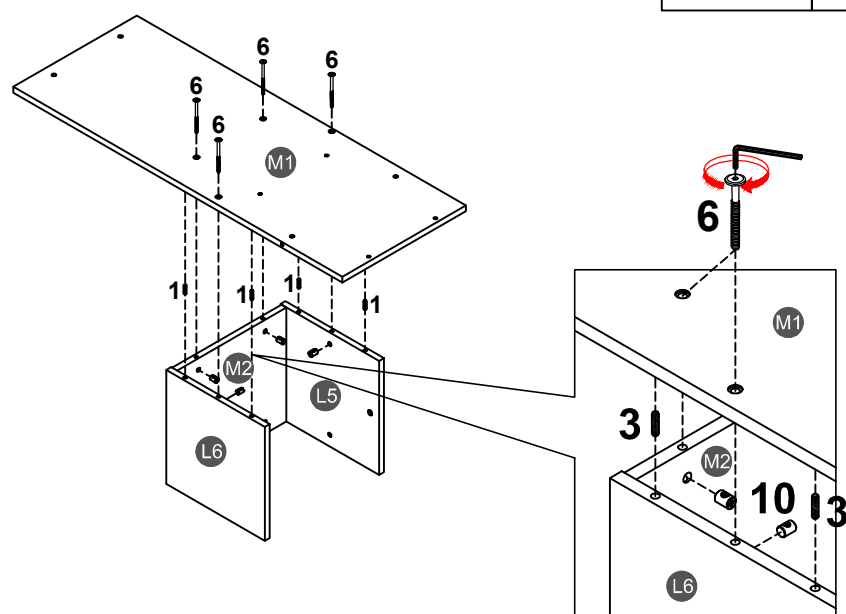

3		6		10	
4PCS		4PCS		4PCS	


STEP 39:

6		10	
2PCS		2PCS	

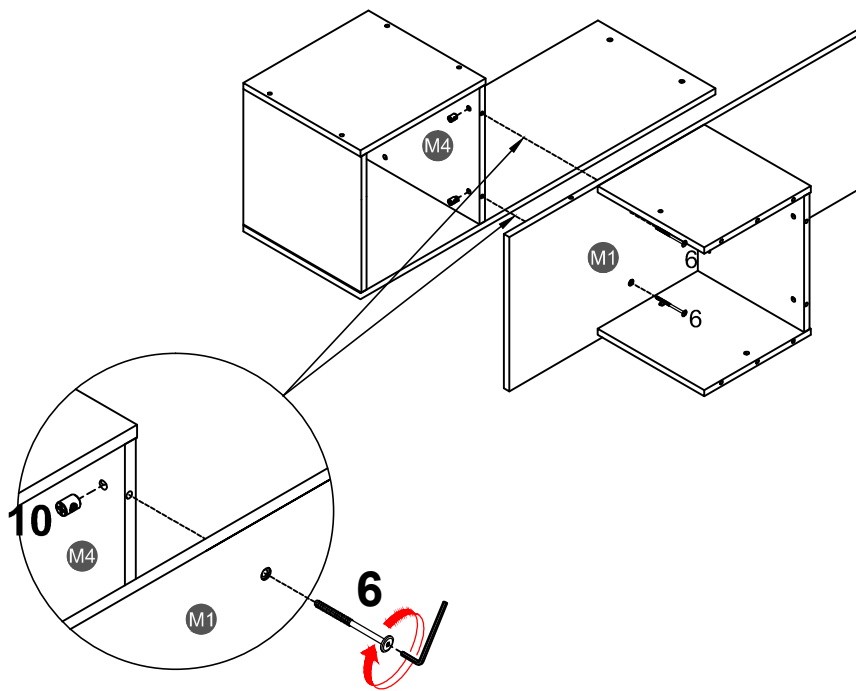


STEP 40:

3		6		10	
5PCS		4PCS		4PCS	

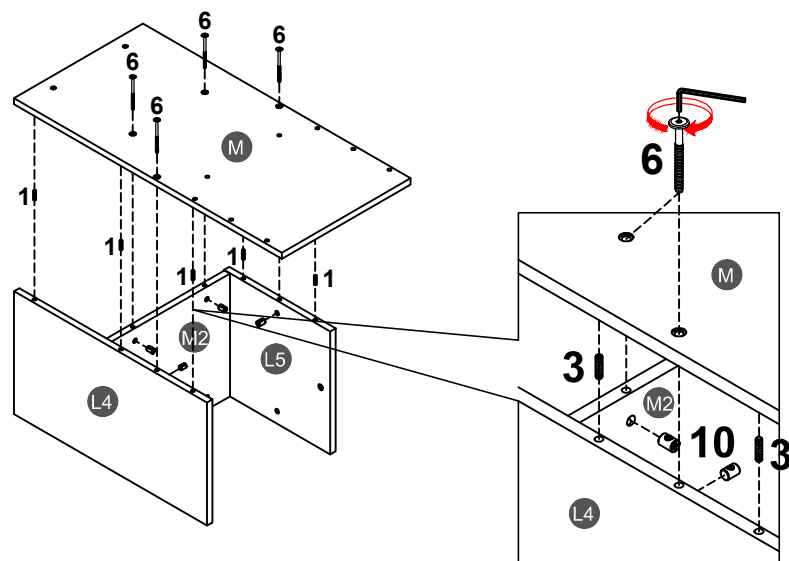


STEP 41:

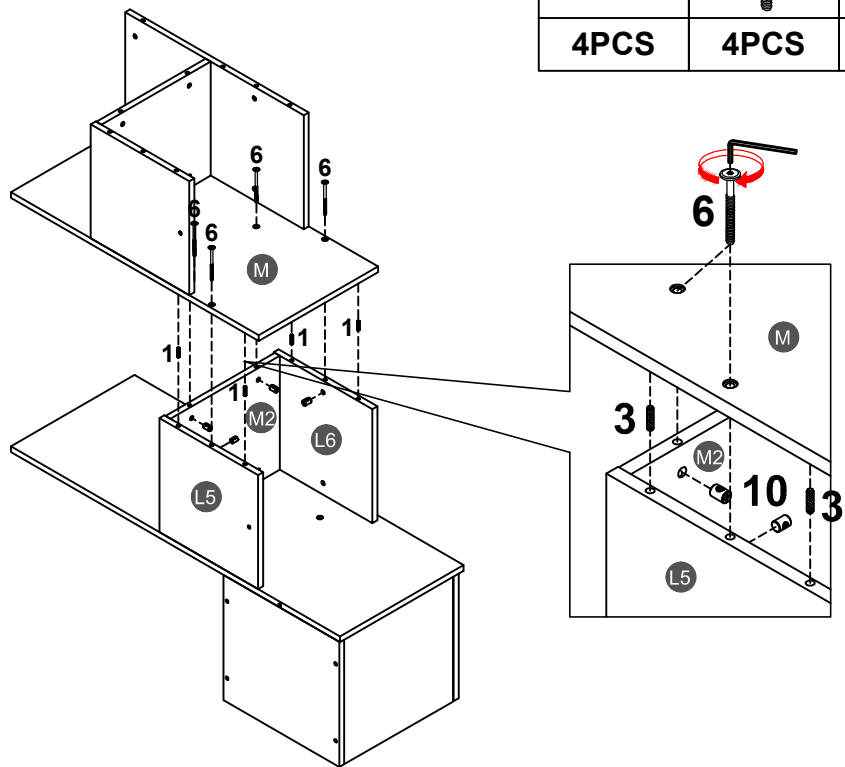


3		6		10	
4PCS		4PCS		4PCS	

STEP 42:

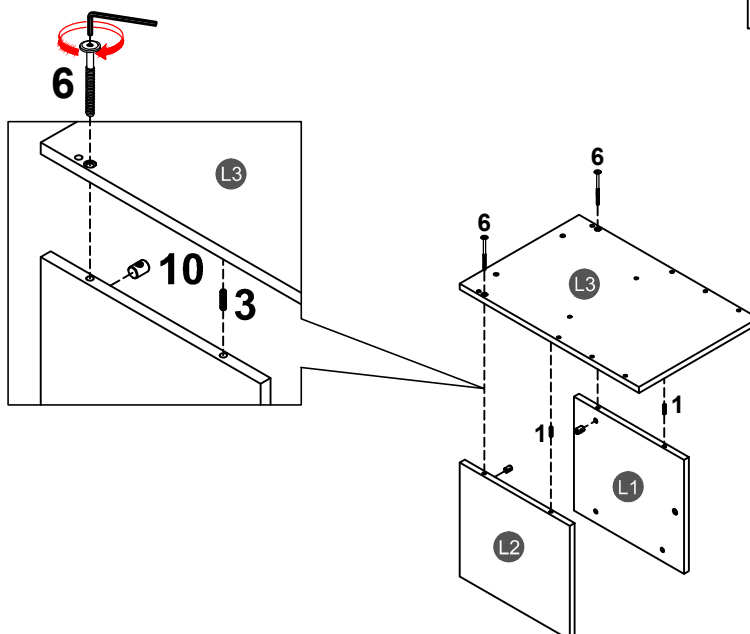


3		6		10	
2PCS		2PCS		2PCS	


STEP 43:

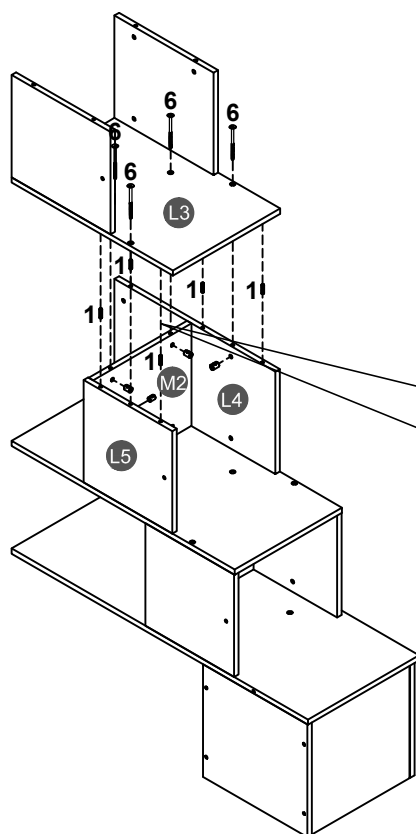


3		6		10	
5PCS		4PCS		4PCS	

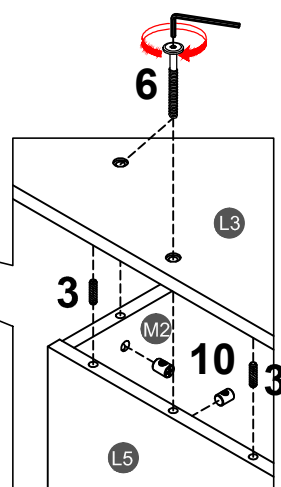

STEP 44:

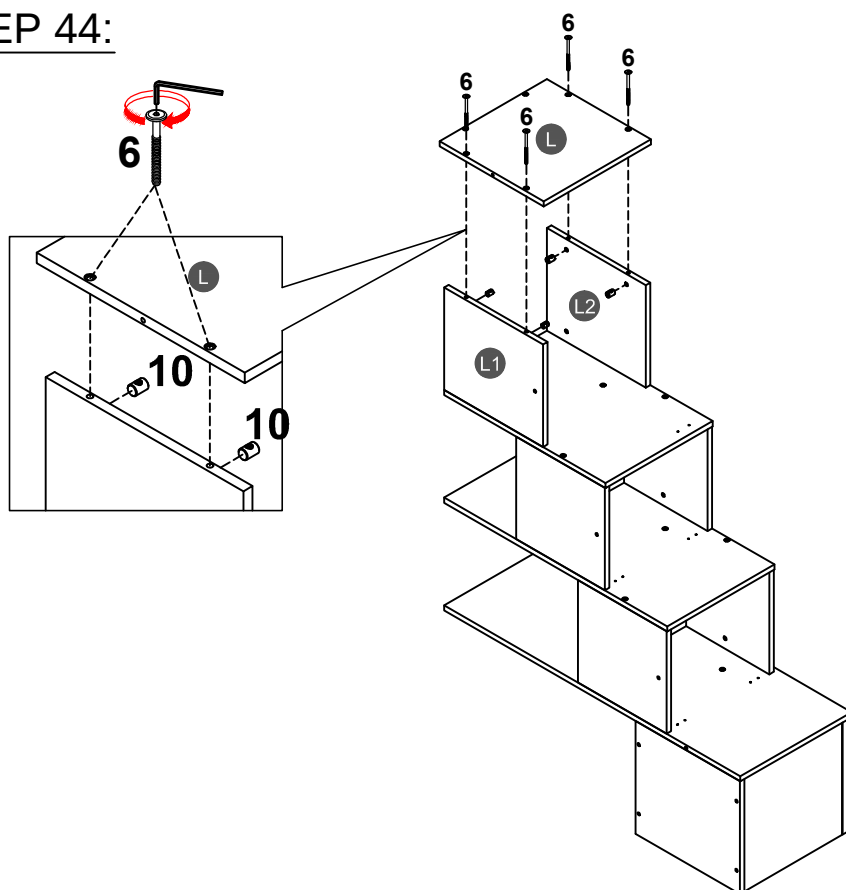


6		10	
4PCS		4PCS	

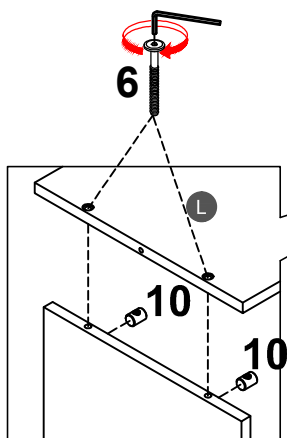


STEP 45:


6		10		13	
10PCS		10PCS		2PCS	

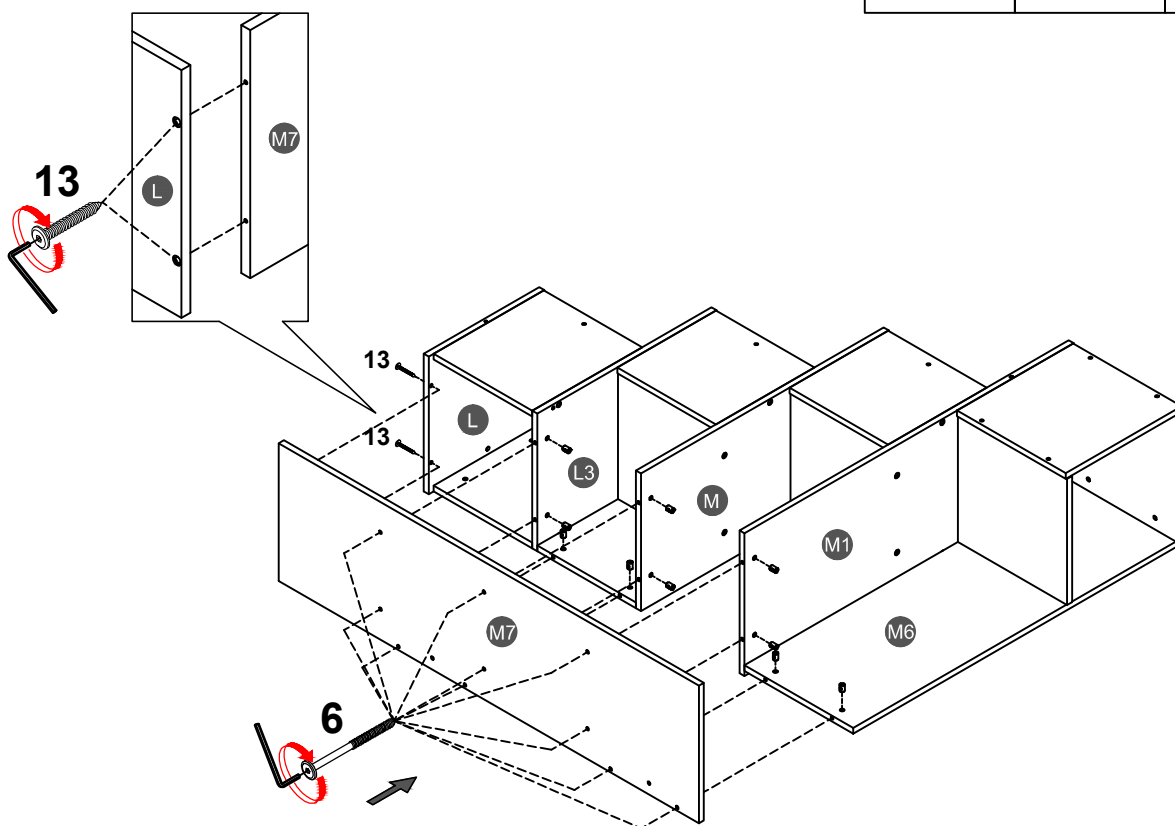

STEP 46:

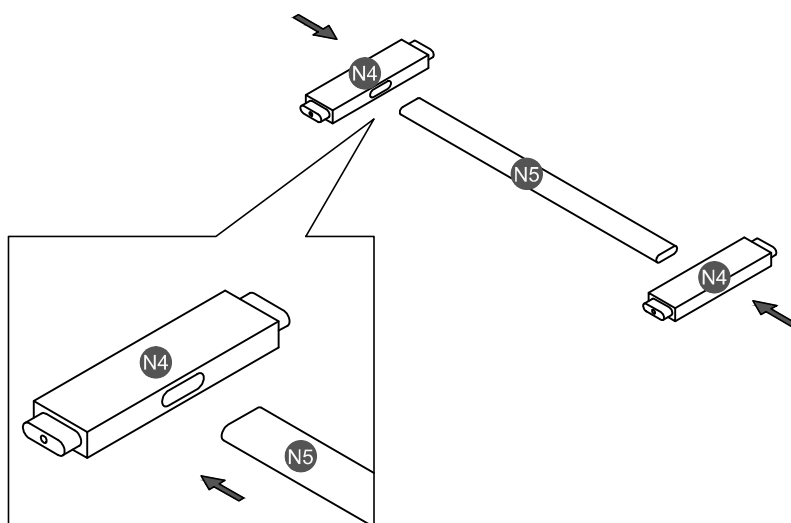


STEP 47:

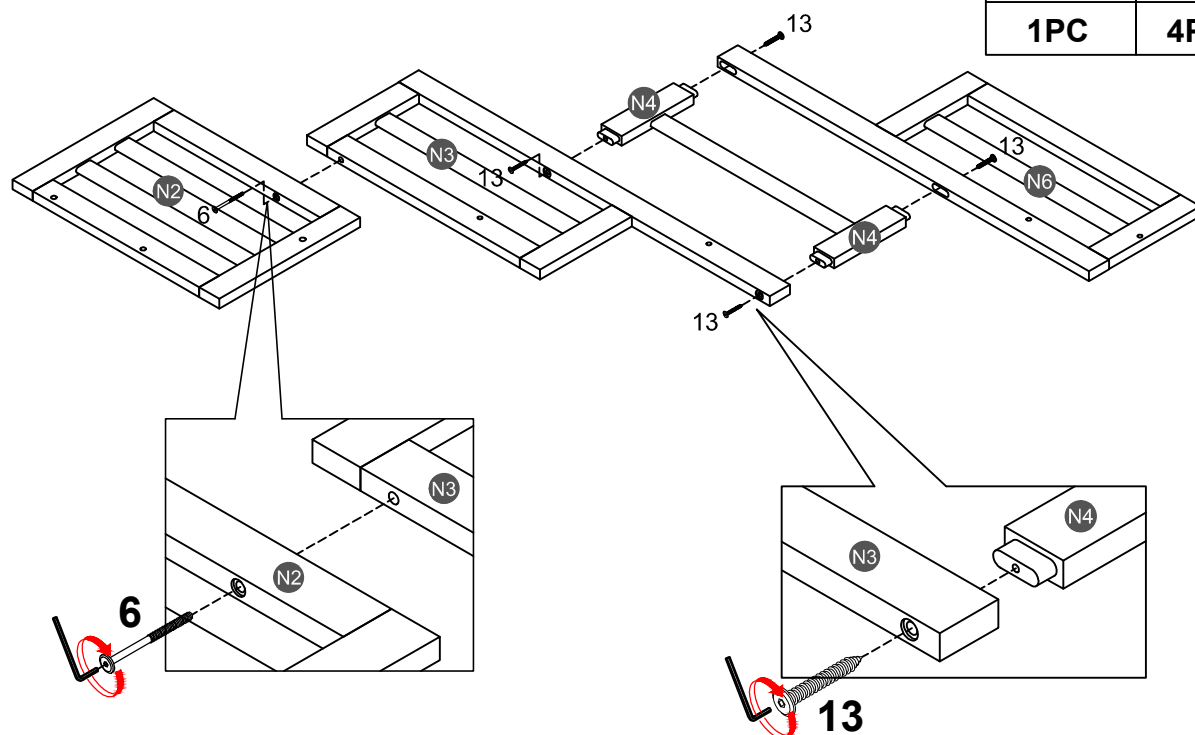

6		13	
1PC		4PCS	


STEP 48:

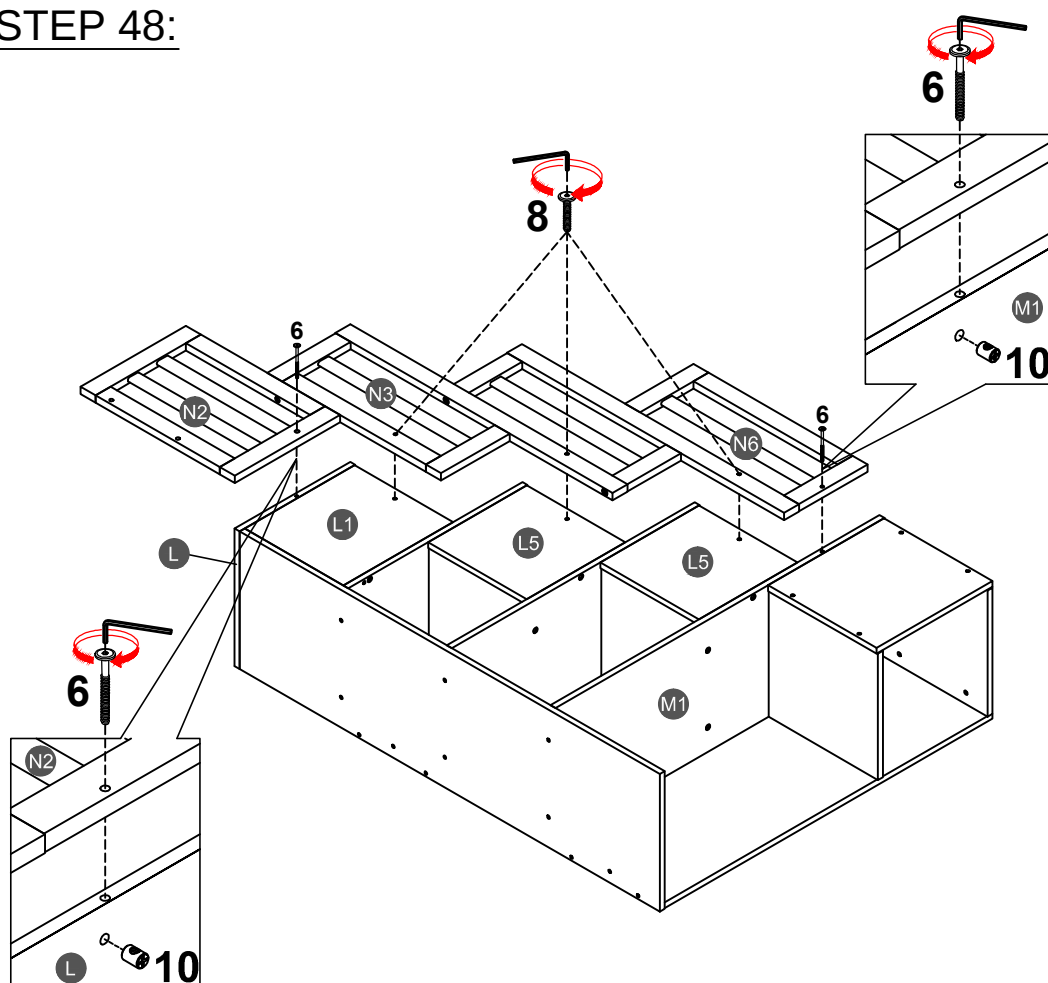

6		2PCS
8		3PCS
10		2PCS


STEP 49:

5		10	
2PCS		2PCS	

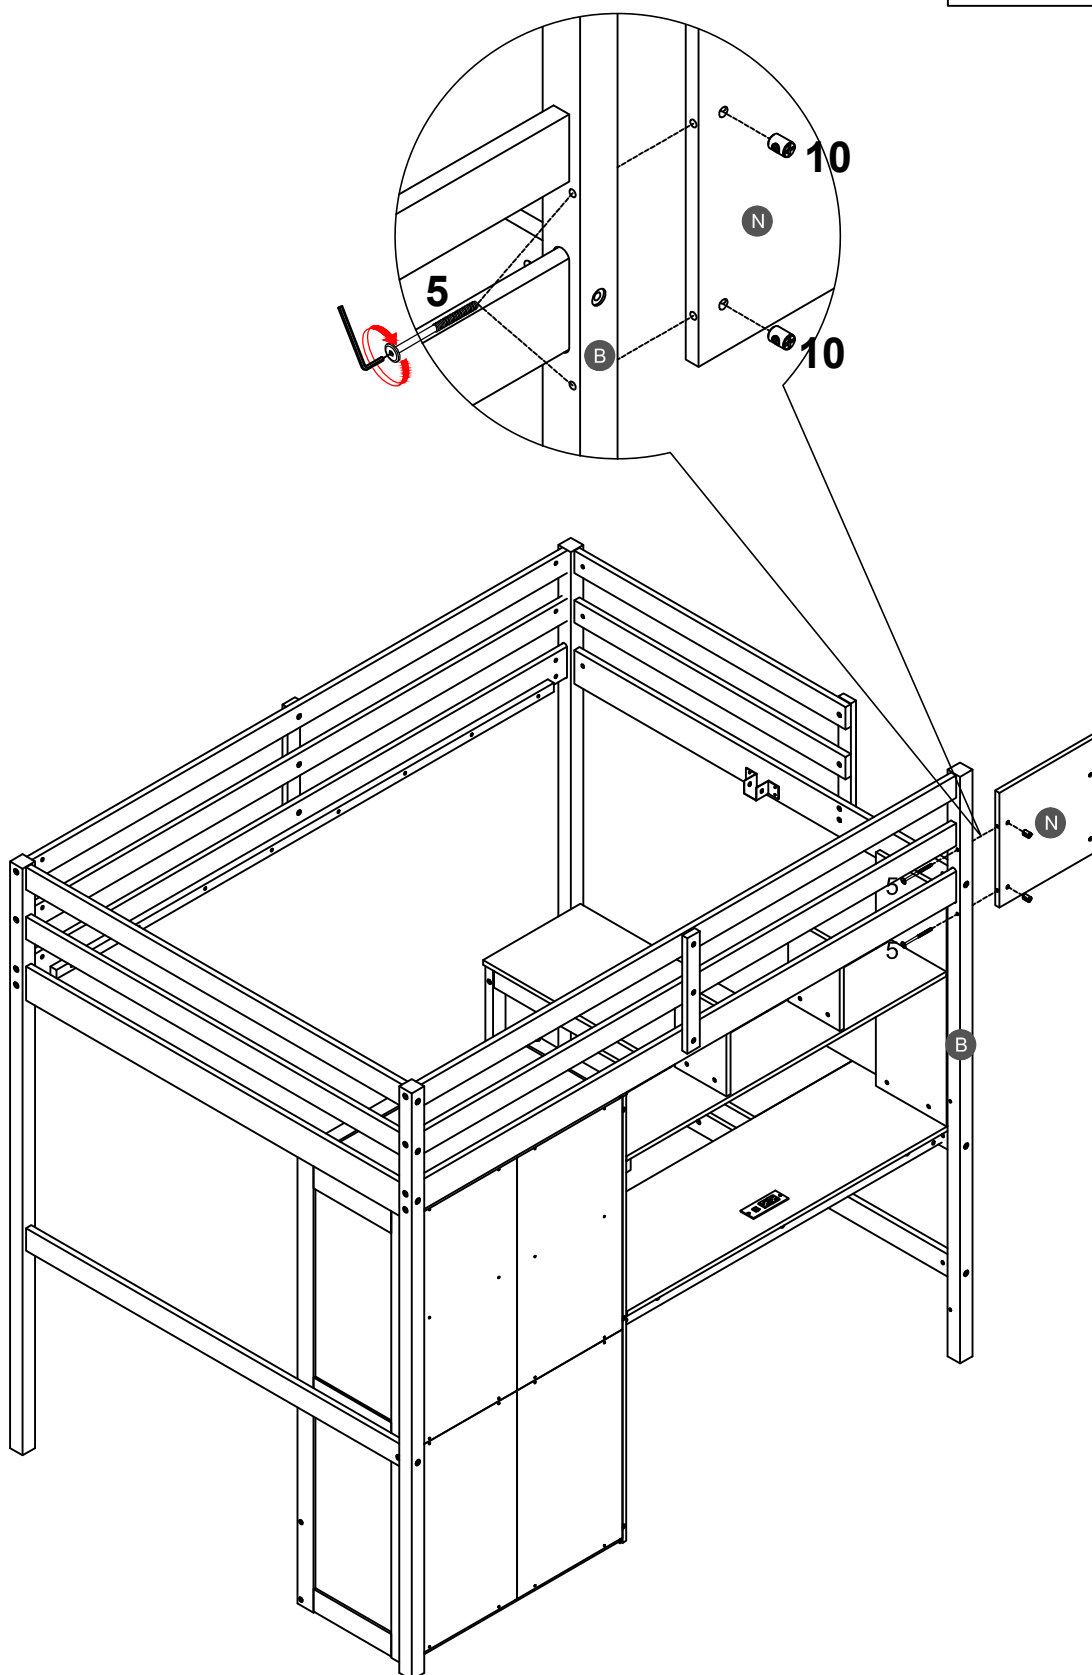



STEP 50:

6		7		10	
2PCS		2PCS		4PCS	

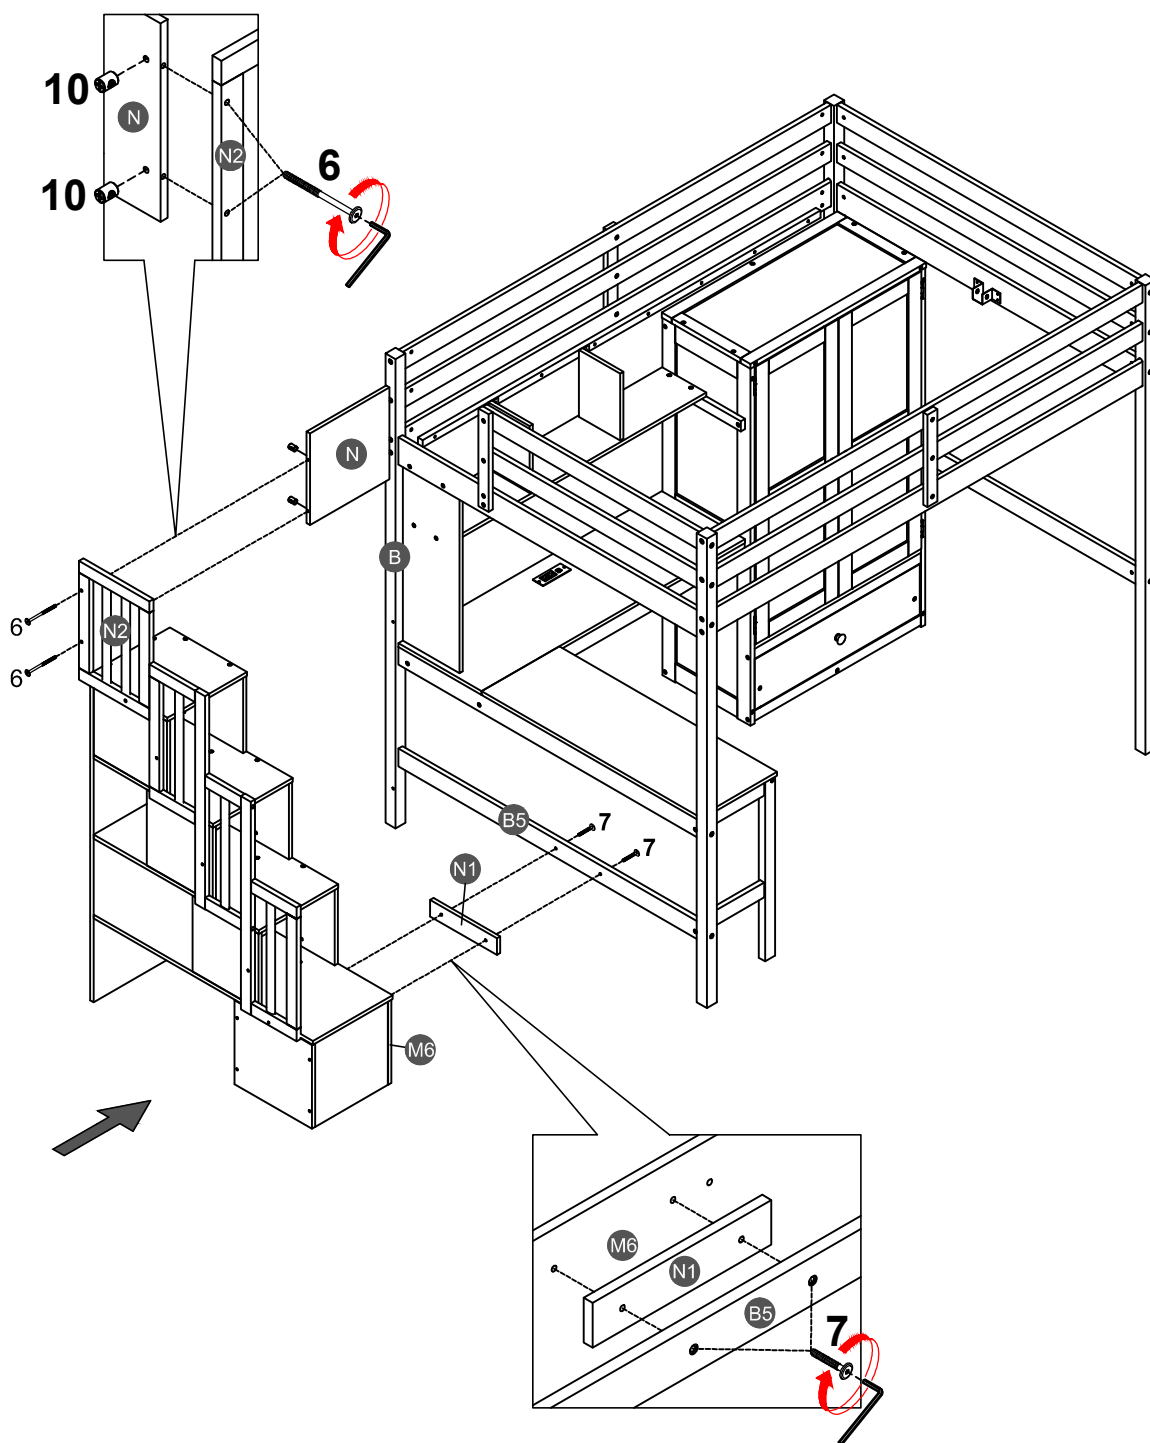


STEP 51:

5		10	
2PCS		2PCS	

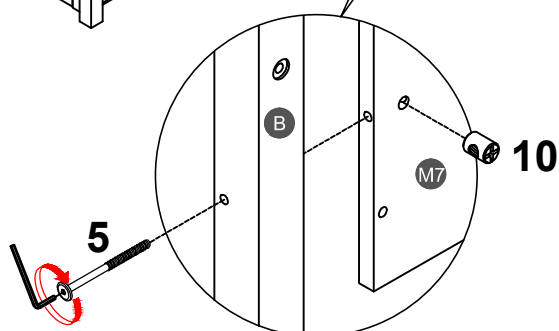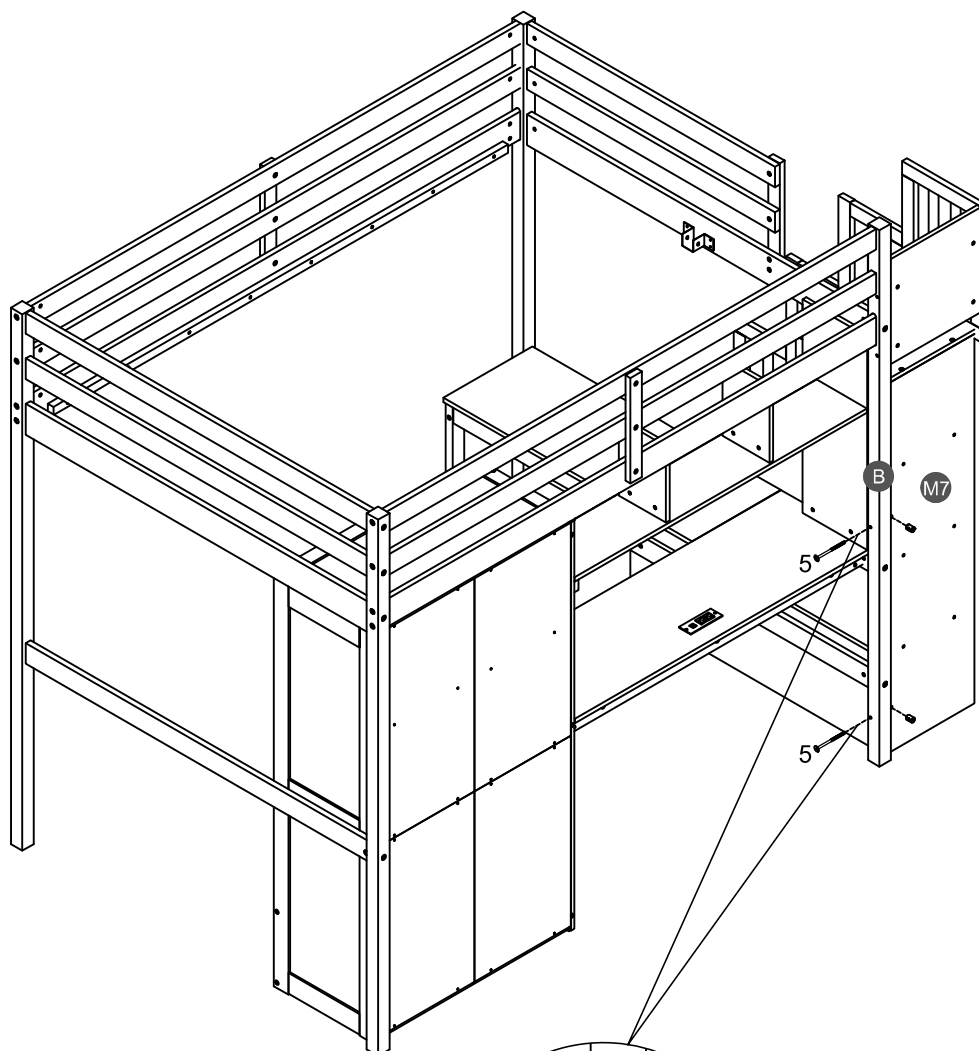

STEP 52:

7	17
	
2PCS	2PCS

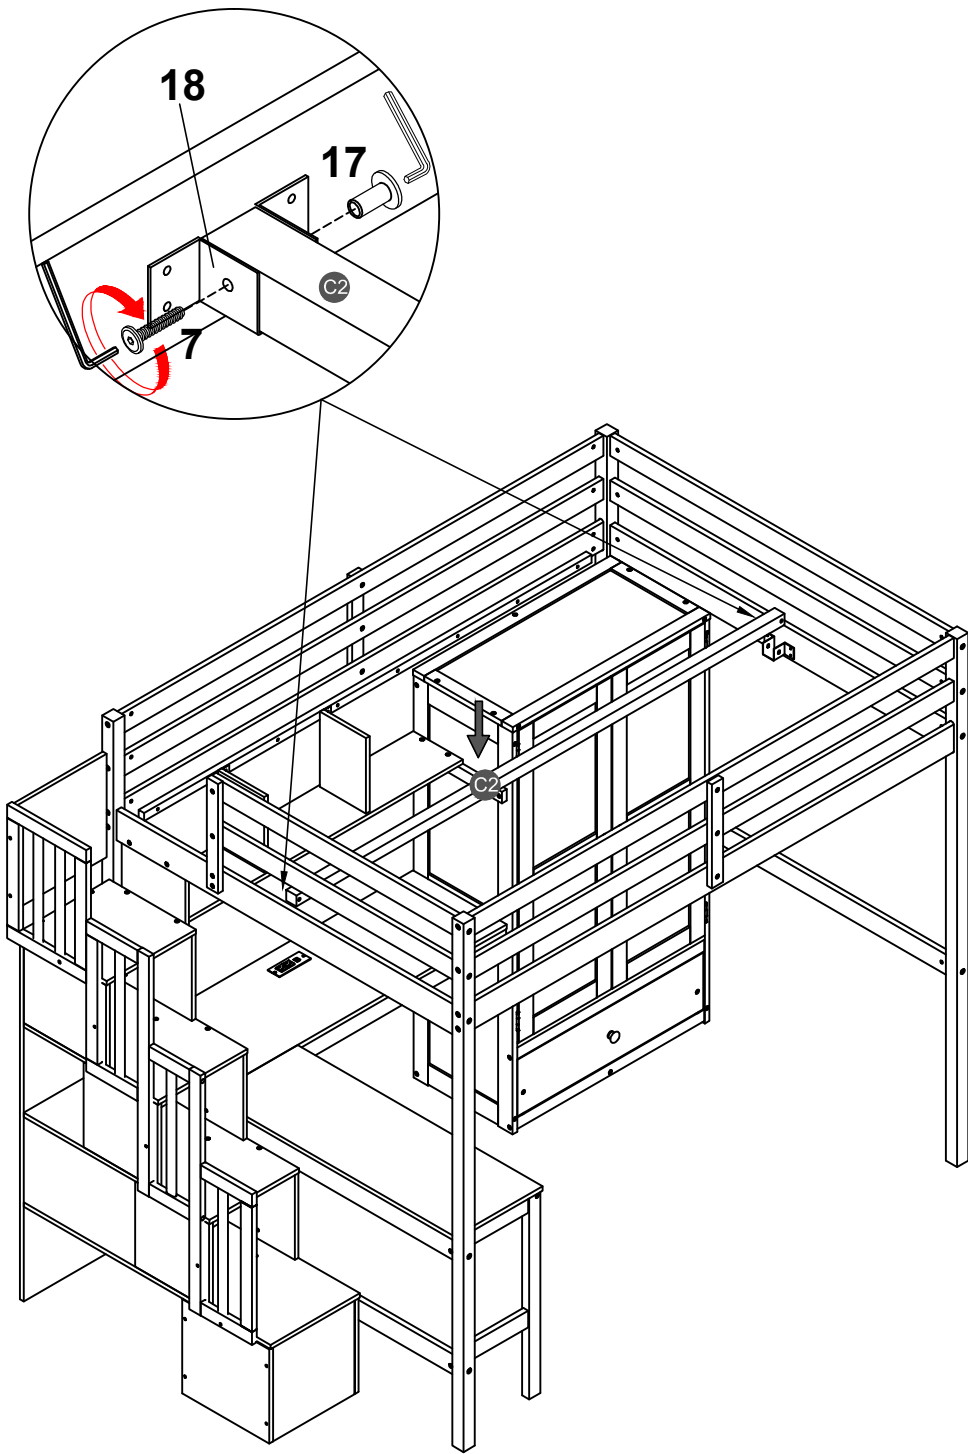


STEP 53:


14



32PCS

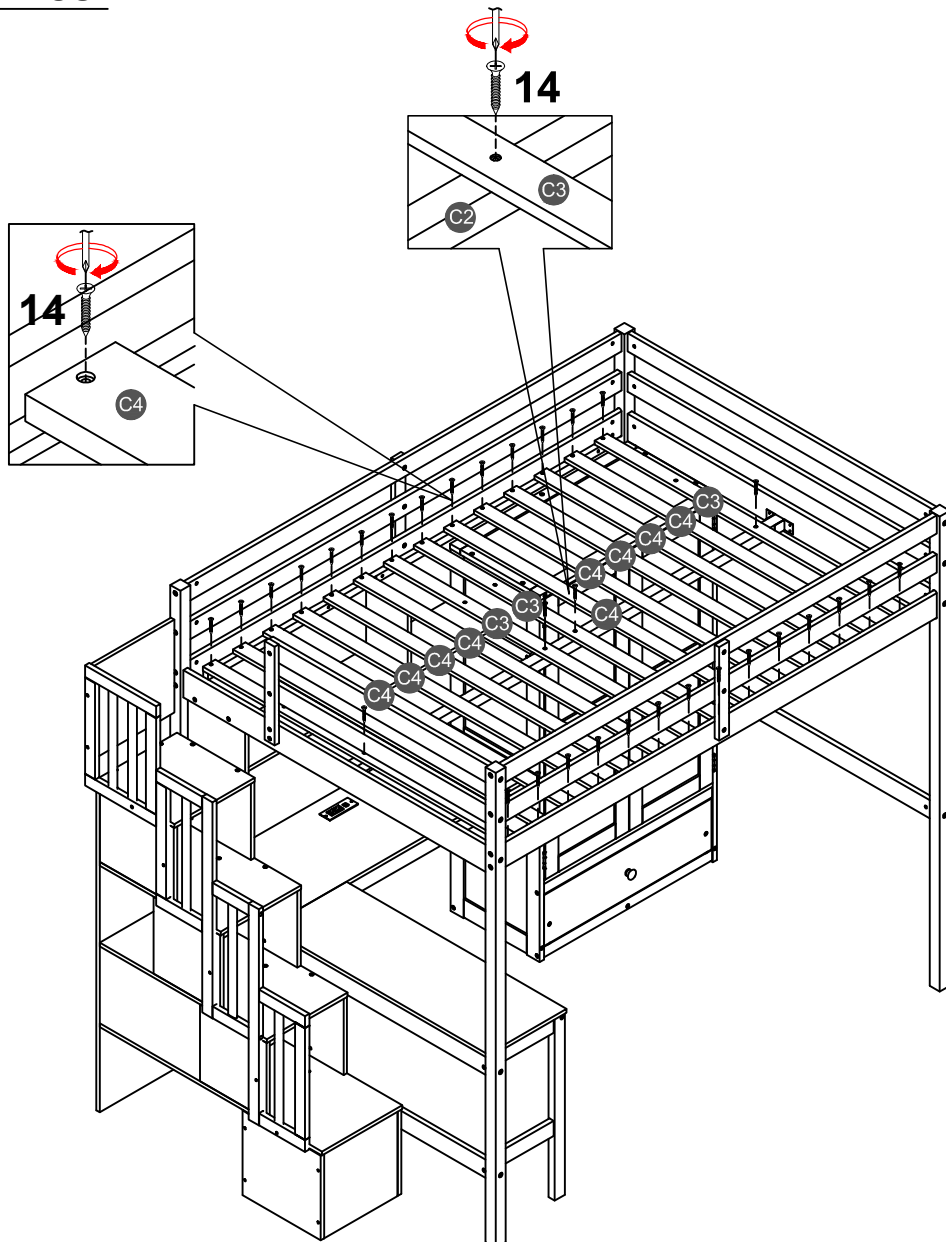

For better fixing effect, there is no pre-drilled hole on the side rails.
Please use self-tapping screws to fix it.

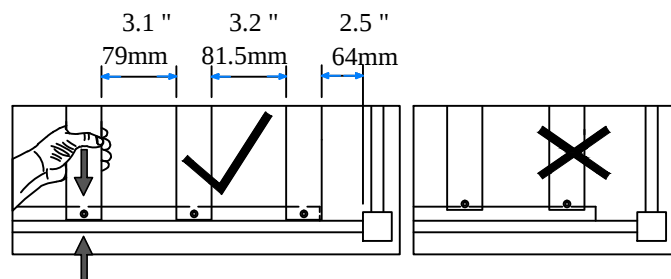

NOTE: Please make sure the bed slats close to the side rail before locking the screws to avoid breakage. This step is required for both the left and right sides. Moreover, please do not lock the screws of the bed slats at the outermost edge to avoid damaging.

