


YB808-76#

Bathroom cabinet

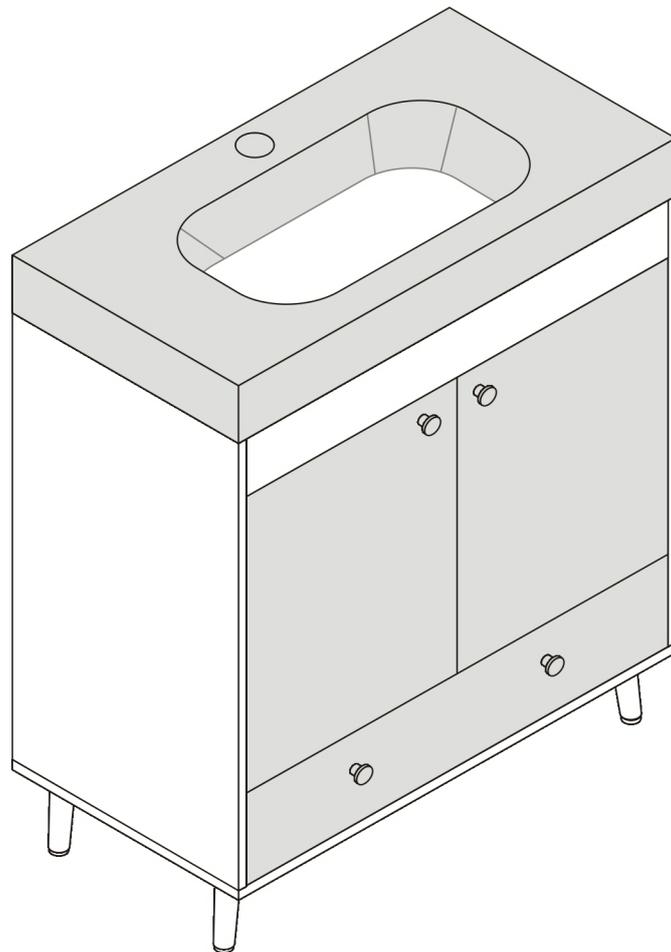


2 Persons


L752*W455*H593MM

Installation Instructions











Notes: Don't tighten screws completely at first, just in case parts were assembled wrongly and need disassemble. Tighten screws at last when all parts are put together.

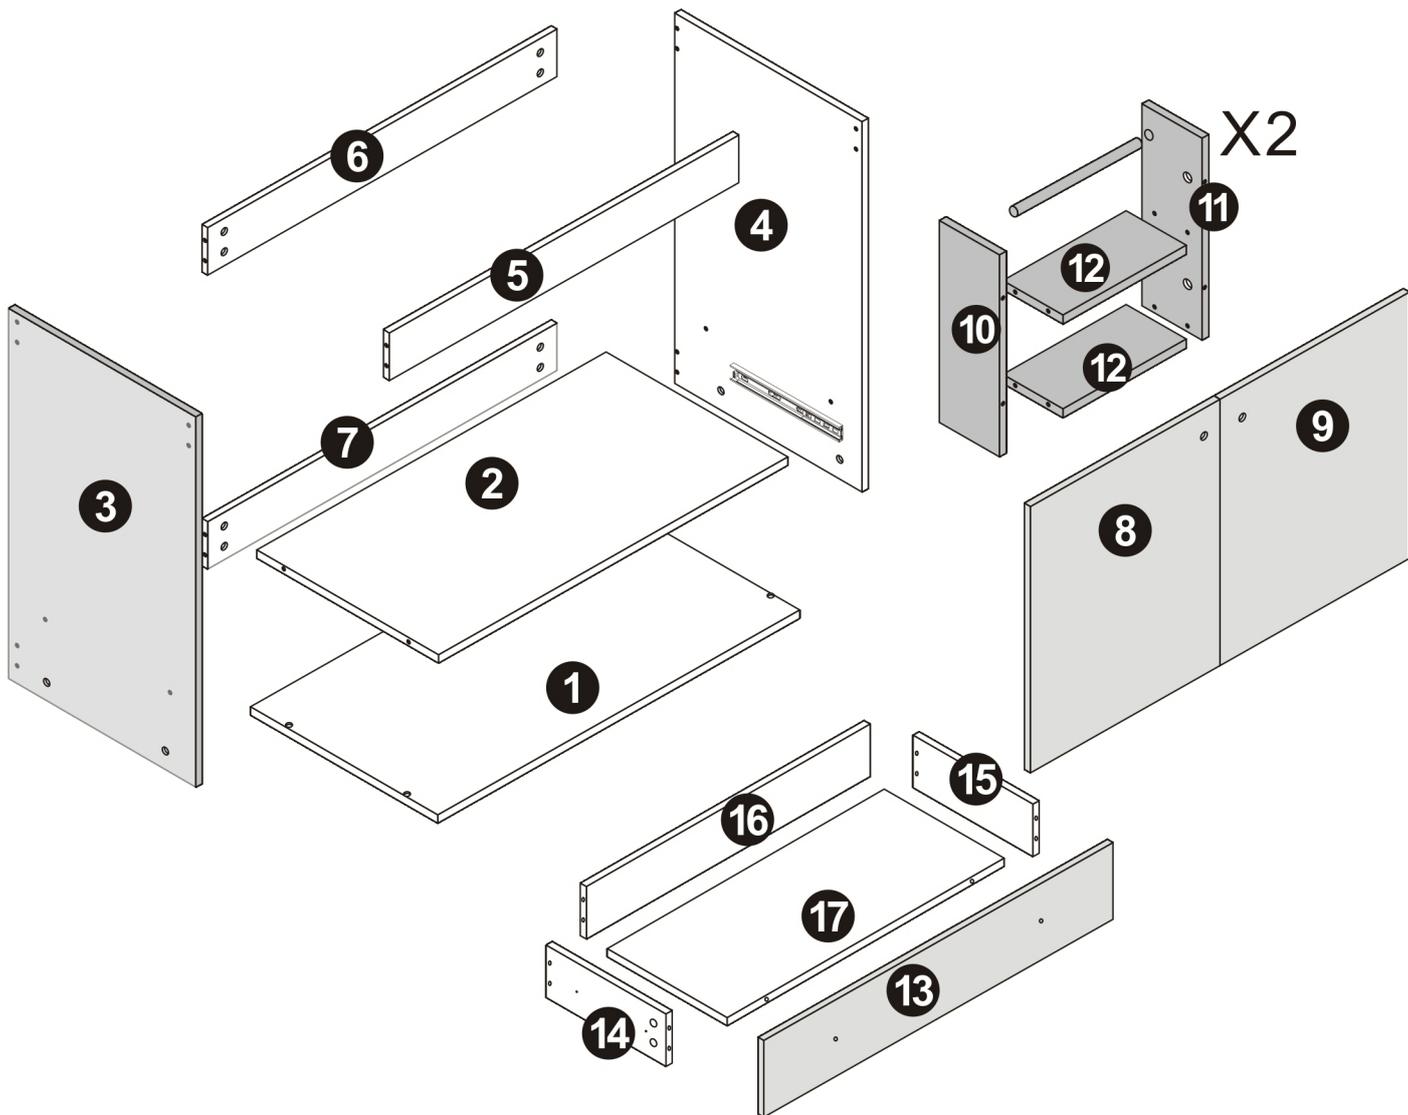


Disassembly and installation of accessories

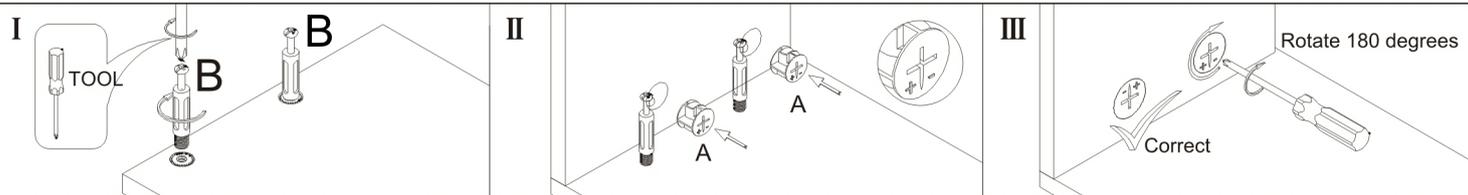

A 52PCS  15*10mm	B 52PCS  6*28mm	C 64PCS  3.5*14mm	D 10PCS  3.5*35mm	E 4PCS  4*20	F 4PCS  Handles	G 4PCS  Sponge Mat	H 4PCS  9.8cm	
I 2PCS  Expansion screw	J 2PCS  Corner code	K 1PCS  Three-section Rail	L 4PCS  Hardware Feet	M 4PCS  Mid bend				

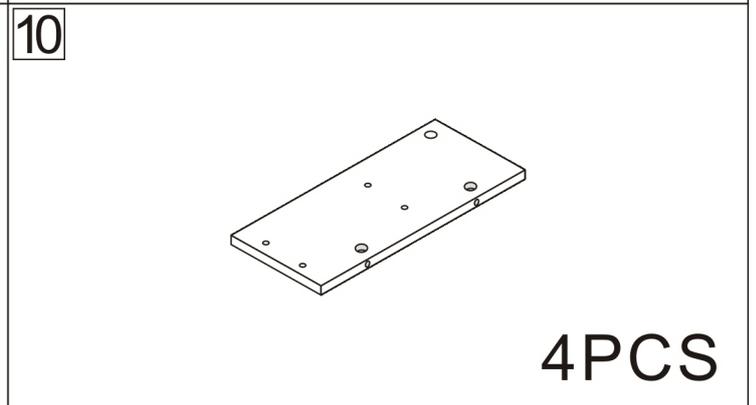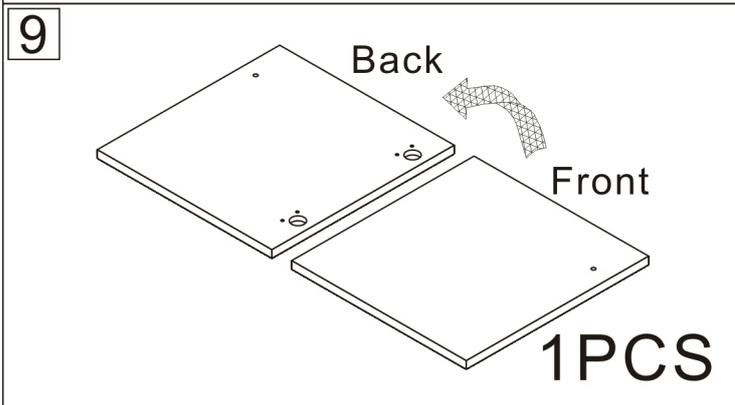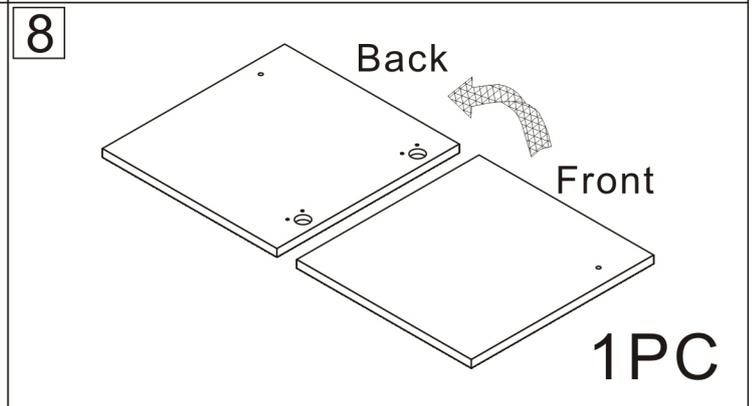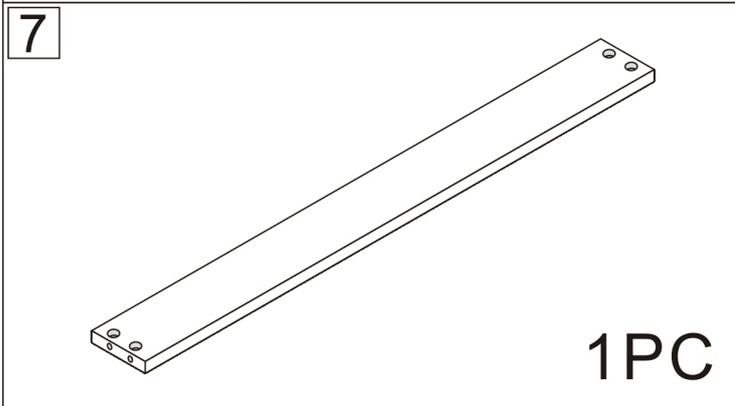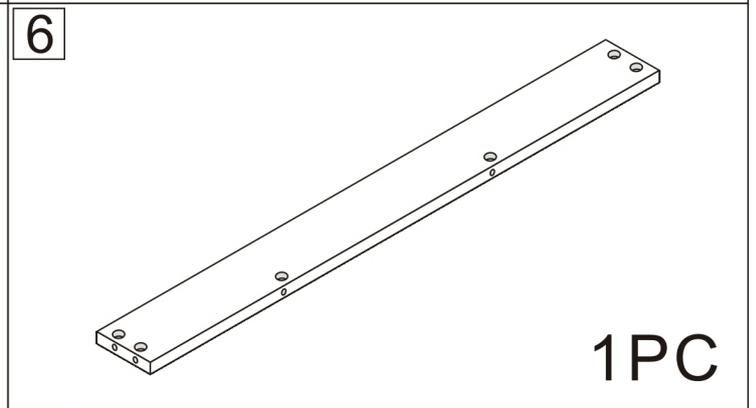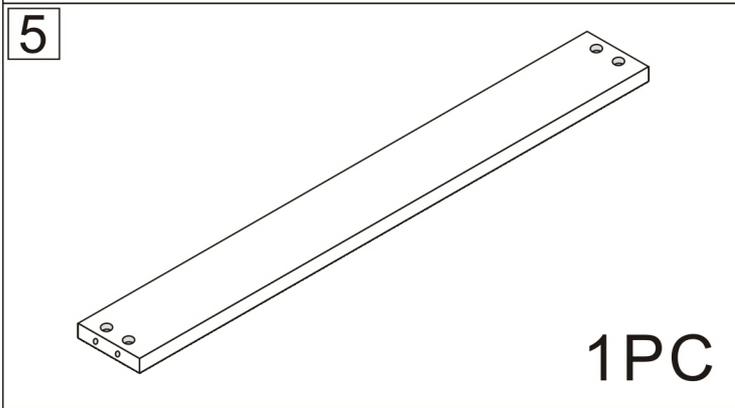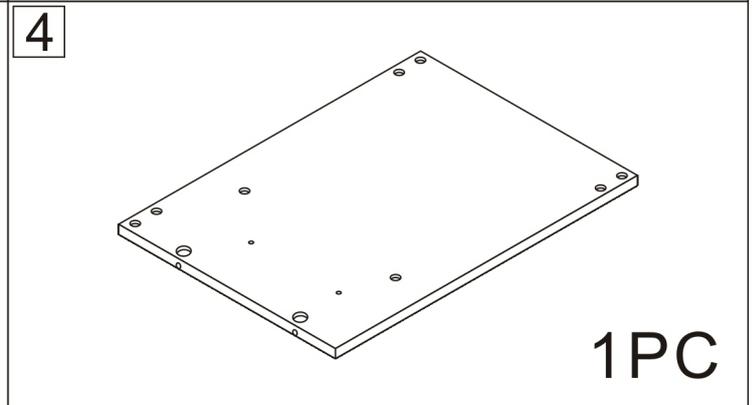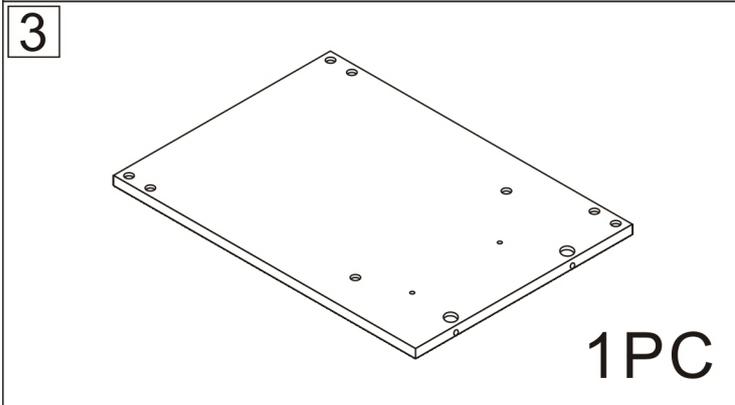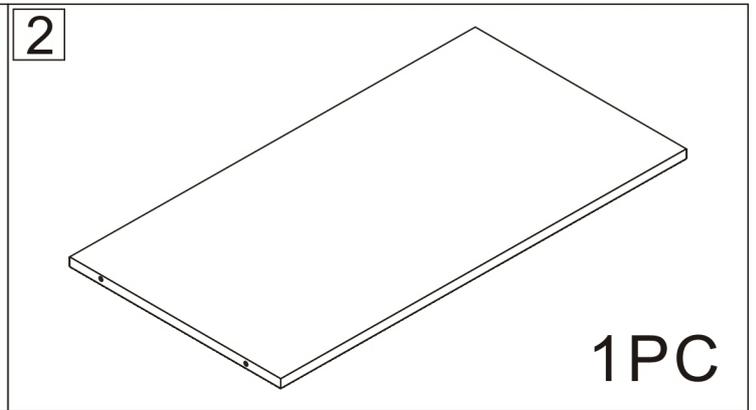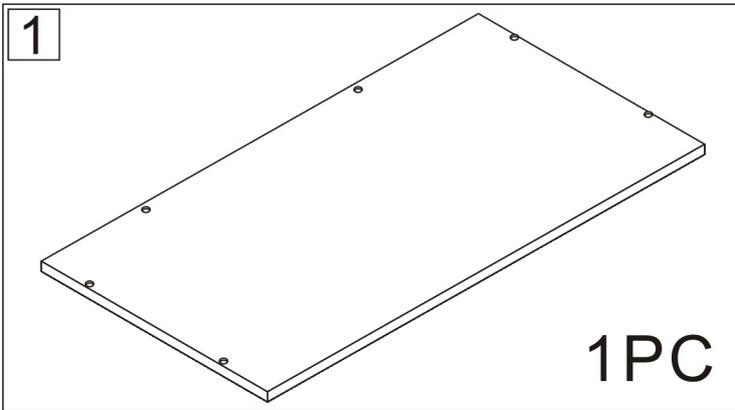


11

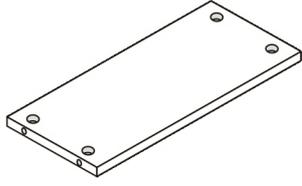


4PCS

12

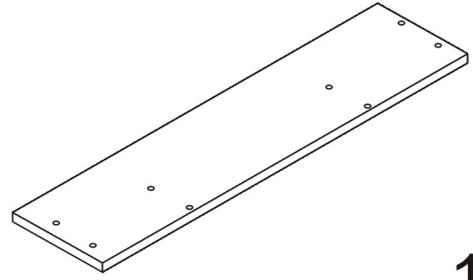


1PC

13

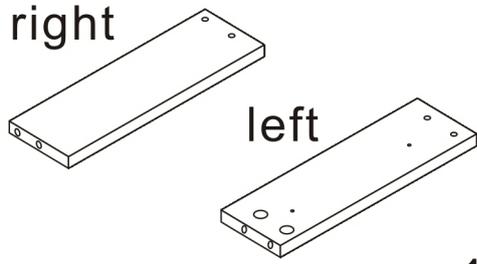


1PC

14

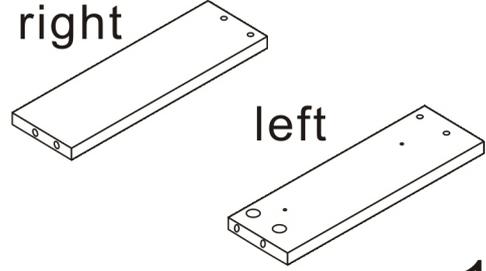


1PC

15








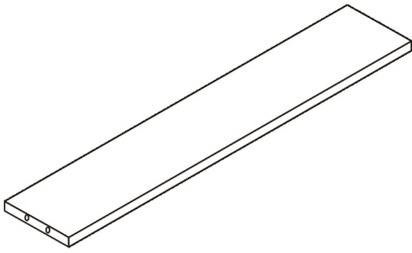


1PC

16

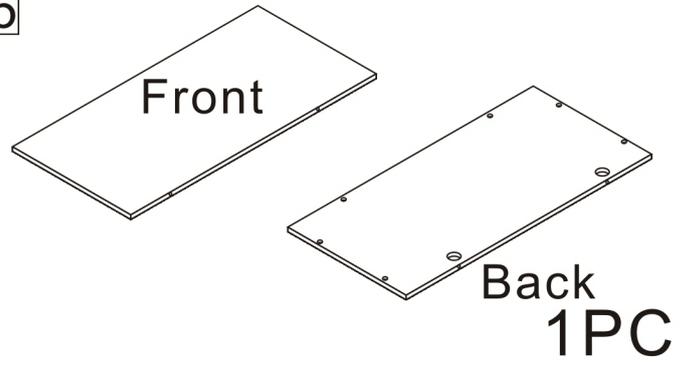


1PC

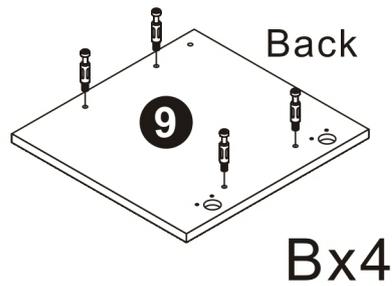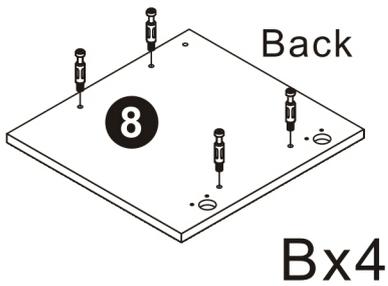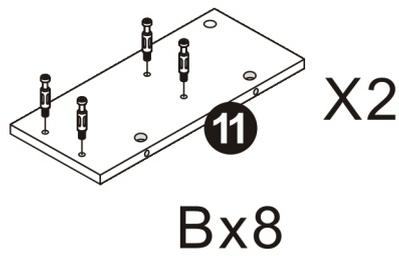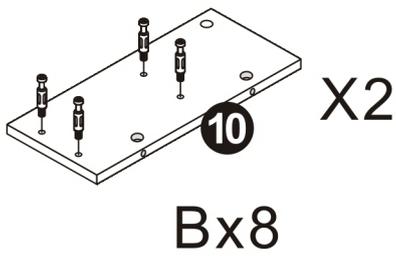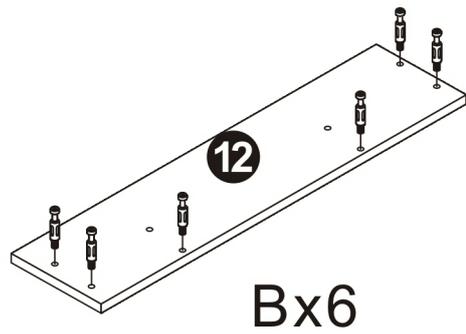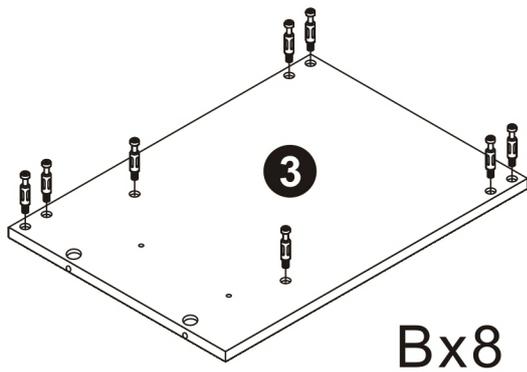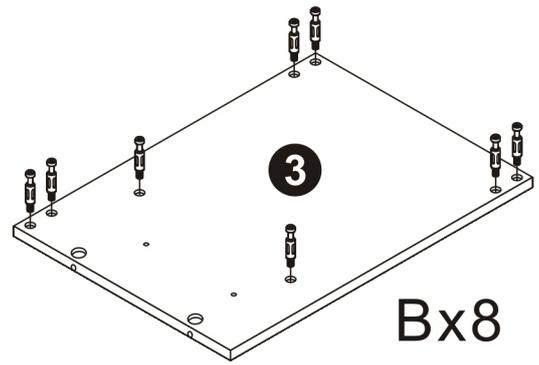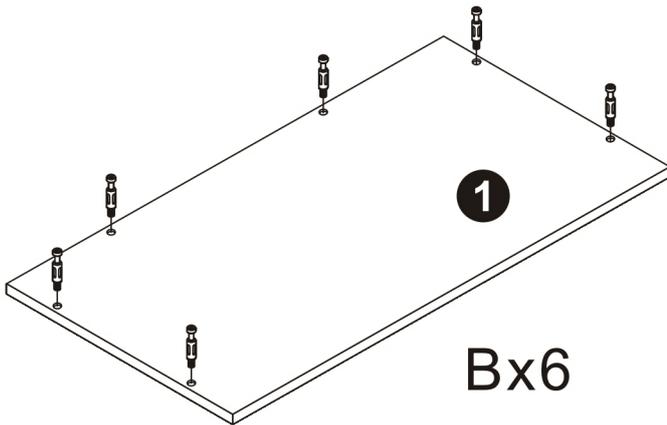


B	52PCS
	
6*28mm	

2

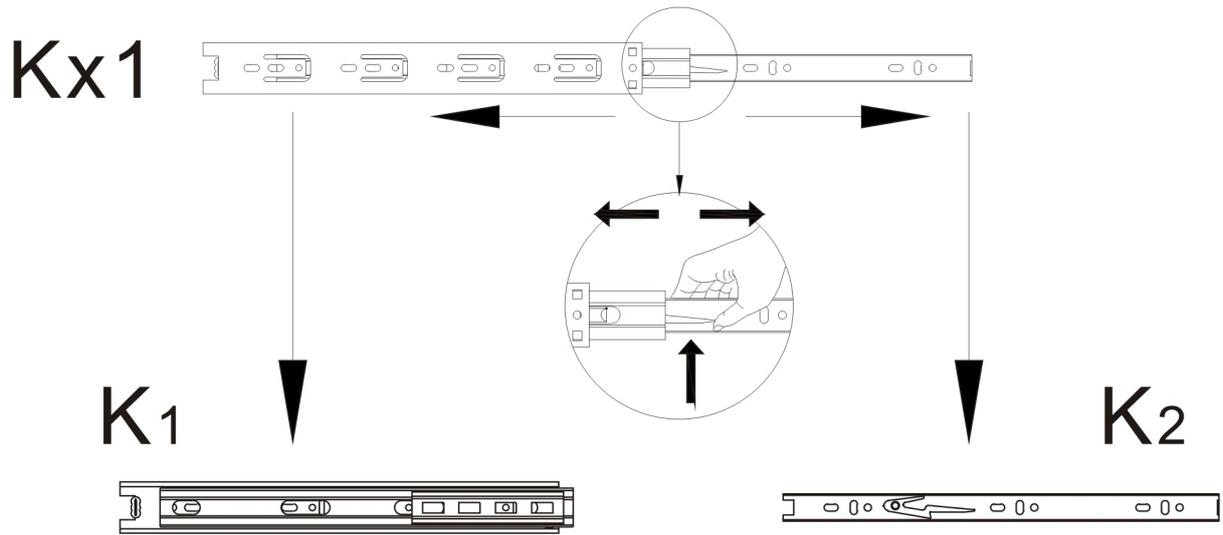


K₁	1PCS
	
Three-section Rail	

3

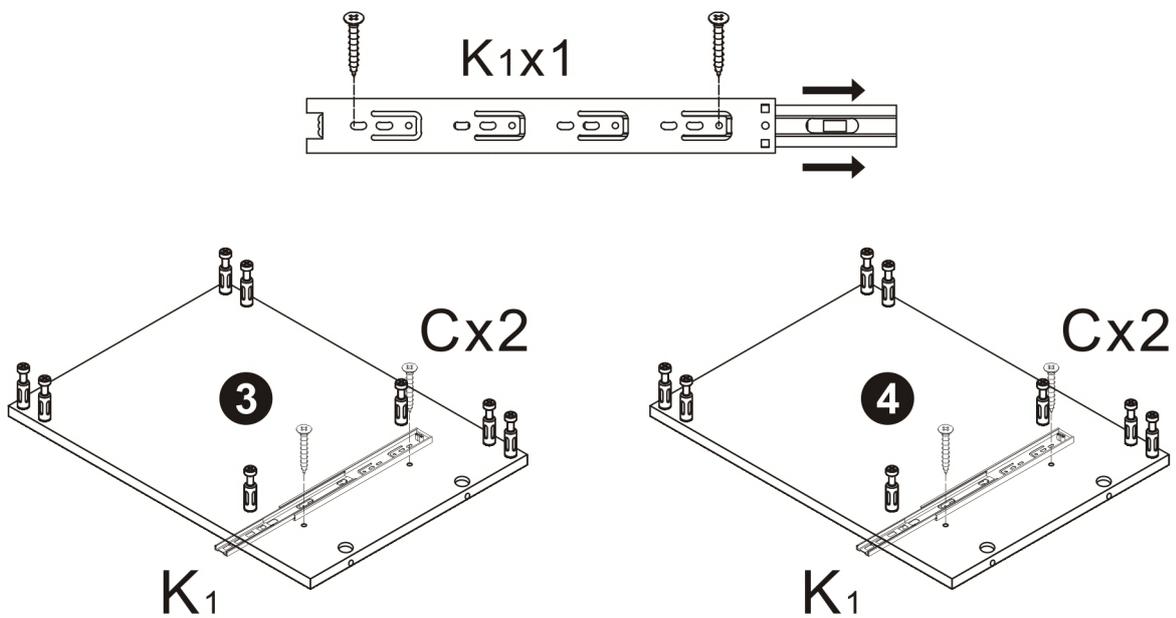


C	4PCS	K₁	1PCS
			
3.5*14mm		12 inch Three-section Rail	

4

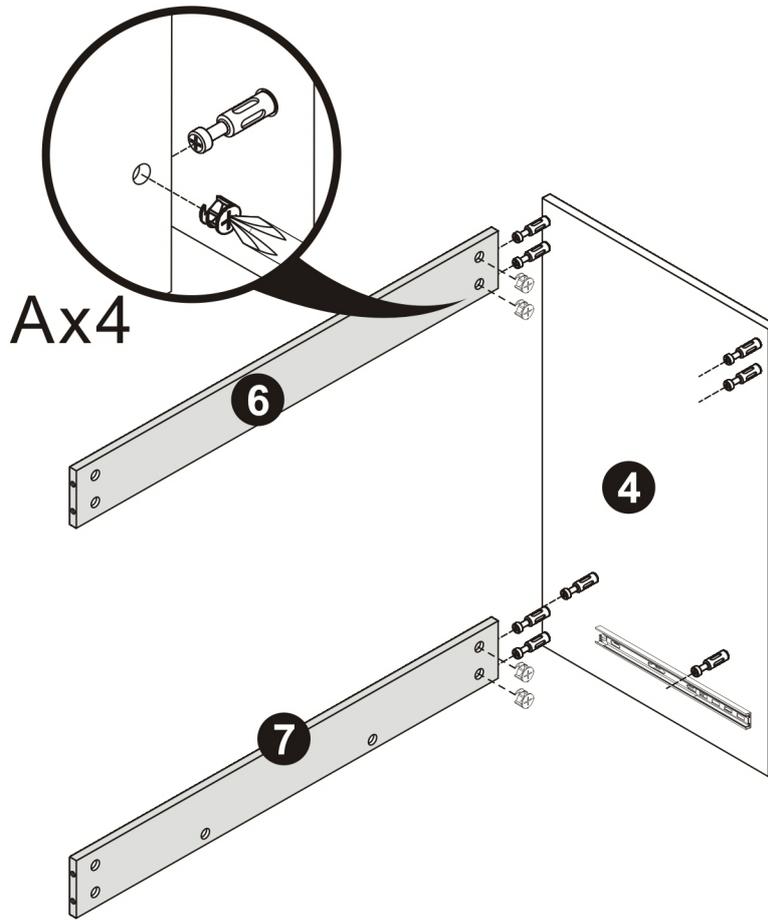


A	4PCS
	
15*10mm	

5

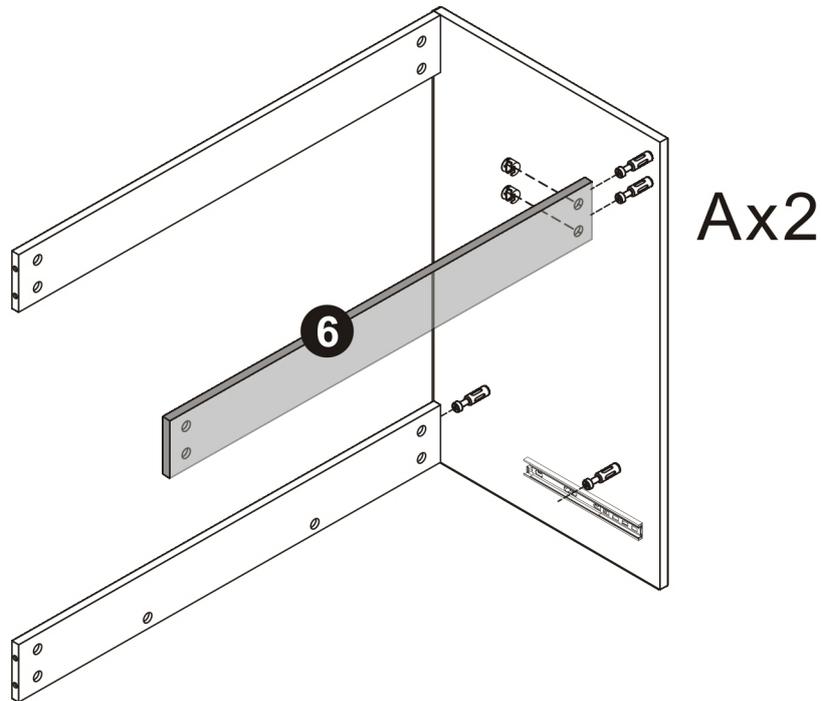


A	2PCS
	
15*10mm	

6

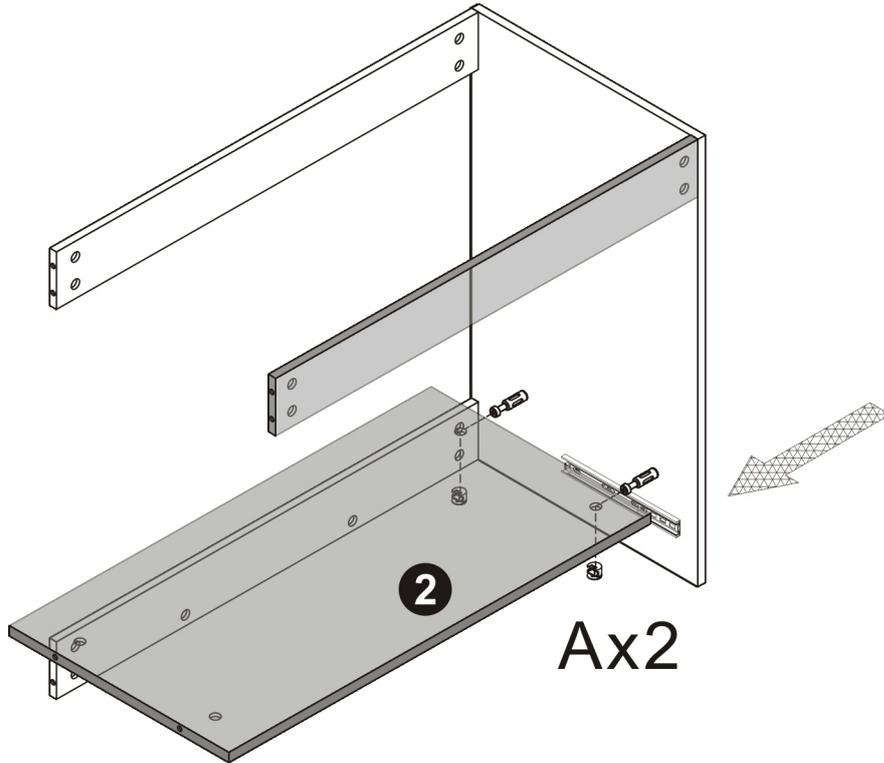


A	2PCS
	
15*10mm	

7

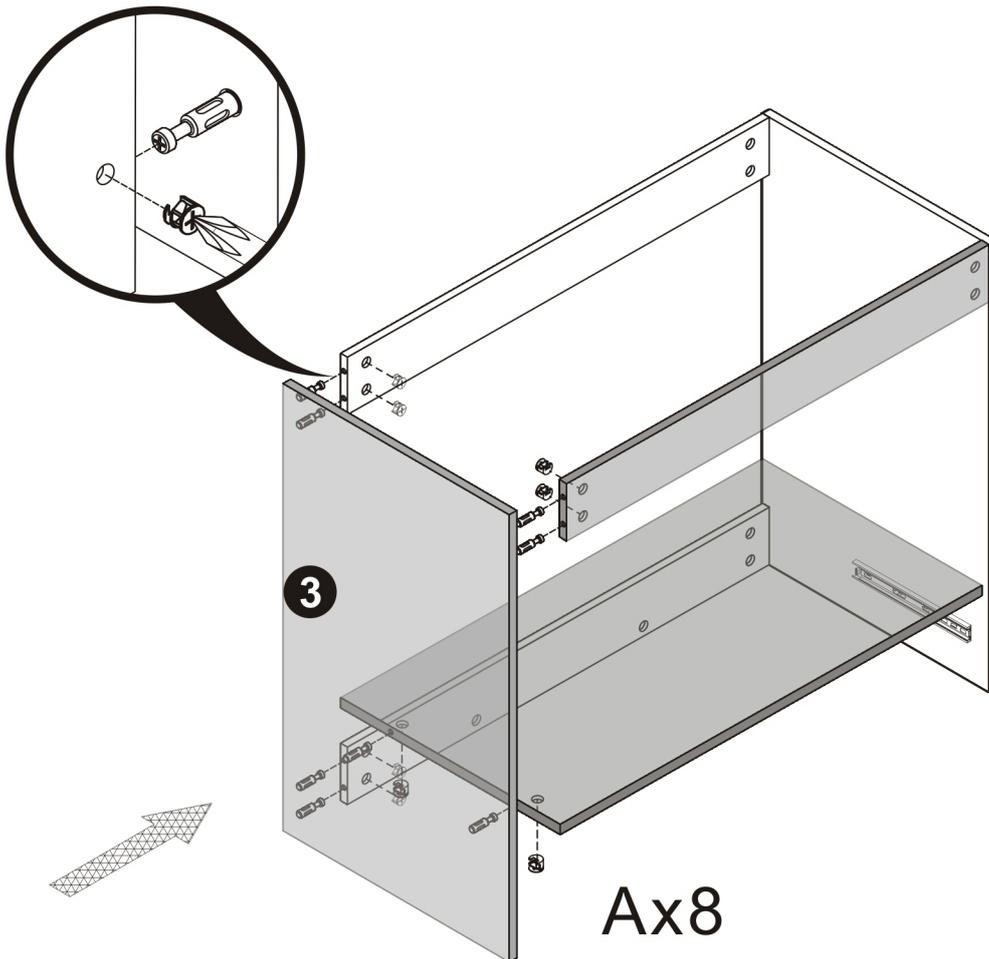


A	8PCS
	
15*10mm	

8

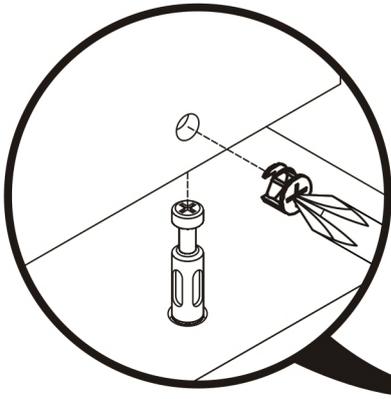


Ax6

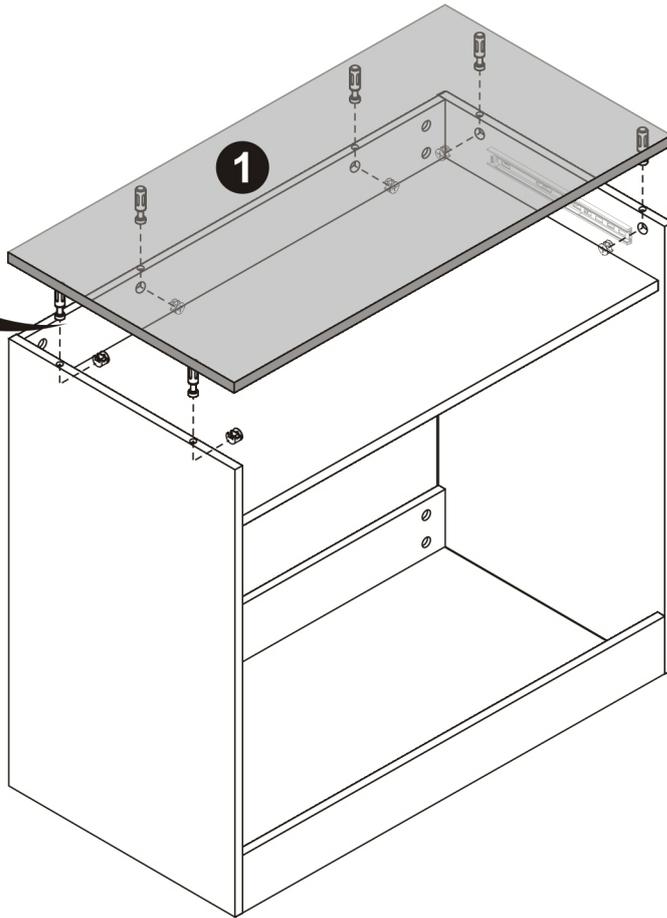


A	6PCS
15*10mm	

9

Jx2

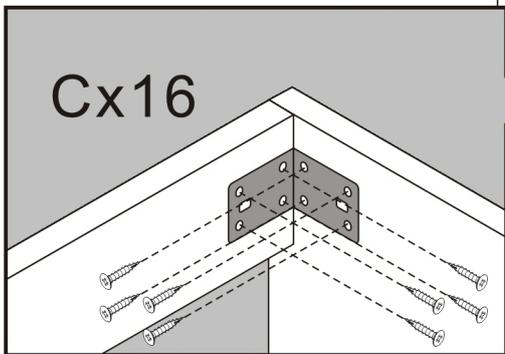


Cx16

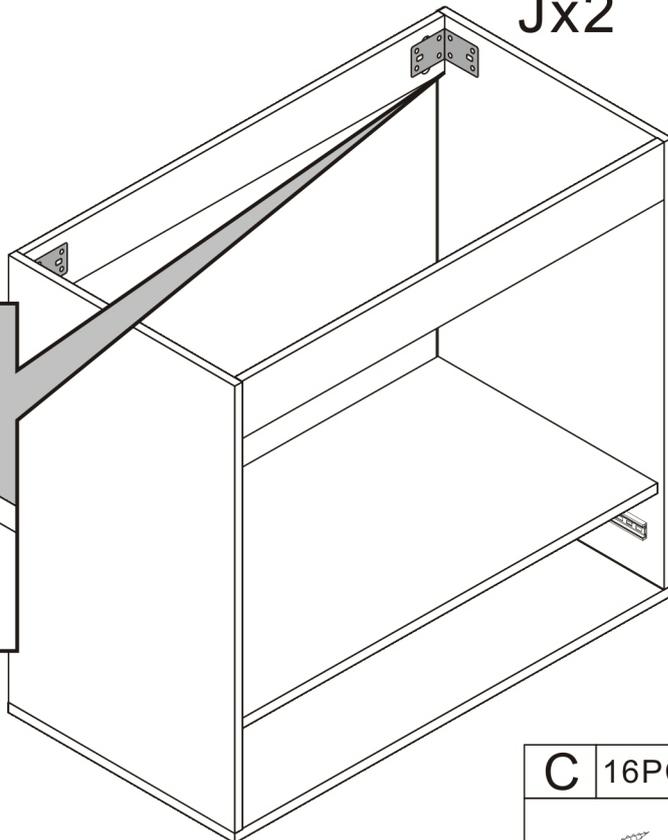

C	16PCS	J	2PCS
3.5*14mm		Corner code	


10


Mx4
Cx8

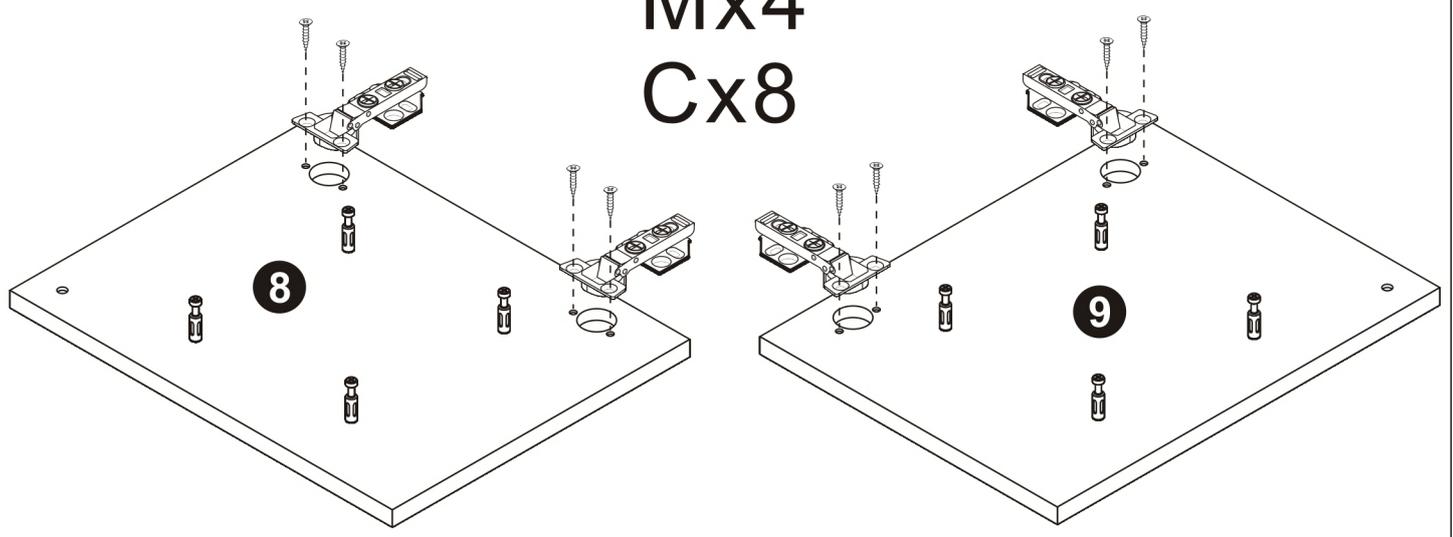



C 8PCS	M 4PCS
	
3.5*14mm	Straight bend

11

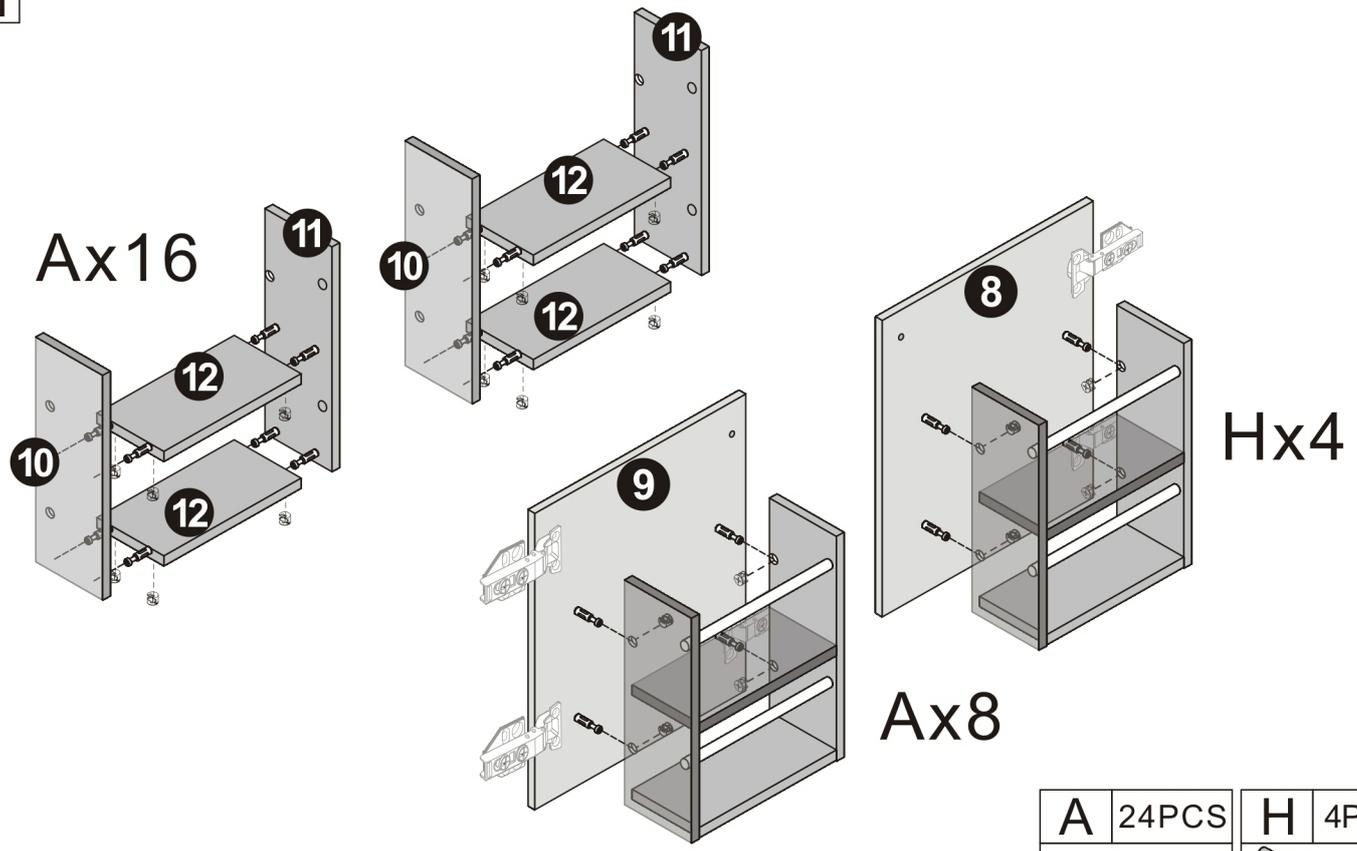


A 24PCS	H 4PCS
	
15*10mm	9.8cm

12

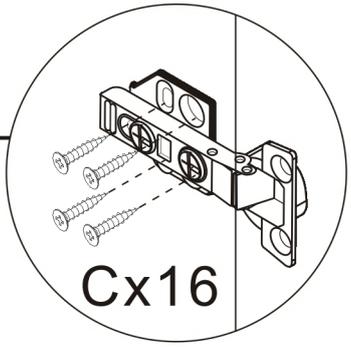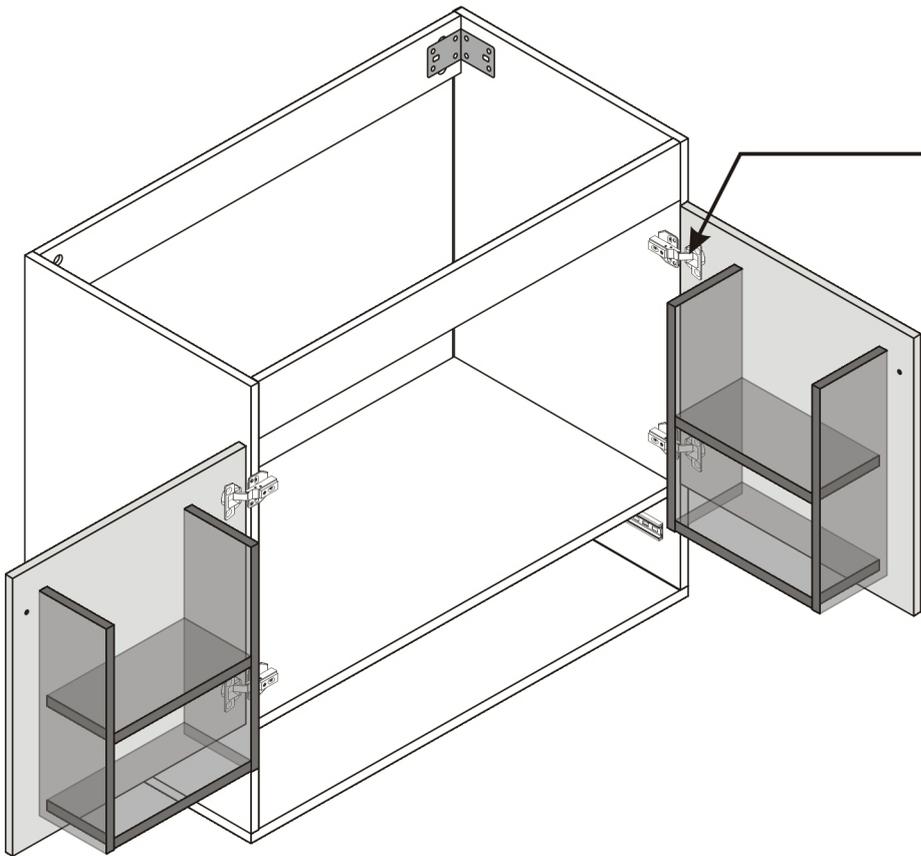

C	16PCS
	
3.5*14mm	

13

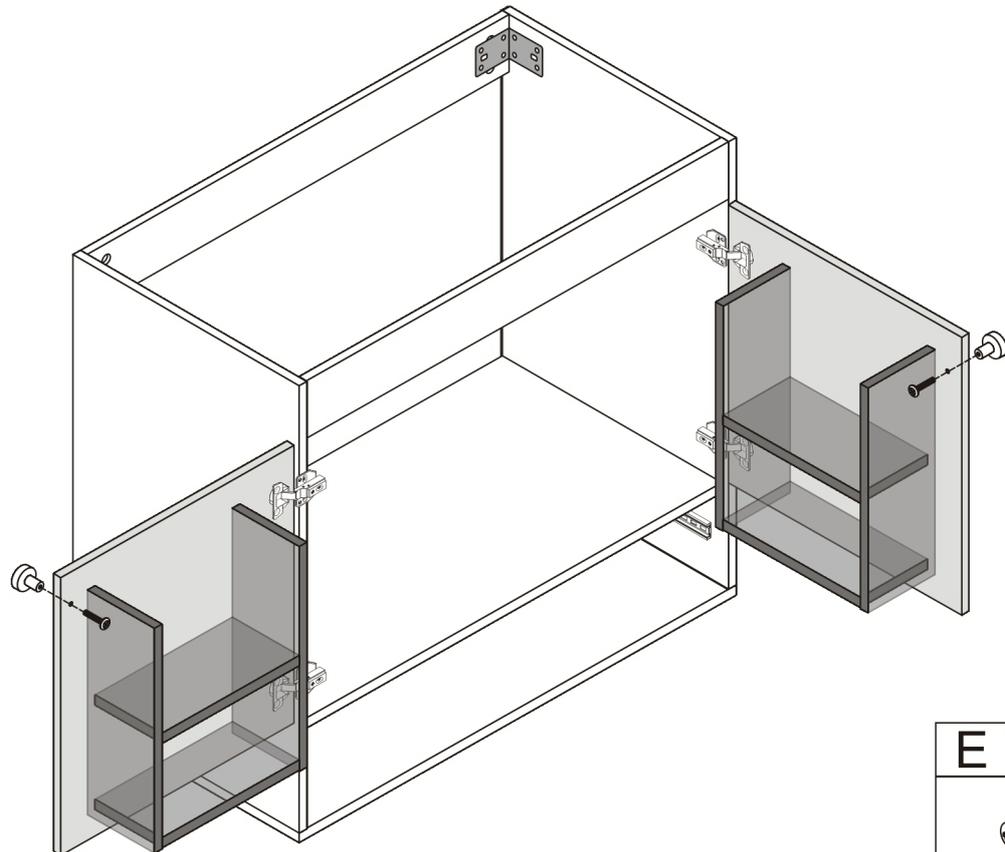

Ex2
Fx2


E	2PCS	F	2PCS
			
4*20		Handles	

SPECIAL TIPS FOR DOOR ALIGNMENT


CONSEJOS ESPECIALES PARA LA ALINEACIÓN DE PUERTAS

CONSEILS SPÉCIAUX POUR L'ALIGNEMENT DES PORTES


- A. Lateral adjustment (Moving door left-right) by screw adjusting
 Ajuste lateral (Puerta móvil de izquierda a derecha) mediante tornillo de ajuste
 Réglage latéral (porte mobile gauche-droite) par réglage à vis

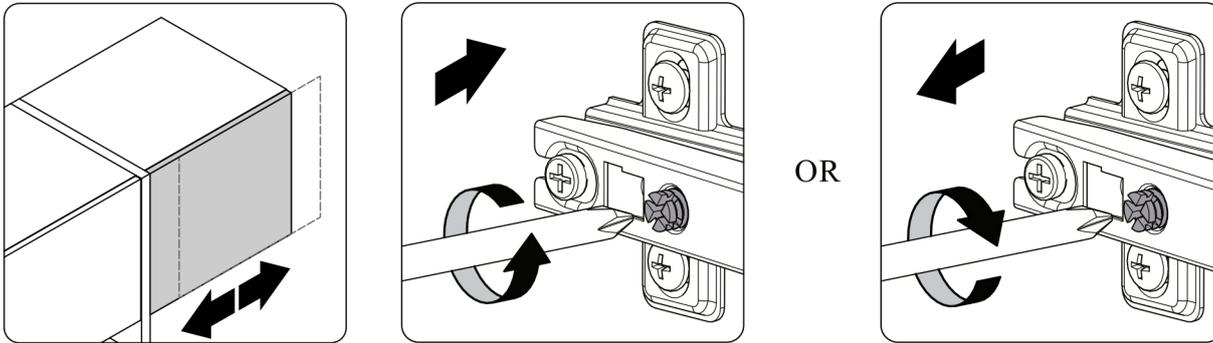


- B. Vertical adjustment (Moving door up-down) via the slot on the mounting plate
 Ajuste vertical (Puerta móvil arriba-abajo) a través de la ranura en la placa de montaje
 Réglage vertical (porte mobile de haut en bas) via la fente sur la plaque de montage

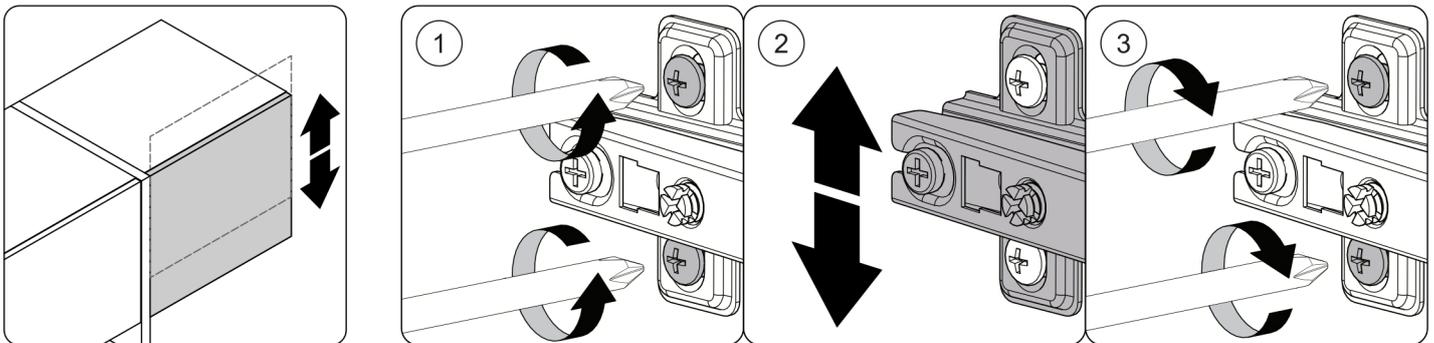

- C. Front-to-back adjustment (Spacing Door Off Cabinet) by slacking the hinge arm mounting screw
 Ajuste de adelante hacia atrás (espaciado entre la puerta y el gabinete) aflojando el tornillo de montaje del brazo de la bisagra
 Ajustement d'avant en arrière (espacement de la porte hors de l'armoire) en desserrant la vis de montage du bras de charnière

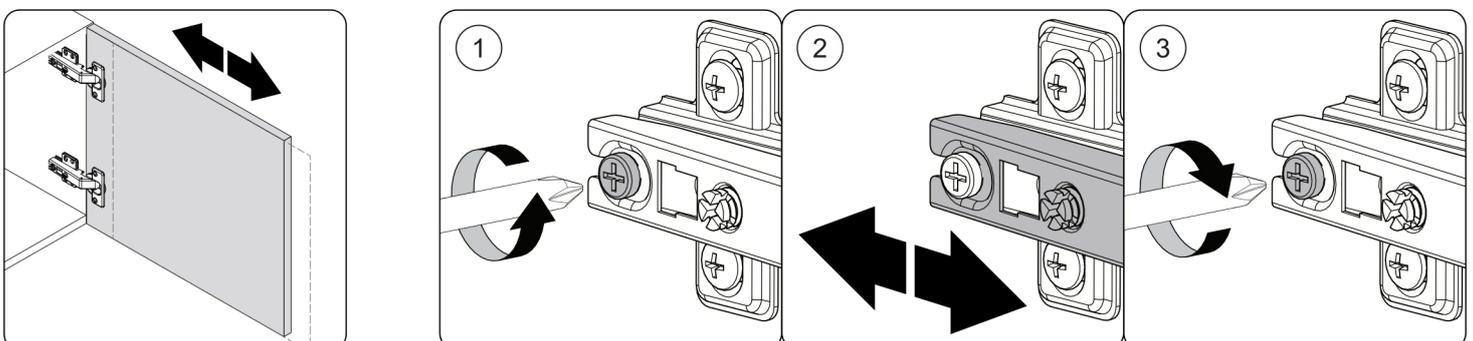


14

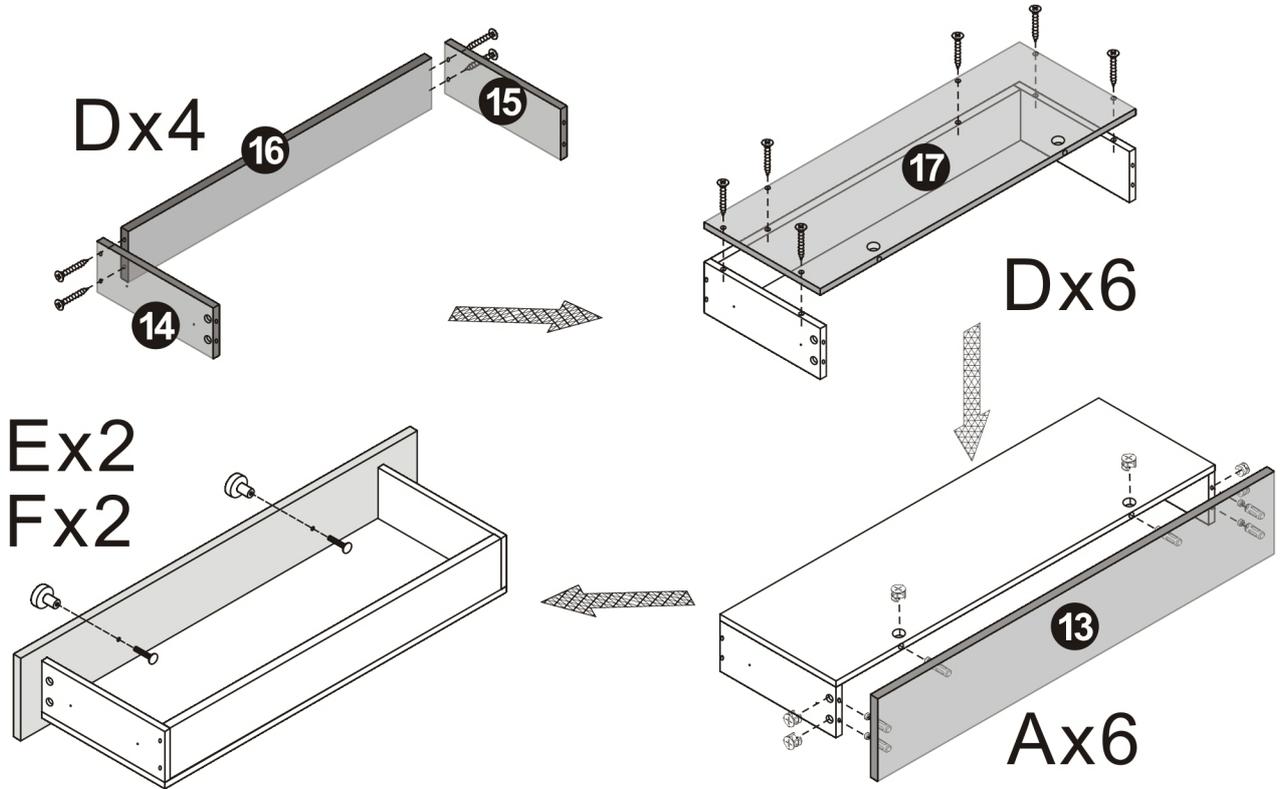


A	6PCS	D	10PCS	E	2PCS	F	2PCS
15*10mm		3.5*35mm		4*20		Handles	

15

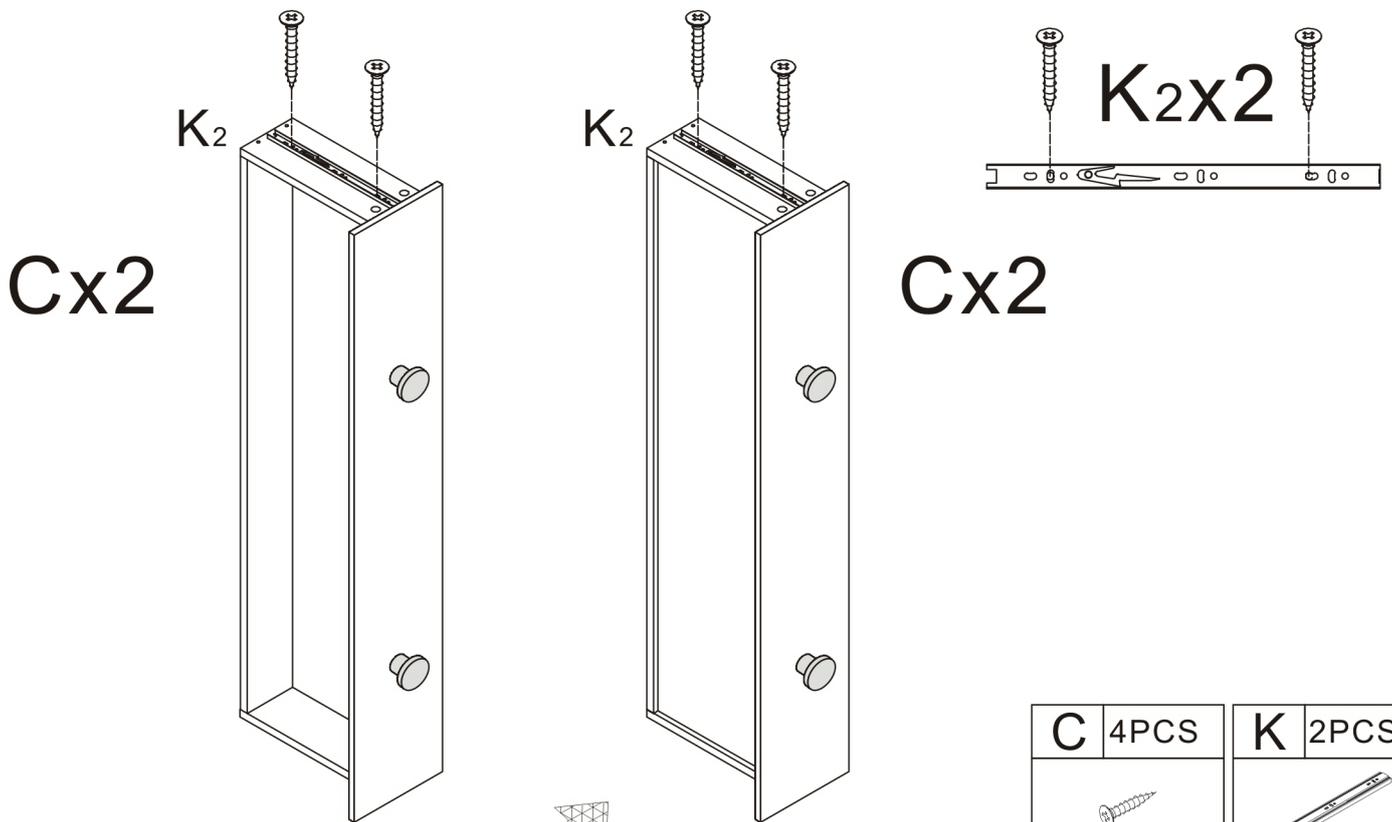

C	4PCS	K	2PCS
3.5*14mm		Three-section Rail	


16

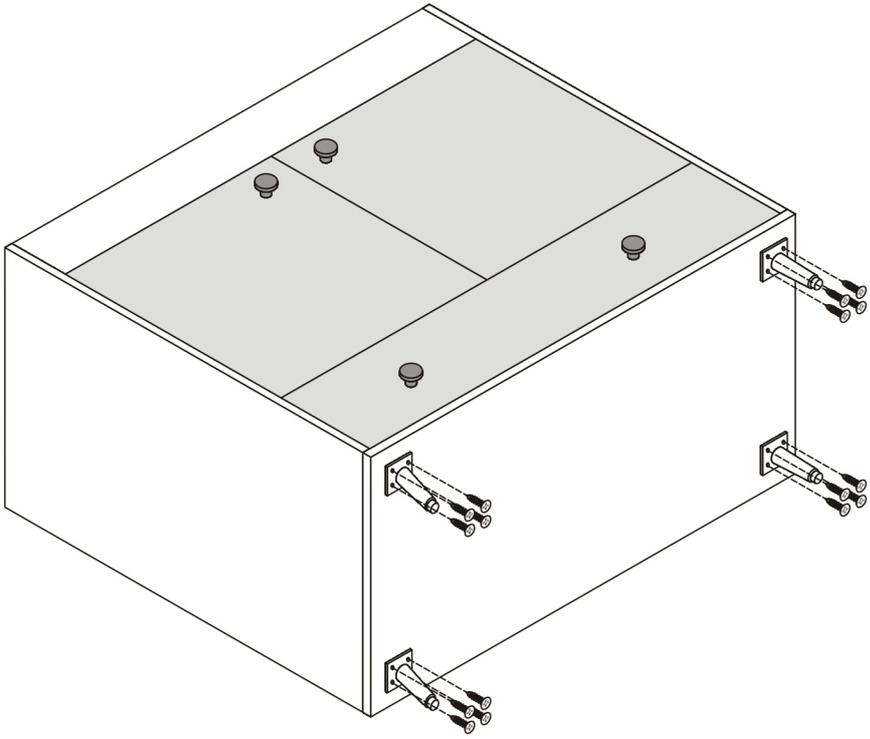


Cx16
Lx4

C	16PCS	L	4PCS
			
3.5*14mm		Hardware Feet	


17

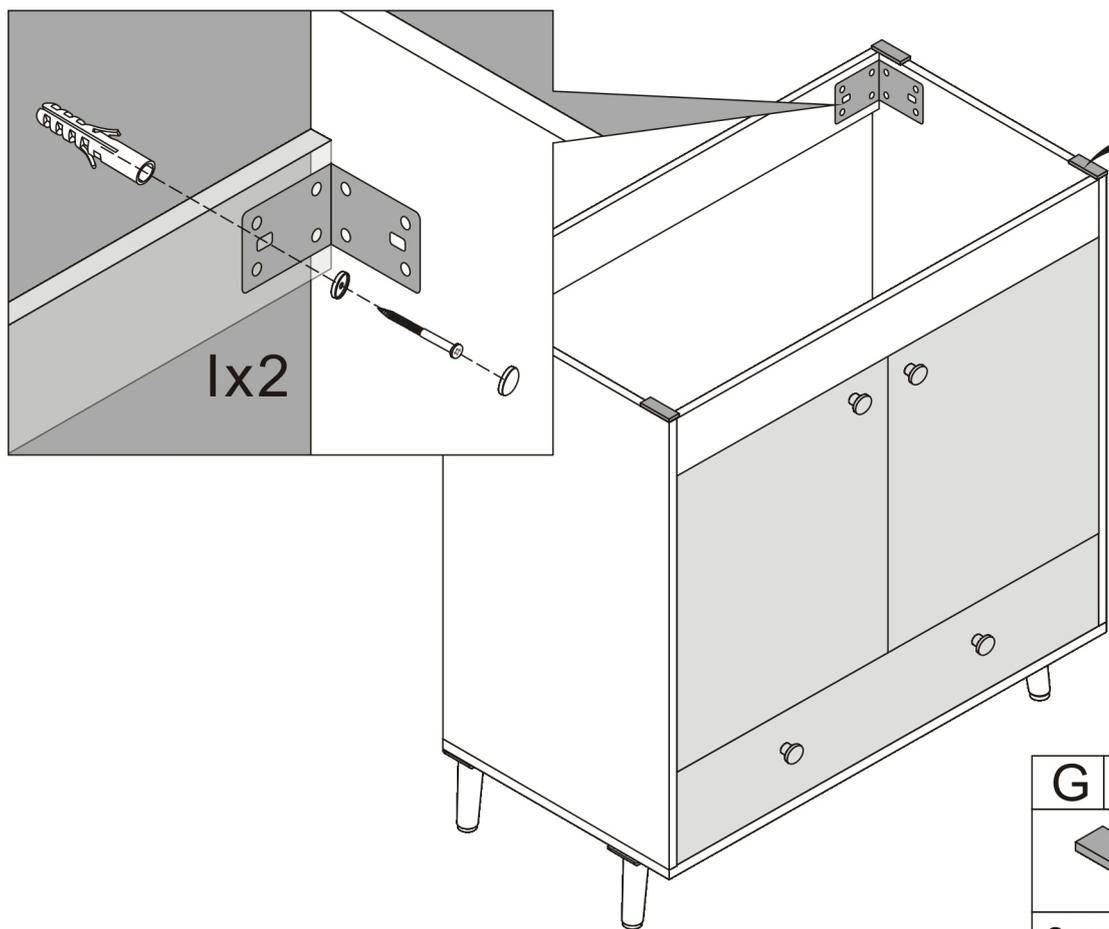


Ix2

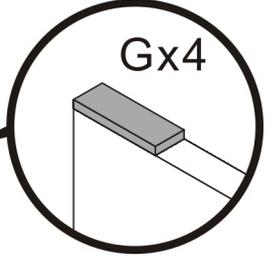


Gx4

G	4PCS	I	2PCS
			
Sponge Mat		Expansion screw	

18

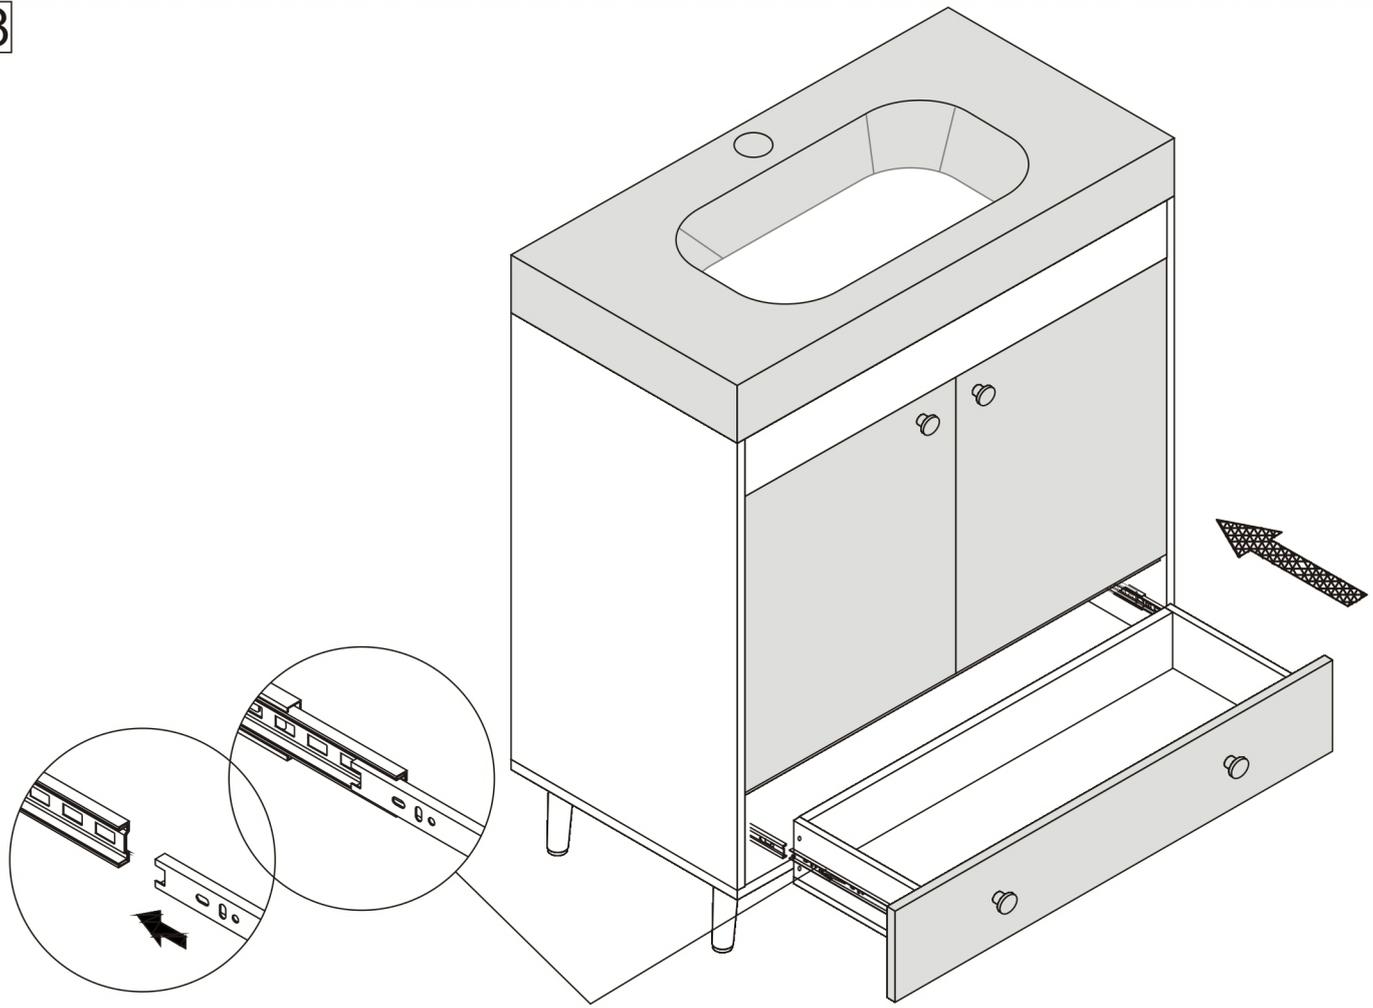

19

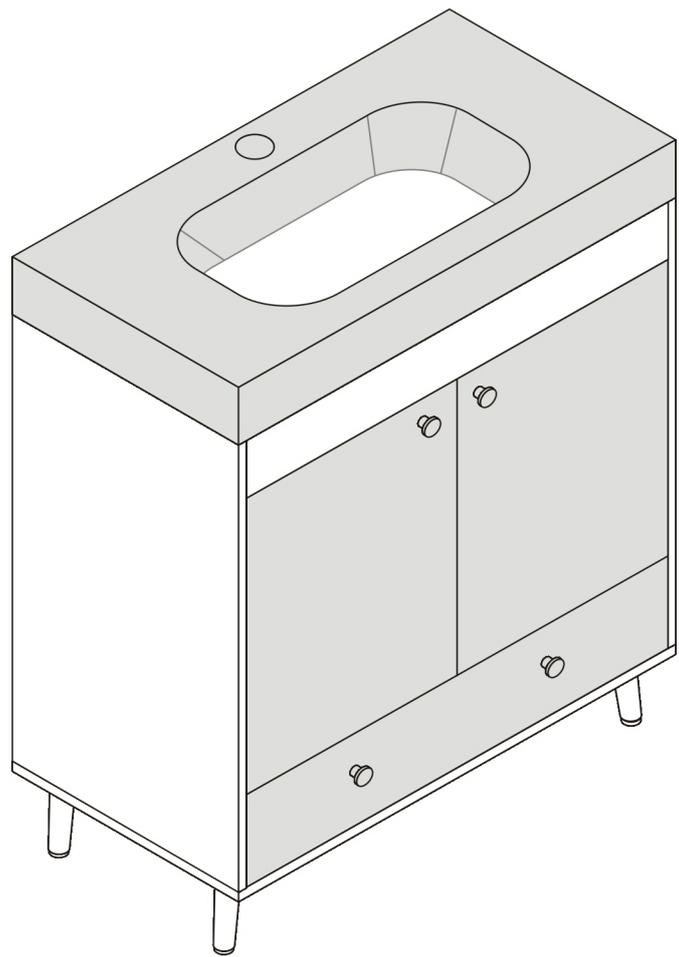

OK