


ASSEMBLY INSTRUCTIONS

BATH VANITY-CABINET

SKU - N710P299454

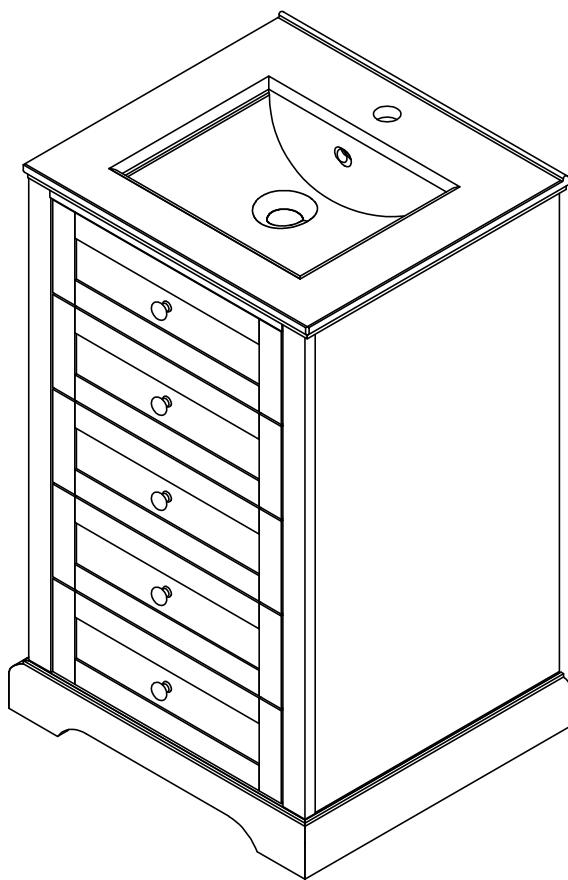




Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.



DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED



*Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe!!!
* Please assemble on a clean soft surface to avoid damage.

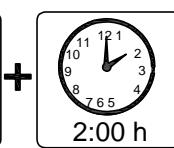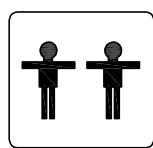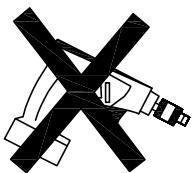

Tools Required

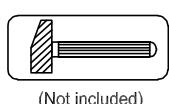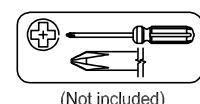


(Not included)

(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE

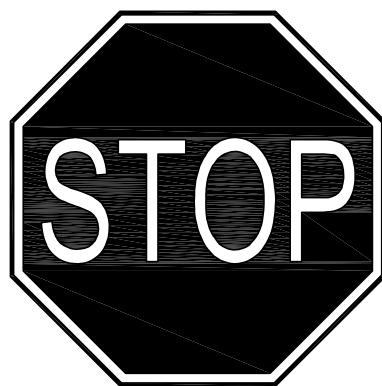

**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Before Installation

Important- Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions

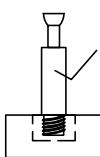


Diagram A

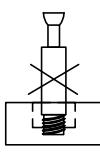
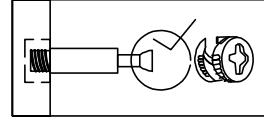


Diagram B



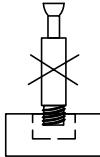


Diagram C

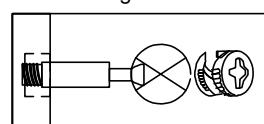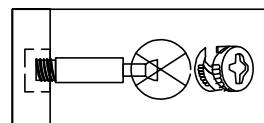


Insert Cam Ball into hole as shown in diagram A.


Make sure not to insert the Cam Bolt:
Too deep as shown in figure B as this will cause
the cam Lock to be misaligned and unable to
interlock properly.

Also avoid inserting the Cam Bolt too close to the
surface of the hole as shown in figure C, as this
will cause the Cam Lock to be too loose, and not
interlock properly.

Connect the panels together.

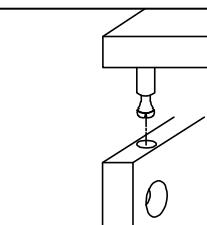


Insert the Cam Lock so the side opening fits over
the head of the Cam Bolt.

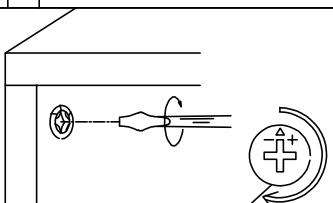

To tighten the Cam Lock, turn it clockwise on half
a turn with a flat screwdriver.


**Do not use an automatic screwdriver as it may
bend or break if too much power is imposed.*

Detail View

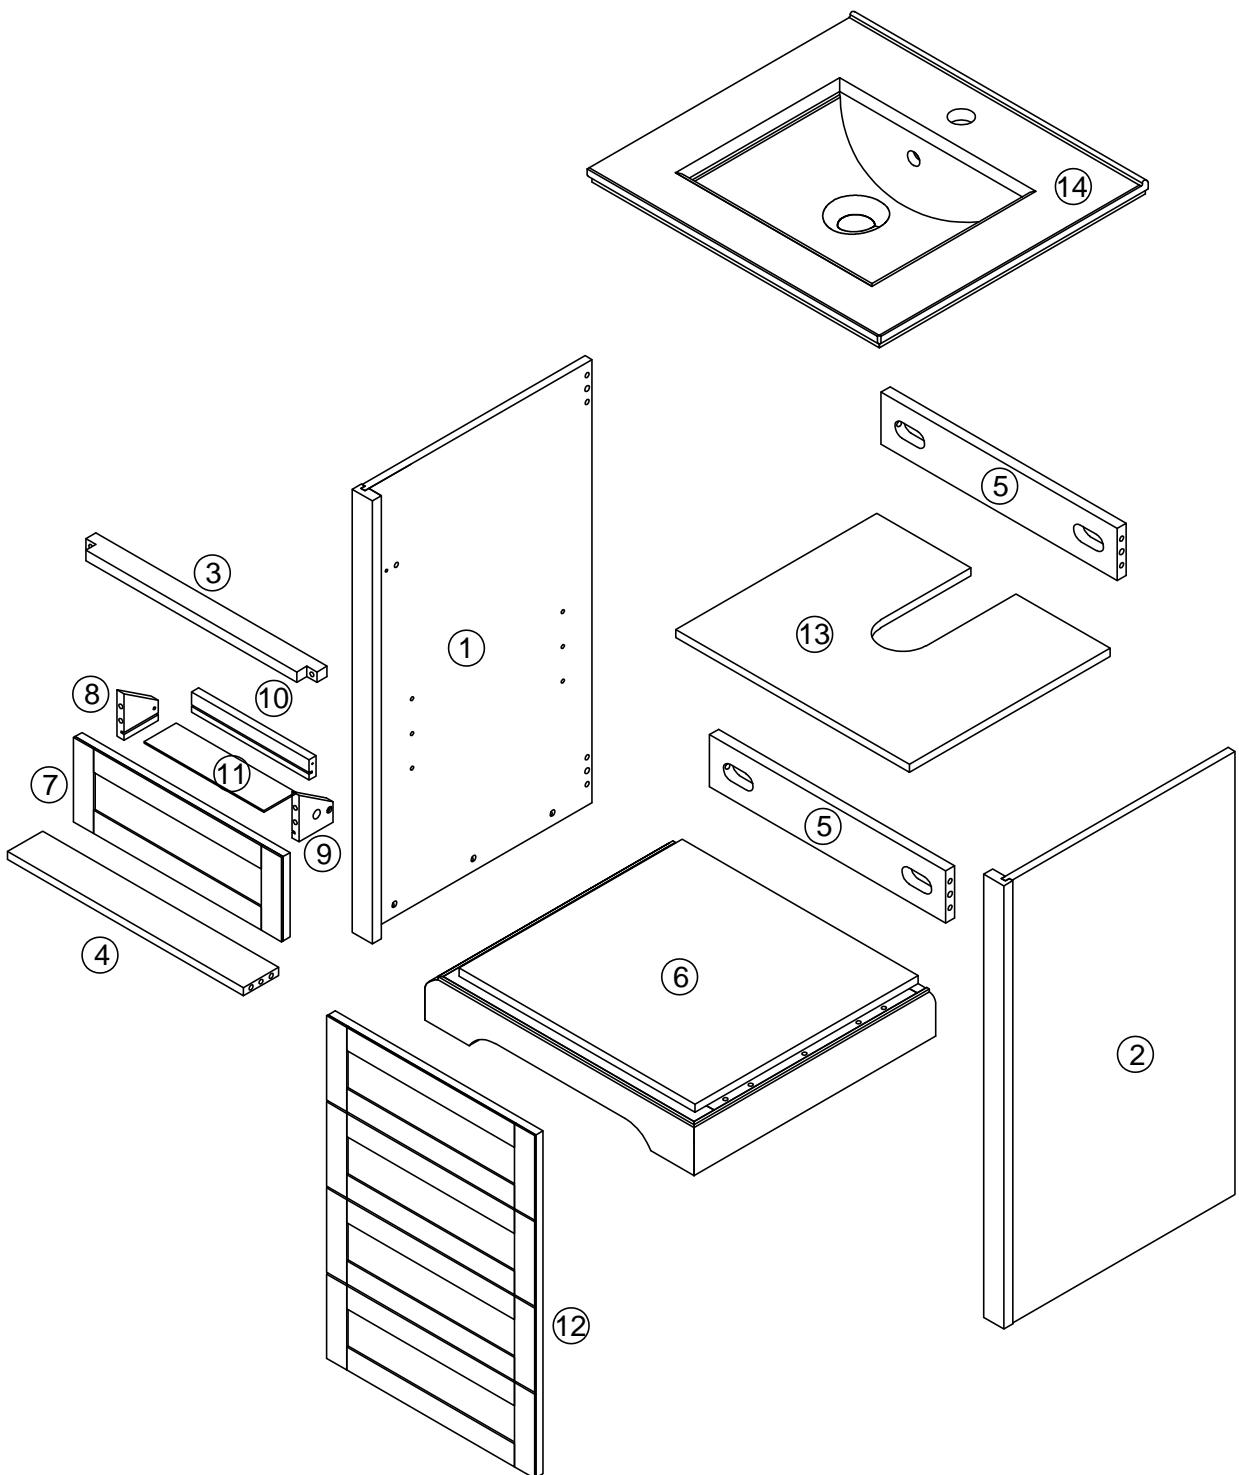

Part Lists N710P299454

1

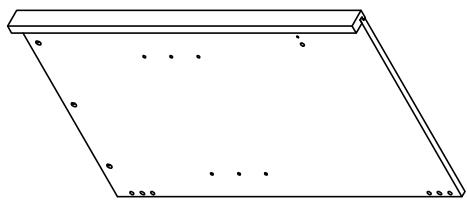


Side Panel (L) - 1pc

8



Drawer Panel Side (L) - 1pcs

2

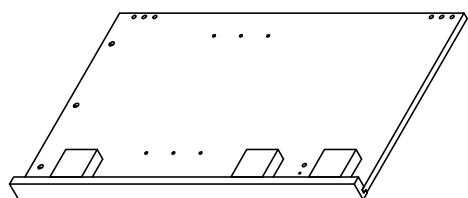


Side Panel (R) - 1pc

9




Drawer Panel Side (R) - 1pc

3

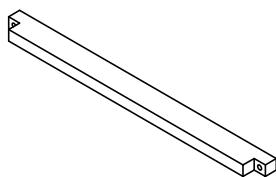


Front Crossbar Top - 1pc

10

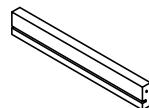


Drawer Back - 1pc

4

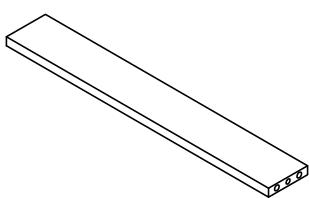


Front Crossbar Mid - 1pc

11

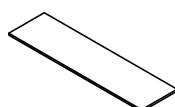


Panel Bottom - 1pc

5

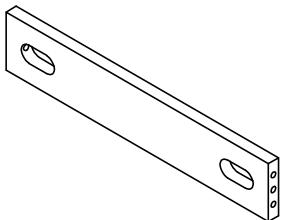


Rear Crossbar - 2pc

12

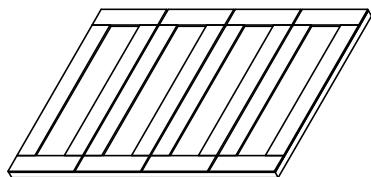


Door Cabinet - 1pc

6

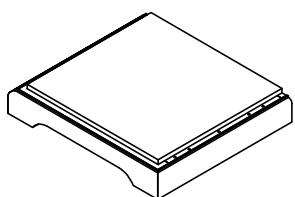


Frame Bottom - 1pc

13

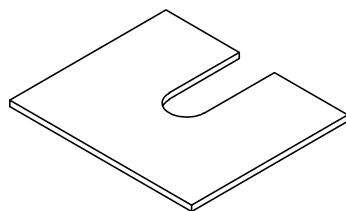


Frame Mid - 1pc

7

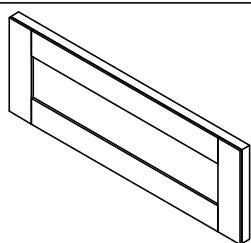










Drawer Front - 1pc

14

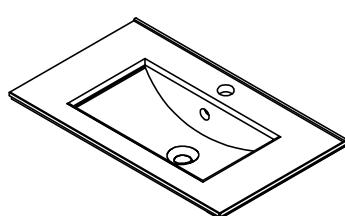


Lavabo - 1pc


Hardware Lists N710P299454

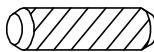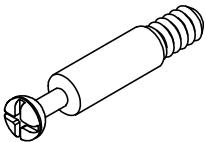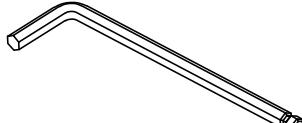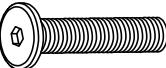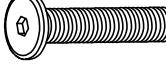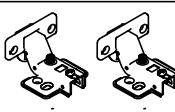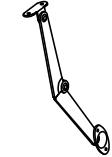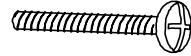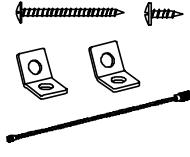A  $\varnothing 8*20\text{mm}$ Wood dowel (18pcs)	B  $\varnothing 6*32\text{mm}$ Three in one bolts (10pcs)	C  $\varnothing 14.5*9.5\text{mm}$ Three in one locks (10pcs)
D  $\varnothing 8 \times \varnothing 4*35\text{mm}$ Round head screw (2pcs)	E  K4mm Allen key (1pc)	F  $M6 \times 30\text{mm}$ Head bolt (2pcs)
G  $M6 \times 45\text{mm}$ Head bolt (4pcs)	H  Washer (4pcs)	I  2set 12pcs Damping hinge (2sets)
J  2set 12pcs Damping hinge (2sets)	K  Lid Support (1pc)	L  $\varnothing 8 \times \varnothing 3.5*12\text{mm}$ Flat head screw (4pcs)
M  $\varnothing 8 \times \varnothing 3.5*12\text{mm}$ Flat head screw (4pcs)	N  Shelf Pin (4pcs)	O  Handle(5pcs)
P  $M4*20\text{mm}$ Handle screw (5pcs)	Q  Anti fall Hardware (2sets)	


STEP: 1

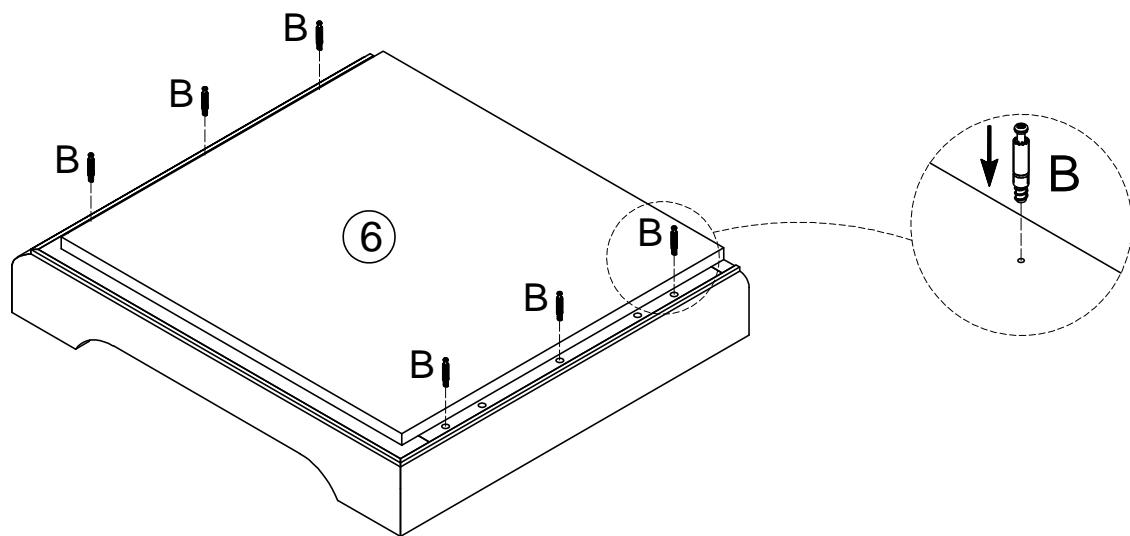

STEP: 2

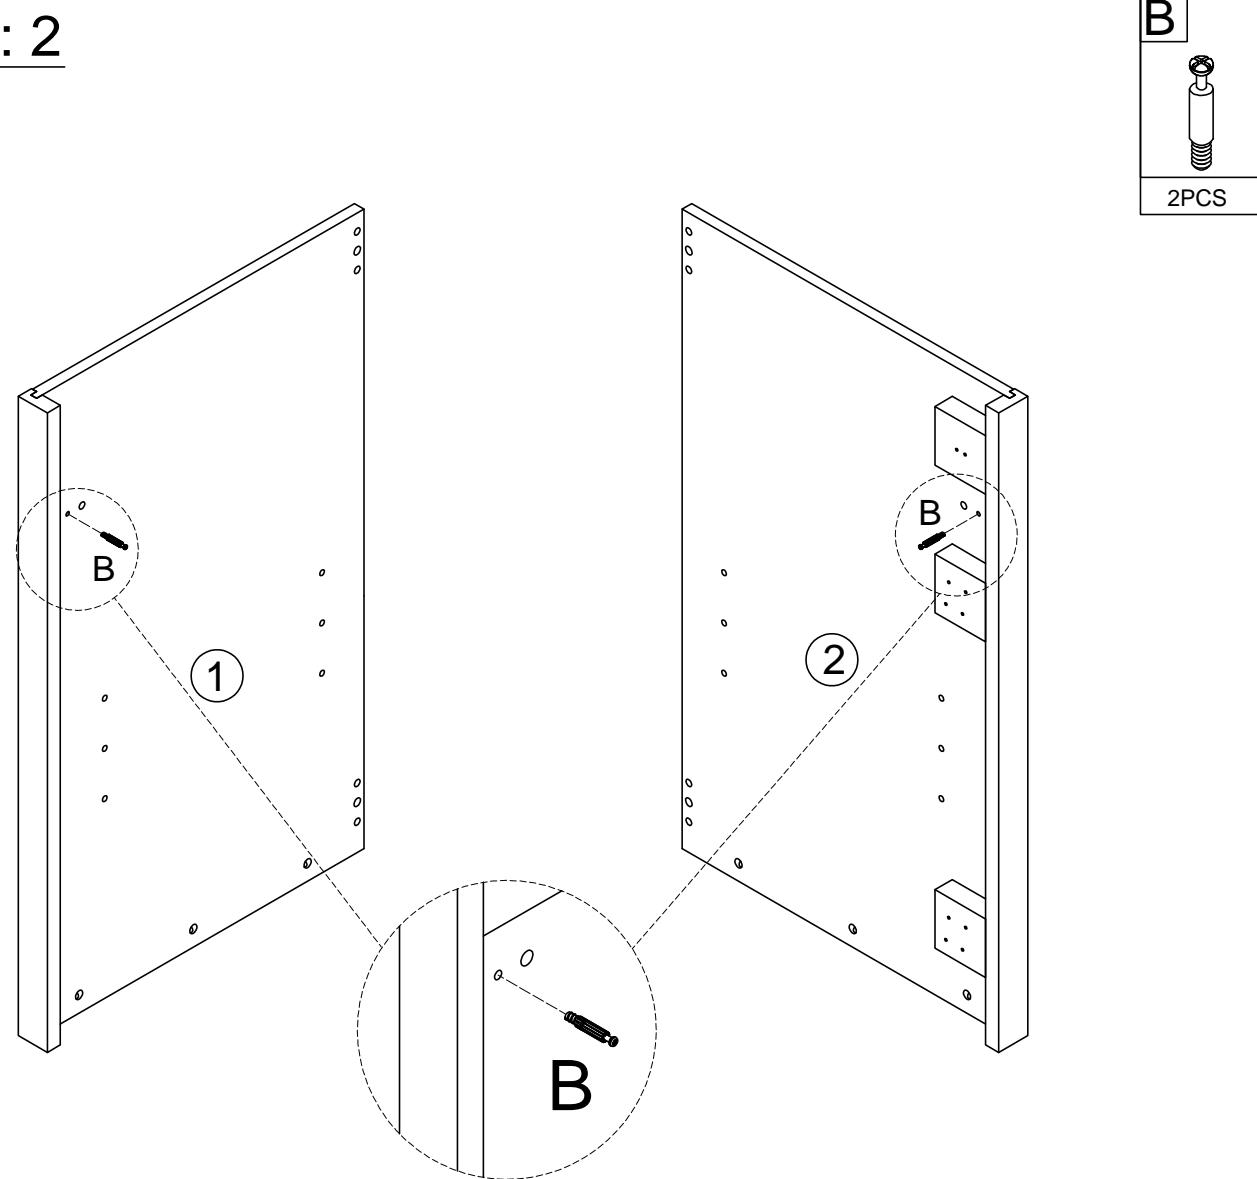


STEP: 3

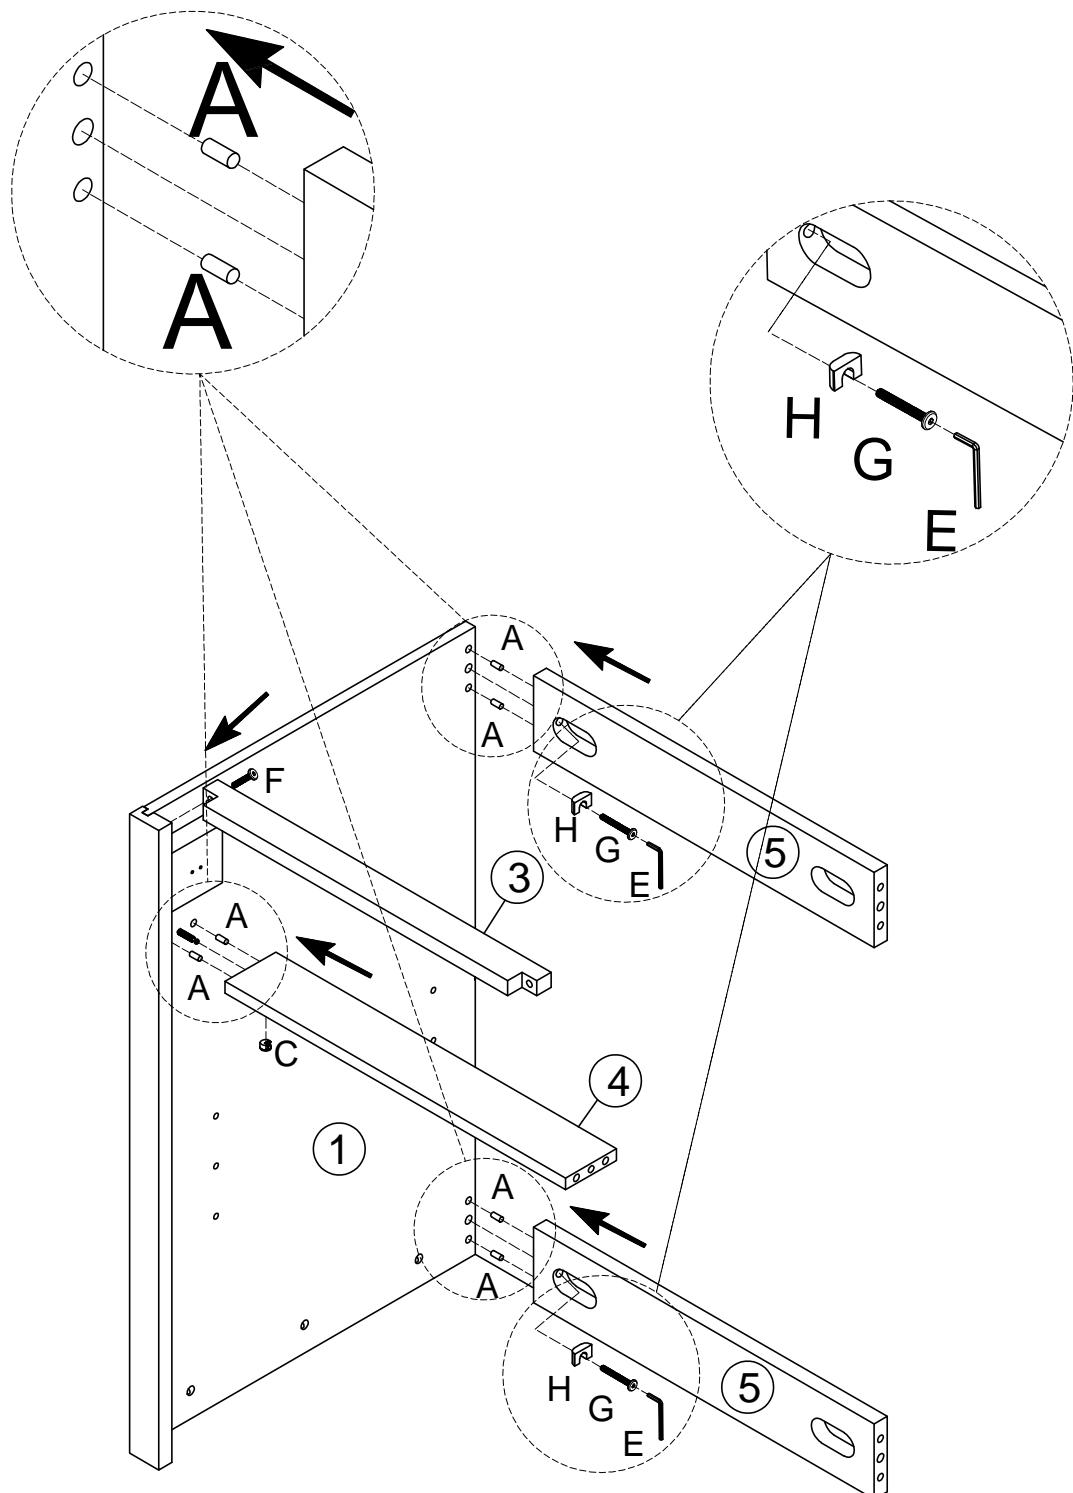

A		6PCS
G		2PCS
H		2PCS
C		1PC
F		1PCS


STEP: 4

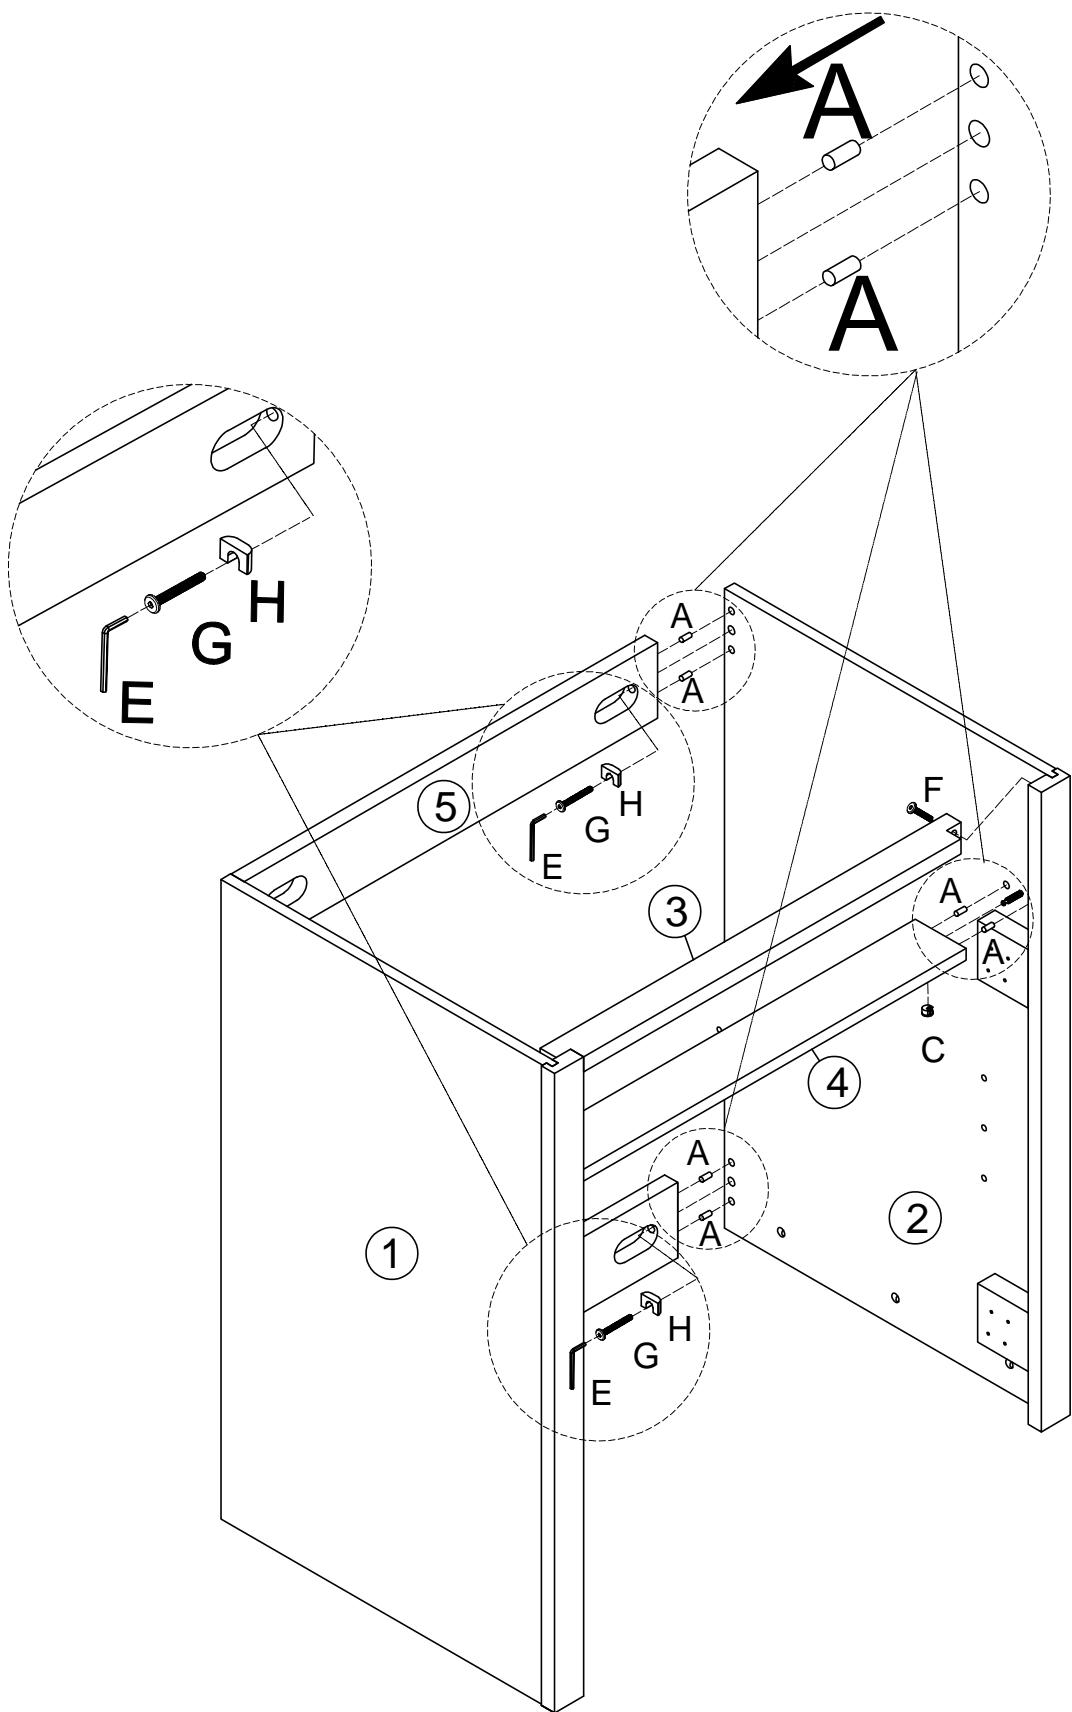



A		6PCS
G		2PCS
H		2PCS
C		1PC
F		1PCS

STEP: 5



A	
	4PCS
C	
	6PCS

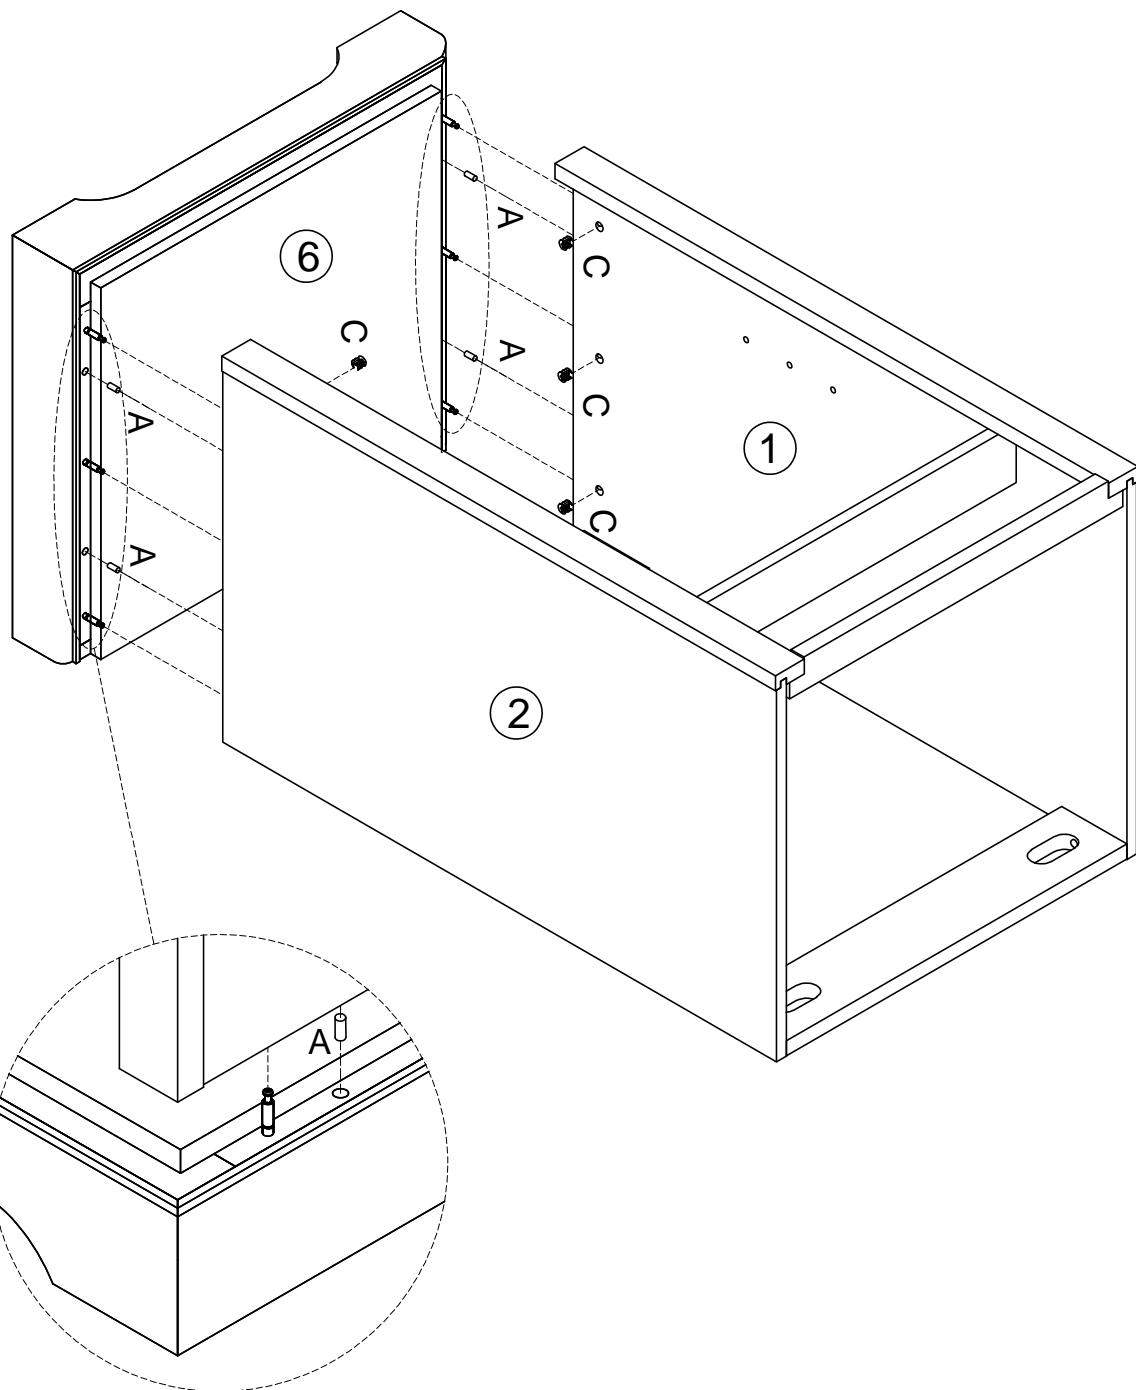


STEP: 6

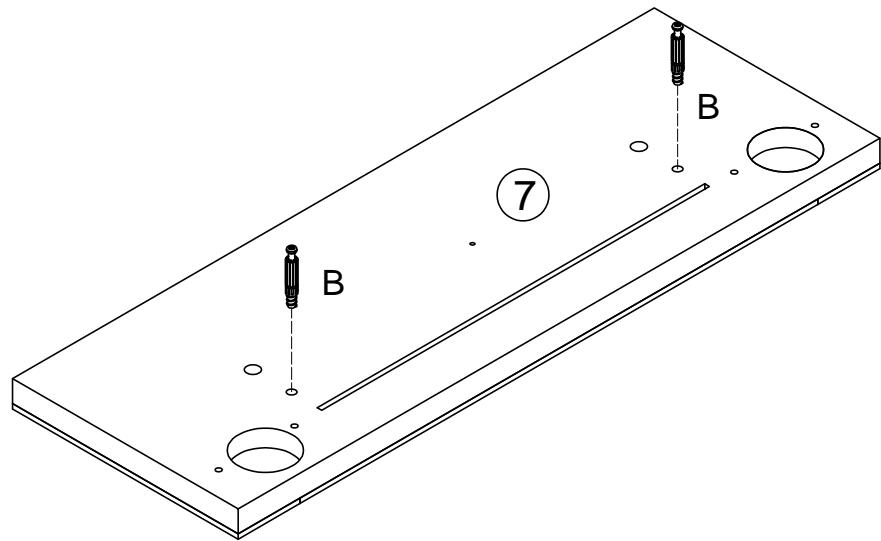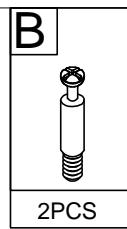



STEP: 7

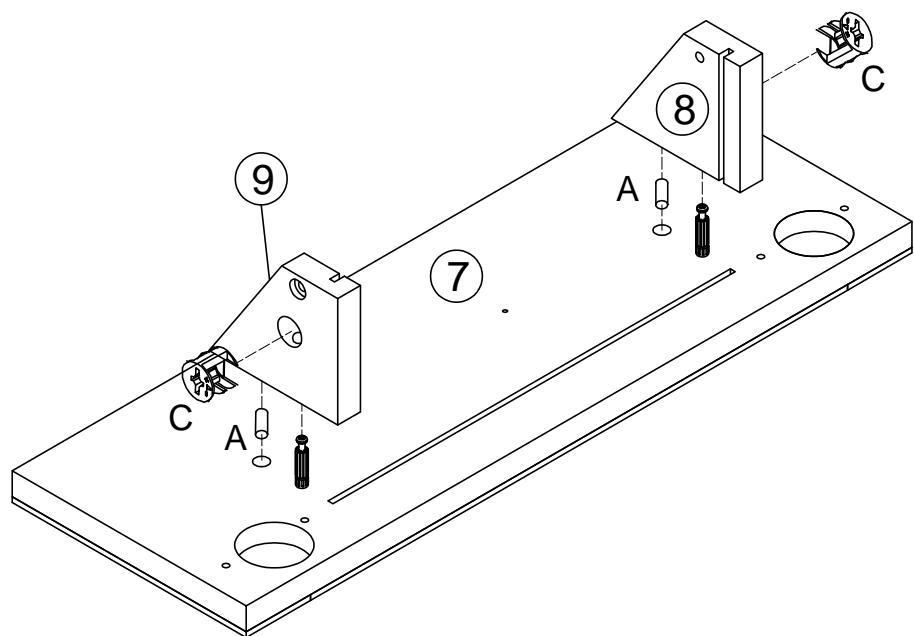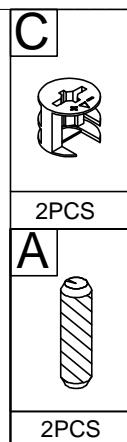


STEP: 8

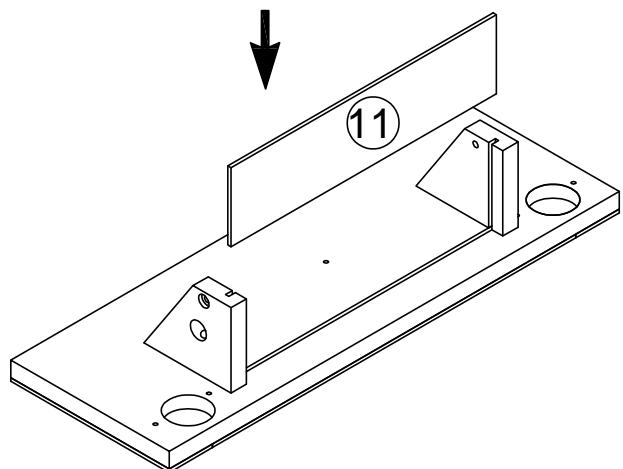


D		2PCS
O		1PC
P		1PC

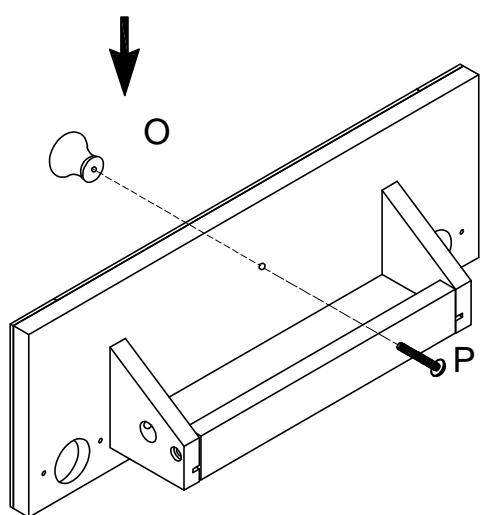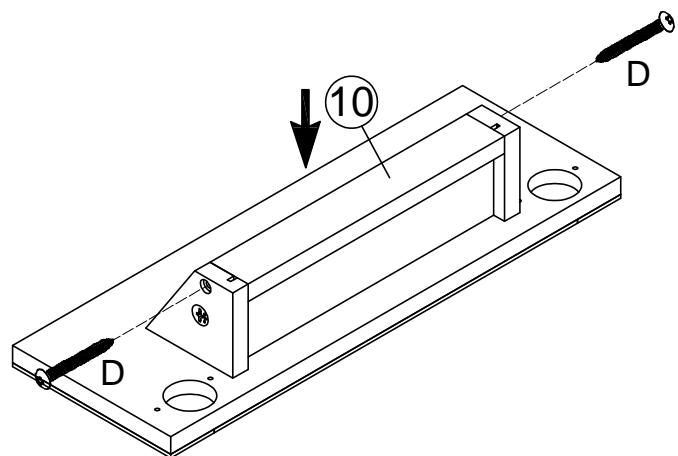

STEP: 9

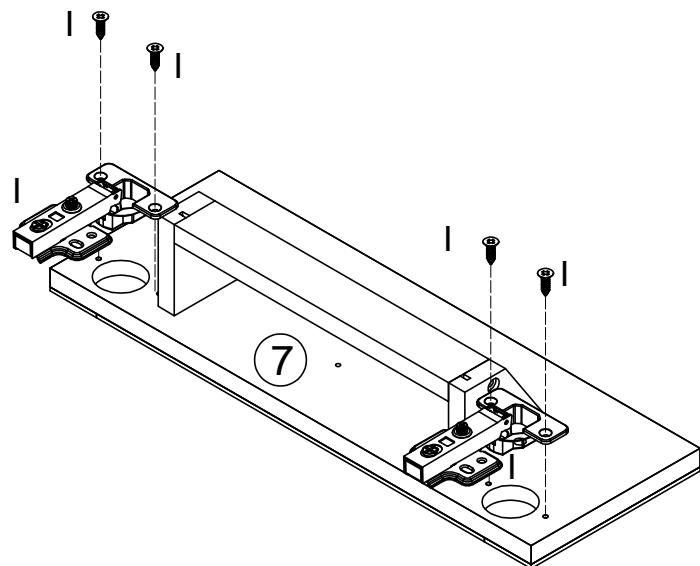


1	
2PCS	
1	
12PCS	


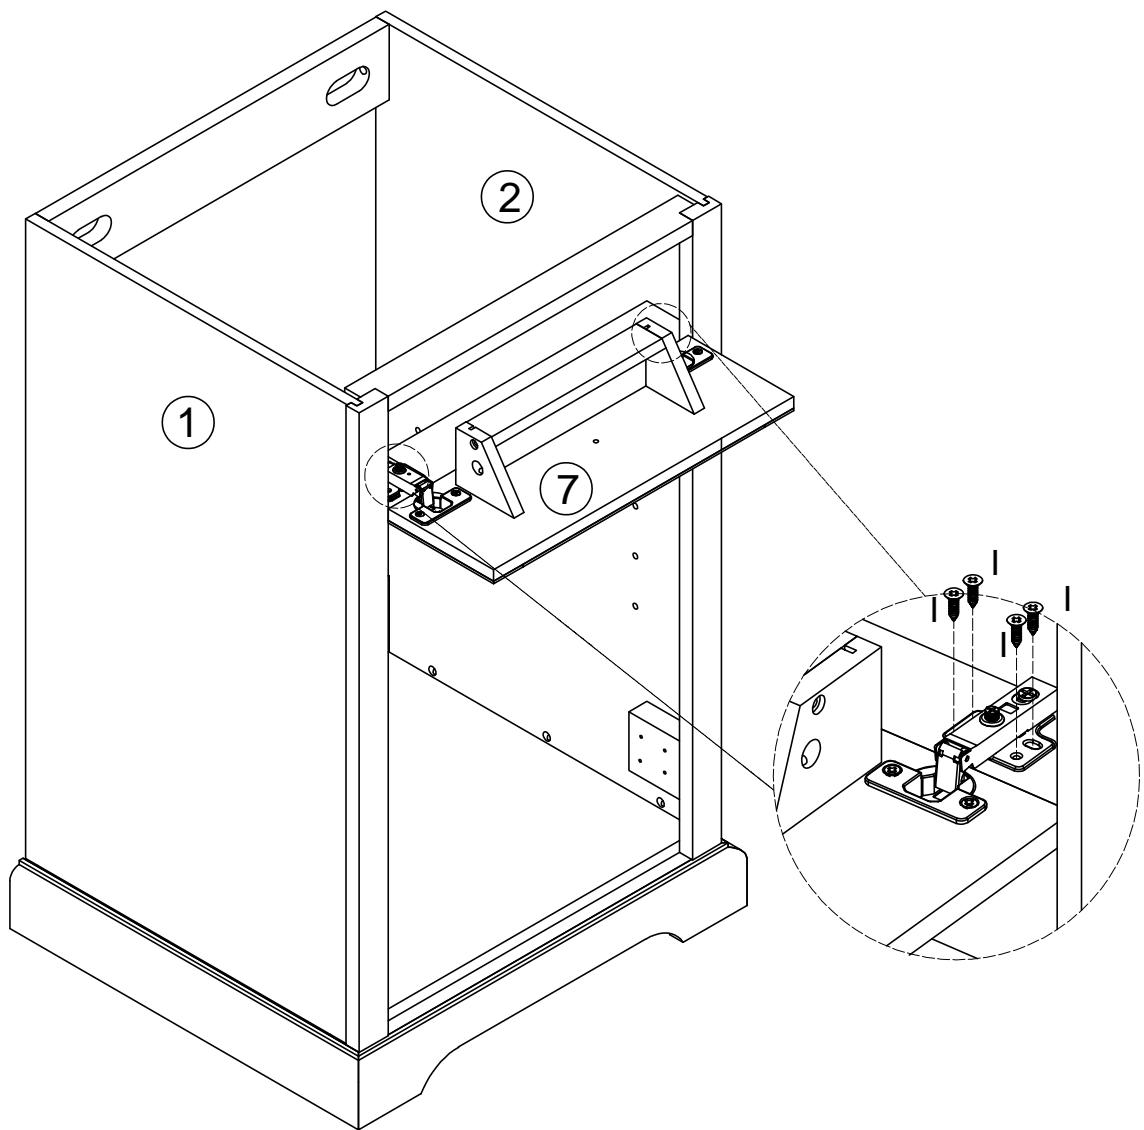


STEP: 10


K	
1PC	
L	
2PCS	

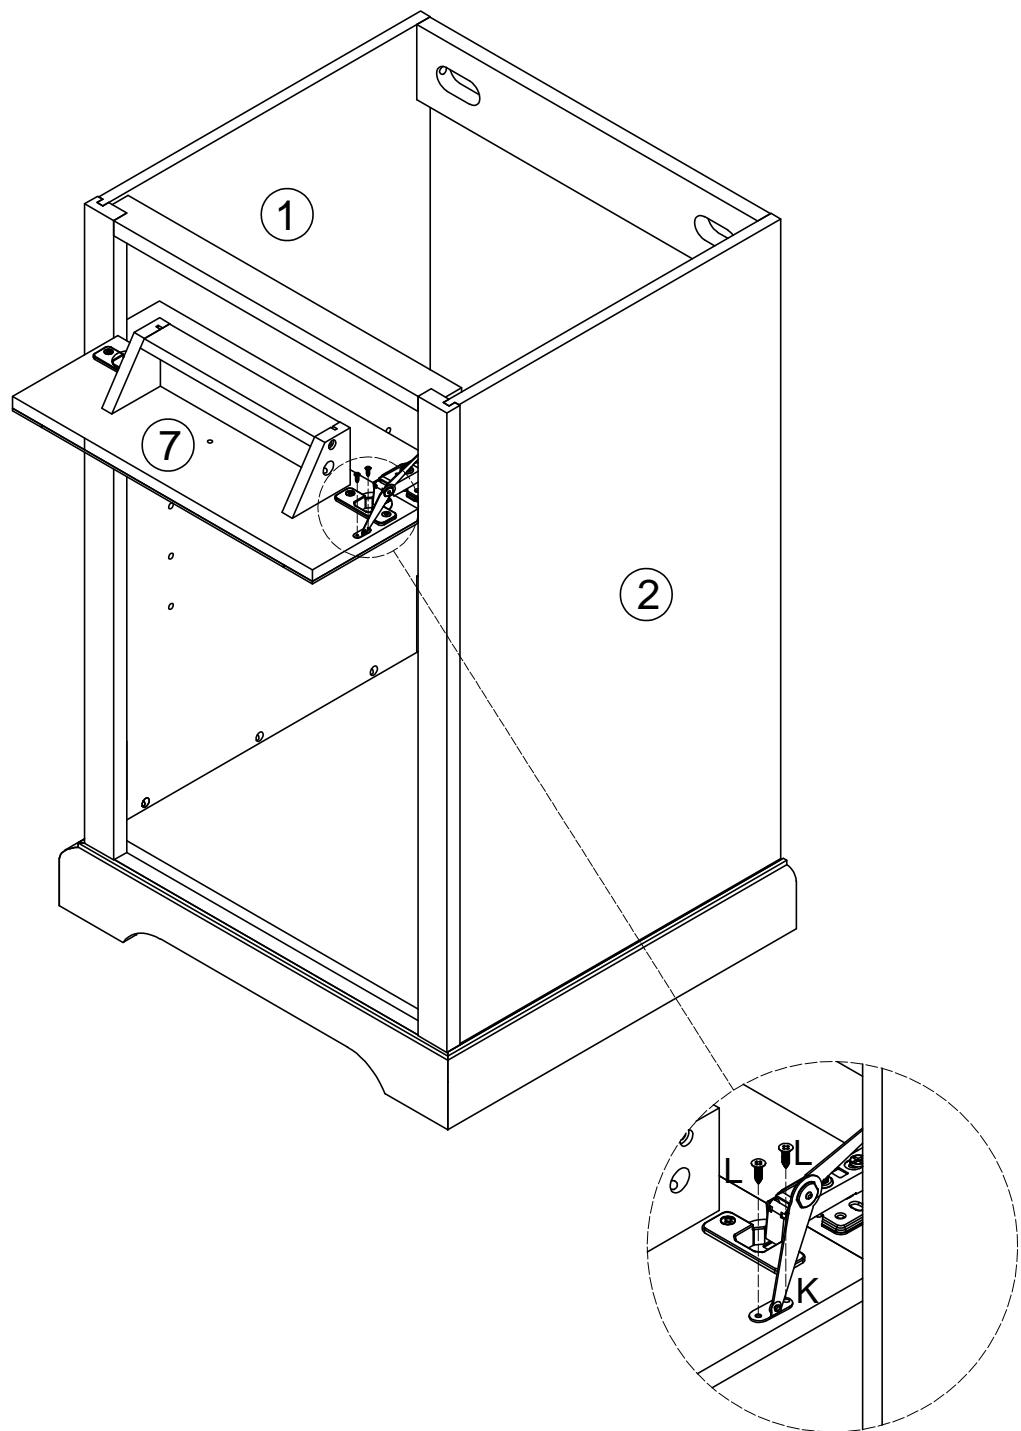

STEP: 11

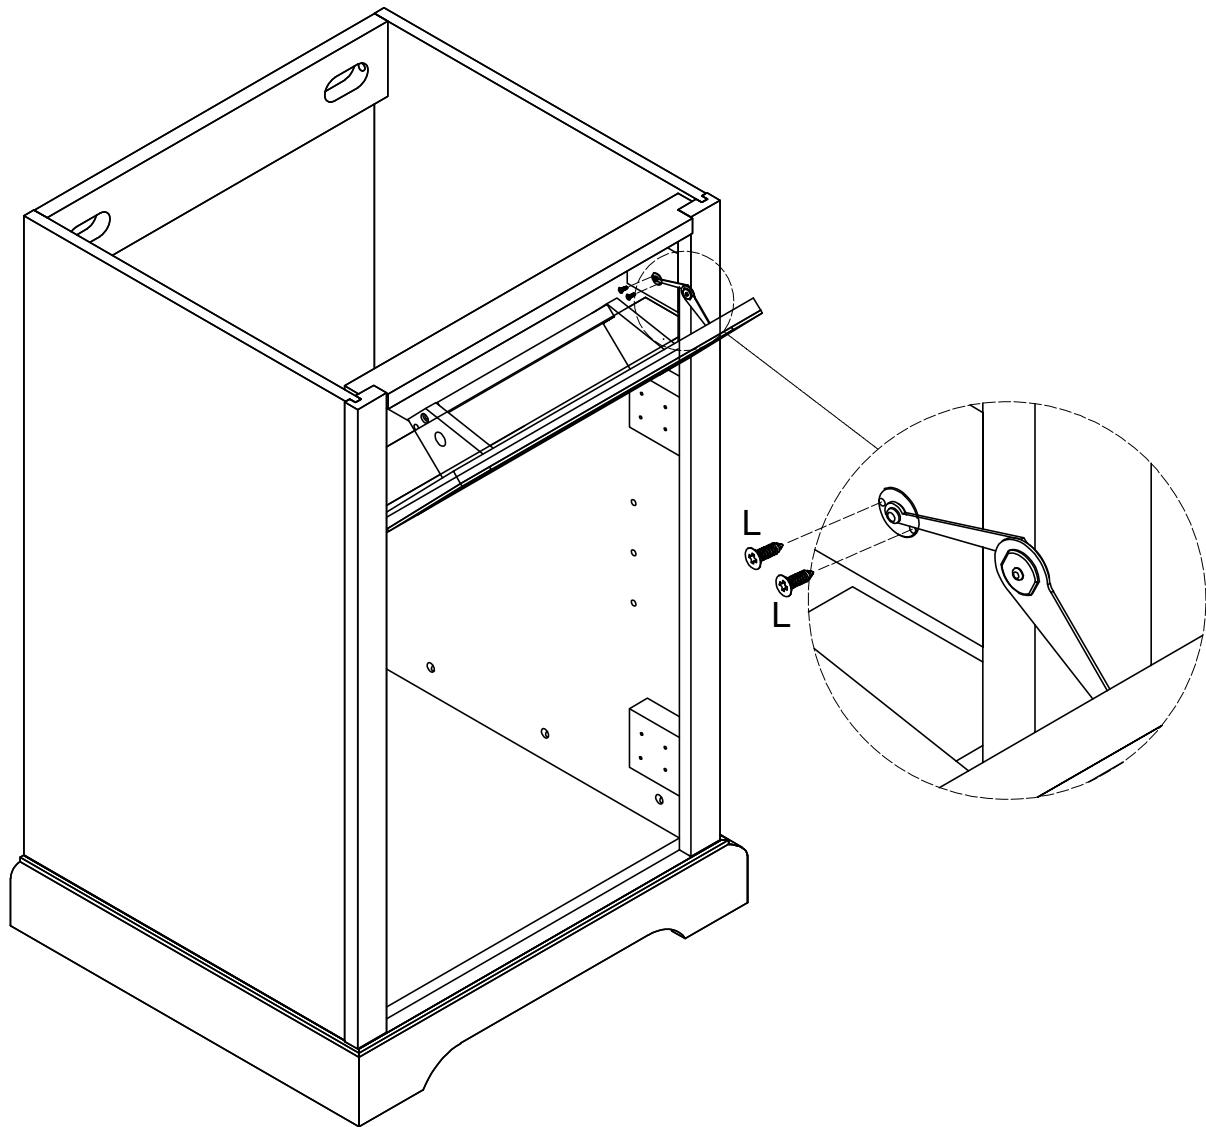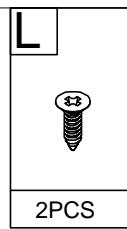


STEP: 12


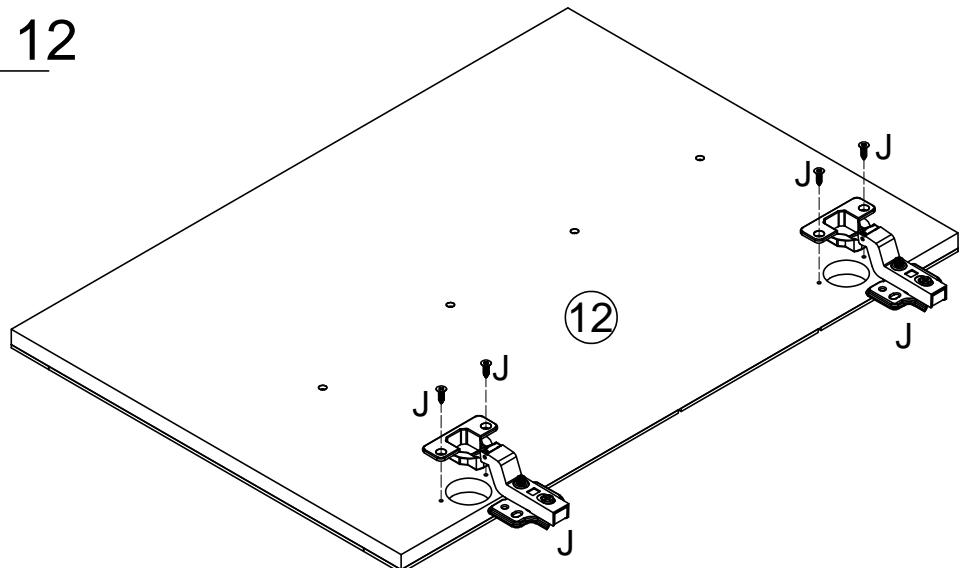


J	
4PCS	
J	
2PCS	


STEP: 13

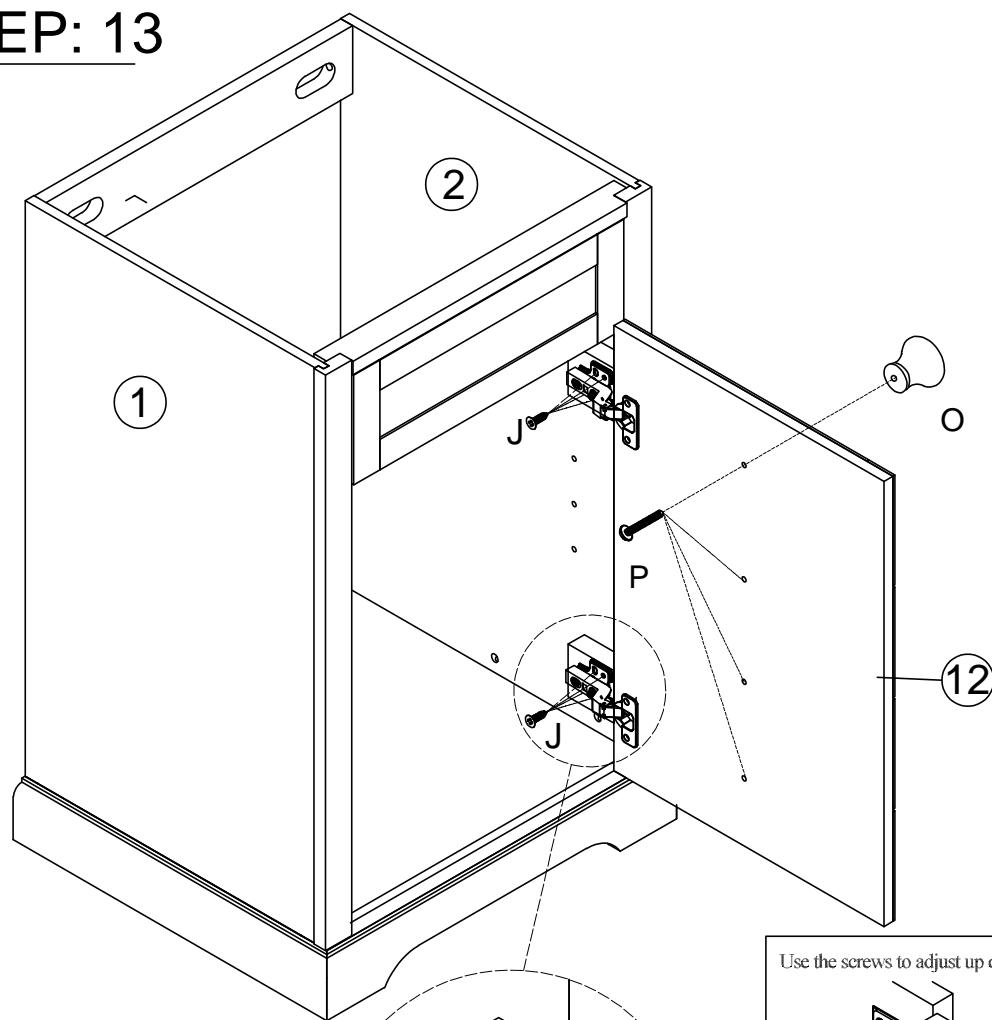


J	
8PCS	
O	
4PCS	
P	
4PCS	

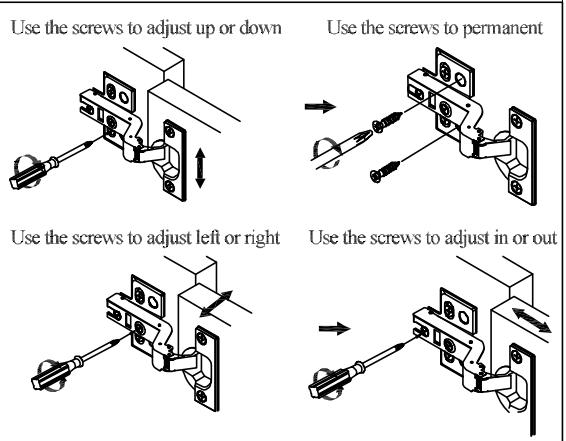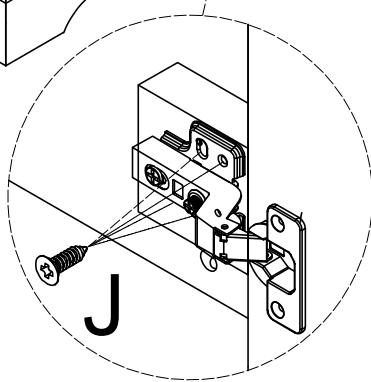



STEP: 14

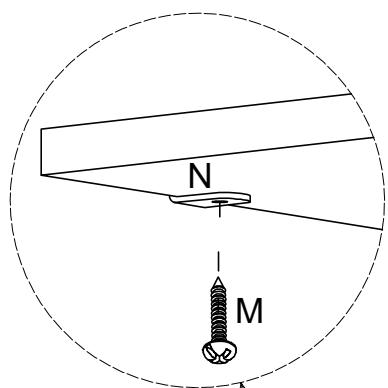

N
4PCS
M
4PCS

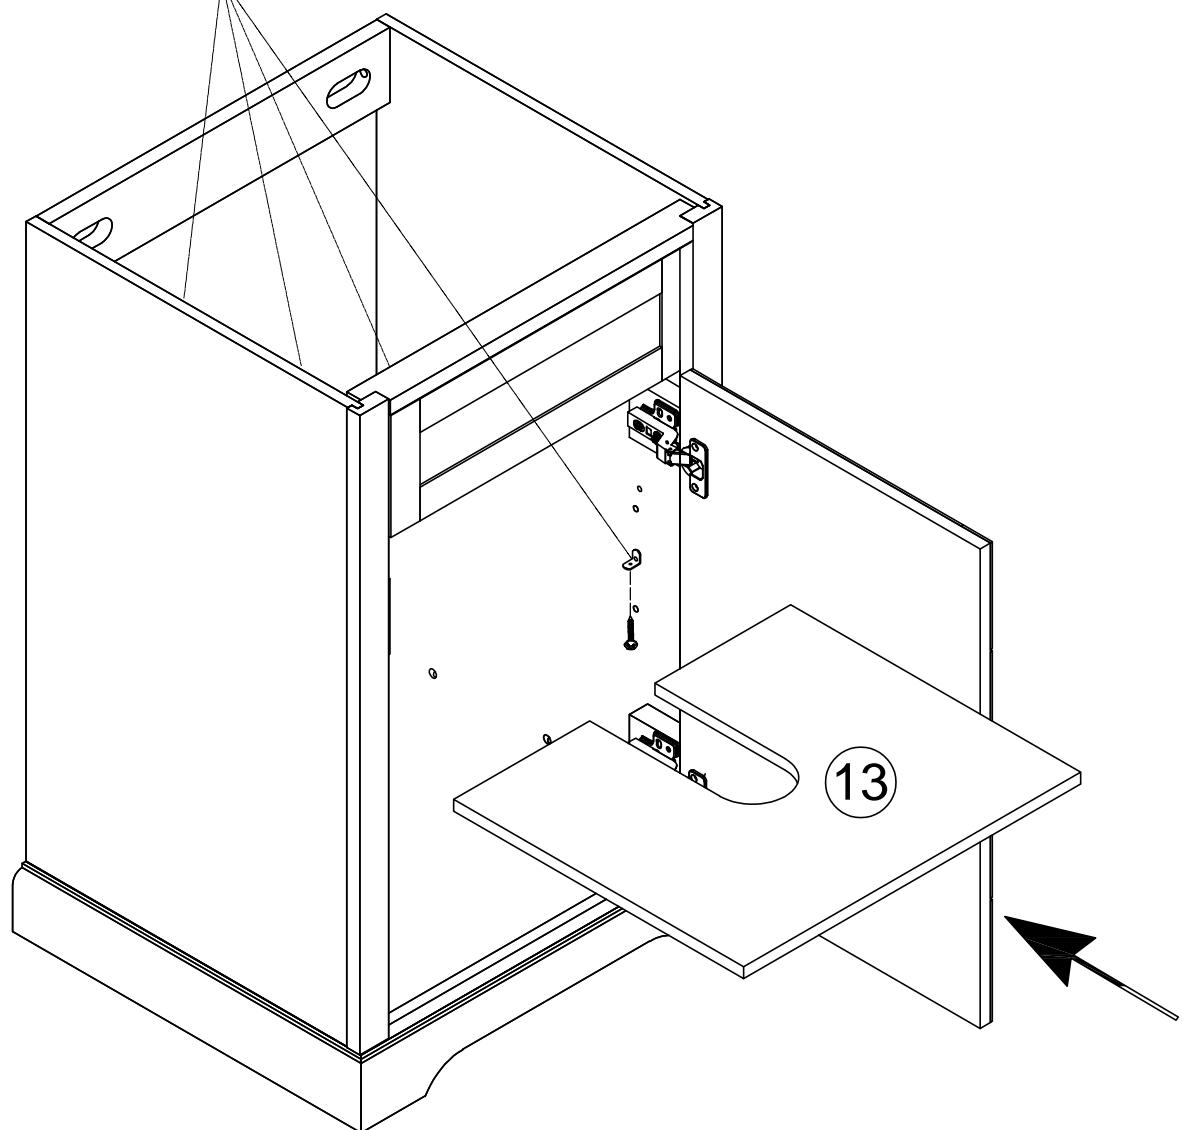


STEP: 15

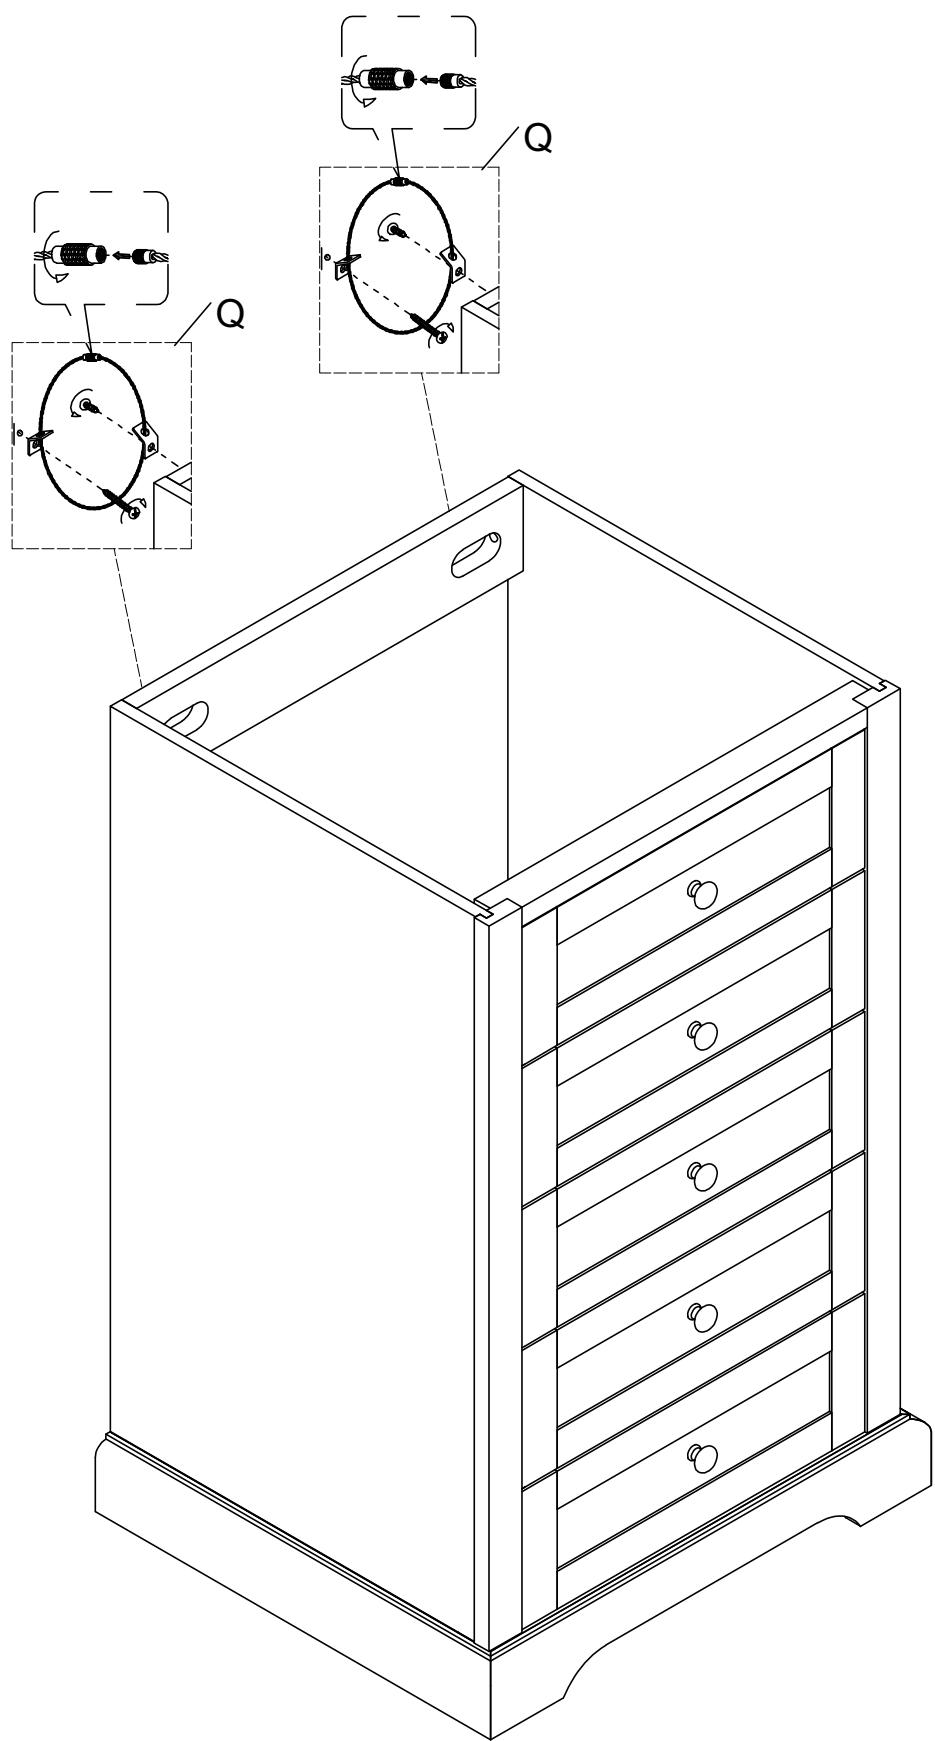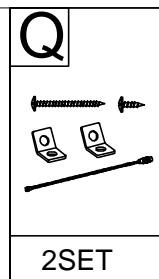

STEP: 16


Install the sink on the cabinet with glue.

Let stand for 24 hours

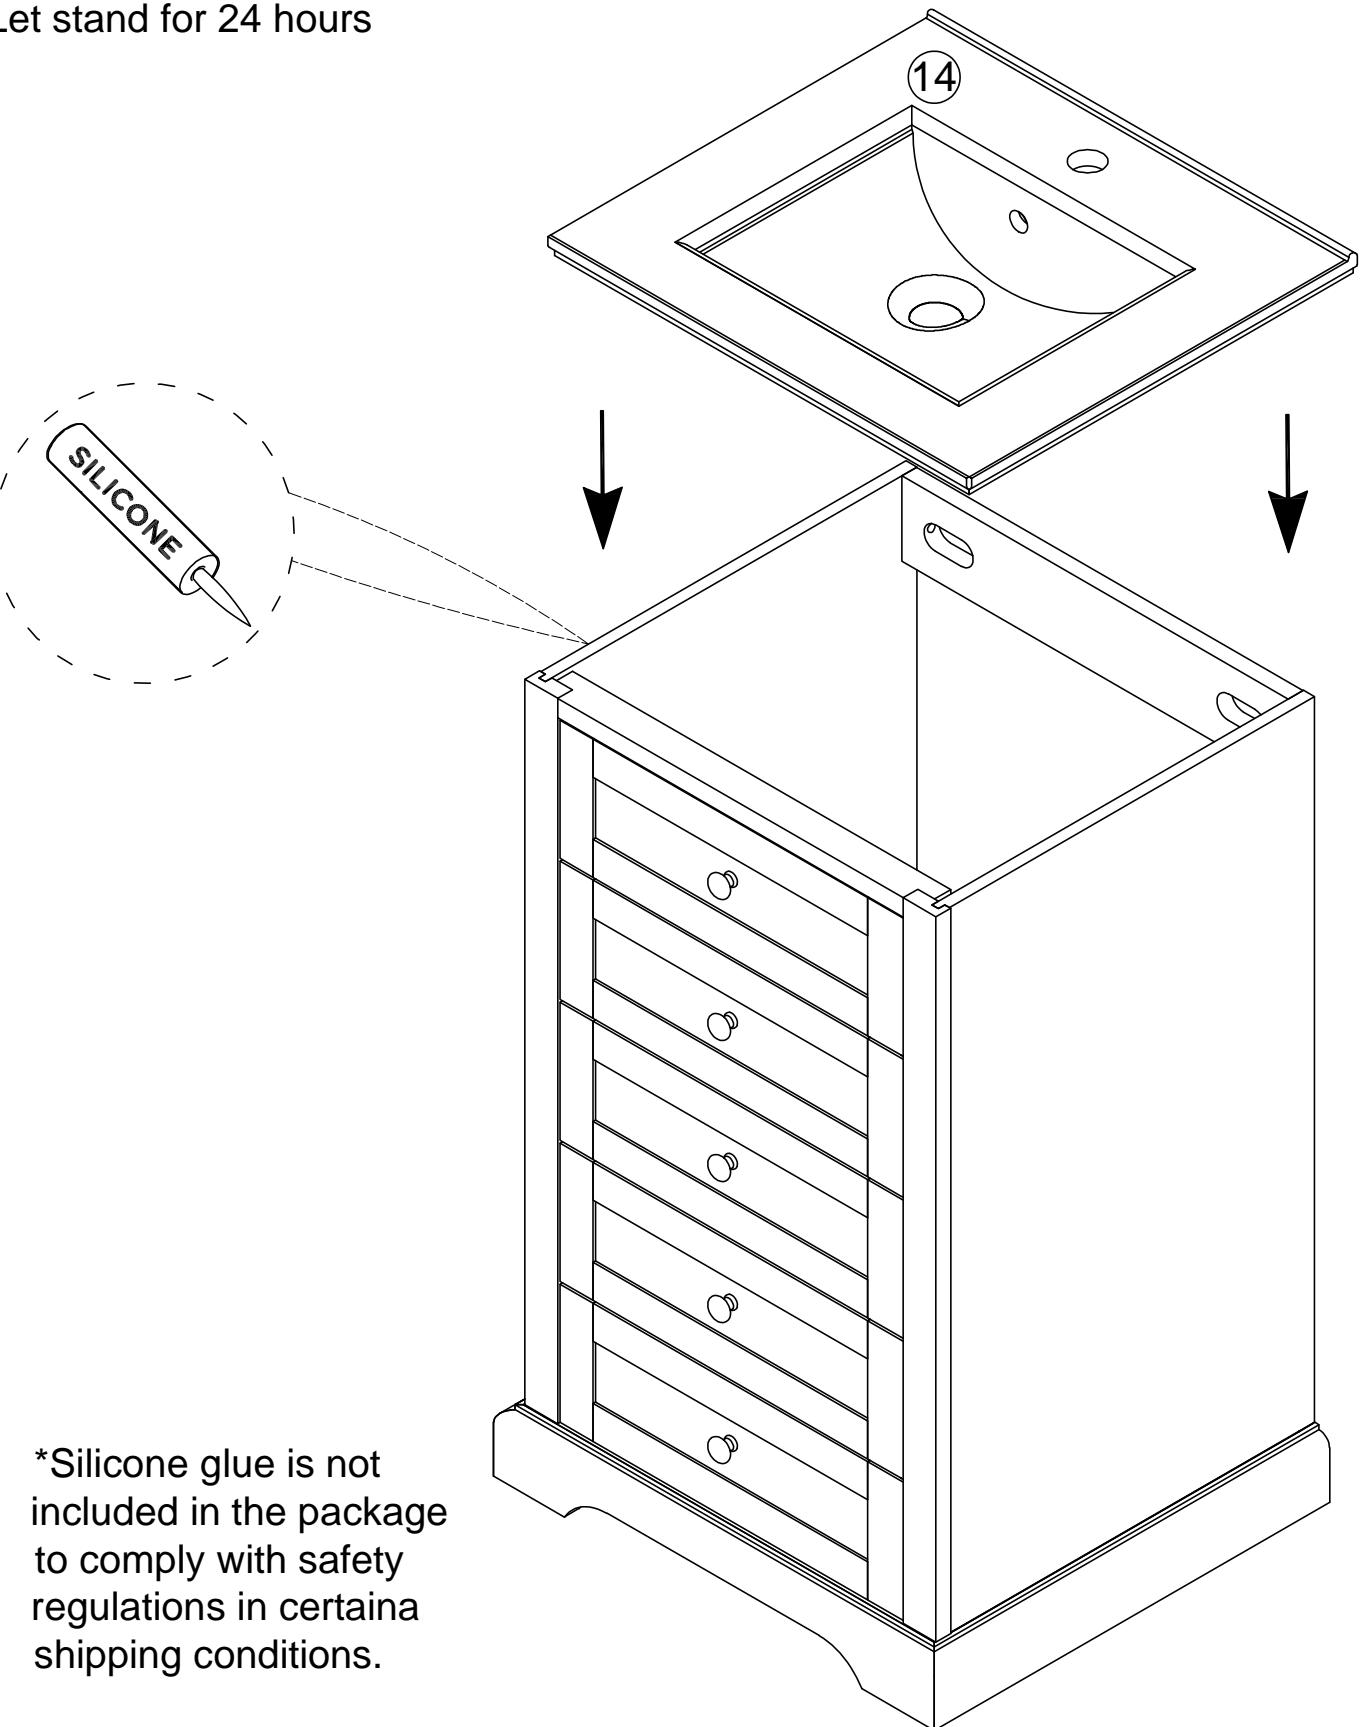


*Silicone glue is not included in the package to comply with safety regulations in certain shipping conditions.

STEP: 17

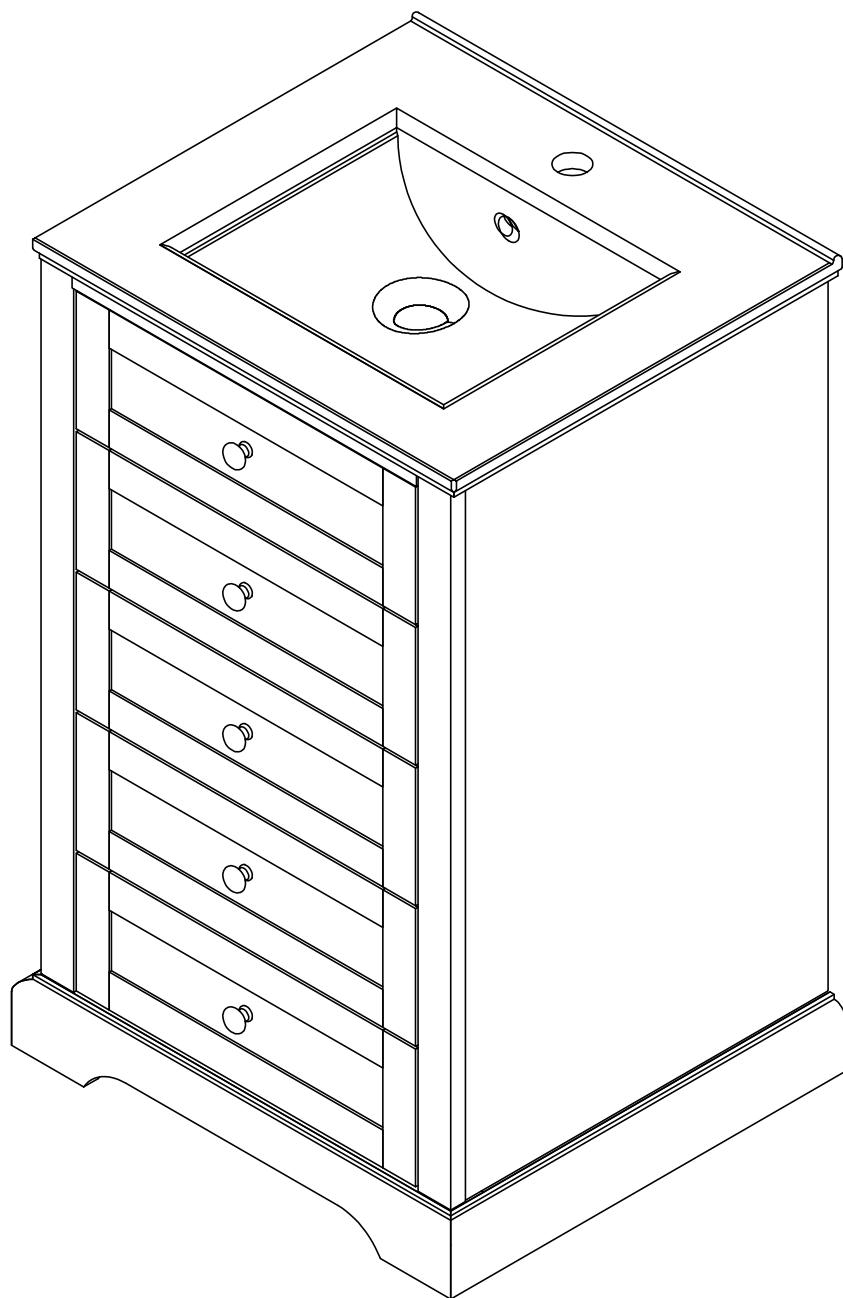


HINGE ADJUSTMENTS

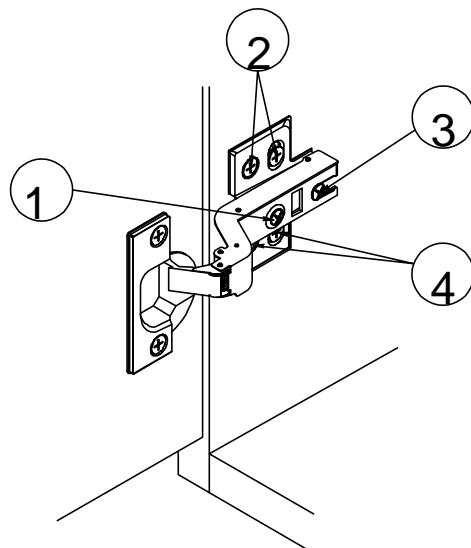


① Sideways / Tilt adjustment

Turn the screw clockwise to move the door further away from the side of the cabinet
anticlockwise to move the door closer to the side of the cabinet

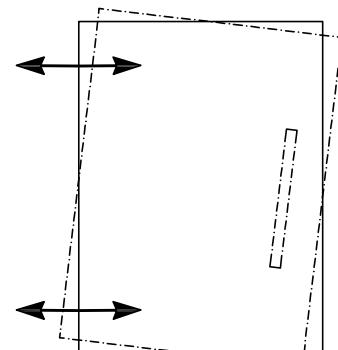

② ④ Height adjustment

While supporting the weight of the door, turn the screws clockwise to move the door up
anticlockwise to move the door down

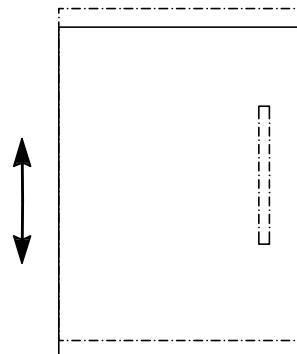

③ Forward and back adjustment

