


# ASSEMBLY INSTRUCTIONS

## BATH VANITY-CABINET

SKU - N725P375626



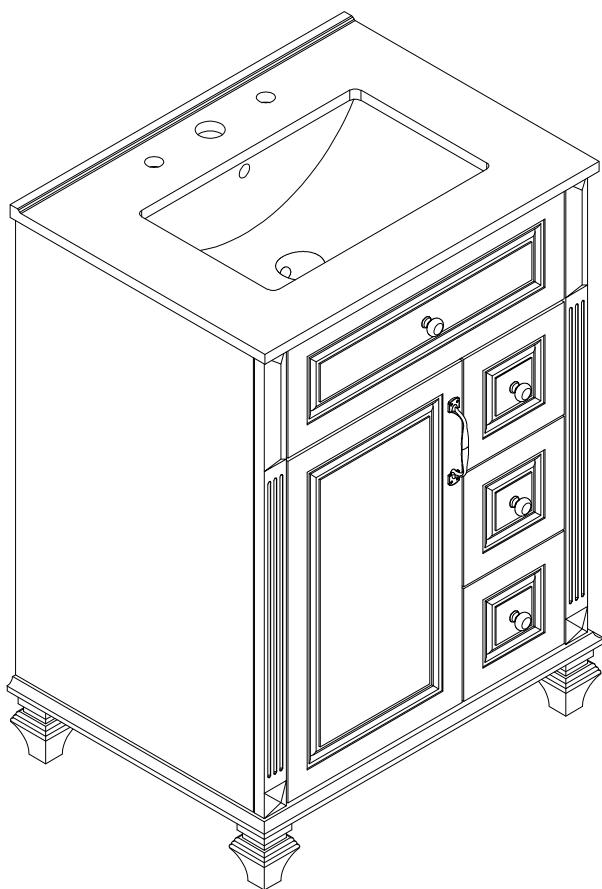


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.



Compare with the parts list to be sure all parts are present.

**DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED**

**\*Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe!!!**  
**\* Please assemble on a clean soft surface to avoid damage.**

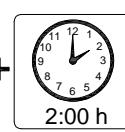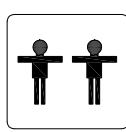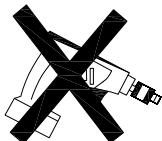


Tools Required



**IMPORTANT:**

**PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY**

# **PLEASE DO NOT RETURN TO STORE**

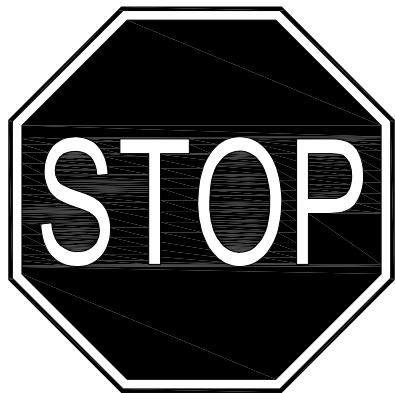

**Please do not return this product to the retailer!!  
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.


# Before Installation

Important- Please read these instructions fully before starting assembly


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

## Cam Lock Assembly Instructions
















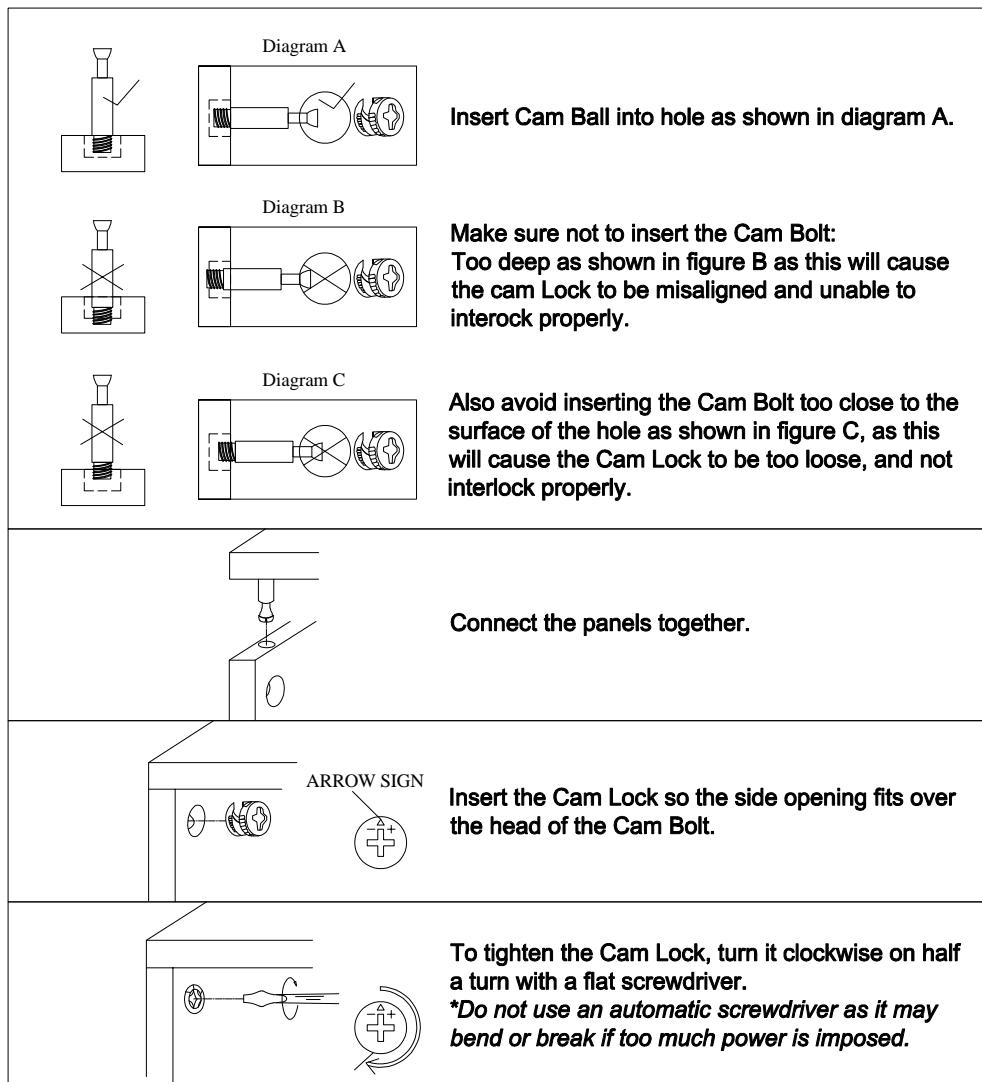


# Detail View

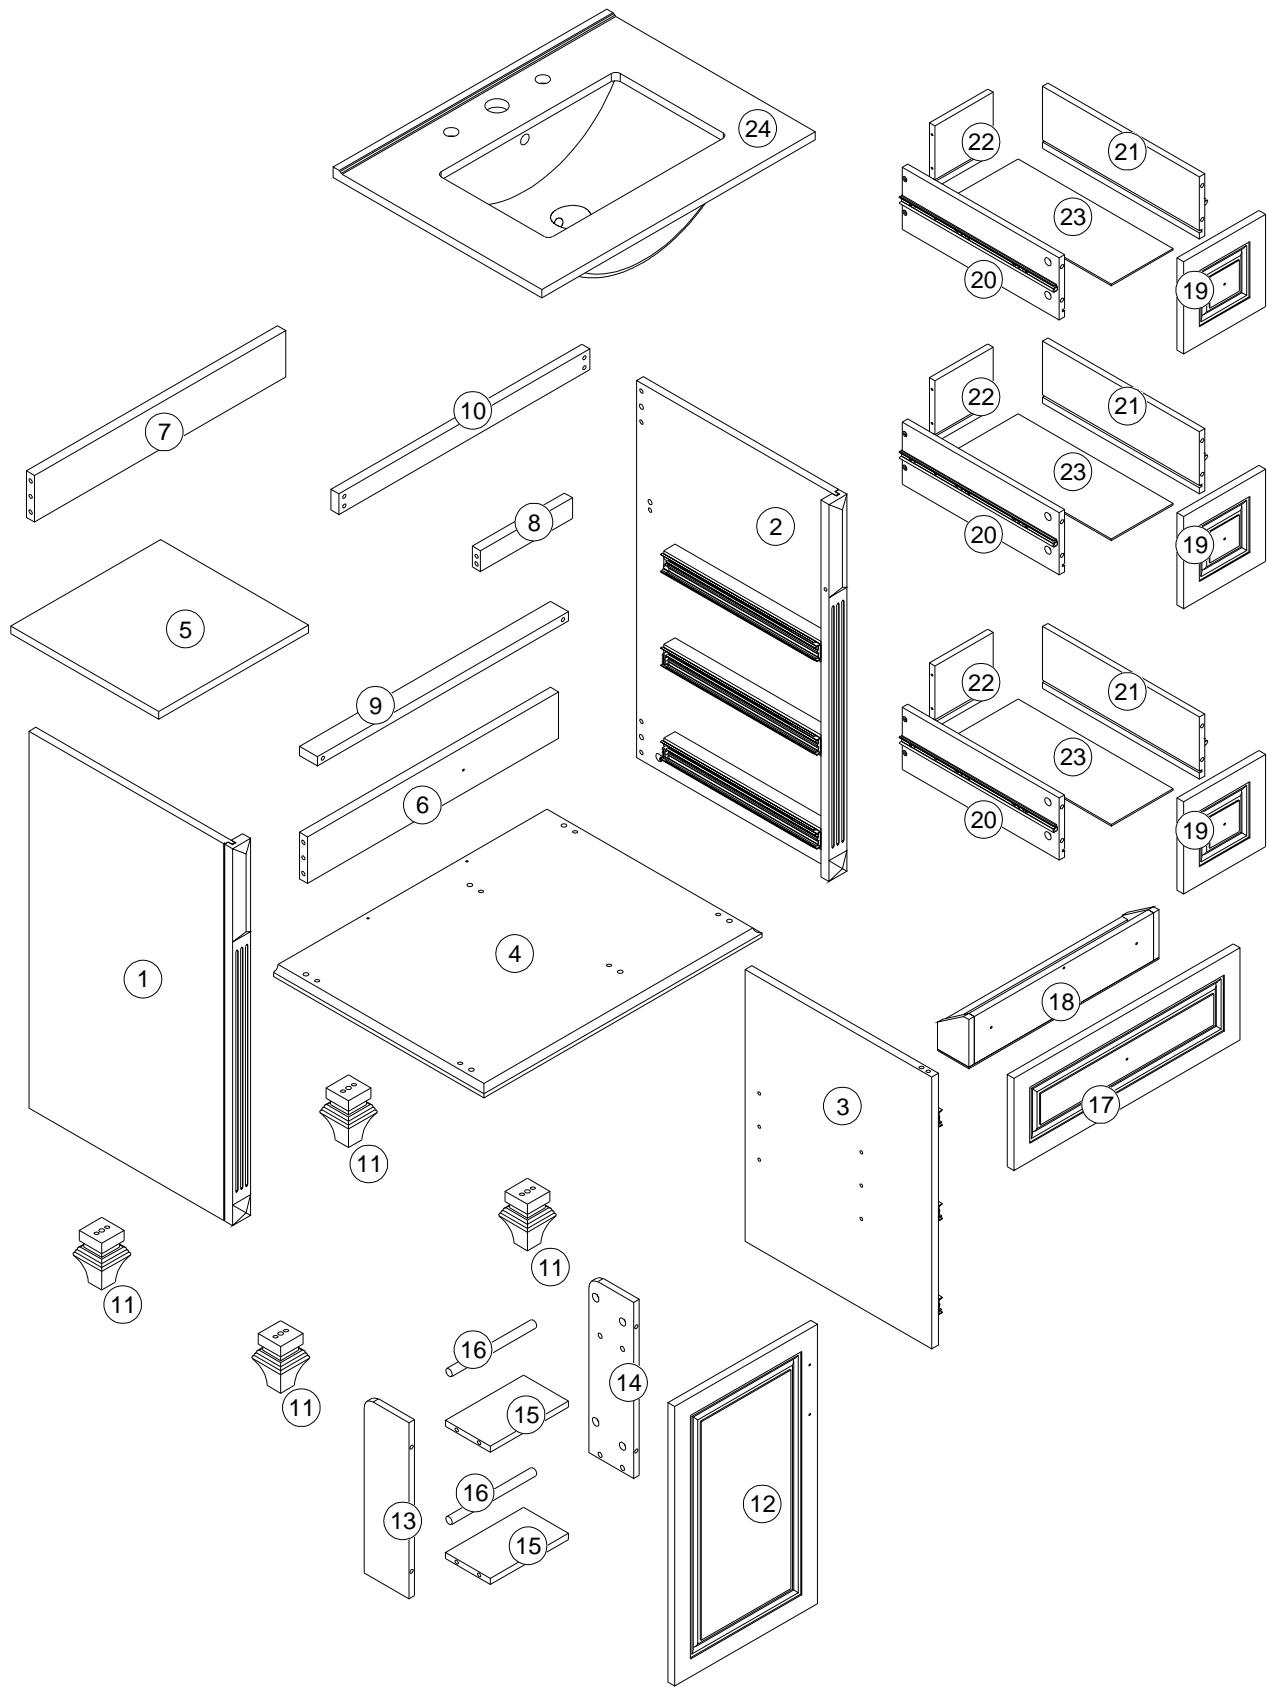


**Identifying the Hardware-Identify the hardware using the illustrations below.**

# SKU - N725P375626

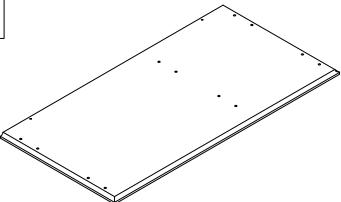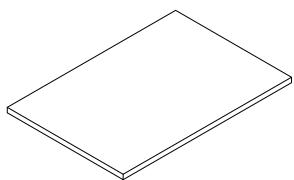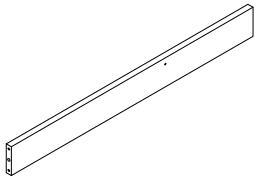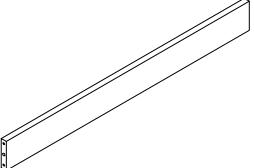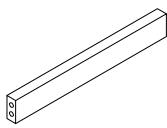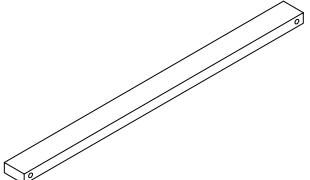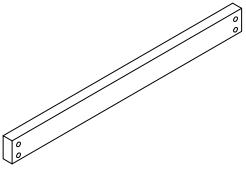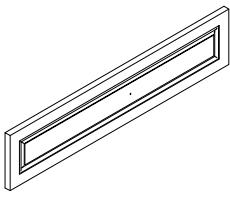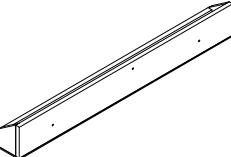1		2		3	
4		5		6	
7		8		9	
10		11		12	
13		14		15	
16		17		18	
19		20		21	


SKU - N725P375626

22




Drawer Back Panel - 3pcs

23

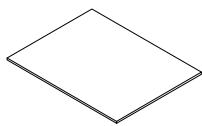









Drawer Bottom Panel - 3pcs

24

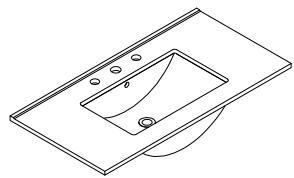


Sink - 1pc




## Hardware Lists N725P375626
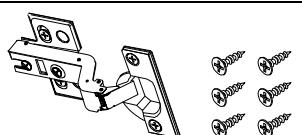
<b>A</b>  M6x30mm Hex-Head bolt (8pcs)+1pc	<b>B</b>  Ø1/4 "x13x1mm Washer (4pcs)+1pc	<b>C</b>  Ø6*32mm Three in one bolts (33pcs)+1pc
<b>D</b>  Ø14.5*9.5mm Three in one locks (33pcs)+1pc	<b>E</b>  45*12*1mm 45*17*14mm Plastic Door Magnet (2 sets)	<b>F</b>  Ø3.5x12mm Flat head screw (16pcs)+1pc
<b>G</b>  Ø8x30mm Wood dowel (27pcs)+1pc	<b>H</b>  Pin shelf (4pcs)+1pc	<b>I</b>  K4mm Allen key (2pcs)
<b>J</b>  Ø3.5x25mm Flat head screw (3pcs)+1pc	<b>K</b>  Knob (4pcs)	<b>L</b>  Handle (1pc)
<b>M</b>  Ø3.5x15mm Round head screw (4pcs)+1pc	<b>N</b>  Left elbow hinge (1pc)	<b>O</b>  Rotary Hinge(1set)
<b>P</b>  Ø10x10mm Plastic Canopy (12pcs)+1pc	<b>Q</b>  M4x35mm Round head screw (12psc)+1pc	<b>R</b>  M4x20mm Handle screw (5pcs)+1pc
<b>S</b>  Ø13xM6*60mm Hex-Head bolts (4pcs)+1pc	<b>T</b>  Ø4x20mm Round head screw (2pcs)+1pc	<b>U</b>  Insert hinge (2 sets)
<b>V</b>  Anti fall Hardware (2 sets)	<b>W</b>  M4x30mm Handle screw (1pc)+1pc	


## STEP:1

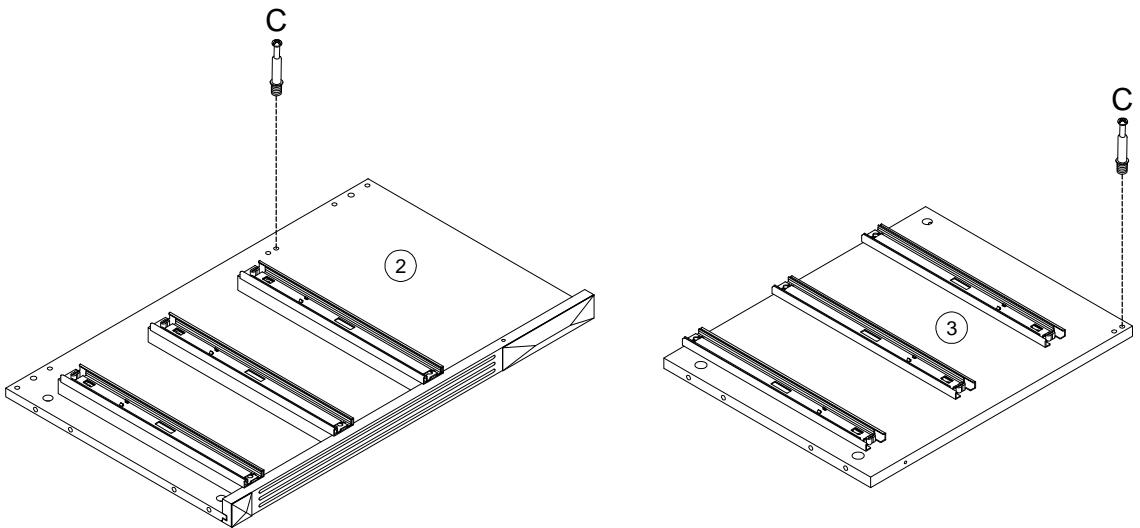



C	
	9pcs
E	
	2pcs
M	
	4pcs

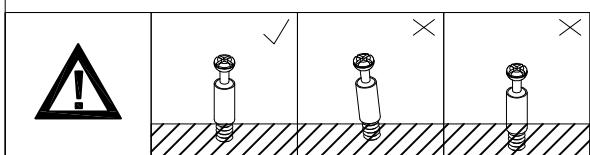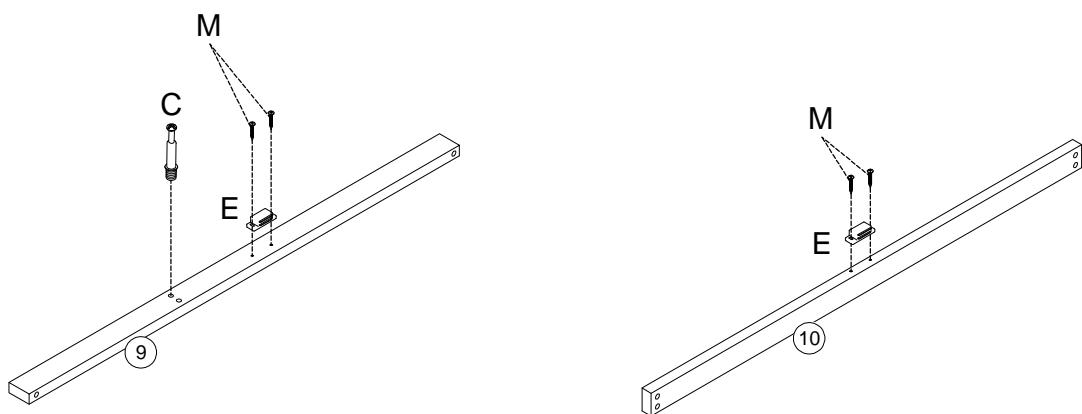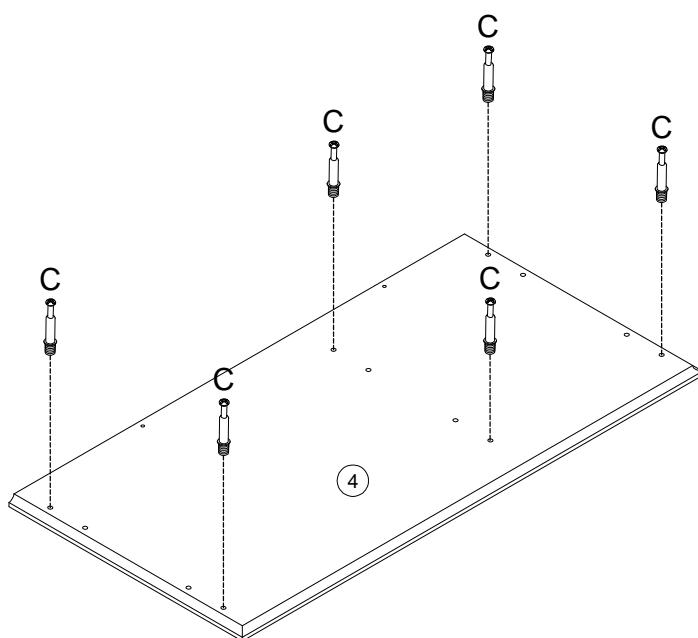



## STEP:2

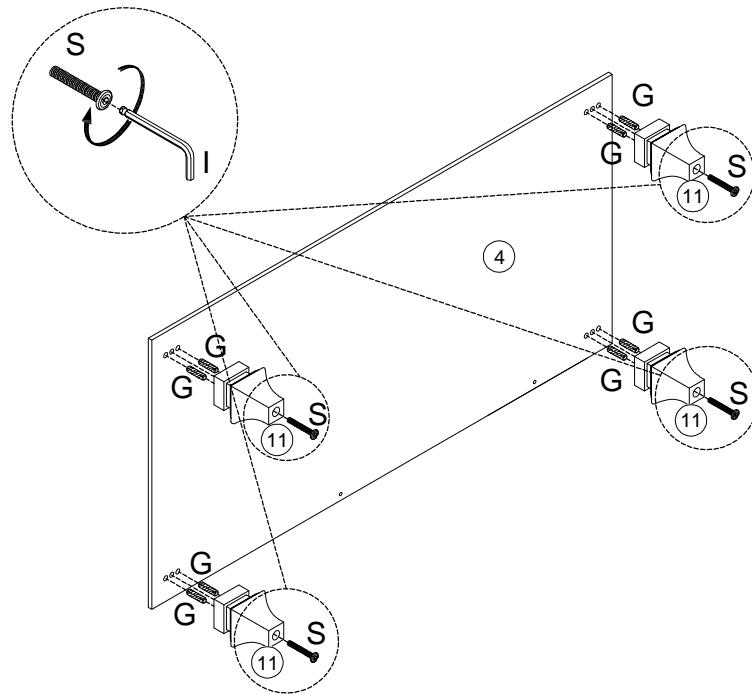


## STEP:3

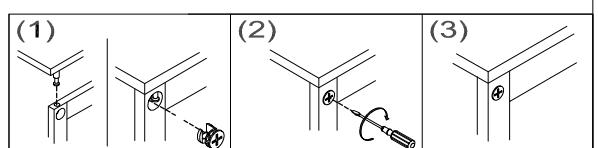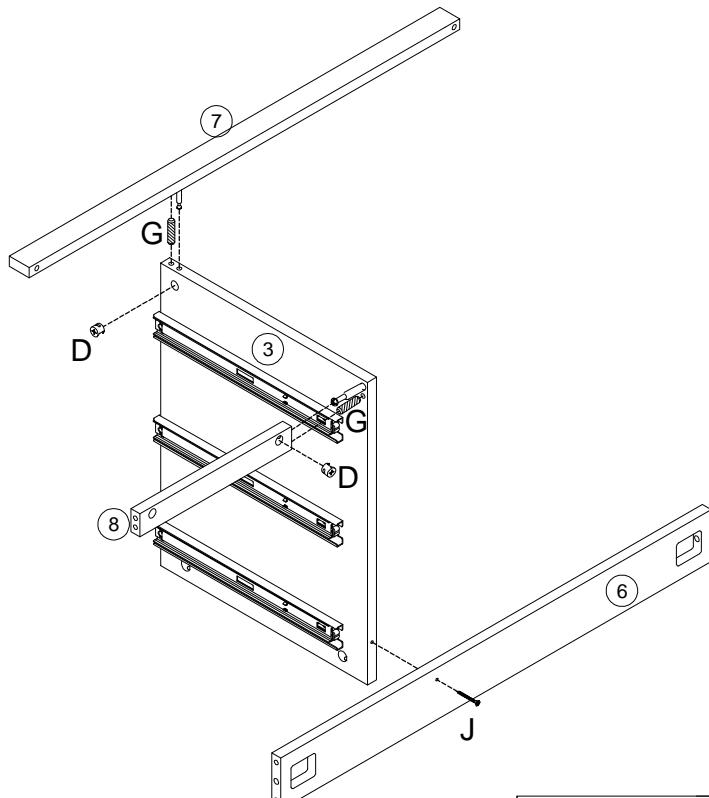


## STEP:4



E	F	K
		
1pc	6pcs	1pc
W	O	T
		
1pc	1set	2pcs

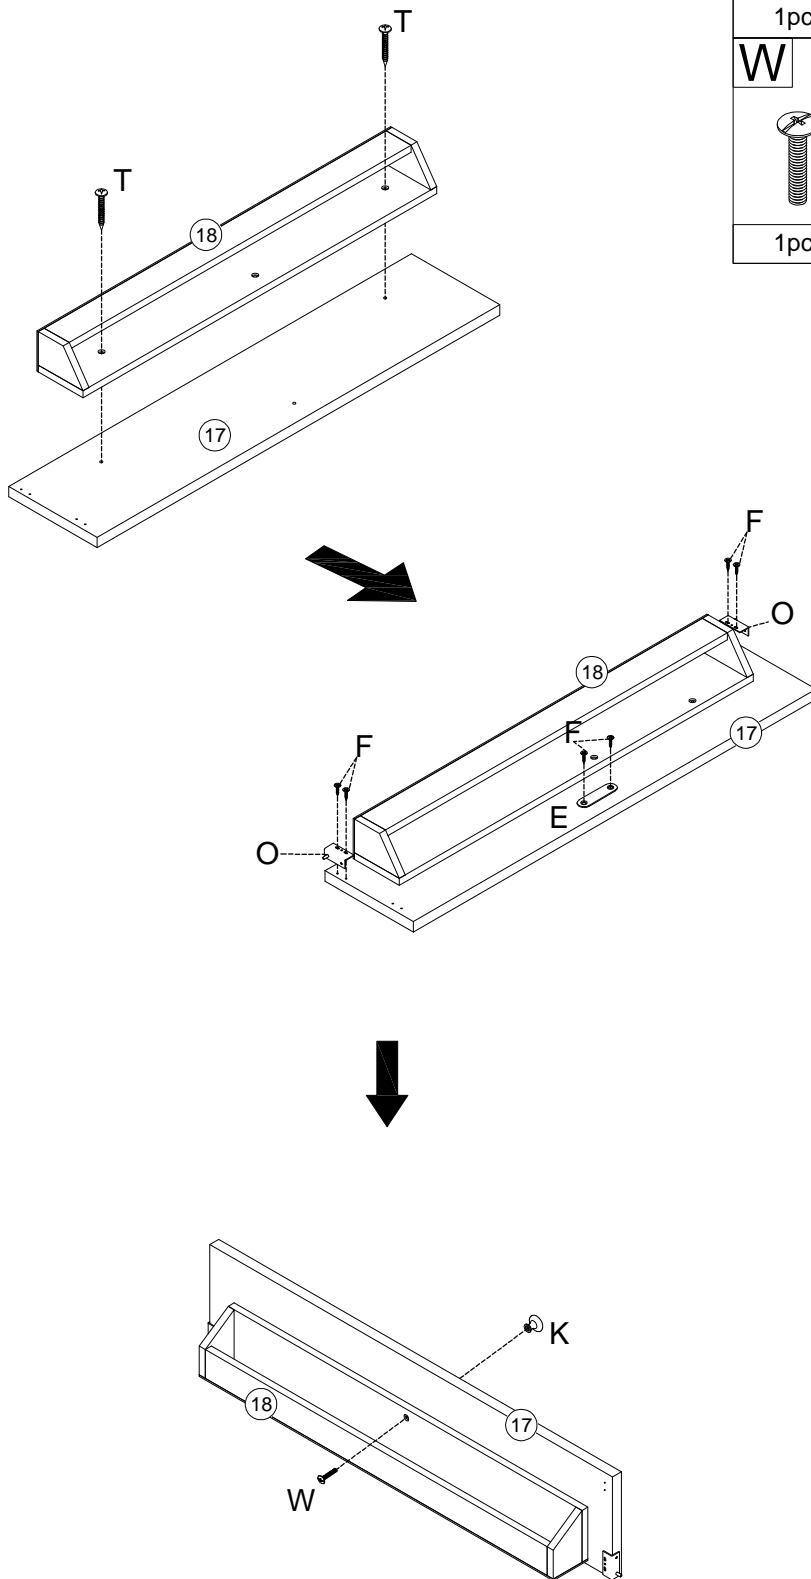


## STEP:5

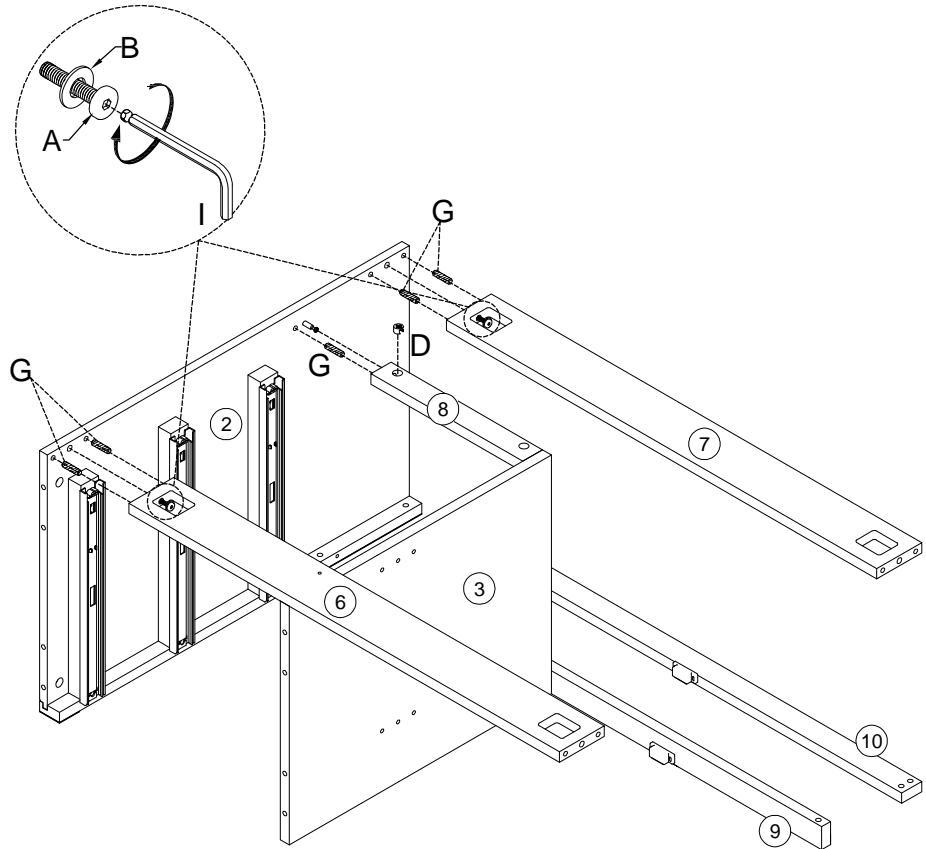

A	B
4pcs	2pcs
D	G
1pc	6pcs

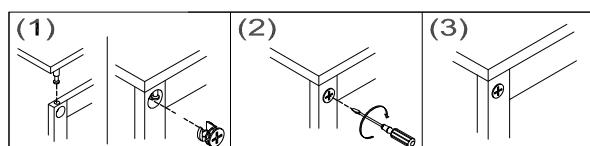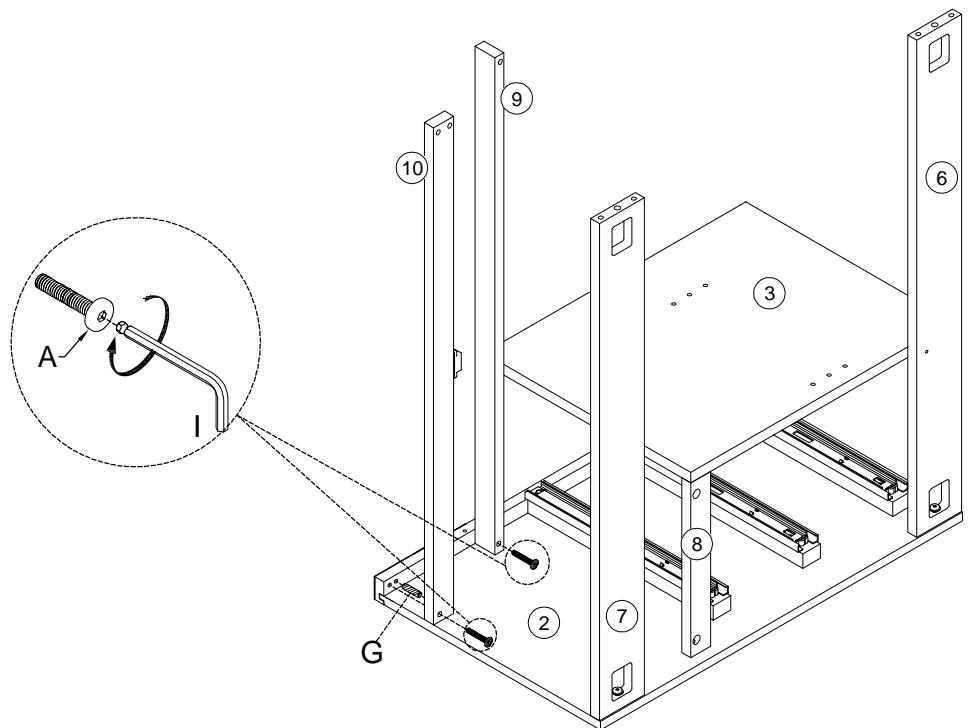

## STEP:6

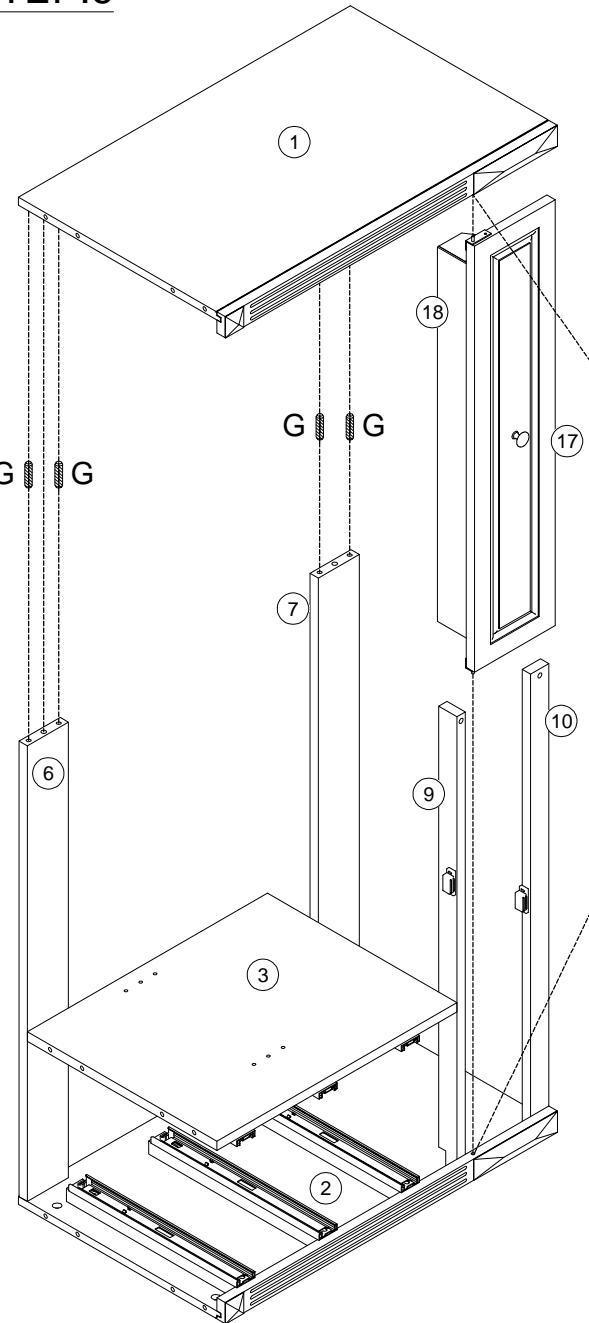





<b>A</b>	<b>B</b>
4pcs	2pcs


<b>G</b>


5pcs
------



## STEP:7

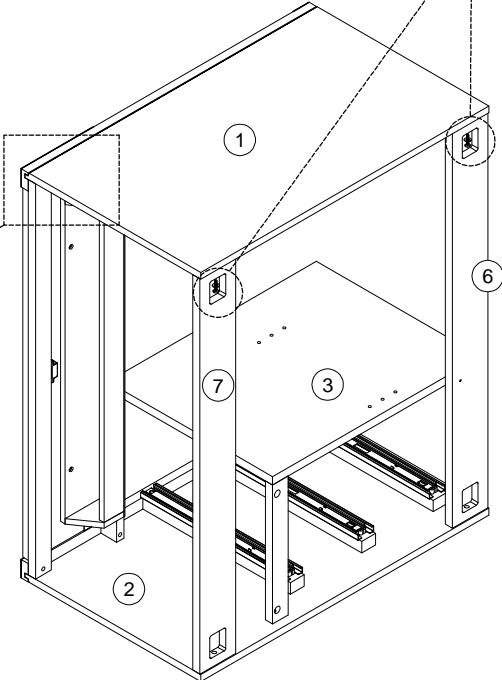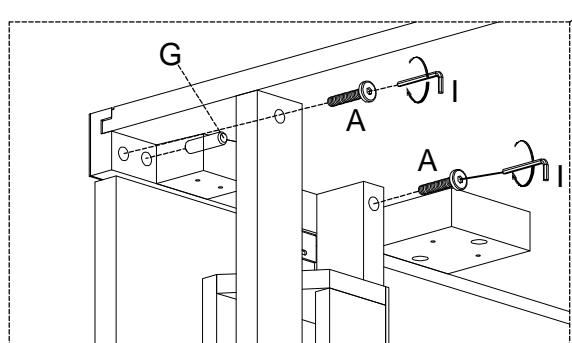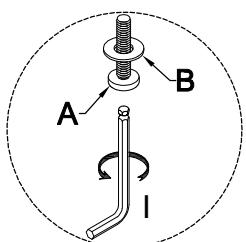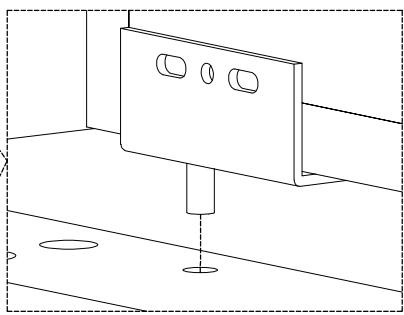

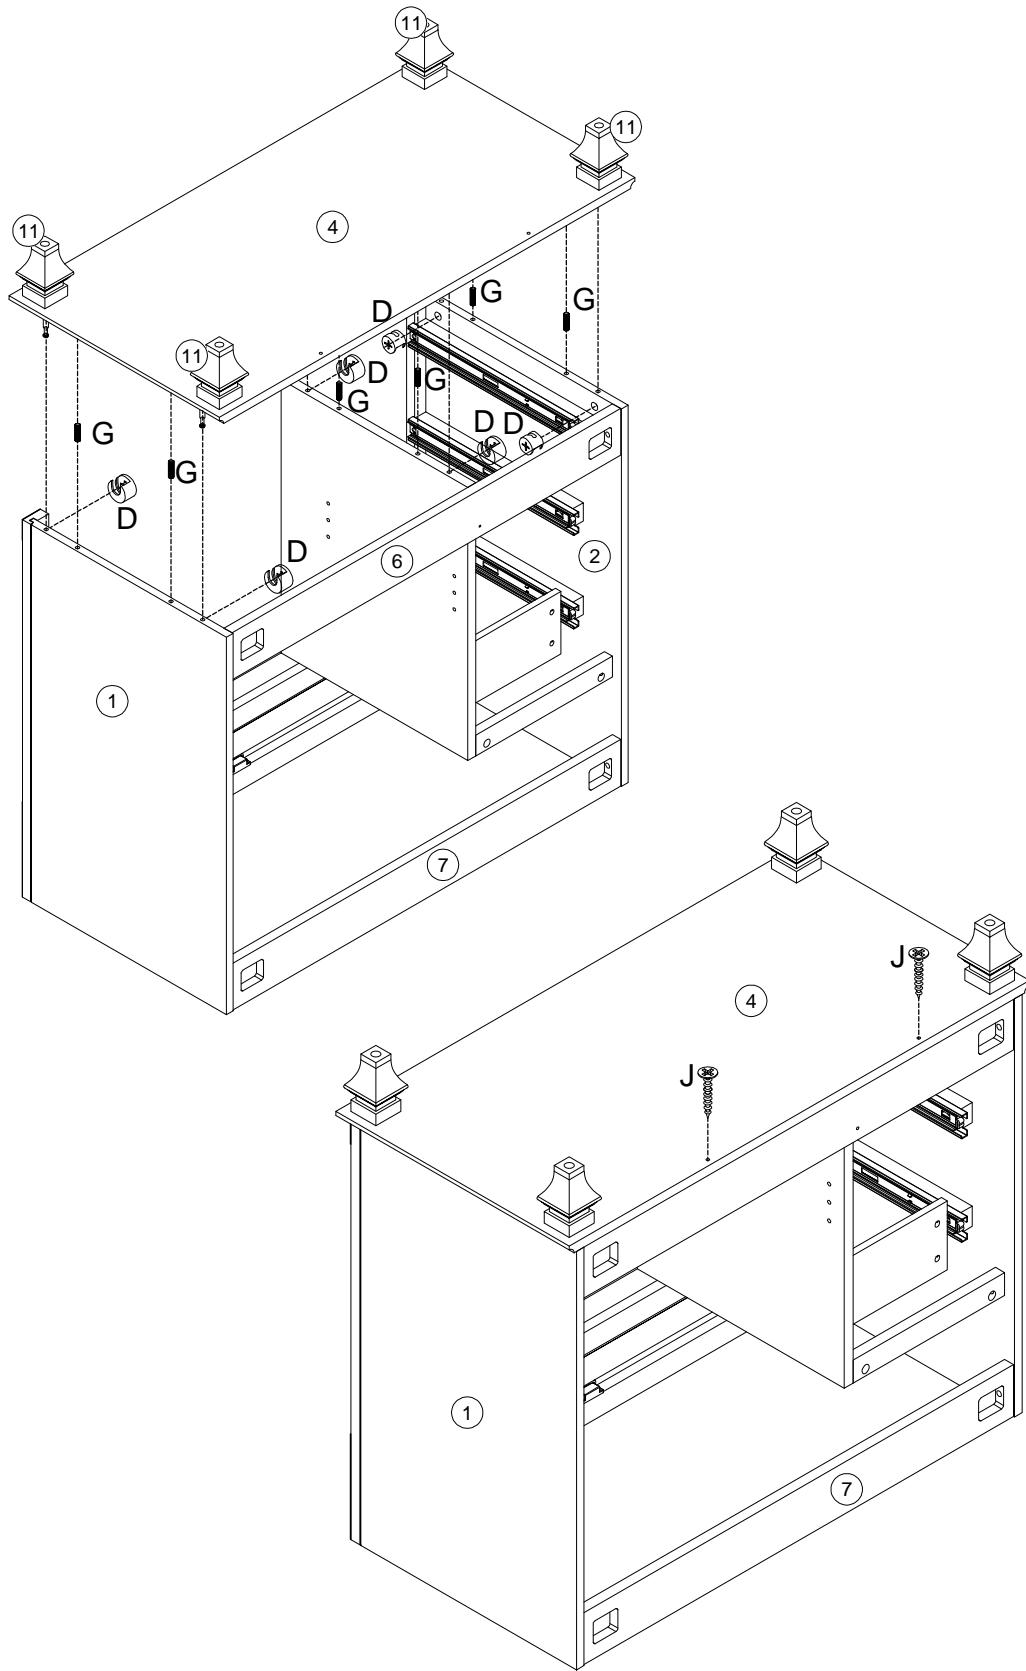
<b>D</b>	
6pcs	
<b>G</b>	
6pcs	
<b>J</b>	
2pcs	

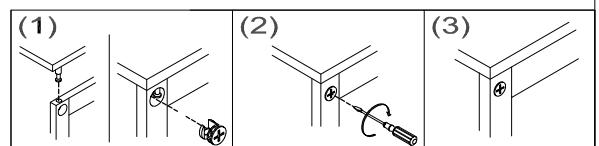



## STEP:8

<b>F</b>	<b>N</b>
	
4pcs	1pc




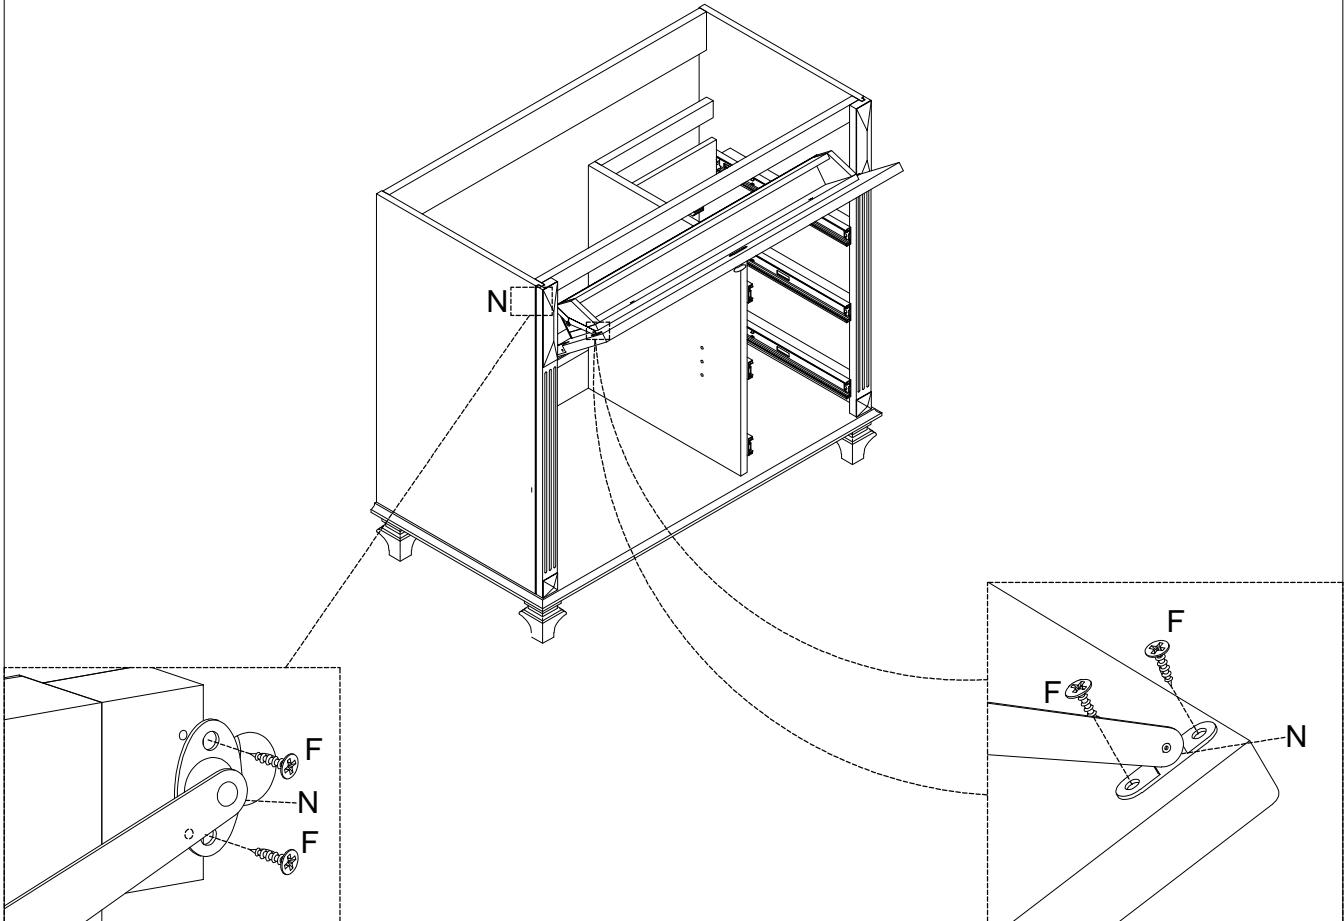


\* Please note that hinges U and V are different, please do not install them backwards.

## STEP:9


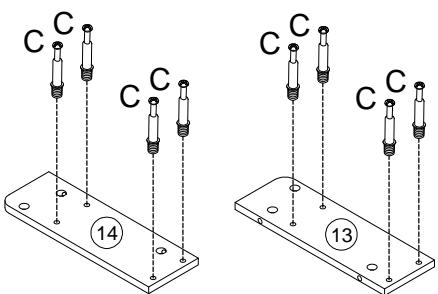
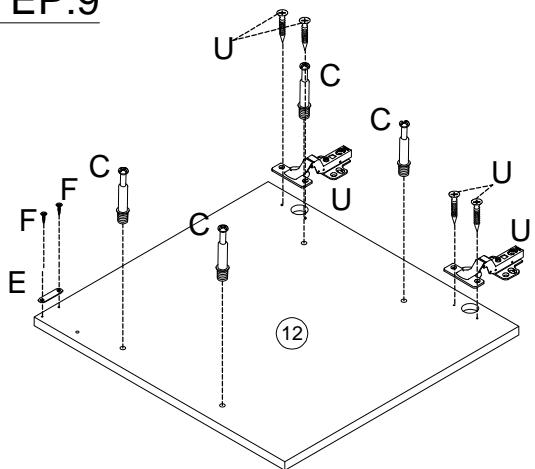


C	D
12pcs	12pcs
E	F
1pcs	2pcs
U	U
2pcs	4pcs

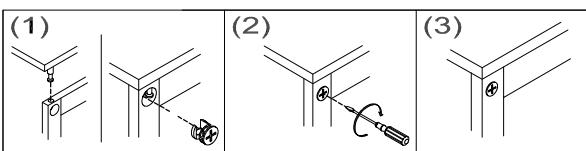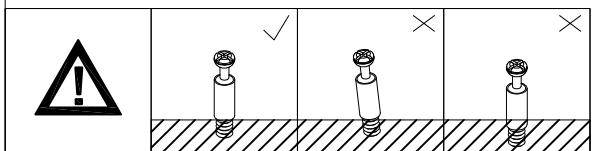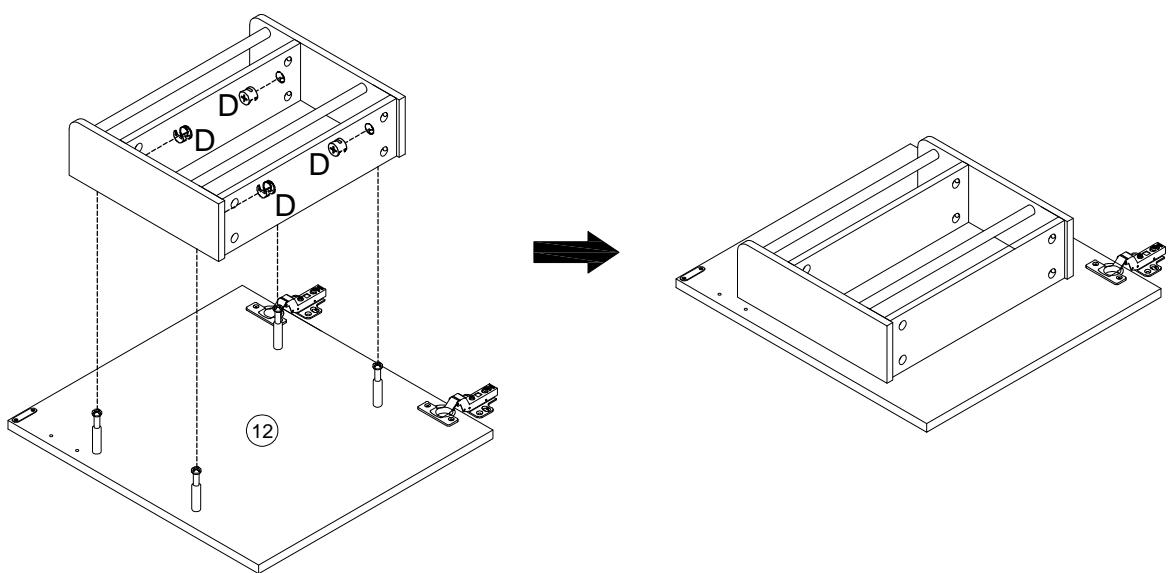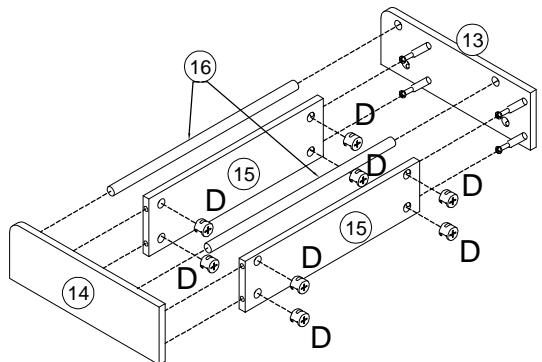


## STEP:10


L	R	U
1pc	2pcs	8pcs

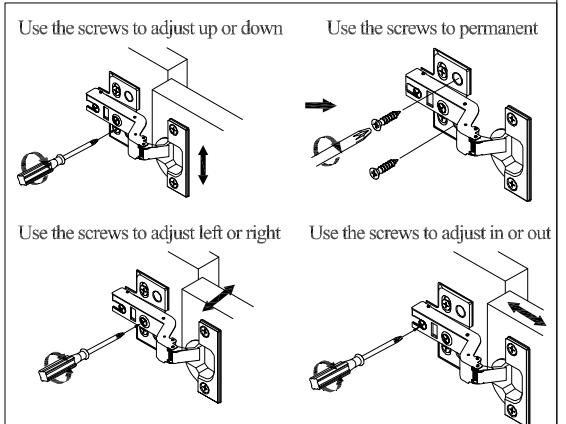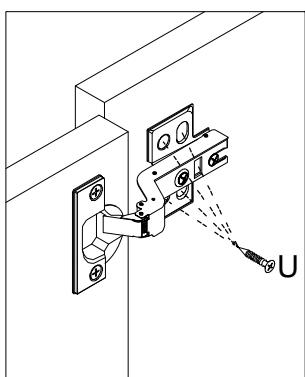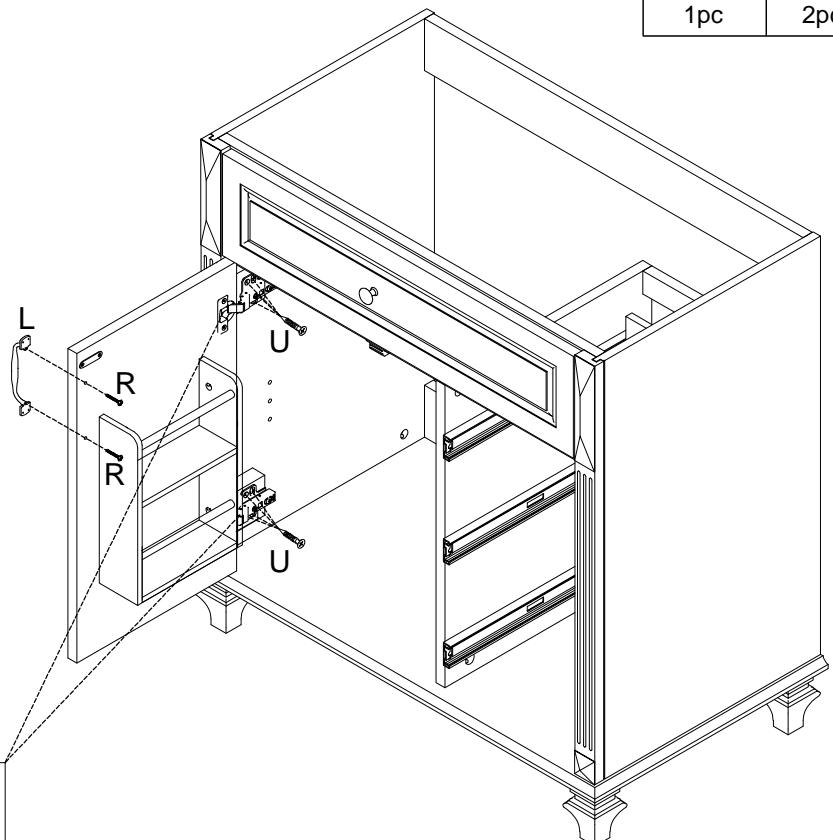


## STEP:11

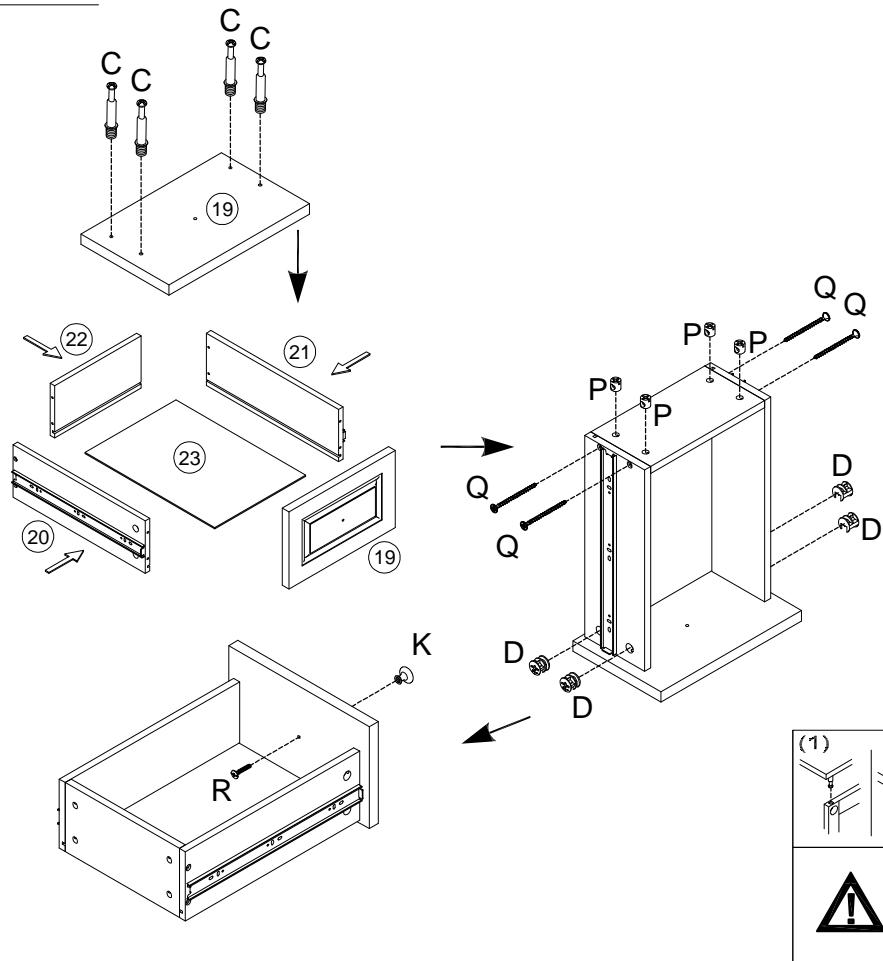


## STEP:12

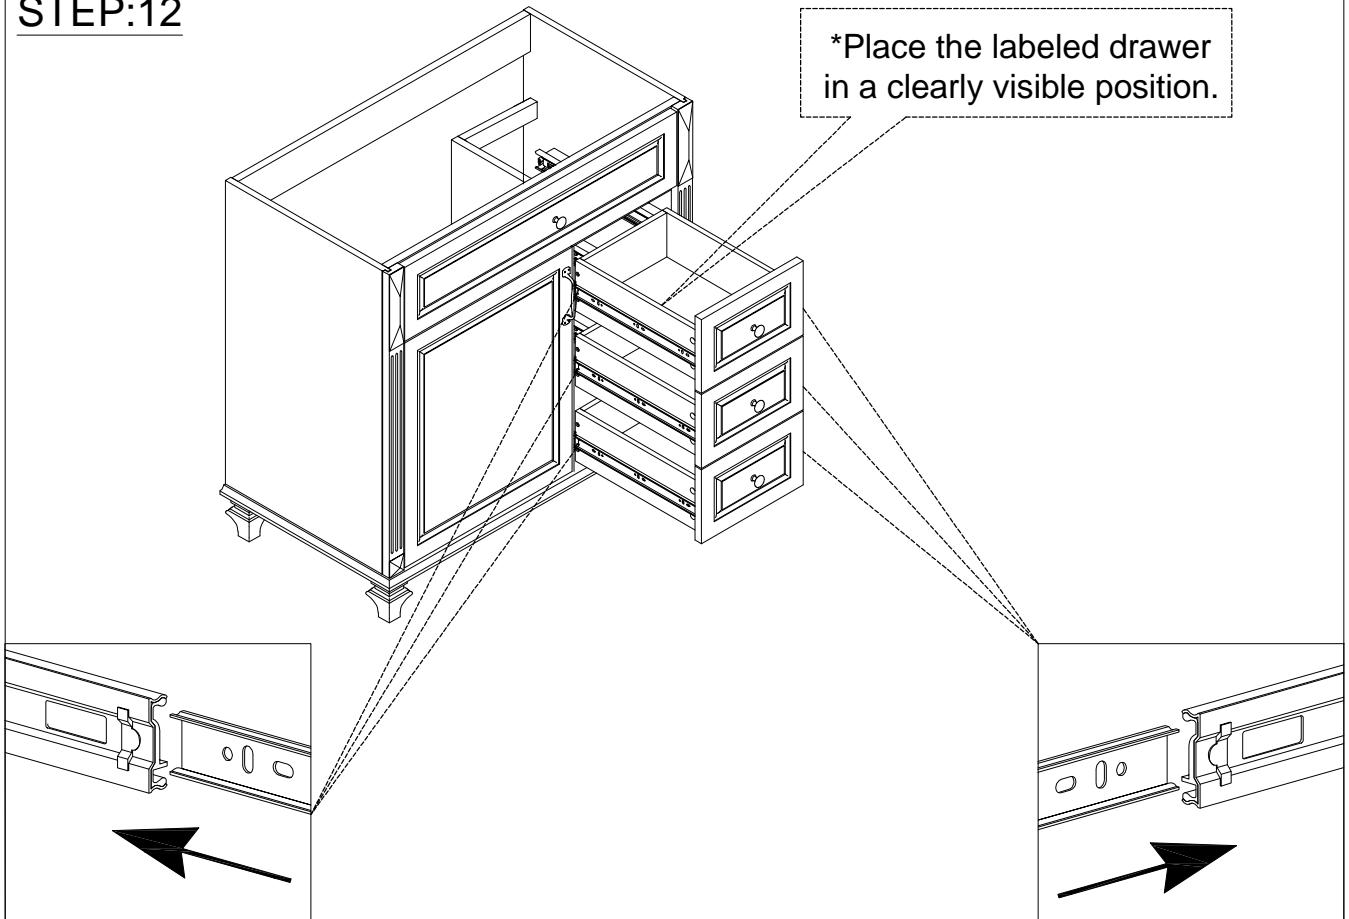

## STEP:13

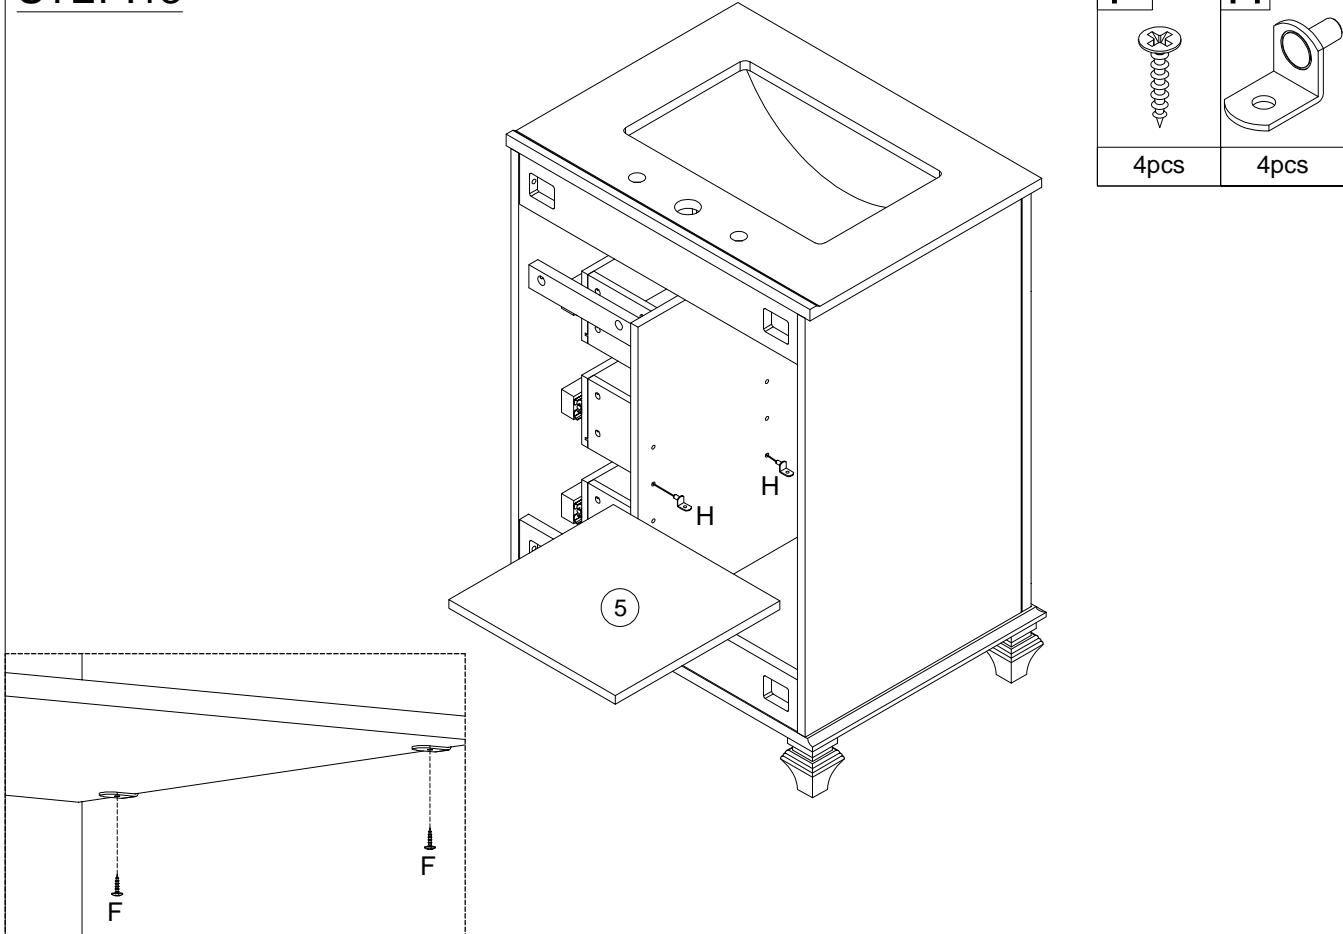


## STEP:14

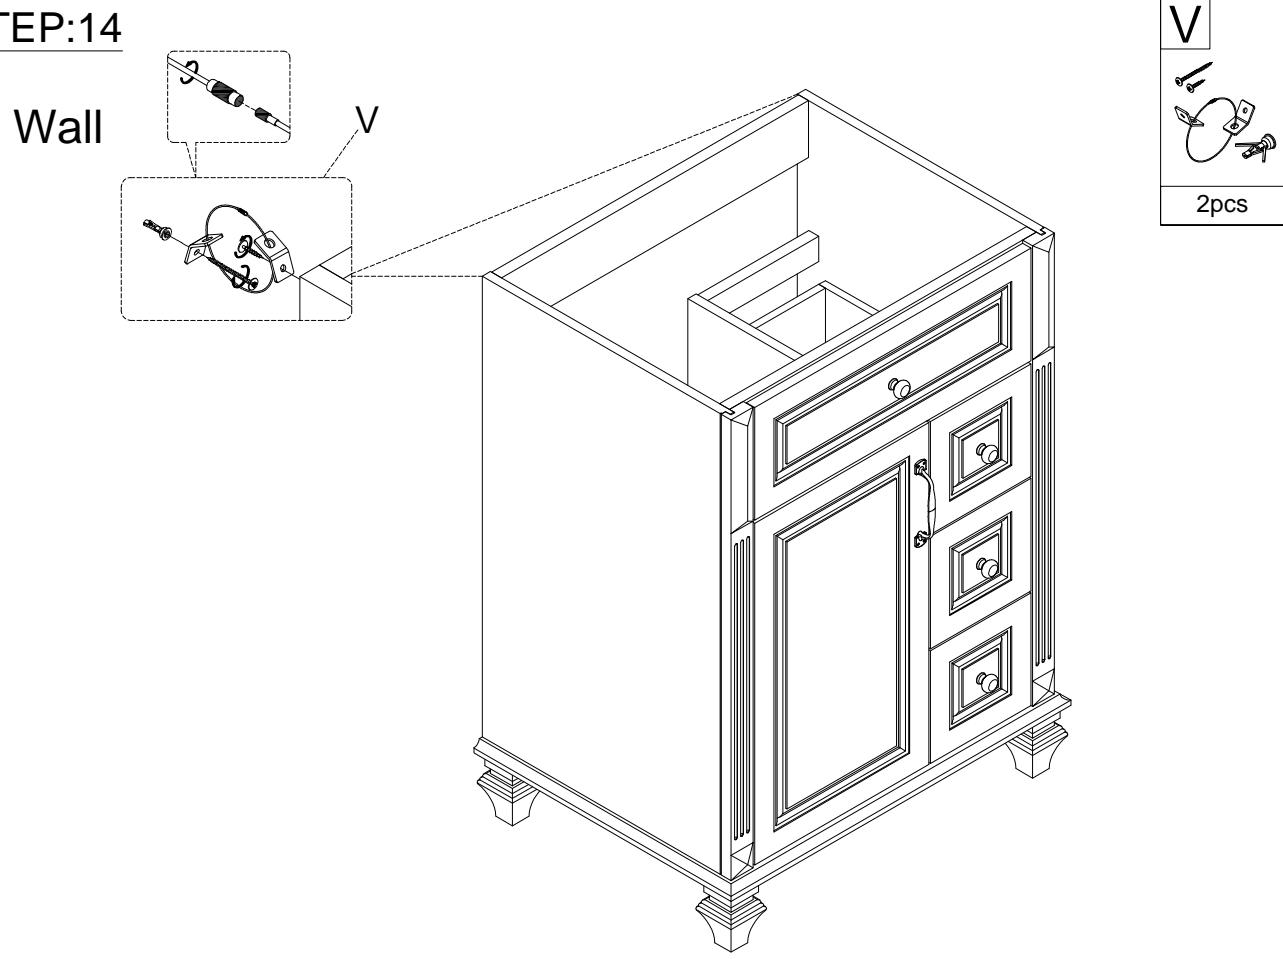


## STEP:15

Install the sink on the cabinet with glue.  
Let stand for 24 hours

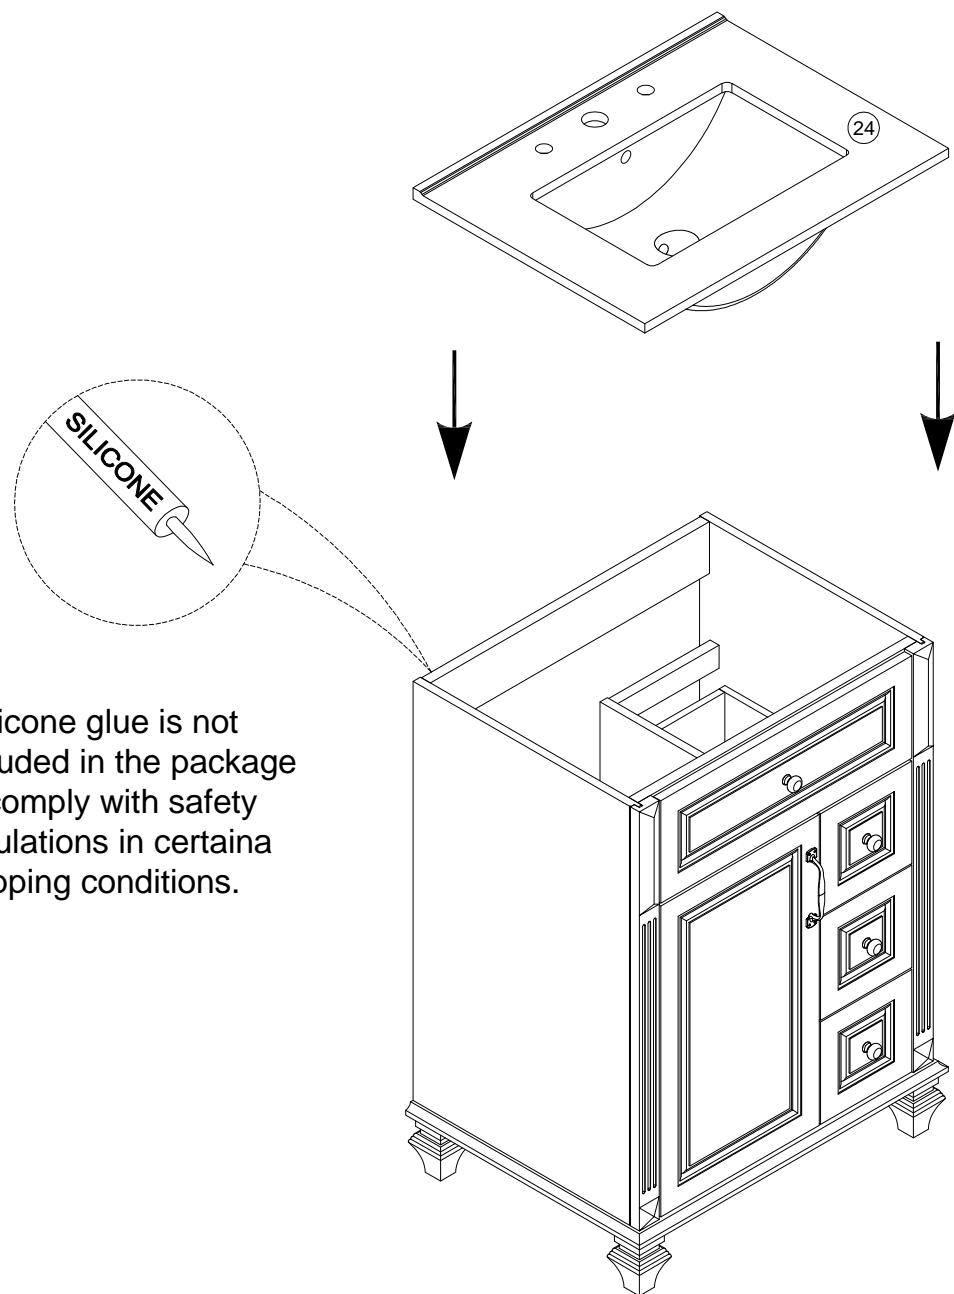


\*Silicone glue is not included in the package to comply with safety regulations in certain shipping conditions.

## STEP:16

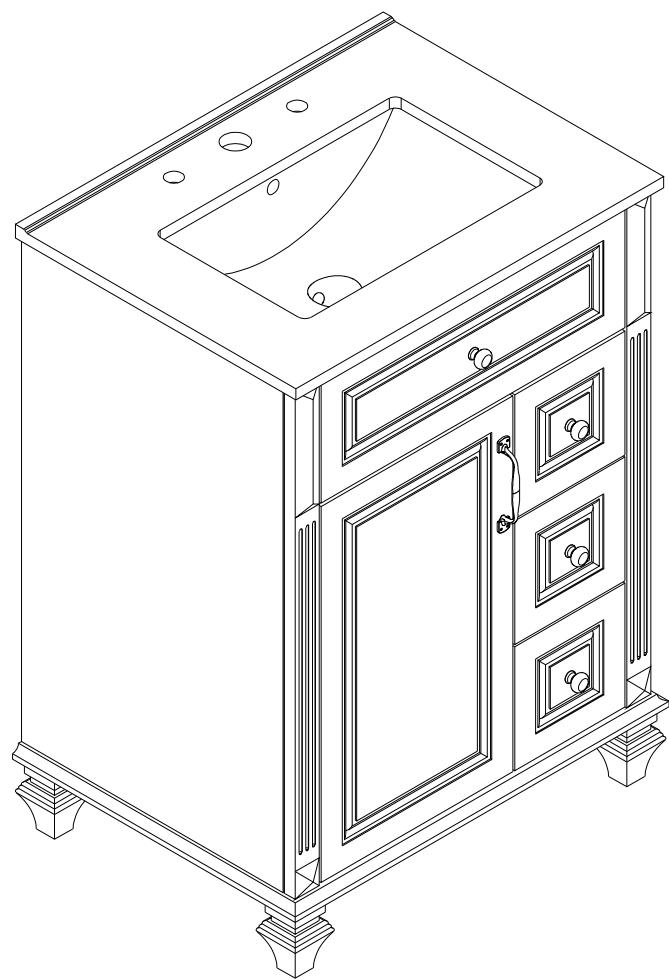

# HINGE ADJUSTMENTS

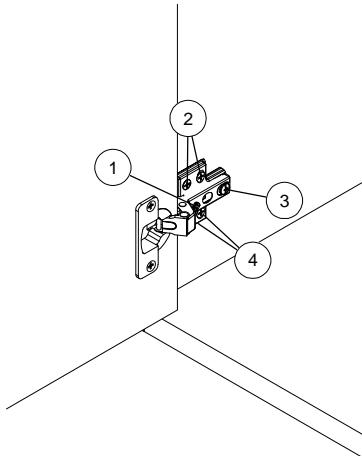


## ① Sideways / Tilt adjustment

Turn the screw

**clockwise** to move the door further away from  
the side of the cabinet

**anticlockwise** to move the door closer to the  
side of the cabinet

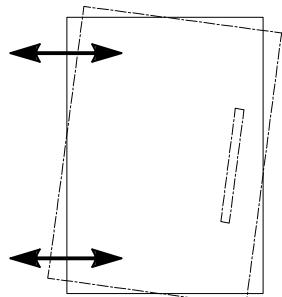


## ② ④ Height adjustment

While supporting the weight of the door, turn the  
screws

**clockwise** to move the door up

**anticlockwise** to move the door down

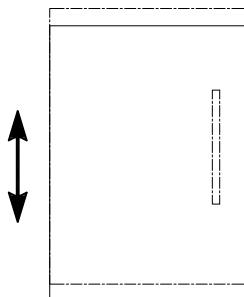

## ③ Forward and back adjustment

