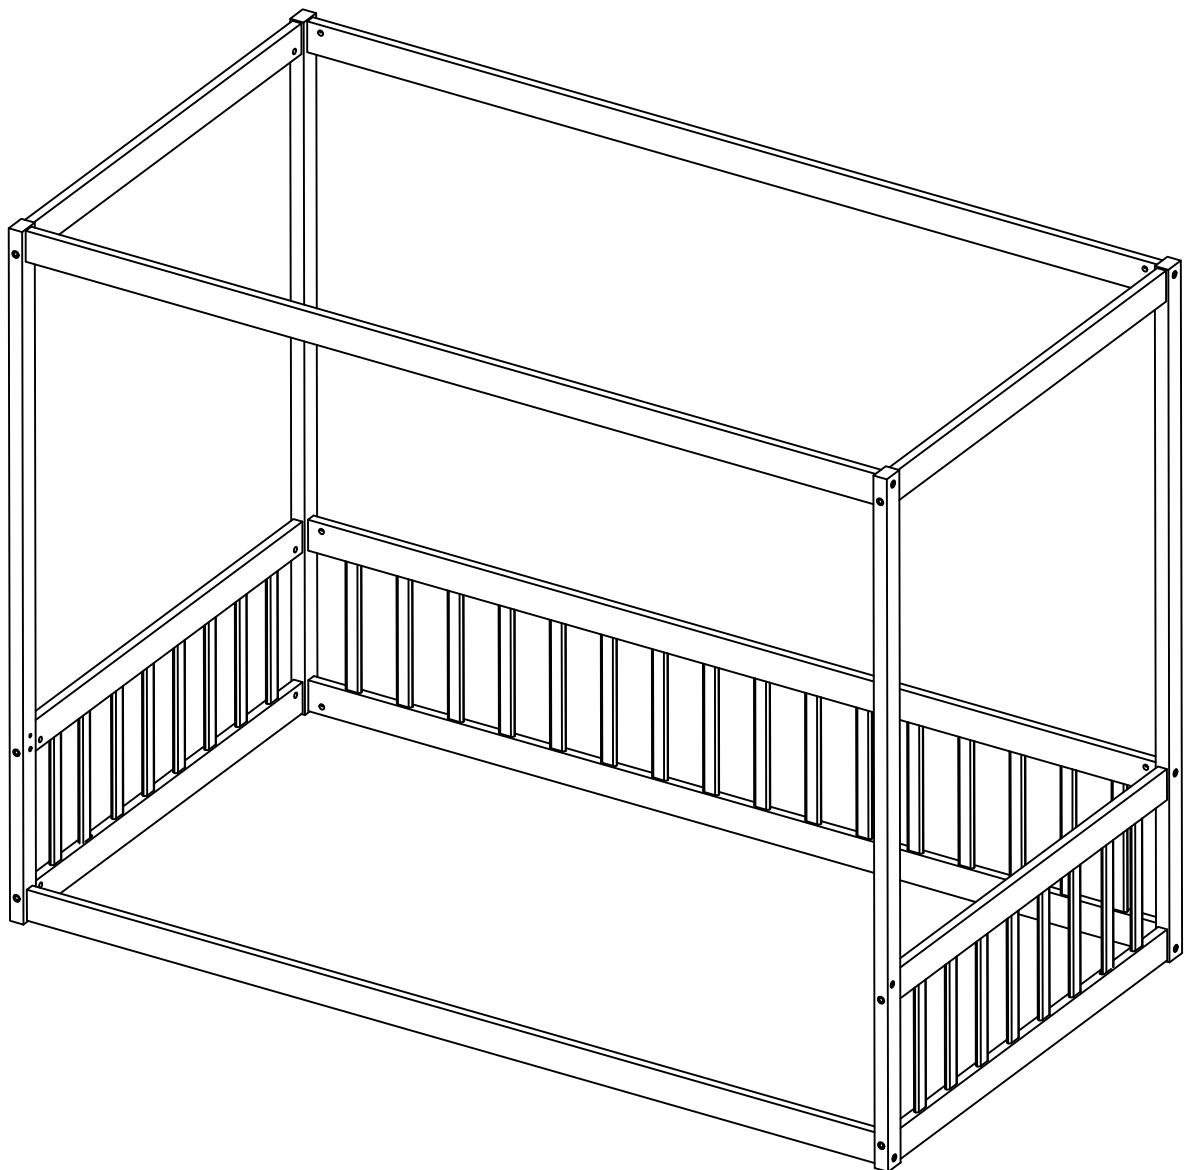



ASSEMBLY INSTRUCTIONS

TWIN CANOPY FRAME TWIN BED










MK33807



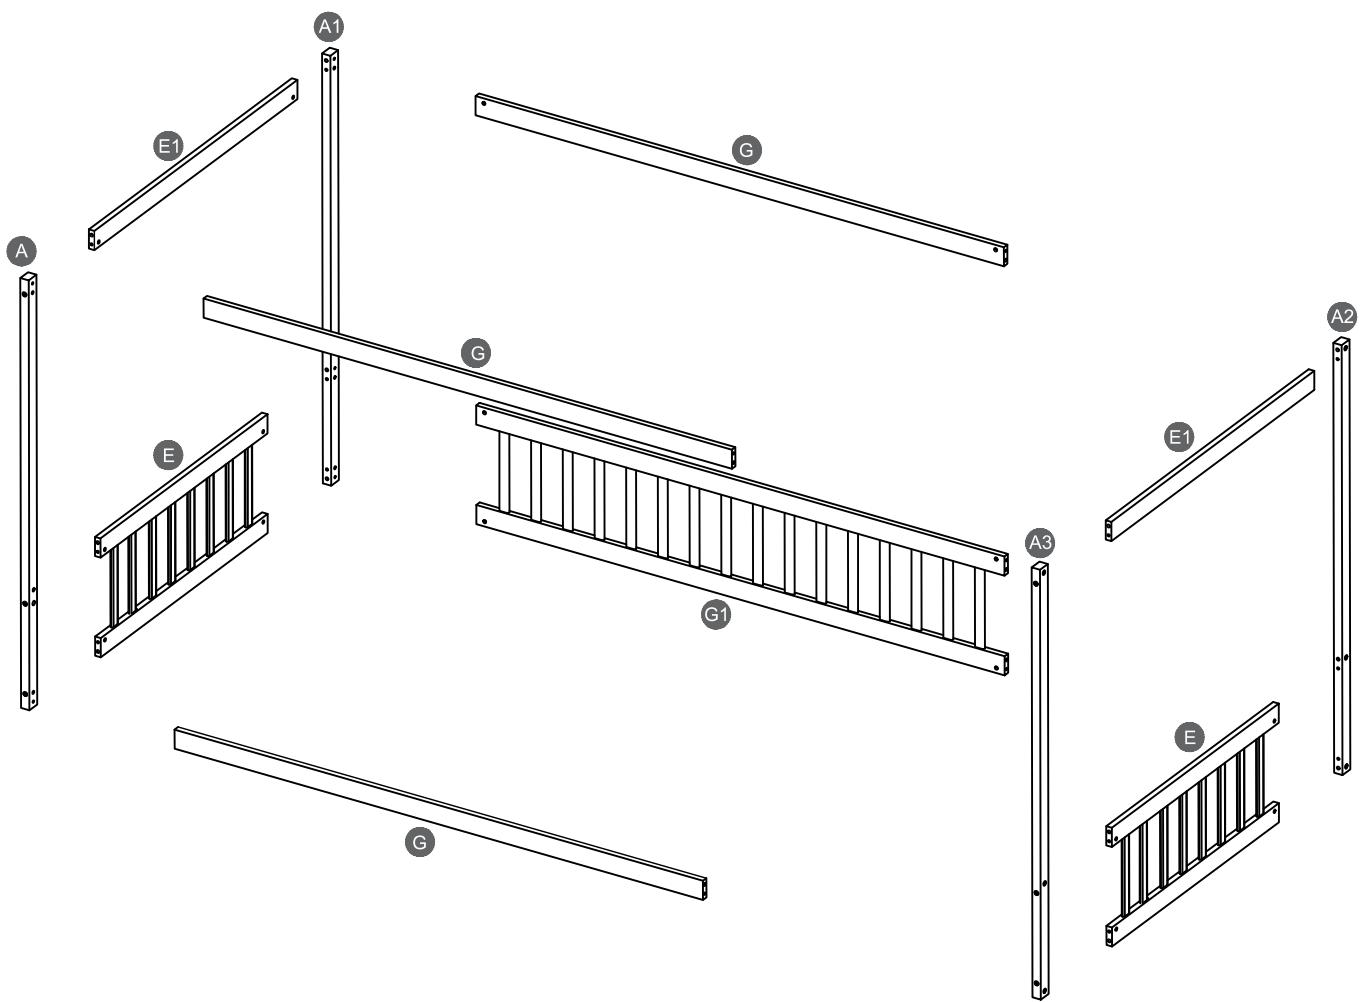
Detail View




Part List

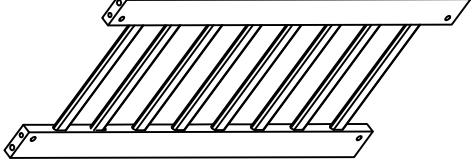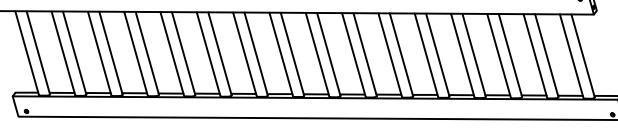A	A1
	
Leg - 1pc	Leg - 1pc
A2	A3
	
Leg - 1pc	Leg - 1pc
E	E1
	
Hb. Fb. Panel - 2pcs	Hb. Fb. Top Panel - 2pcs
G	G1
	
Side Rail Front & Guardrail Upper - 3pcs	Side Rail Back - 1pc

Hardware List


1  M6 x 80mm JCBC (12pcs)	2  M6 x 65mm JCBC (10pcs)	3  M6 x 15mm Barrel Nut (22pcs)
4  M10 x 40mm Wood Dowel (22pcs)	5  Sticker Cap (6pcs)	6  M4 Allen Key (1pc)

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

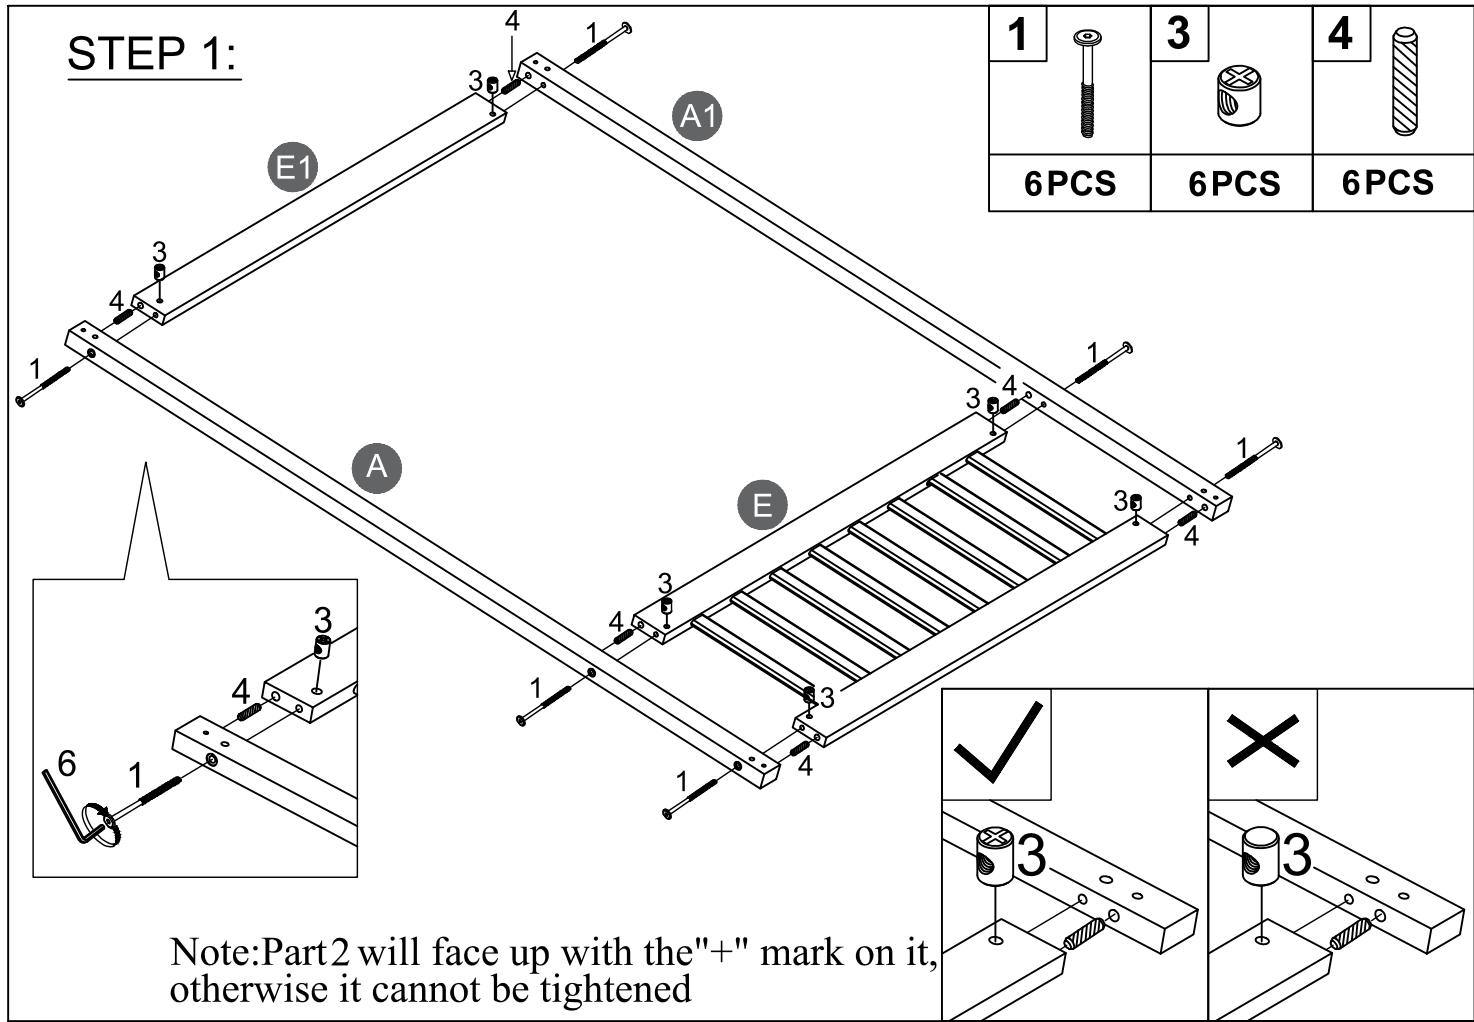STEP 1:



Note: Part 2 will face up with the "+" mark on it, otherwise it cannot be tightened


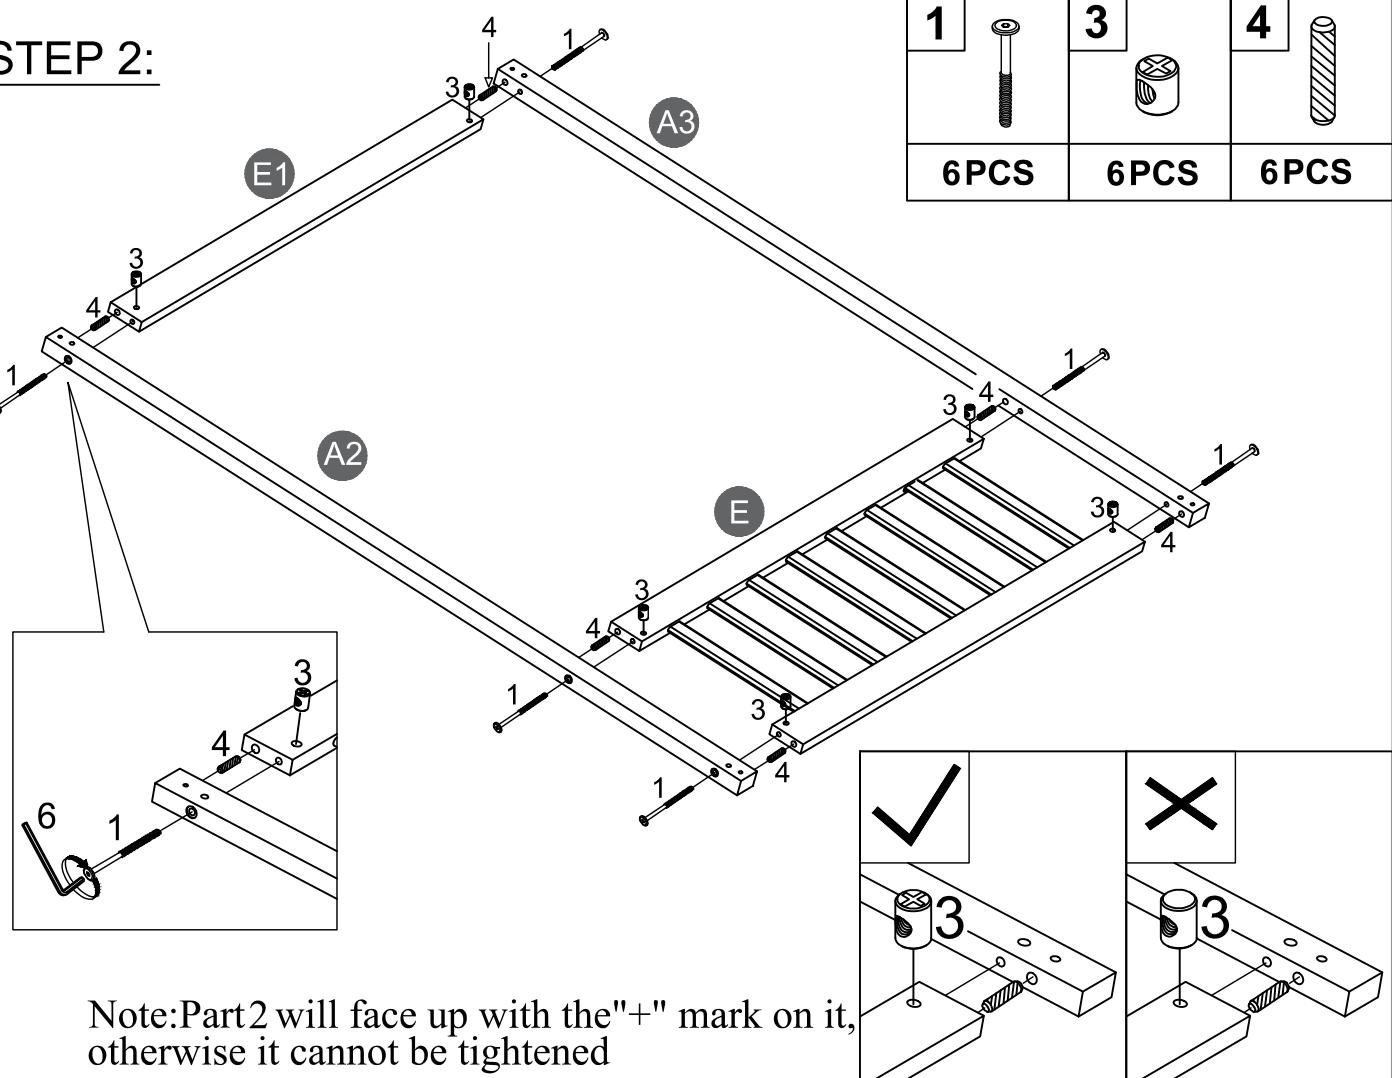
STEP 2:



Note: Part 2 will face up with the "+" mark on it, otherwise it cannot be tightened

STEP 3:

2	3	4	5
10PCS	10PCS	10PCS	6 PCS

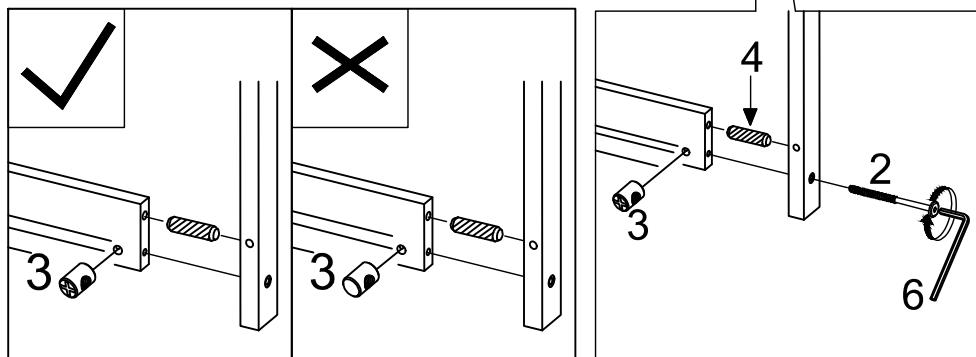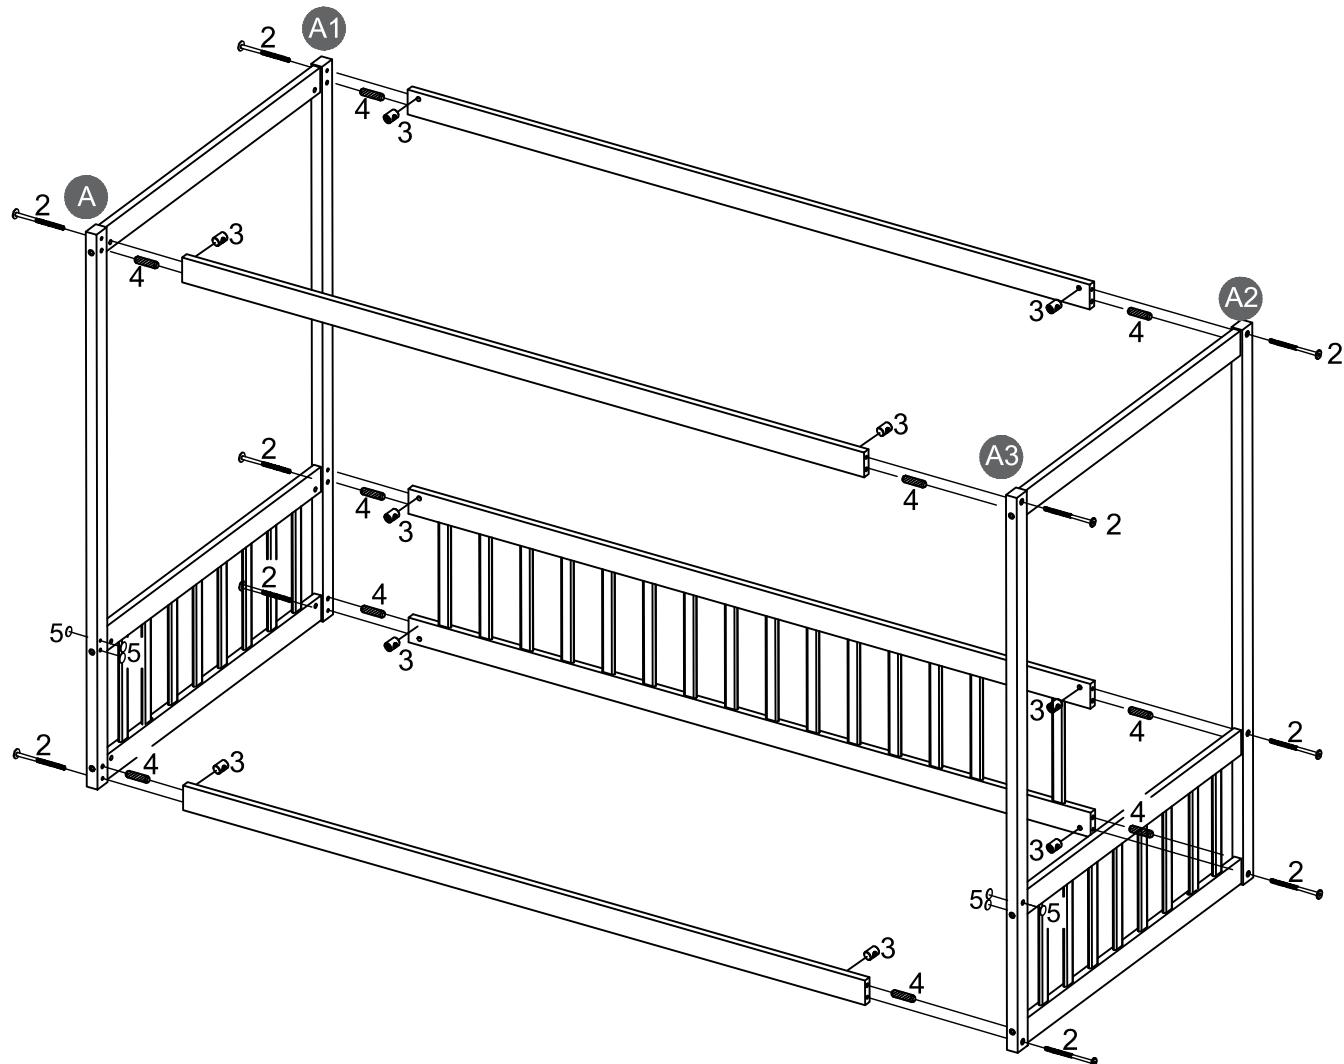

Note: Part 2 will face up with the "+" mark on it, otherwise it cannot be tightened