


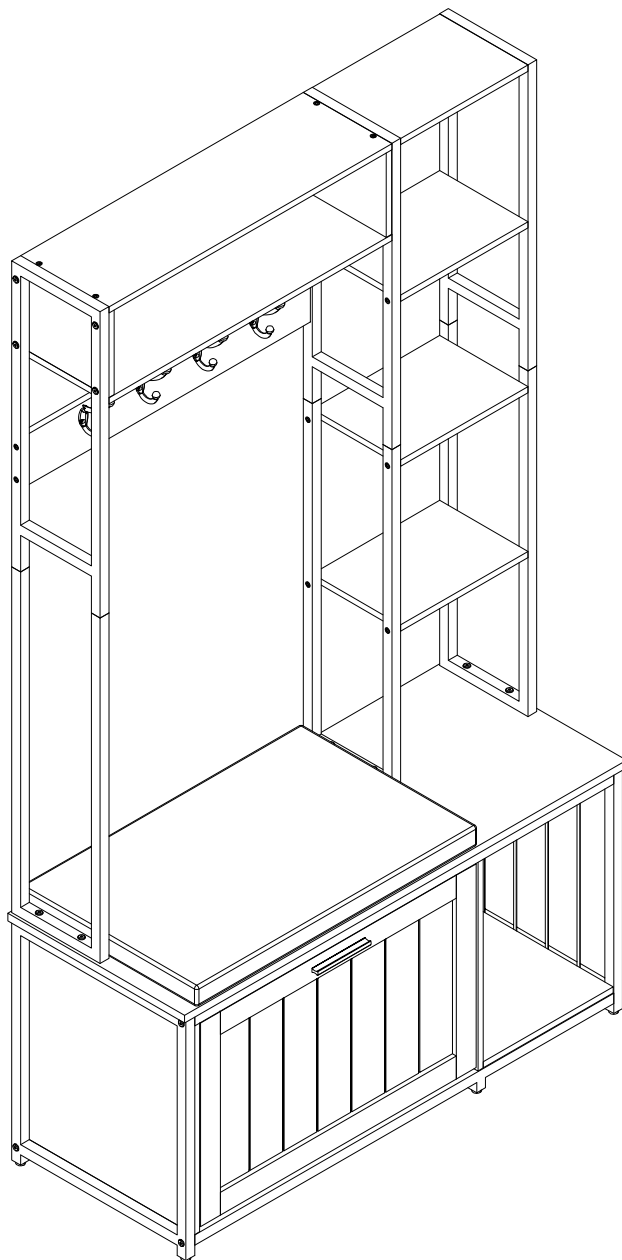

User's Manual

— HALL TREE —

The picture is reference, the actual product shall prevail



<http://www.thevividwood.com/halltree002>


WARM REMIND



If you encounter any problems in the installation process, you can scan the QR code to watch the teaching video or contact us by email, we will reply you in time. Email: support@thevividwood.com

SAFETY WARNINGS
























- 1.Cleaning: Use a dry cloth to remove any dust or debris from the rack.If needed,adamp cloth can be used,but ensure the rack is dried thoroughly afterward.
- 2.Stay Dry: Although made of iron,the rack can still rust if exposed to moisture for extended periods.Do not allow water to pool around or on the rack.
- 3Inspecting Components: Periodically inspect the rack for any signs of wear,loose screws,or damaged parts.Replace or repair any compromised elements to ensure stability and safety.

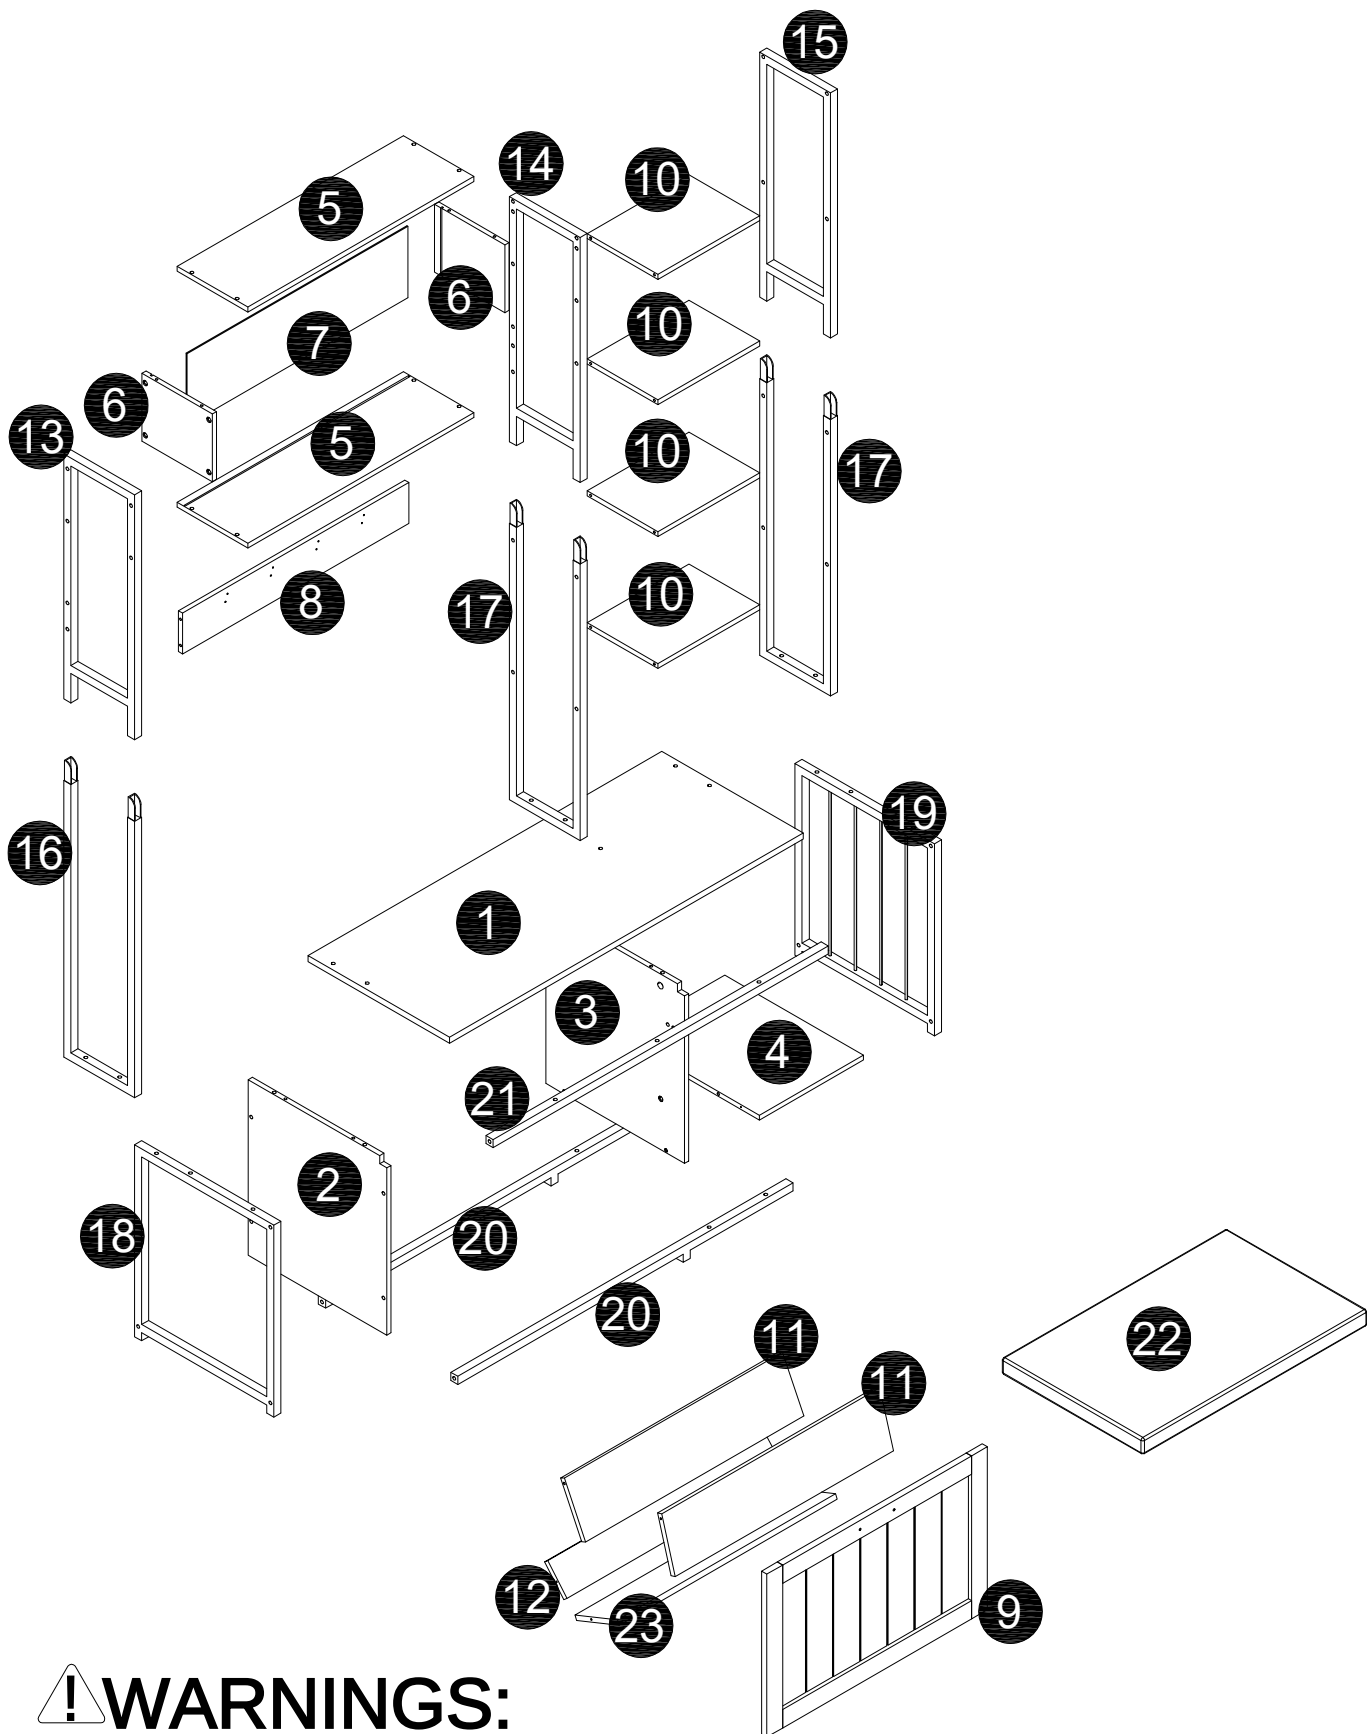









! WARNINGS:

1. Before beginning assembly, please ensure that you have all the required parts if anything is missing, please contact us for assistance instead of immediately initiating a return. We are here to help.
2. Please read each step carefully before starting the installation.
3. Please complete one step before proceeding to the next step to avoid difficulties.
4. Please put on gloves to avoid chafing.



HARDWARE LIST

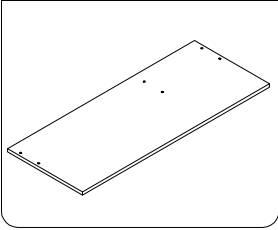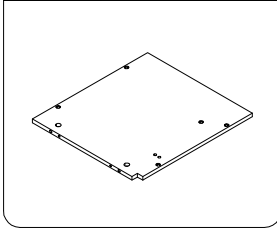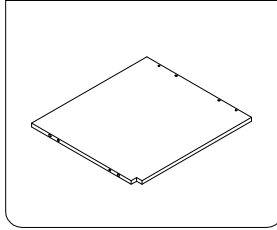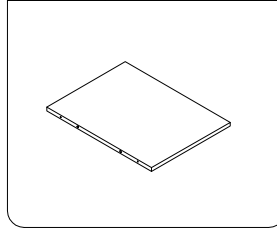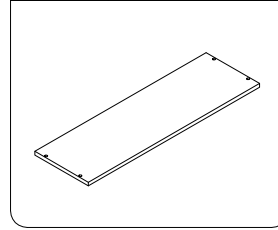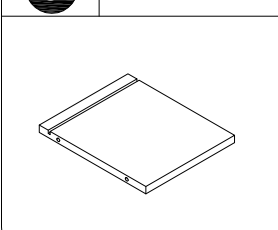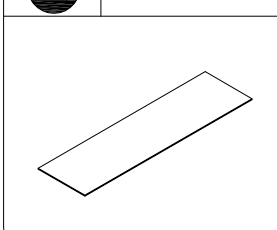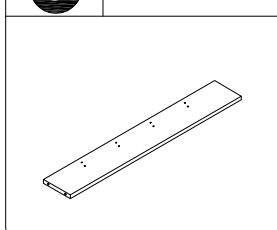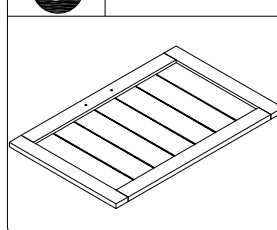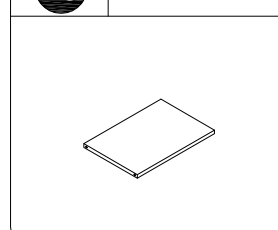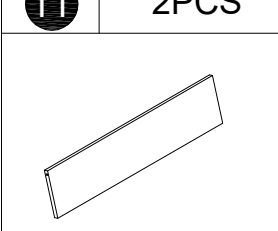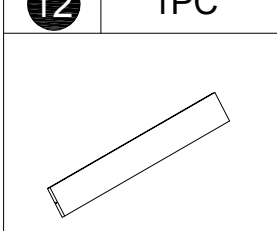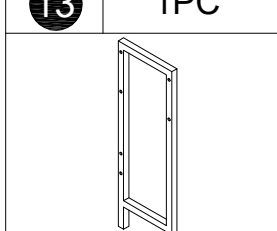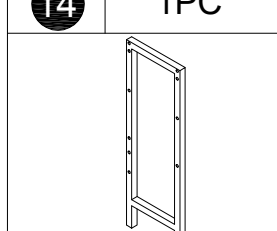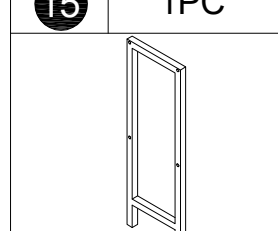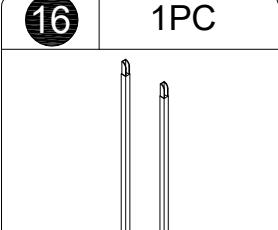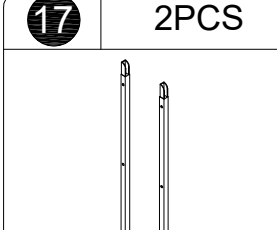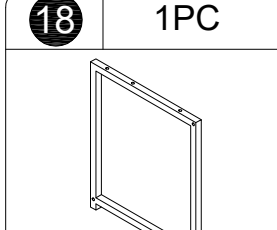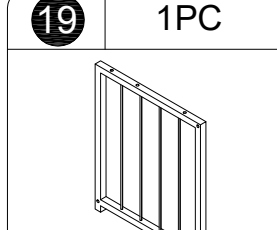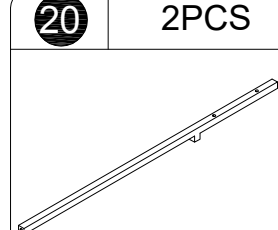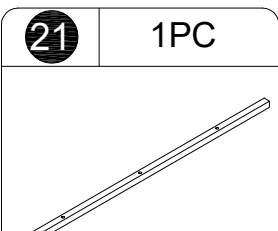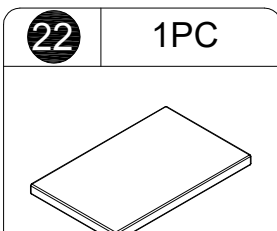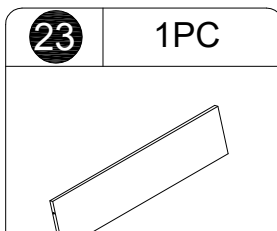1 1PC 	2 1PC 	3 1PC 	4 1PC 	5 2PCS 
6 2PCS 	7 1PC 	8 1PC 	9 1PC 	10 4PCS 
11 2PCS 	12 1PC 	13 1PC 	14 1PC 	15 1PC 
16 1PC 	17 2PCS 	18 1PC 	19 1PC 	20 2PCS 
21 1PC 	22 1PC 	23 1PC 		

HARDWARE LIST

A	4PCS		$\varnothing 6 \times 35 \text{mm}$
B	4PCS		$\varnothing 15 \times 10 \text{mm}$
C	6PCS		$\varnothing 6 \times 30 \text{mm}$
D	28PCS		$\varnothing 6 \times 38 \text{mm}$
E	8PCS		$\varnothing 3.5 \times 12 \text{mm}$
F	2PCS		$\varnothing 4 \times 35 \text{mm}$
G	6PCS		$\varnothing 18 \text{mm}$
H	1PC		
I	1PC		M4
J	12PCS		M6x10mm
K	2PCS		M6x18mm
L	21PCS		M6x28mm
M	2PCS	 Flat head	M6x28mm
N	6PCS		M6x40mm
O	4PCS		M6x50mm
P	4PCS		M6x18mm
Q	2PCS		$\varnothing 19 \times 1 \text{mm}$
R	2PCS		$\varnothing 14 \times 9 \text{mm}$
S	4PCS		
T	2PCS		26*16*9mm
U	1PC		103*15*7mm
V	2PCS		$\varnothing 4 \times 18 \text{mm}$
W	14PCS		$\varnothing 3.5 \times 14 \text{mm}$
X	1PC		
Y	1PC		

ANTI-OVERTURN HARDWARE BAG




Z1	2PCS		$\varnothing 4 \times 30 \text{mm}$
Z2	2PCS		/
Z3	2PCS		/

STEP1

Jx4



M6*10mm

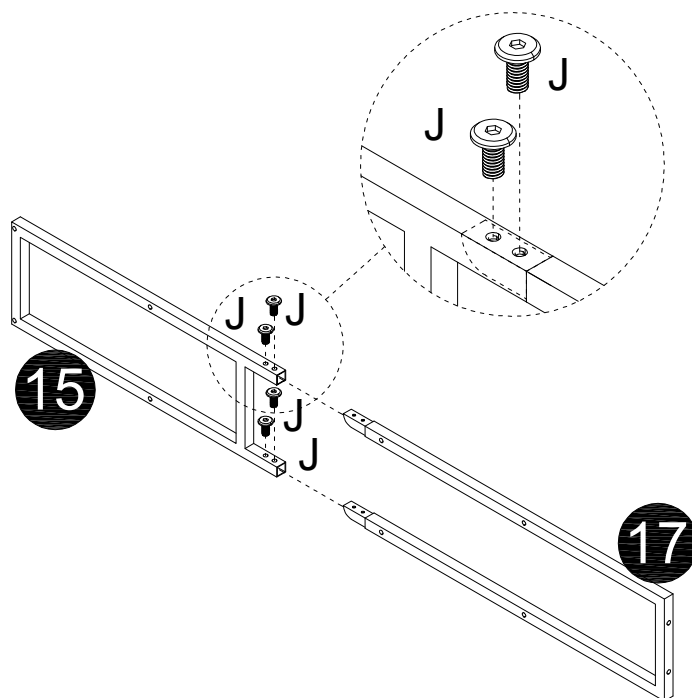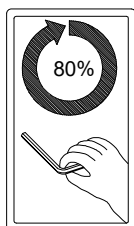



STEP2

Jx4



M6*10mm

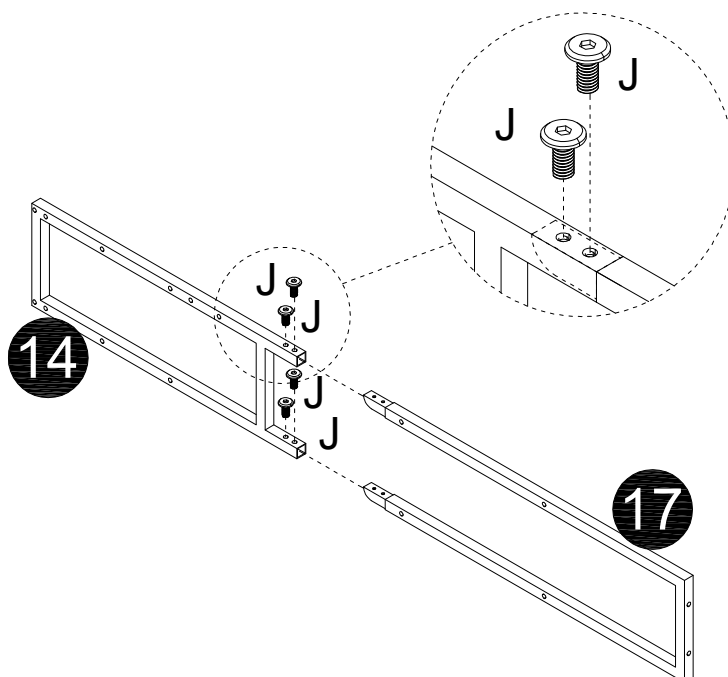
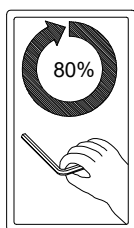


STEP3

Dx16



Ø6x38mm


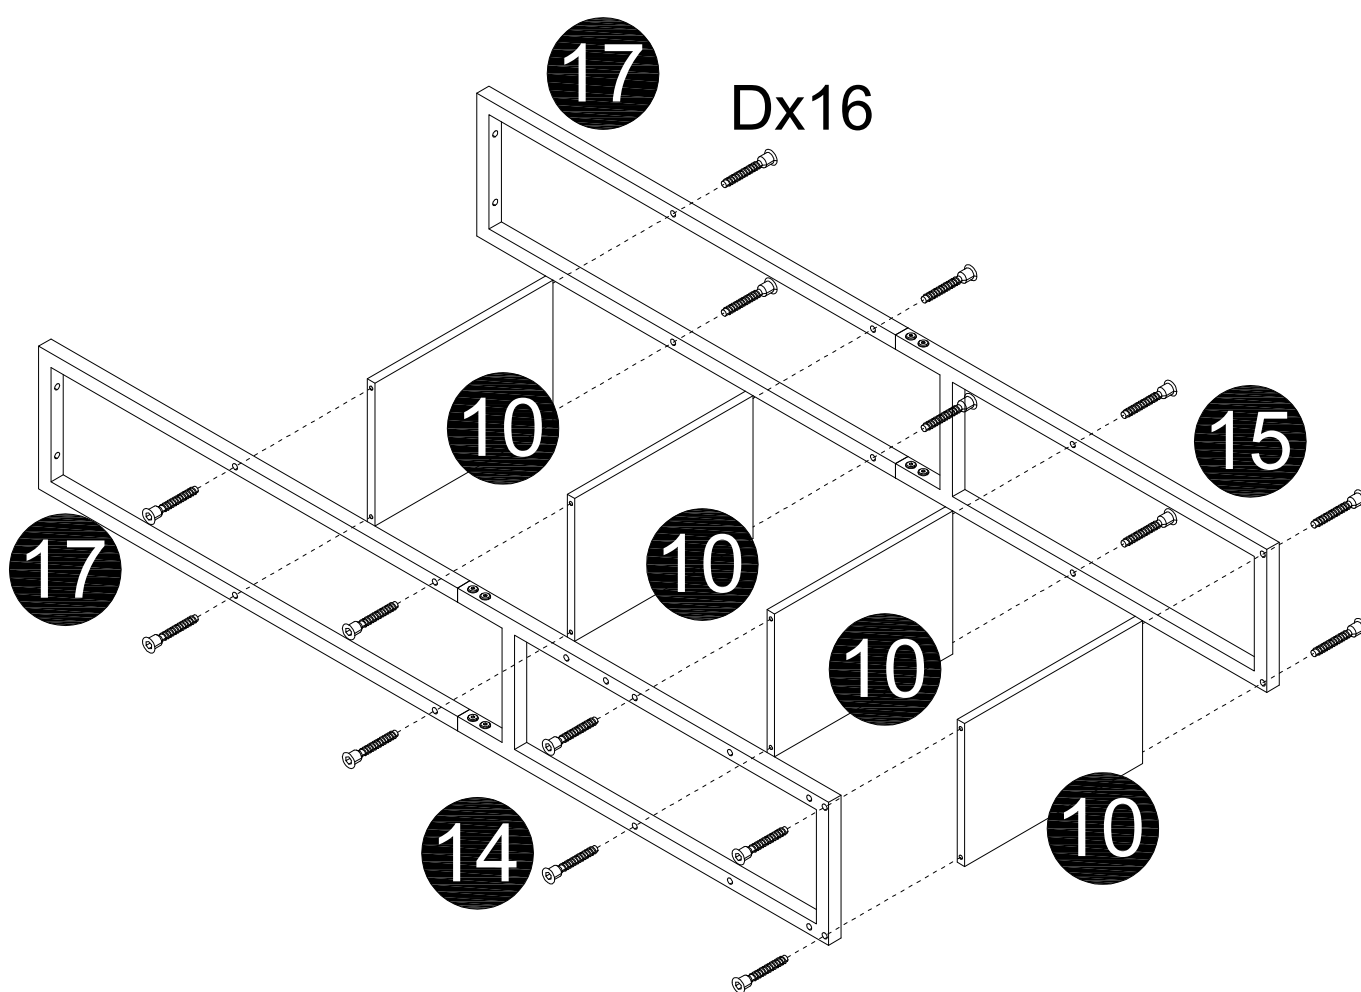



STEP4

Jx4



M6x10mm

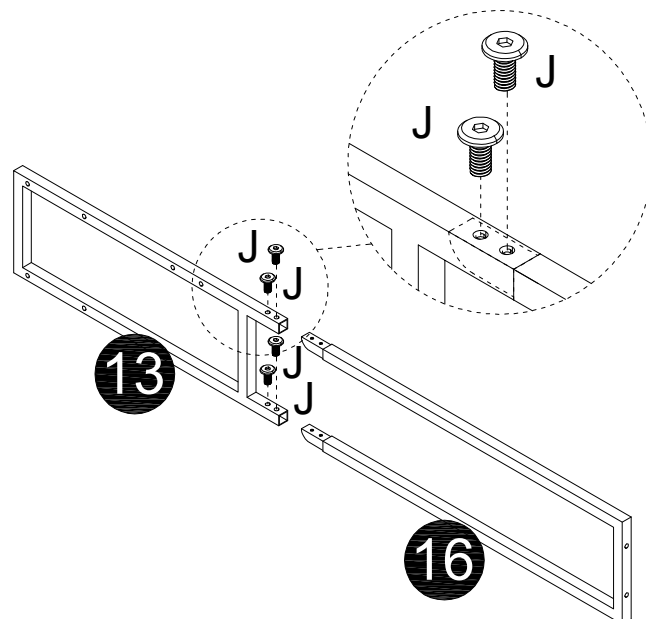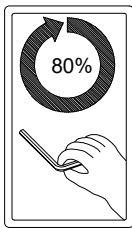



STEP5


Dx4



Ø6x38mm

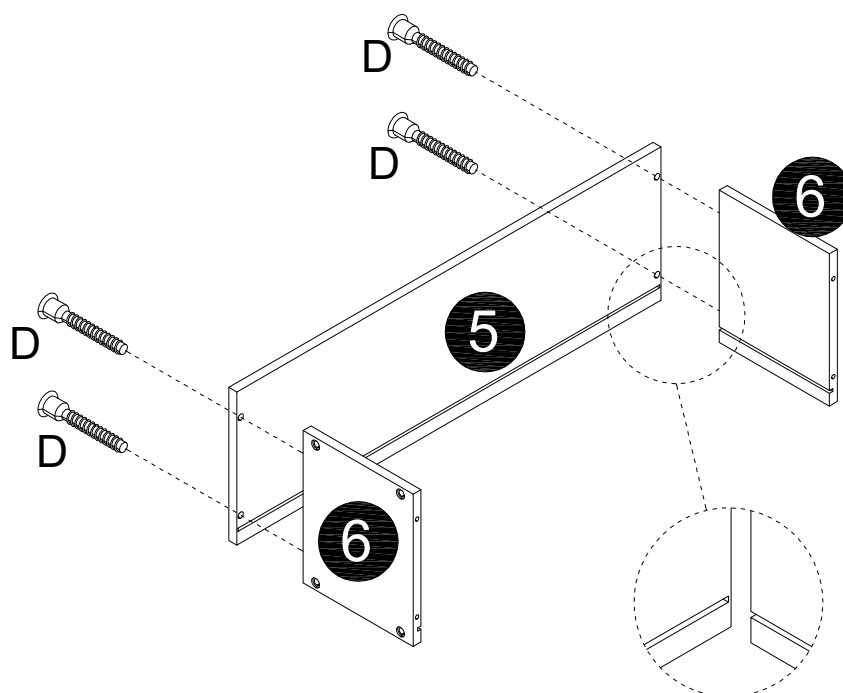


STEP6

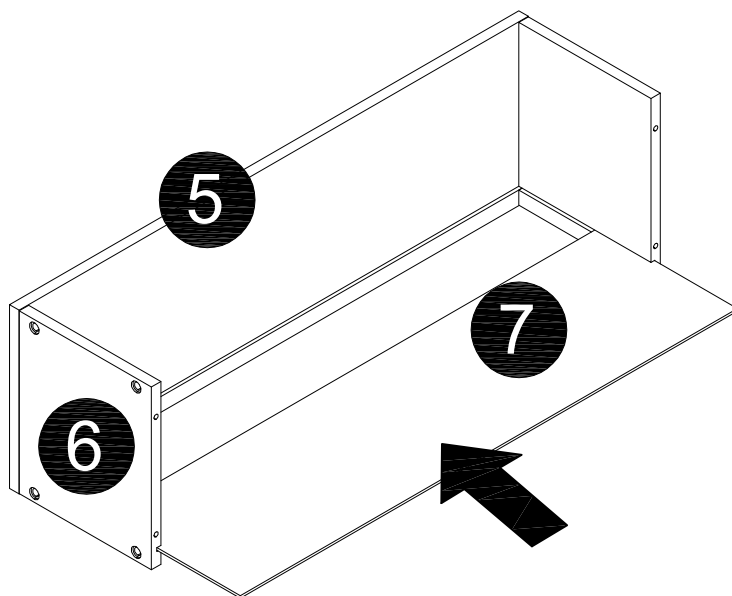


STEP7

Dx4



Ø6x38mm

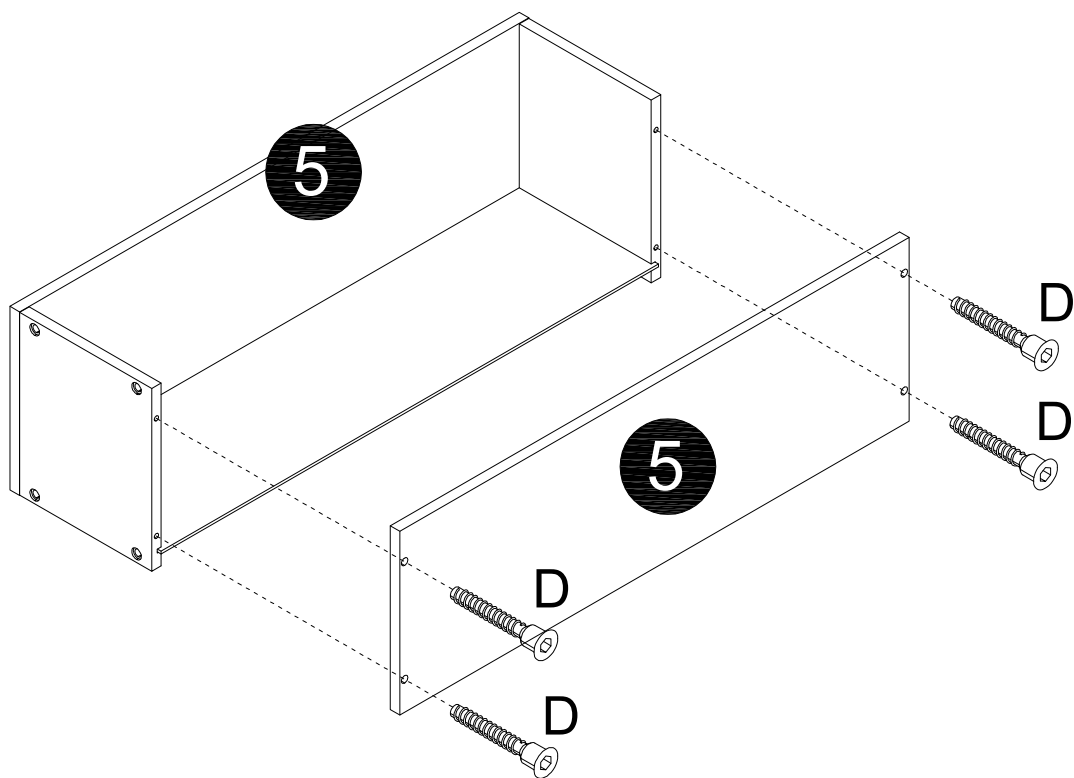



STEP8

Ex8




Ø3.5x12mm

Sx4

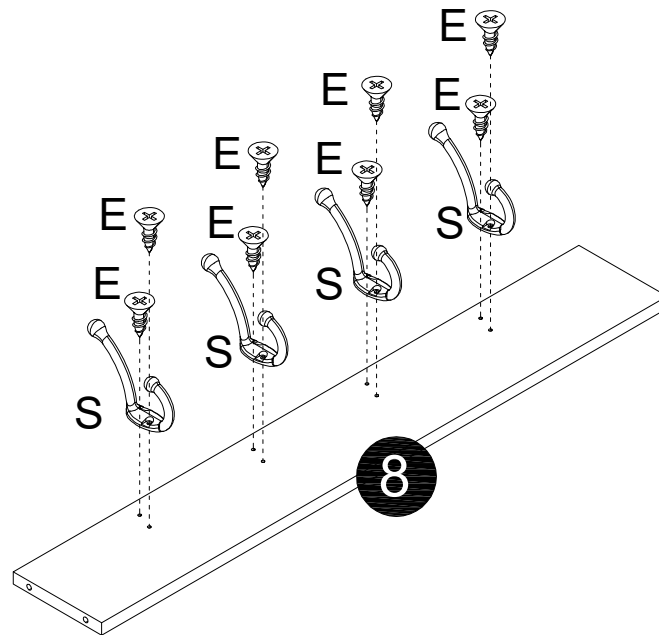

STEP9

Dx4





Ø6x38mm

Lx8



M6x28mm

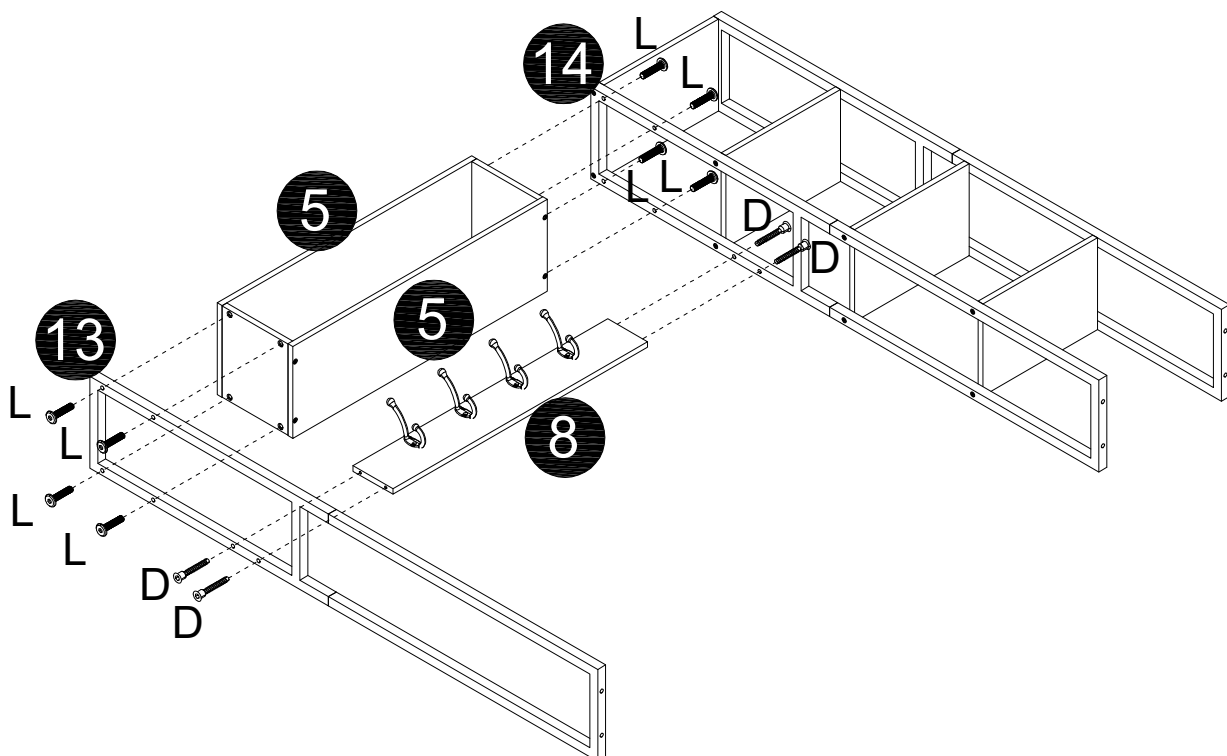


STEP10

Gx6





Ø18mm


Nx4



M6x40mm

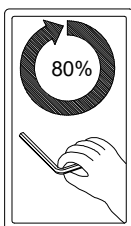

Pay attention
to the hole
direction.

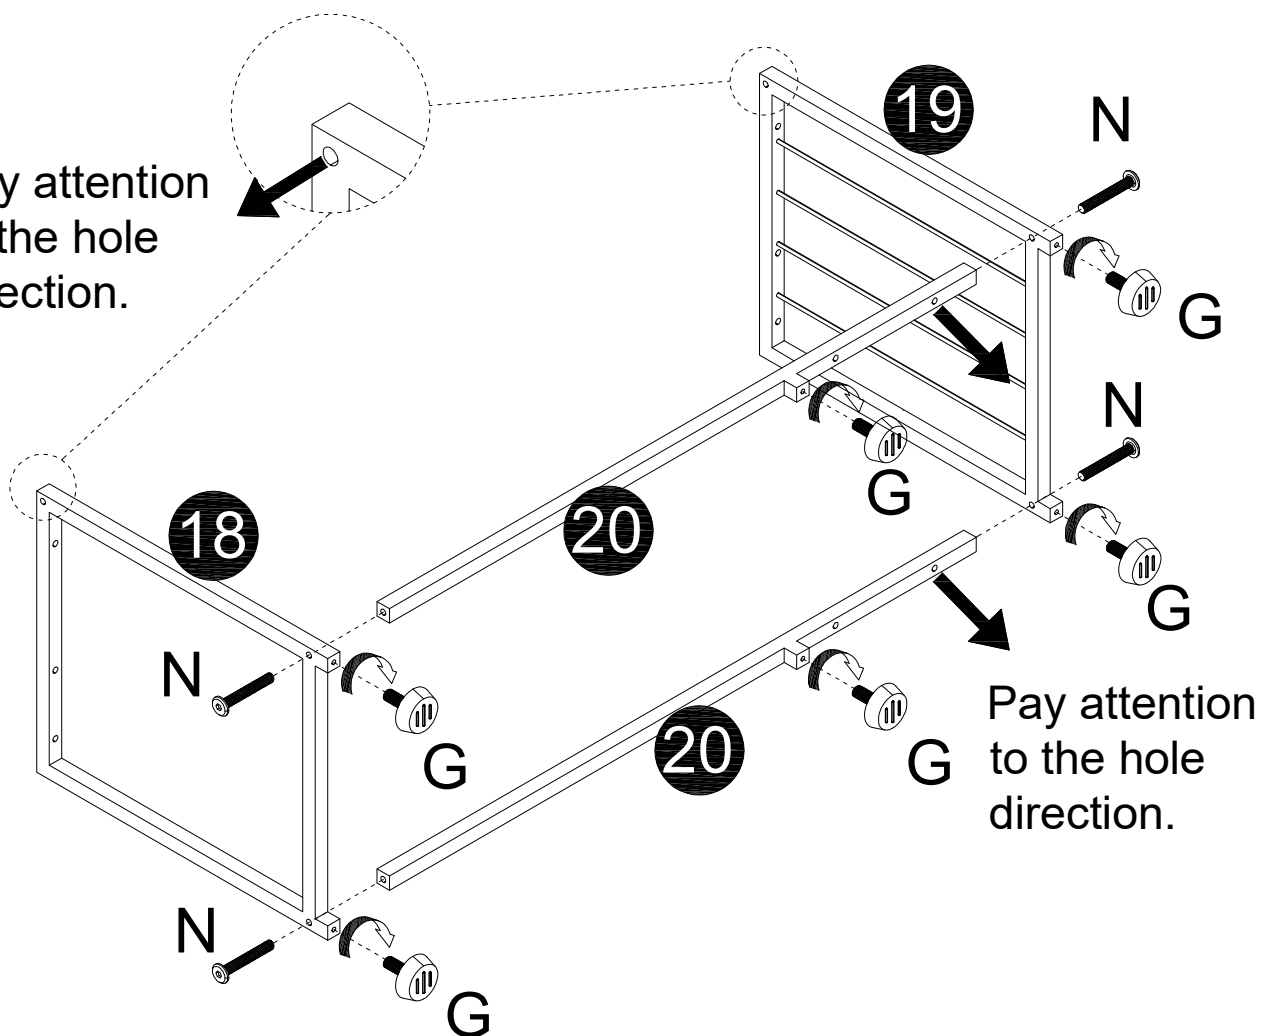


Pay attention
to the hole
direction.

STEP11

Tx1



26*16*9mm

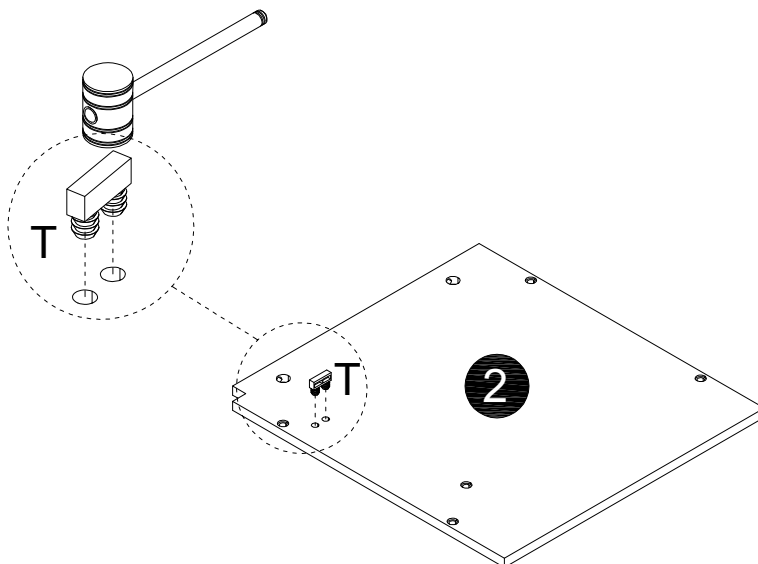


STEP12

Cx2



Ø6x30mm

Fx2





Ø4x35mm

Tx1






26*16*9mm

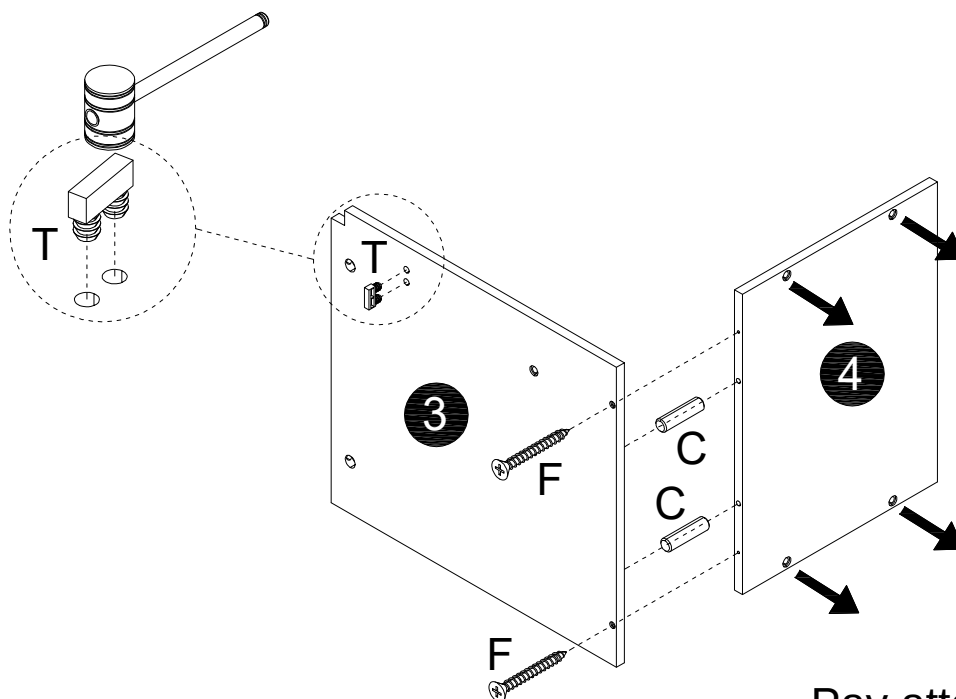

Pay attention to the
hole direction.


STEP13

Lx8
M6x28mm

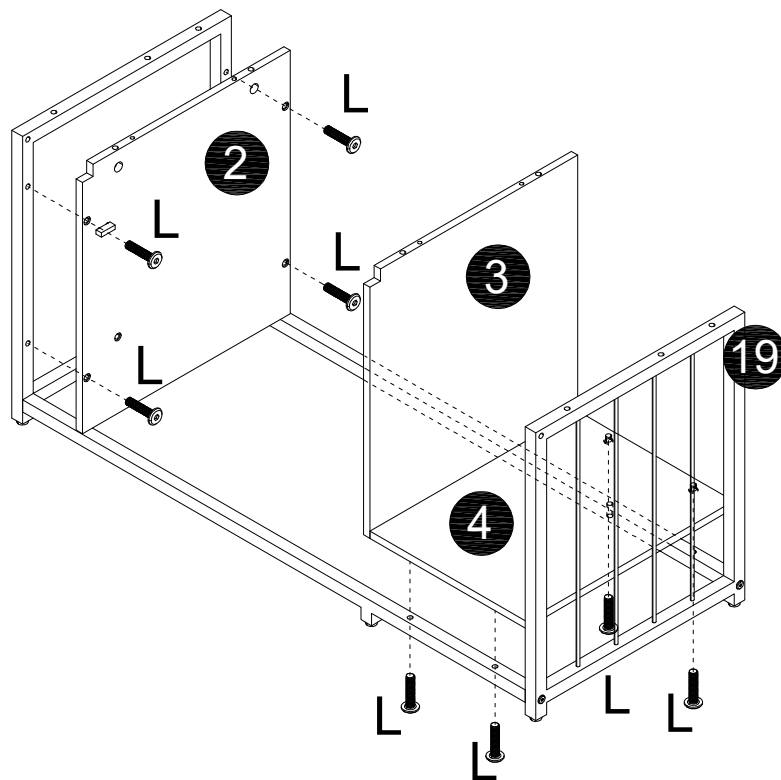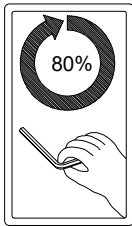


STEP14

Nx2
M6x40mm





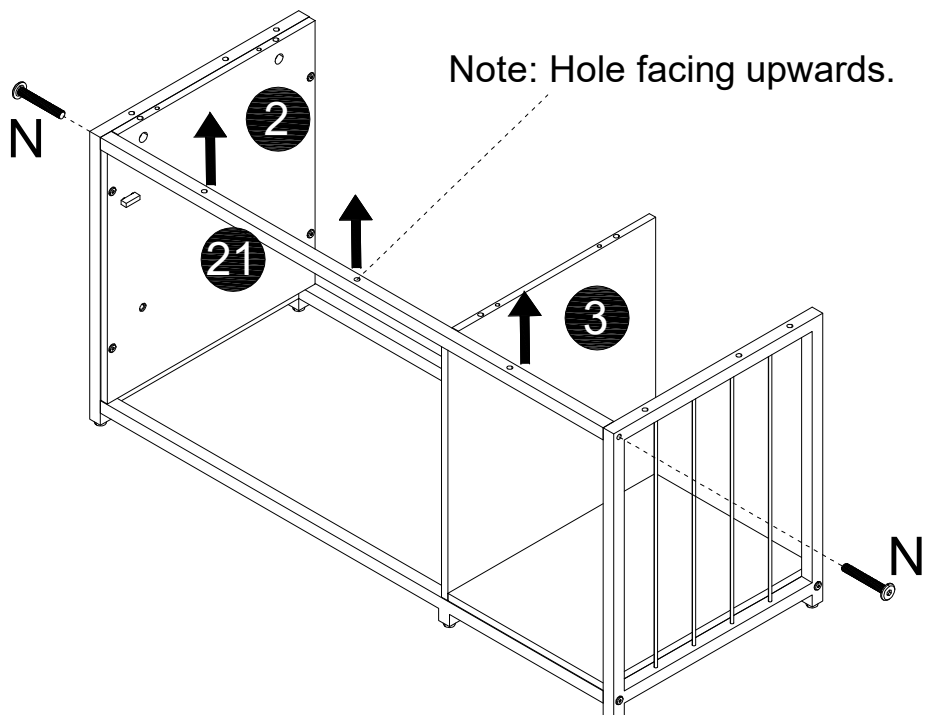


STEP15

Ax4



Ø6x35mm

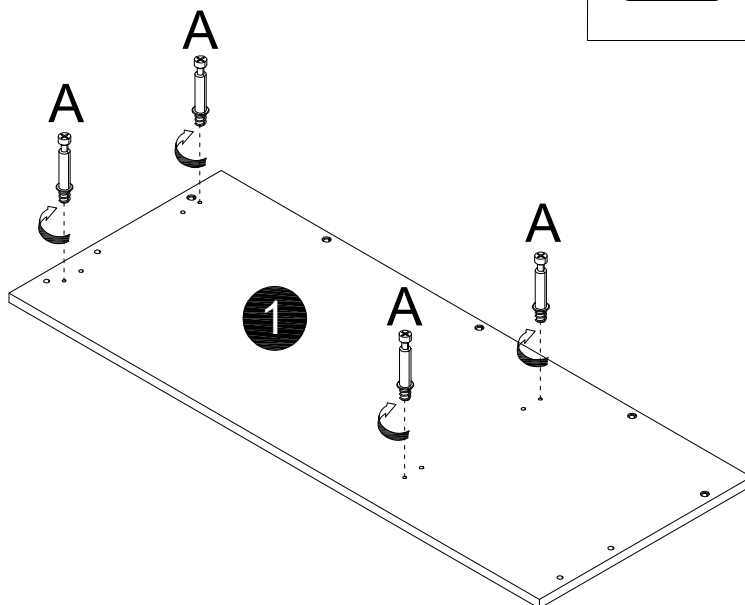

STEP16

Bx4



Ø15x10mm

Cx4



Ø6x30mm

Lx3









M6*28mm

Mx2




Flat head
M6*28mm

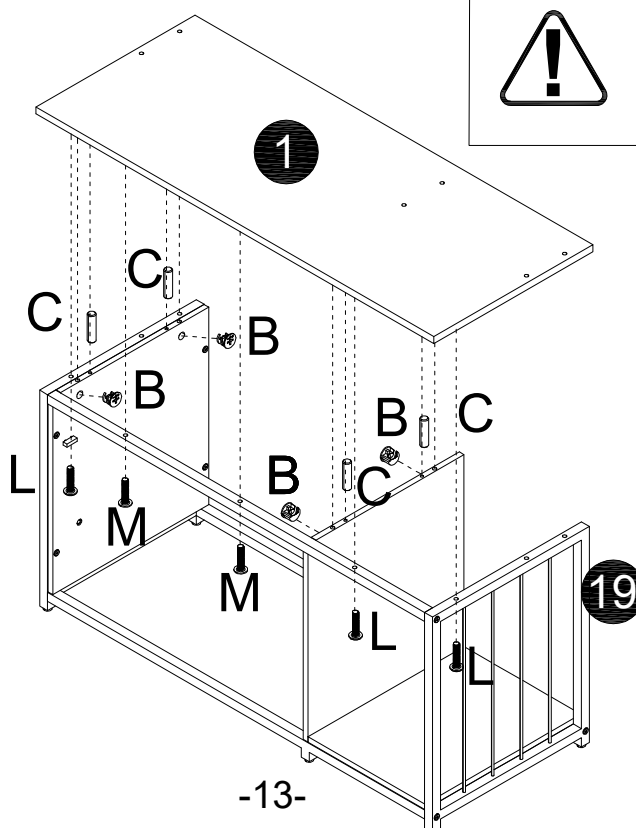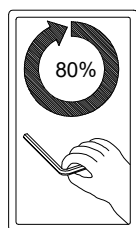

Note: L and M screws are different.


STEP17

Lx2



N6x28mm

Ox4





M6x50mm

Px4



M6x18mm

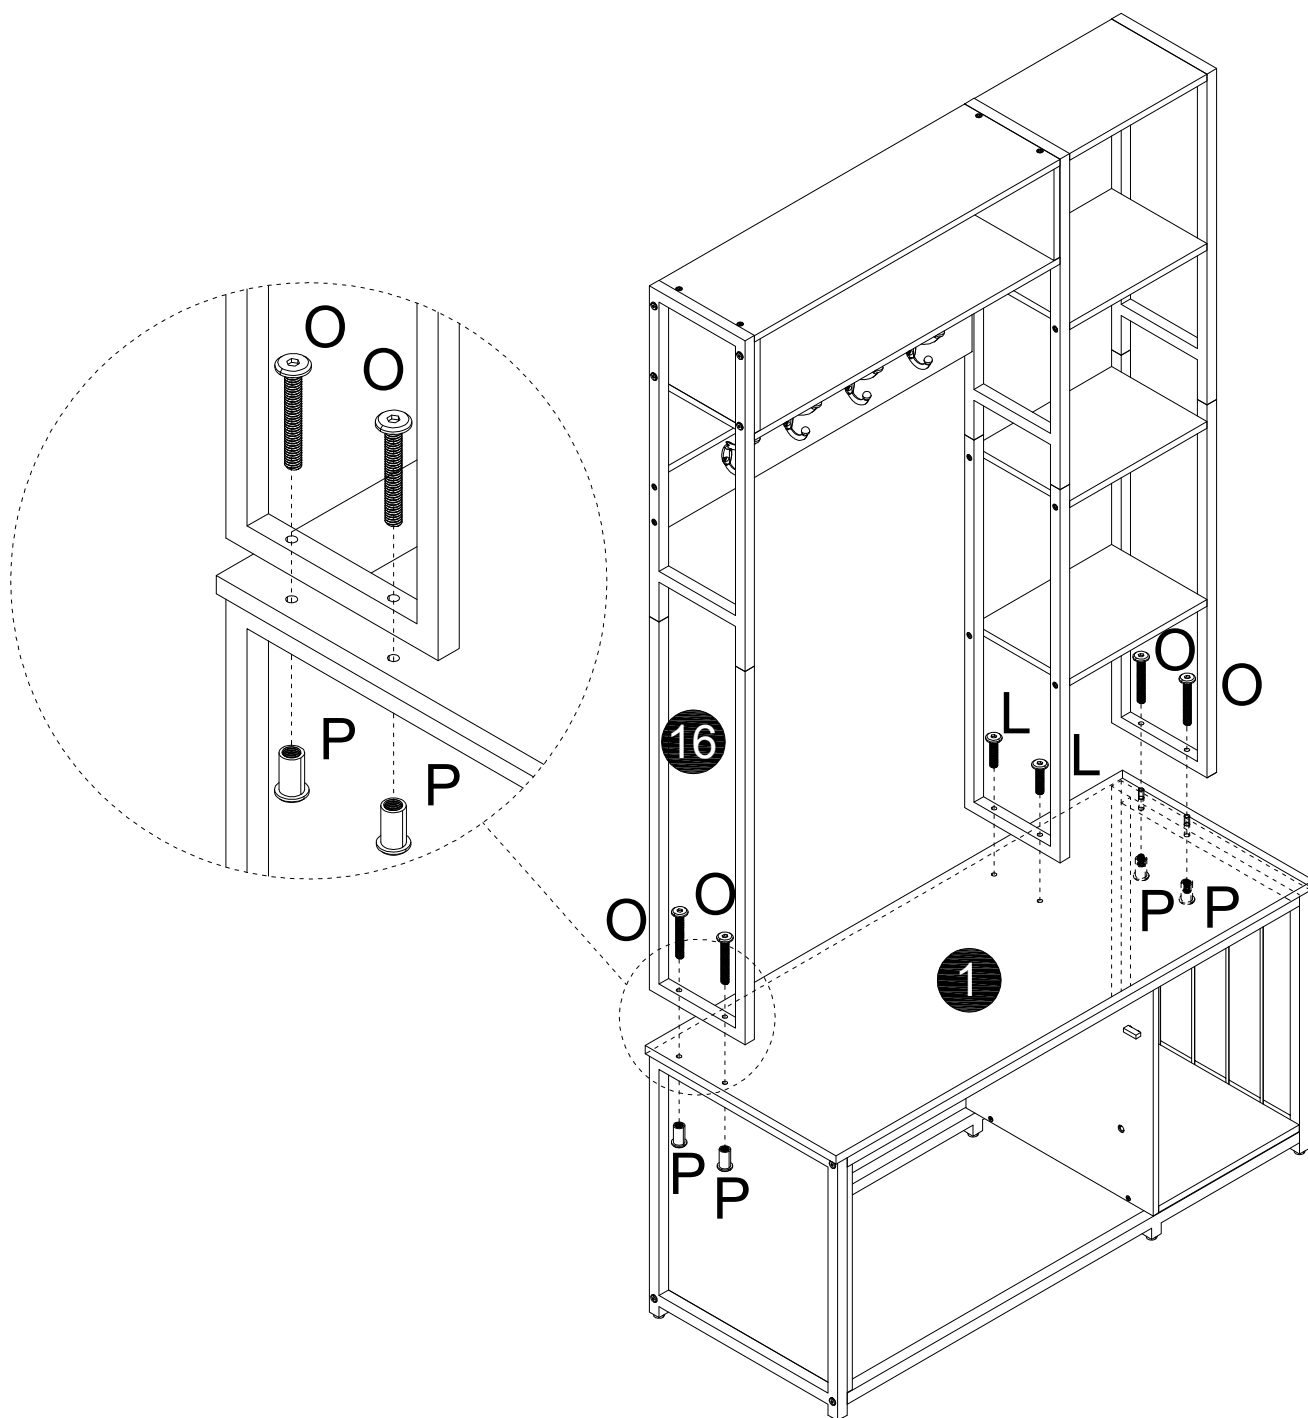

STEP18

Ux1



103*15*7mm

Vx2



Ø4x18mm

Wx6





Ø3.5x14mm

Xx1



Yx1

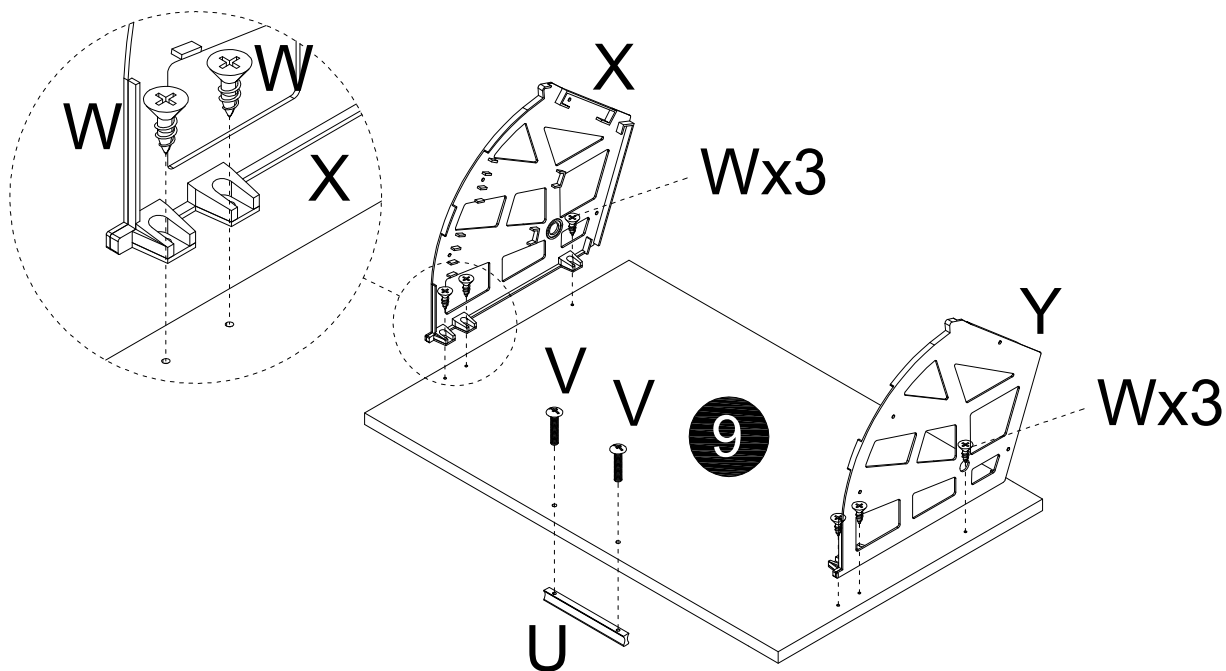



STEP19

Wx4



Ø3.5x14mm

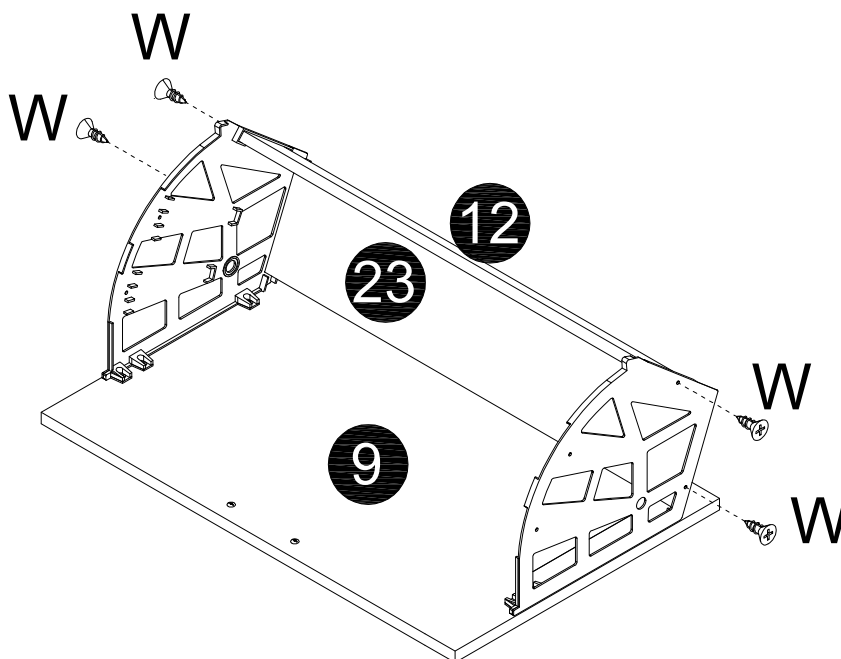

STEP20

Kx2



M6*18mm

Qx2






Ø19x1mm

Rx2



Ø14x9mm

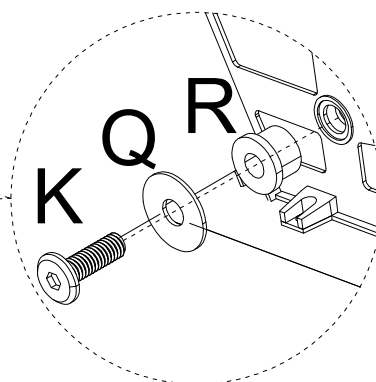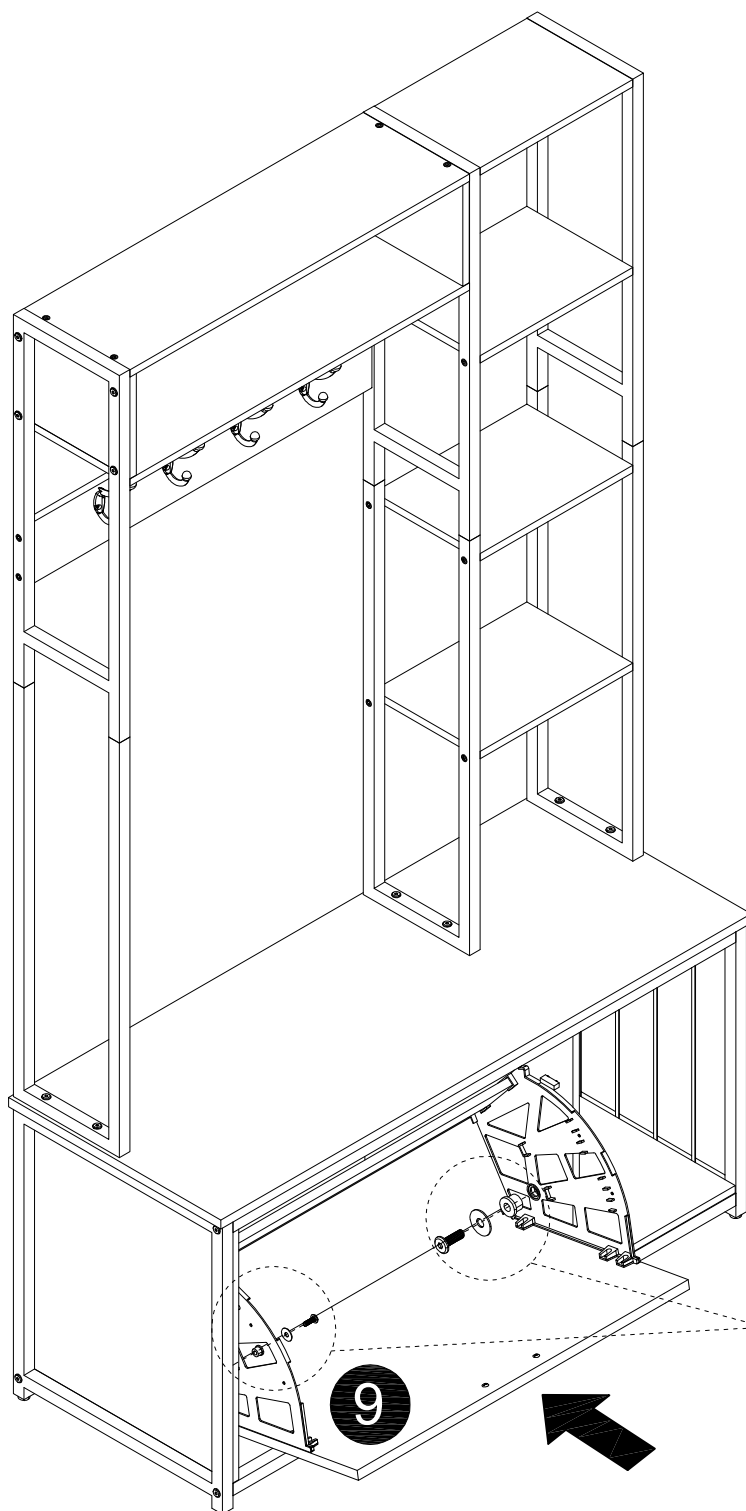


STEP21


Wx4



Ø3.5x14mm

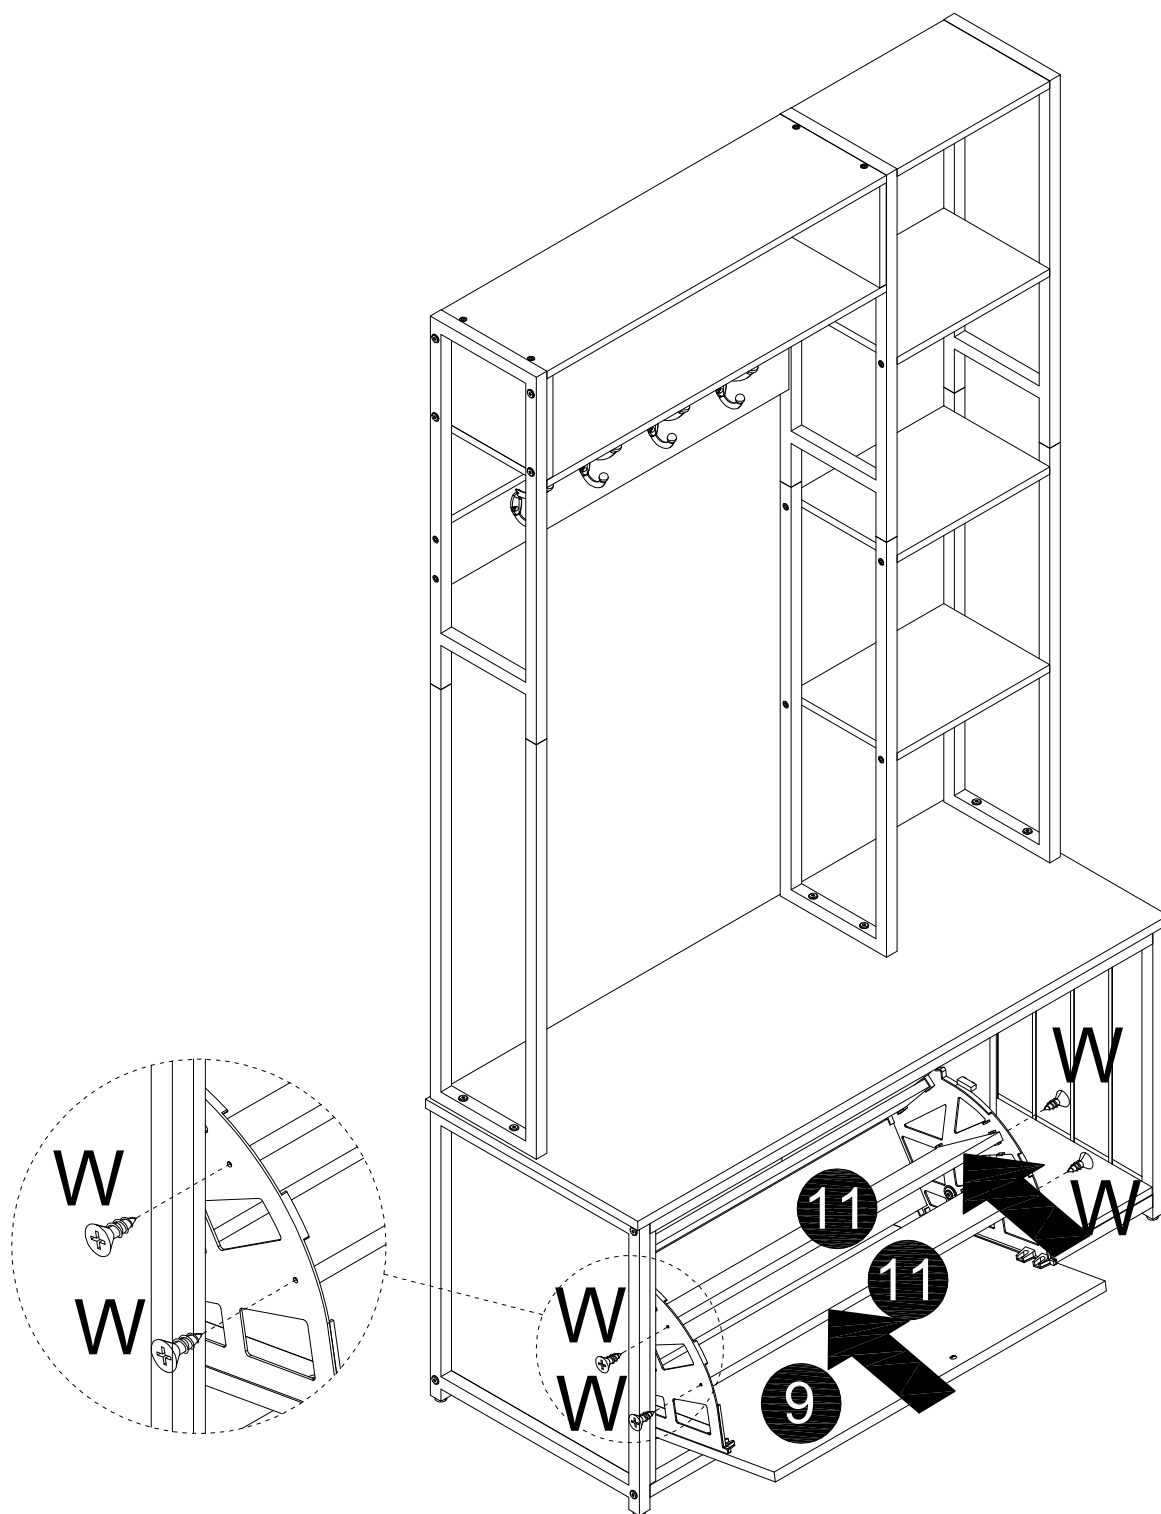


STEP22

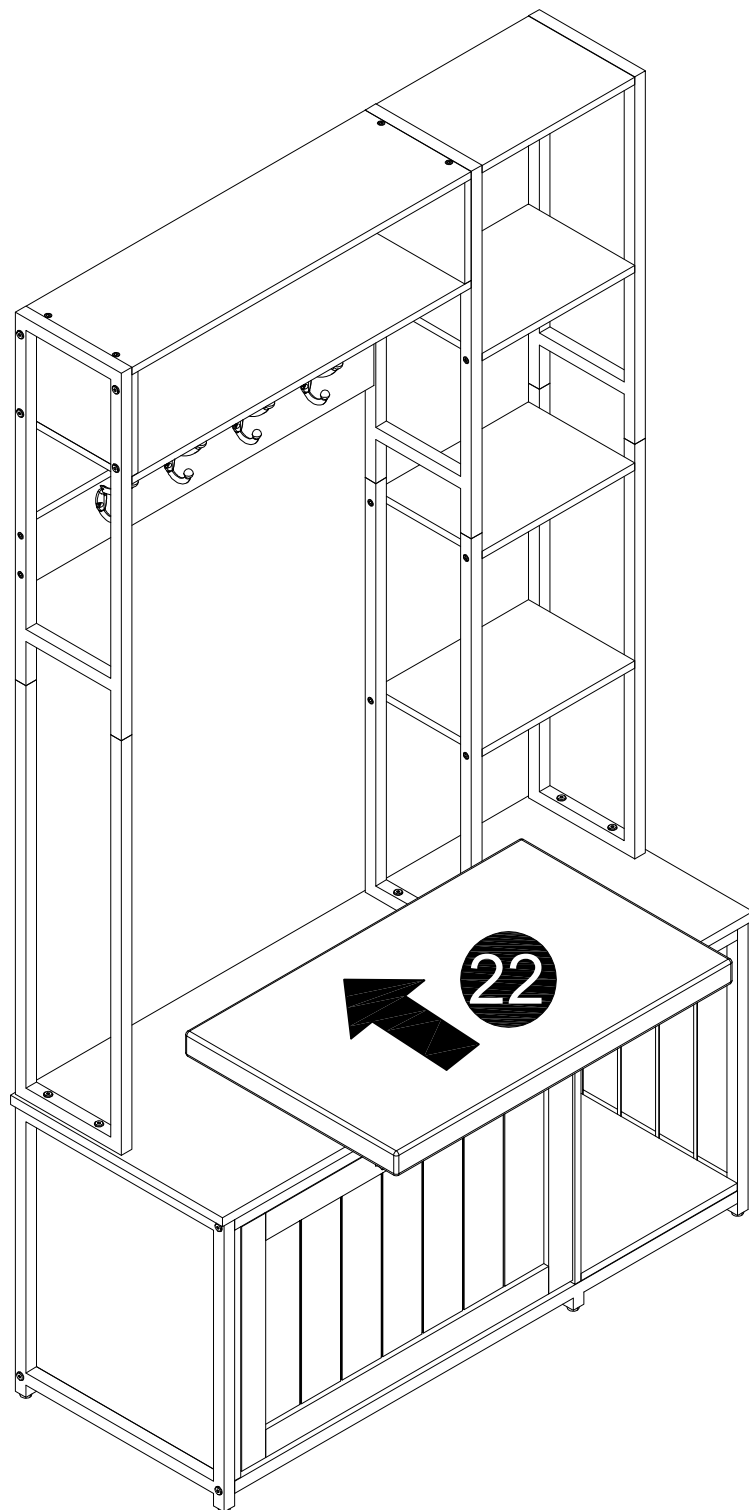


STEP23

Z1x2




Ø4x30mm






Z2x2



Z3x2



NOTE : Check that all screws are tightened.

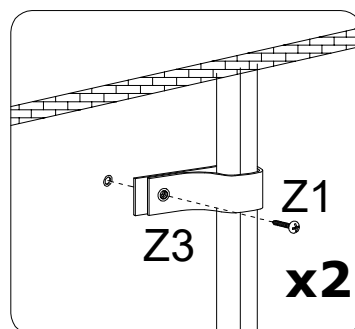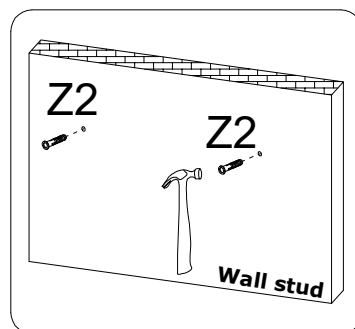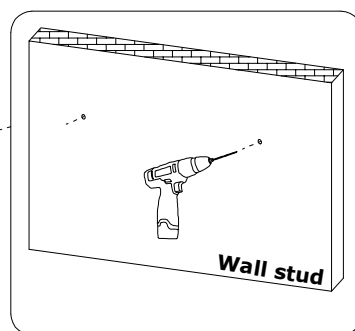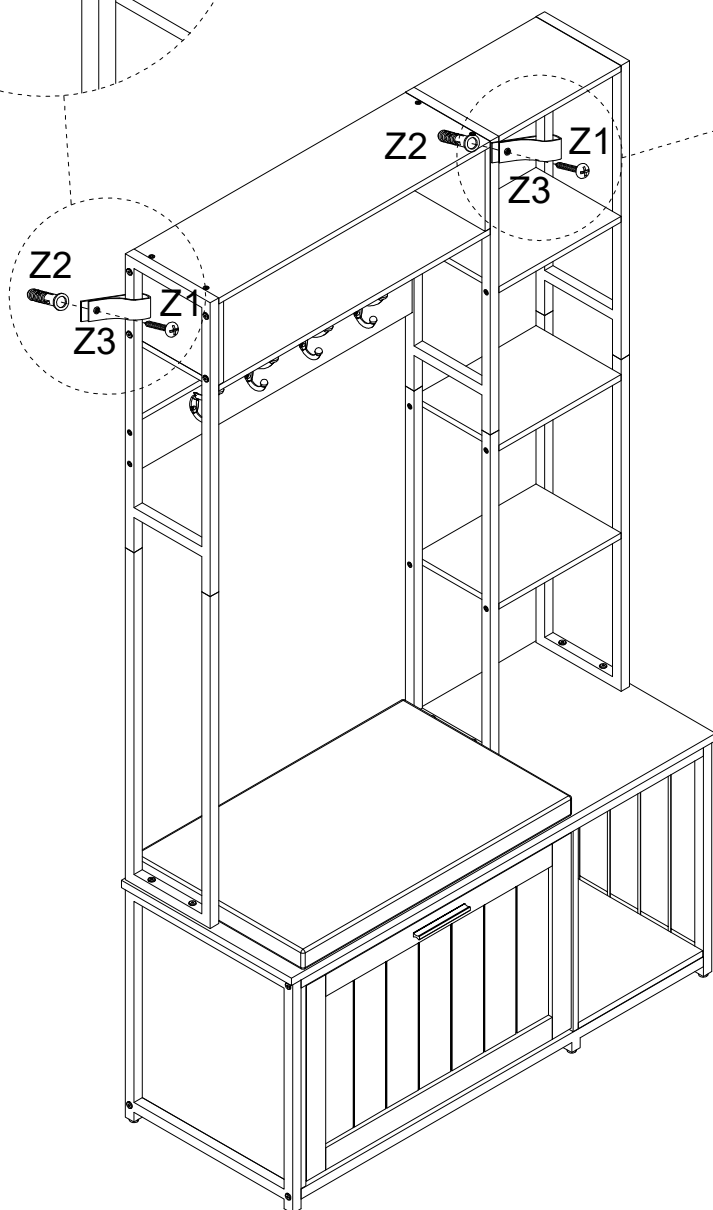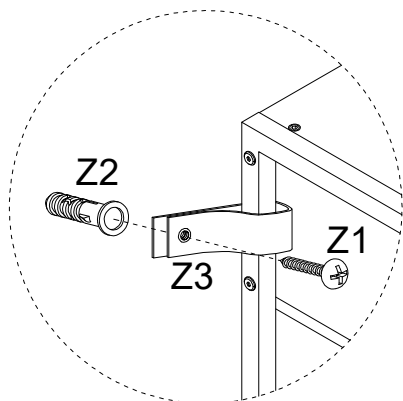

Installation Completed

