


# TV Stand

Assembly Instructions - Please keep for future reference

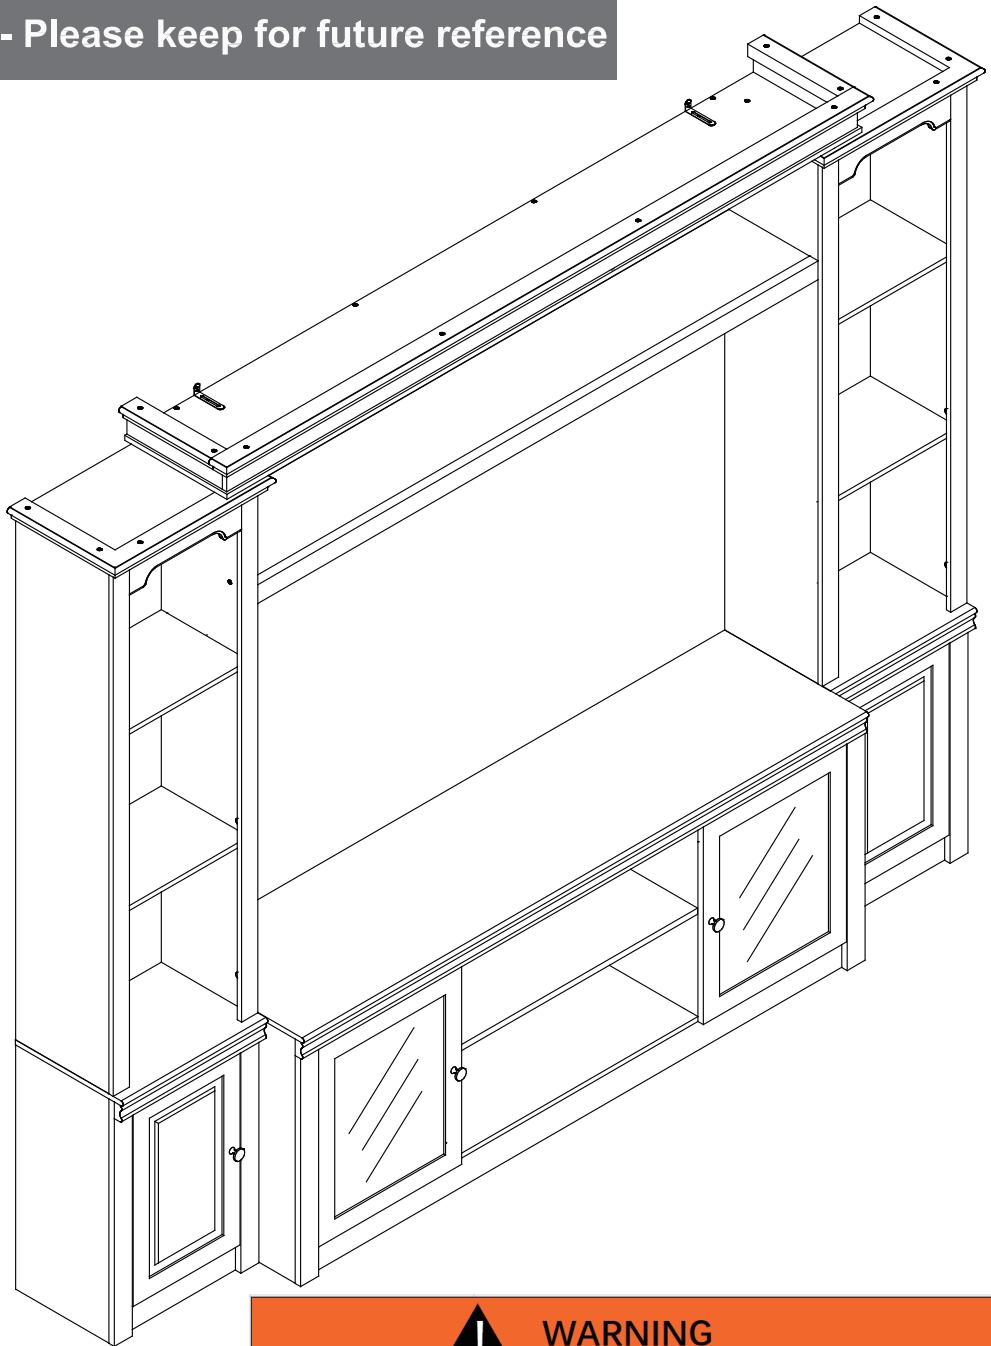

## Dimensions

Width- 95.25inch

Depth- 15.75inch

Height-77.75inch



## WARNING



This product is NOT a Clothing Storage Unit (CSU).  
DO NOT use it for clothing storage.  
Improper use may cause furniture tipover.

**Important – Please read these instructions fully before starting assembly**



# Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

## Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

## Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

## WARNING

**In order to help prevent overturning – please follow these instructions**









To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)  
Do not allow children to climb or hang on the furniture  
Do not open more than one drawer at a time  
Do not place heavy items in the top drawers  
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


# Components - Fittings

Please check you have all the panels listed below



Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

			
A Cam Bolt x 132+2	B 6*30mm Dowel x 141+2	C Cam lock x 132+2	D 4*40mm Screw x 24+2
			
E Triple fold hinge x 8	F x 4set	G x 32set	H 4*25mm Screw x 12+1
		K Perfect fit x 50	
I Shelf support pin x 16+1	J Anti-tipping Device x2		L x 4set
		O 6*40mm Screw x 2	
M 4*20mm Handle x 4set	N 6*40mm Screw x 4+1	P Allen key x 1	
			
Q1 Q2 6*20mm Screw x 4+1	R 4*30mm Screw x 20+2		

Tools required Not Included



Phillips screwdriver  
(medium & large)

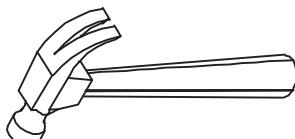


# Using Camlocks

## Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.  
NE PAS SERRER EXCESSIVEMENT.

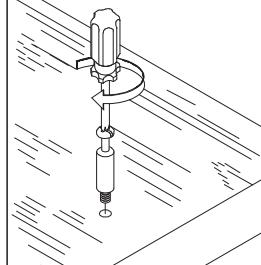

## Step 2

Push the male camlock into the entry hole.

2

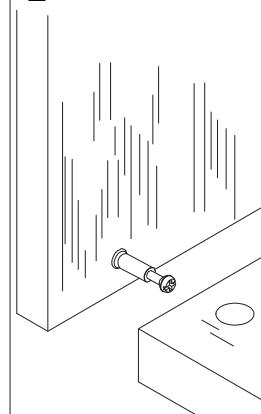


## Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

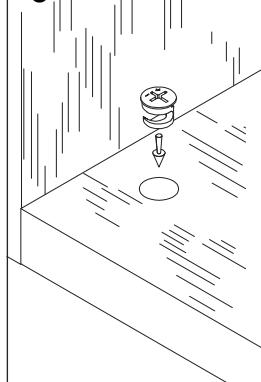


## Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

4

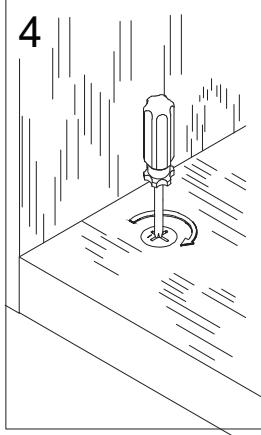


# Assembly Instructions

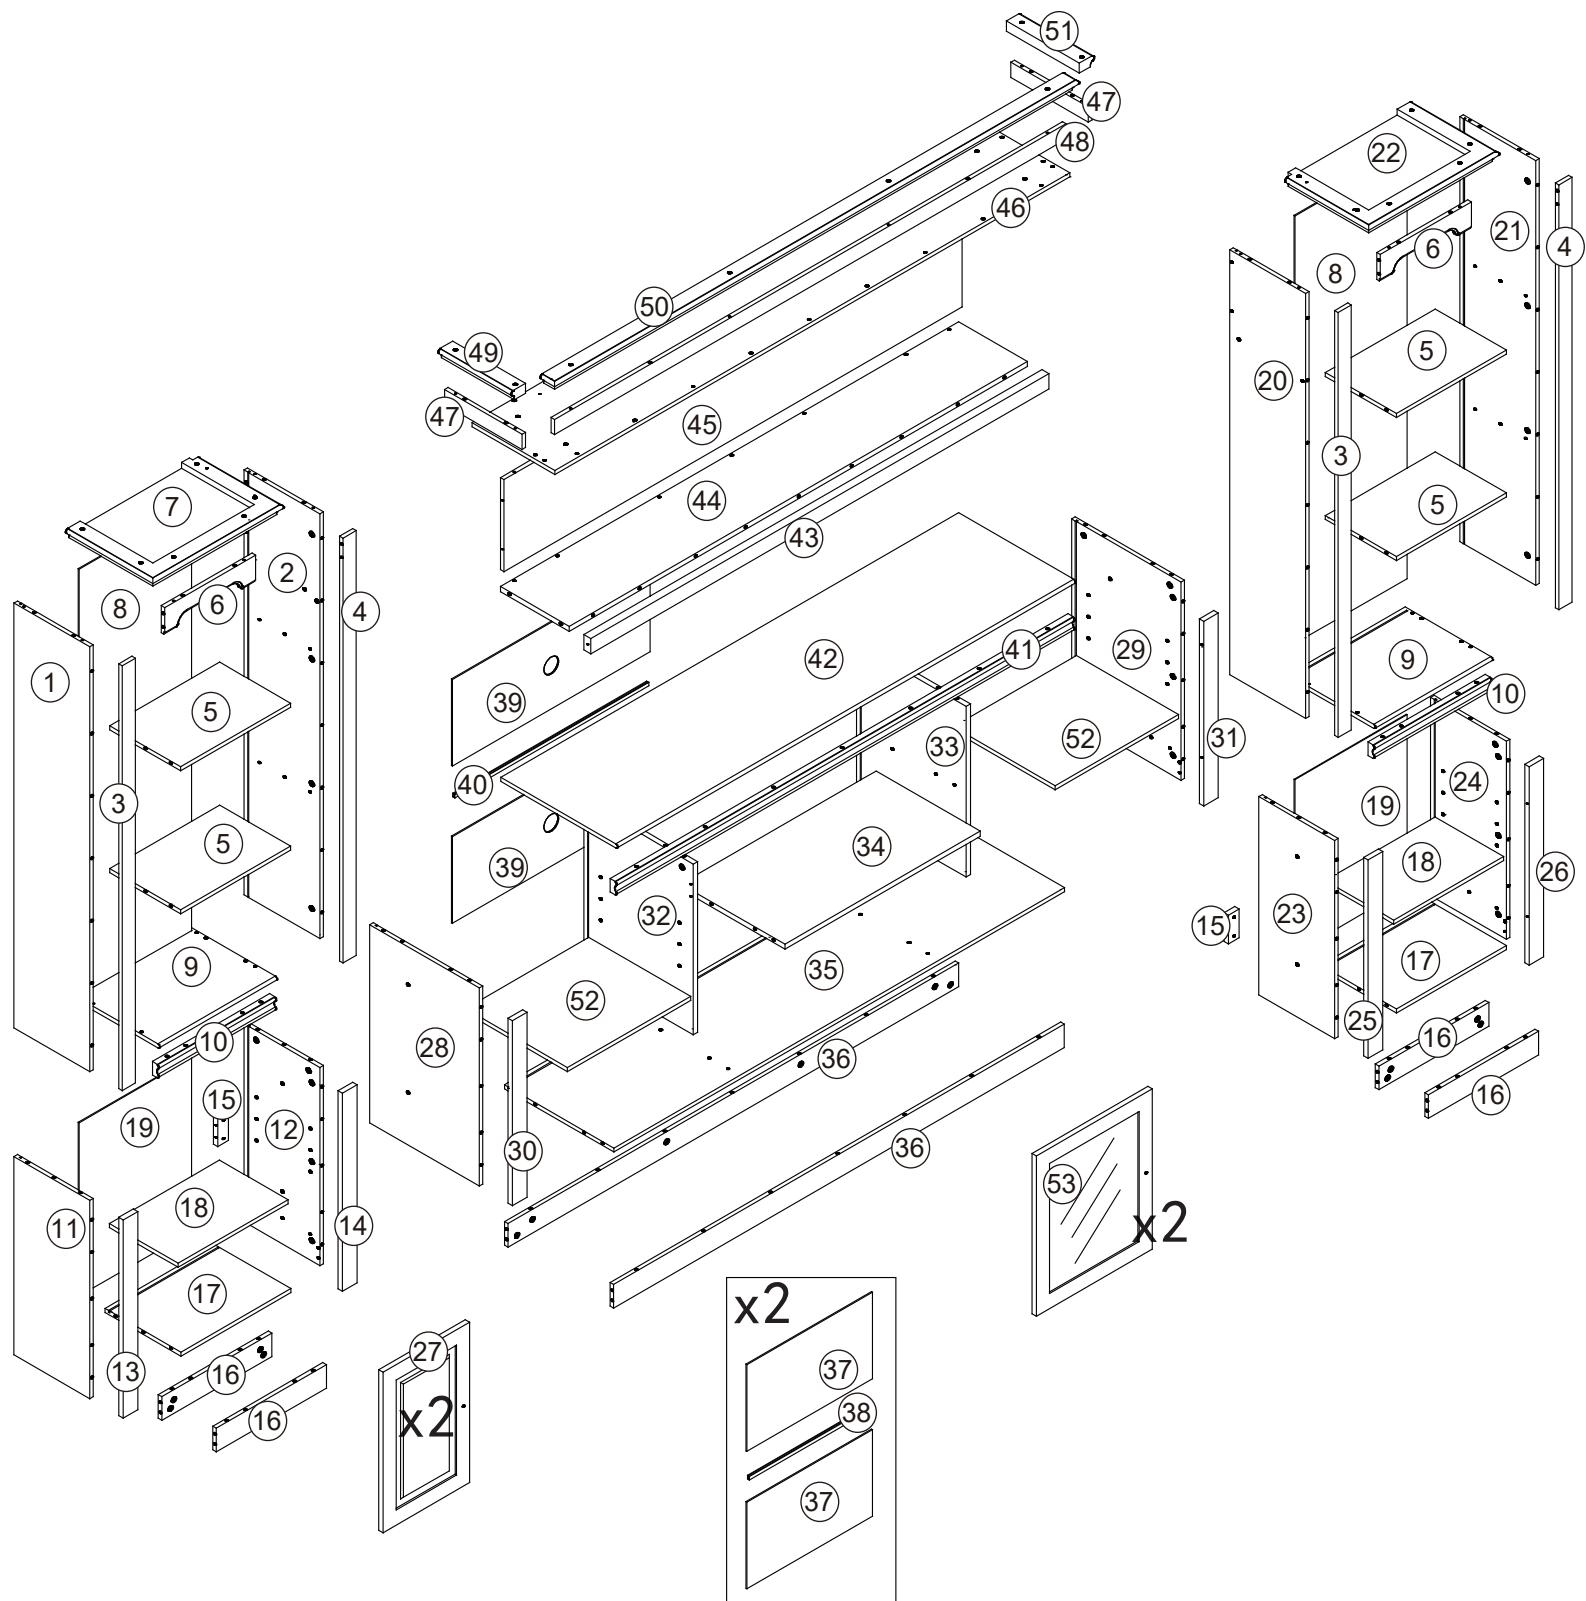

# PART LIST

This product comes in 2 box.


N710P390121

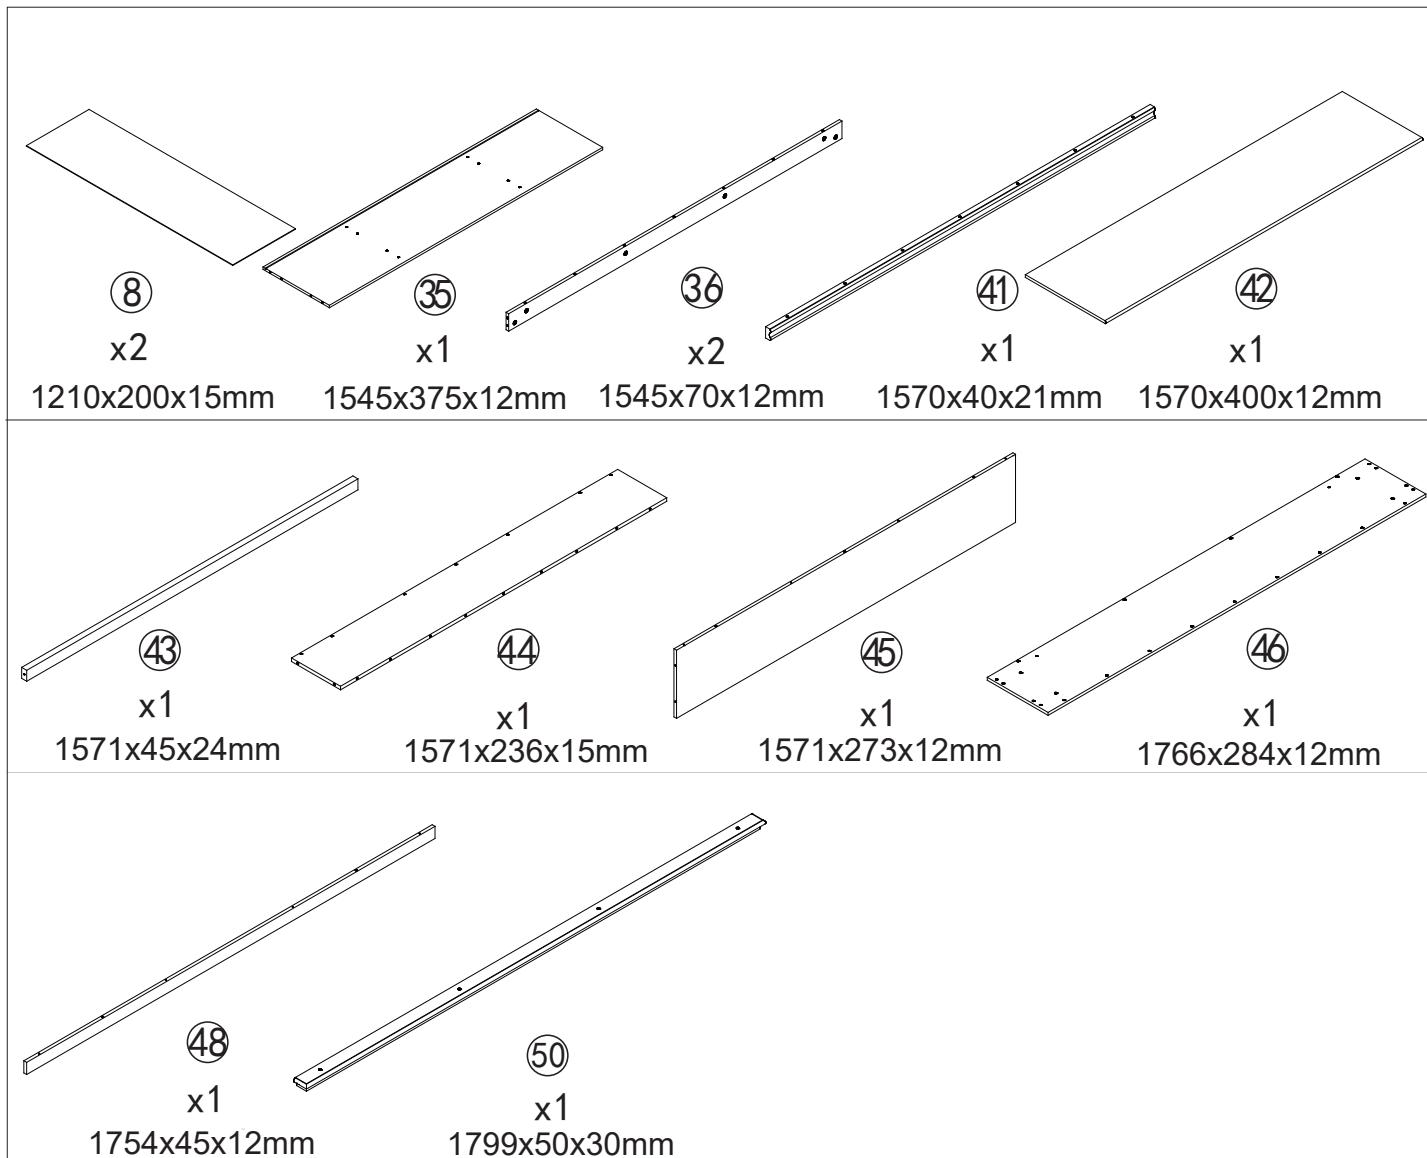

# PART LIST

This product comes in 2 box.


N710P390122

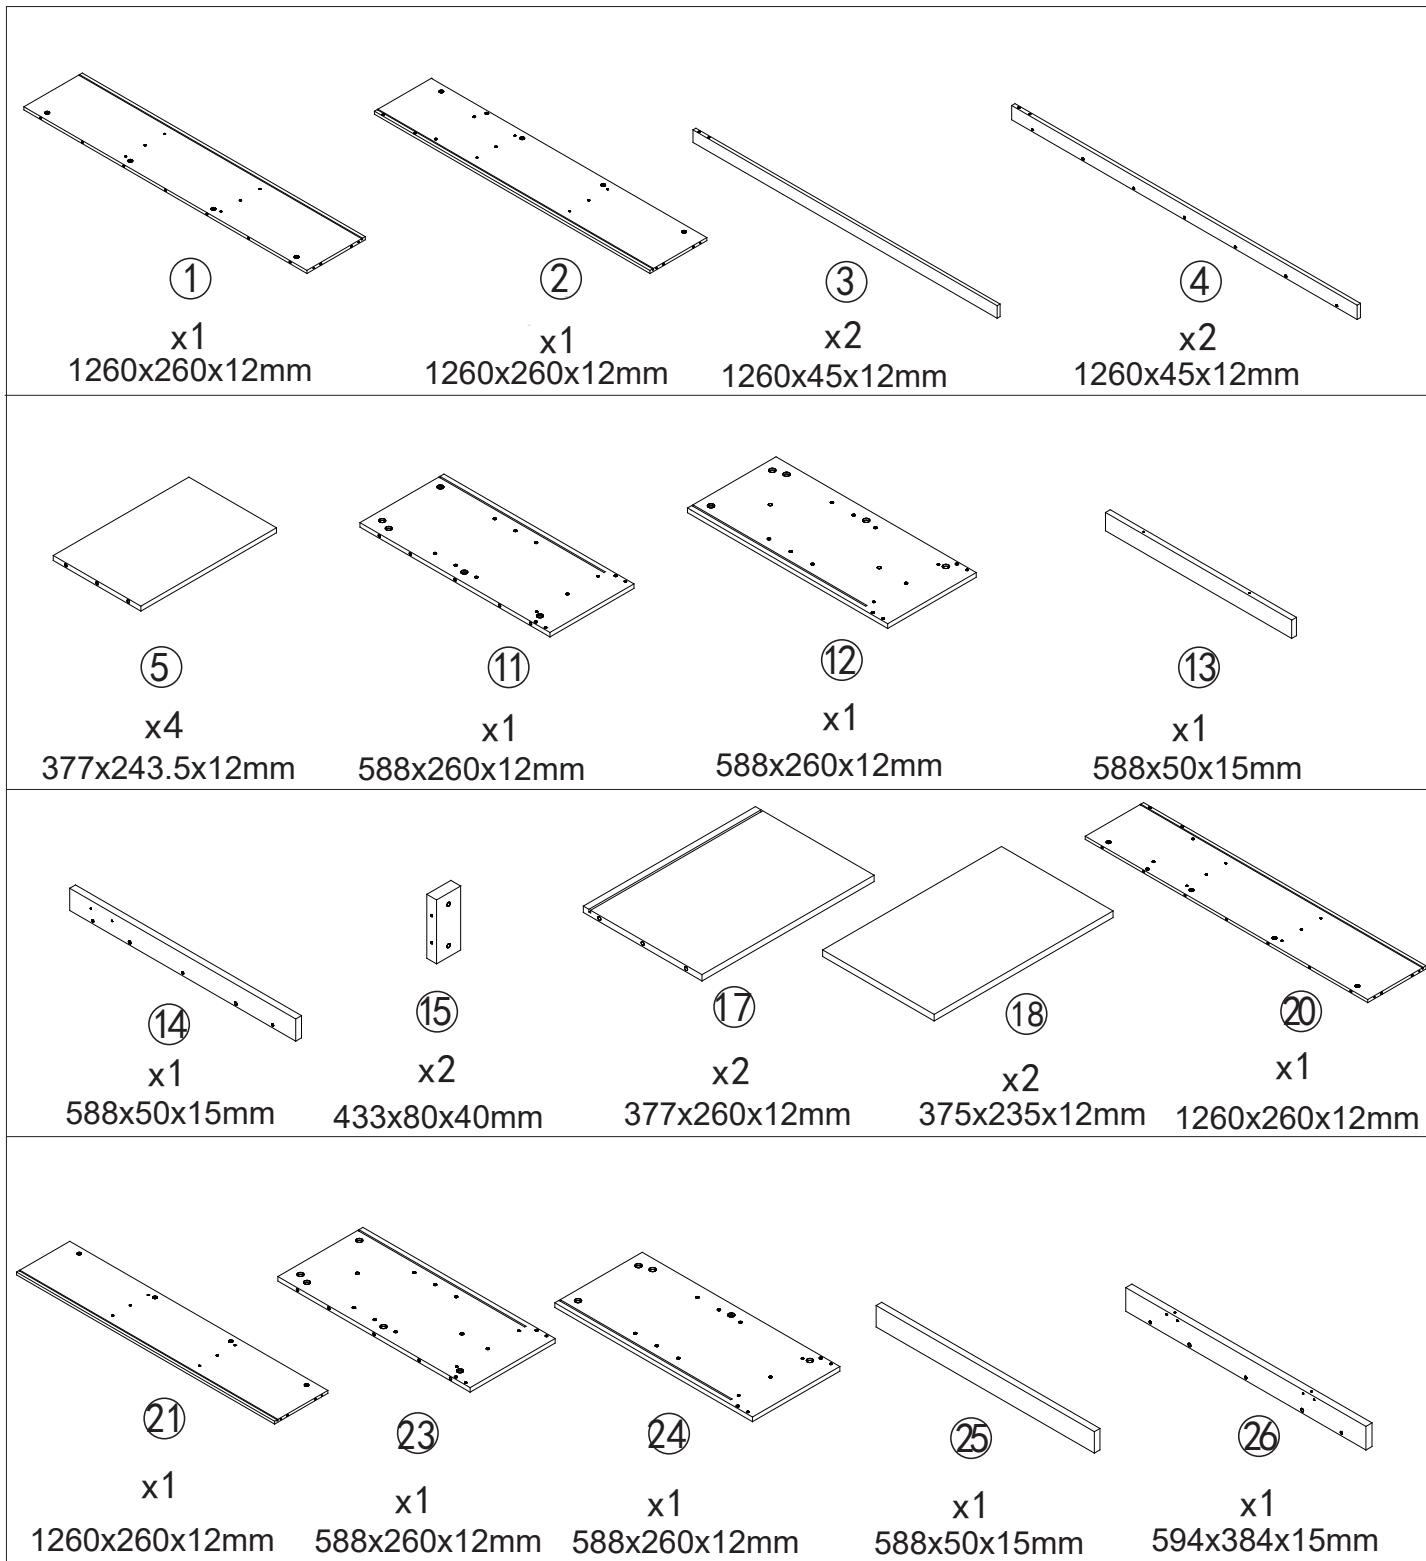


## PART LIST

This product comes in 2 box.


N710P390122

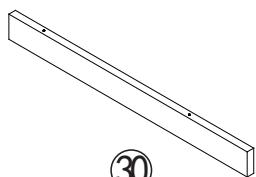

⑩  
x1  
548x50x15mm

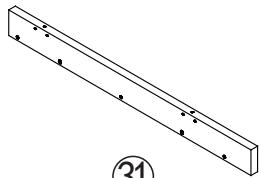

⑪  
x1  
548x50x15mm

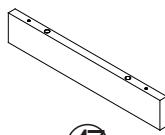


⑫  
x2  
265.5x45x12mm

# PART LIST

This product comes in 2 box.


N710P390123

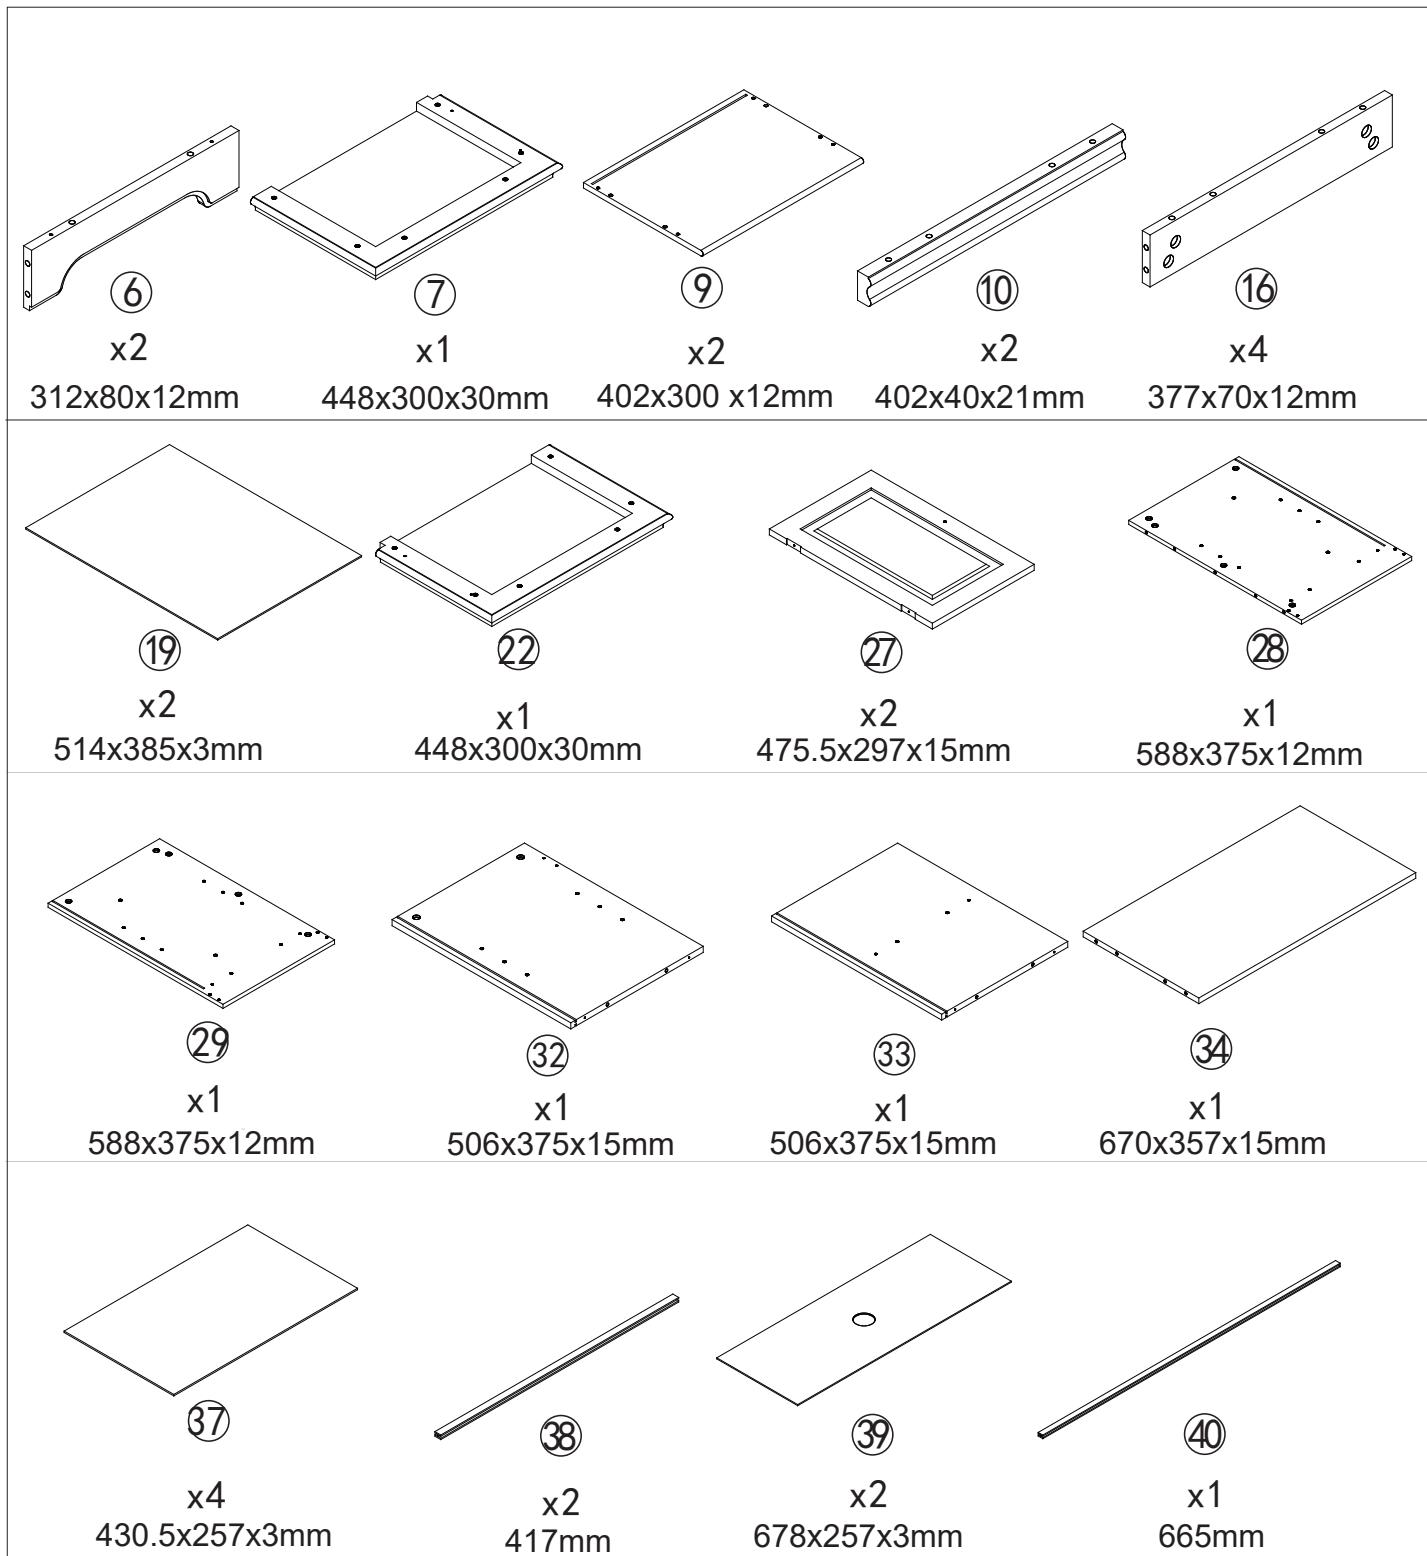

# PART LIST


This product comes in 2 box.

N710P390123

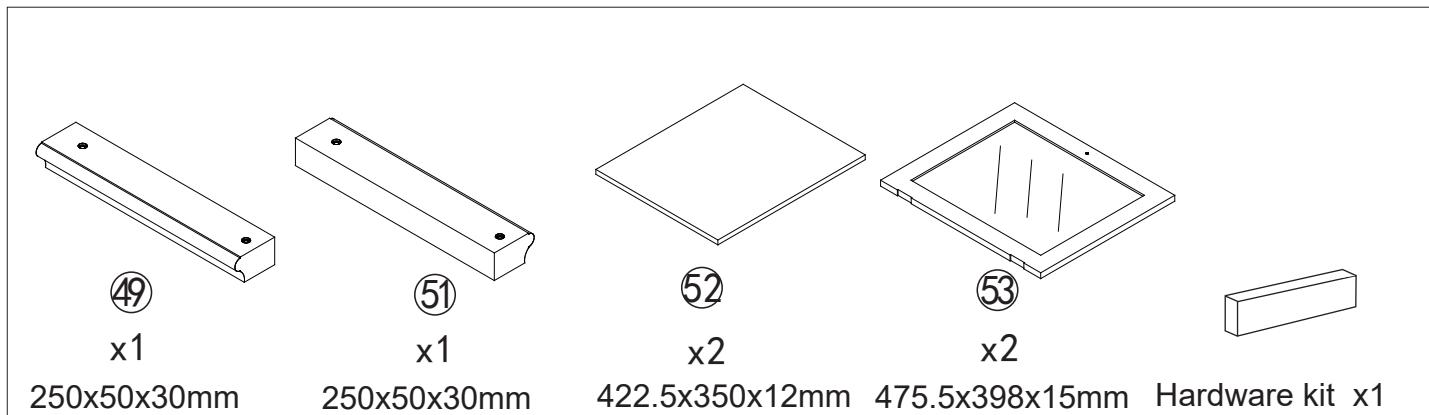


# Assembly Instructions

## Step 1

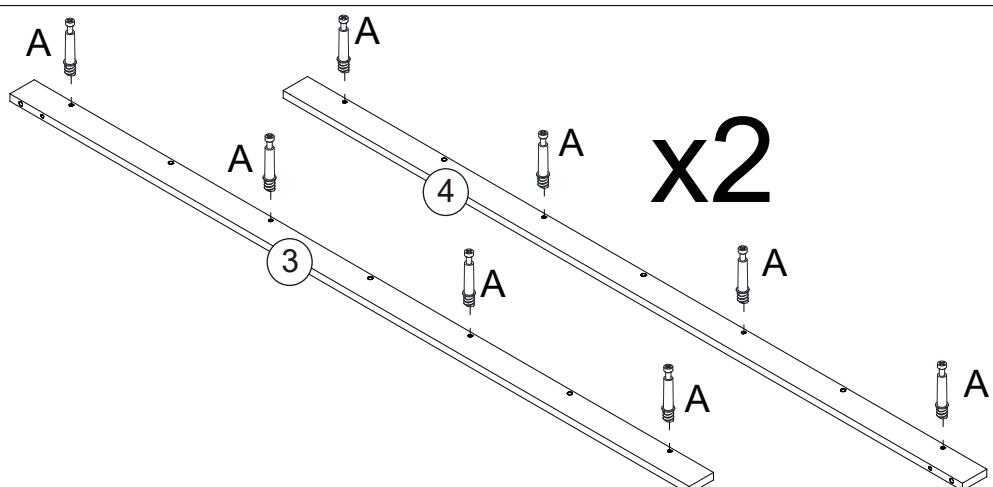

(A)  
Cam Bolt x 16


## Step 2

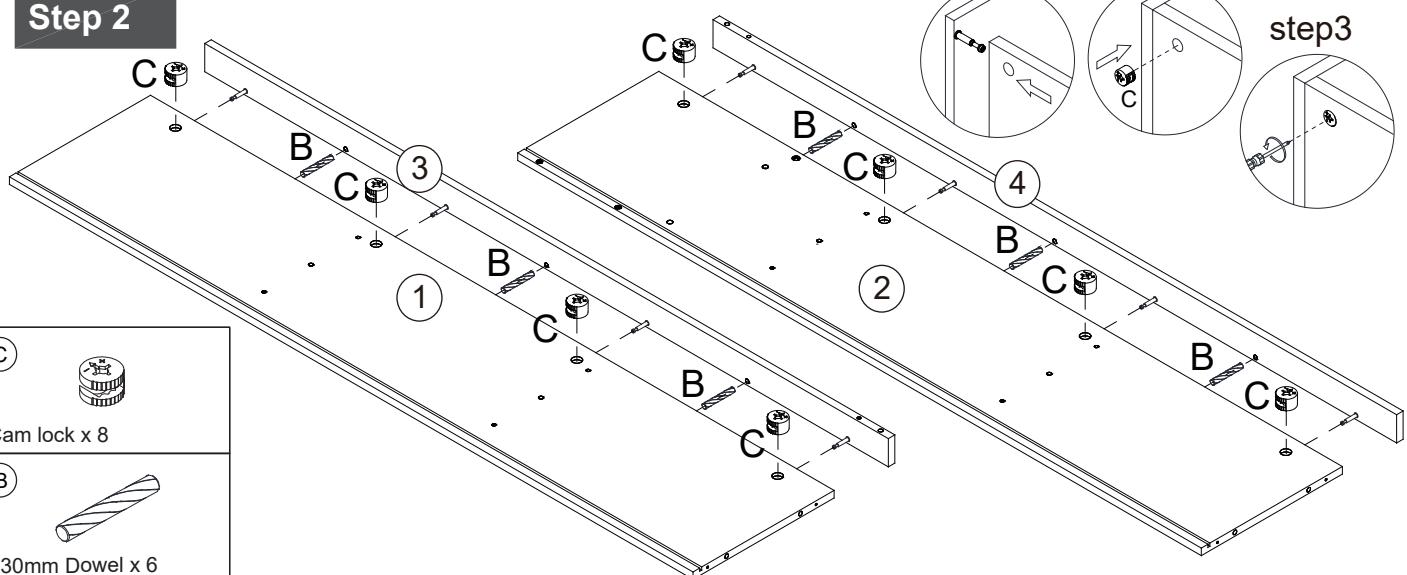

(C)  
Cam lock x 8


(B)  
6\*30mm Dowel x 6

## Step 3

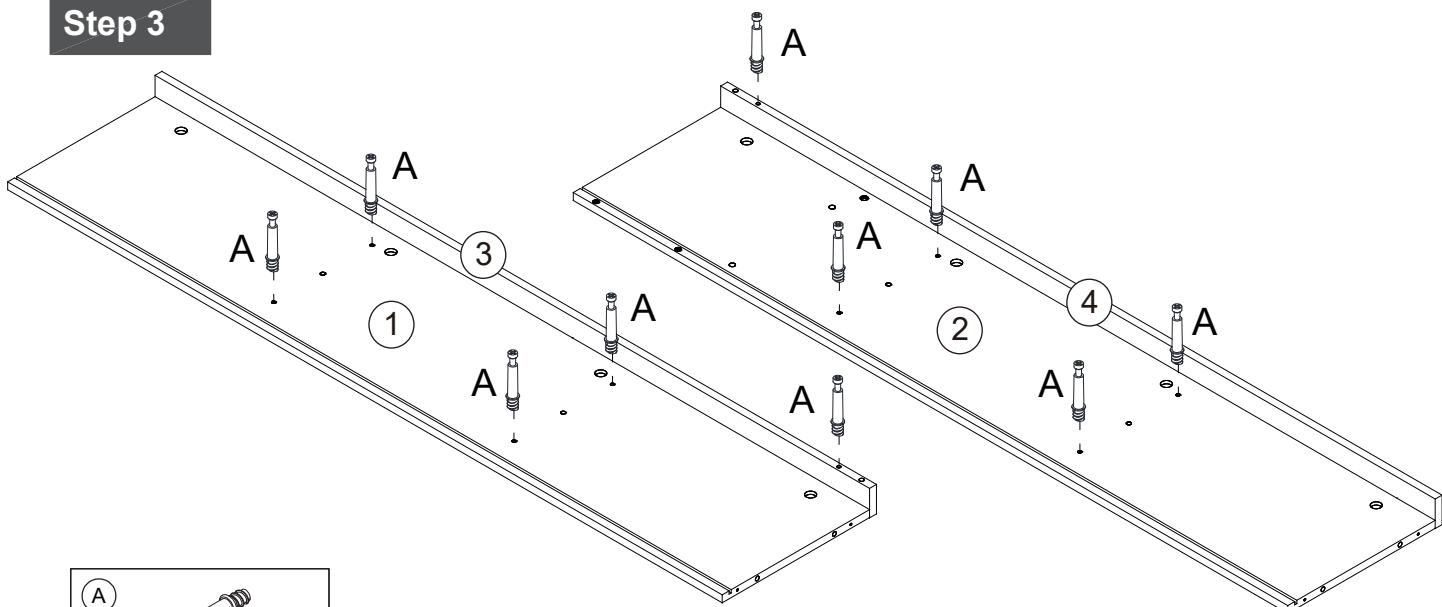


# Assembly Instructions

## Step 4

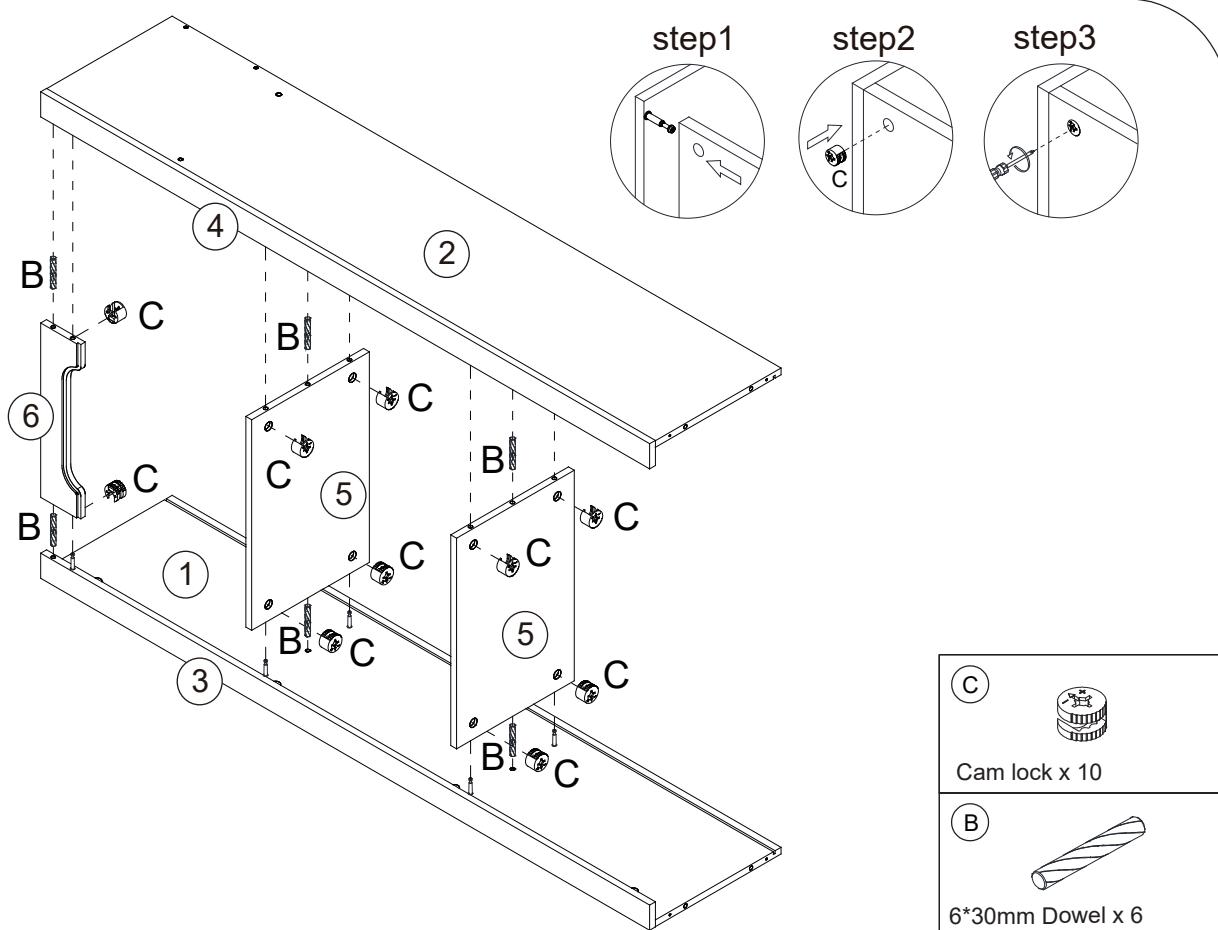


## Step 5

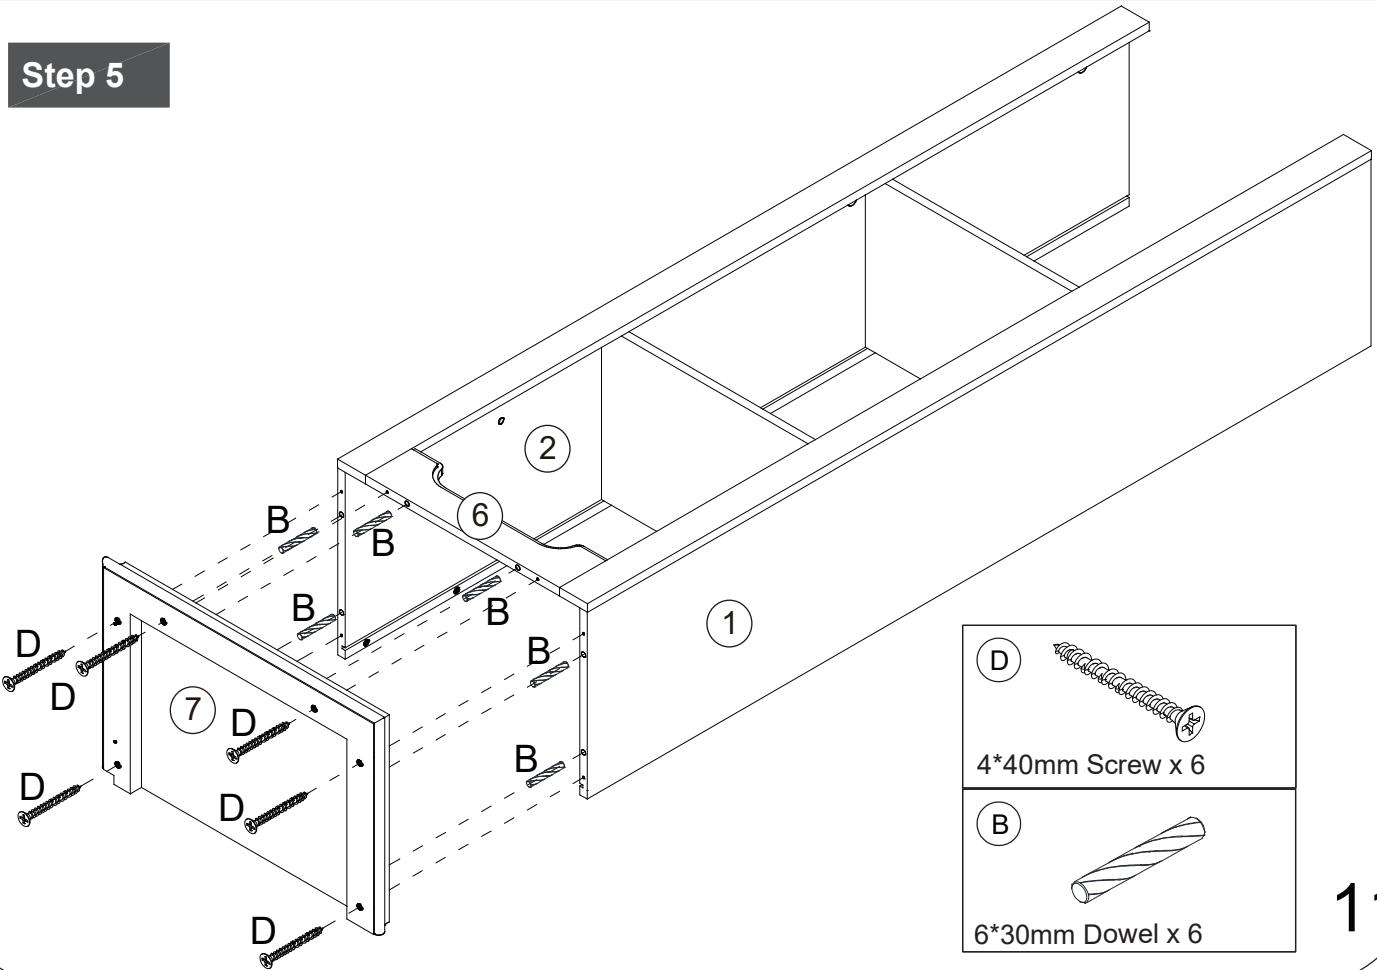


# Assembly Instructions


## Step 6

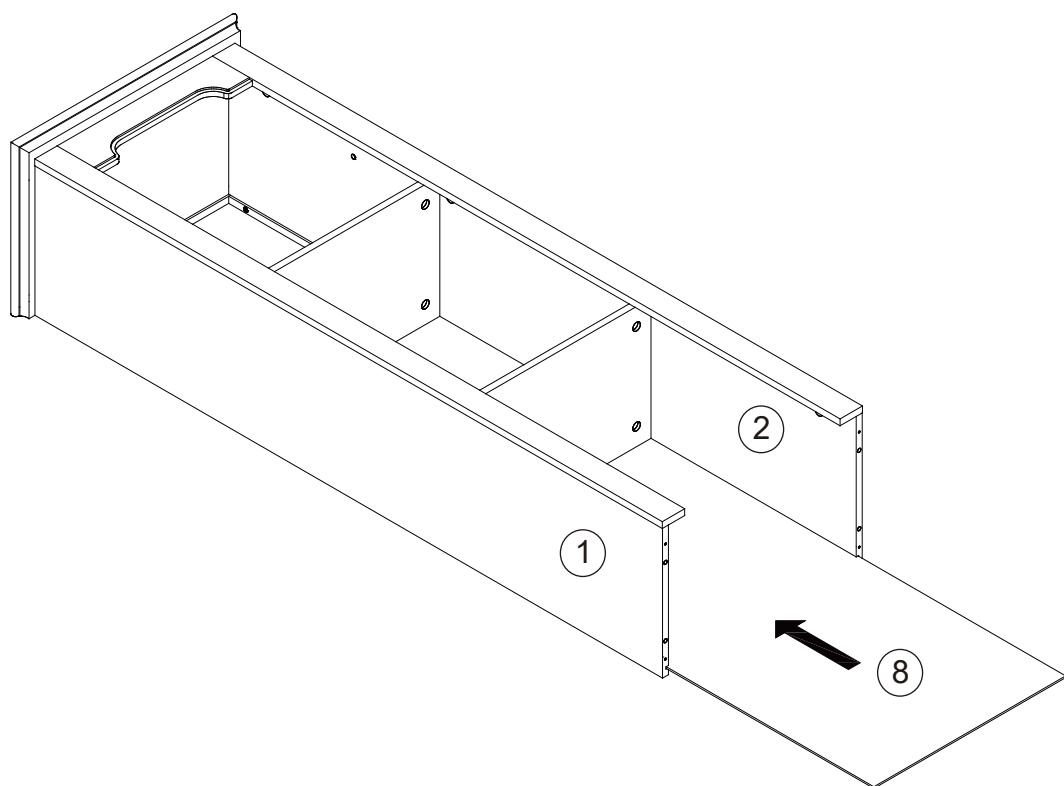


## Step 7

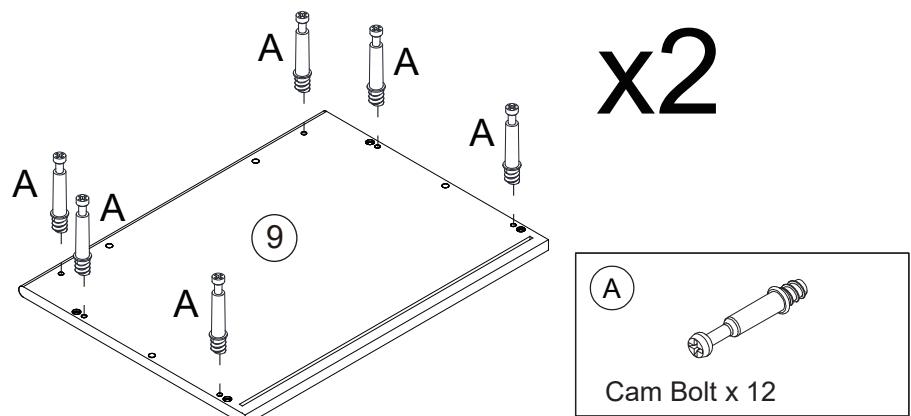


## Step 8

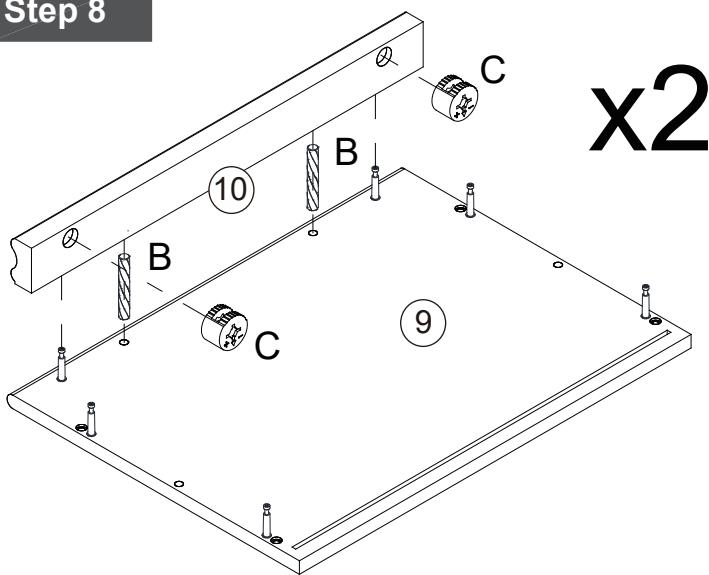



step1

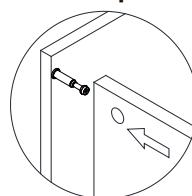

step2

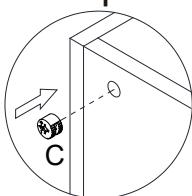


step3



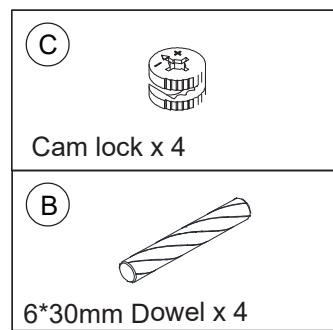
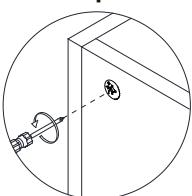


# Assembly Instructions

## Step 9

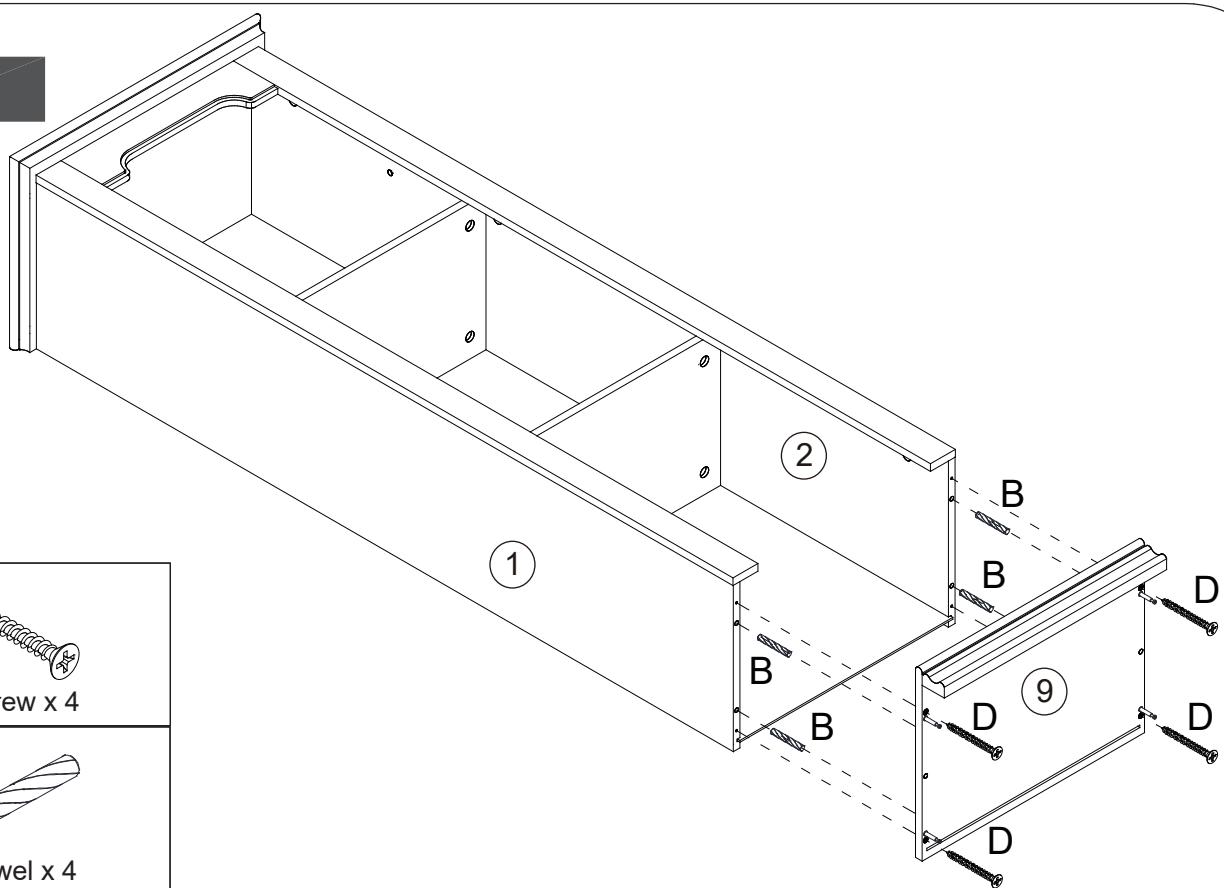


## Step 10

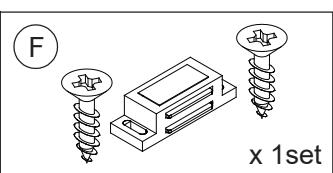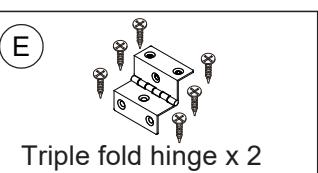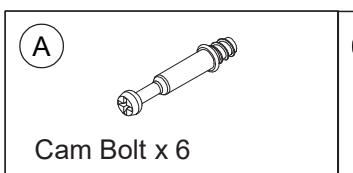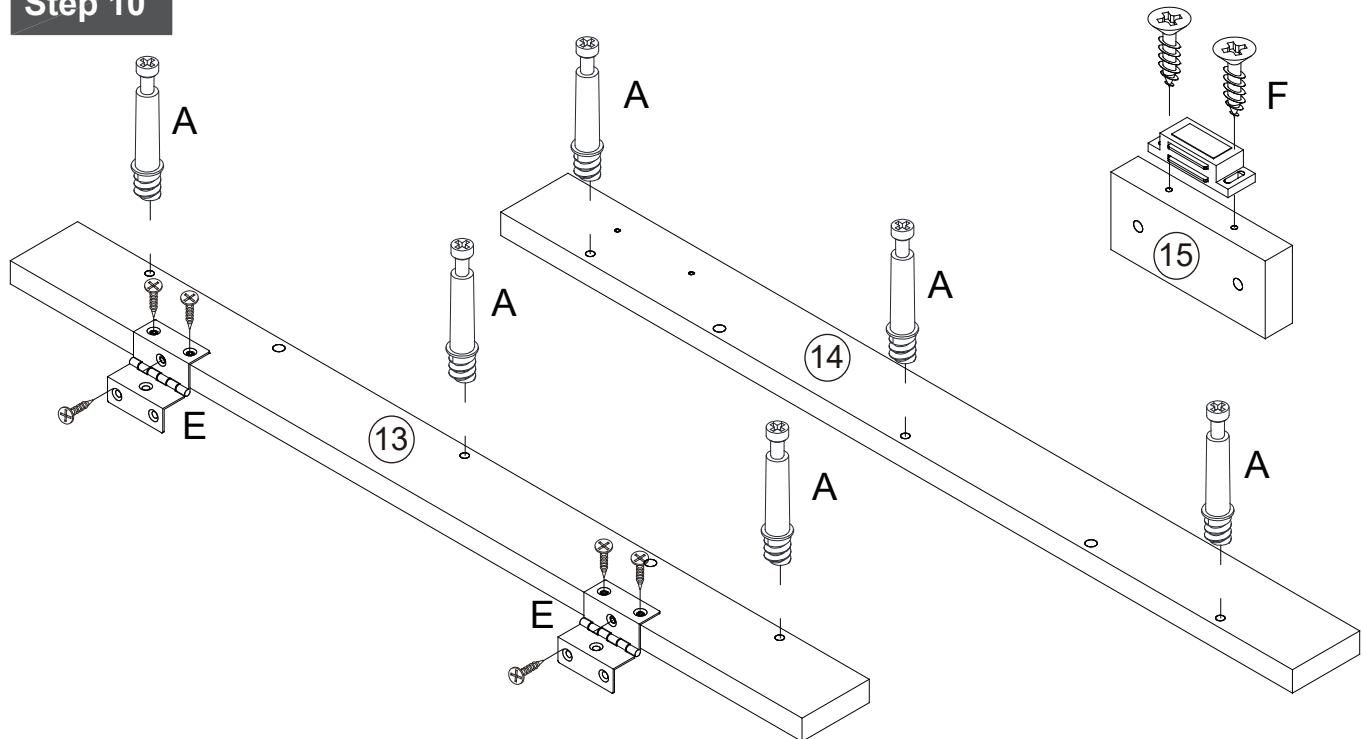


# Assembly Instructions


## Step 11

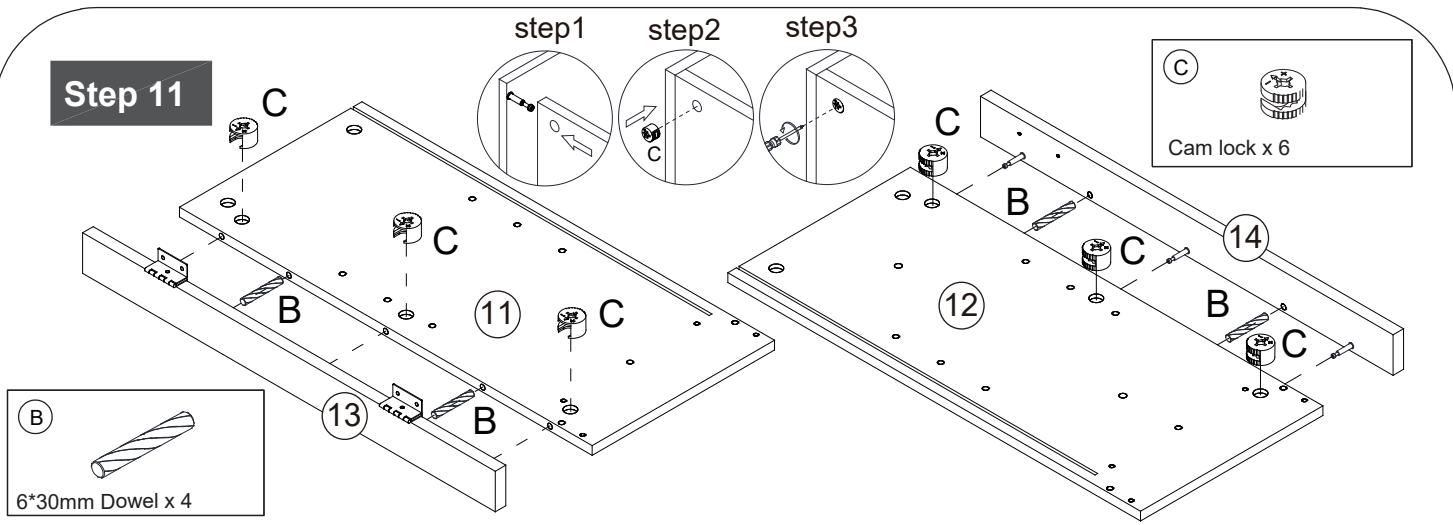

## Step 12

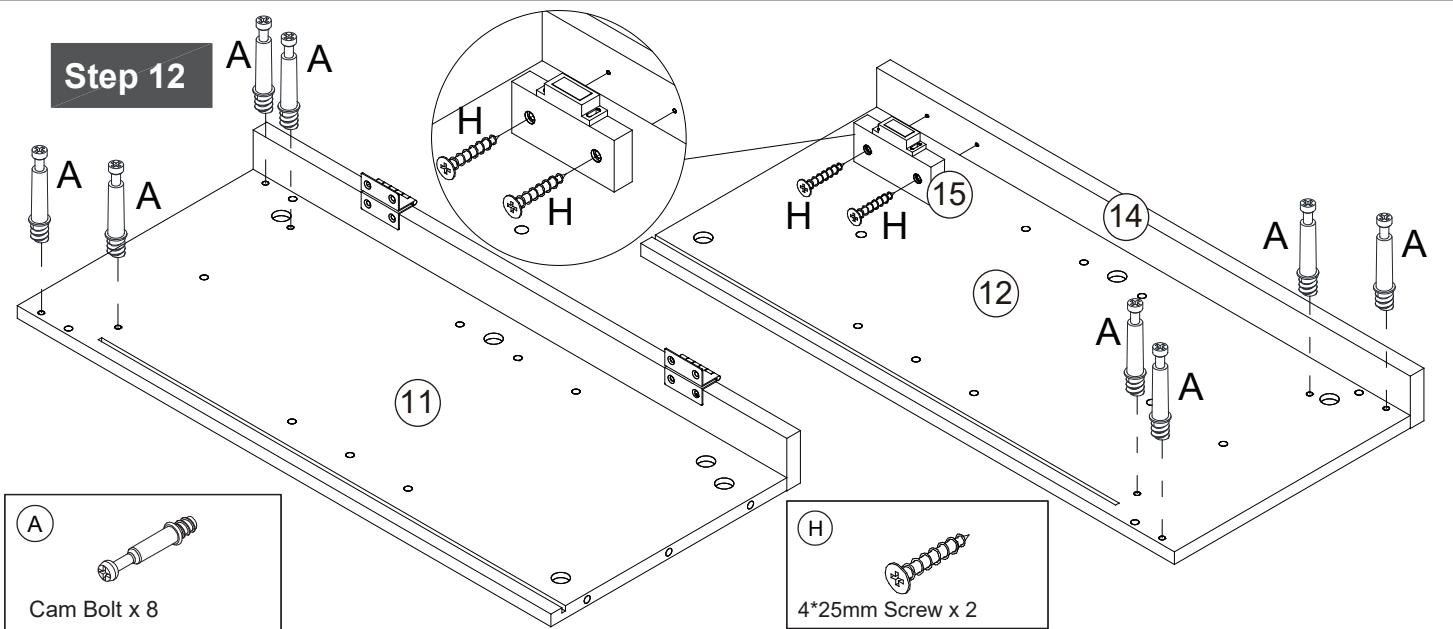


## Step 13

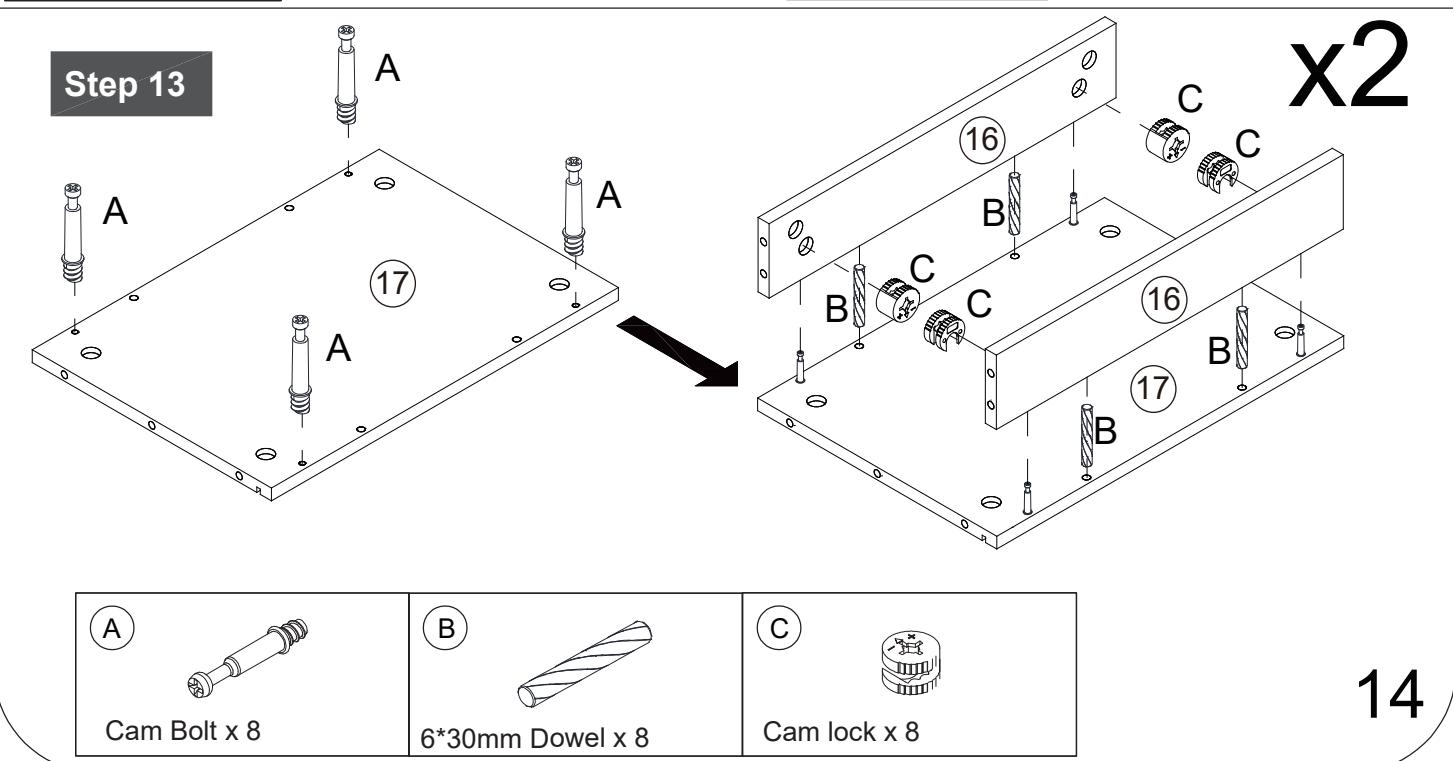


# Assembly Instructions

## Step 14

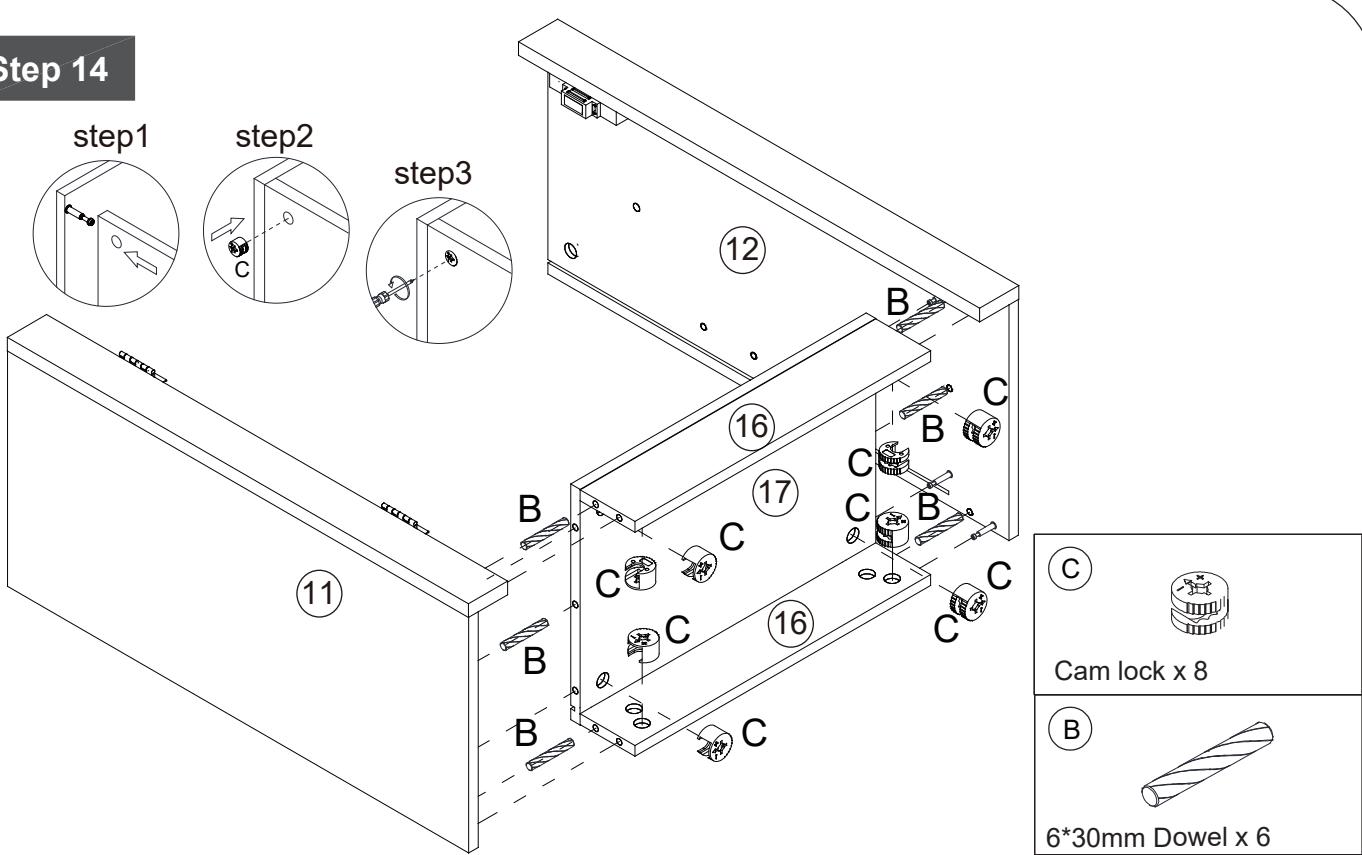


## Step 15

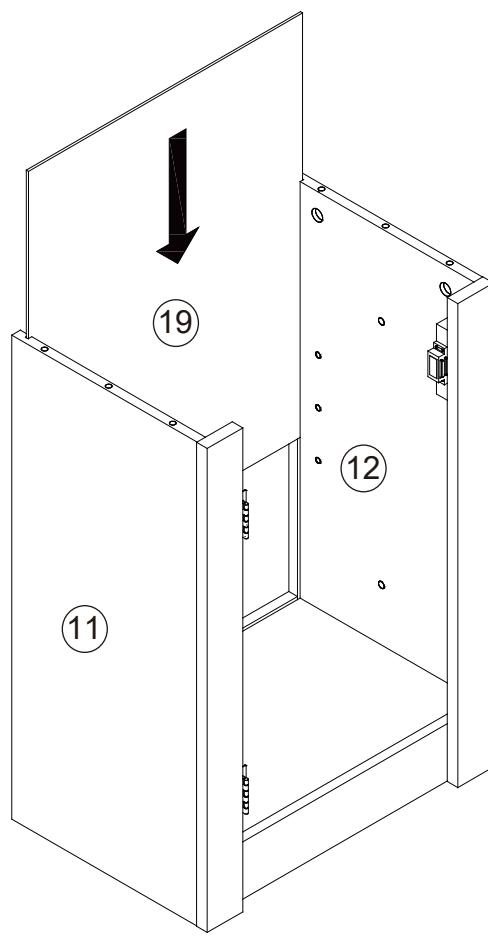


# Assembly Instructions

## Step 16


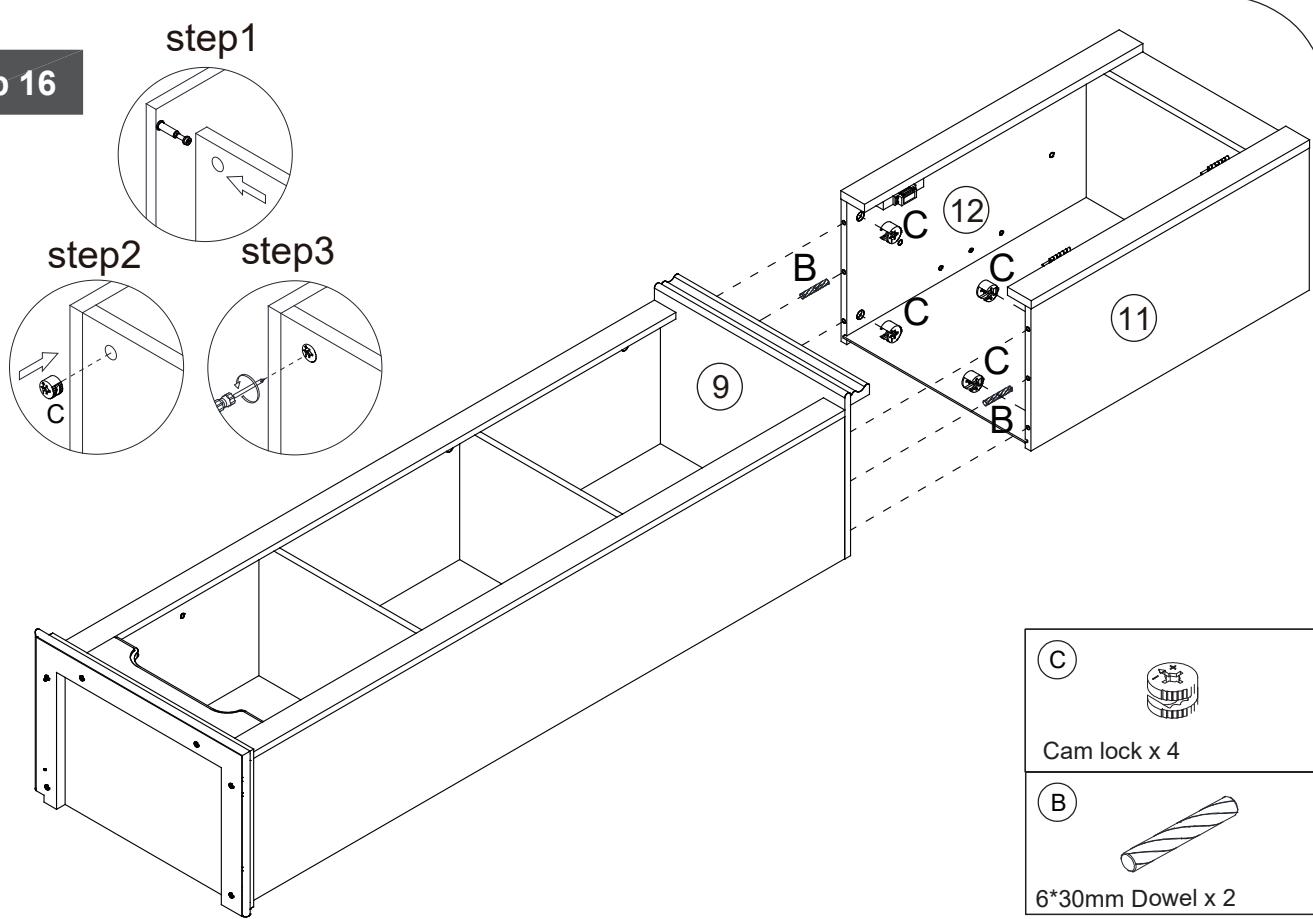


## Step 17

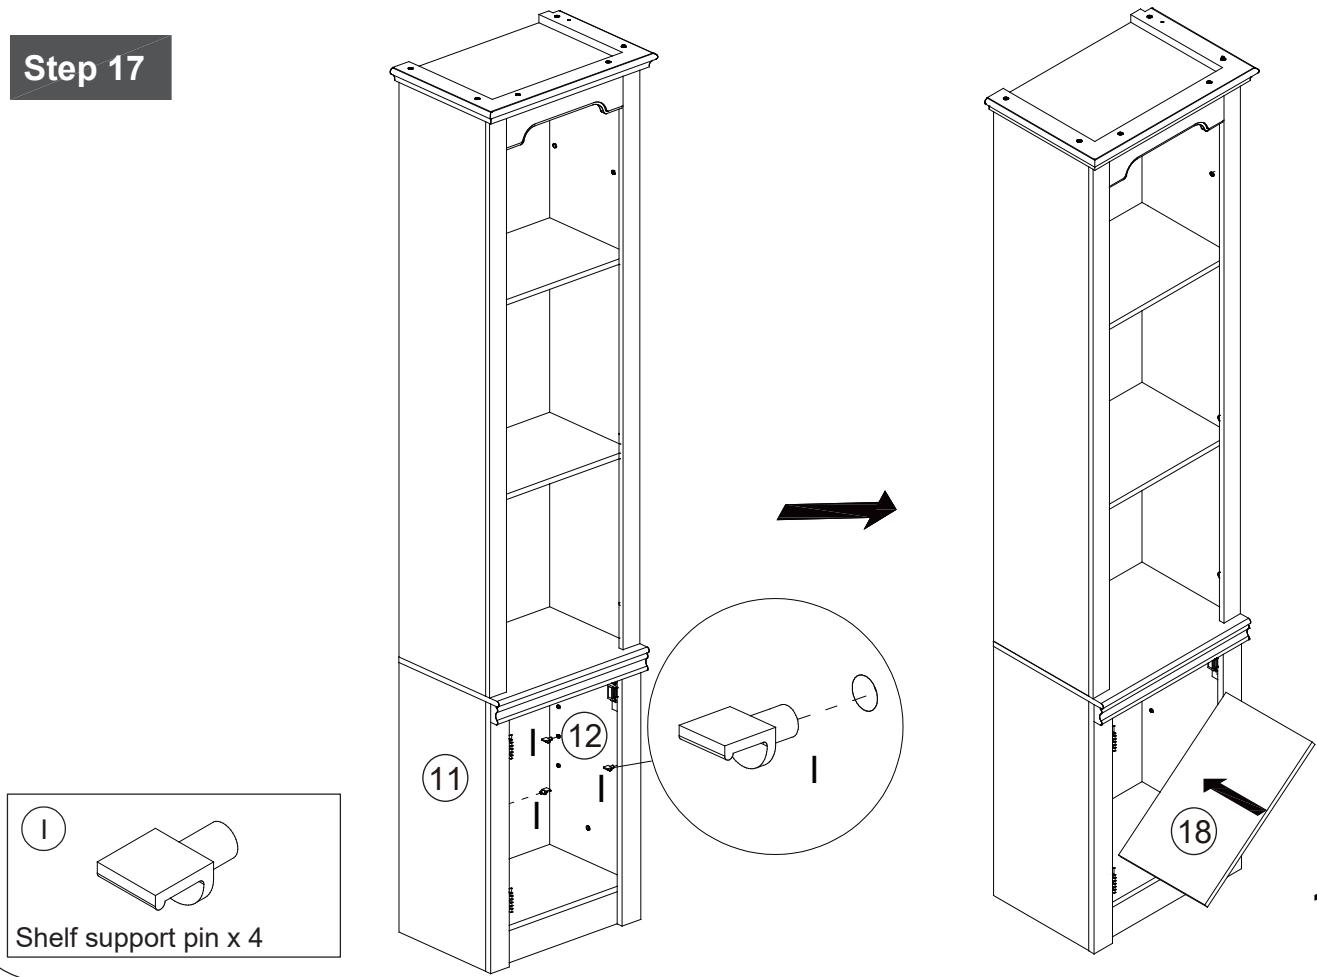


# Assembly Instructions

Step 18

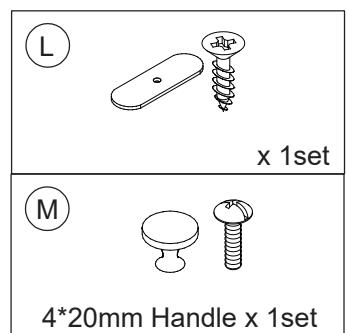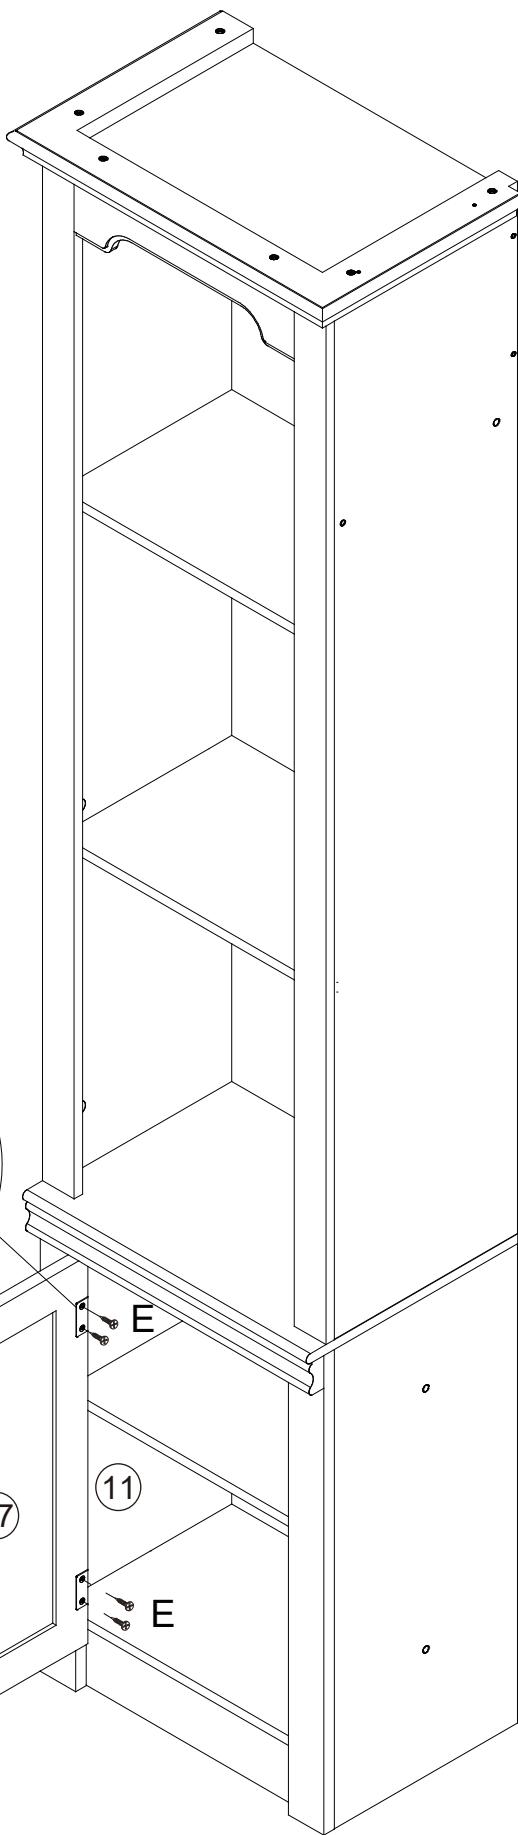


# Assembly Instructions



## Step 20

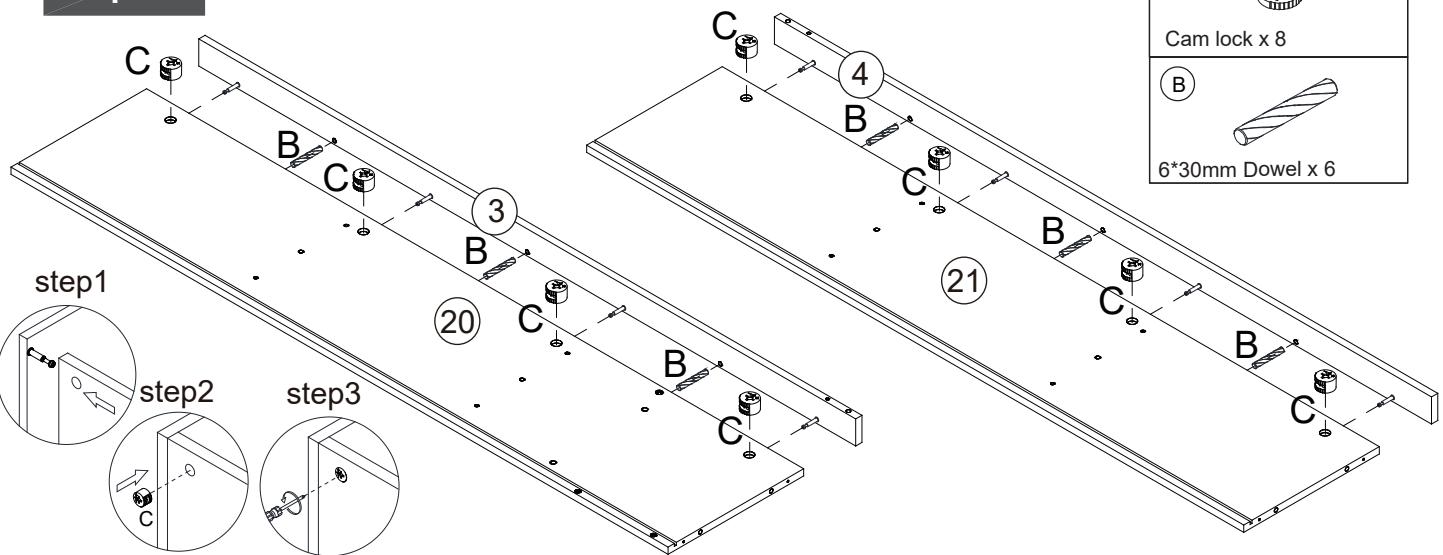

## Step 21

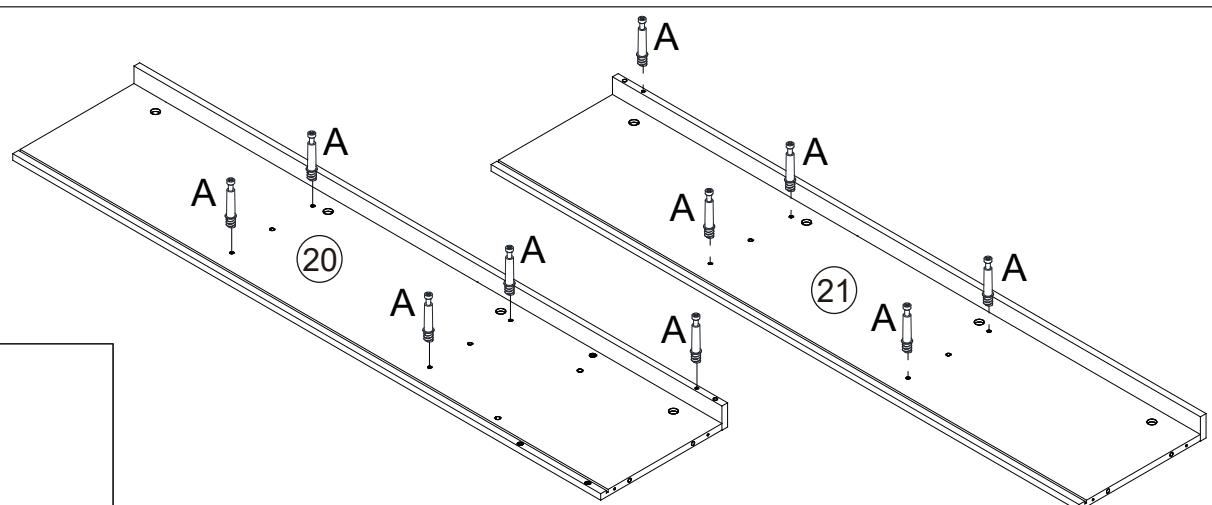


## Step 22

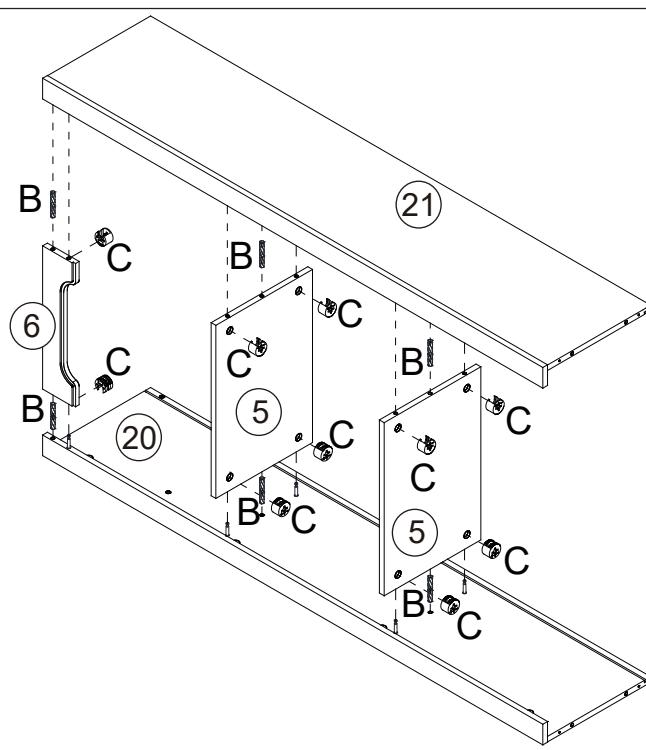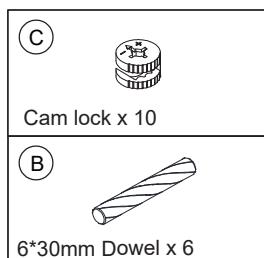


# Assembly Instructions

## Step 23

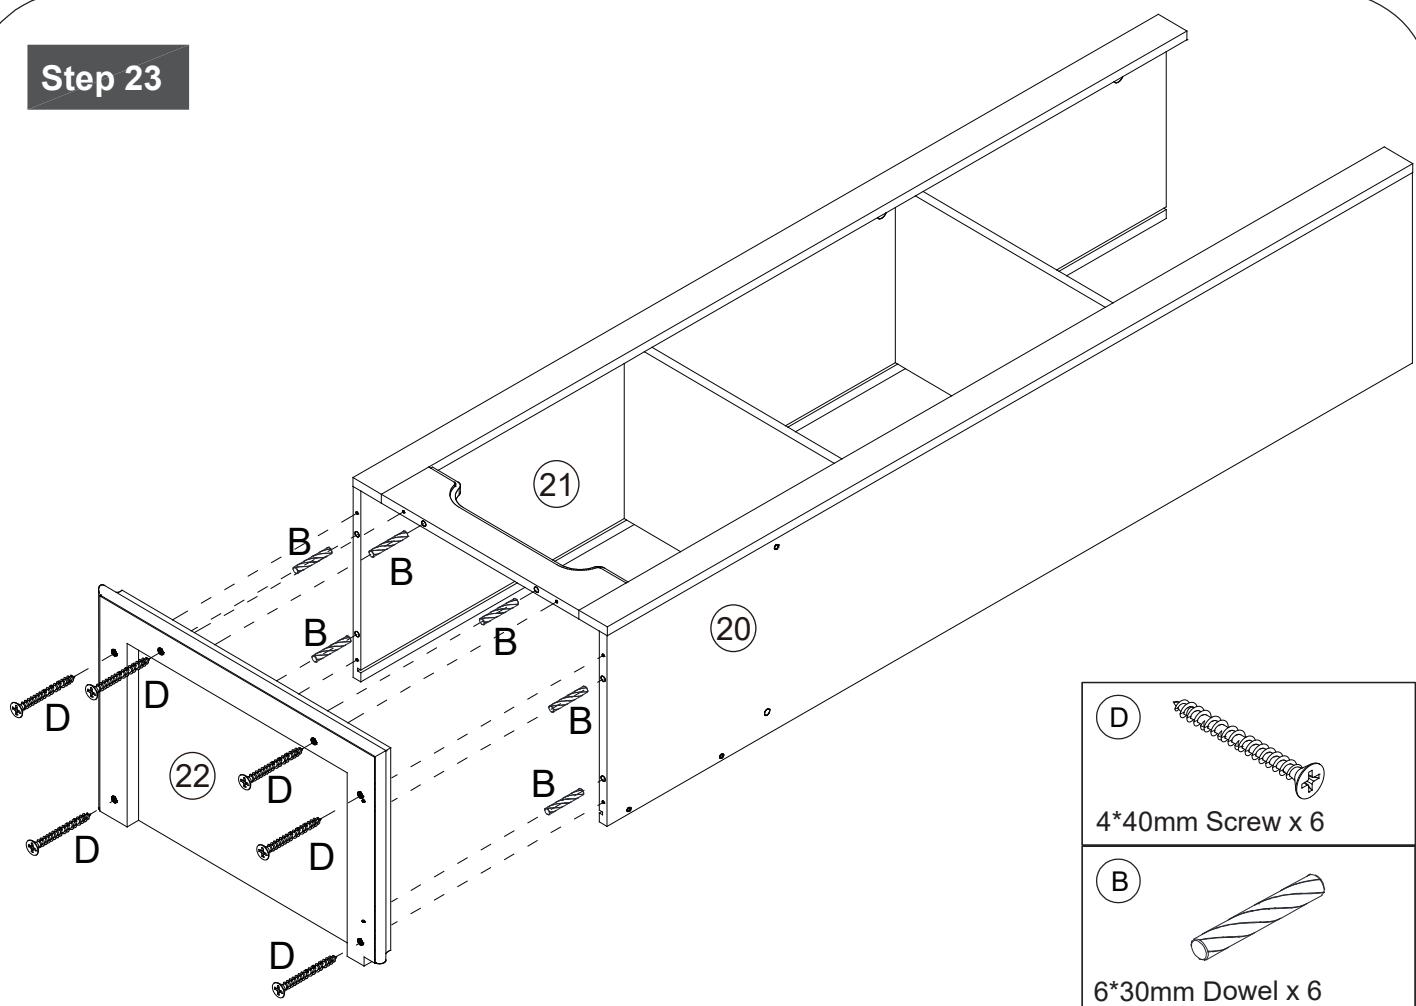


## Step 24

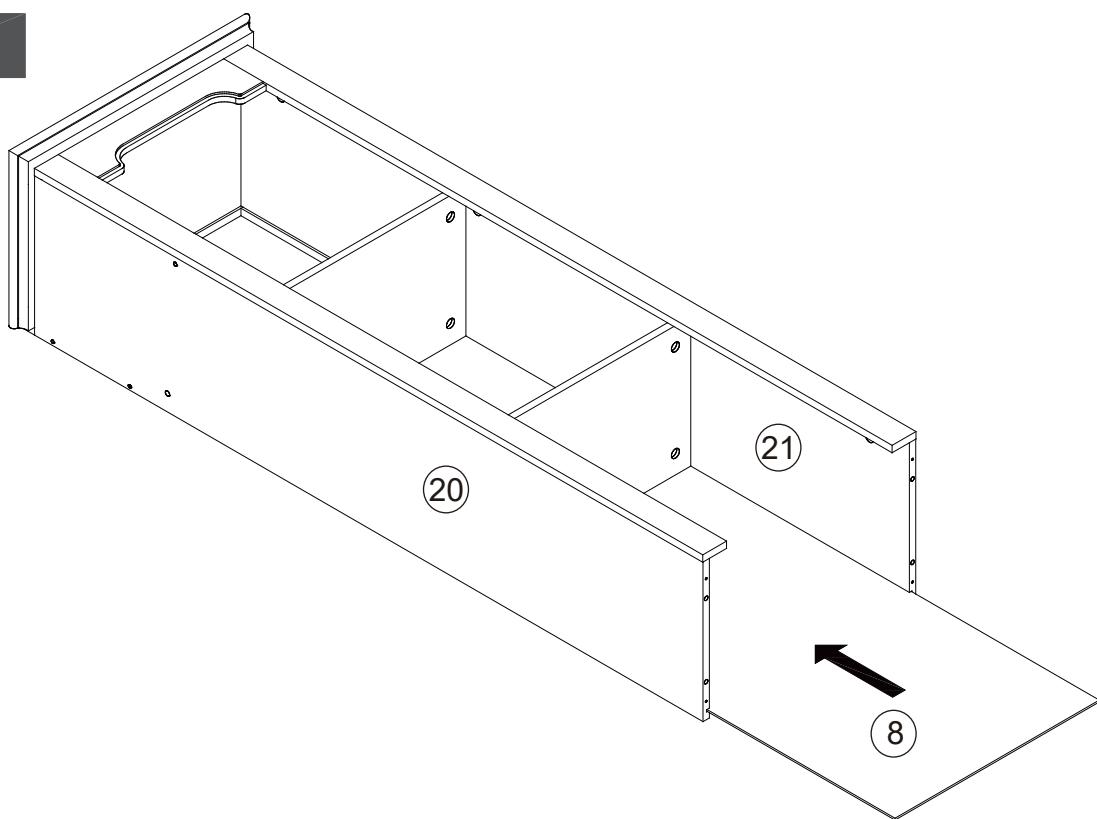


# Assembly Instructions

## Step 25

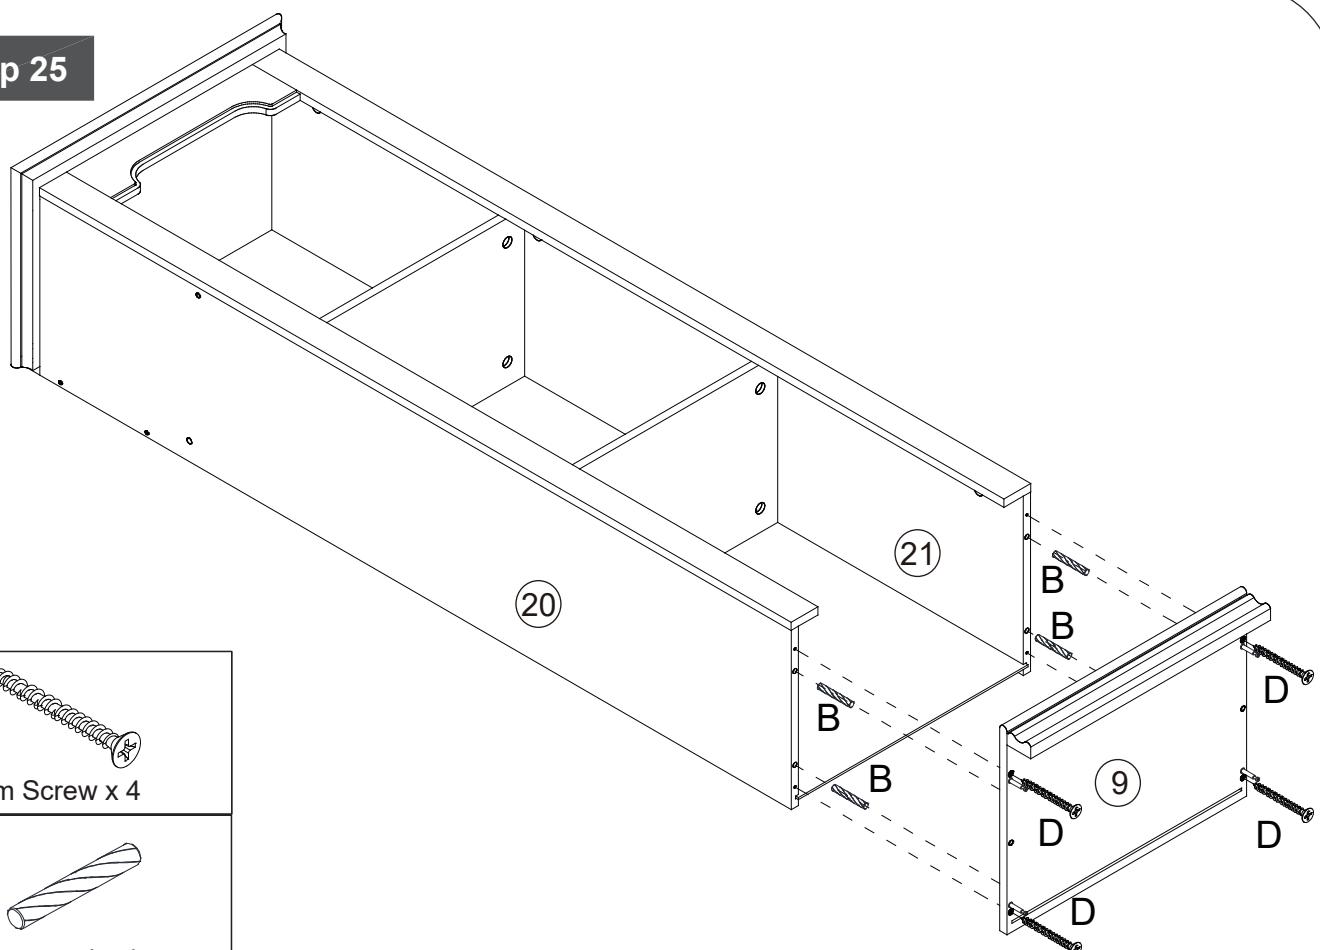


## Step 26

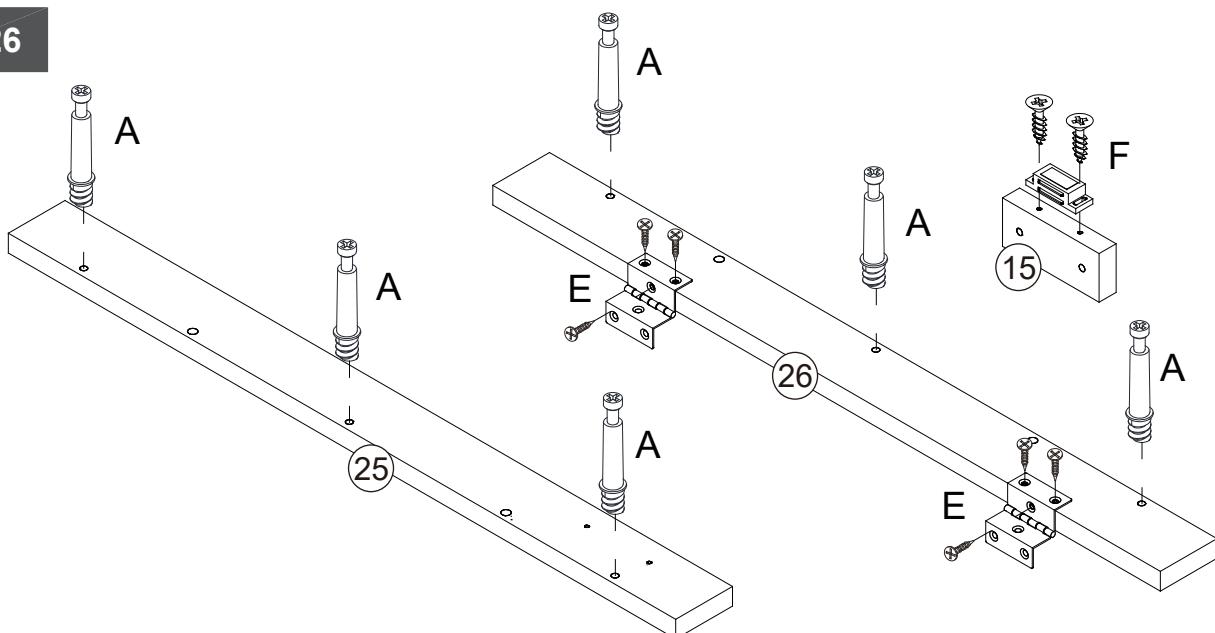


# Assembly Instructions

## Step 27

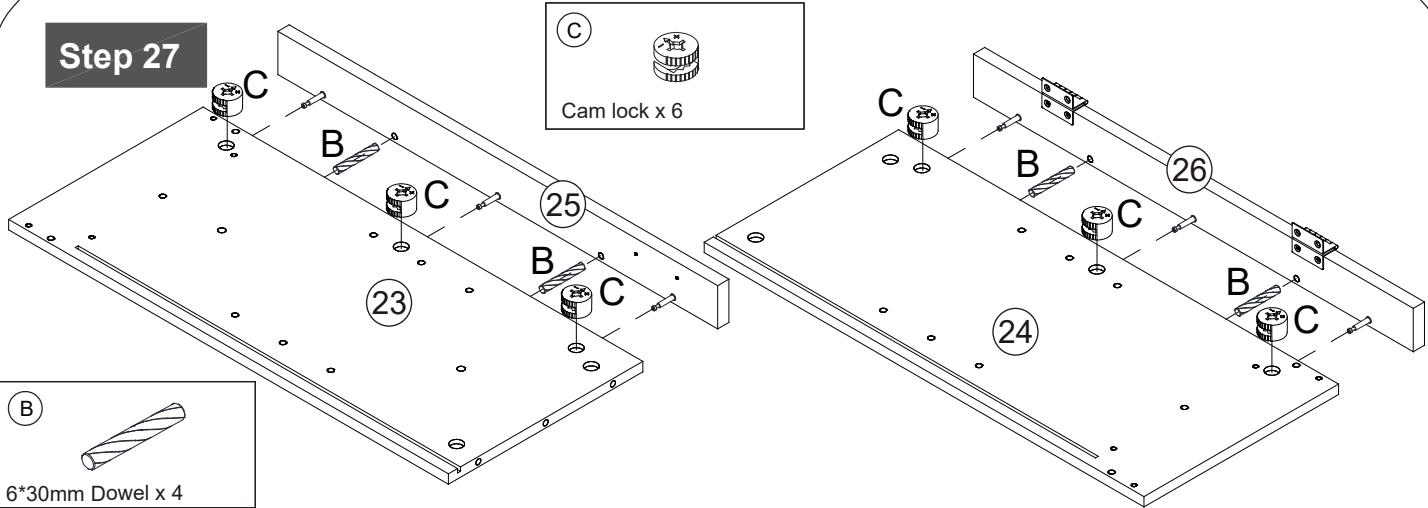


## Step 28

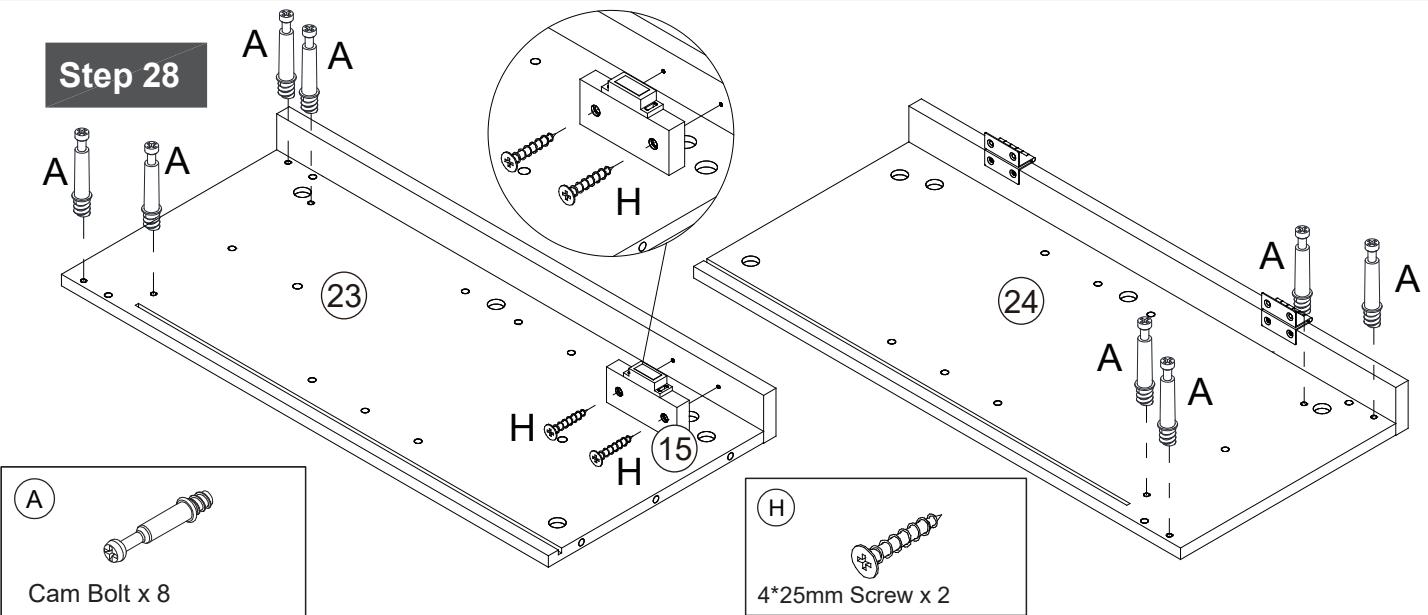


## Step 29


### step1

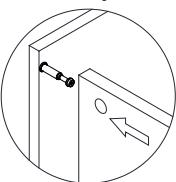

### step2

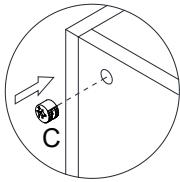


### step3


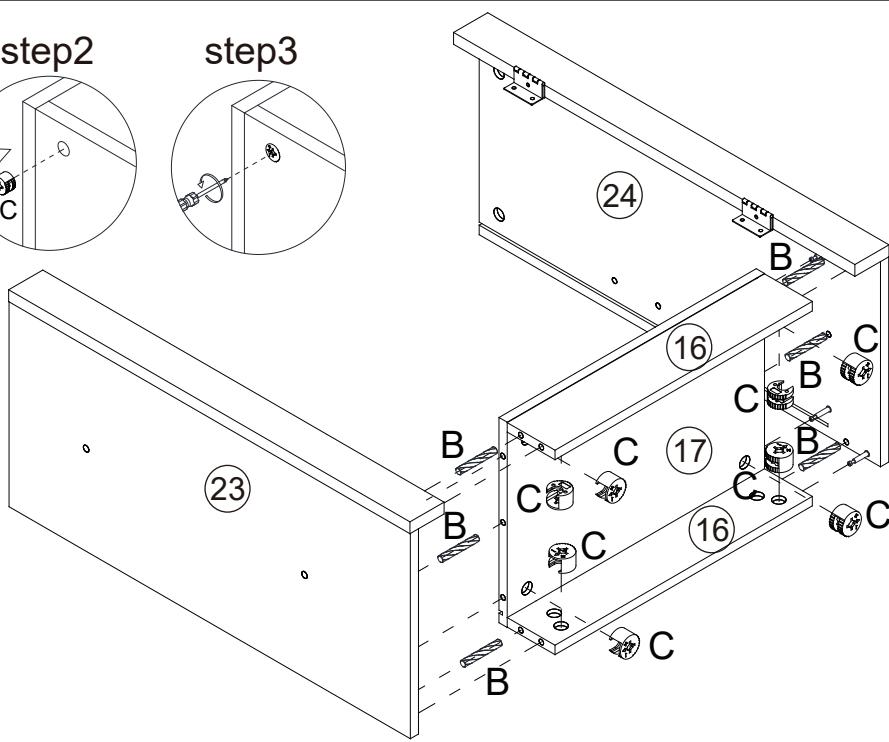


# Assembly Instructions


## Step 30

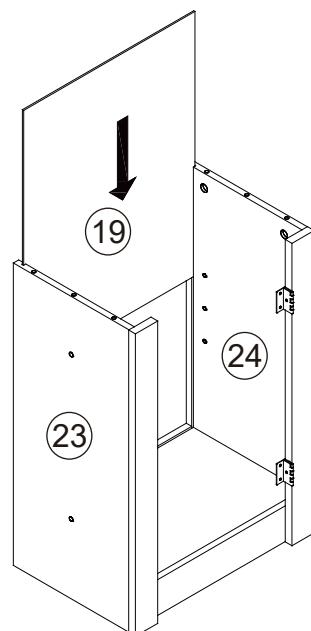


## Step 31

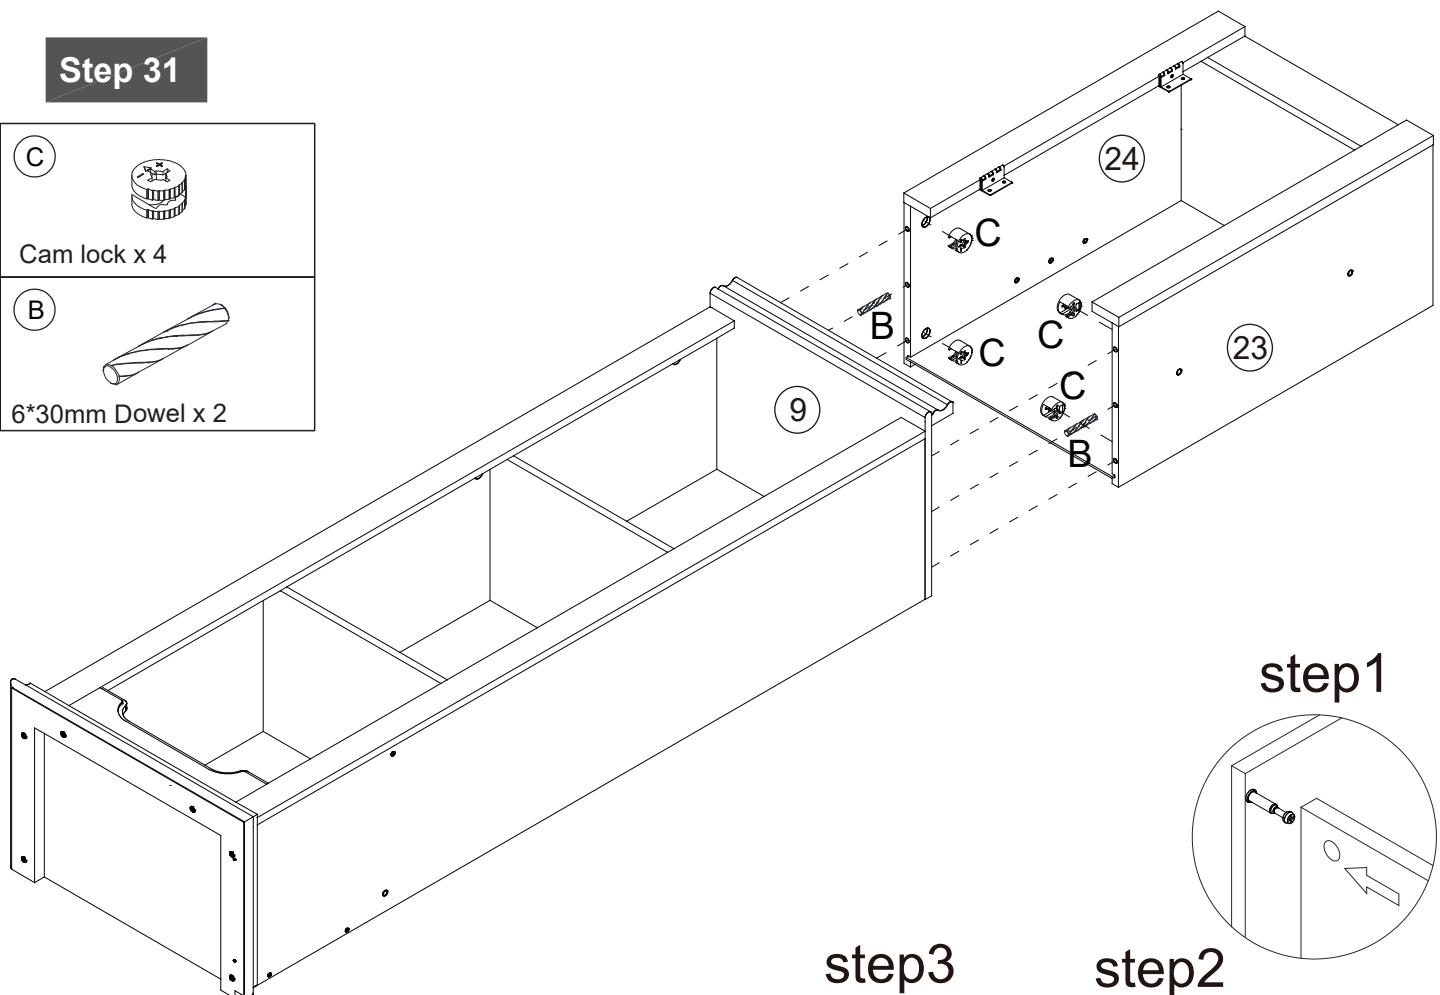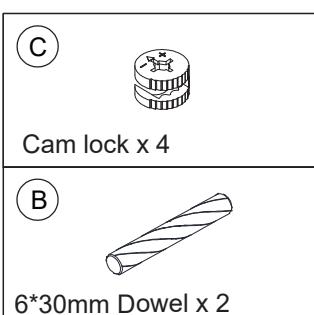


step1

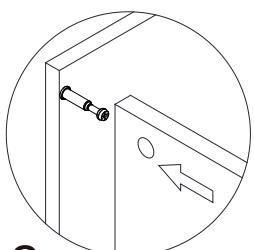

step3

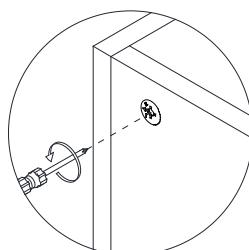


step2

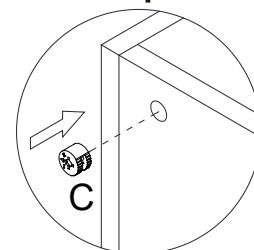

22


# Assembly Instructions

Step 32

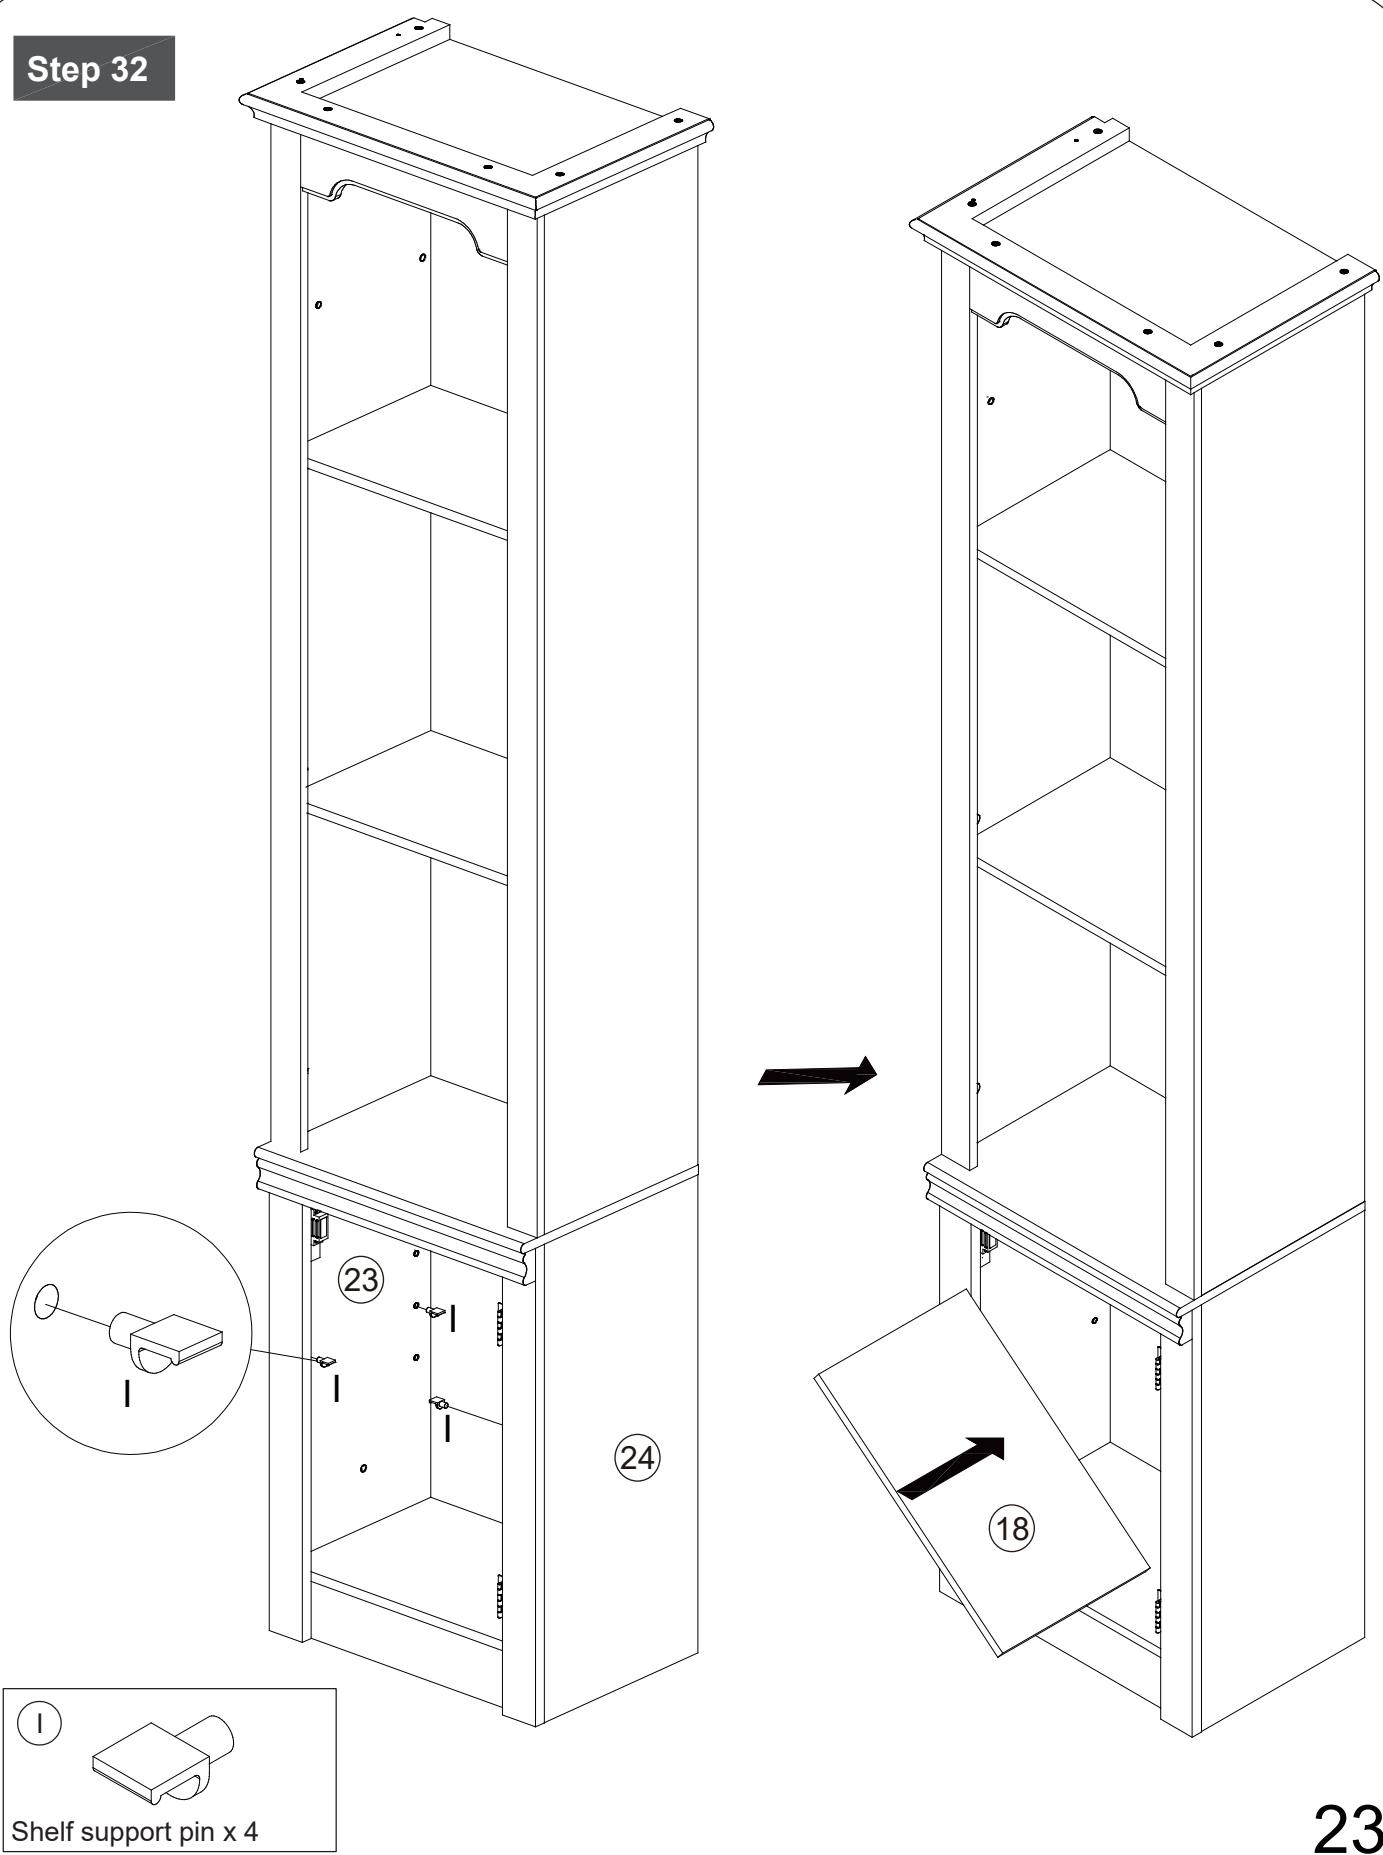


# Assembly Instructions

Step 33

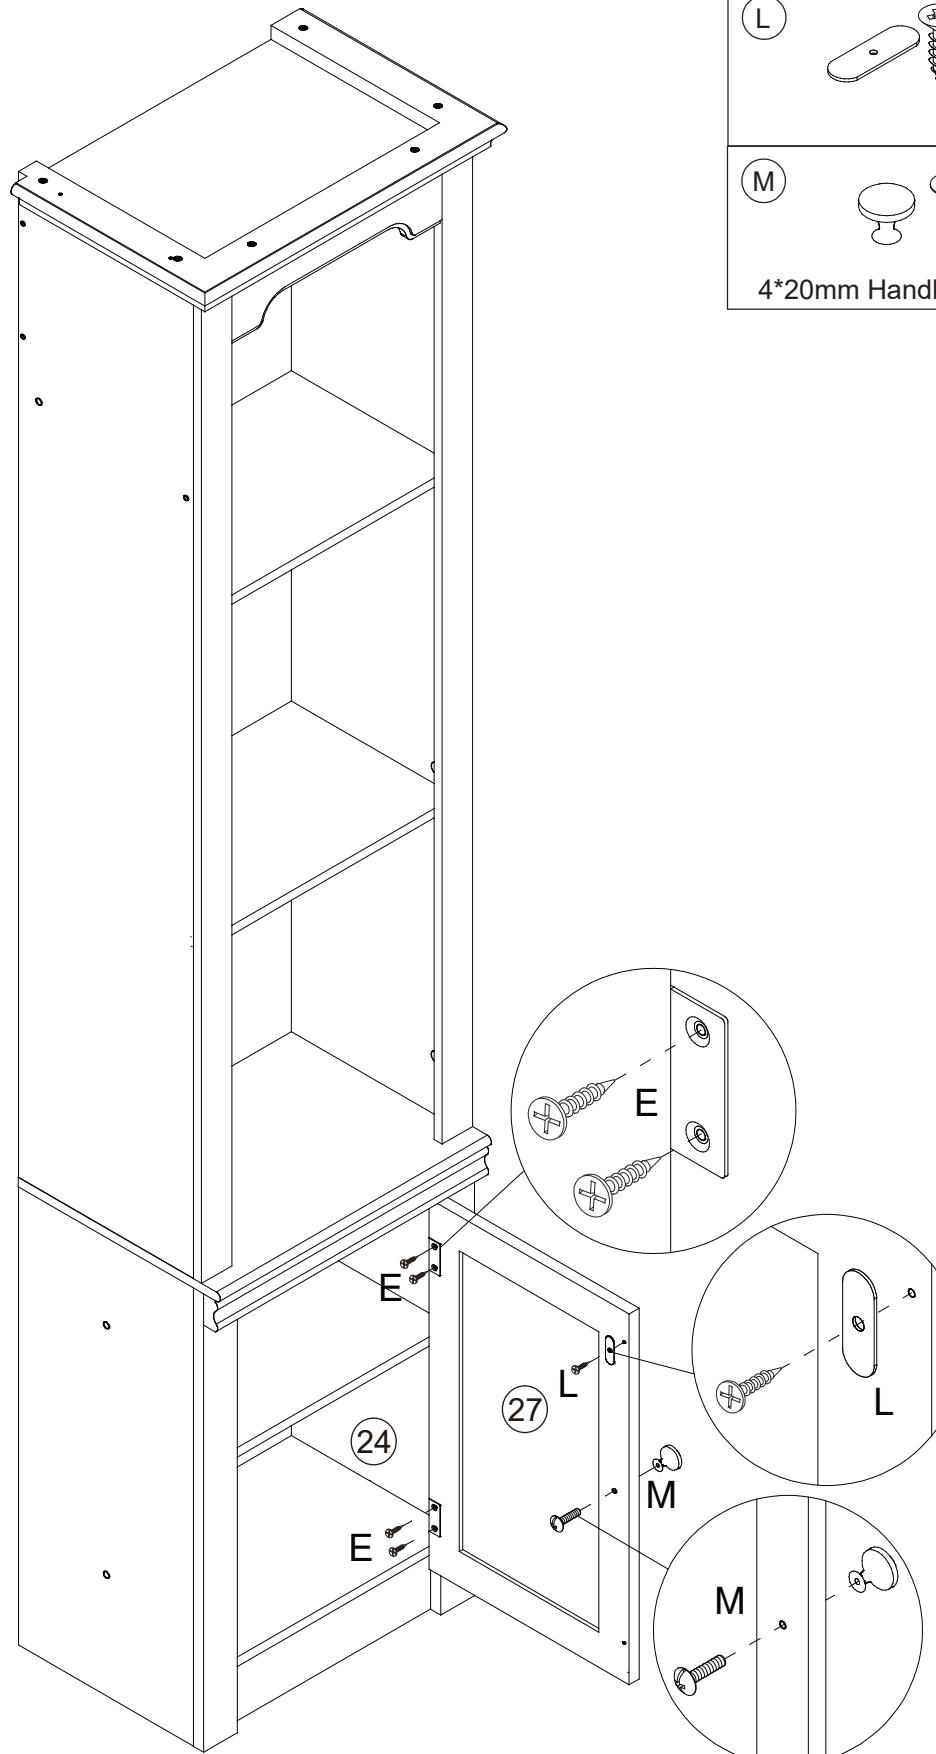


# Assembly Instructions

## Step 34

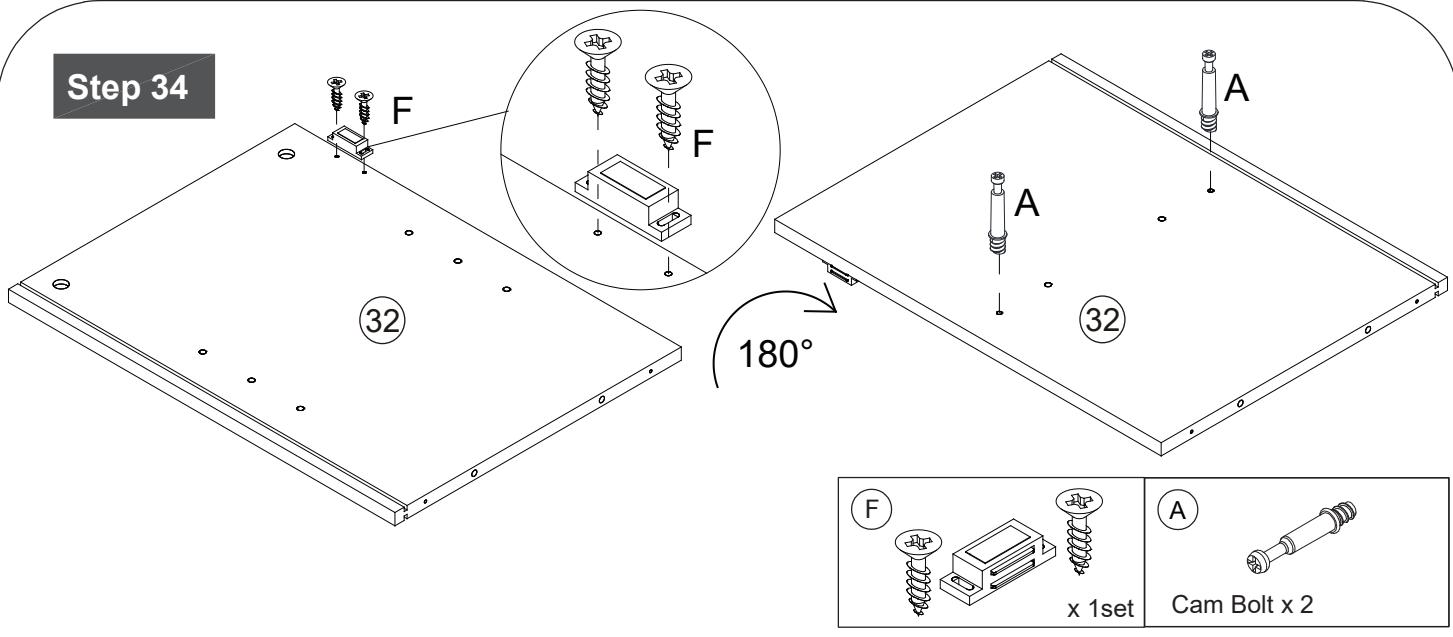


## Step 35

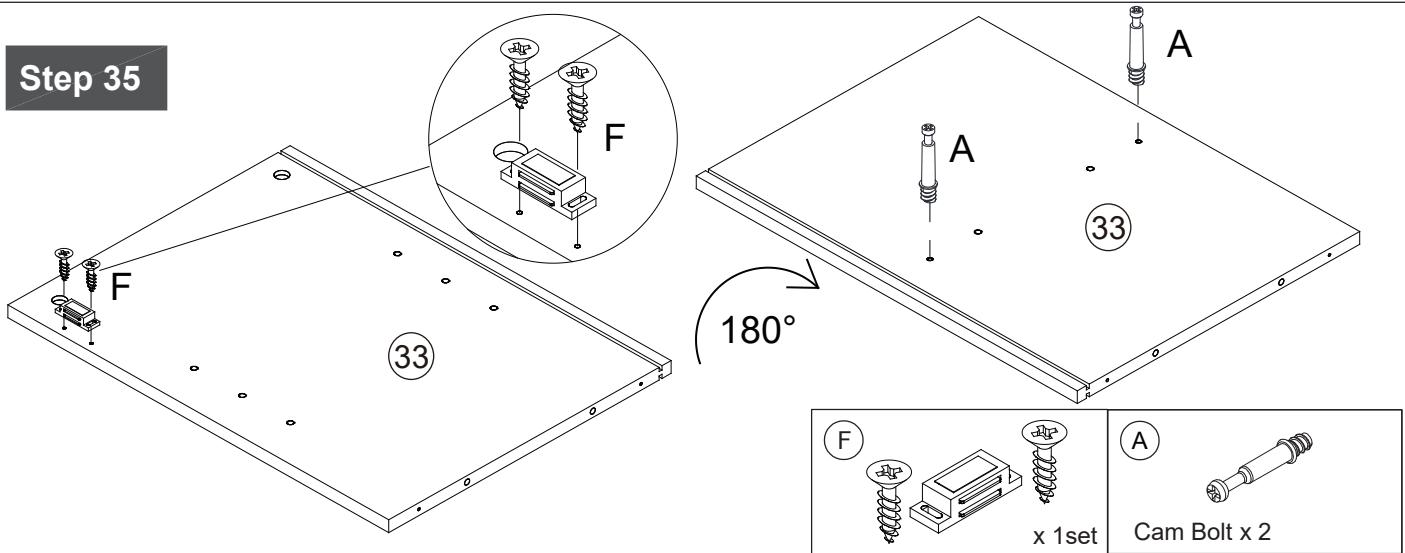


## Step 36



### step1

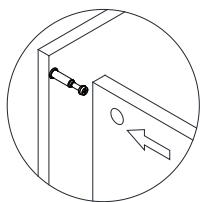

### step2

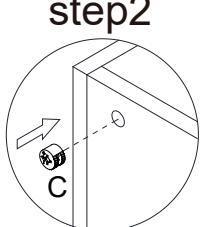


### step3

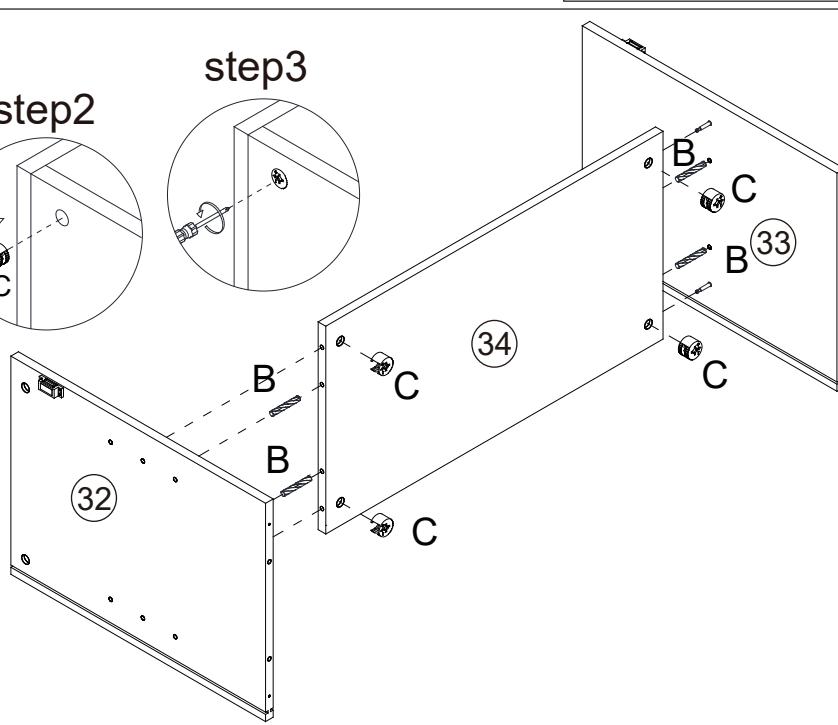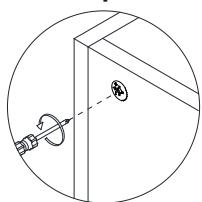


# Assembly Instructions

## Step 37

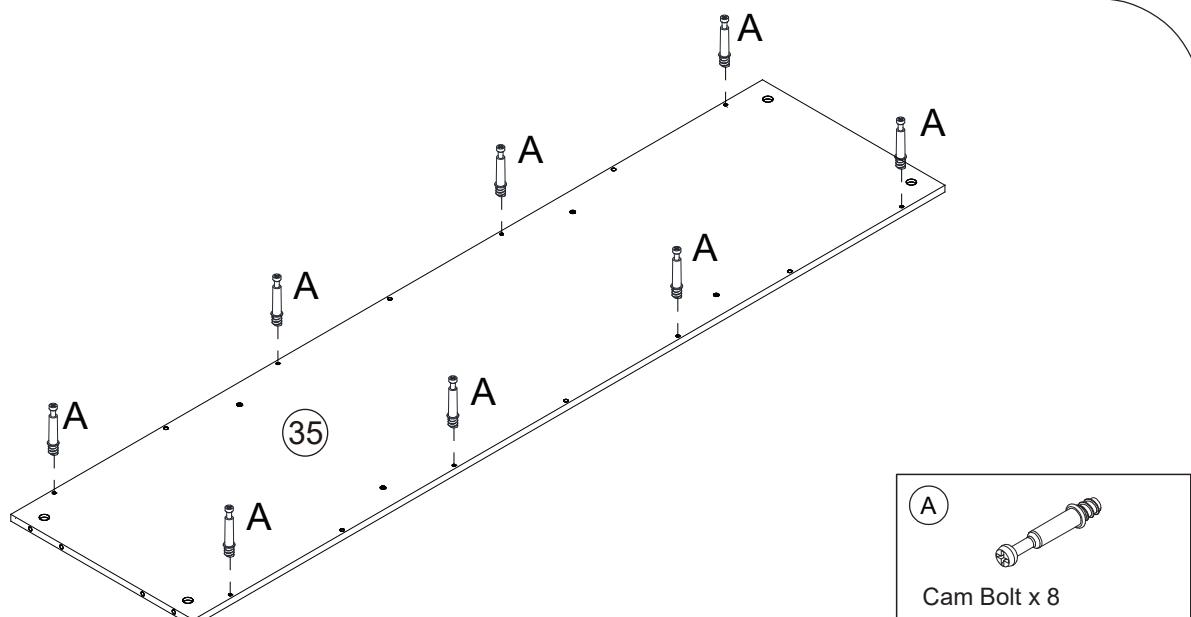


## Step 38

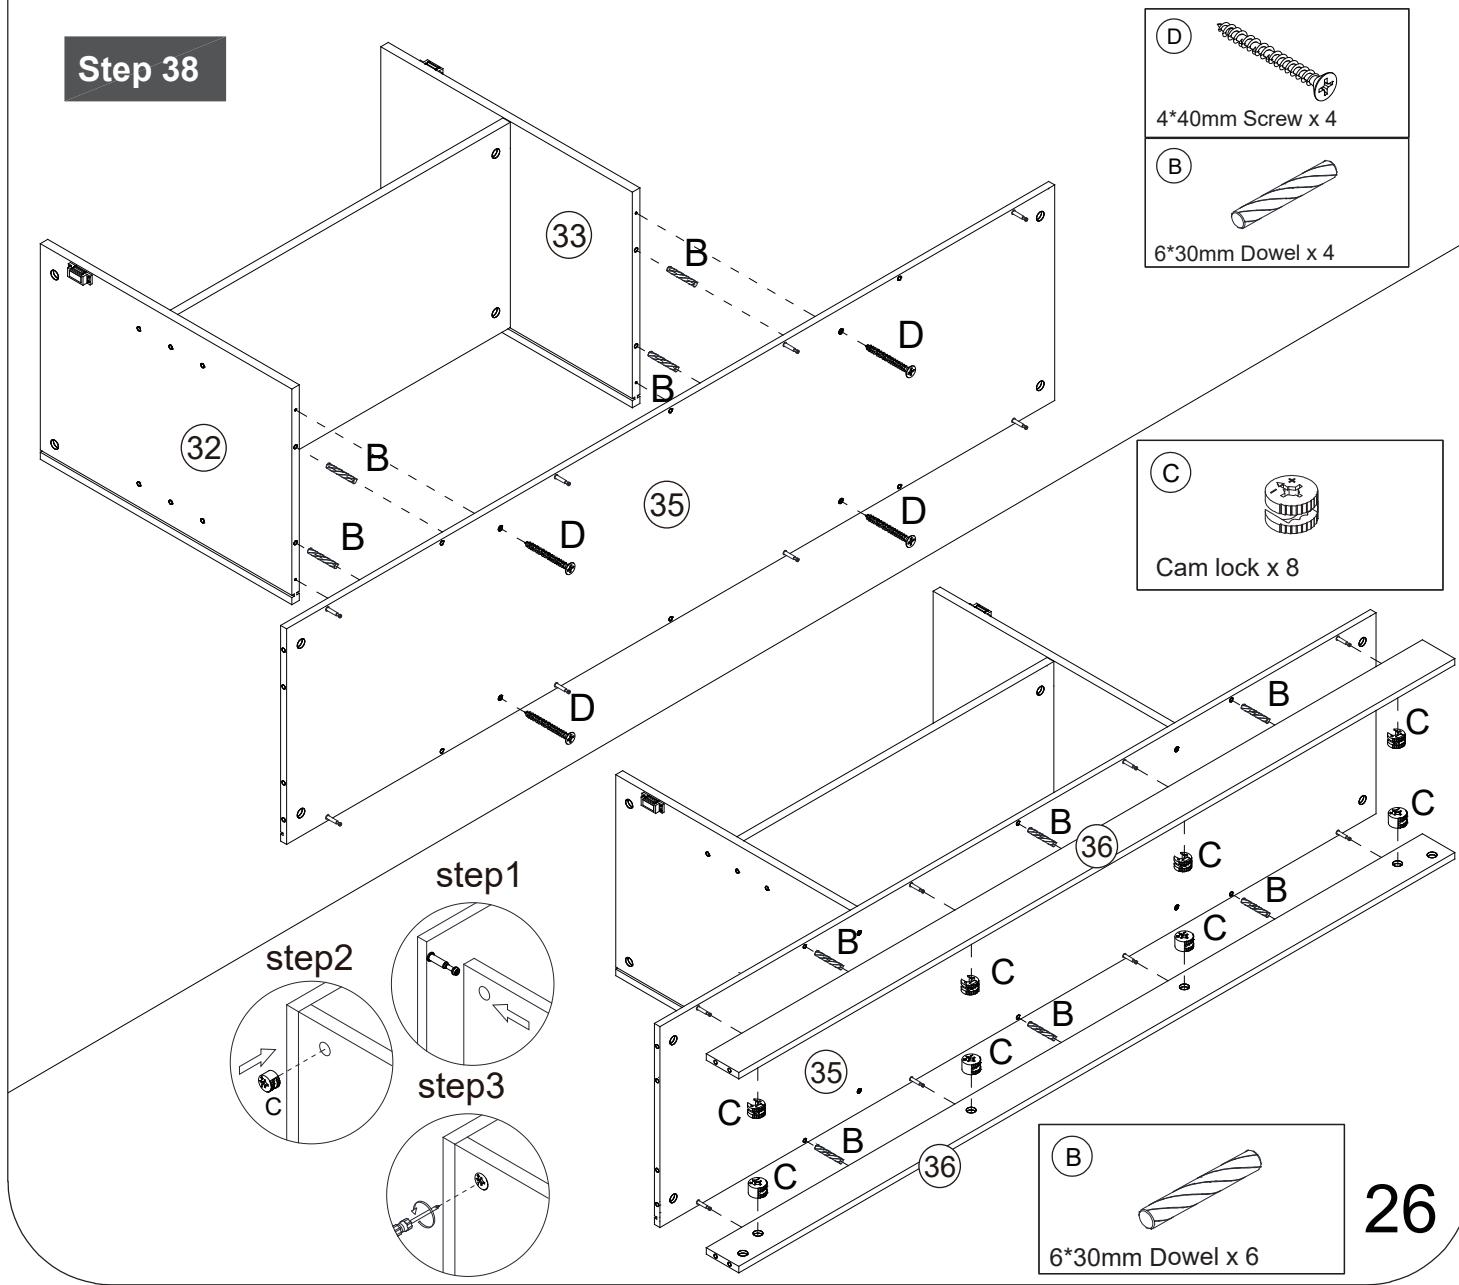


# Assembly Instructions


## Step 39

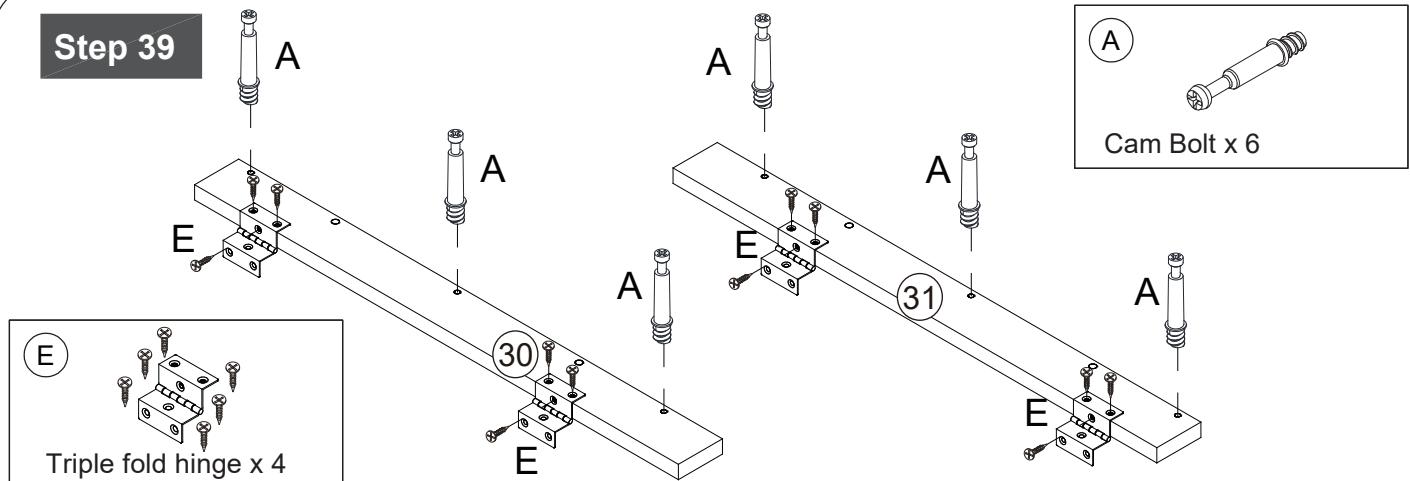

## Step 40

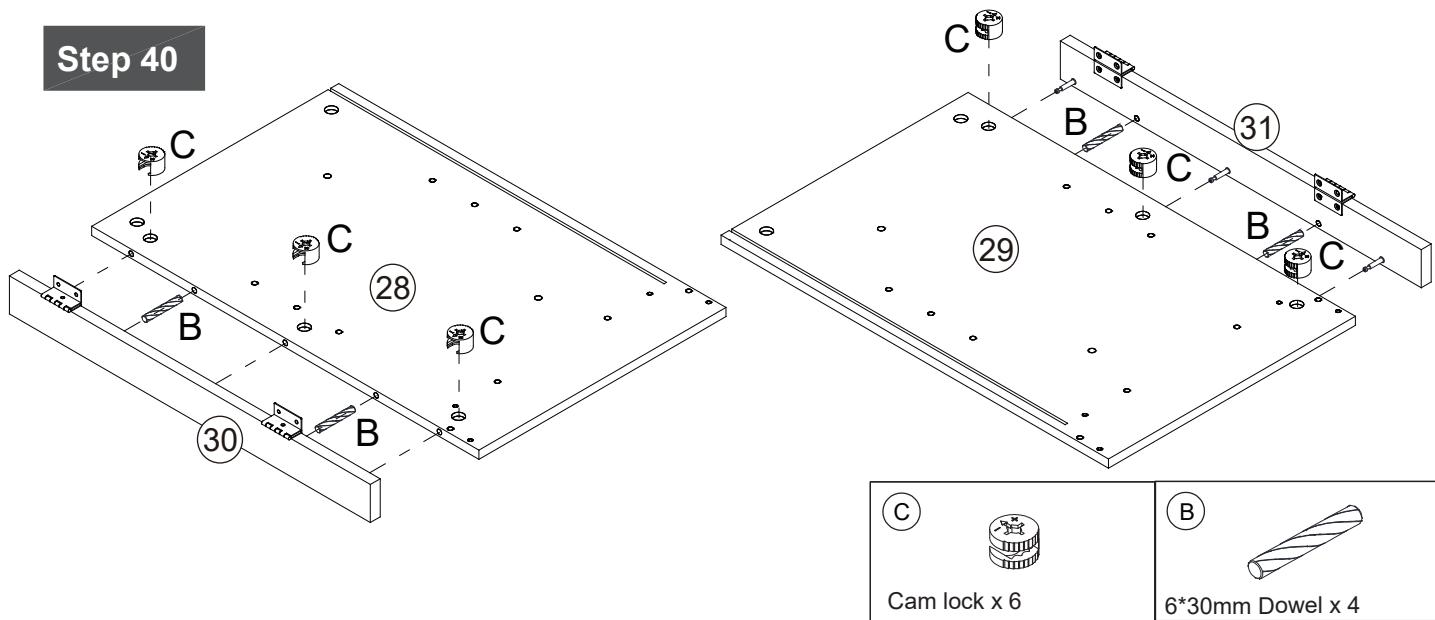


## Step 41

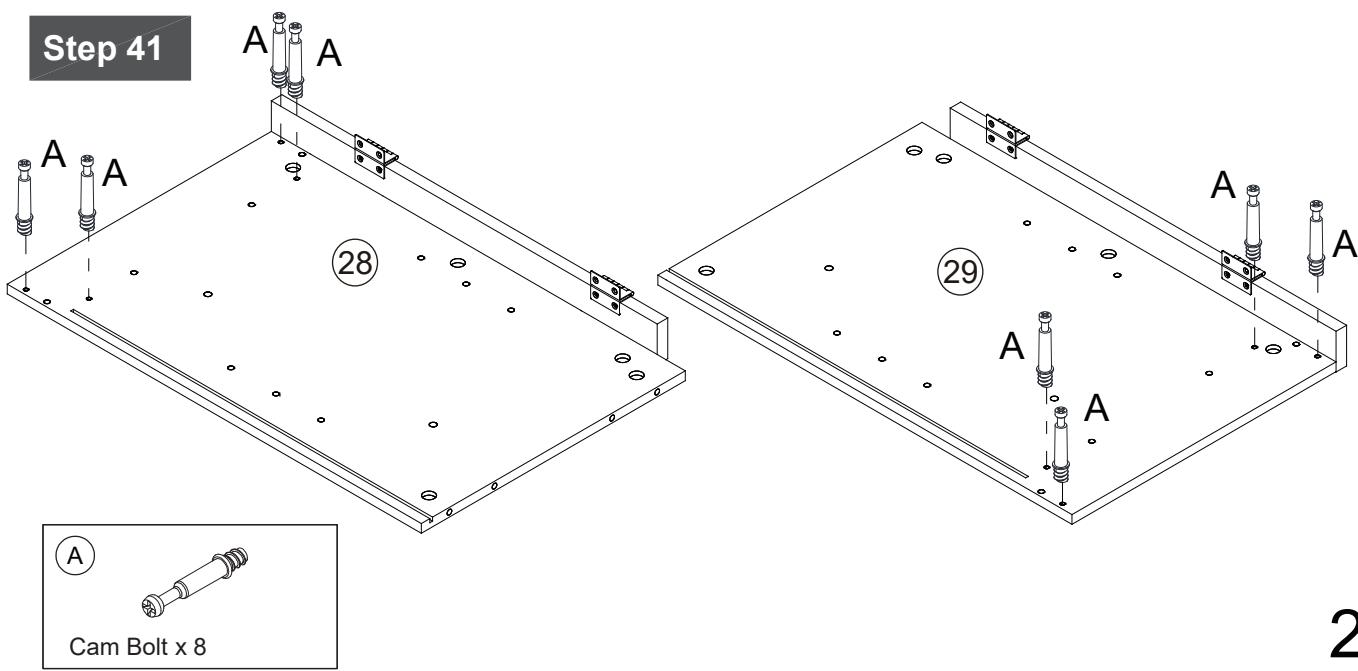


# Assembly Instructions

## Step 42

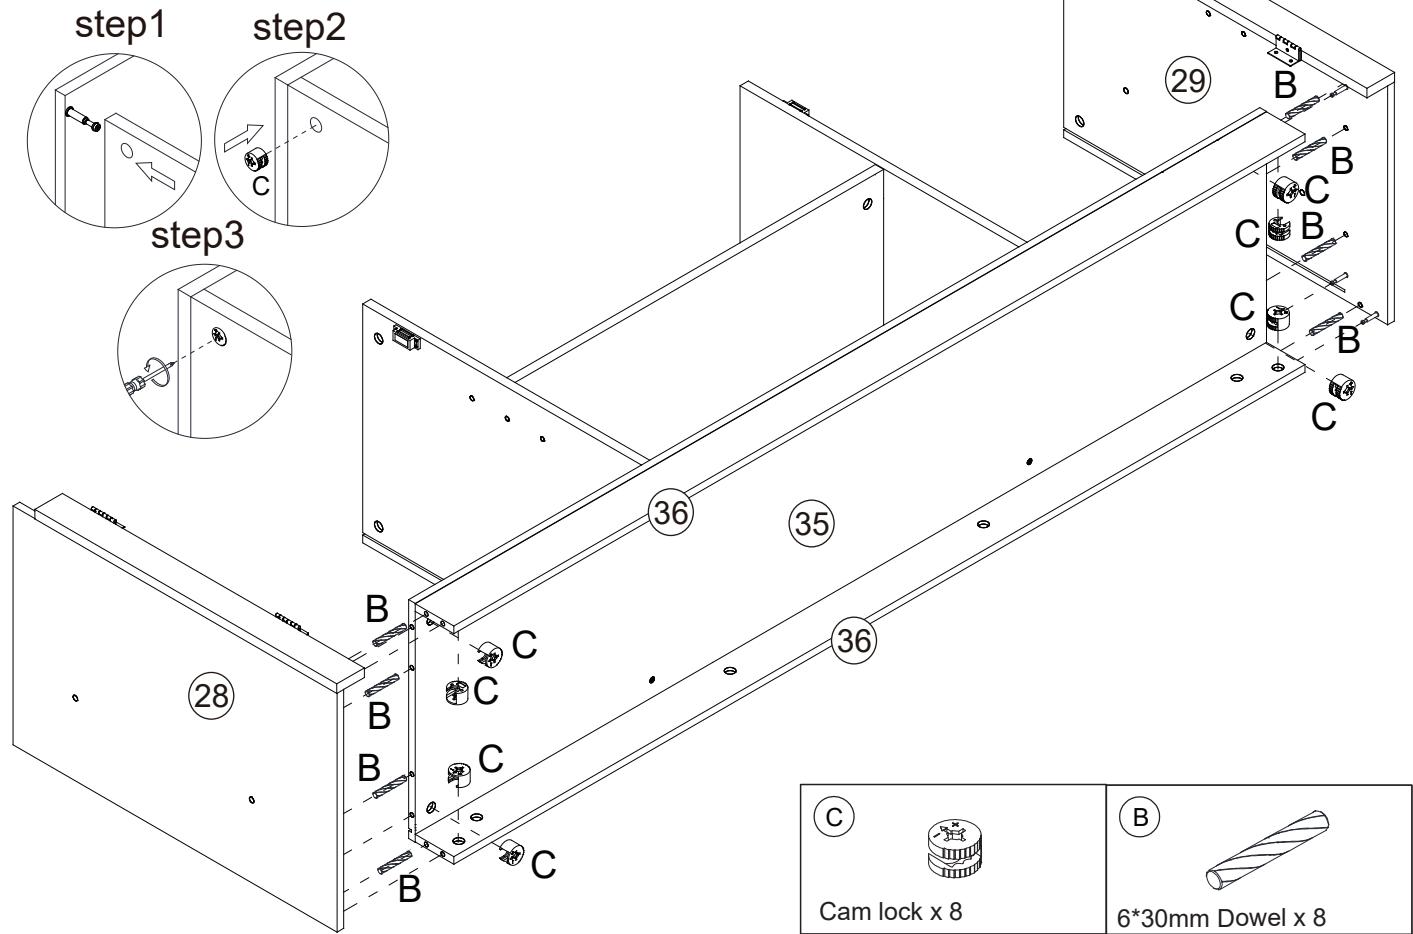


## Step 43


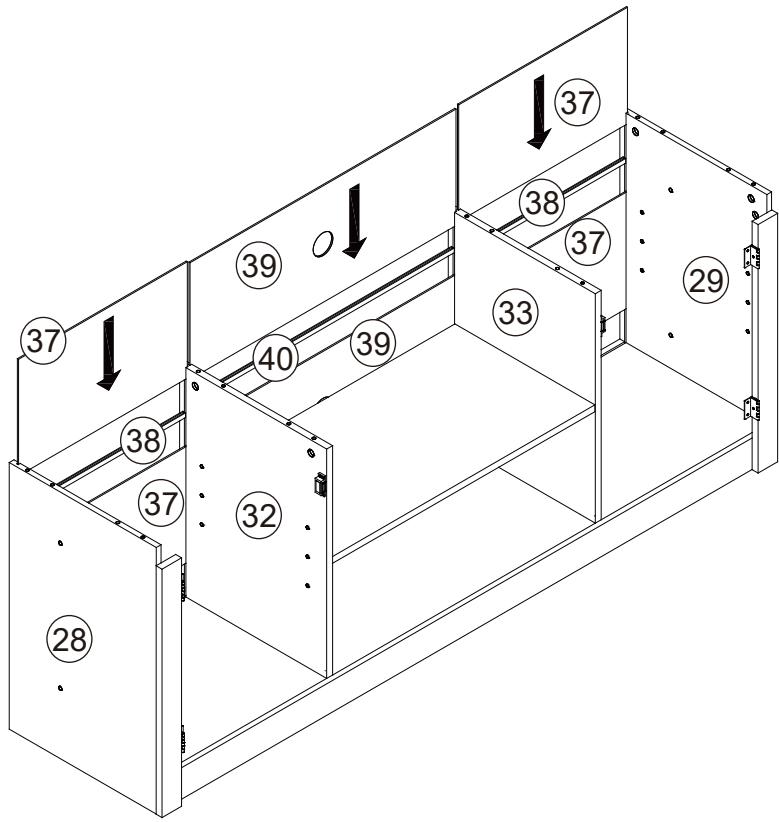


# Assembly Instructions

## Step 44

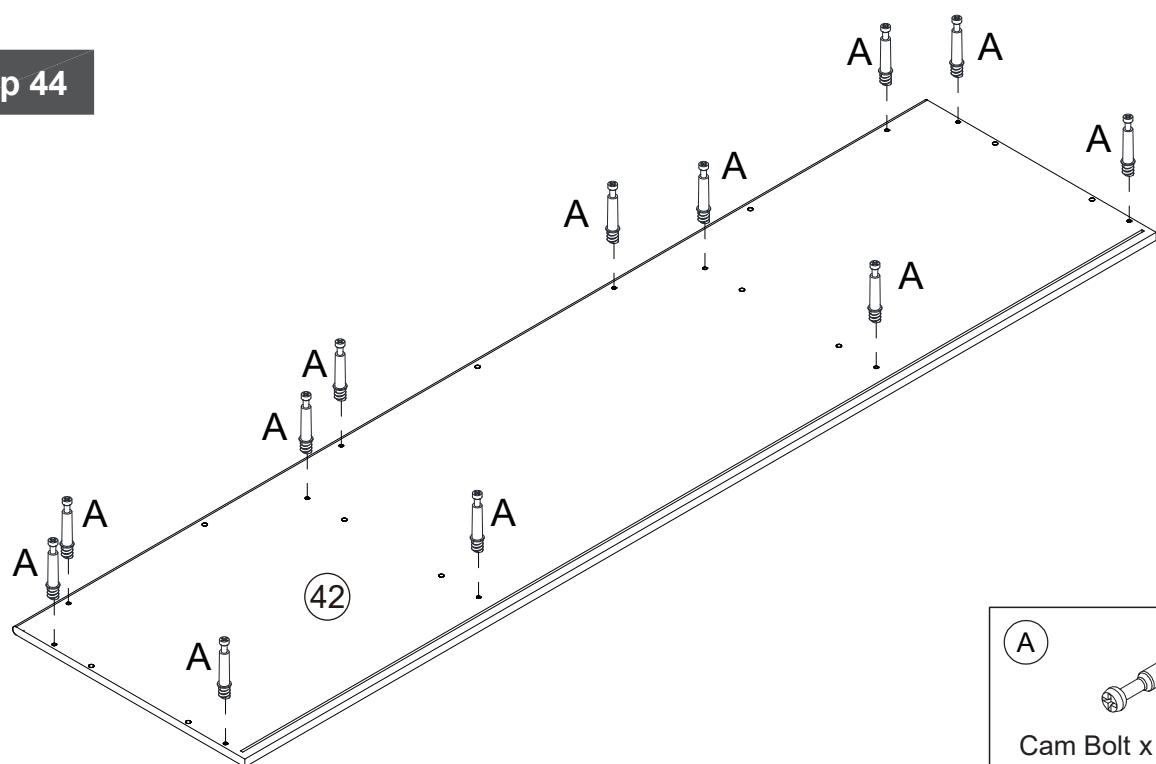


## Step 45

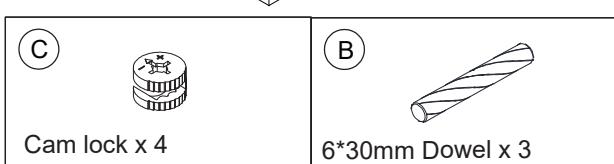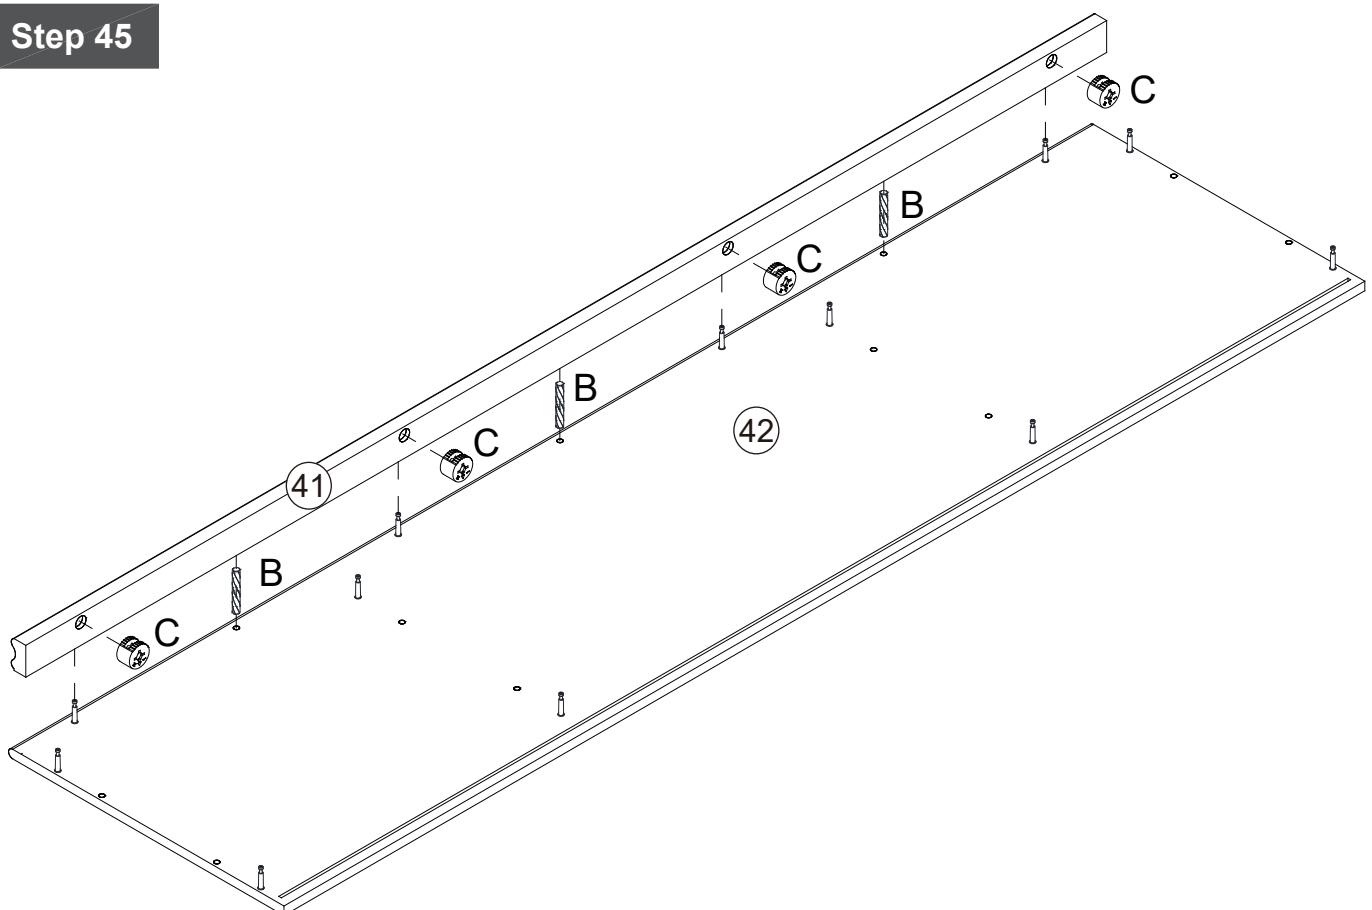


# Assembly Instructions

## Step 46

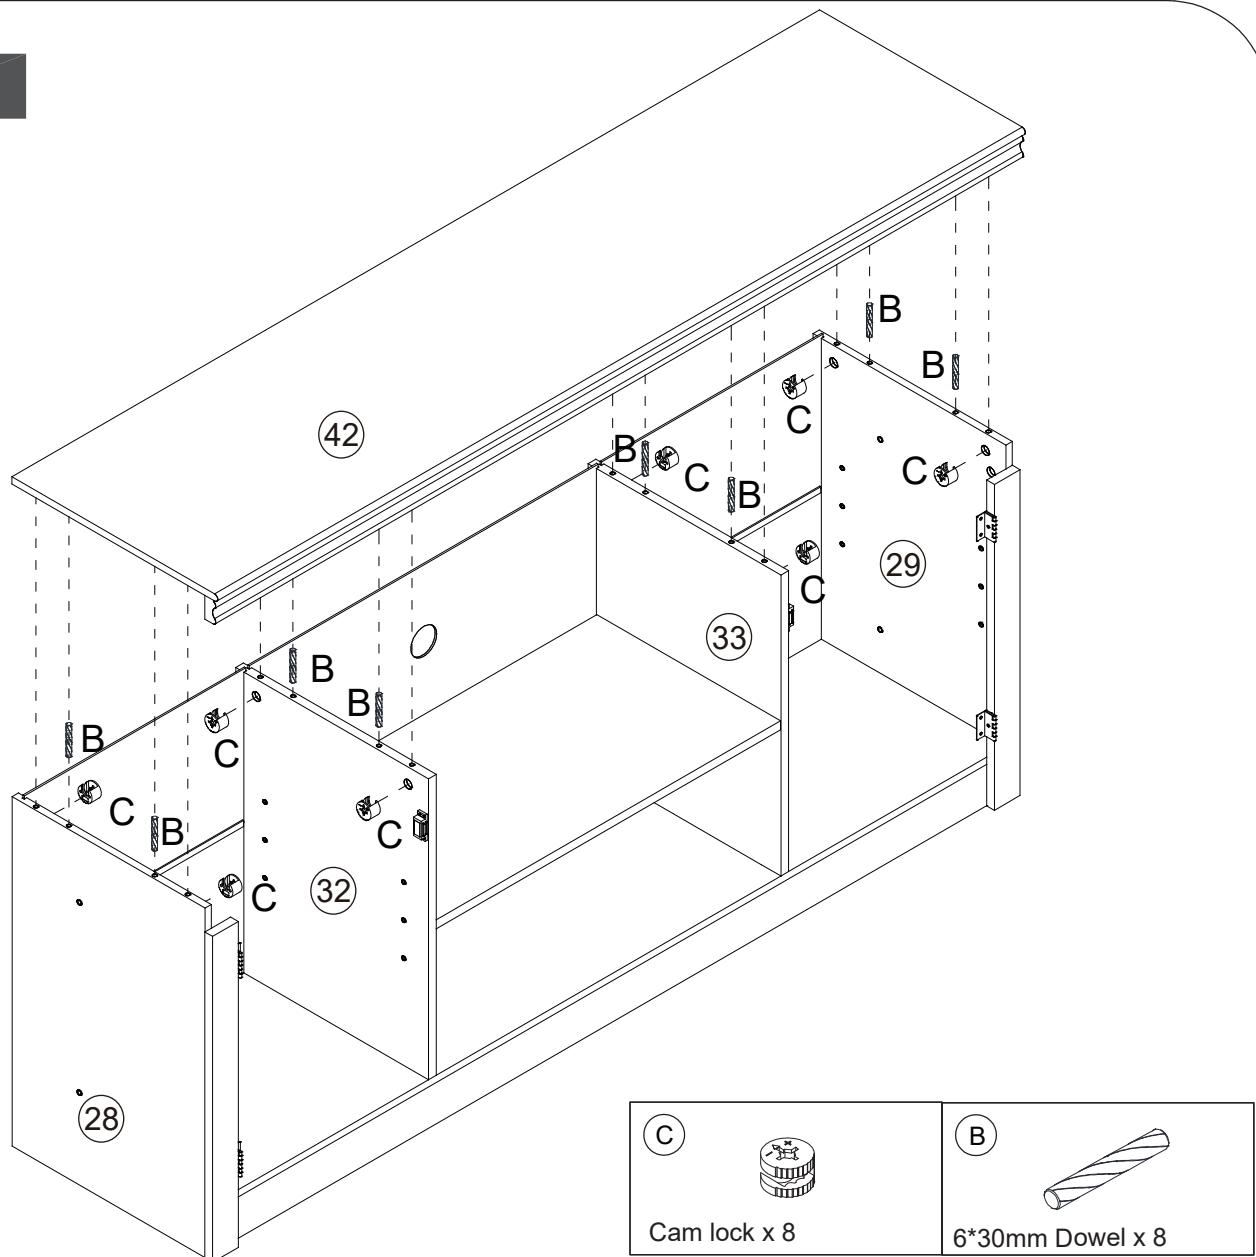

## Step 47


(A)		Cam Bolt x 5
(B)		6*30mm Dowel x 4
(C)		Cam lock x 5

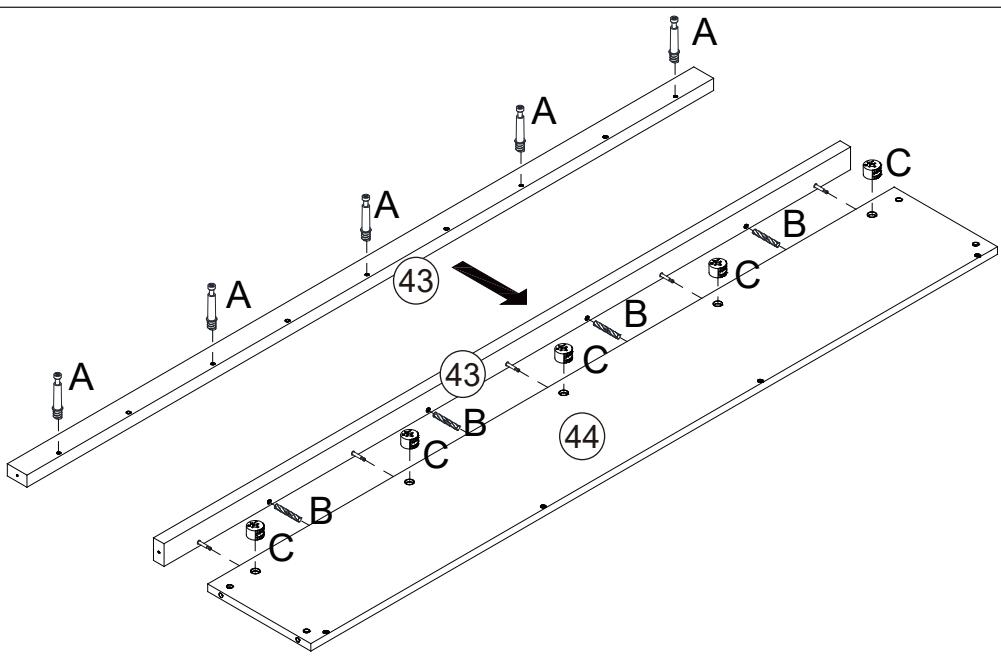

# Assembly Instructions

## Step 48

Please place the left cabinet, right cabinet and middle cabinet closely together as shown in the figure. First tighten the screws of the upper cabinet, then align the screw holes of the lower cabinet and tighten them one by one.

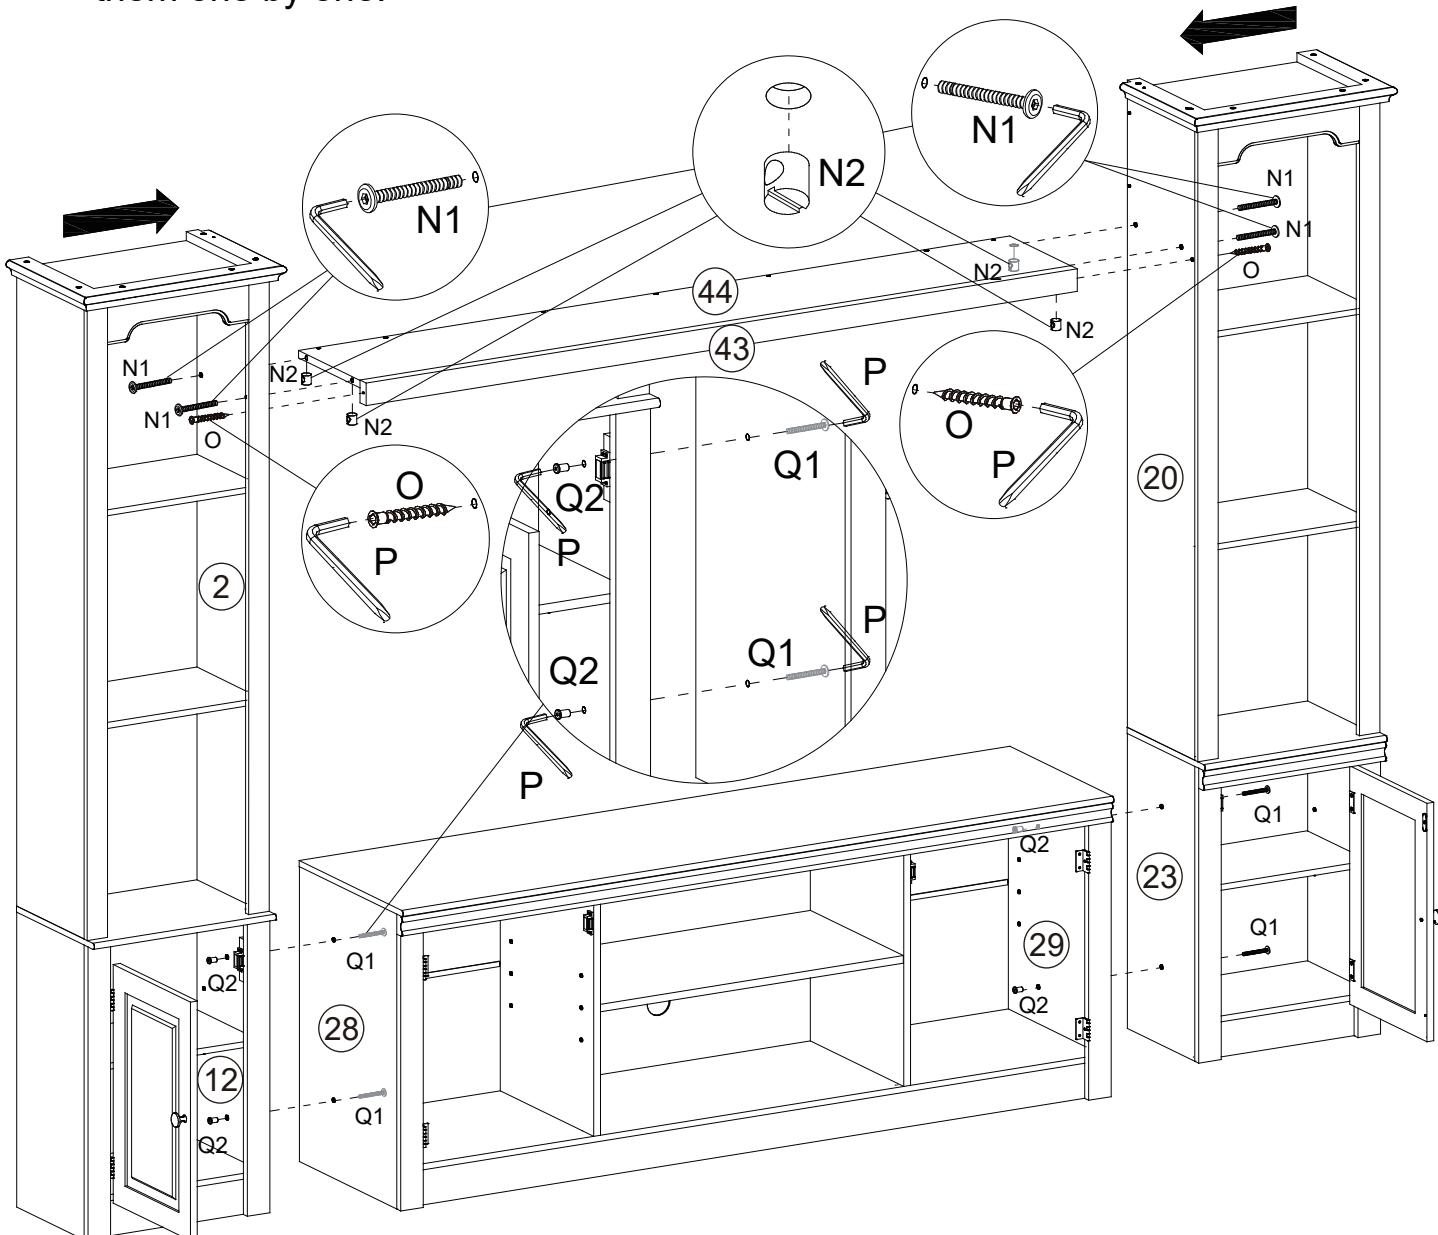


 Q	 Q2	 Q1
6*20mm Screw x 4		

 N	 N1	 N2
6*40mm Screw x 4		

 O	 P
6*40mm Screw x 2	


# Assembly Instructions

## Step 49



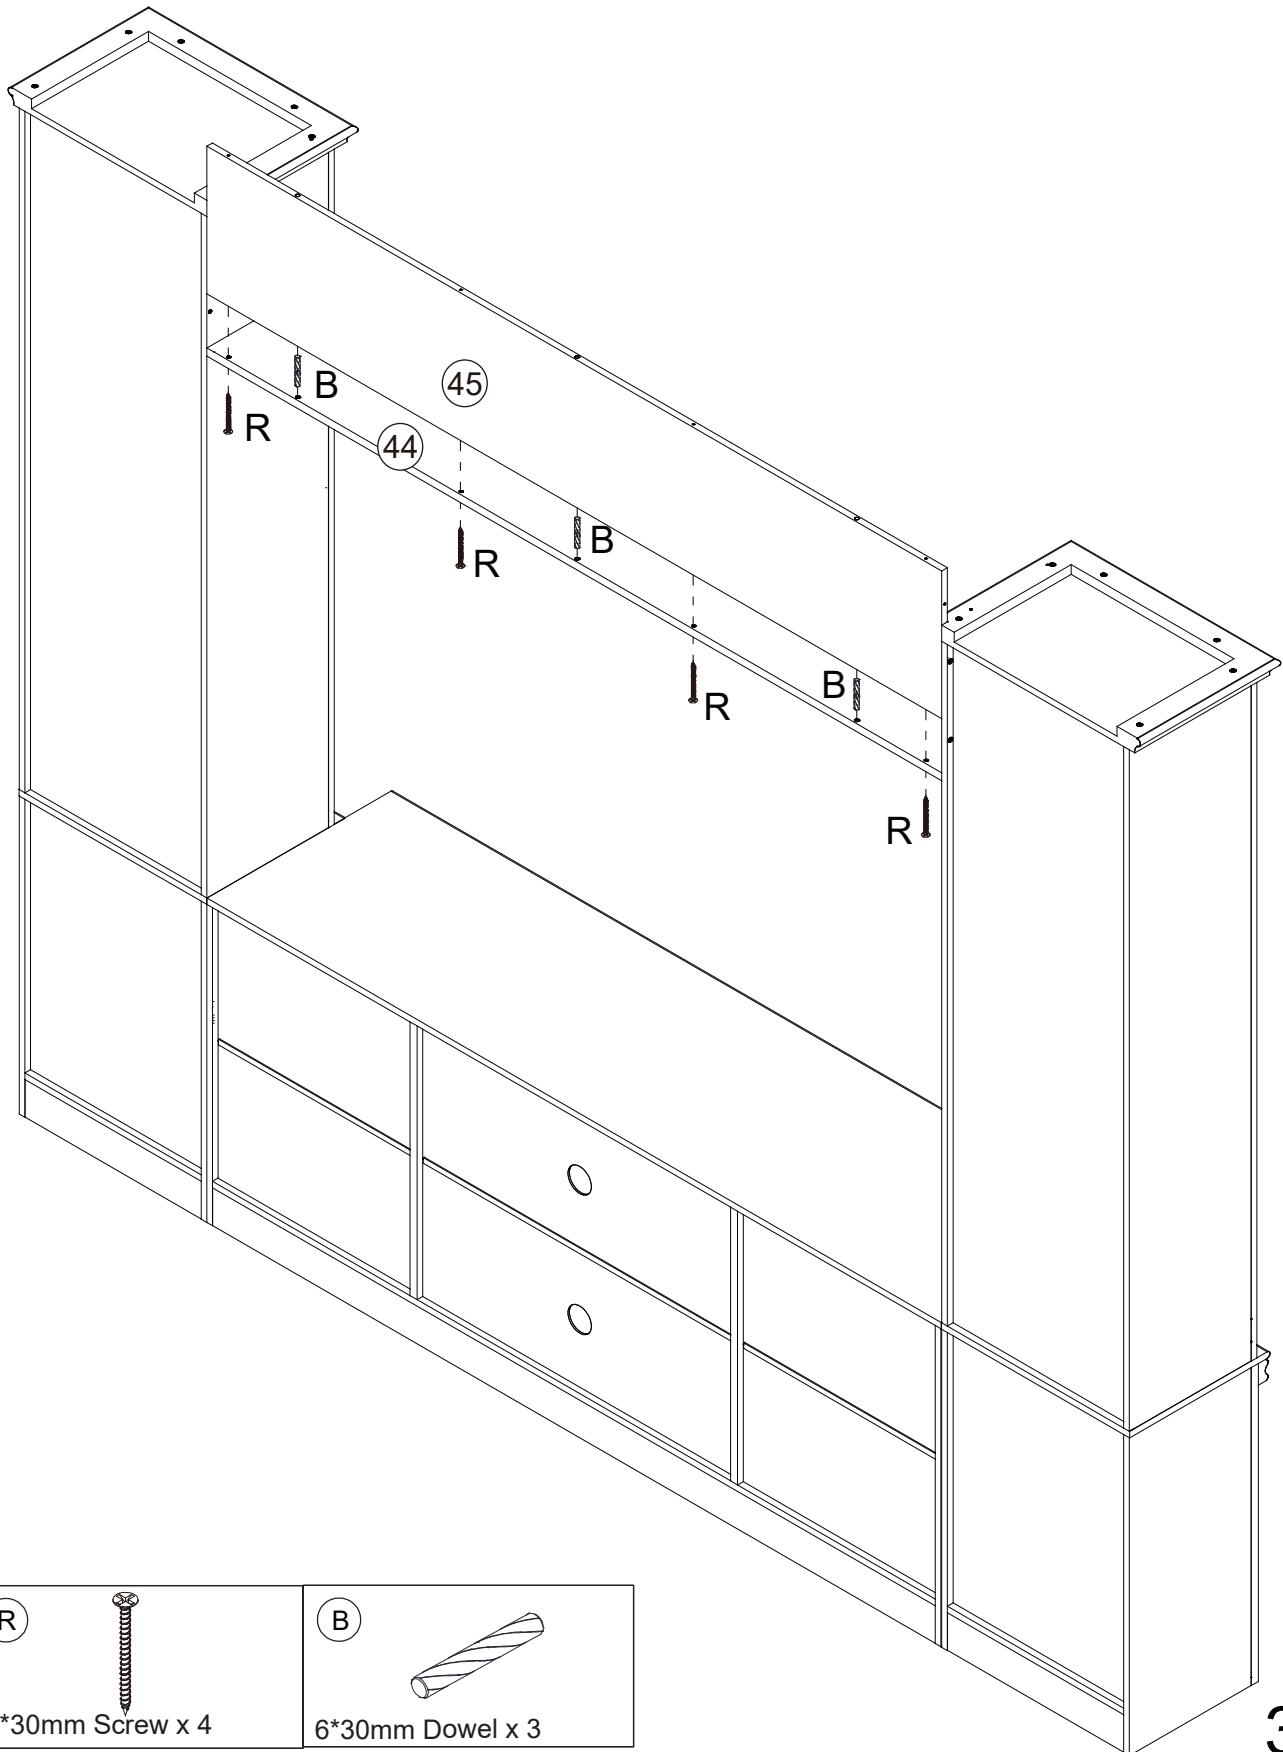


# Assembly Instructions

## Step 50

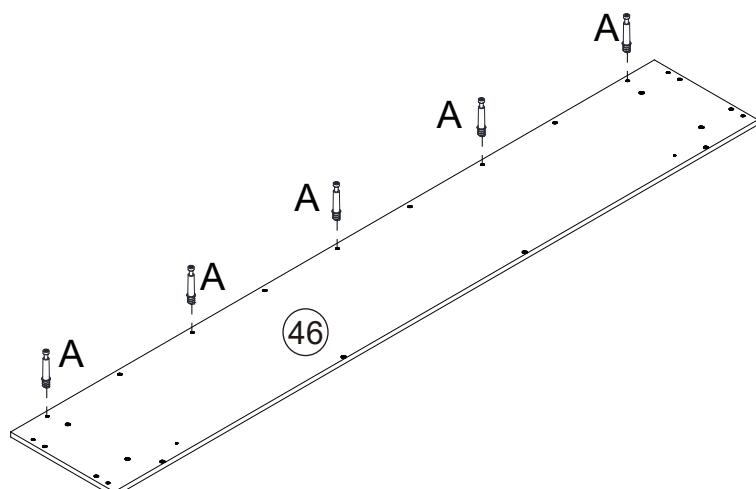

## Step 51

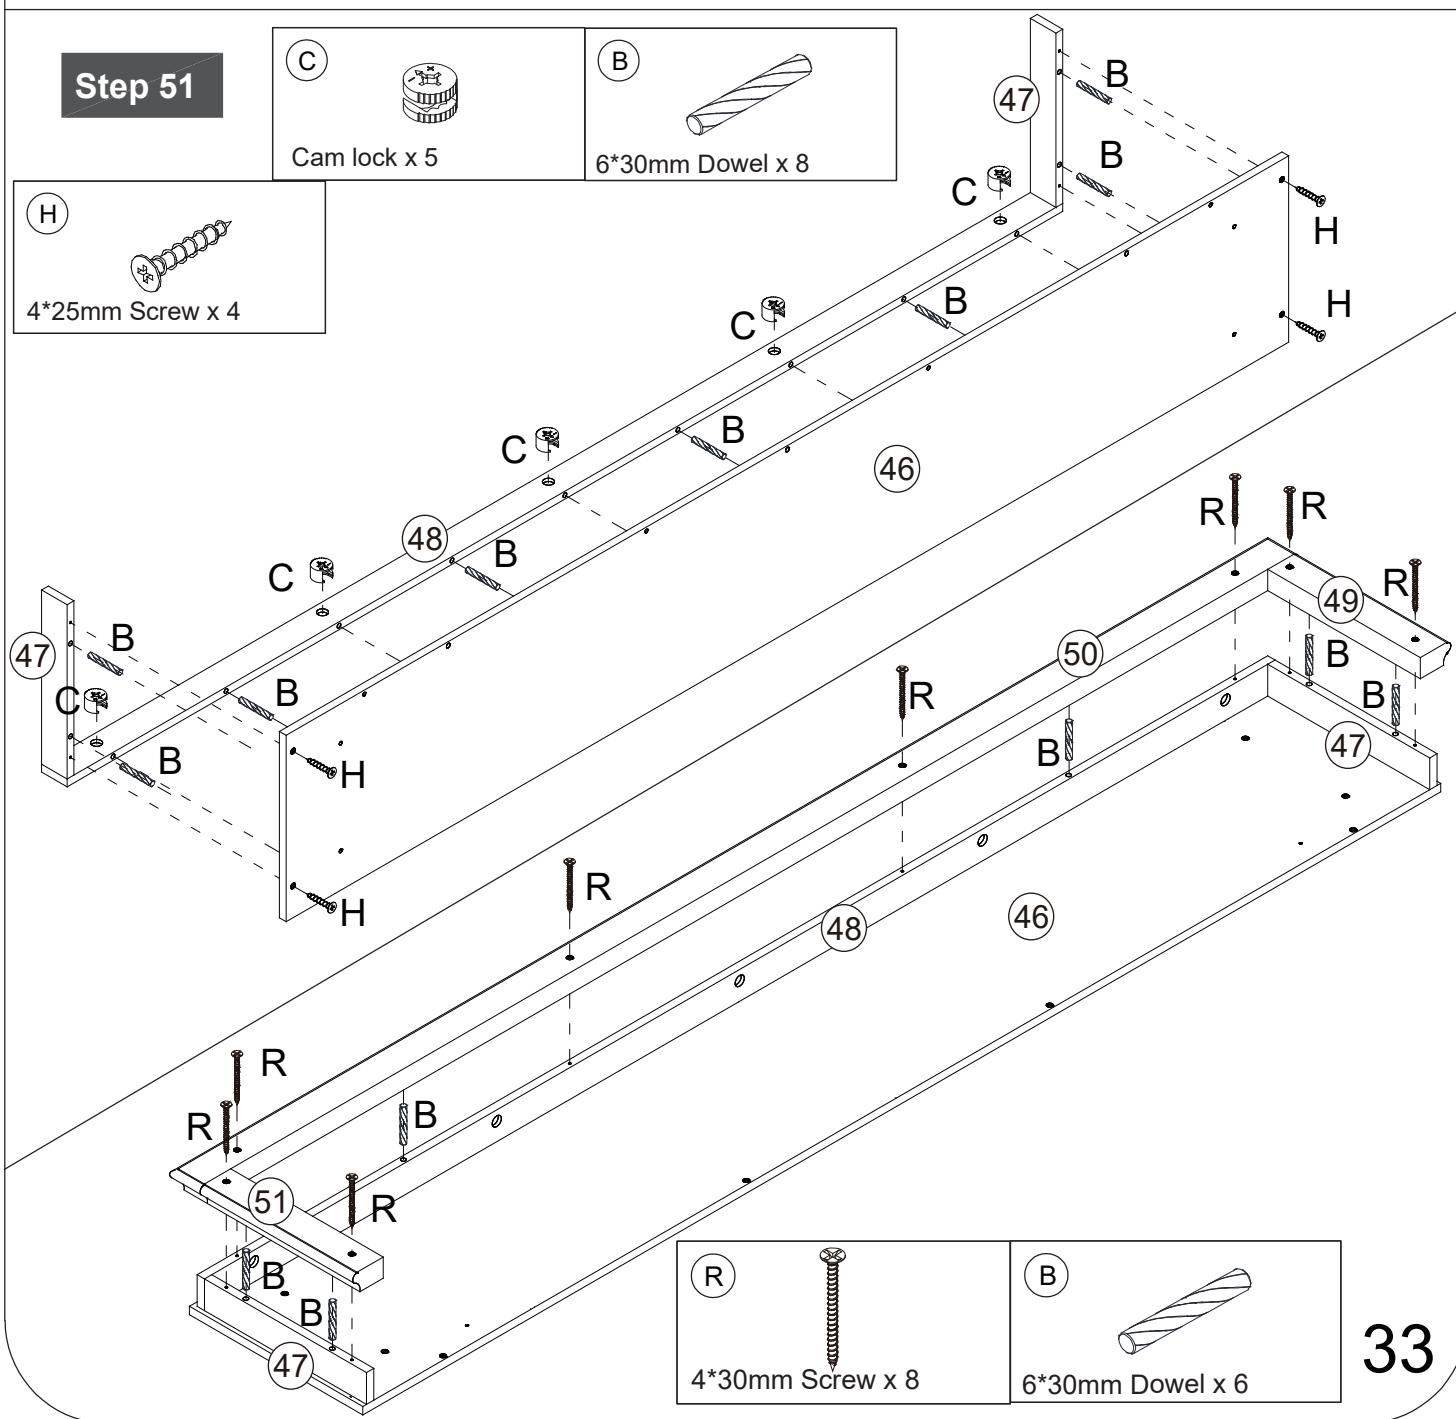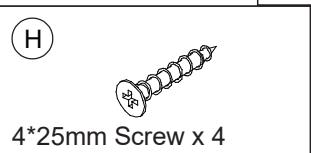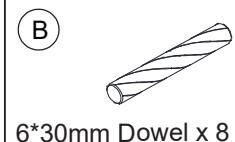

(R)





4\*30mm Screw x 8

(B)

6\*30mm Dowel x 6



# Assembly Instructions

## Step 52

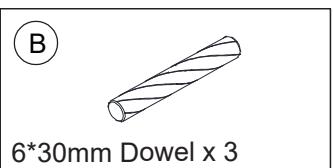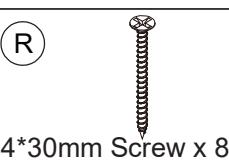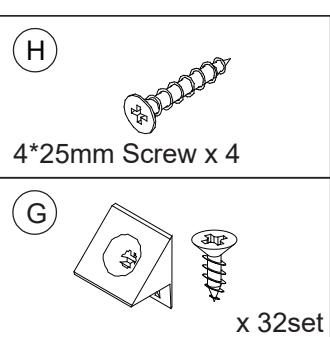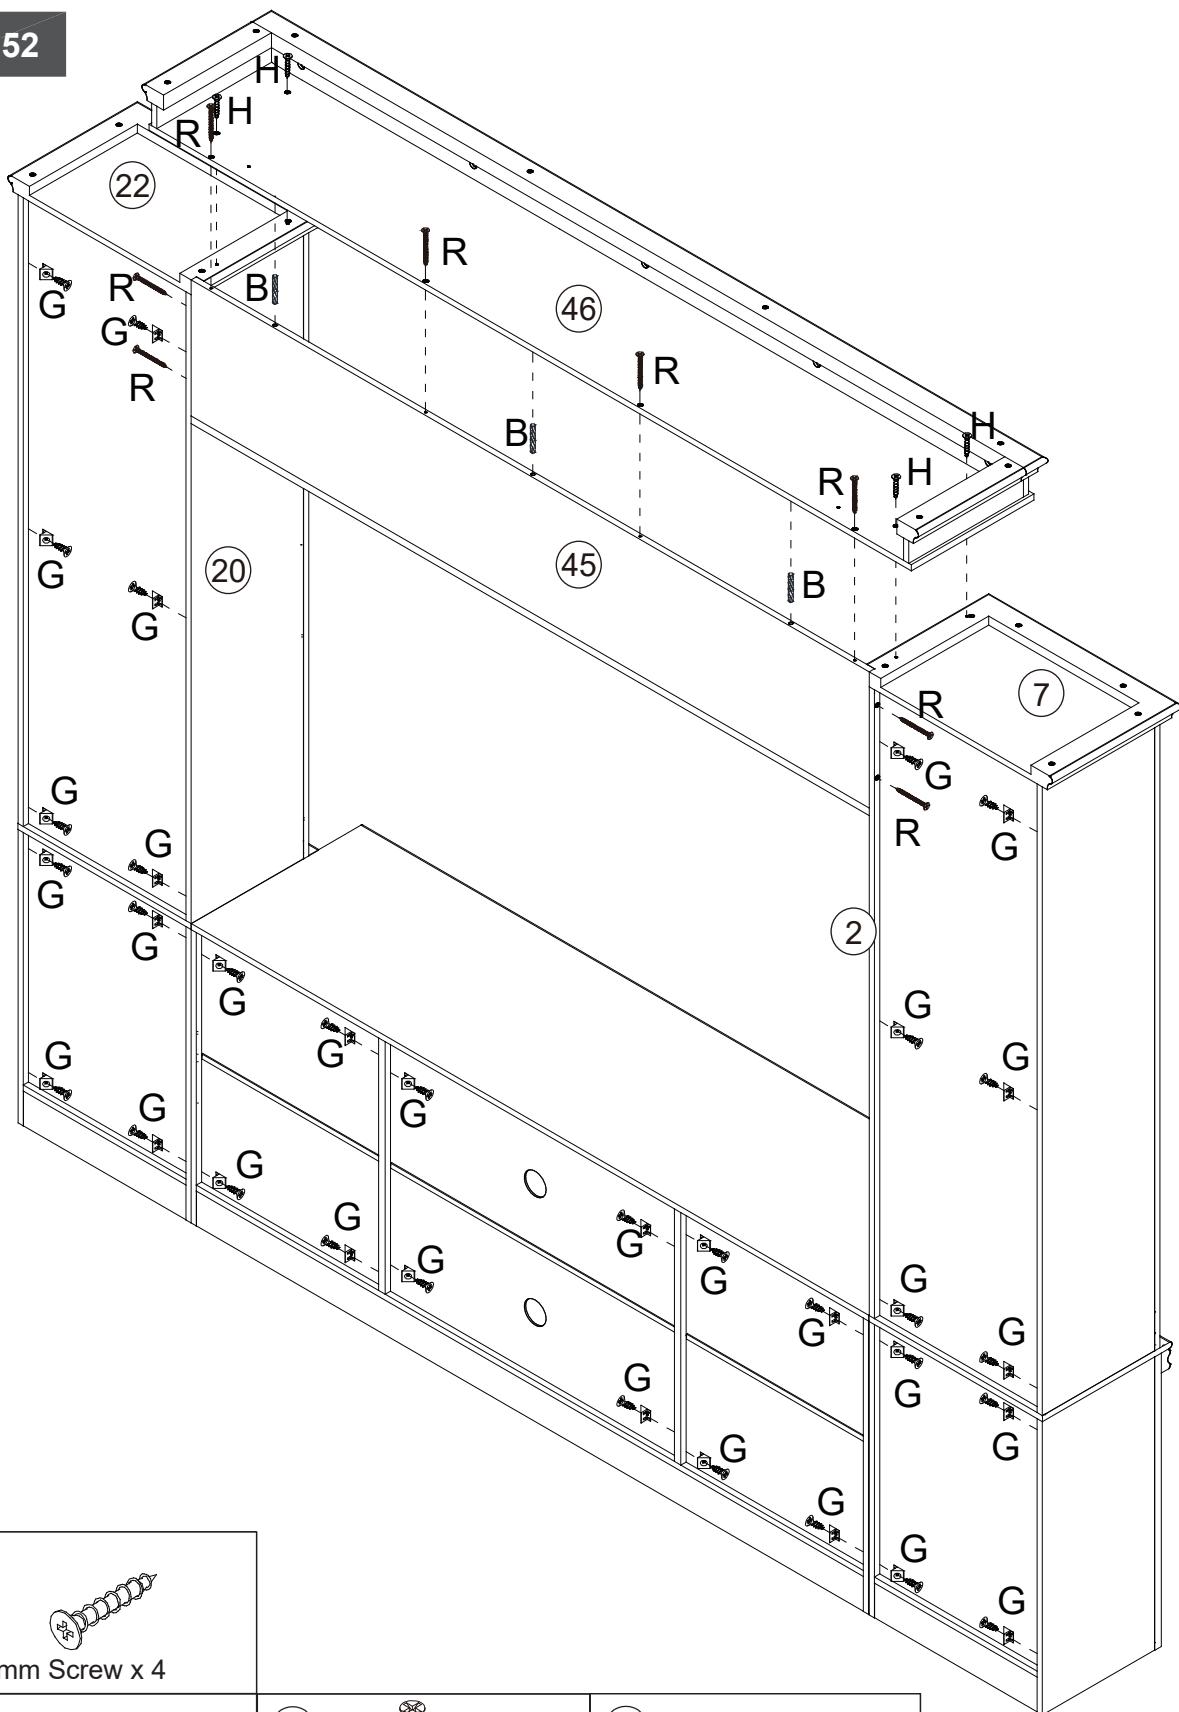


# Assembly Instructions

## Step 53

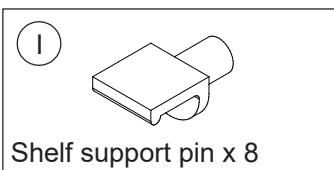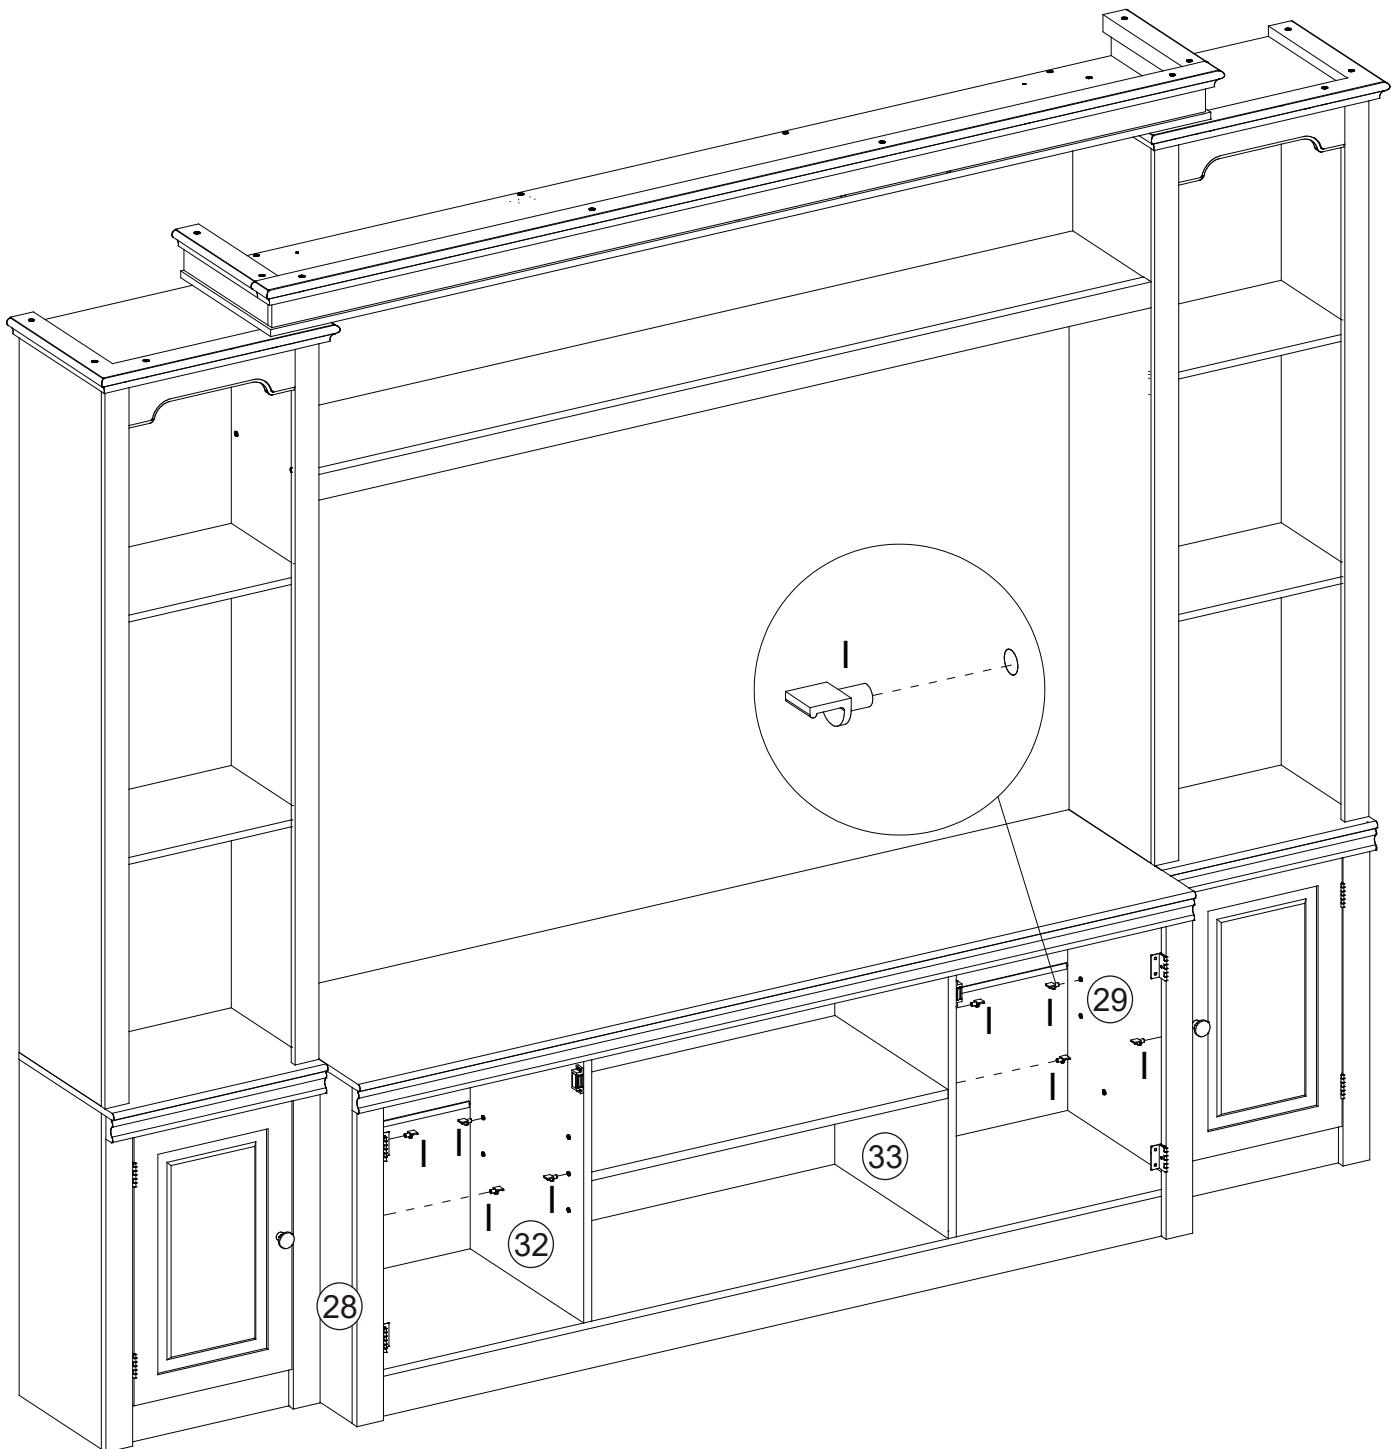


# Assembly Instructions

Step 54

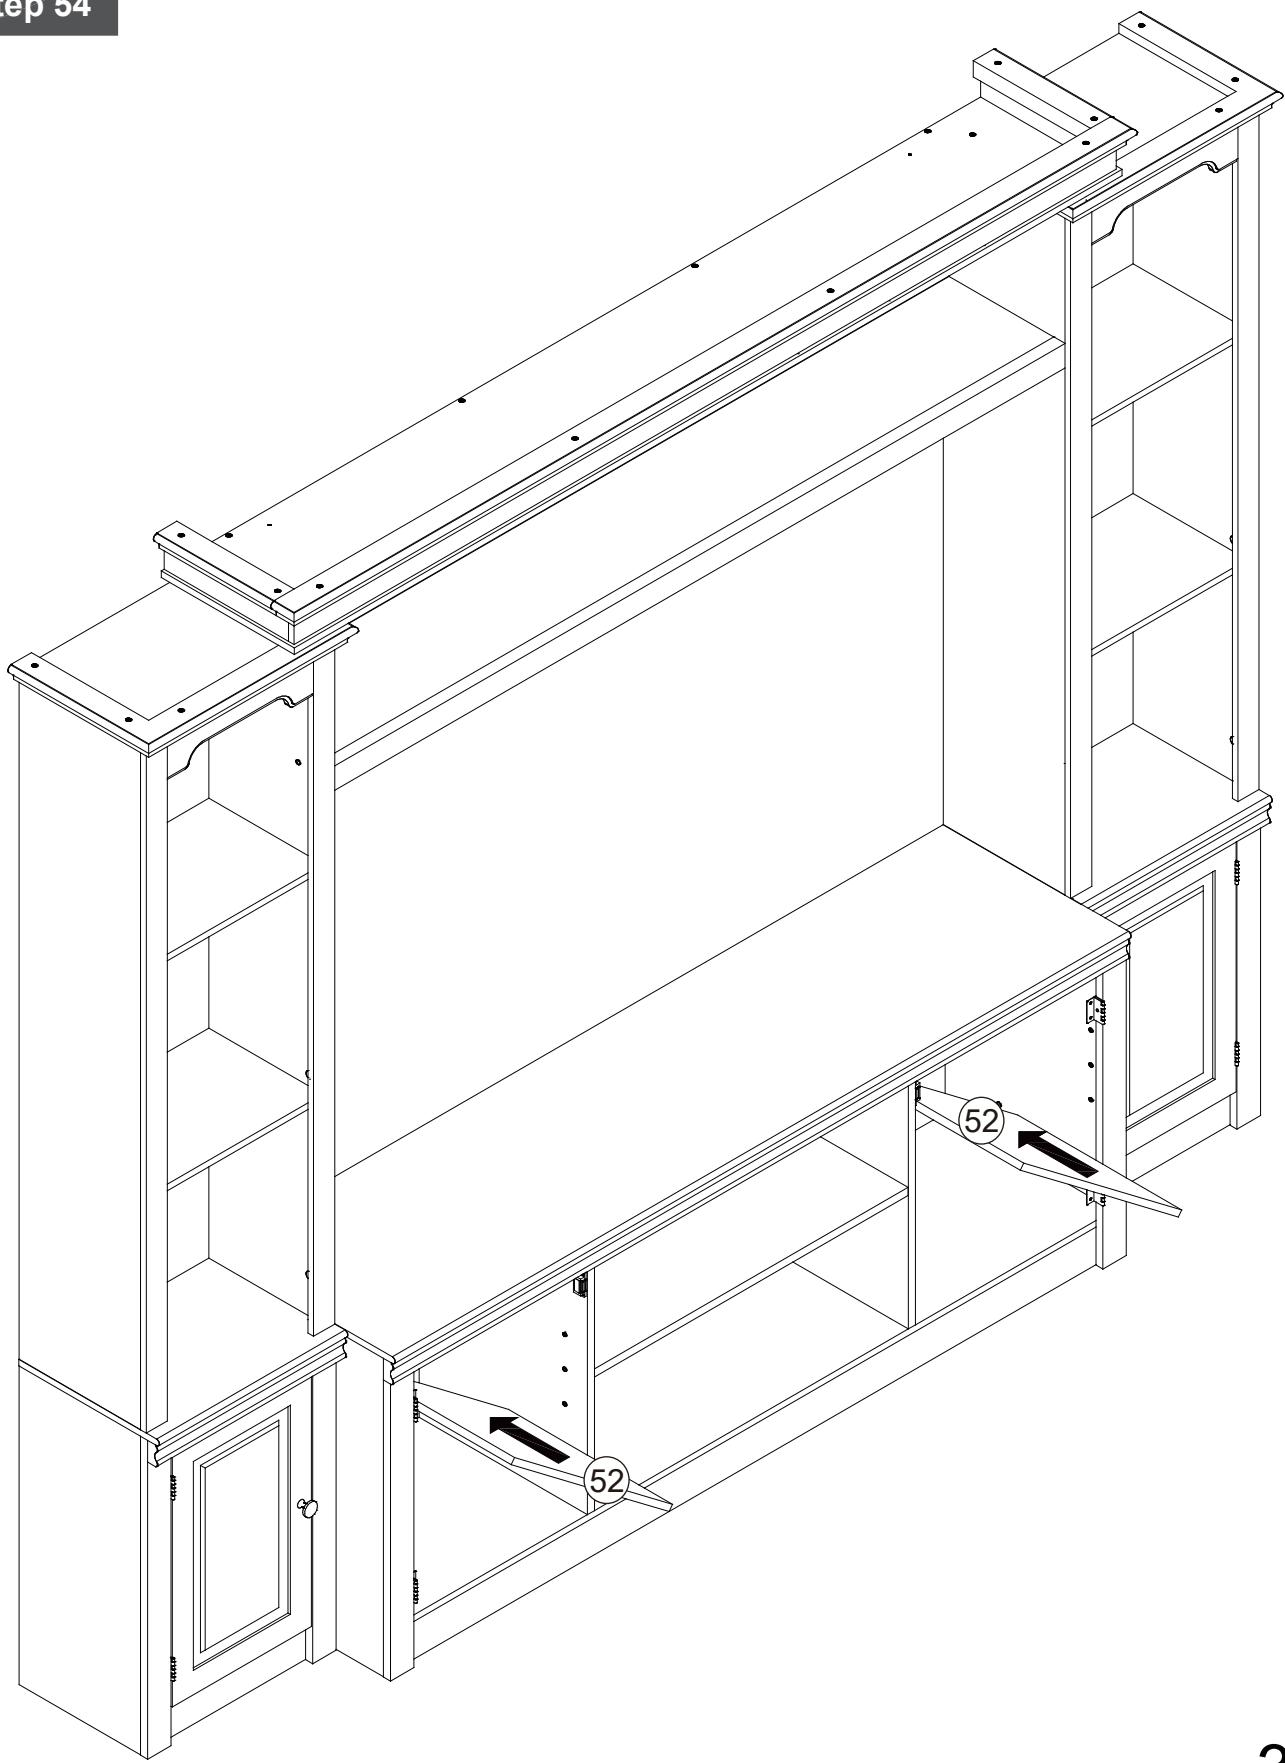


# Assembly Instructions

## Step 55

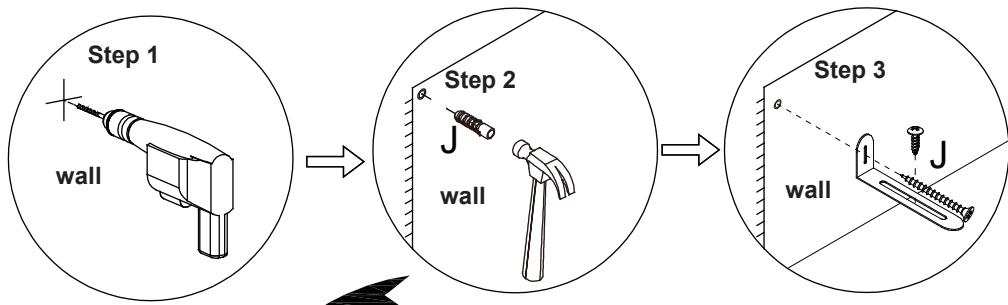

WALL

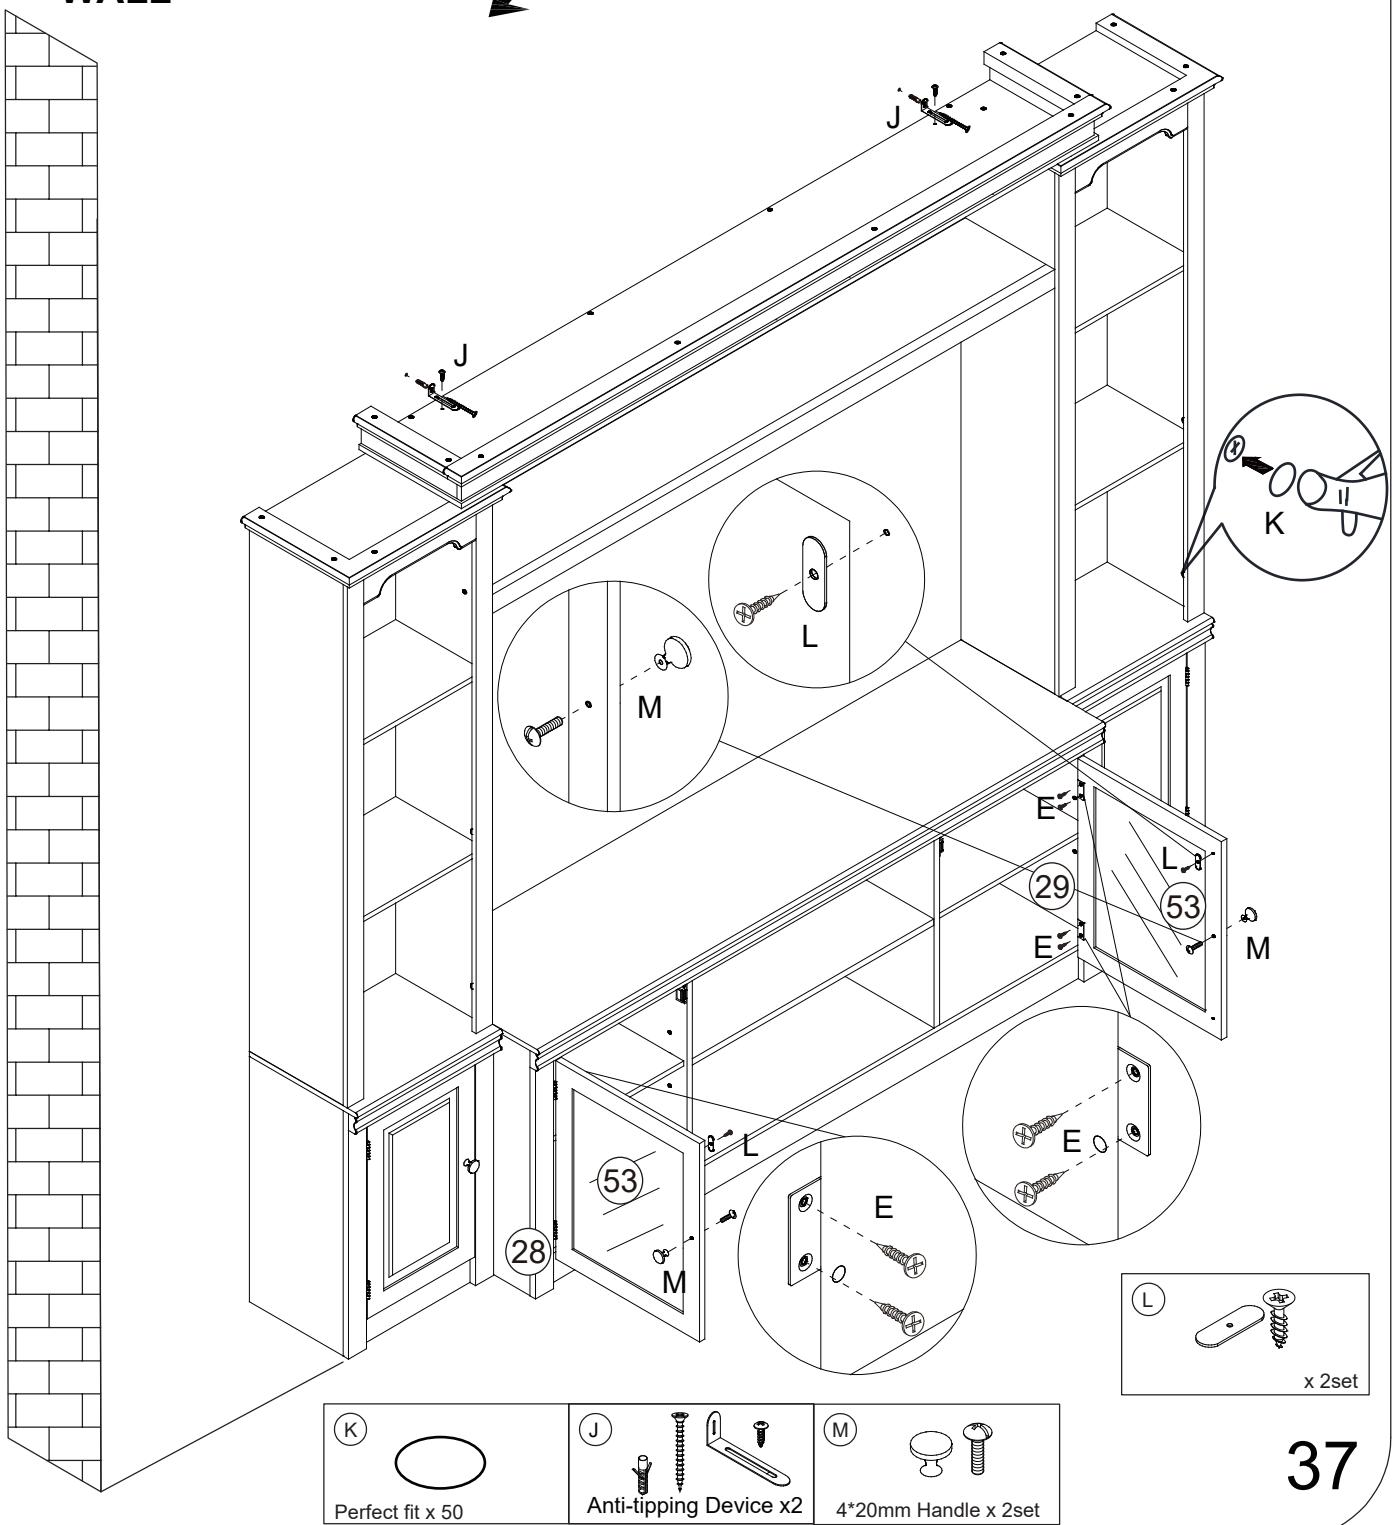

# Assembly Instructions

Finish

