


WALKER EDISON
TM

Amira Waterfall Desk

SKU# WEAMI42OS2

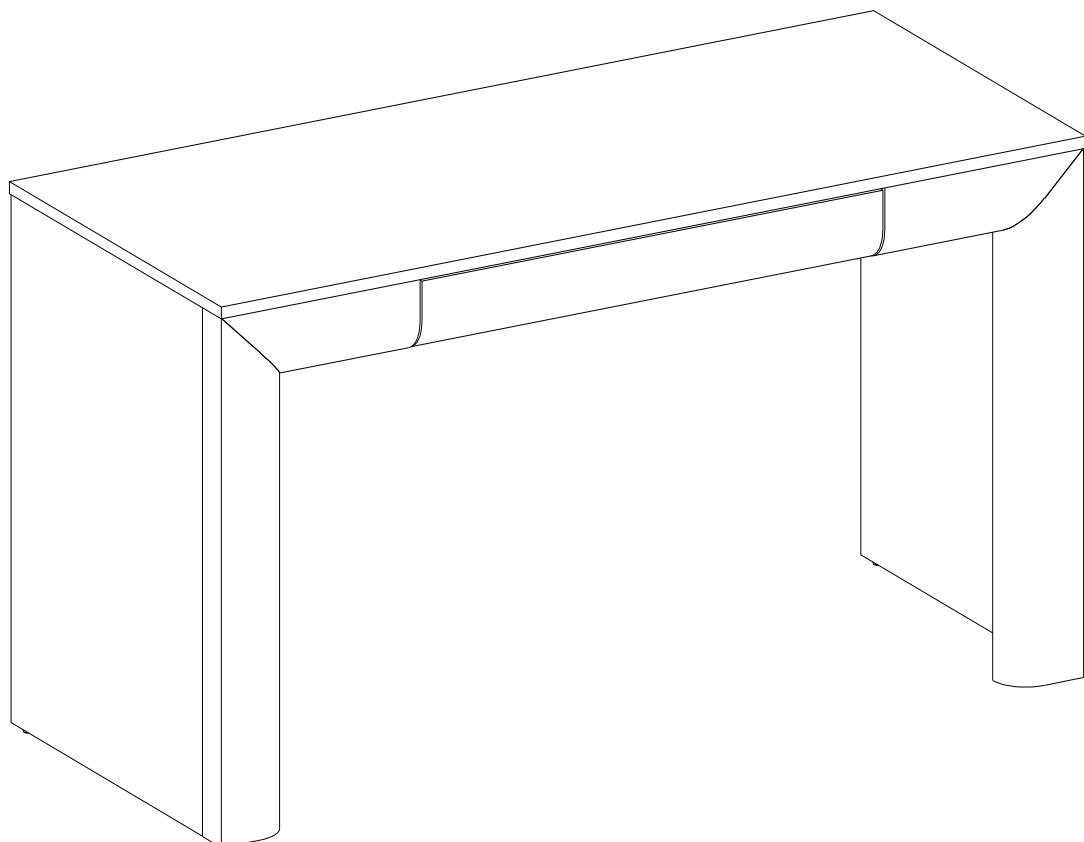


For Residential Use Only

Please visit our website for the most current instructions, assembly tips, report damage, or request parts. www.walkeredison.com

WE Time to get started


Set up a clean and soft workplace to get started and avoid damage during the assembly. It also helps to double-check that you've got all the pieces and parts before diving in to assembly.

Estimated time for assembly

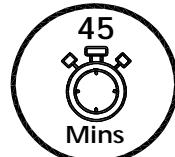

People recommended for assembly


Make it a team effort! Grab a friend for quicker, easier assembly.

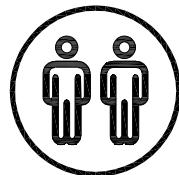

2 People Build


Tools Needed

Grab a Phillips head screwdriver to conquer this assembly

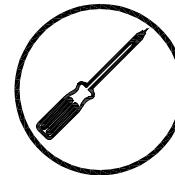


Use power tools with caution

You can cause cracking or damage to the material and easily strip the hardware. If you choose to use a power tool, your product will no longer be covered under Walker Edison's warranty.

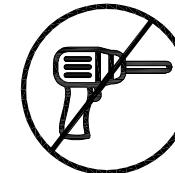

Glue is provided to secure wood dowels in place


When inserting dowels, locate the appropriate hole, place a small amount of glue in the hole, and then insert the dowel. Wipe away excess glue immediately.

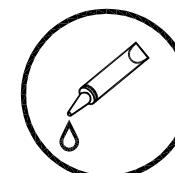

Scan to get assembly tips and help!


WE Parts List

Part Number	Description	Quantity
1	Desktop Panel	1
2	Back Panel	1
3	Left Side Panel	1
4	Right Side Panel	1
5	Left Middle Divider Panel	1
6	Right Middle Divider Panel	1
7	Back Support Panel	1
8	Front Support Panel	1
9	Left Front leg	1
10	Right Front leg	1
11	Drawer Left Side Panel	1
12	Drawer Right Side Panel	1
13	Drawer Back Panel	1
14	Drawer Bottom Panel	1
15	Base Cross Bar	1
16	Drawer Front Panel	1

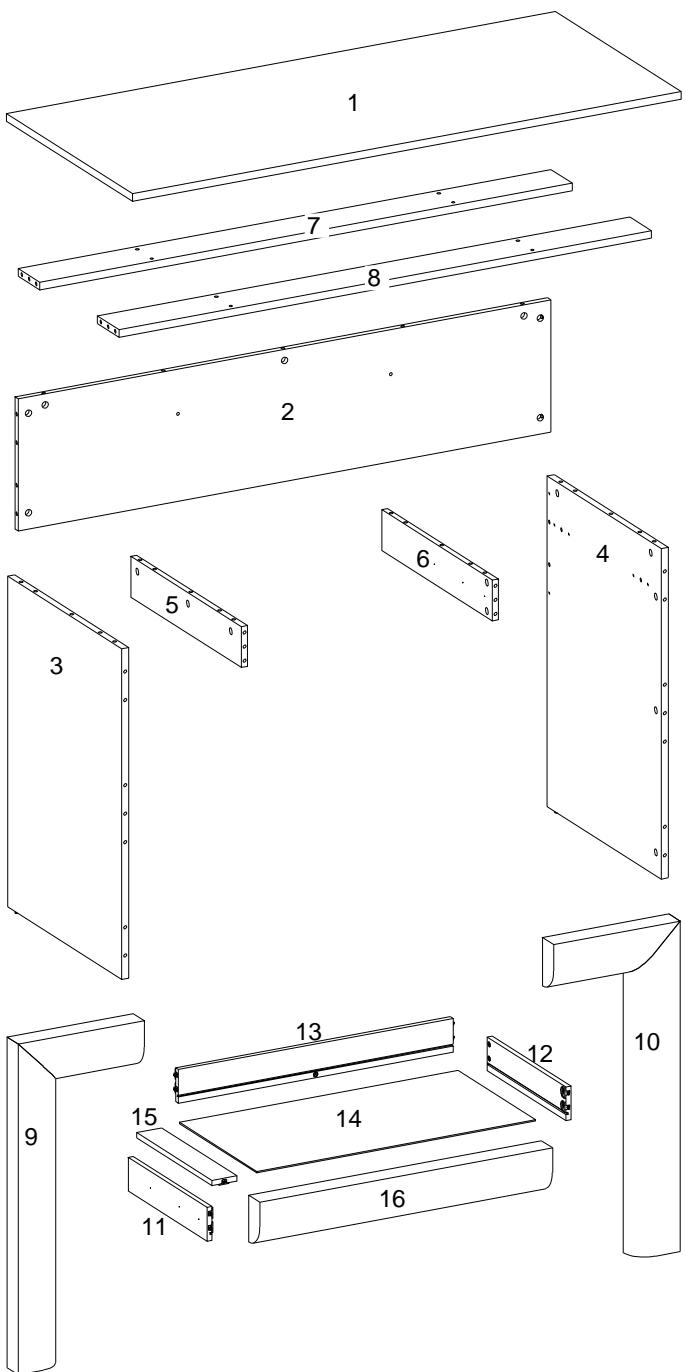




Hardware List

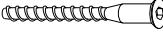Part	Size	Name	Quantity	
A		8x30mm	Wooden dowel	32
B		6x35mm	Cam bolt	37
C		15x11mm	Cam lock	37
D		30mm	Sticker	37
E		6x50mm	Bolt	6
F		M4mm	Hex Key	1
G		3x12mm	Screw	12
H		Drawer Glide	1 Set	
		* Note: This piece comes preassembled for shipping purposes and must be disassembled to complete the desk assembly.		
J		Glue tube	2	

*The hardware quantities listed above are required for proper assembly.
Extra hardware pieces may be included.*


Step 1

Let's get started! Using a Phillips head screwdriver, screw the cam bolts (B) into the Desktop Panel (1).

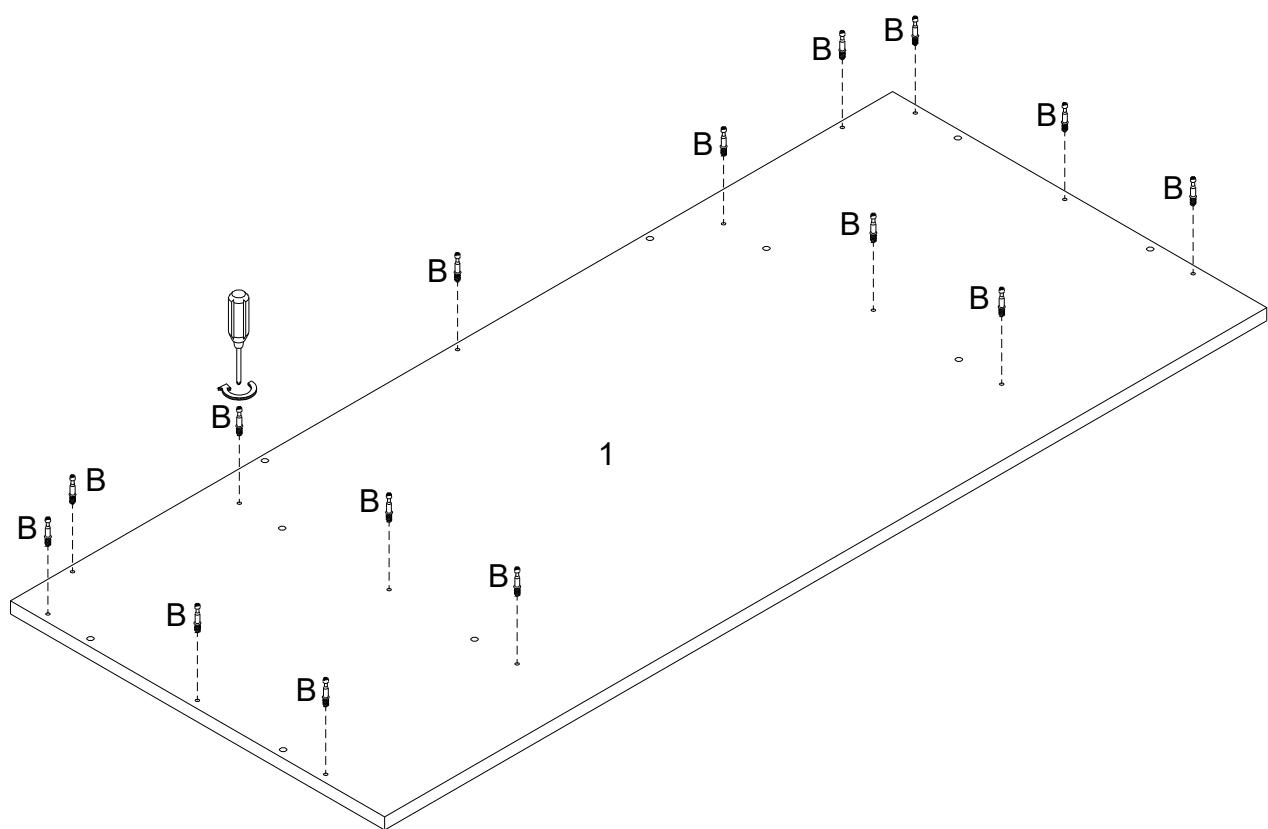

Step 2

Next, screw cam bolts (B) into the Left Side Panel (3) and Right Side Panel (4). Then, insert the wooden dowels (A) into the designated holes in both panels.

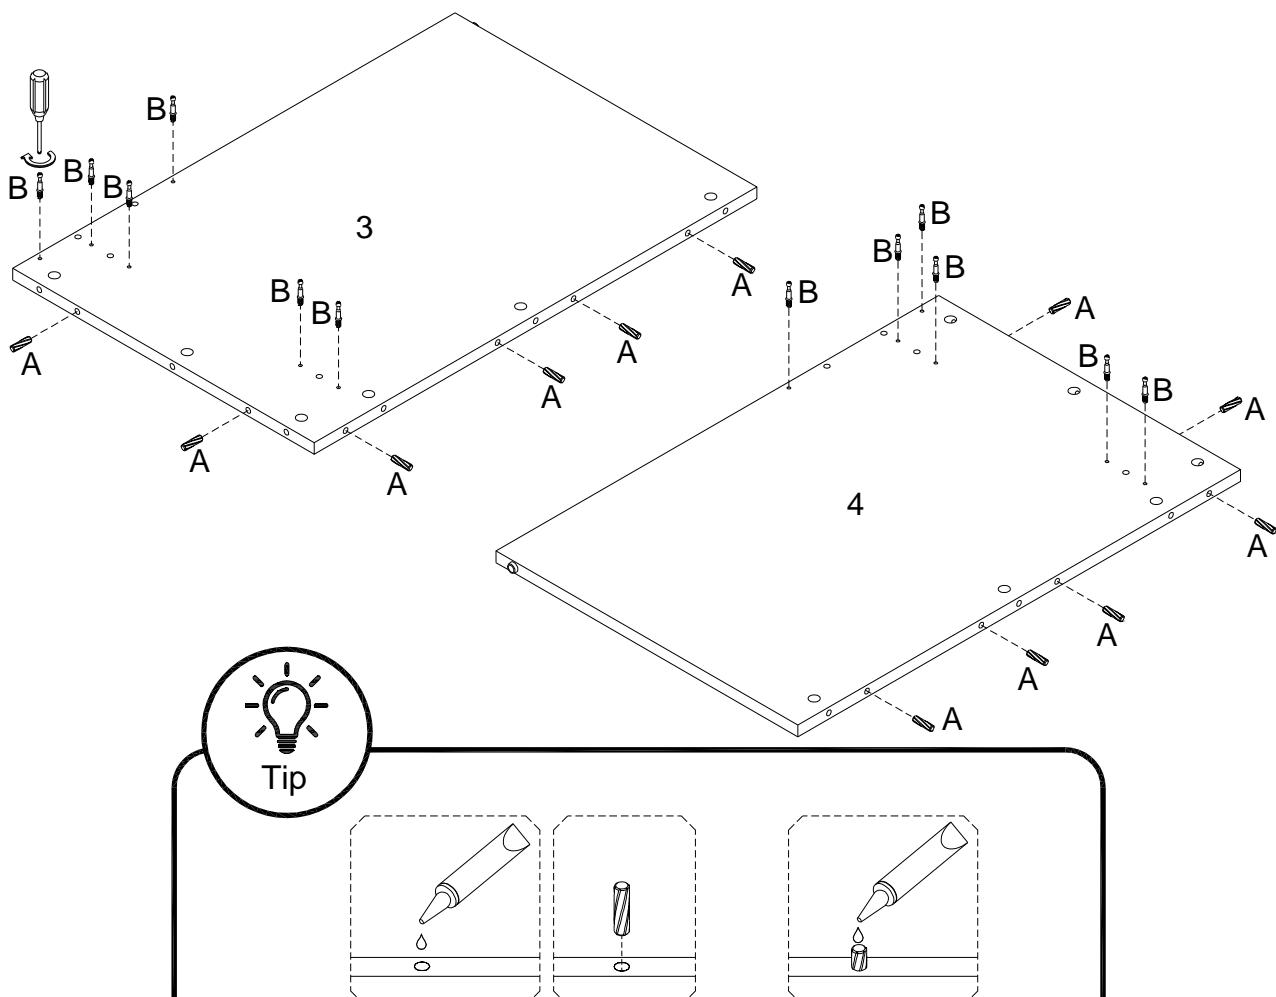


1: The provided glue is to secure wood dowels in place. When first inserting dowels, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately.

2: In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.


Step 3

Screw cam bolts (B) into the Left Front Leg (9) and Right Front Leg (10).

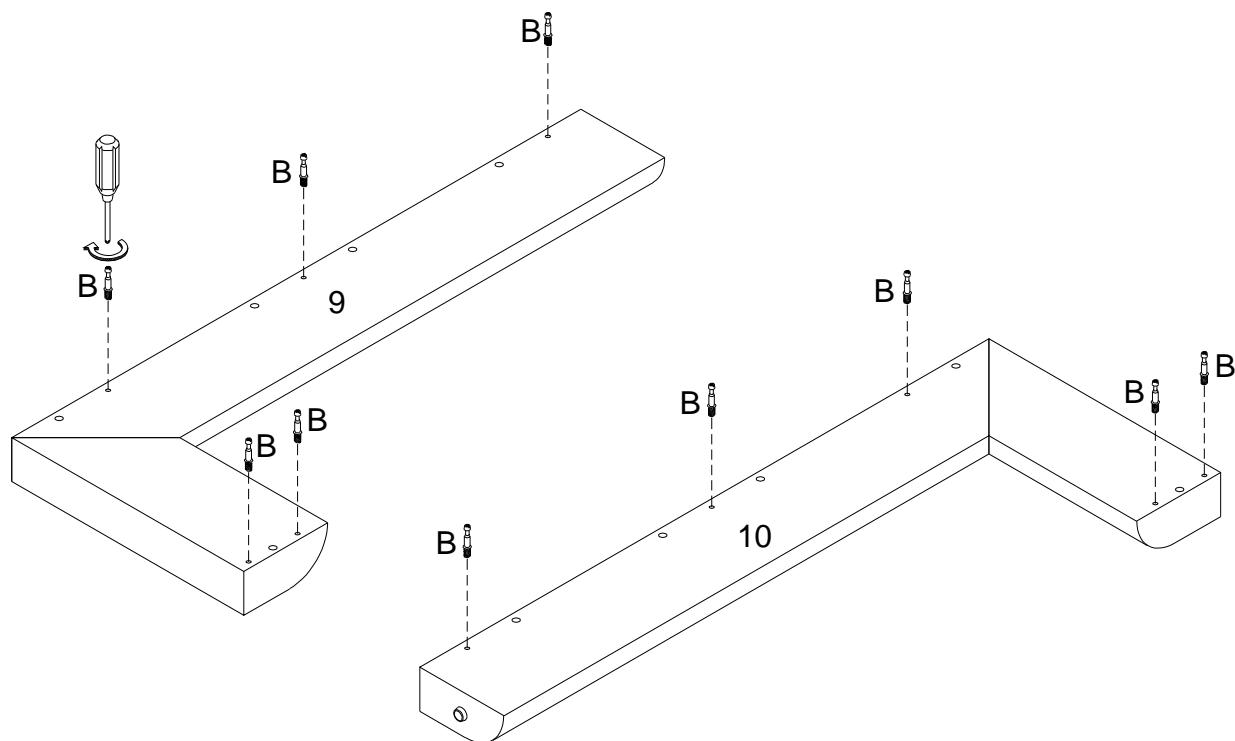


Step 4

Now, prepare your drawer glides (H). Press up on the lever to remove the drawer member from the cabinet member.

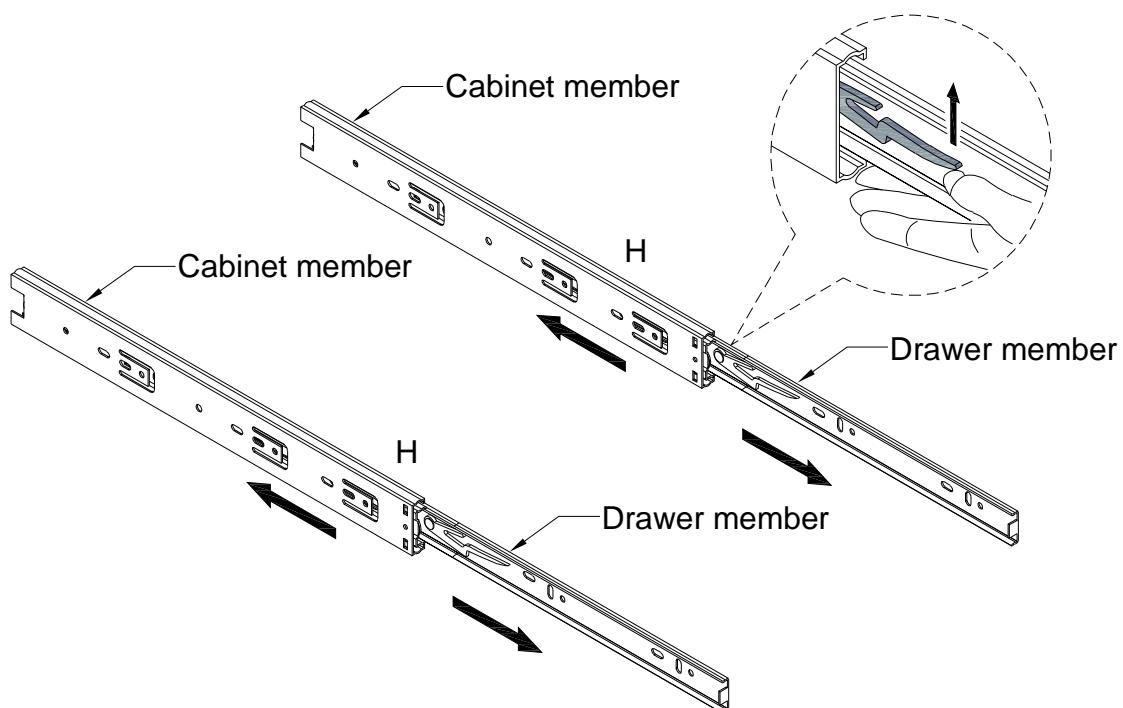


Step 5

Use the (G) screws to secure the drawer glides (H) to the Left Middle Divider Panel (5) and Right Middle Divider Panel (6). Then, insert the wooden dowels (A) into the designated holes in both panels.

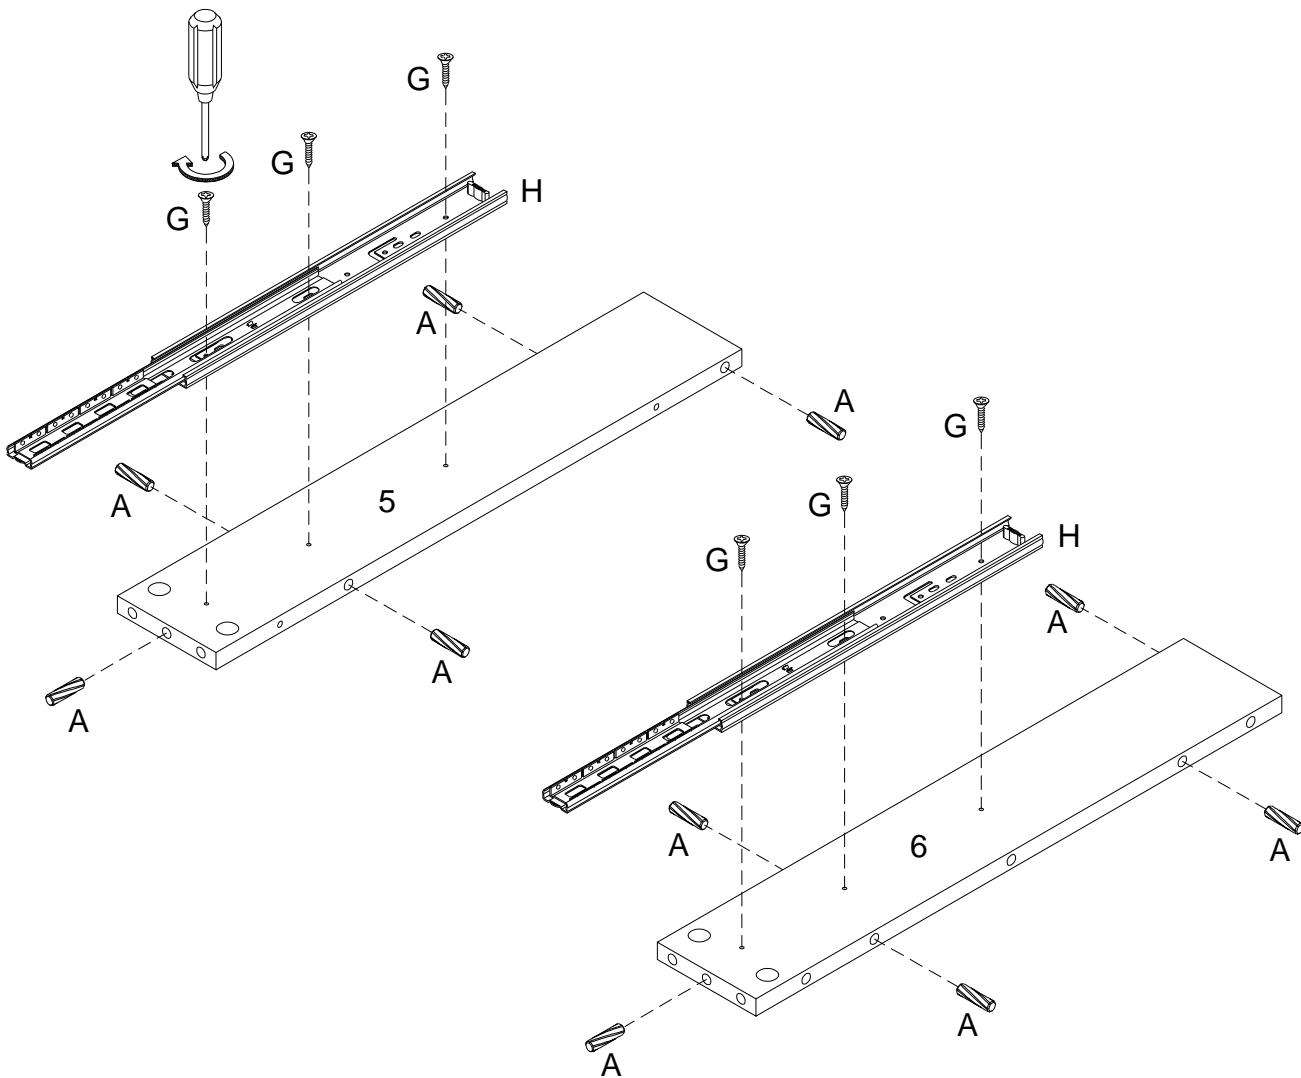


Step 6

Insert wooden dowels (A) into the designated holes in the Back Panel (2), Back Support Panel (7), and Front Support Panel (8).

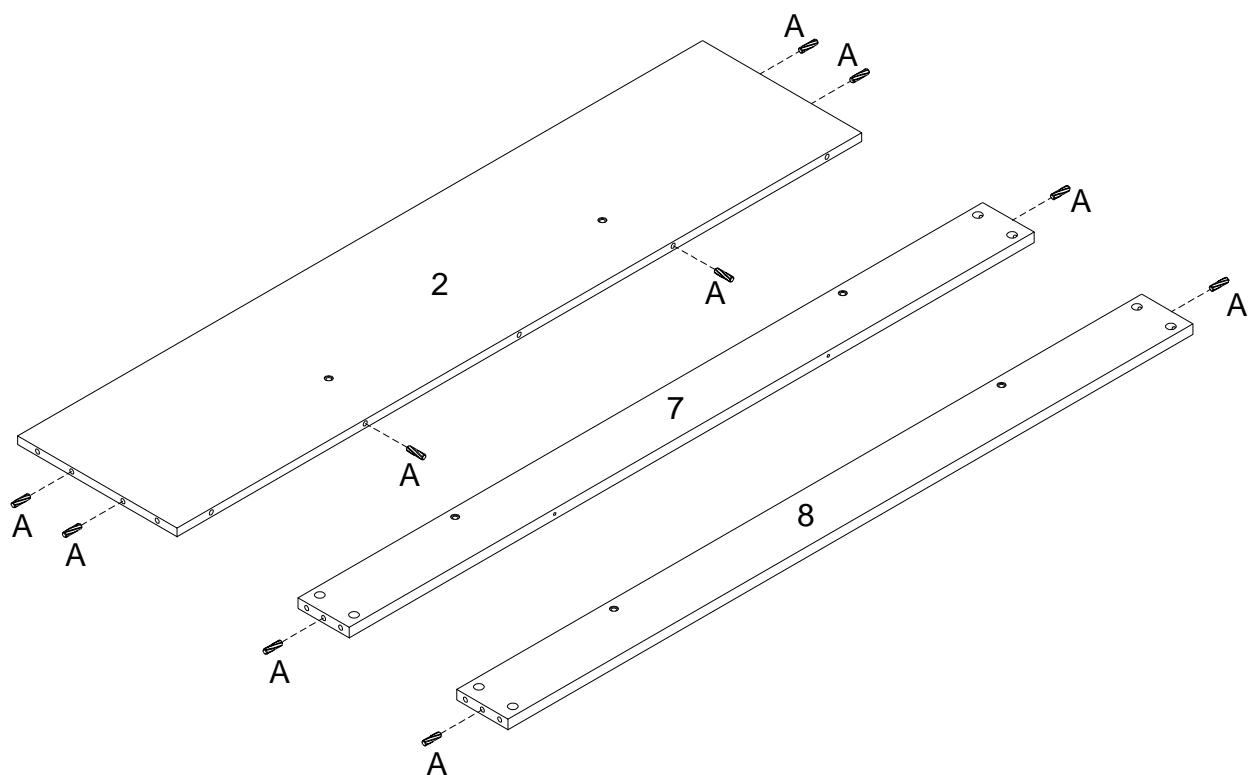



Step 7

Secure the Back Support Panel (7) to the Back Panel (2) using the (E) bolts. Tighten with the provided hex key (F)

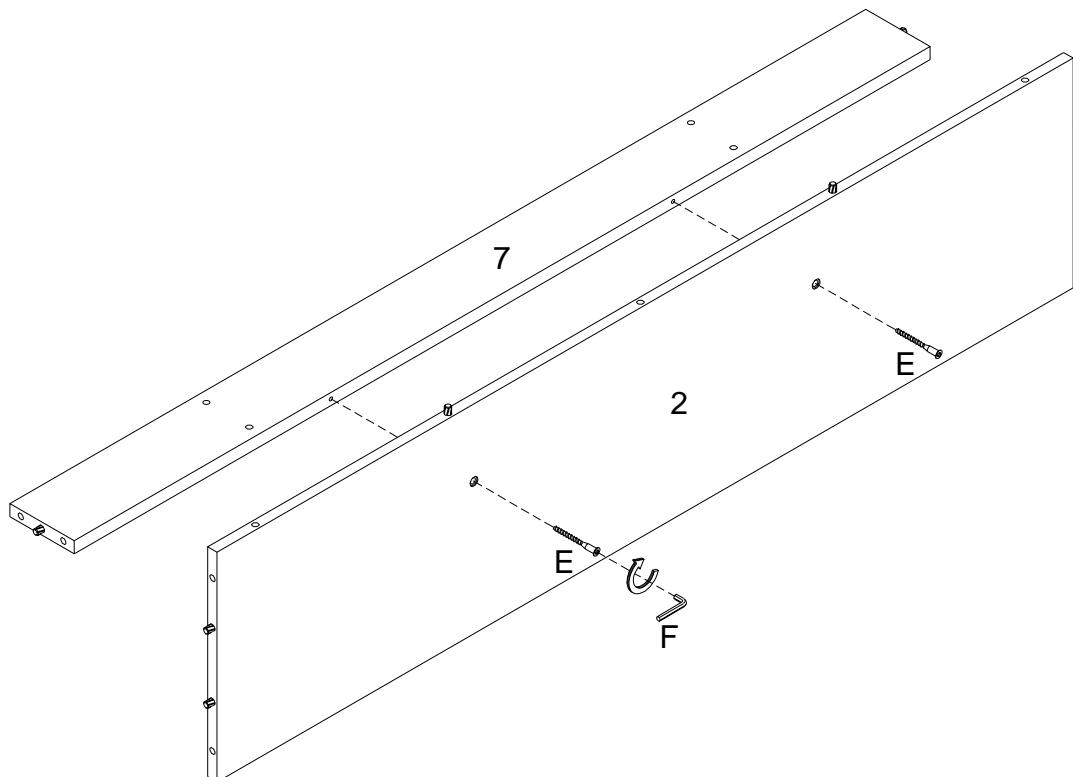

Step 8


Attach the Front Support Panel (8), Back Support Panel (7), and the Back Panel (2) to the Left Side Panel (3). Secure with cam locks (C) and tighten with a screwdriver.

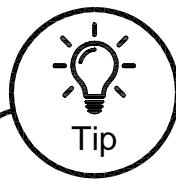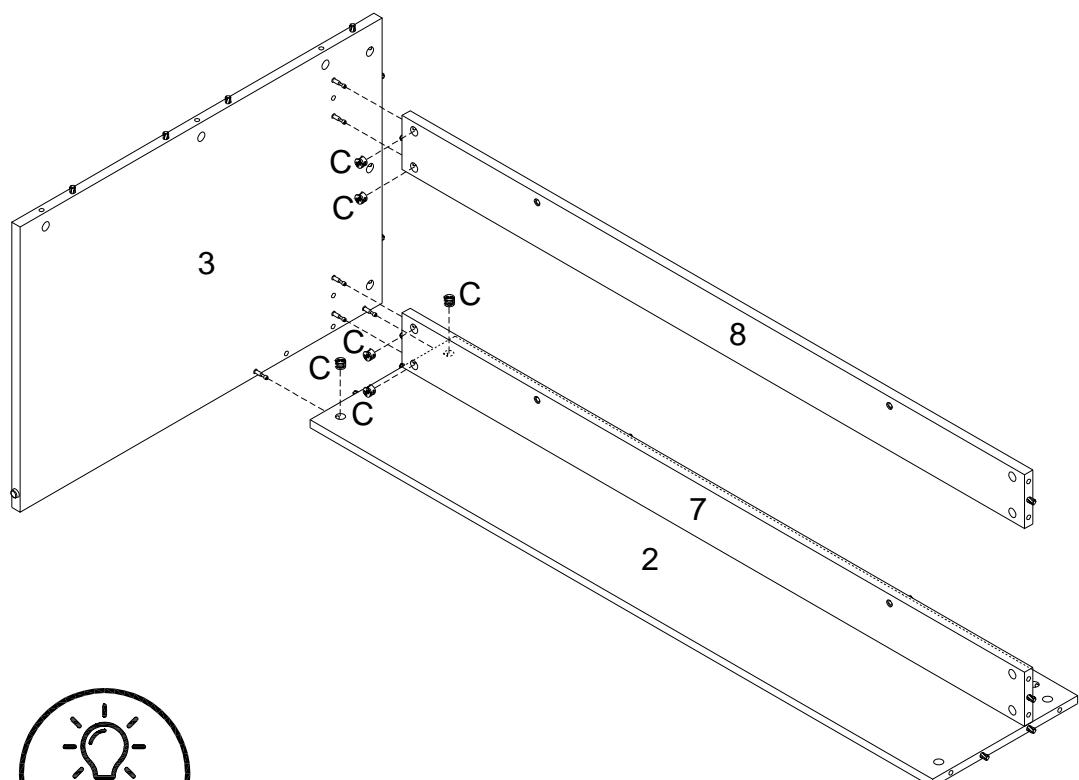


Tip

Cam Locks


Cam Locks help securely join two pieces together.
Follow these easy steps.

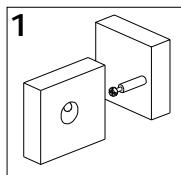

1: Insert Cam Bolt into bolt holes on the flat side. Don't over tighten!

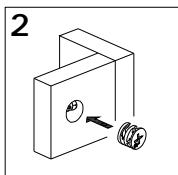


2: Fit the proper holes on the edge of the other part over the Cam Bolts. You should be able to see the cam bolts through the larger hole on the side.

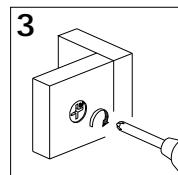

3: On the back of the Cam Lock will be a "C" shape. Insert the Cam Lock so the opening of the "C" fits over the Cam Bolt. Tighten with the screwdriver.


Step 9

Next, attach the Right Side Panel (4) and secure with cam locks (C). Tighten with a screwdriver.

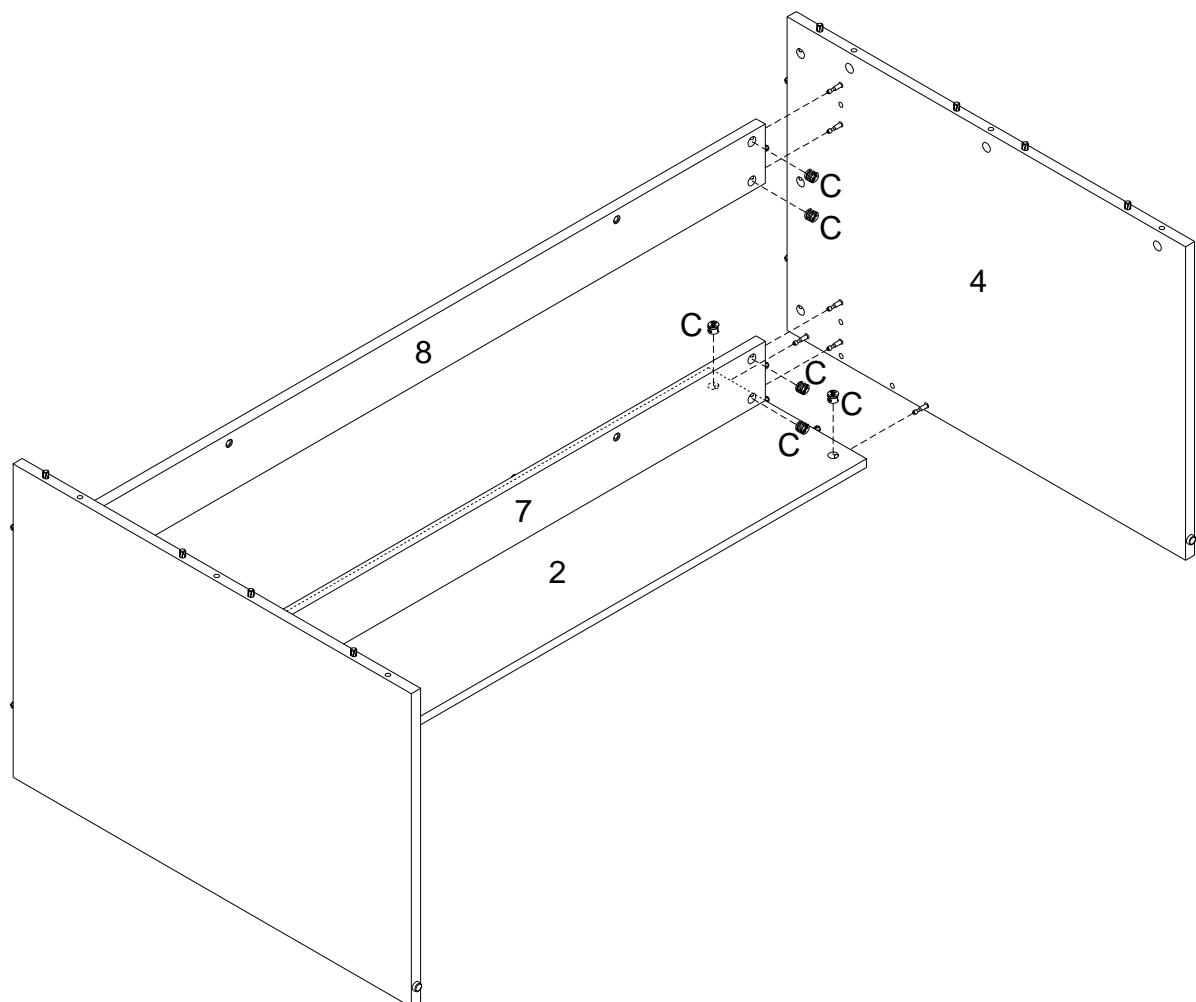


Step 10

Attach the Right Middle Divider Panel (6) and the Left Middle Divider Panel (5) to the Desktop Panel (1). Secure with cam locks (C).

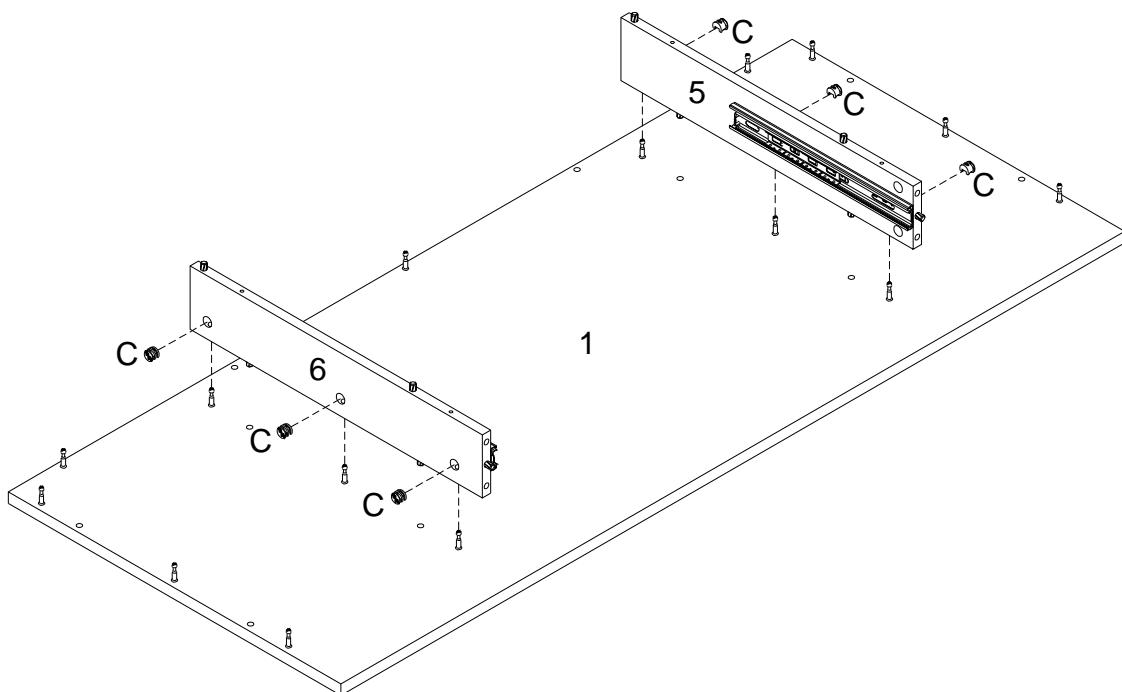


Step 11

Next, connect the Desktop Panel (1) to the desk frame and secure it using cam locks (C). After that, attach the Front Support Panel (8) and the Back Support Panel (7) to the Left Middle Divider Panel (5) and Right Middle Divider Panel (6) using the bolts (E). Tighten all bolts with the provided hex key (F).

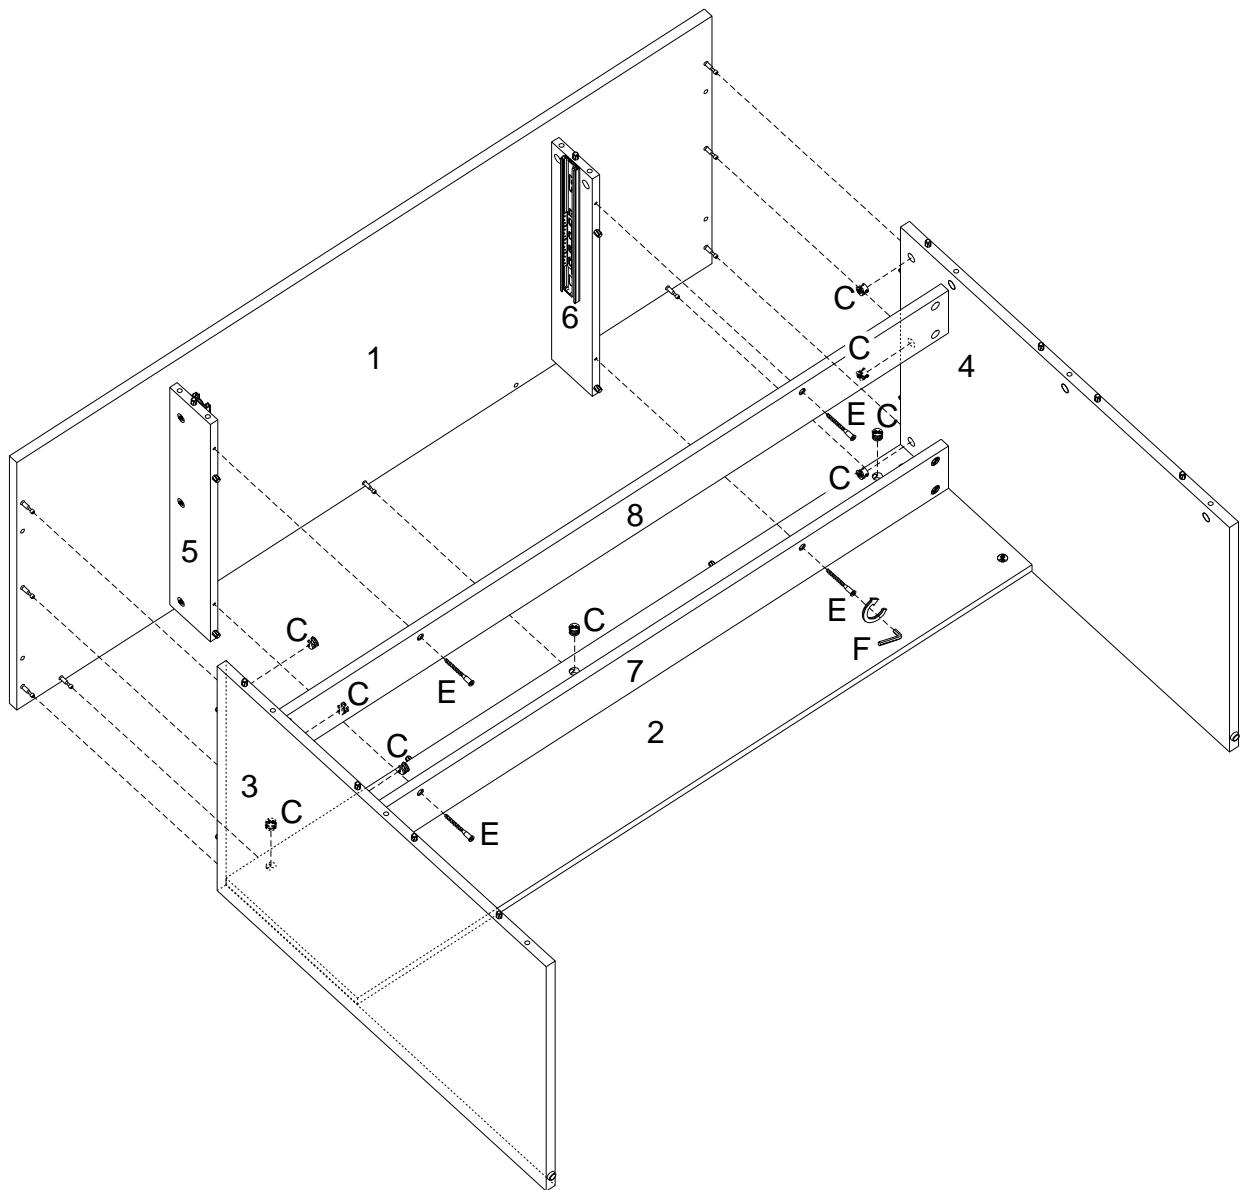


Step 12

Attach the Right Front Leg (10) and the Left Front Leg (9) to the Right Side Panel (4) and the Left Side Panel (3). Secure with cam locks (C) and tighten with a screwdriver.

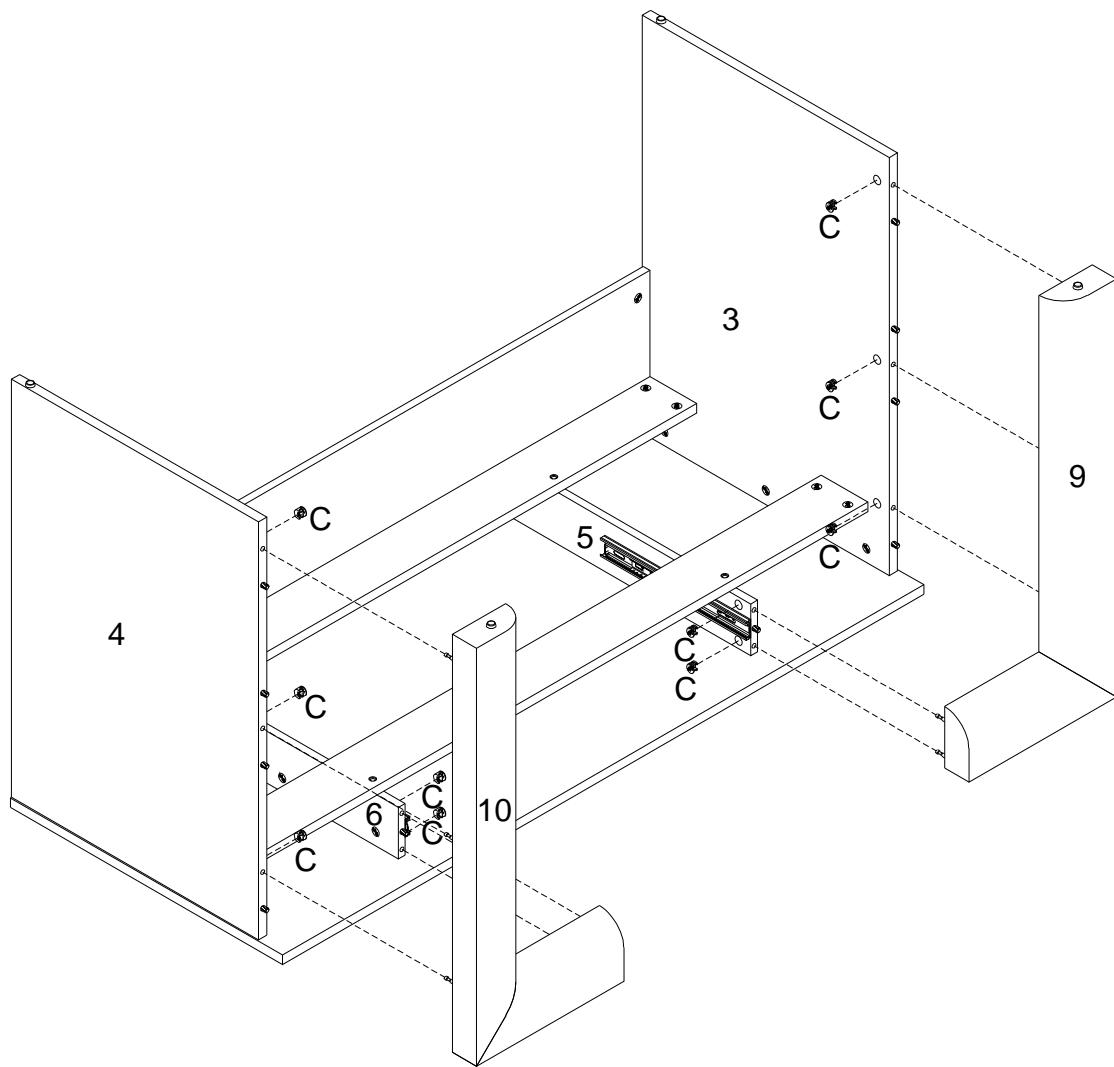


Step 13

Use the provided stickers (D) to ensure a clean finish.

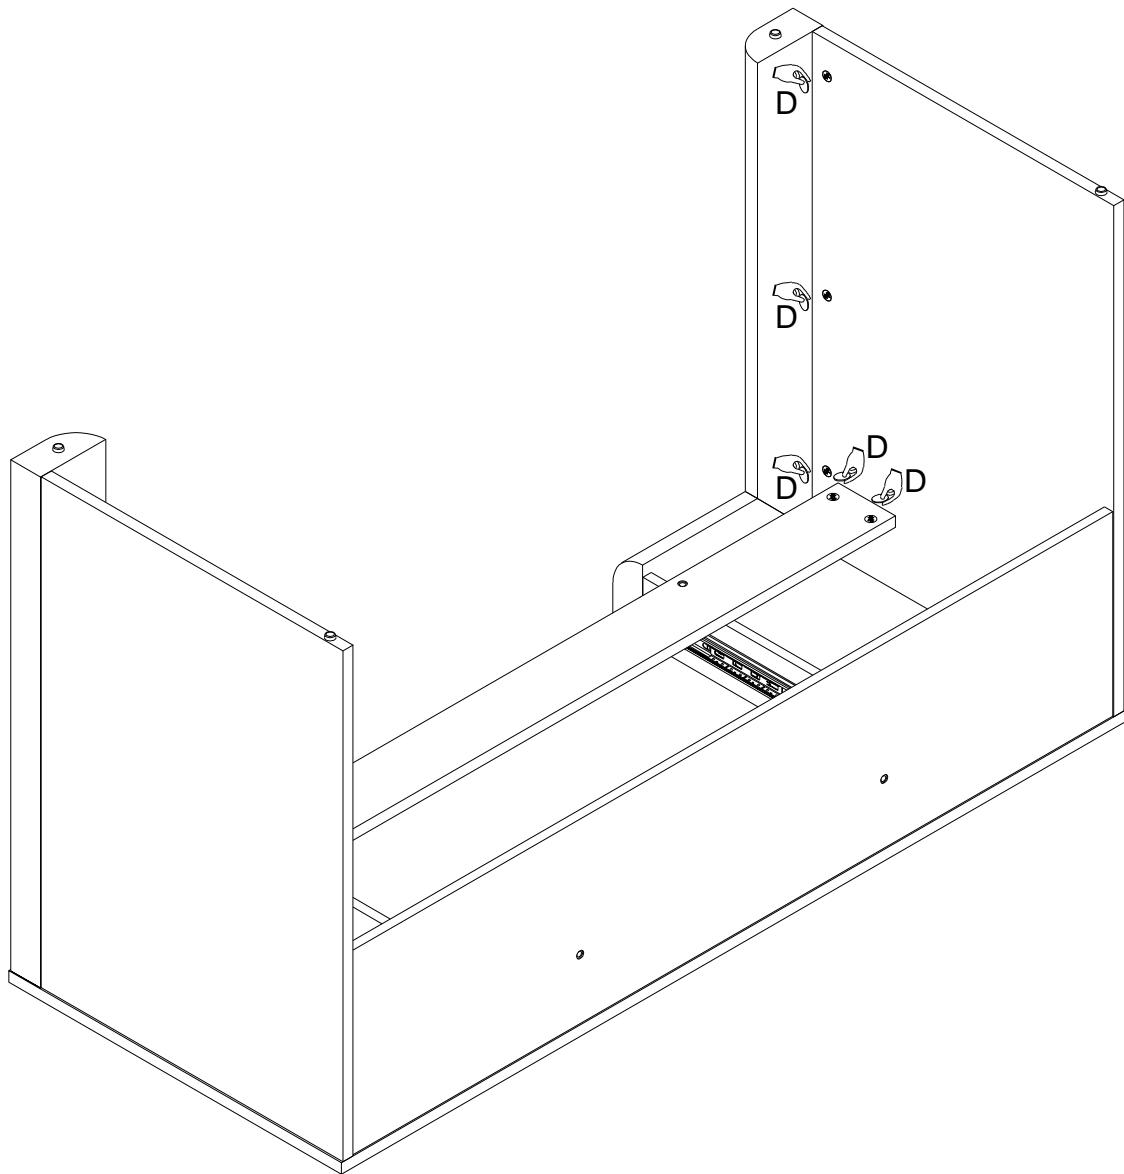


Step 14

Let's move on to the drawer! Attach the drawer member piece of the drawer glides (H) to the Drawer Left Side Panel (11) and the Drawer Right Side Panel (12) using the (G) screws.

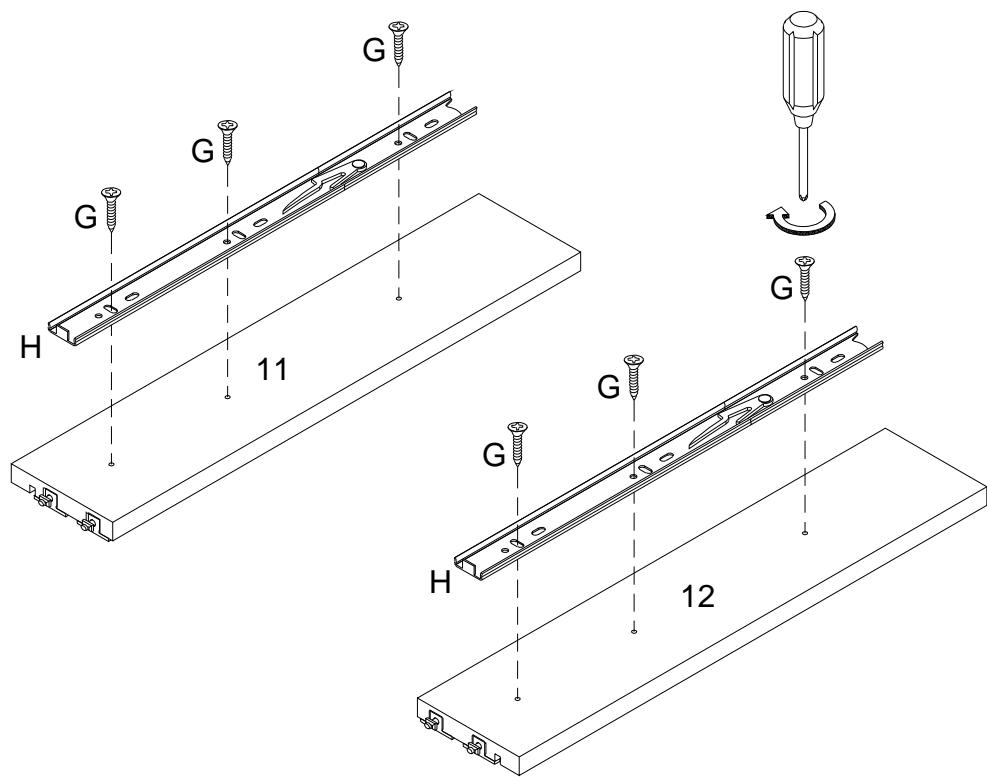


Step 15

Secure the Drawer Right Side Panel (12) and Drawer Left Side Panel (11) to the Drawer Back Panel (13) using the quick assembly mechanism.

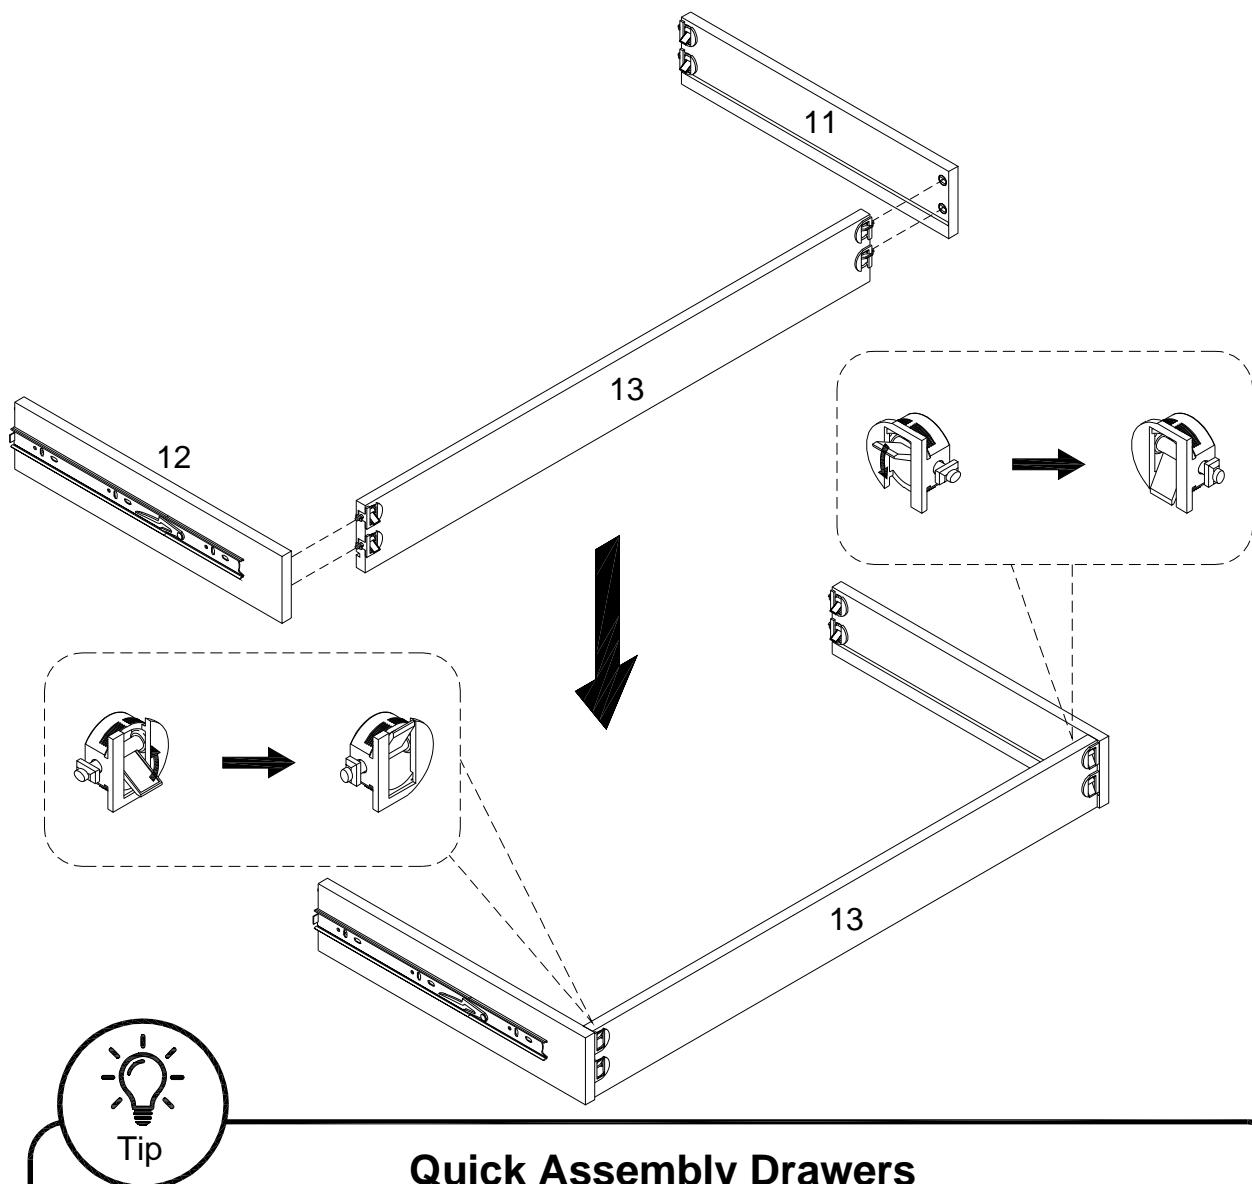


Tip

Quick Assembly Drawers

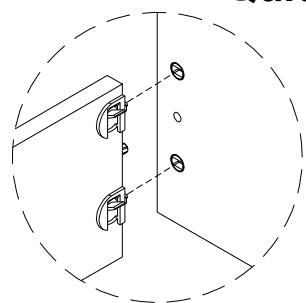


1. Make sure the quick assembly drawer pin is aligned with the corresponding hole.

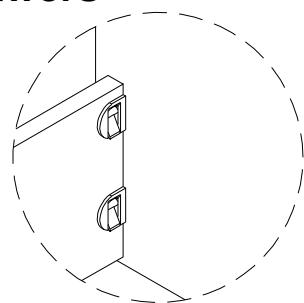

2. Once the pin is inserted correctly, flip the metal lever in the opposite direction to ensure the panels are firmly locked together.


Step 16

Secure the Base Cross Bar (15) to the Drawer Back Panel (13).

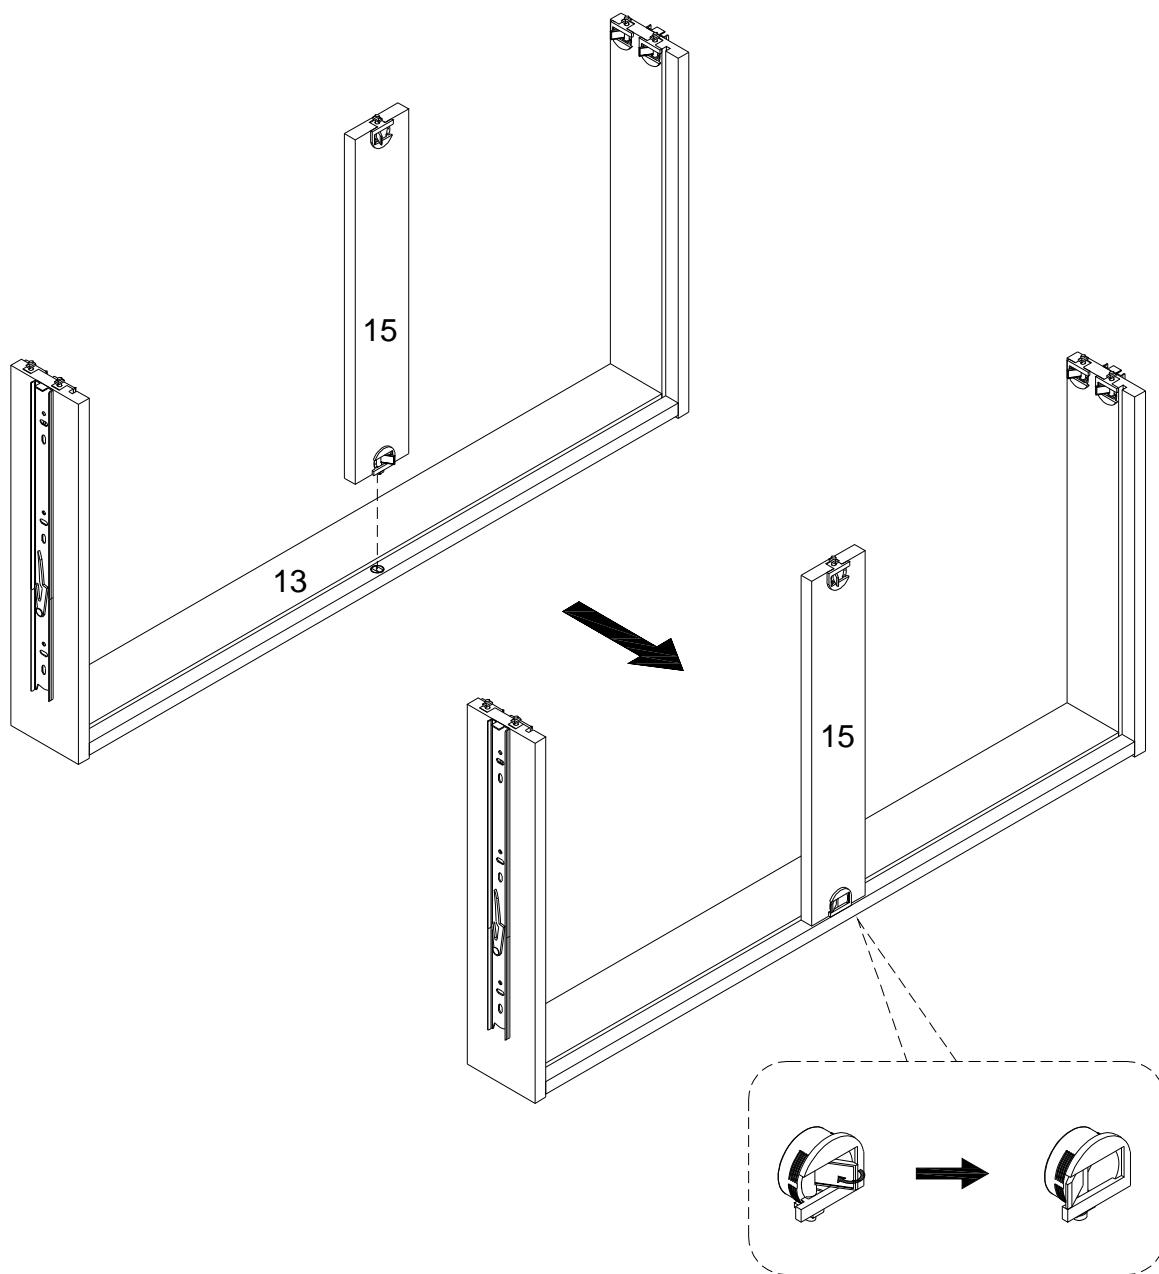


Step 17

Next, slide the Drawer Bottom Panel (14) in, using the grooves as a guide.

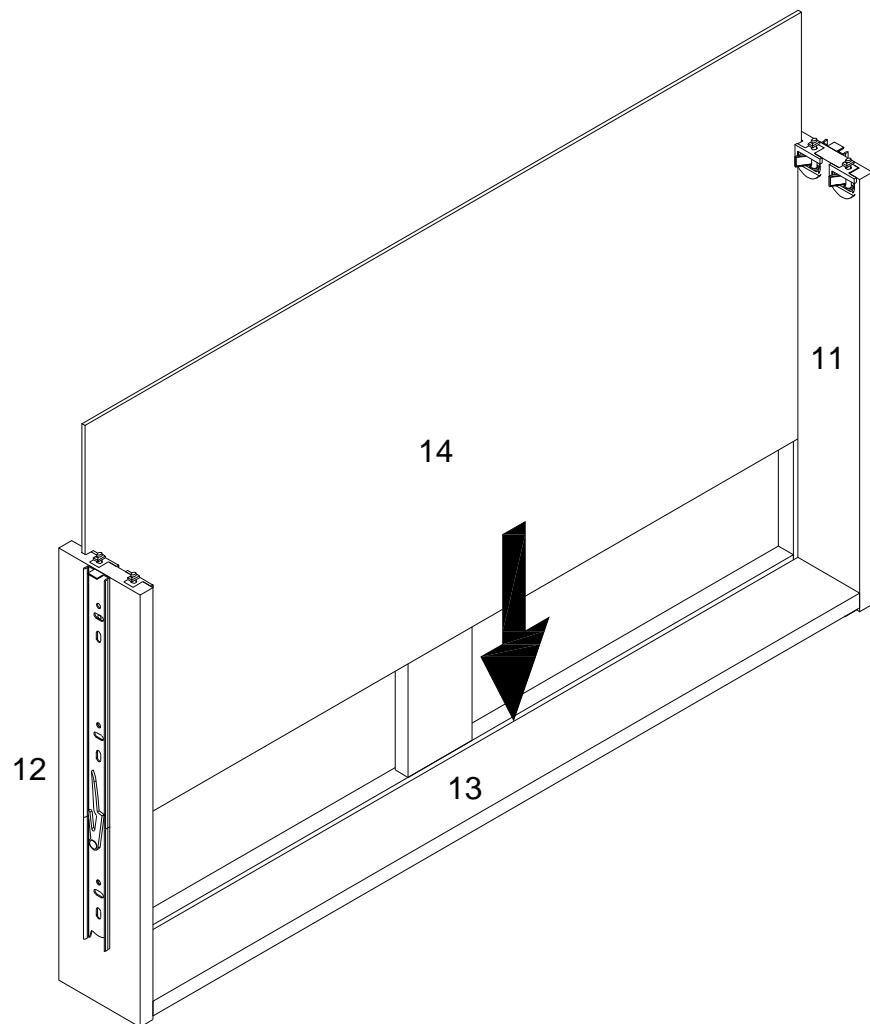



Step 18

Attach the Drawer Front Panel (16) to the drawer and secure with the quick assembly mechanism.

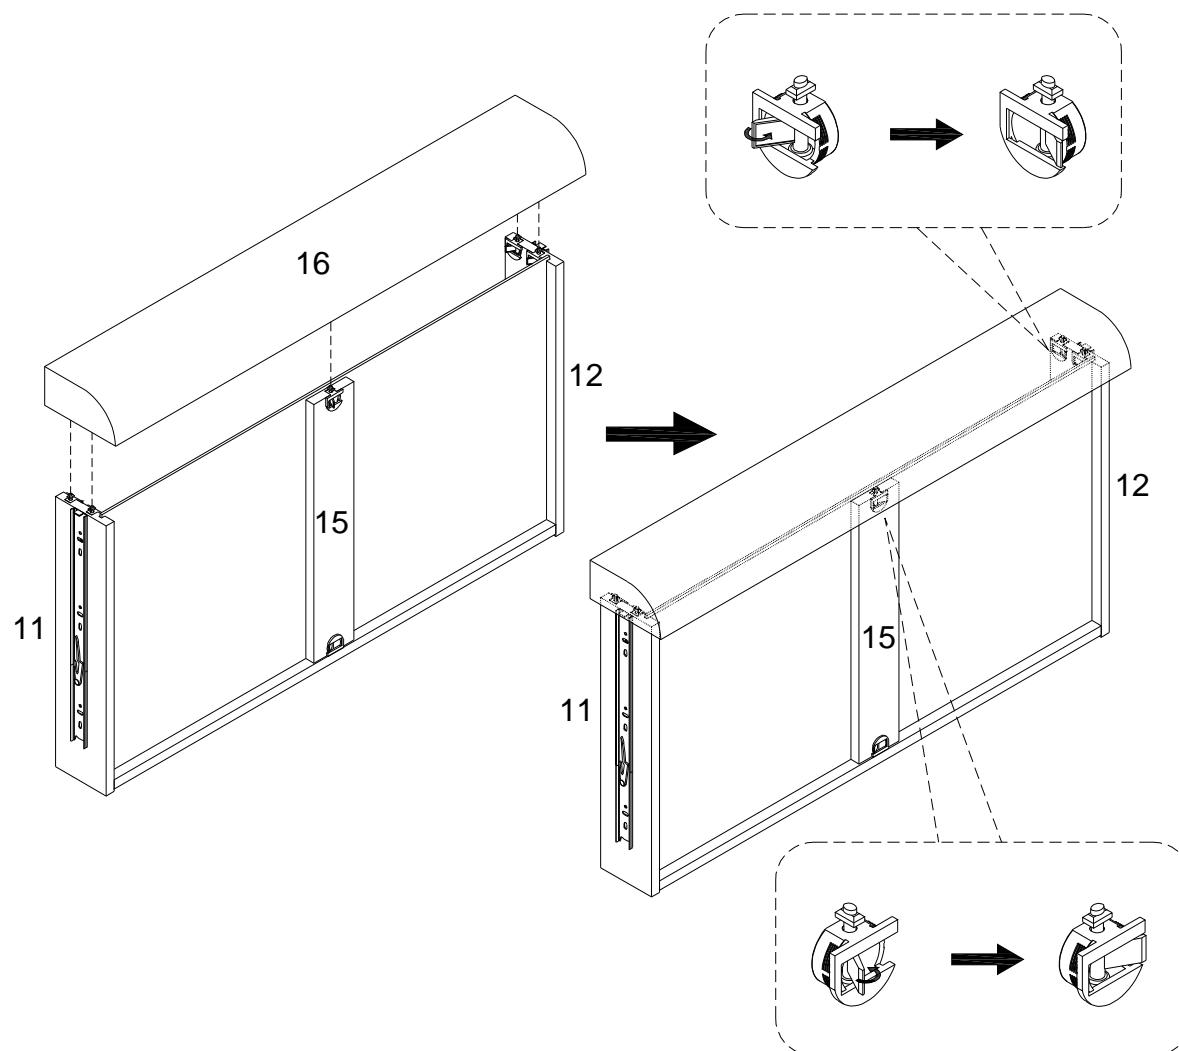


Step 19

Firmly push the drawer all the way into place. Some resistance is normal.

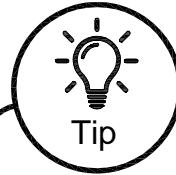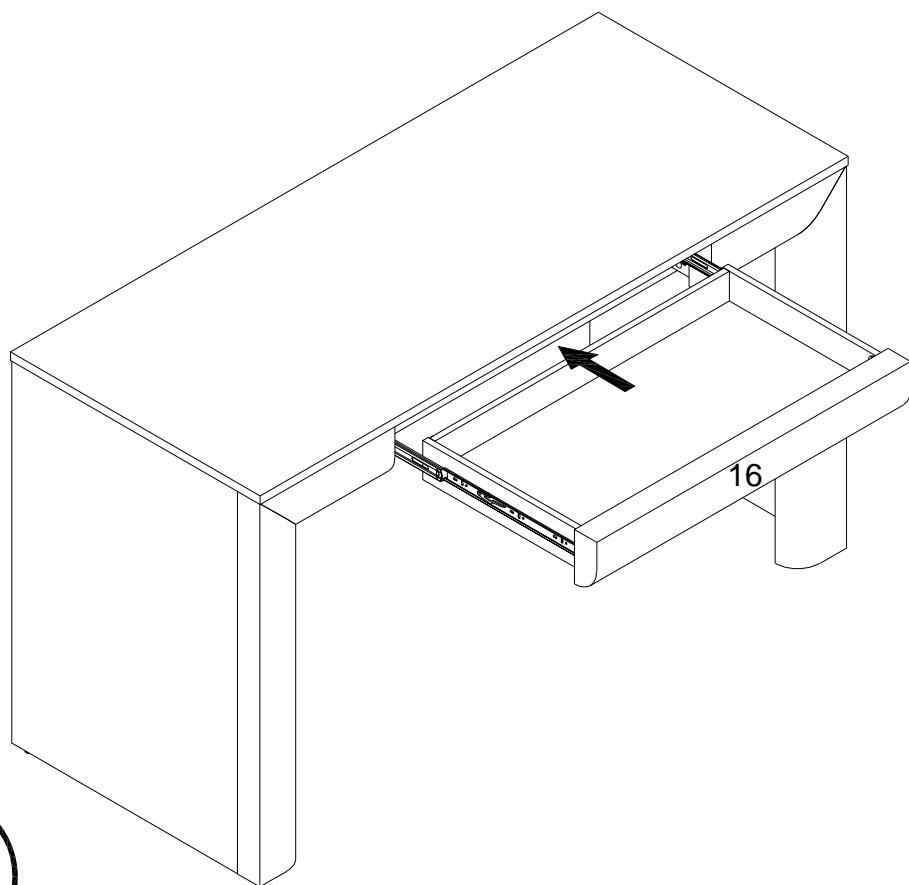


Reinserting your Cabinet Glides together

Line up the Drawer Member so it is inside the guides of the Cabinet Member. Once the connection is made, push the drawer into place entirely. It may not be a smooth glide on your first try, but will improve after it's fully inserted.

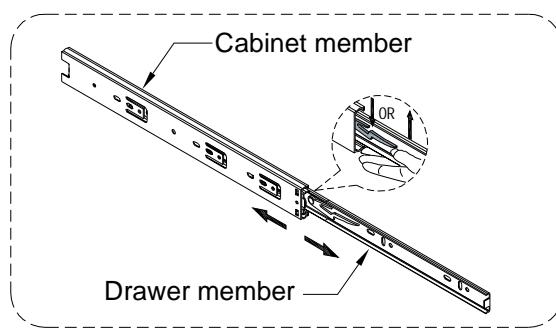

Final Assembly

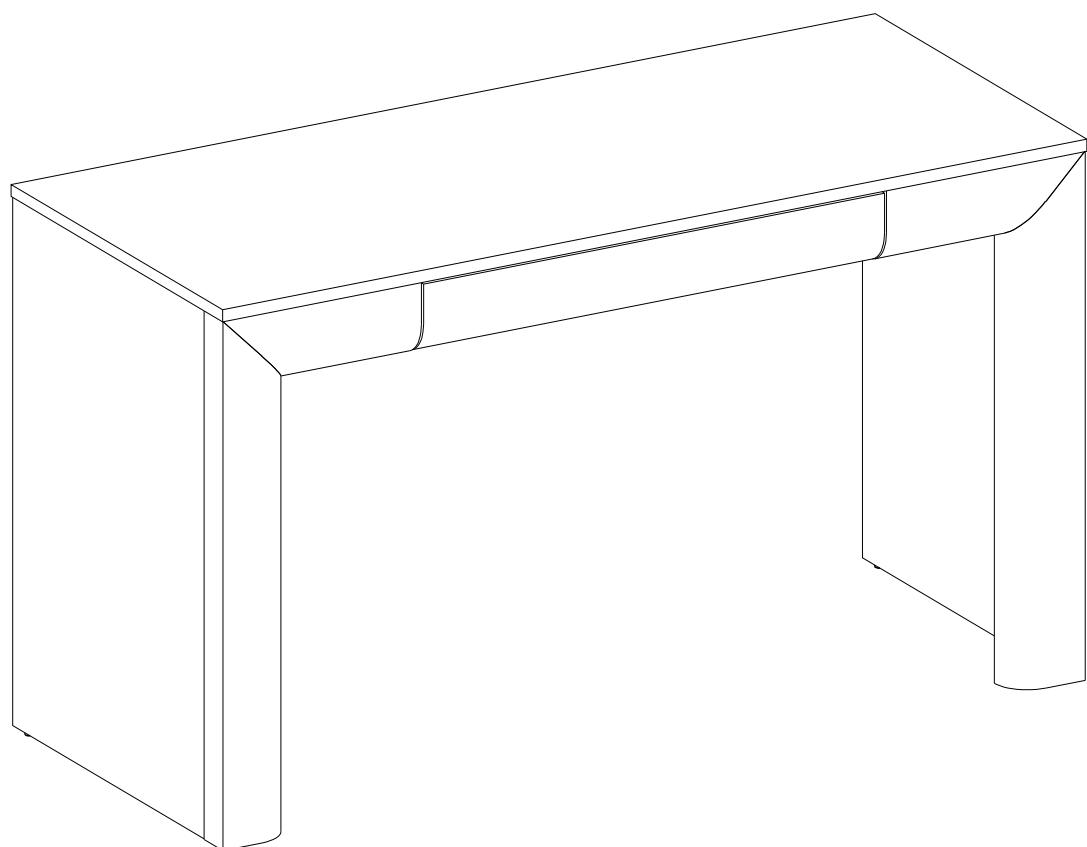

Congratulations on your new piece of furniture!

We would love to hear about it and see it.
Please leave us a review or post a picture with
#mywalkeredisonhome

Assembling furniture can be tricky sometimes.

Our customer service team, located in Utah, is here for product information, help assembling a product, or for any other customer support issue

Call us at **801-433-3008**

Email us at **service@walkeredison.com**

Visit our Customer Service website at
walkeredison.com/pages/customer-service

We are available to help Monday -Thursday 8am-5pm, Friday 8am-3pm MST

For details on Assembly Videos, Assembly Instructions, Replacement Parts, and Customer service,

SCAN HERE

