


WALKER EDISON
TM

Kids Desk

SKU# WEZOE09OS4

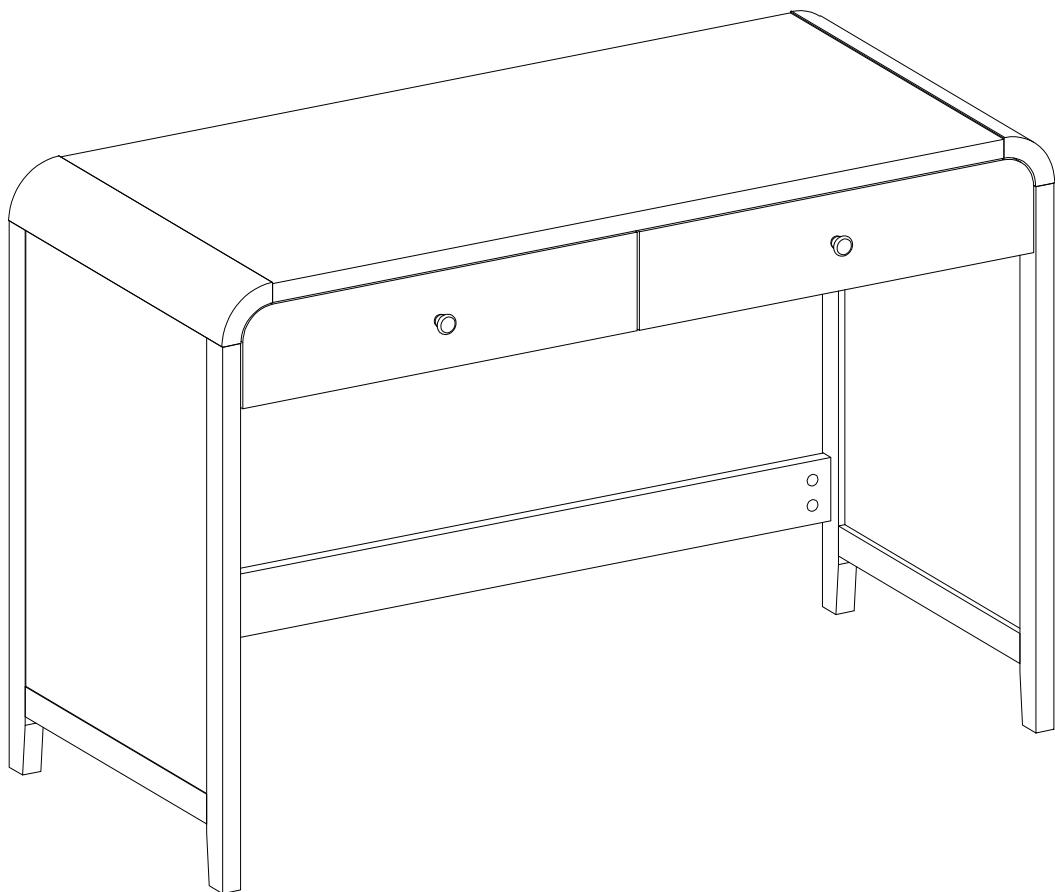


For Residential Use Only

Please visit our website for the most current instructions, assembly tips, report damage, or request parts. www.walkeredison.com

WE Time to get started


Set up a clean and soft workplace to get started and avoid damage during the assembly. It also helps to double-check that you've got all the pieces and parts before diving in to assembly.

Estimated time for assembly

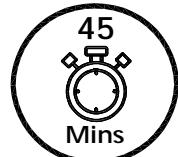

People recommended for assembly


Make it a team effort! Grab a friend for quicker, easier assembly.

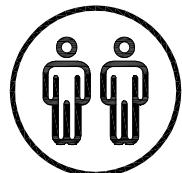

2 People Build


Tools Needed

Grab a Phillips head screwdriver to conquer this assembly

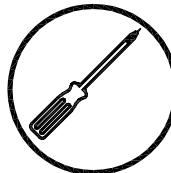

Use power tools with caution

You can cause cracking or damage to the material and easily strip the hardware. If you choose to use a power tool, your product will no longer be covered under Walker Edison's warranty.

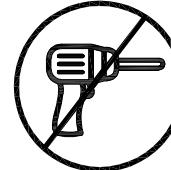

Glue is provided to secure wood dowels in place

When inserting dowels, locate the appropriate hole, place a small amount of glue in the hole, and then insert the dowel. Wipe away excess glue immediately.






Scan to get assembly tips and help!








Parts List

Part Number	Description	Quantity
1	Desktop Panel	1
2	Left Corner Panel	1
3	Left Side Panel	1
4	Right Corner Panel	1
5	Right Side Panel	1
6	Back Panel	1
7	Support Panel	1
8	Drawer Divider	1
9	Drawer Support Panel	1
10	Drawer Left Side Panel	2
11	Drawer Right Side Panel	2
12	Drawer Back Panel	2
13	Drawer Bottom Panel	2
14	Base Cross Bar	2
15	Left Drawer Front Panel	1
16	Right Drawer Front Panel	1

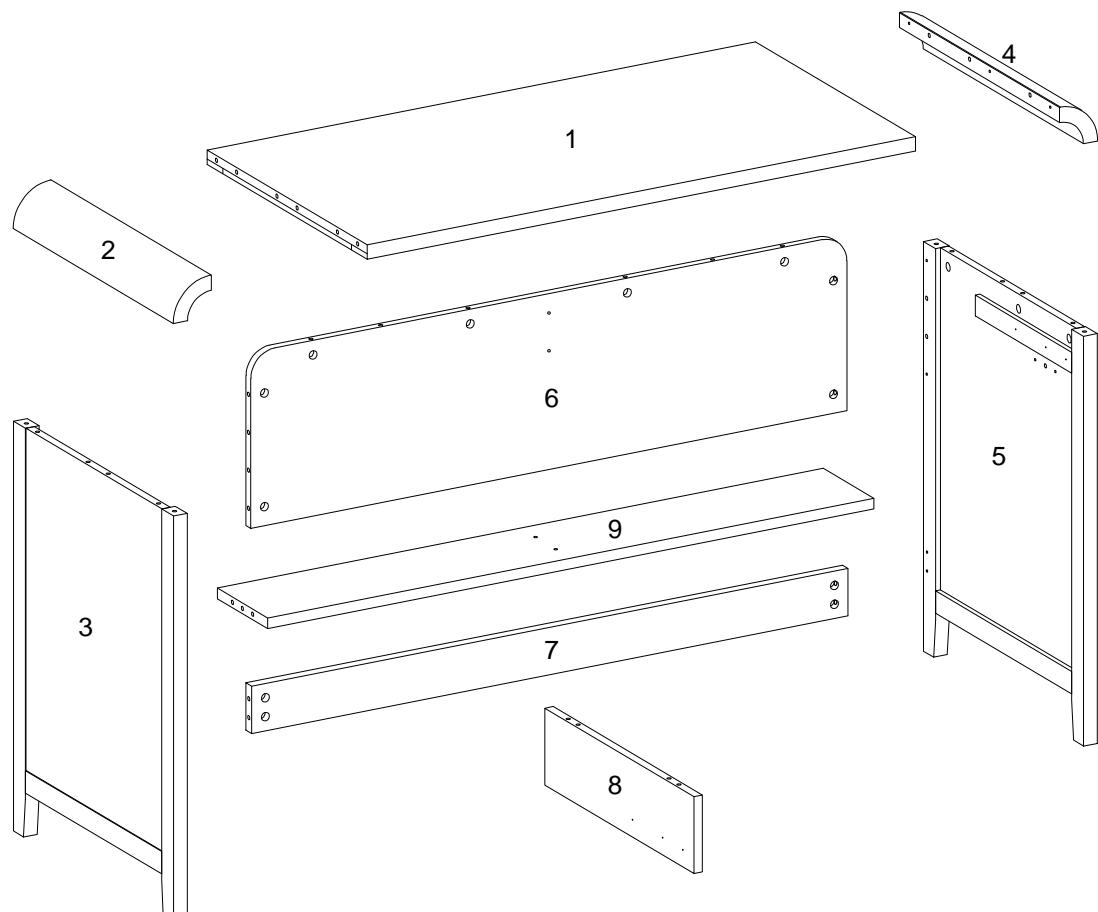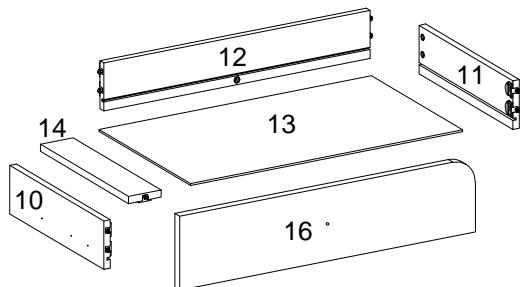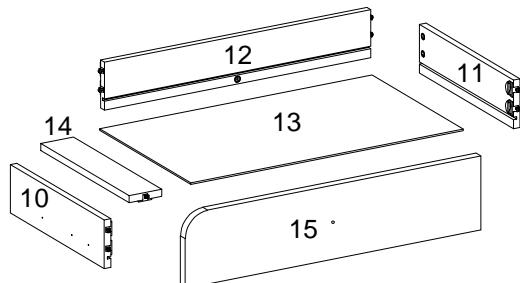




Hardware List

Part	Size	Name	Quantity	
A		8x30mm	Wooden dowel	22
B		6x34mm	Cam bolt	32
C		15x11mm	Cam lock	32
D			Glue tube	1
E		30mm	Sticker	32
F		3.5x12mm	Screw	24
G		6x50mm	Screw	2
H		M4	Hex Key	1
J		4x21mm	Handle Bolt	2
K			Handle	2
L			Drawer Glide * Note: This piece comes preassembled for shipping purposes and must be disassembled to complete the desk assembly.	2 sets



*The hardware quantities listed above are required for proper assembly.
Extra hardware pieces may be included.*

Step 1

Here we go. Start with your Desktop Panel (1).
Attach Cam Bolts (B) and insert Wooden Dowels (A).

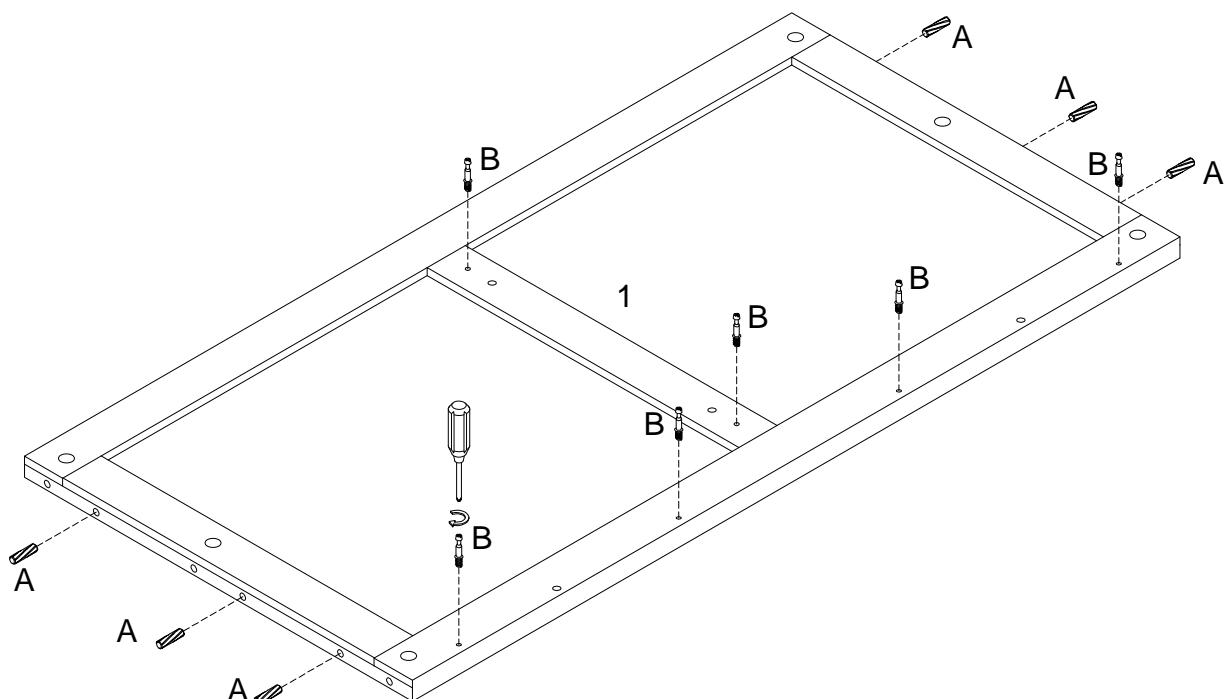

Tip

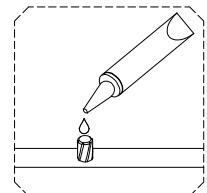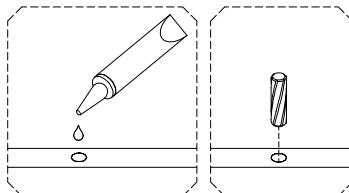


1: The provided glue is to secure wood dowels in place. When first inserting dowels, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately.

2: In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.


Step 2

Insert Cam Bolts (B) into the Back Panel (6). Then, place Wooden Dowels (A) into the dowel holes in the Back Panel (6), Drawer Support Panel (9), and the Drawer Divider (8).

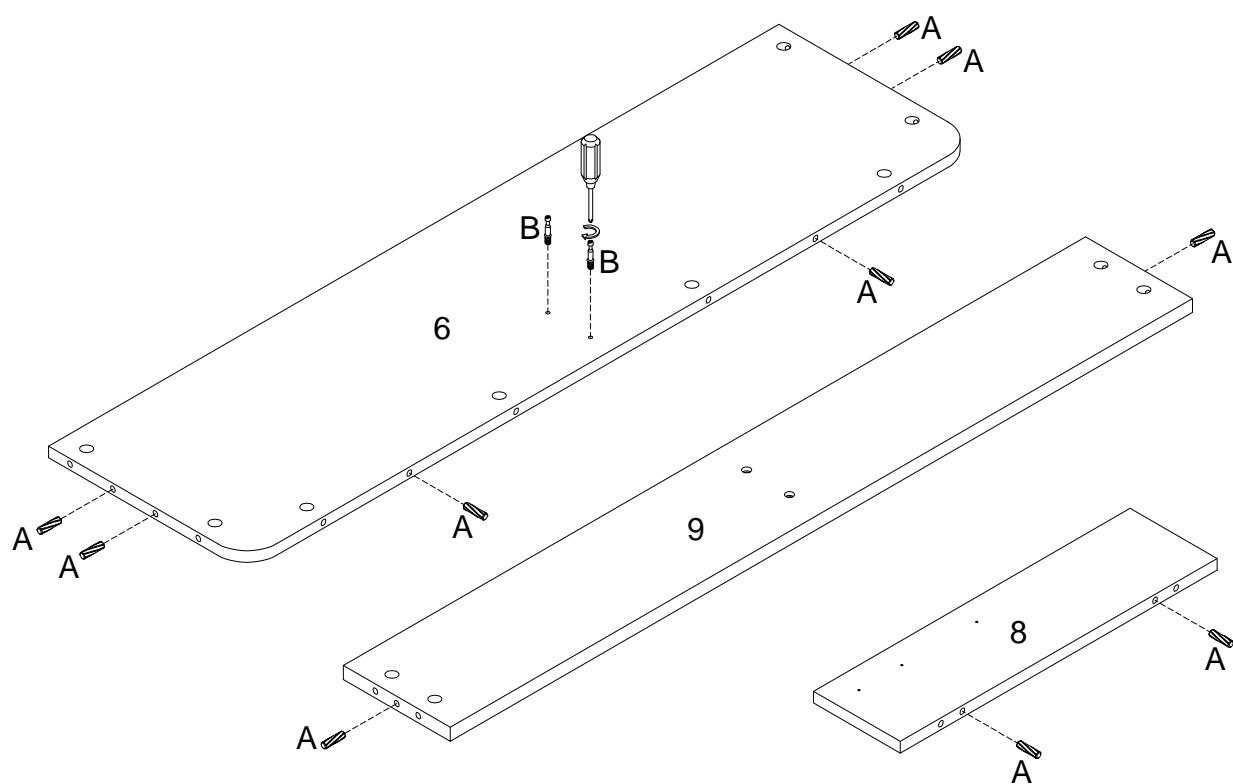


Step 3

Grab your Left Side Panel (3) and your Right Side Panel (5). Attach Cam Bolts (B) and insert Wooden Dowels (A).

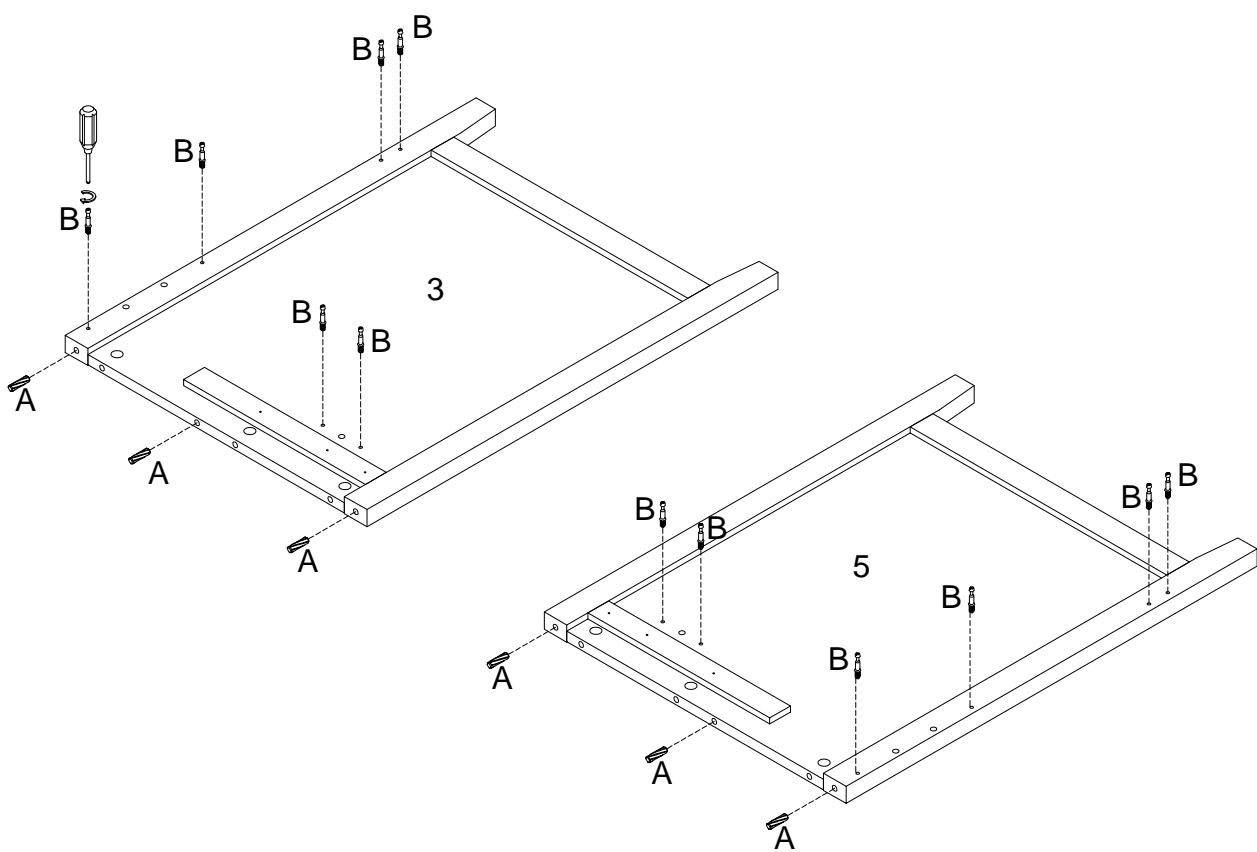


Step 4

Screw Cam Bolts (B) into both the Left Corner Panel (2) and the Right Corner Panel (4)

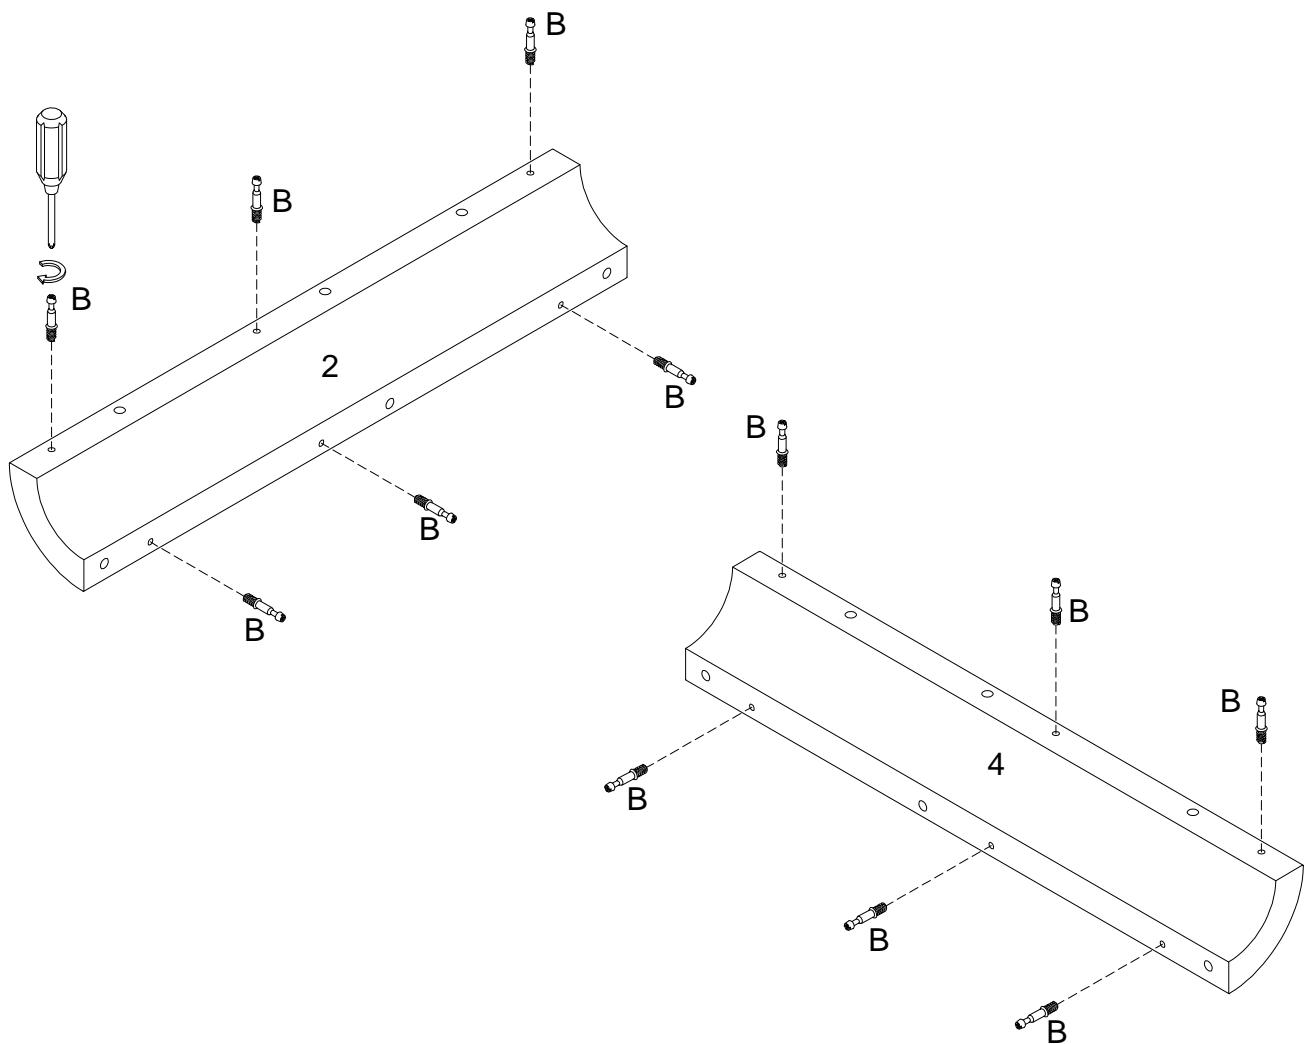


Step 5

Take the Drawer Glides (L) and detach the drawer members from the cabinet members. You can do so by pushing up on the plastic lever that's pictured here.

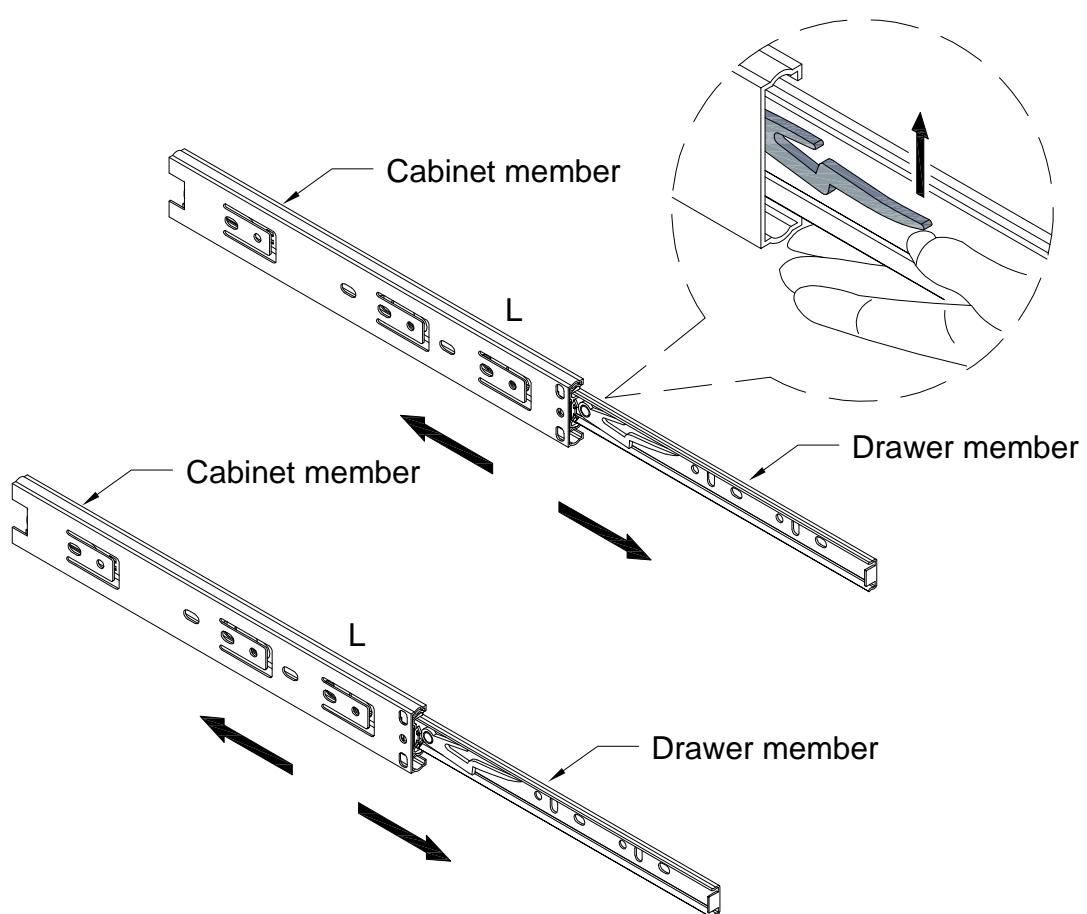


Step 6

Attach one Drawer Glide (L) cabinet member to the Left Side Panel (3) and one to the Right Side panel (5) using Screws (F).

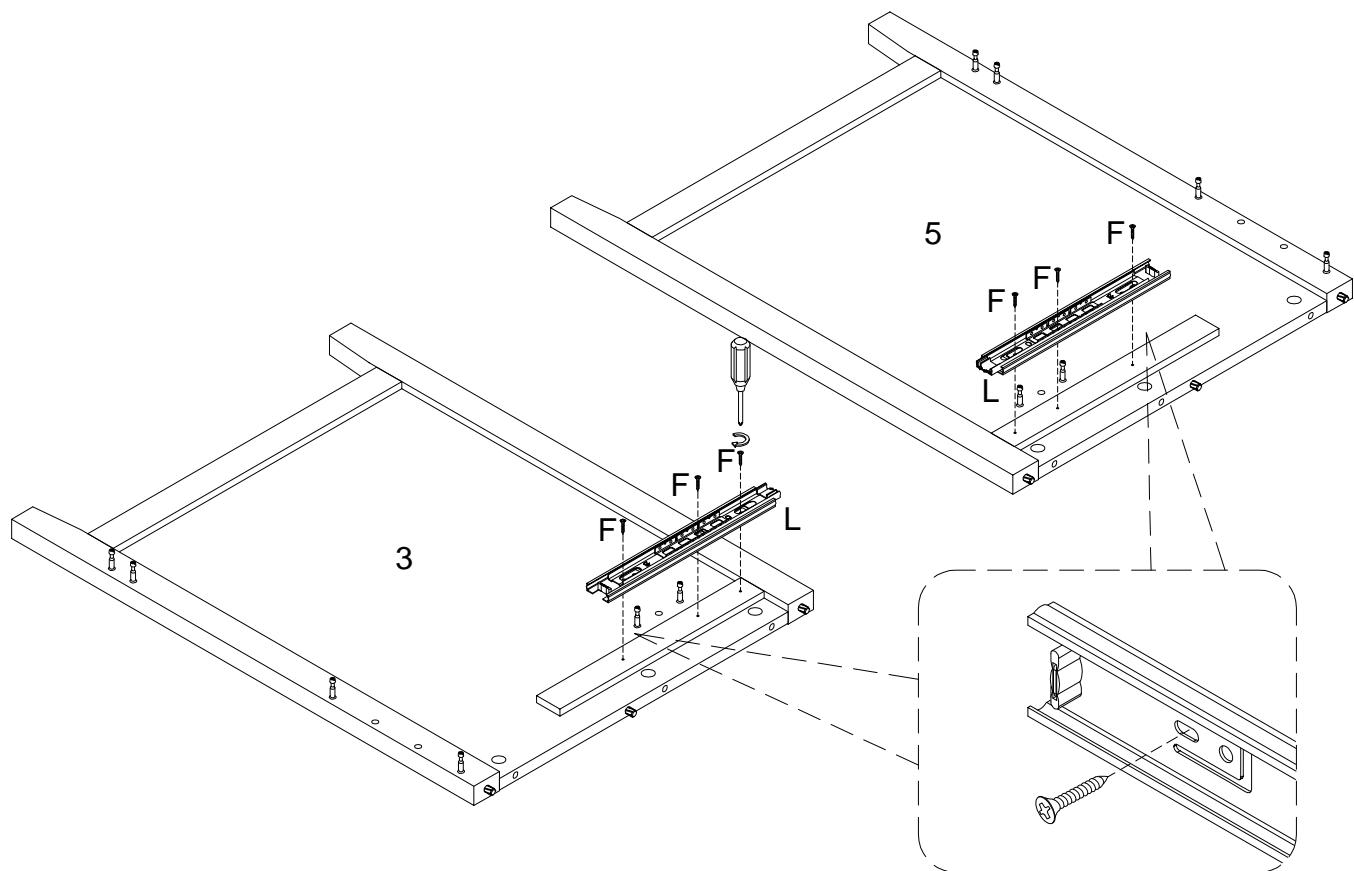


Step 7

Next, you will attach a Drawer Glide (L) cabinet member on each side of the Drawer Divider (8). Ensure that you are matching to the correct sides according to the diagram.

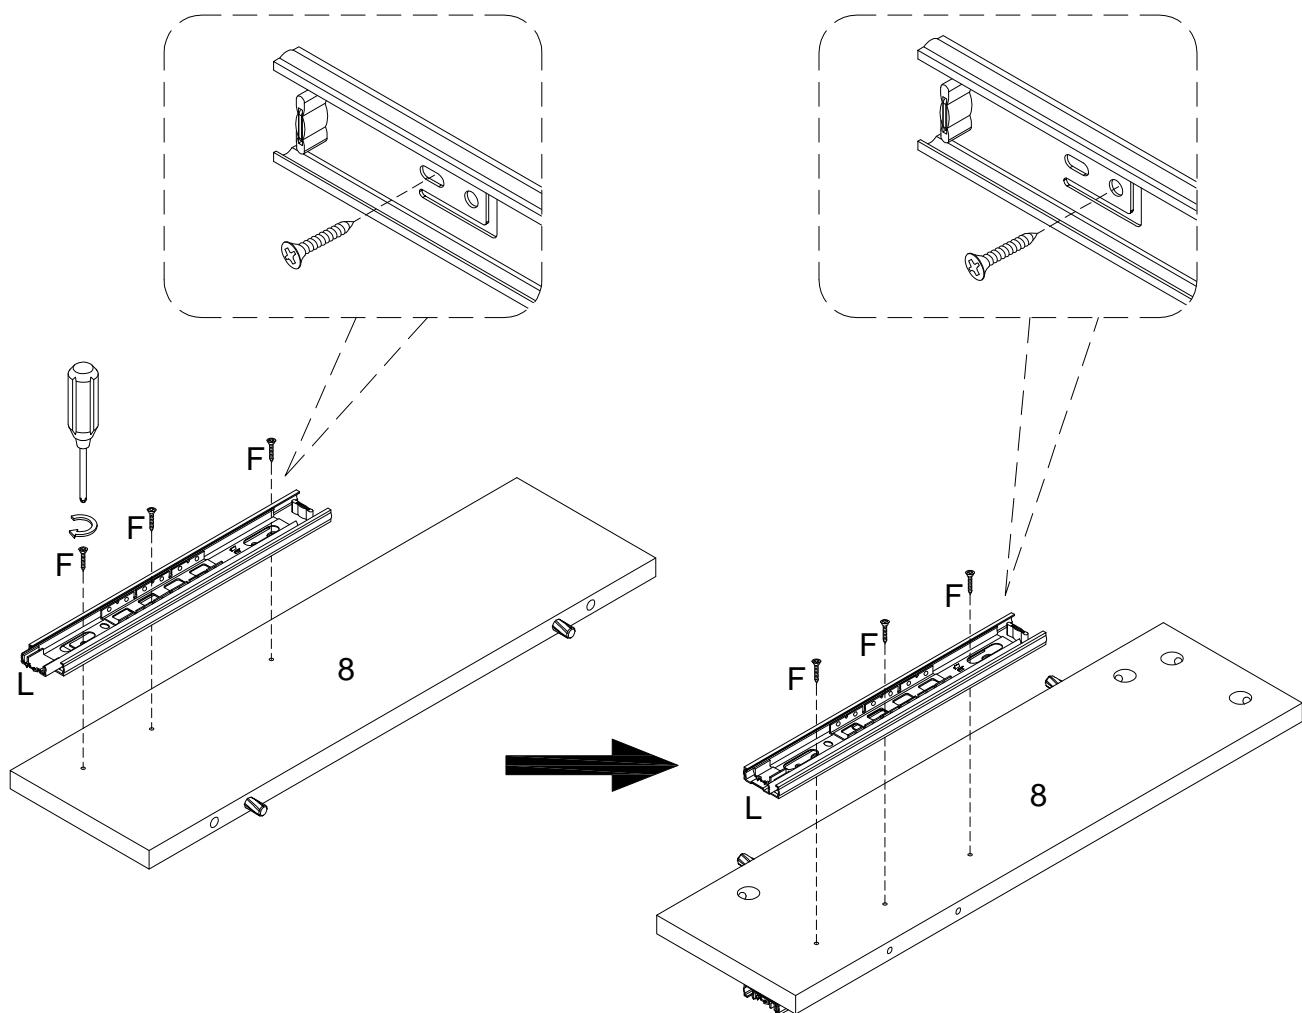


Step 8

Attach the Drawer Divider (8) to the Back Panel (6) using Cam Locks (C). Use a screwdriver to secure.

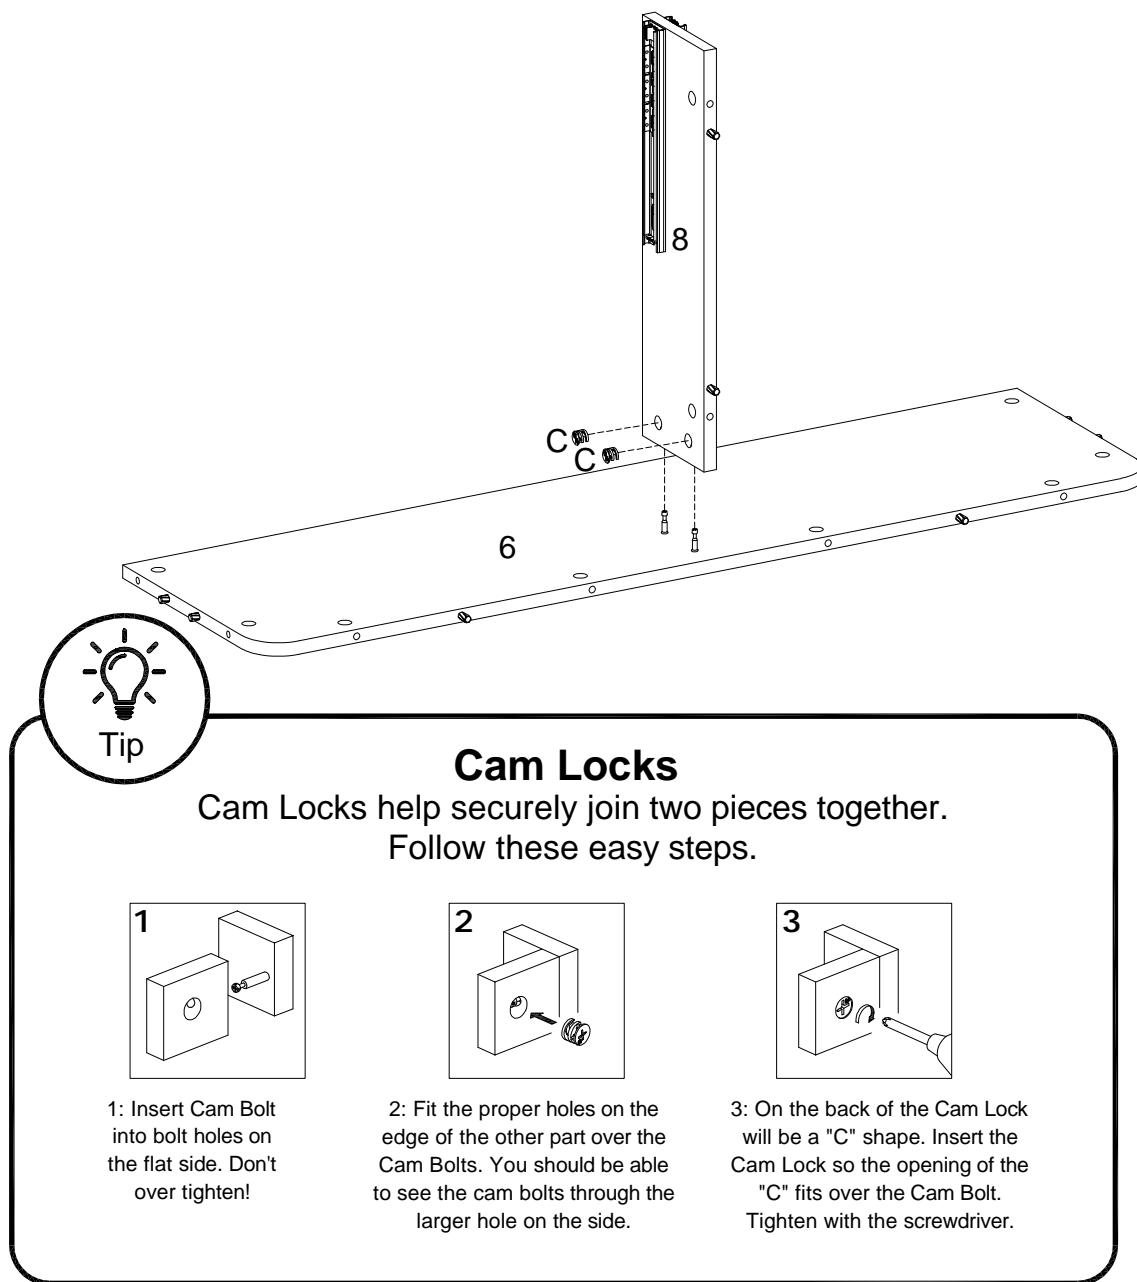


Step 9

Now, you'll attach the Desktop Panel (1) to the Back Panel (6) and the Drawer Divider (8). Using Cam Locks (C), secure with a screwdriver.

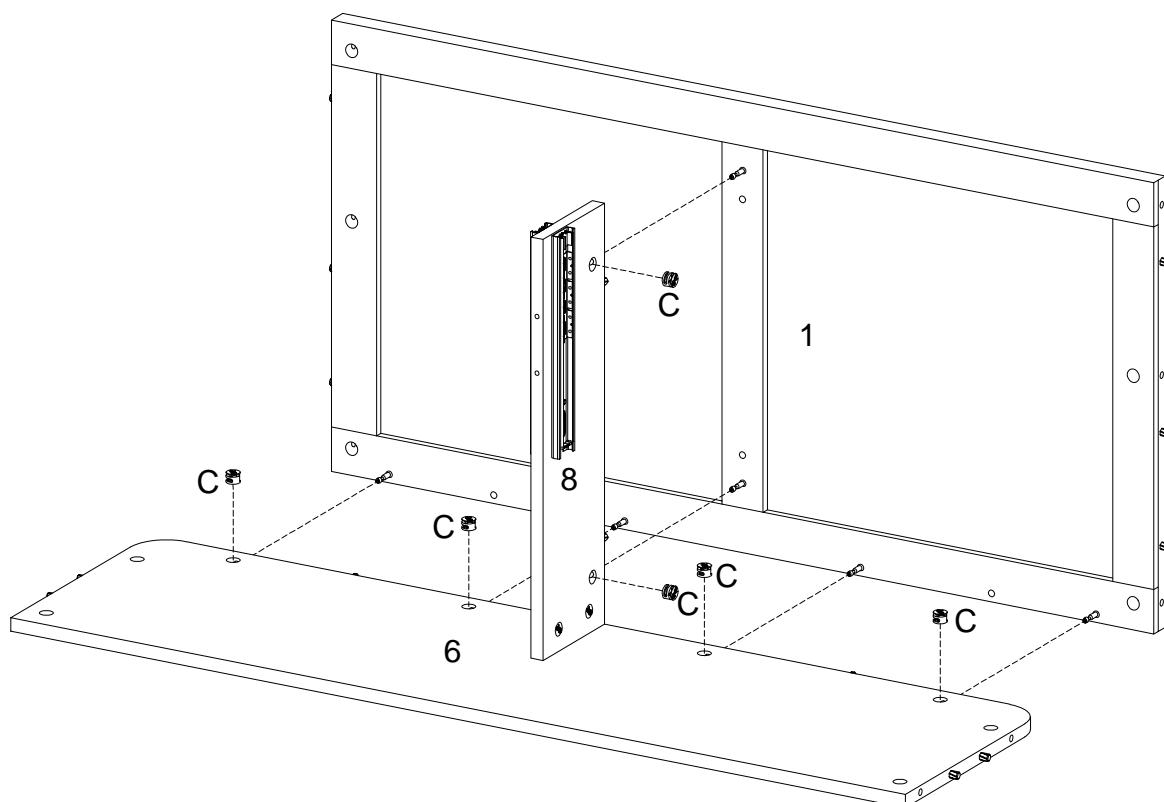


Step 10

Secure the Drawer Support Panel (9) to the bottom of the Drawer Divider (8) using Screws (G).

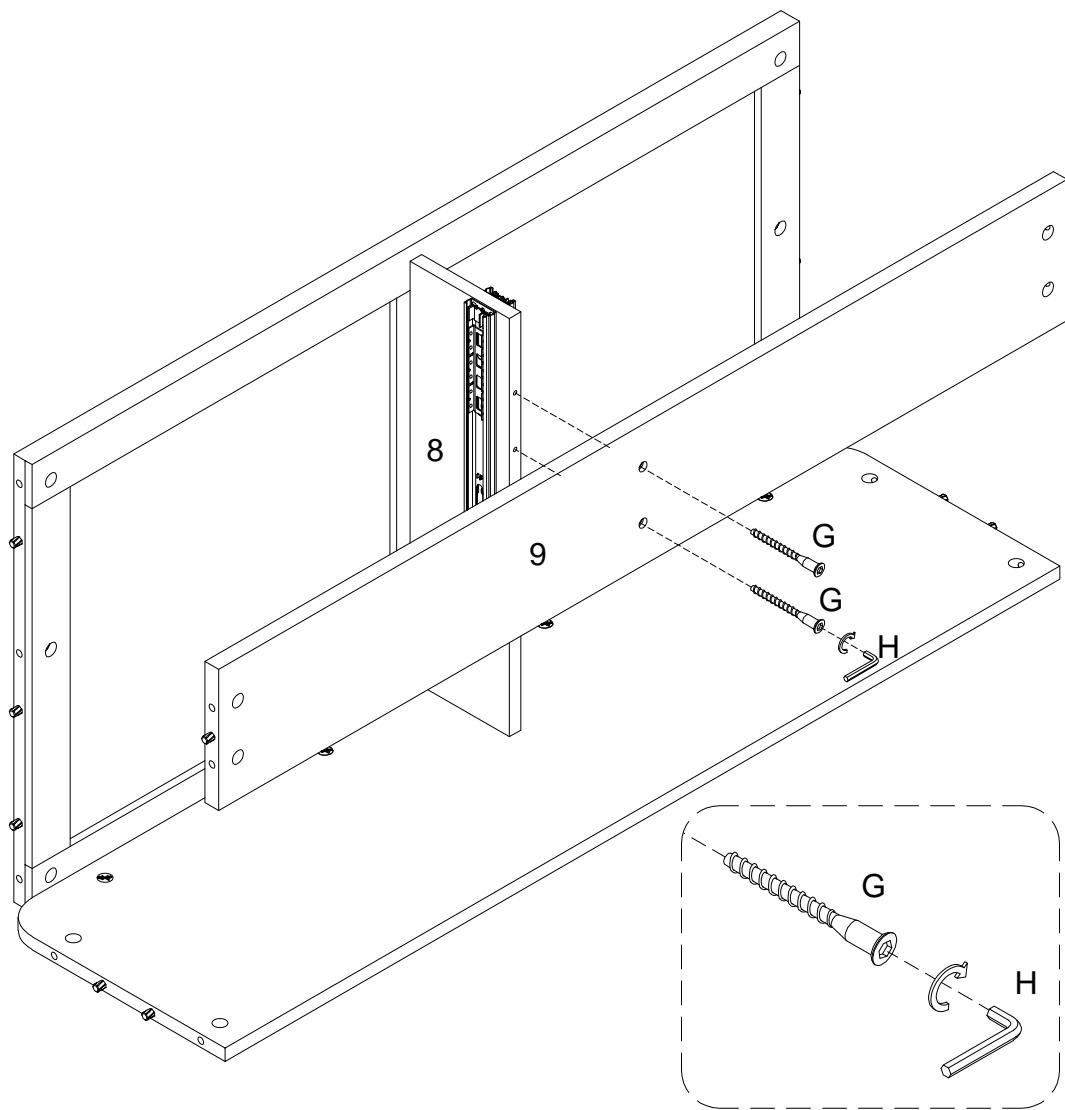


Step 11

Attach the Left Corner Panel (2) to the Left Side Panel (3). Secure with Cam Locks (C). Following the same steps, attach the Right Corner Panel (4) to the Right Side Panel (5). Secure with Cam Locks (C).

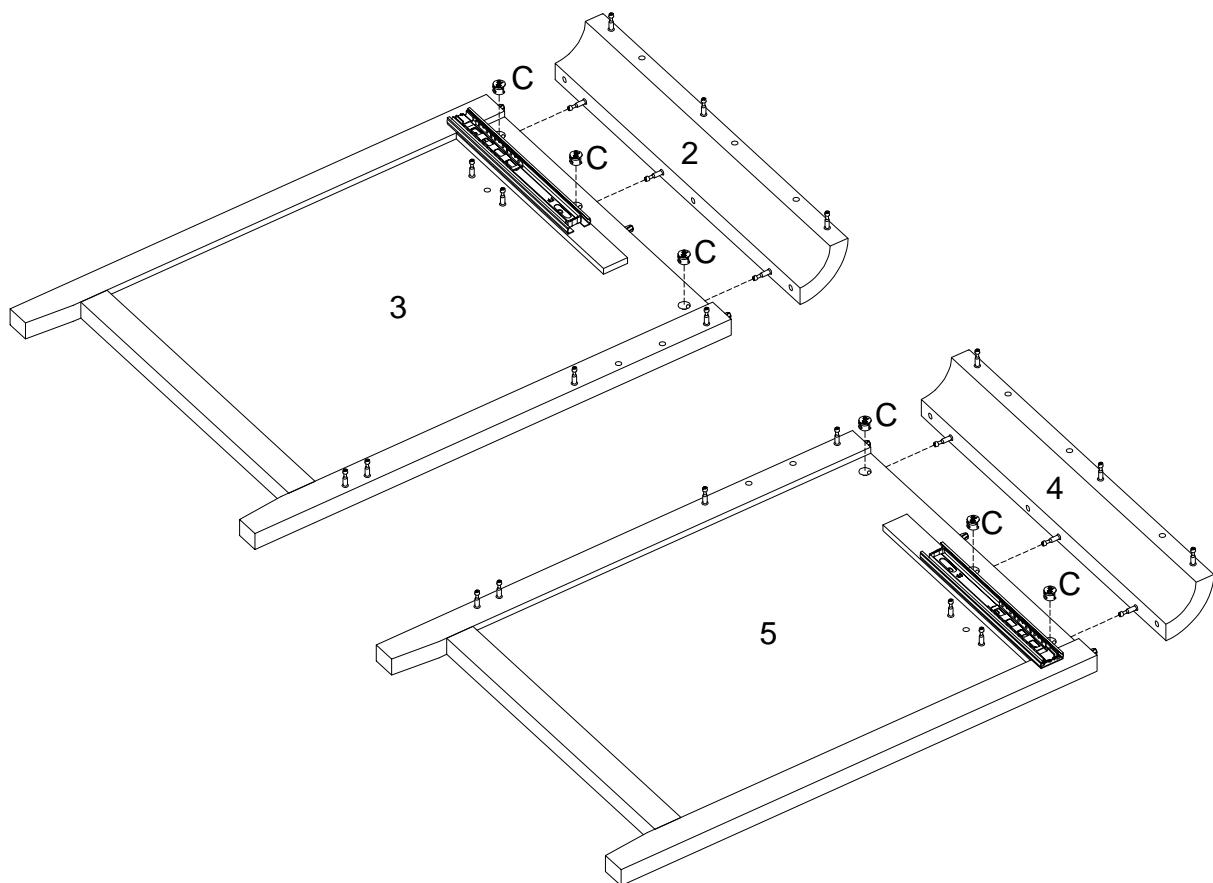


Step 12

Attach the Left Side Panel (3) and Left Corner Panel (2) to the body of the Desk. It will attach to the Desktop Panel (1), Drawer Support Panel (9), Back Panel (6), and Support Panel (7). Secure with Cam Locks (C).

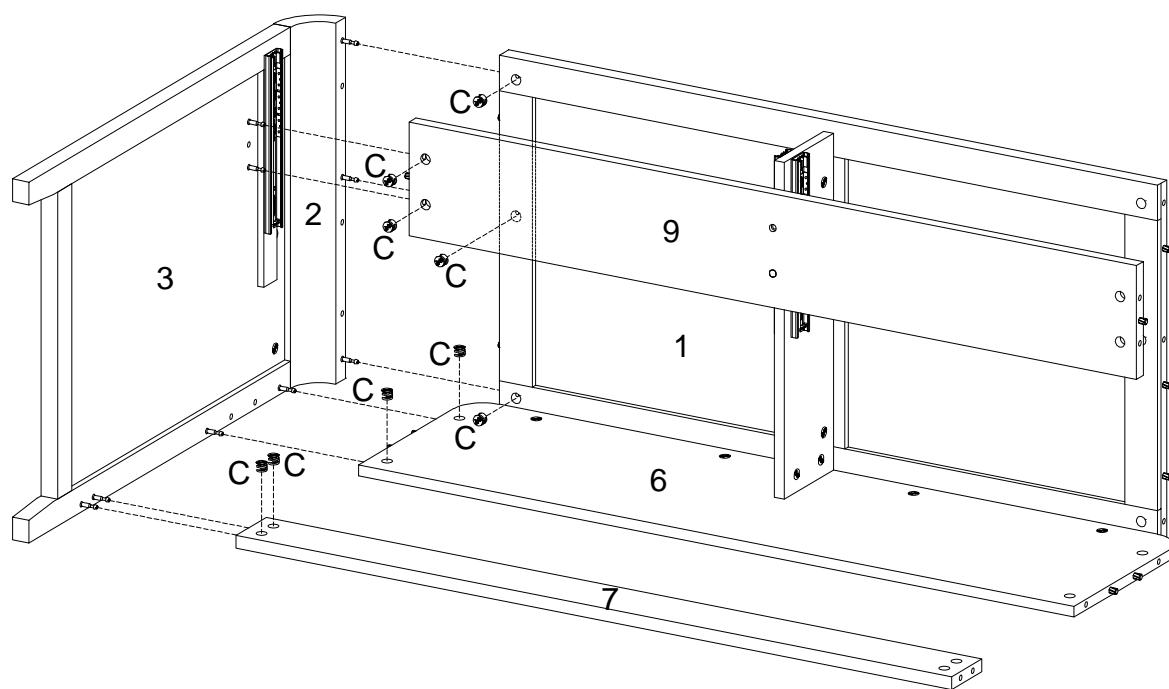


Step 13

Repeat the same process with the Right Side Panel (5) and Right Corner Panel (4). Secure with Cam Locks (C).

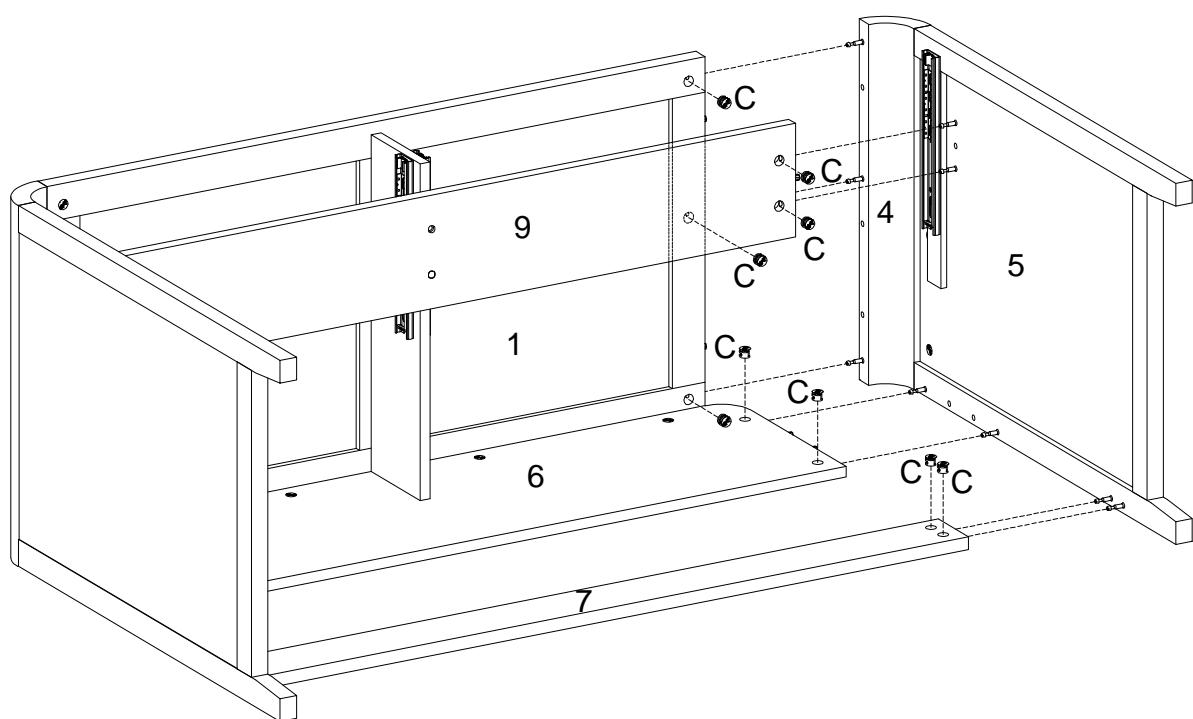


Step 14

Align the Handles (K) with the drill holes located on the outside of the Left Drawer Front Panel (15) and Right Drawer Front Panel (16). Insert the Handle Bolts (J) from the inside of the drawer front panels, aligning them with the handles on the outside. Secure them with a screwdriver.

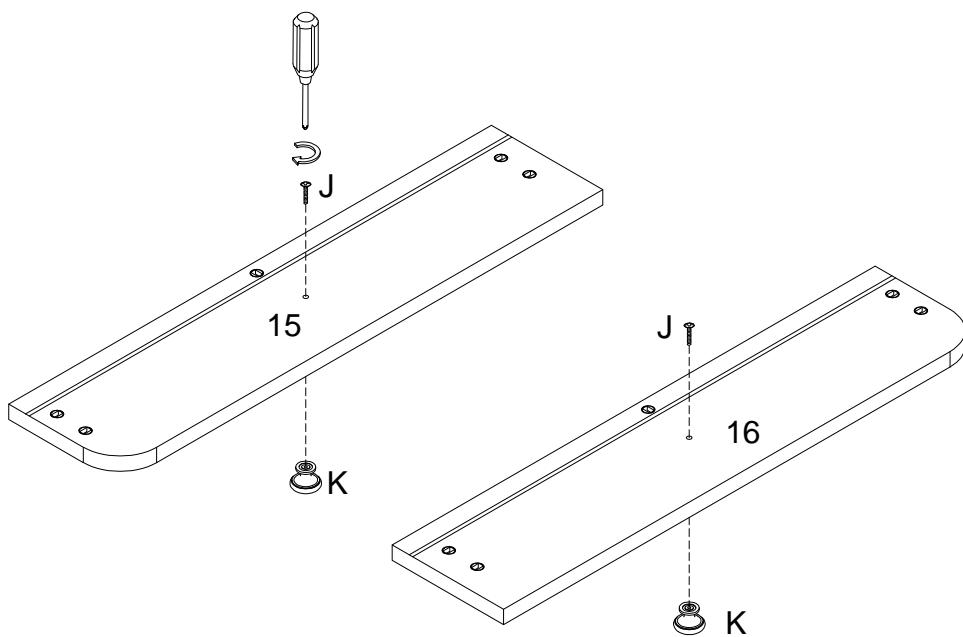

Step 15


Now, take the drawer members you previously detached from the Drawer Glides (L). Attach to Drawer Sides (11) x2 and (10) x2. Ensure that they are facing the correct direction according to the diagram.

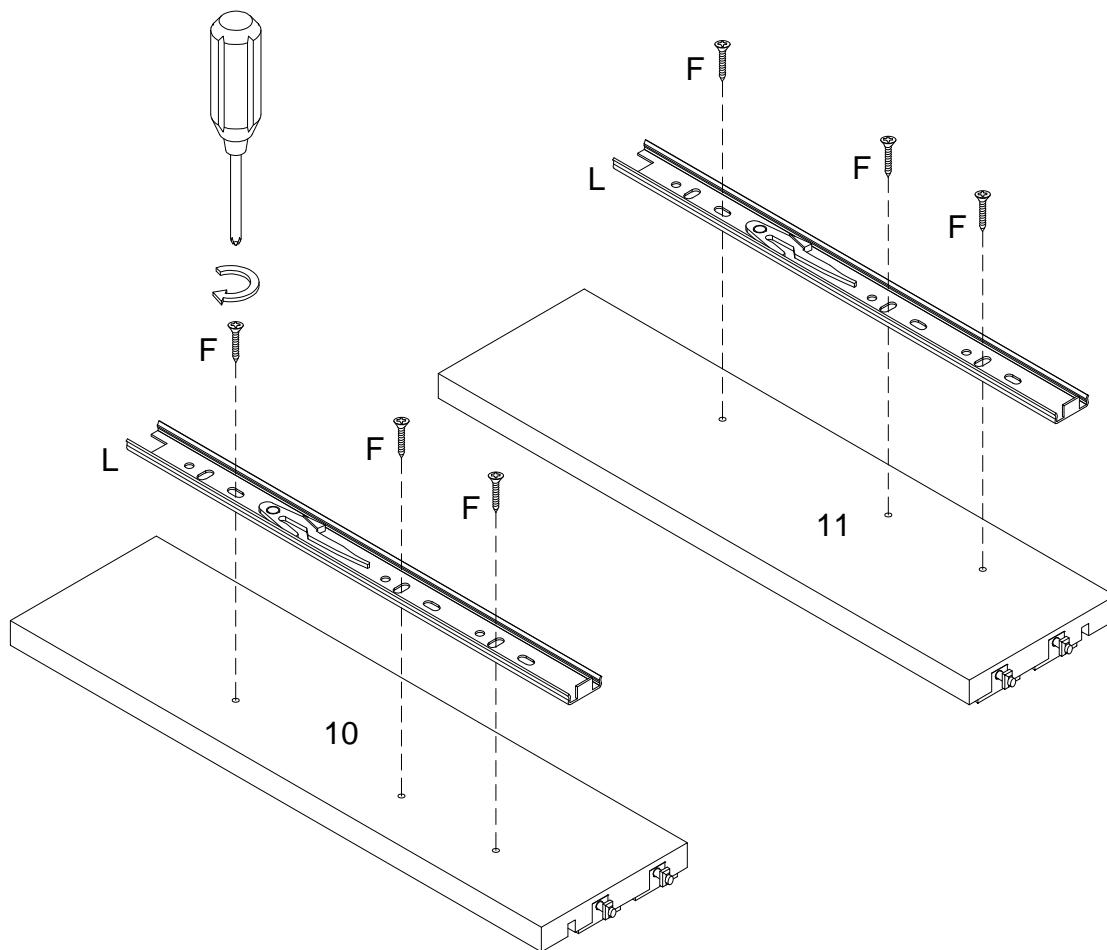


x 2

Step 16


Line up the dowels and pin holes on 10, 11, and 12, then flip the tabs on the back of the Drawer Back Panels (12) to lock them in place.

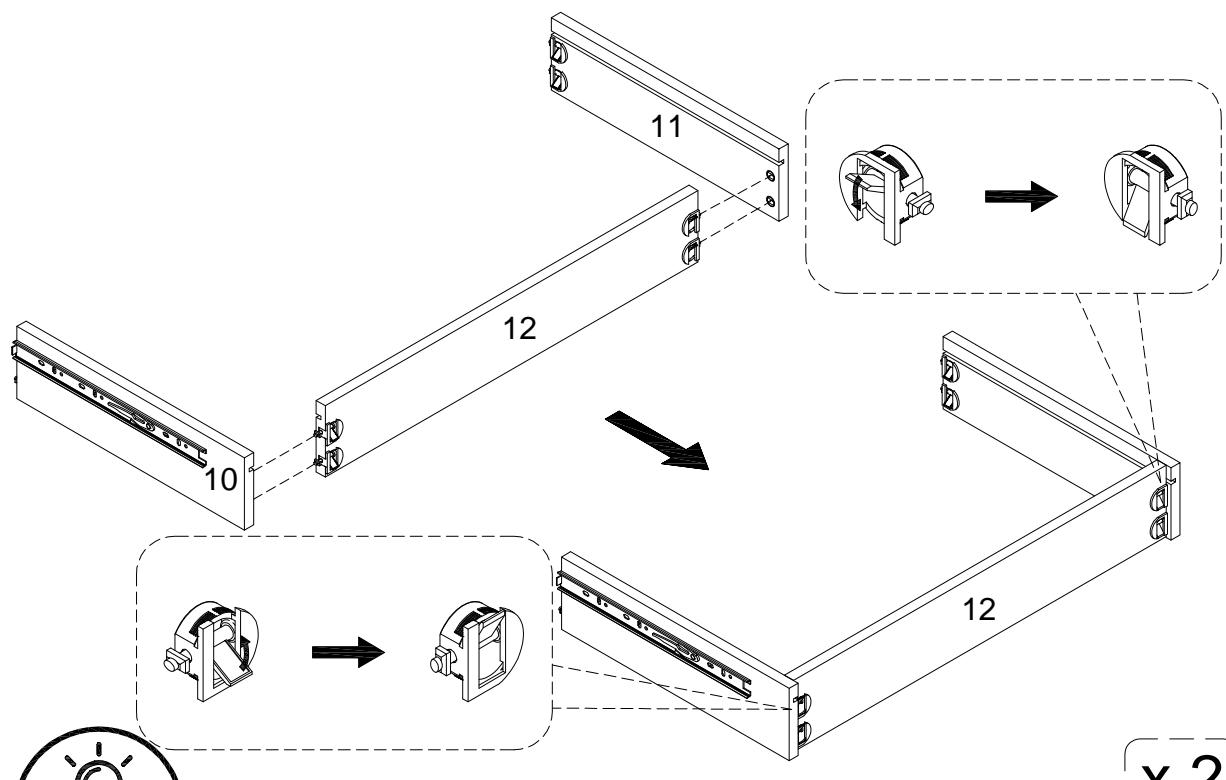

Quick Assembly Drawers

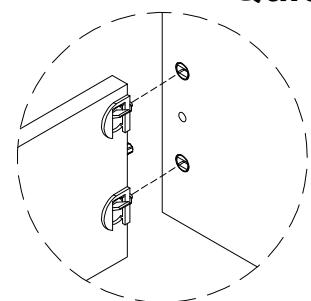

1. Make sure the quick assembly drawer pin is aligned with the corresponding hole.

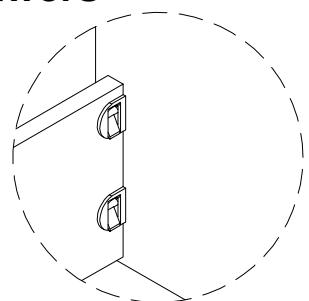


2. Once the pin is inserted correctly, flip the metal lever in the opposite direction to ensure the panels are firmly locked together.

x 2

Step 17


Attach Base Cross Bar (14) to Drawer Back Panels (12) flipping toggle to lock.

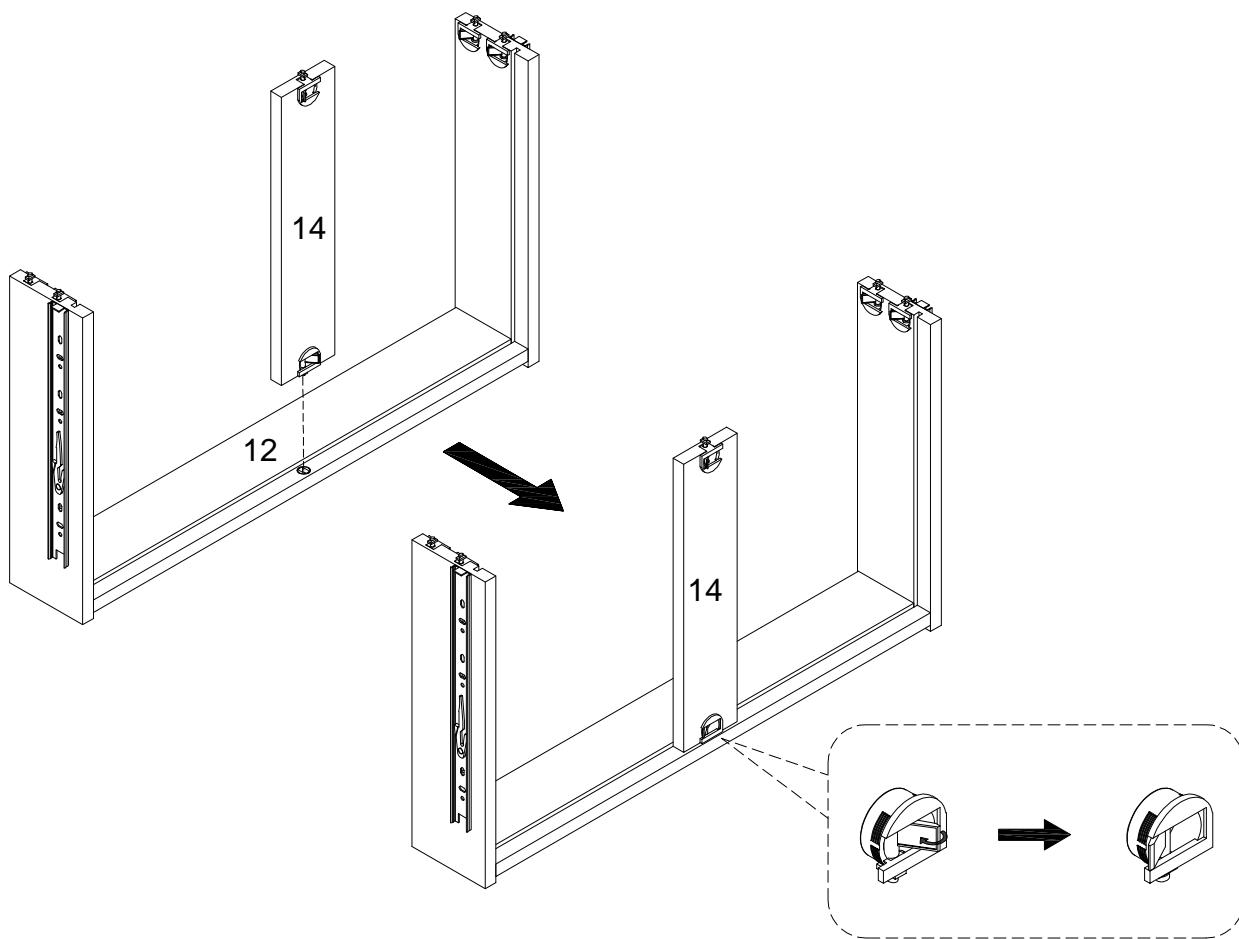

x 2

Step 18


Slide Drawer Bottom Panel (13) into place between grooves on side panels and back panel.

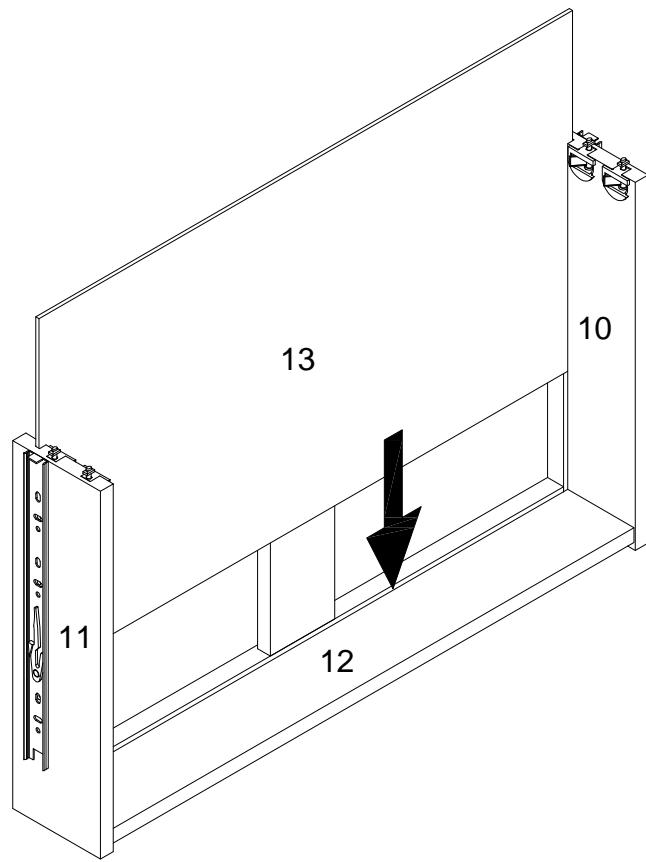

x 2


Step 19

Attach Left Drawer Front Panel (15) to pins located on parts 10,11 and 14. Flip toggle to lock into place.

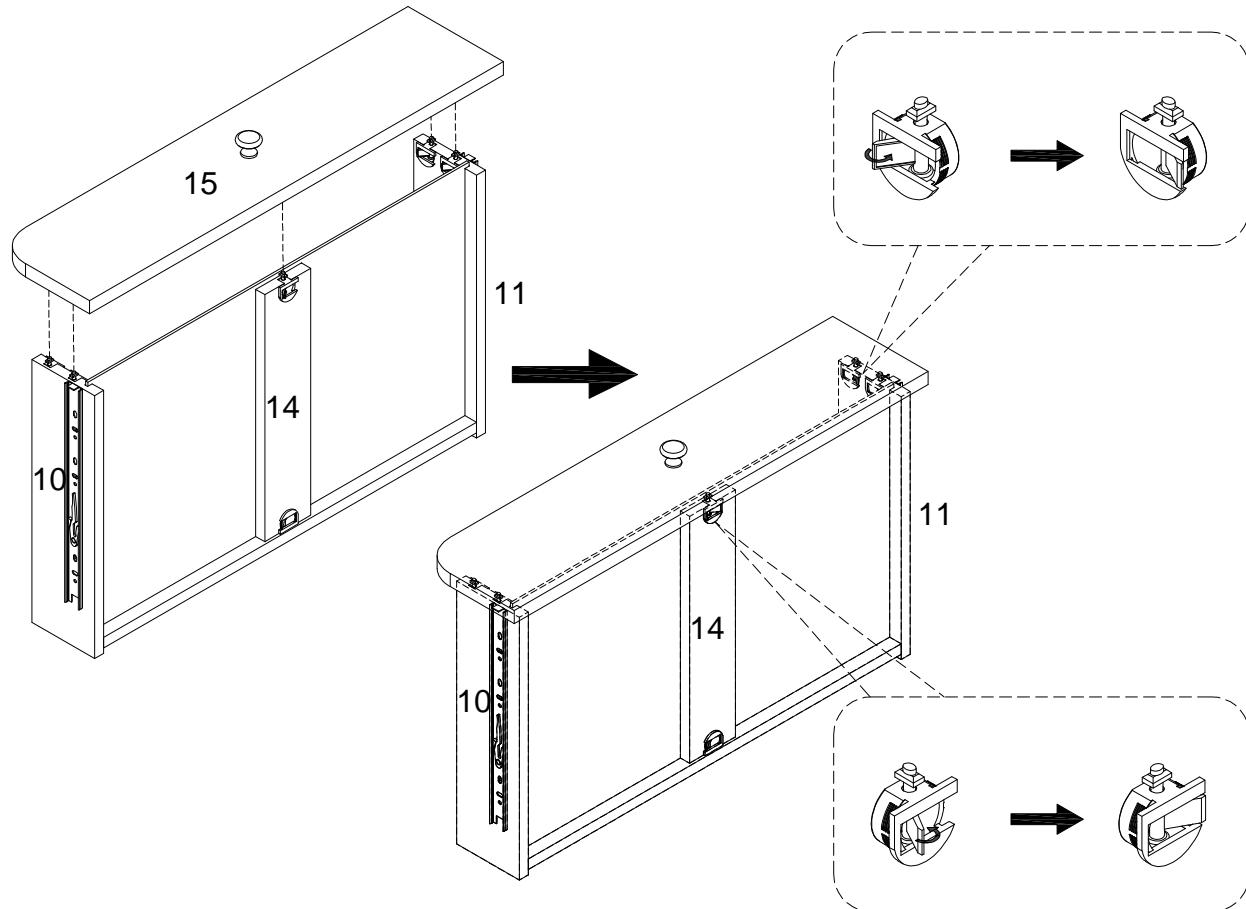



Step 20

Repeat with Right Drawer Front Panel (16).

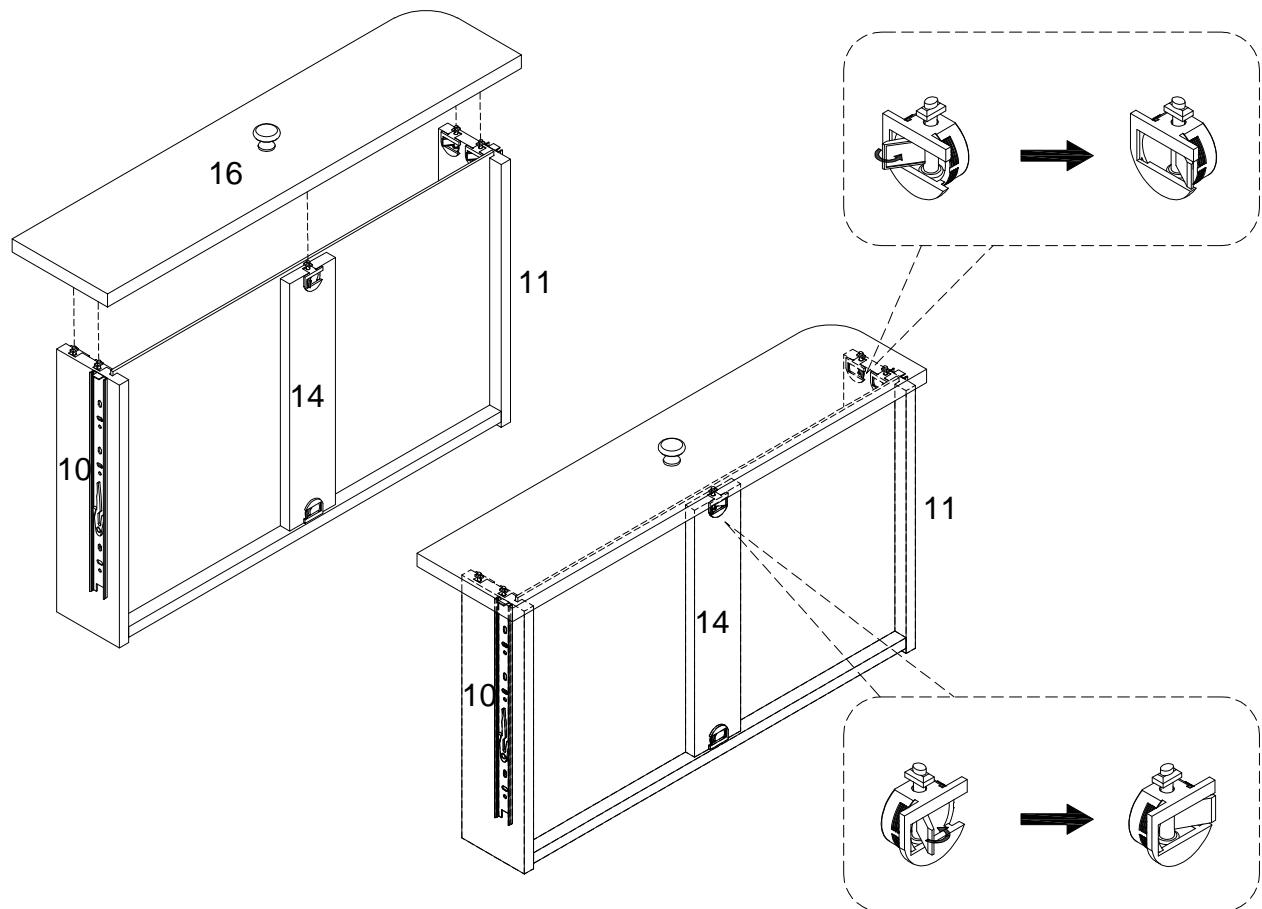


Step 21

With the help of a friend, place the dresser upright. Place Stickers (E) over any visible cam locks.

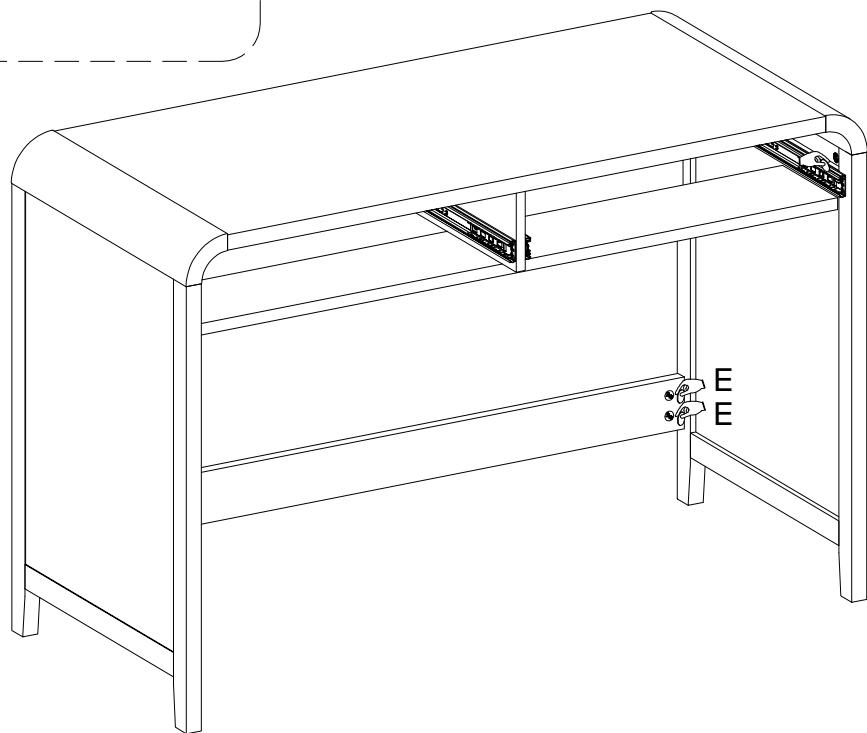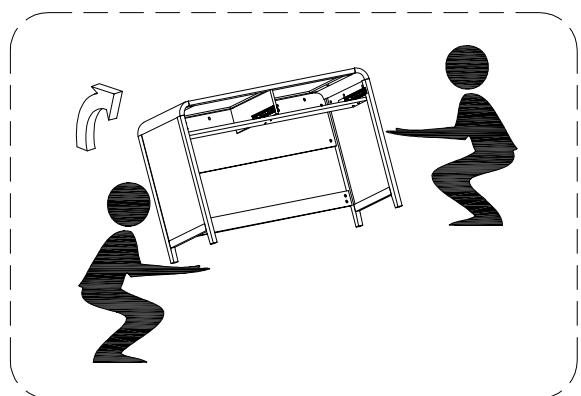


Step 22

Insert drawers into place by lining up the cabinet member and drawer member pieces of your Drawer Glides (L). And there you have it! Good work, enjoy your new desk!

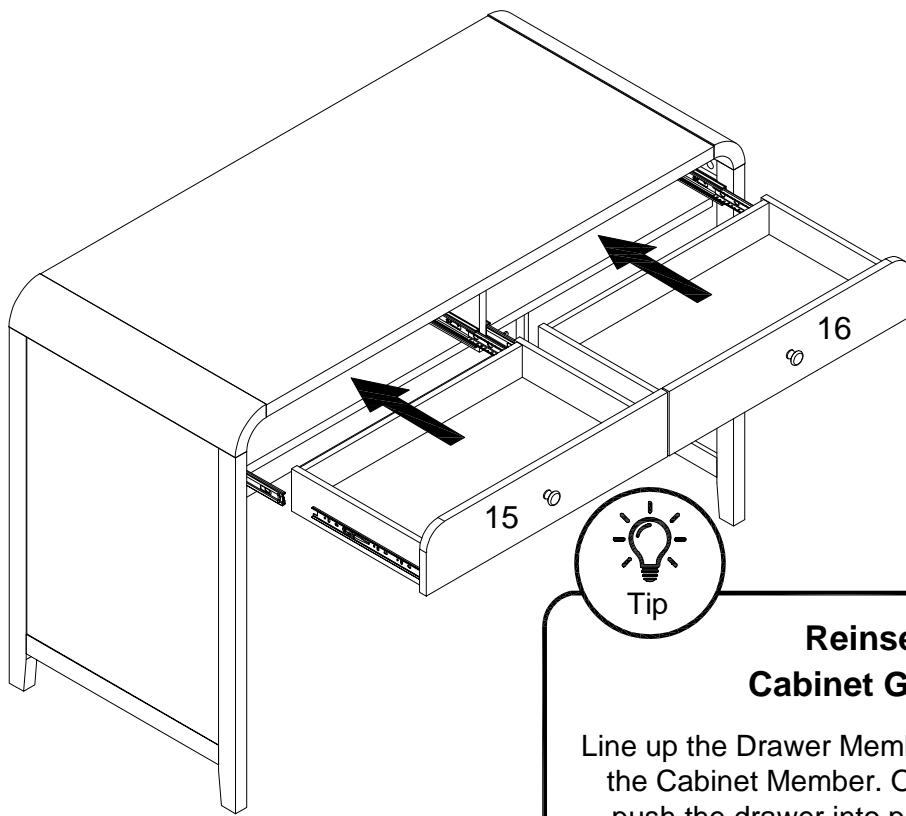


Reinserting your Cabinet Glides together

Line up the Drawer Member so it is inside the guides of the Cabinet Member. Once the connection is made, push the drawer into place entirely. It may not be a smooth glide on your first try, but will improve after it's fully inserted.

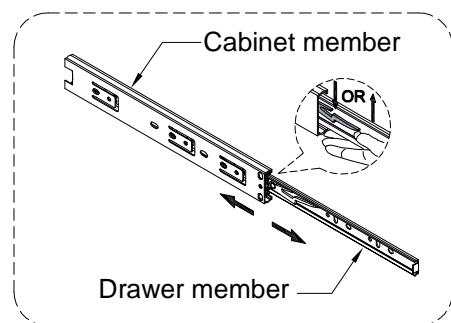

Final Assembly

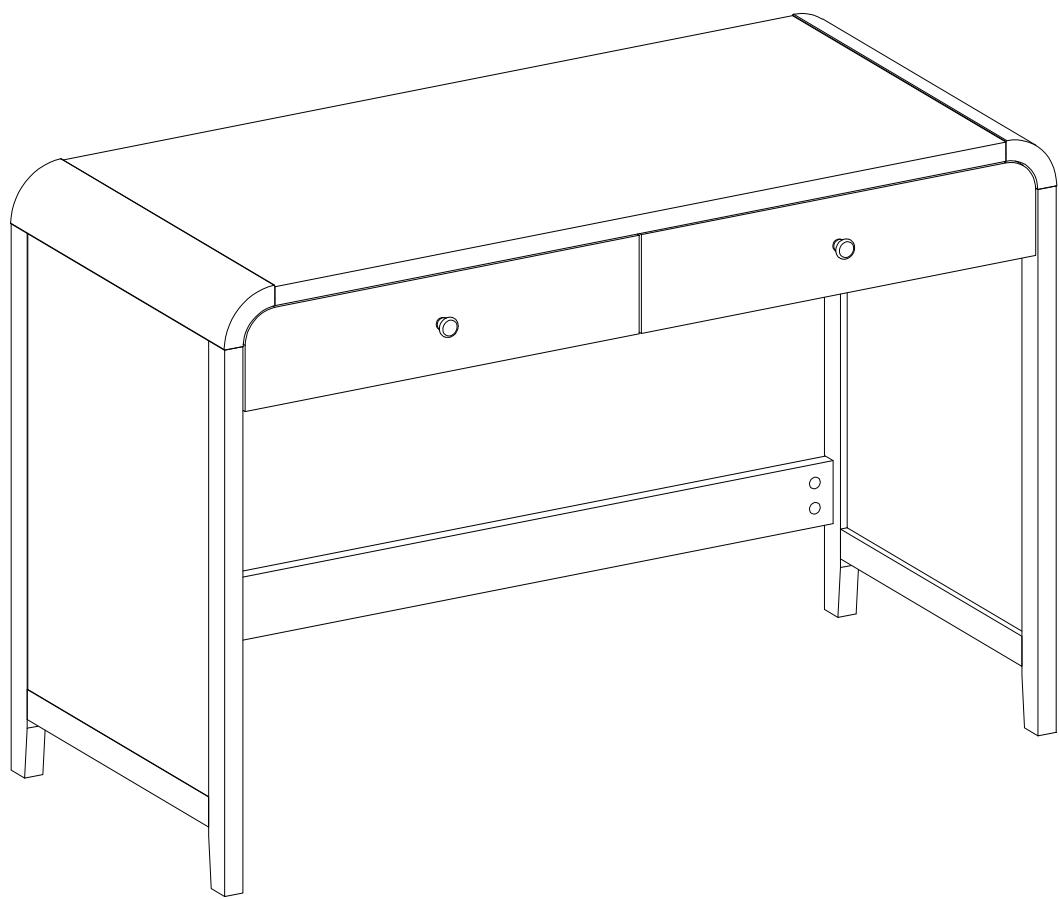

Congratulations on your new piece of furniture!

We would love to hear about it and see it.
Please leave us a review or post a picture with
#mywalkeredisonhome

Assembling furniture can be tricky sometimes.

Our customer service team, located in Utah, is here for product information, help assembling a product, or for any other customer support issue

Call us at **801-433-3008**

Email us at **service@walkeredison.com**

Visit our Customer Service website at
walkeredison.com/pages/customer-service

We are available to help Monday -Thursday 8am-5pm, Friday 8am-3pm MST

For details on Assembly Videos, Assembly Instructions, Replacement Parts, and Customer service,

SCAN HERE

