


**WALKER EDISON**  
TM

## Maya 70" Sideboard

SKU# WEMYA11704

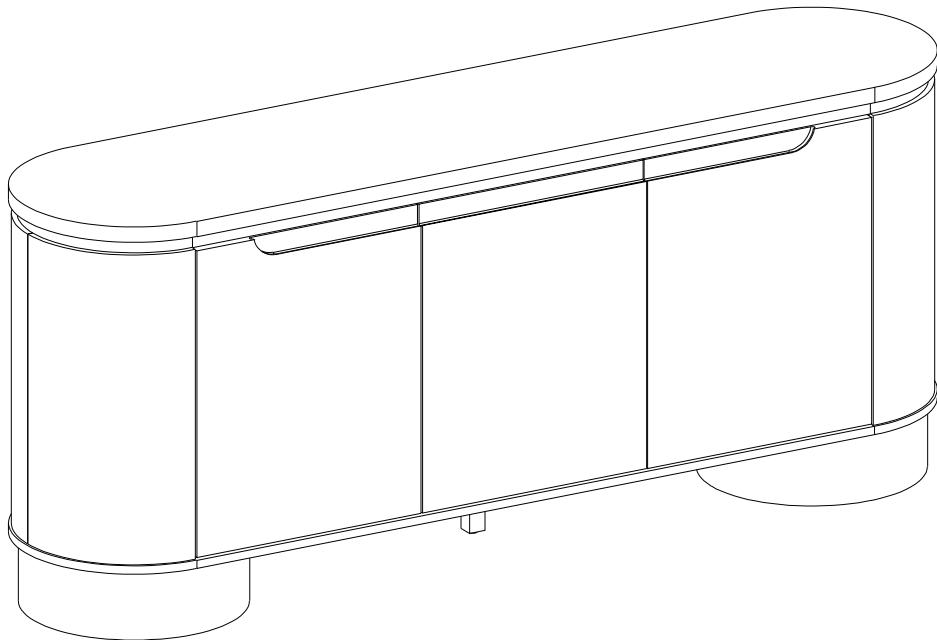

**For Residential Use Only**


Please visit our website for the most current instructions, assembly tips, report damage, or request parts. [www.walkeredison.com](http://www.walkeredison.com)

# WE Time to get started

Set up a clean and soft workplace to get started and avoid damage during the assembly. It also helps to double-check that you've got all the pieces and parts before diving in to assembly.

---


## Estimated time for assembly

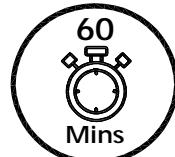

---

## People recommended for assembly

Make it a team effort! Grab a friend for quicker, easier assembly.

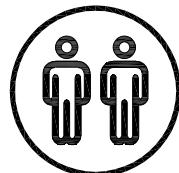


2 People Build

---

## Tools Needed


Grab a Phillips head screwdriver to conquer this assembly

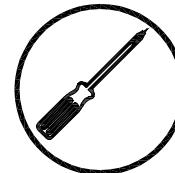

---

## Use power tools with caution

You can cause cracking or damage to the material and easily strip the hardware. If you choose to use a power tool, your product will no longer be covered under Walker Edison's warranty.

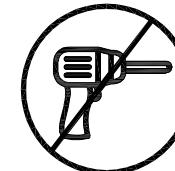

---

## Glue is provided to secure wood dowels in place


When inserting dowels, locate the appropriate hole, place a small amount of glue in the hole, and then insert the dowel. Wipe away excess glue immediately.



**Scan to get assembly tips and help!**


# WE Parts List

Part Number	Description	Quantity
1	Top Panel	1
2	Bottom Panel	1
3	Left Back Side Panel	1
4	Left Front Side Panel	1
5	Left Front Molding	1
6	Right Back Side Panel	1
7	Right Front Side Panel	1
8	Right Front Molding	1
9	Left Middle Divider Panel	1
10	Right Middle Divider Panel	1
11	Front Upper Rail	1
12	Upper Back Panel	1
13	Left Fixed Divider	1
14	Right Fixed Divider	1
15	Lower Back Panel	1
16	Left Door Panel	1
17	Middle Door Panel	1
18	Right Door Panel	1
19	Bottom Rail	1
20	Middle Foot	1
21	Leg Frame	2

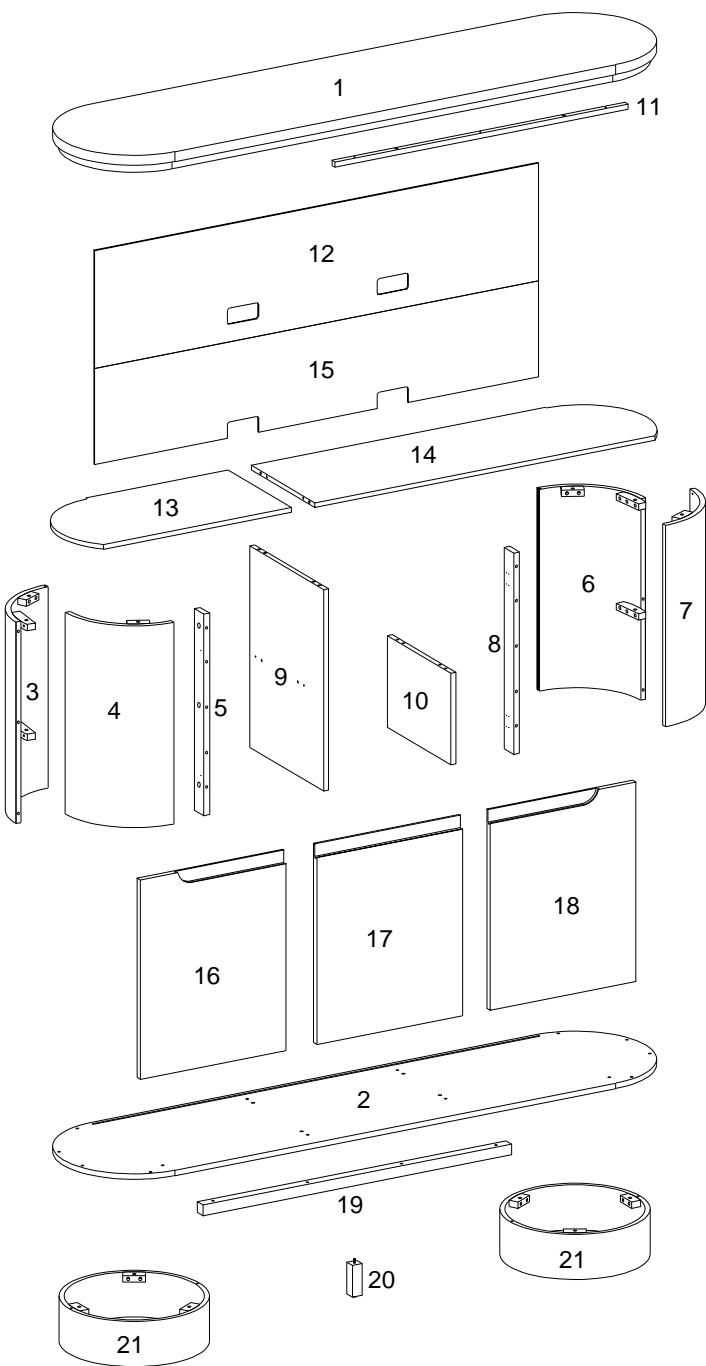



# Hardware List

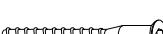Part	Size	Name	Quantity
A		8x30mm Wooden dowel	18
B		6x35mm Cam bolt	14
C		15x9.5mm Cam lock	14
D		30mm Sticker	14
E		6x30mm Wooden dowel	8
F		8x20mm Wooden dowel	2
G		3x12mm Screw	8
H		18x18x2mm Connecting iron sheet	4
J		1/4"x30mm Bolt	18
K		1/4"x11x1.5mm Lock washer	18
L		1/4"x16x1.5mm Washer	18
M		M4mm Hex Key	1
N		6x50mm Bolt	14




# Hardware List

Part	Size	Name	Quantity	
P		Plastic wedge	18	
Q		3x17mm	Screw	18
R		35mm	Hinge	6
S		3.5x15mm	Screw	36
T		8x3mm	Rubber pad	3
U		4x12mm	Screw	2
V		4x25mm	Screw	9
W		Plastic strap	2	
X		Wall Anchor	2	
Y		Glue tube	1	

*The hardware quantities listed above are required for proper assembly.  
Extra hardware pieces may be included.*


# Step 1

Let's get started! Using a Phillips head screwdriver, screw cam bolts (B) into the Top Panel (1).

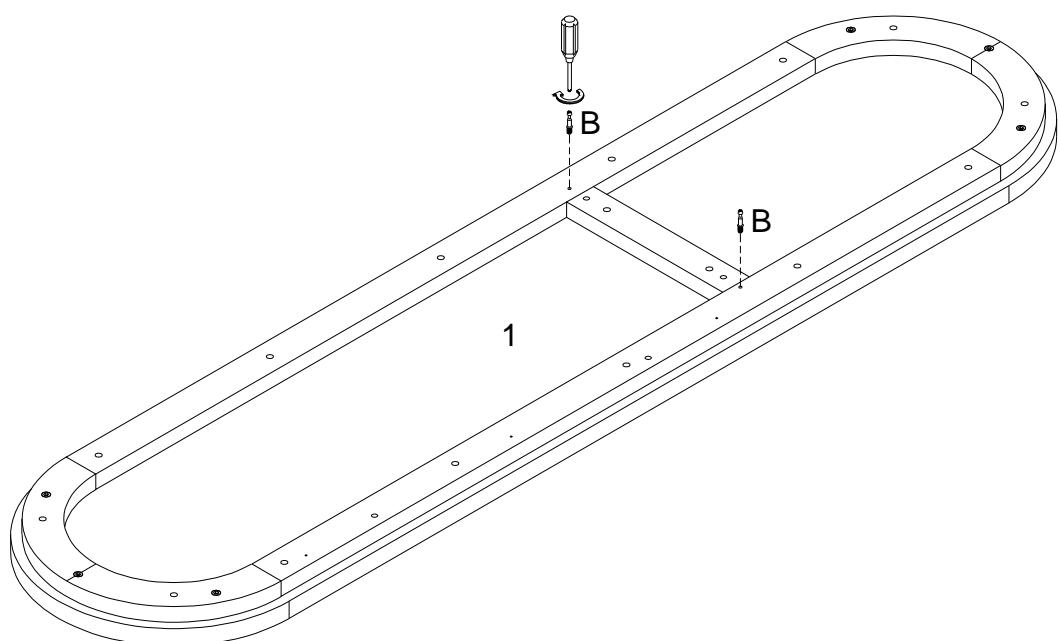

## Step 2

Insert wooden dowels (E) into both Leg Frames (21).

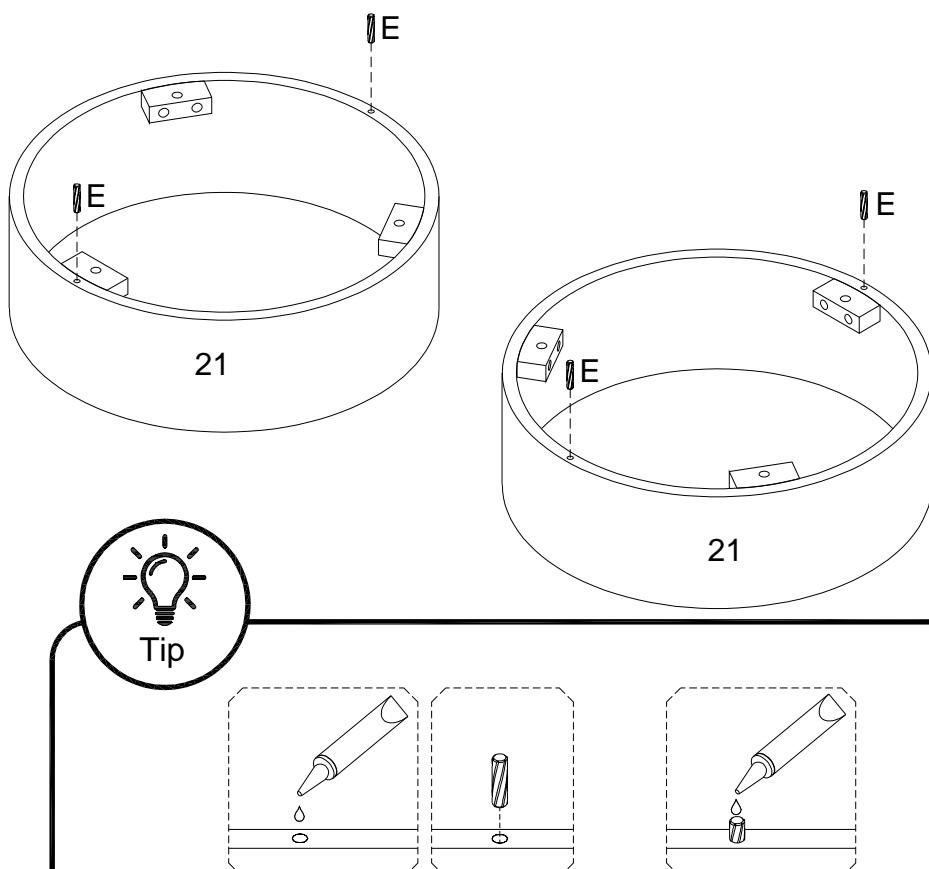


1: The provided glue is to secure wood dowels in place. When first inserting dowels, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately.

2: In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.


# Step 3

Insert wooden dowels (A) into the Right Middle Divider Panel (10) and wooden dowels (E) into the Left Fixed Divider (13).

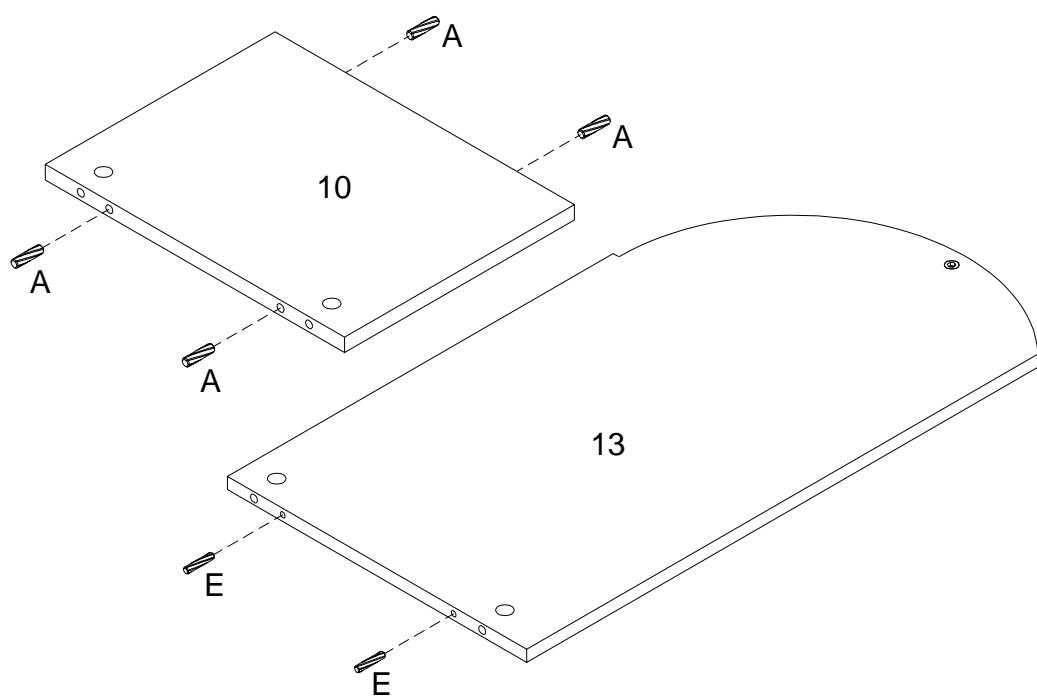


## Step 4

Insert cam bolts (B) into the Right Fixed Divider (14) and tighten with a screwdriver. Then, insert wooden dowels (E) into the Right Fixed Divider (14) and wooden dowels (F) into the Front Upper Rail (11).

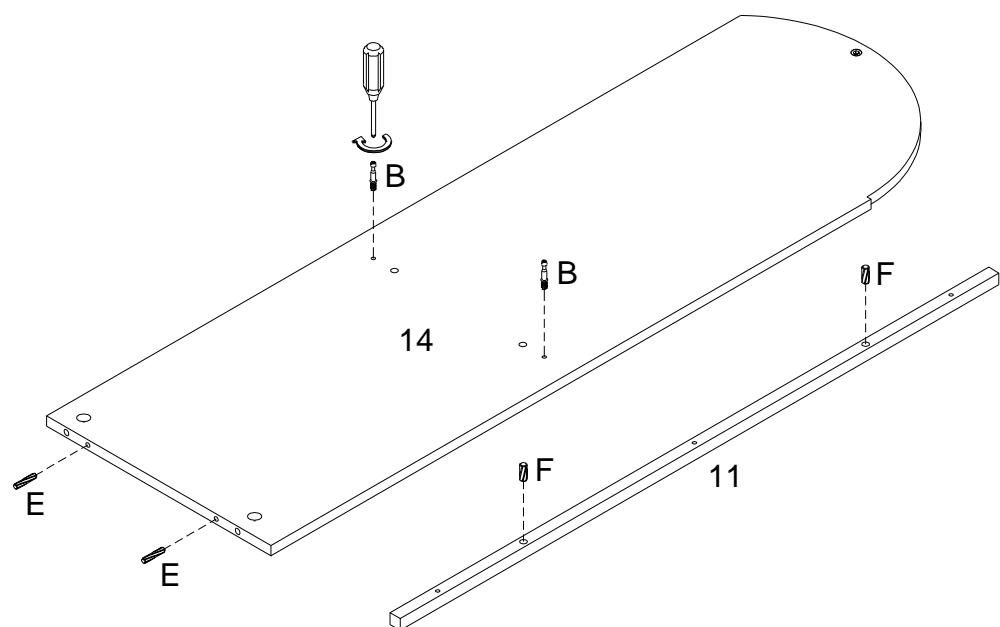


# Step 5

Insert wooden dowels (A) into the Left Middle Divider Panel (9). Then, screw cam bolts (B) into both sides of the Left Middle Divider Panel (9).

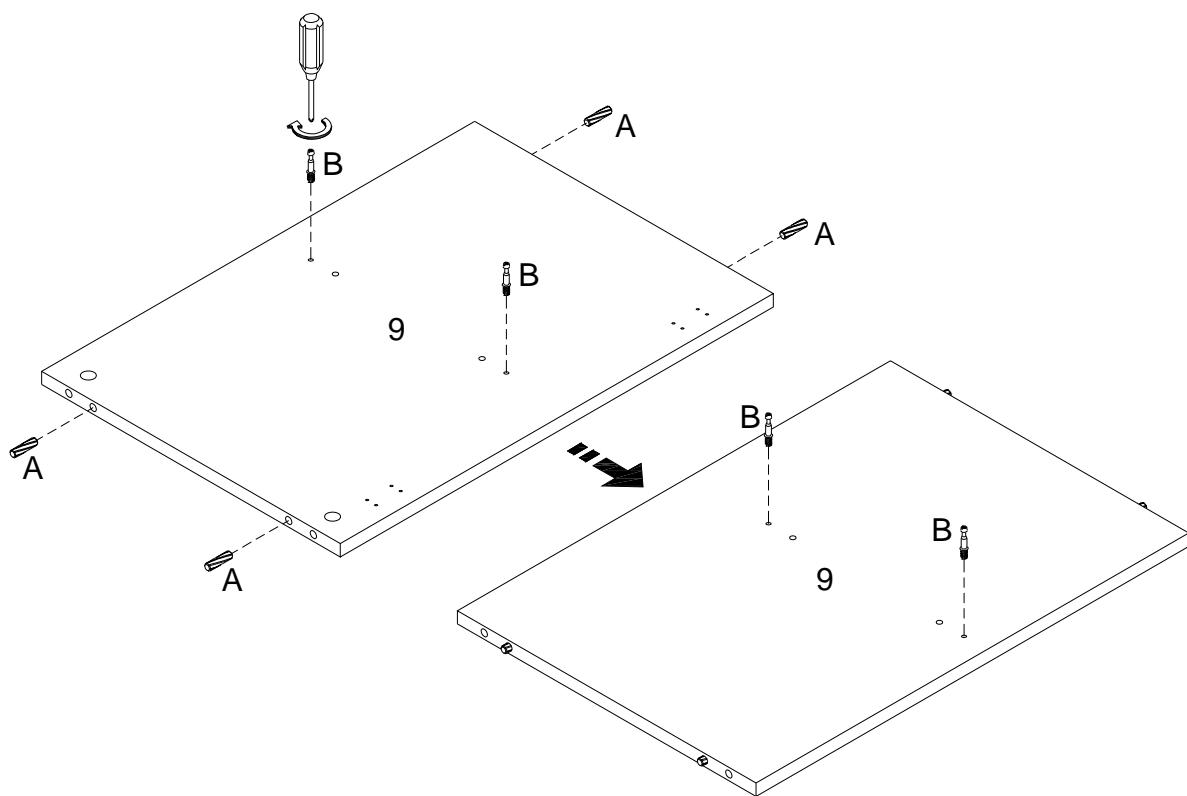


# Step 6

Insert wooden dowels (A) into the Left Back Side Panel (3) and the Right Back Side Panel (6).

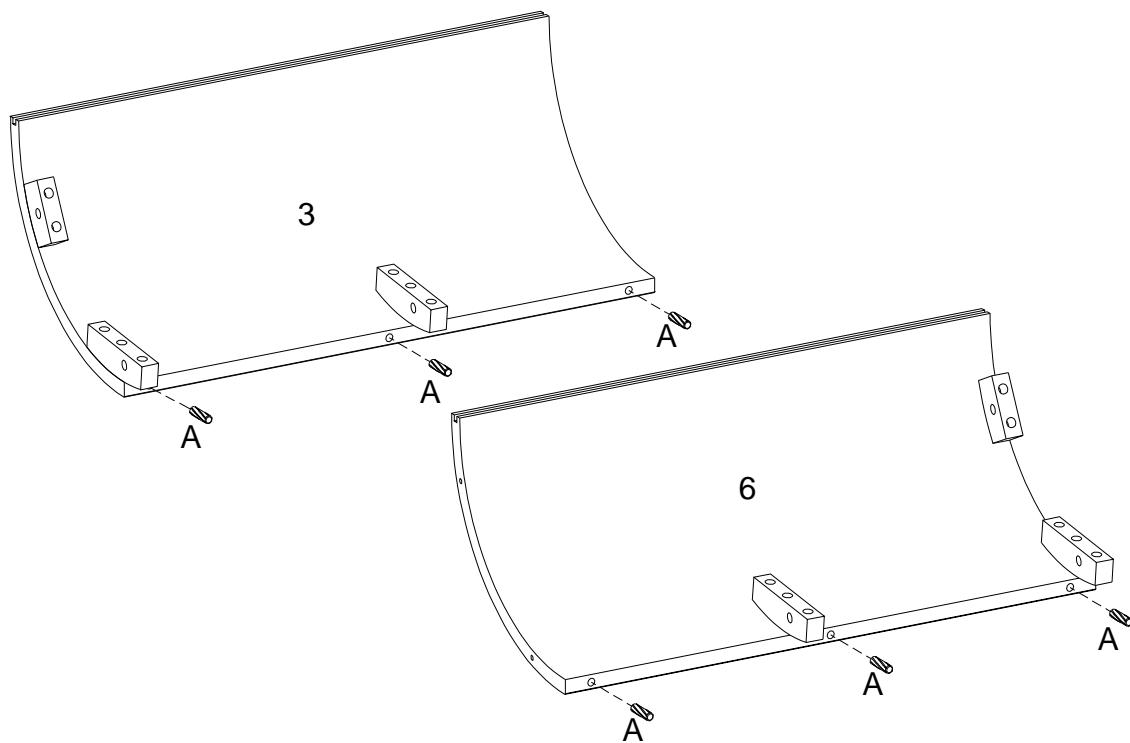


## Step 7

Screw cam bolts (B) into the Right Front Side Panel (7) and the Left Front Side Panel (4).

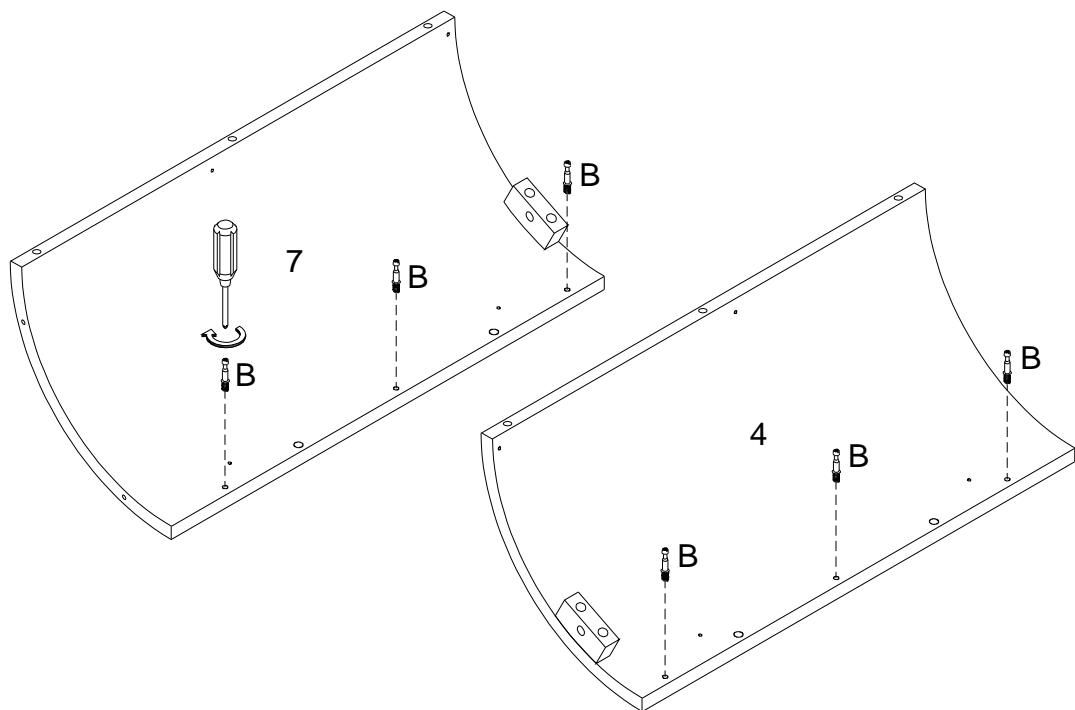


# Step 8

Insert wooden dowels (A) into the Right Front Molding (8) and the Left Front Molding (5). Then, using the (G) screws, attach connecting iron sheets (H) to both pieces.

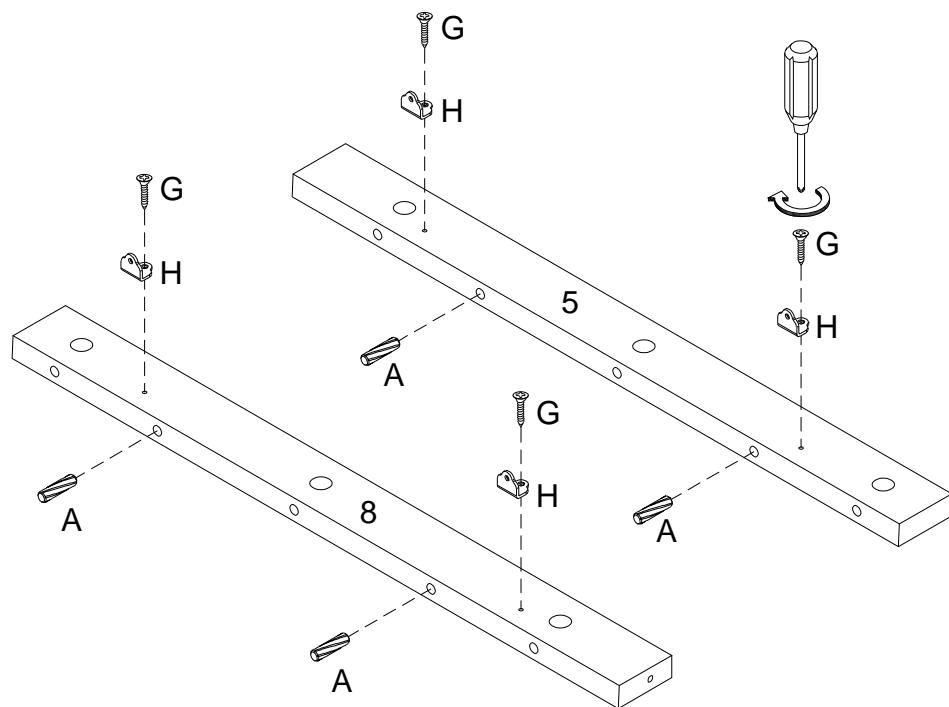


# Step 9

Attach the Left Front Molding (5) to the Left Front Side Panel (4) using cam locks (C) and tighten with a screwdriver. Secure the connecting iron sheet (H) to the panel with screws (G). Repeat the process for the Right Front Molding (8) and Right Front Side Panel (7).

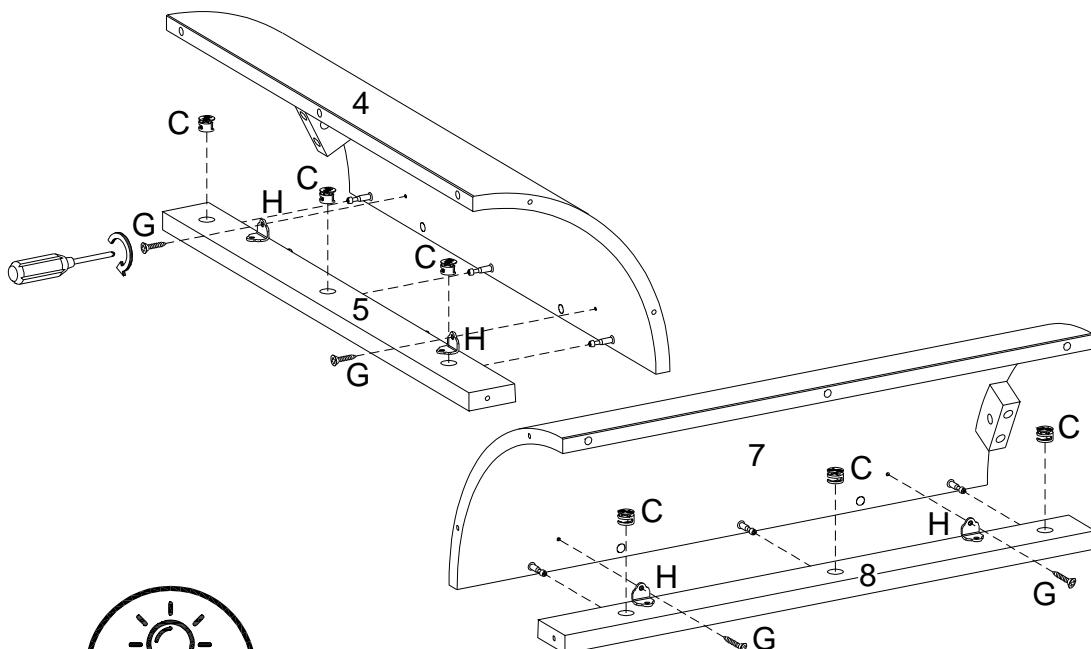


## Cam Locks


Cam Locks help securely join two pieces together.  
Follow these easy steps.

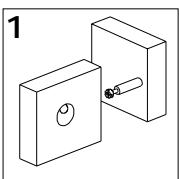

1: Insert Cam Bolt into bolt holes on the flat side. Don't over tighten!

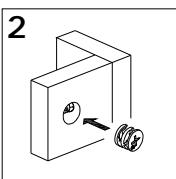


2: Fit the proper holes on the edge of the other part over the Cam Bolts. You should be able to see the cam bolts through the larger hole on the side.

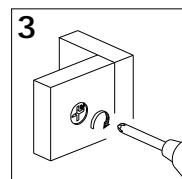

3: On the back of the Cam Lock will be a "C" shape. Insert the Cam Lock so the opening of the "C" fits over the Cam Bolt. Tighten with the screwdriver.


# Step 10

Connect the Left Back Side Panel (3) to the Left Front Side Panel (4) and secure with (V) screws.

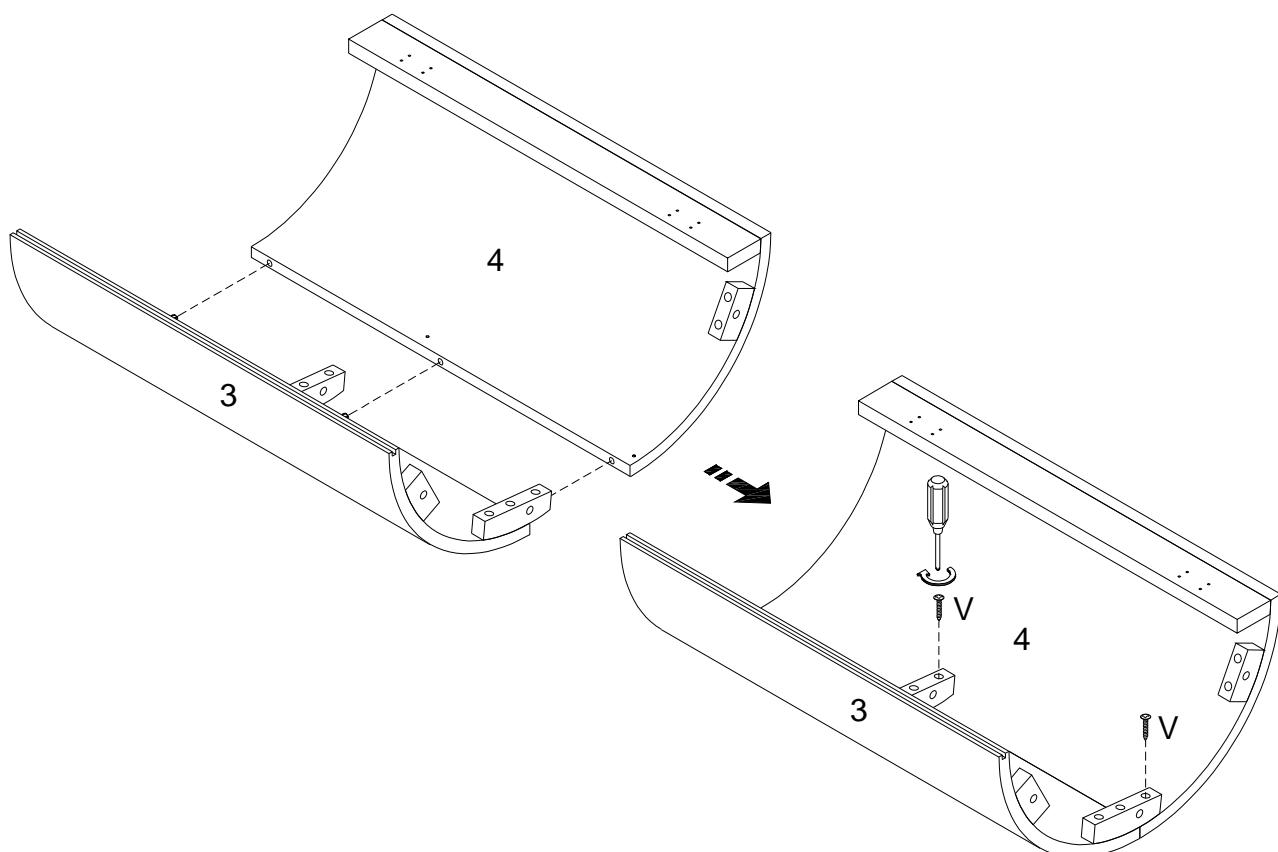


# Step 11

Connect the Right Back Side Panel (6) to the Right Front Side Panel (7) and secure with (V) screws.

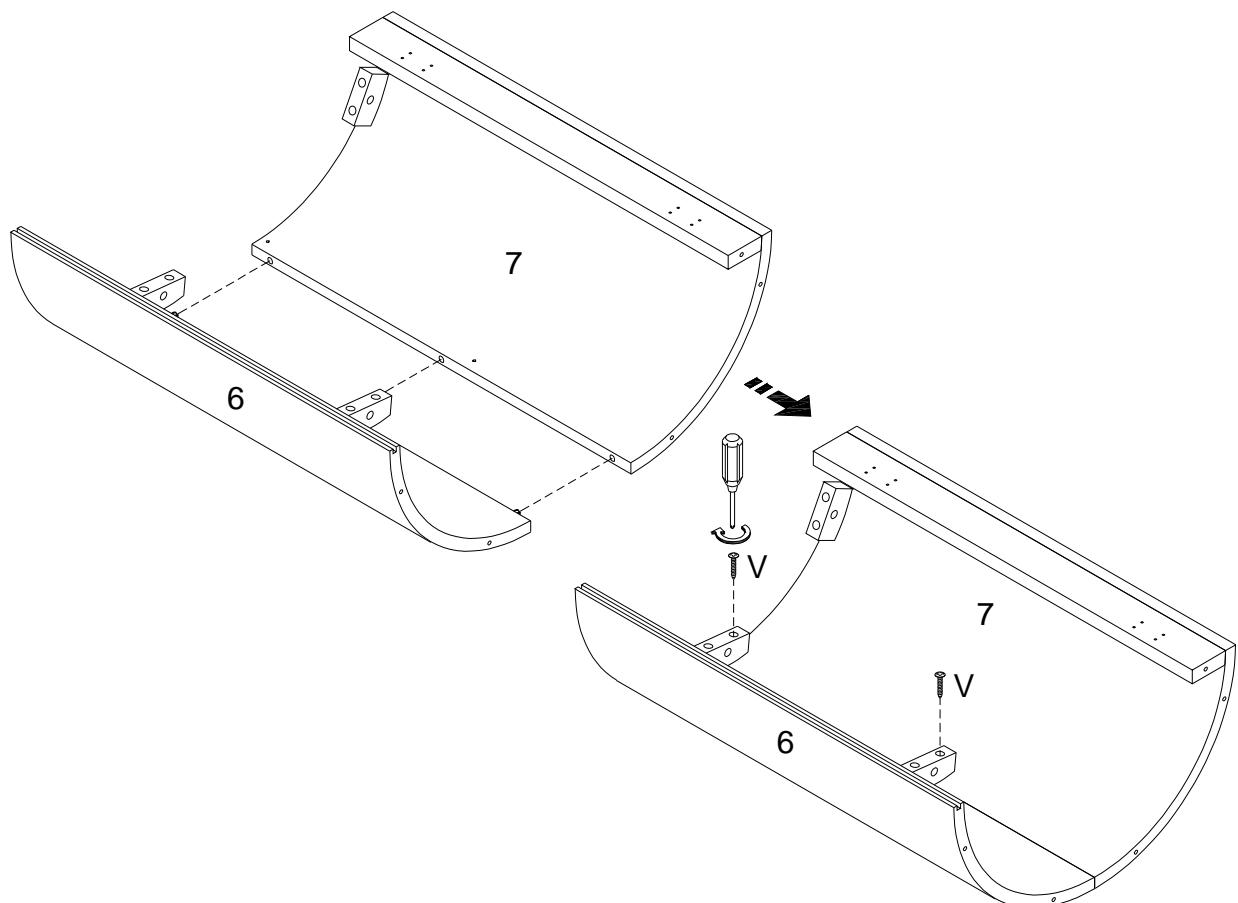


# Step 12

Secure the Right Back Side Panel (6) to the Right Fixed Divider (14) using the (L) washer, (K) lock washer, and (J) bolt. Tighten with the hex key (M).

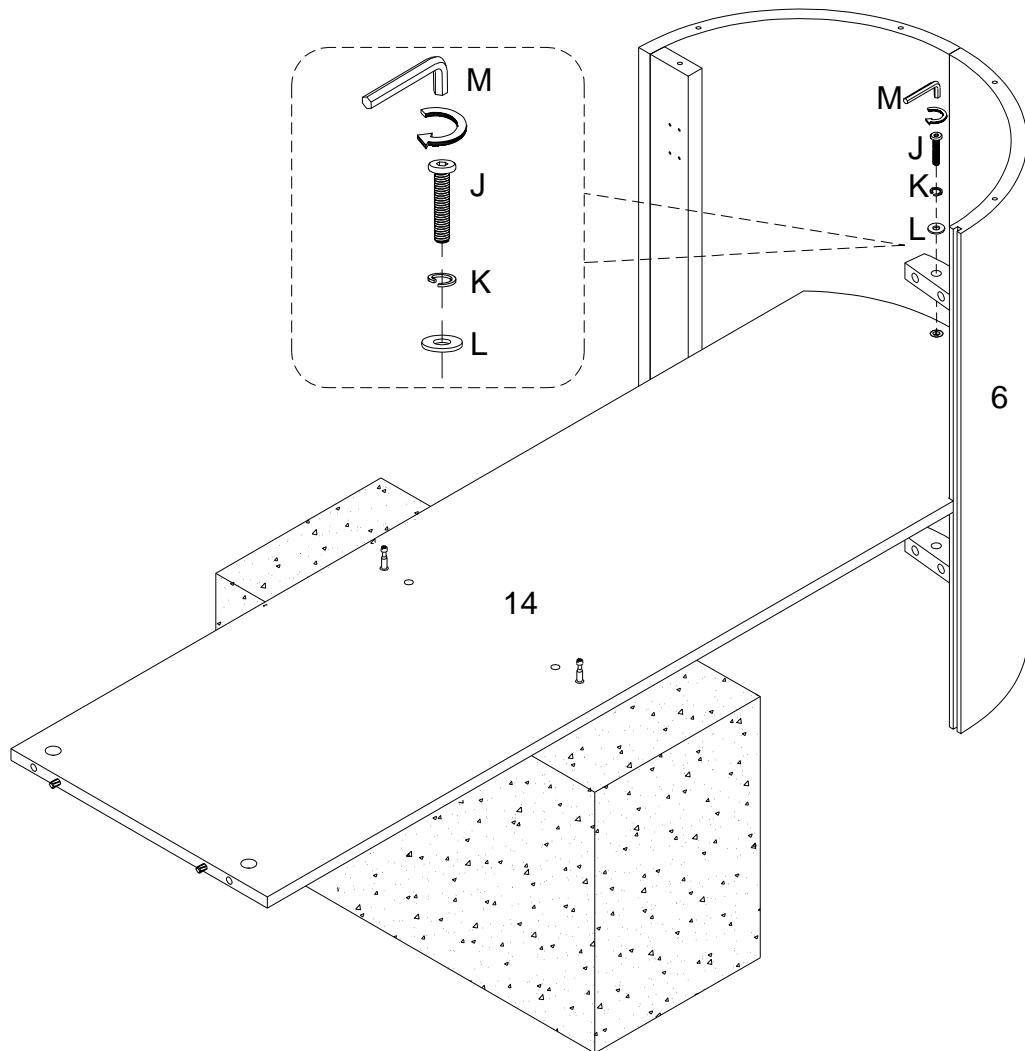


# Step 13

Attach the Left Middle Divider Panel (9) to the Right Fixed Divider (14). Insert cam locks (C) and tighten with a screwdriver.

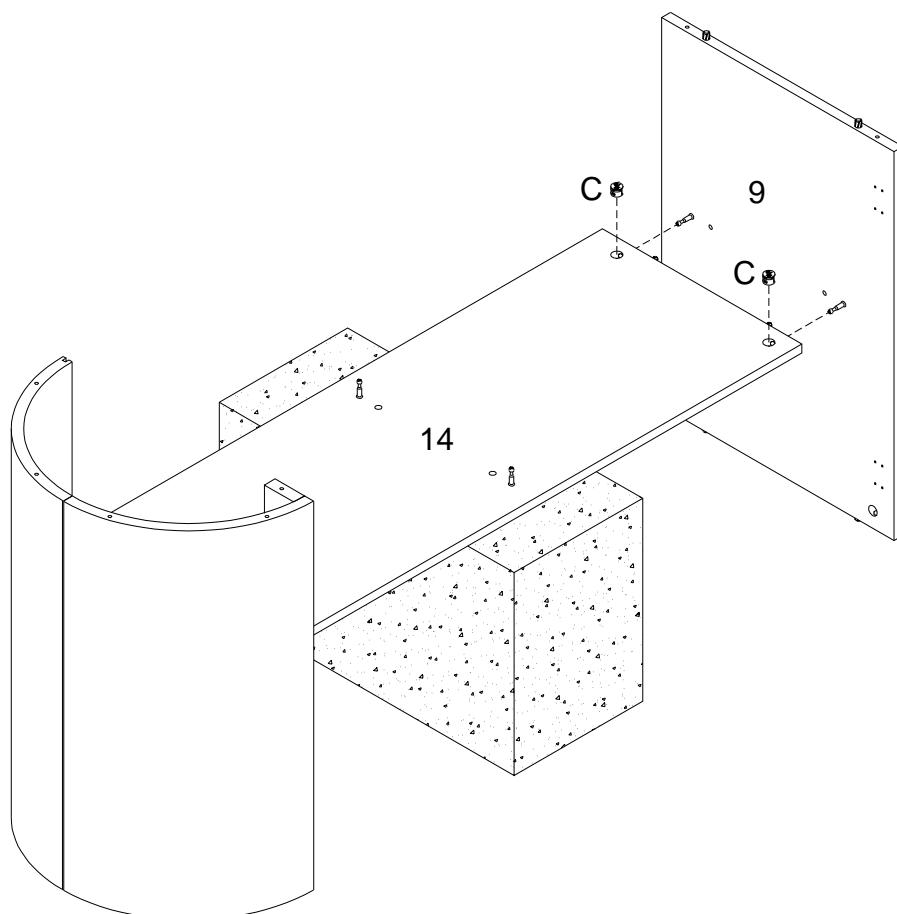


# Step 14

Connect the Left Fixed Divider (13) to the other side of the Left Middle Divider Panel (9). Insert cam locks (C) and tighten with a screwdriver.

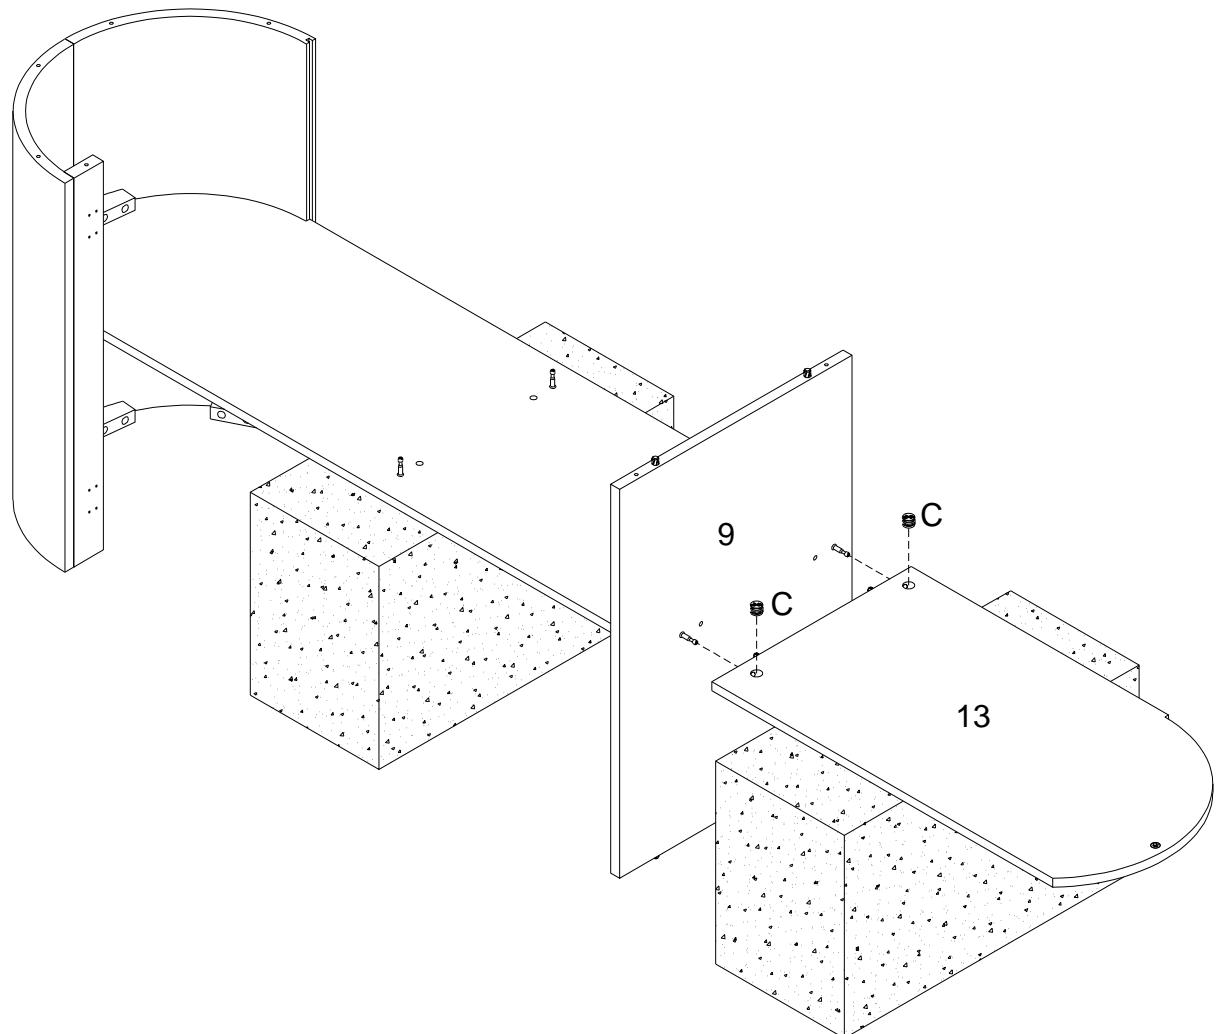



# Step 15

Secure the Left Back Side Panel (3) to the Left Fixed Divider (13) using the (L) washer, (K) lock washer, and (J) bolt. Tighten with the hex key (M).

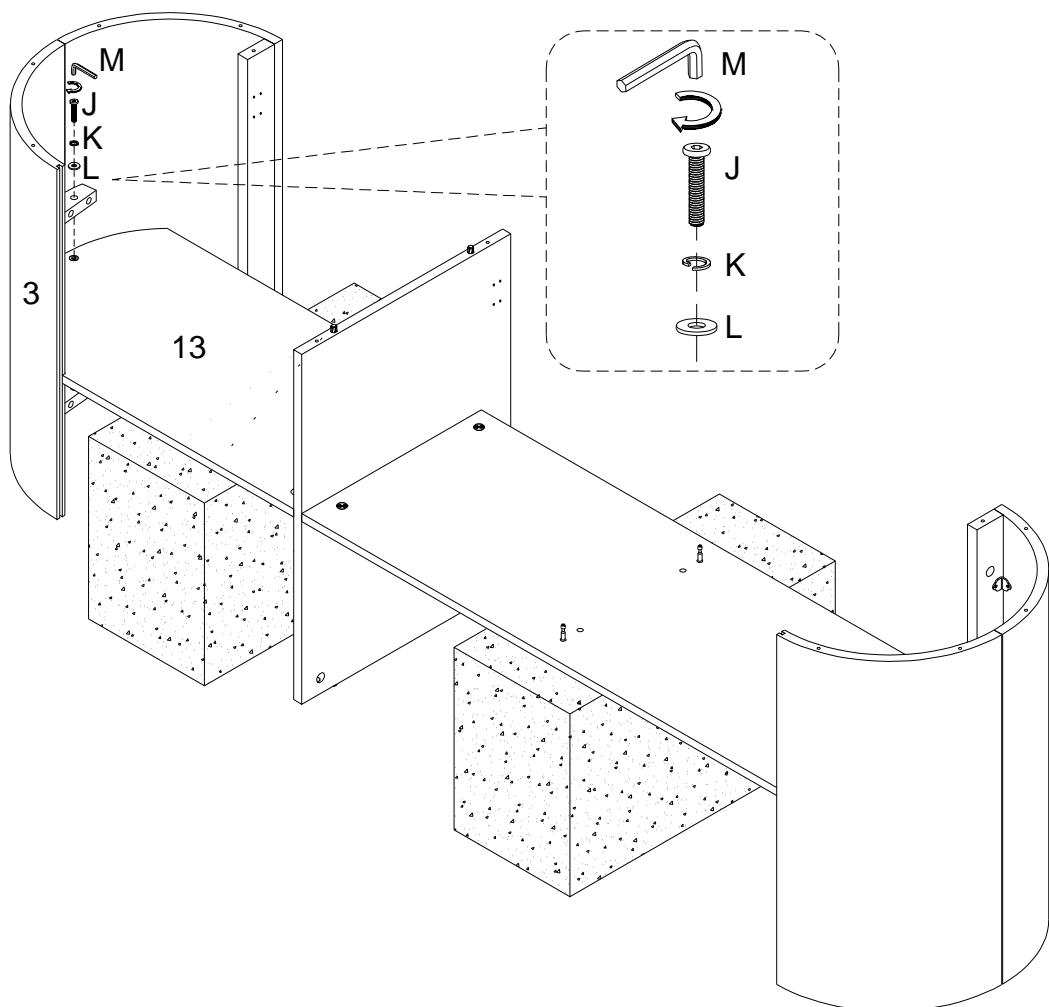


# Step 16

Attach the Front Upper Rail (11) to the Top Panel (1) using the (V) screws.

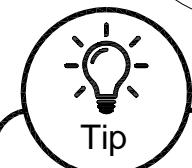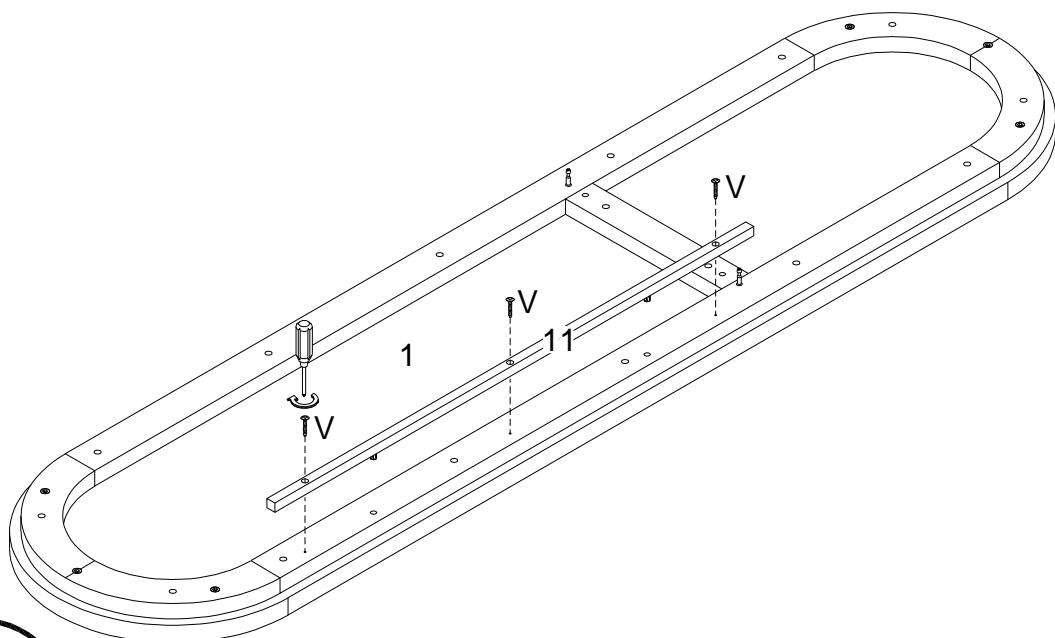


Tip

To keep your product looking its best and scratch-free, try assembling it on a soft surface like carpet or a blanket. This helps prevent any accidental scratches and keeps your furniture in top shape!

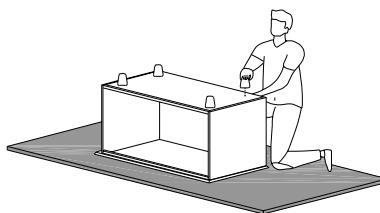


# Step 17

Connect the Left Middle Divider Panel (9) to the Top Panel (1) via the cam bolts (B). Insert cam locks (C) and tighten with a screwdriver. Then, secure the Right Front Side Panel (7)/Right Back Side Panel (6) and the Left Back Side Panel (3)/Left Front Side Panel (4) to the Top Panel (1) using the (L) washer, (K) lock washer, and the (J) bolt. Tighten with the hex key (M).

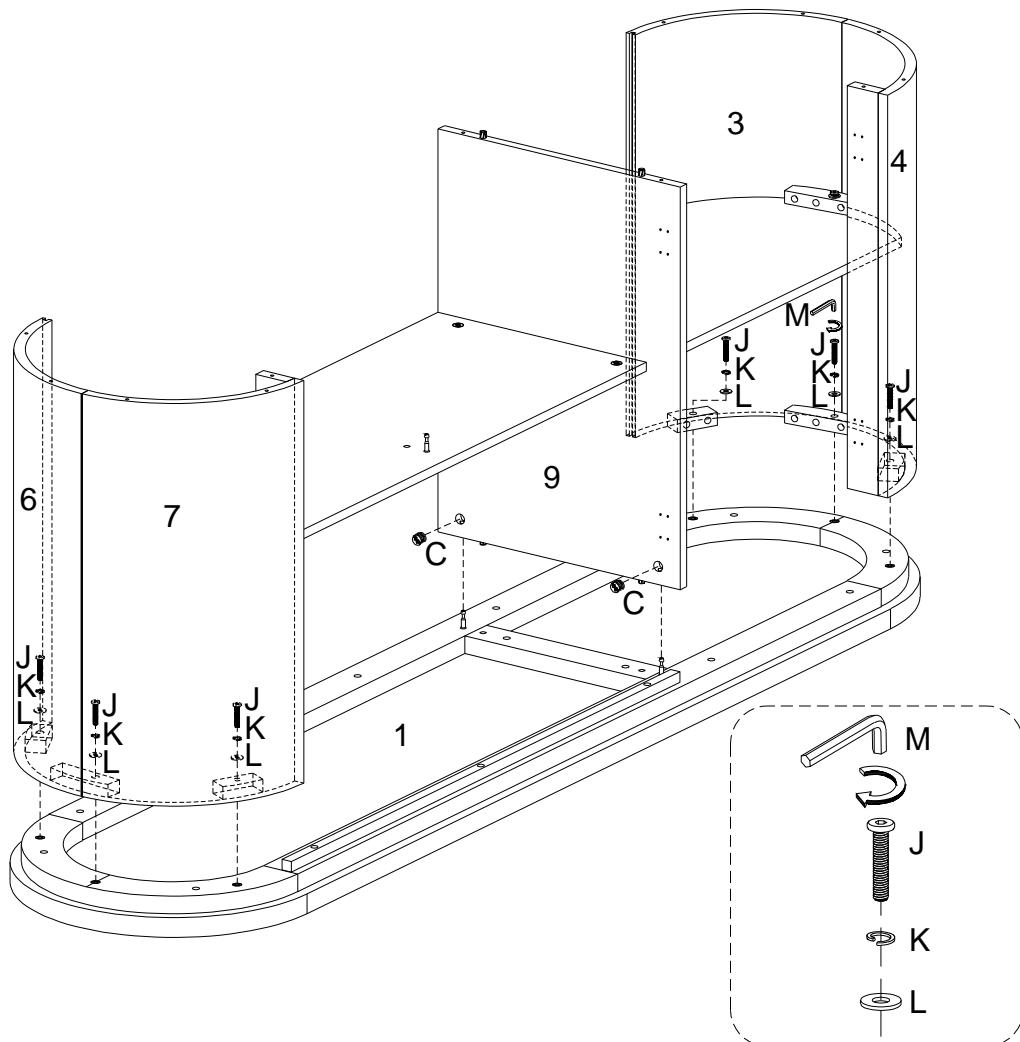


## Step 18

Attach the Right Middle Divider Panel (10) to the Right Fixed Divider (14). Insert cam locks (C) and tighten with a screwdriver.

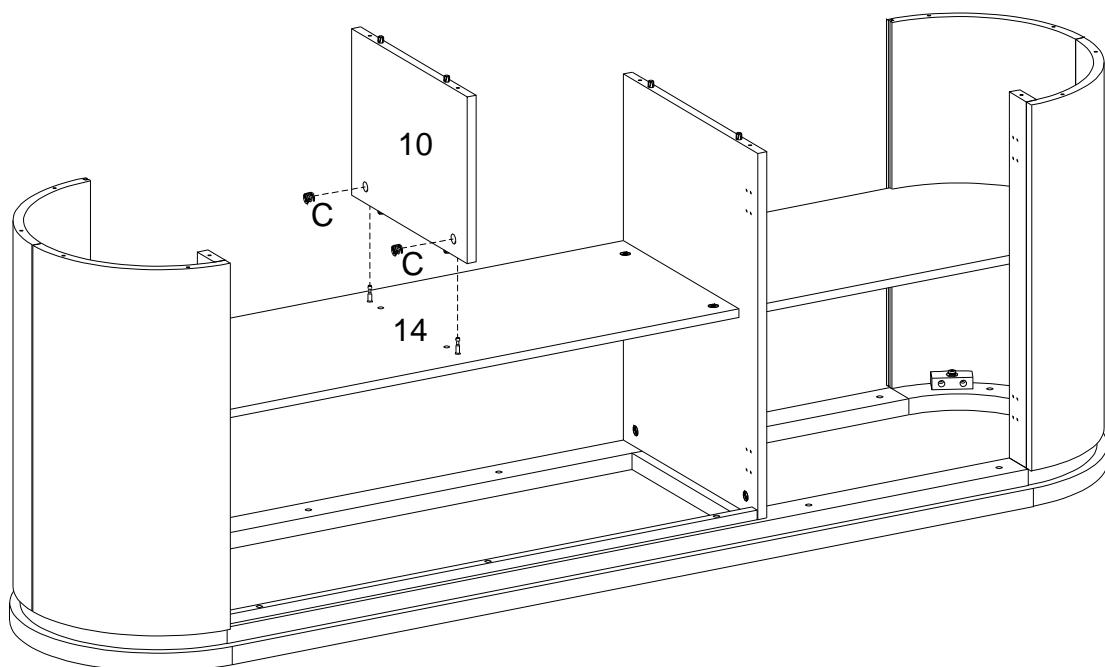


# Step 19

Unfold the Lower Back Panel (12) and the Upper Back Panel (15) and slide it into place

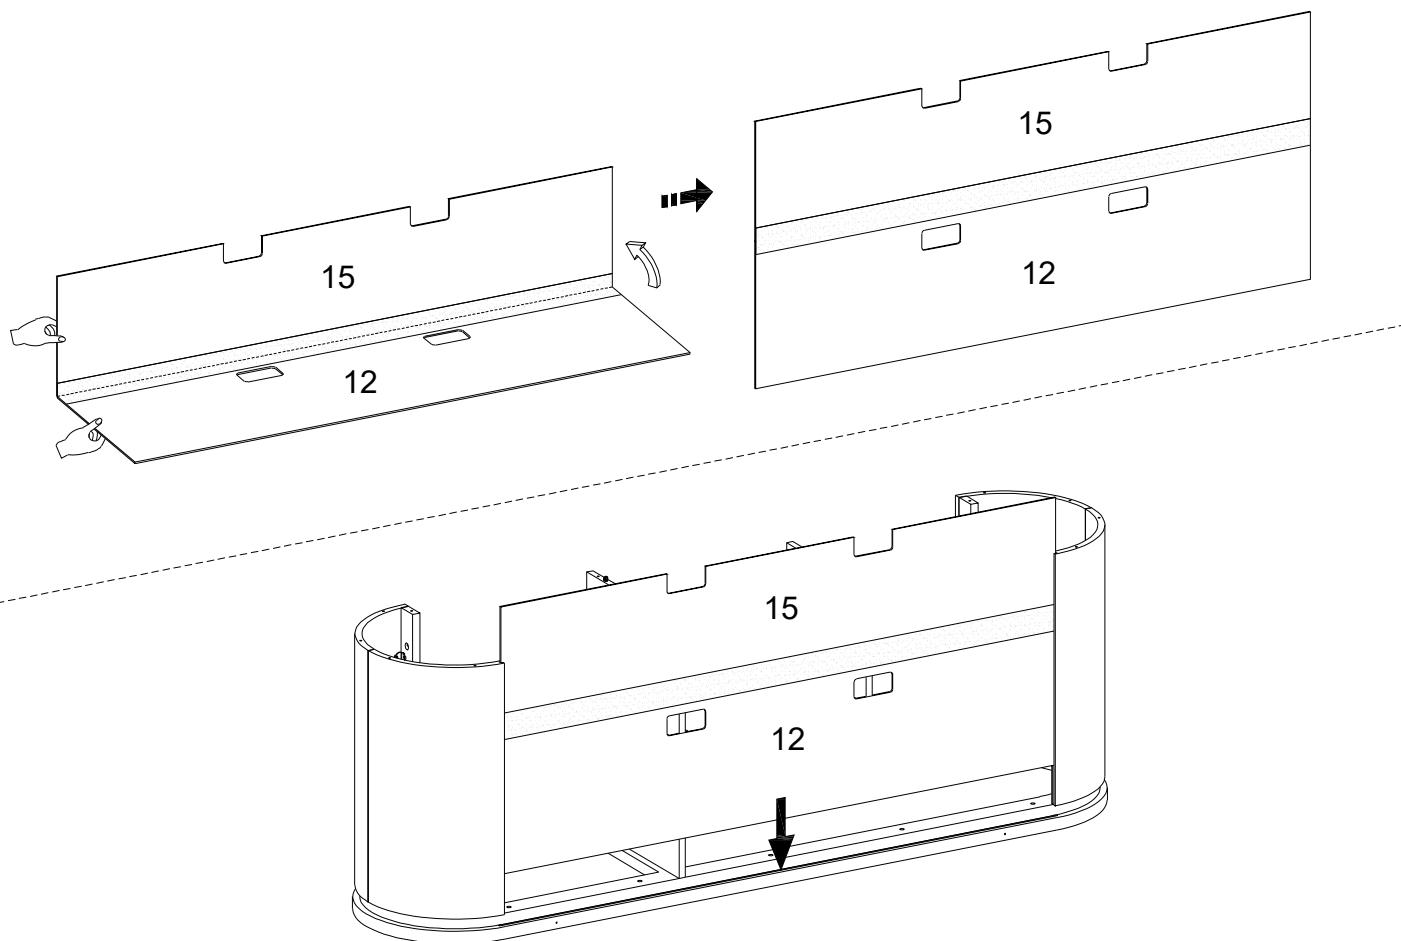


# Step 20

Secure the Bottom Panel (2) to the sideboard using the (N) bolts. Tighten with the hex key (M).

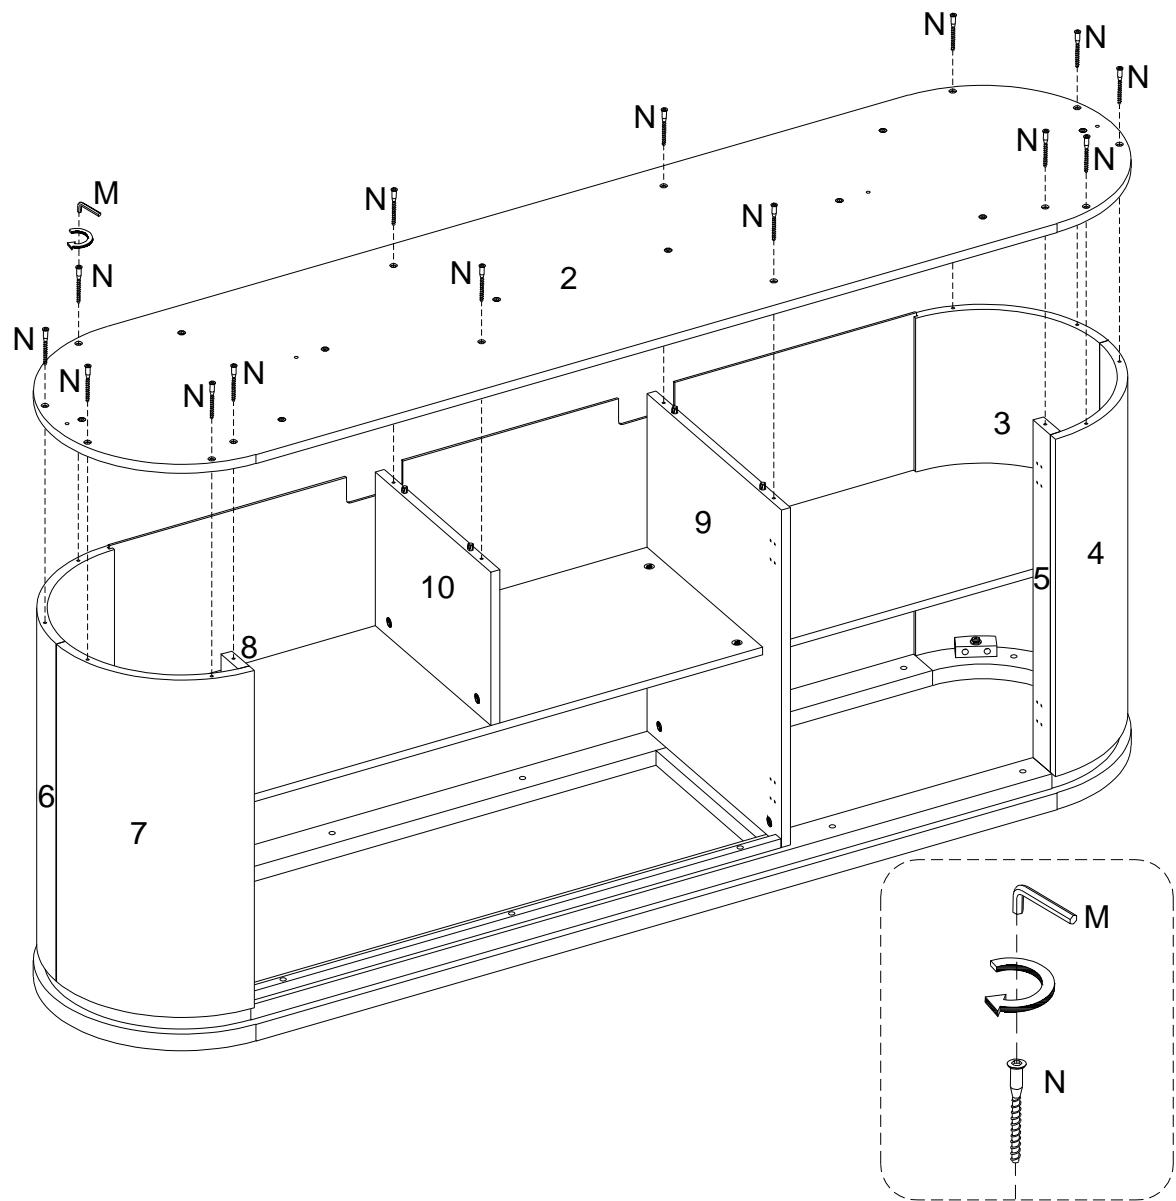


# Step 21

Attach the Bottom Rail (19) to the Bottom Panel (2) using the (L) washer, (K) lock washer, and (J) bolts. Tighten with the hex key (M).

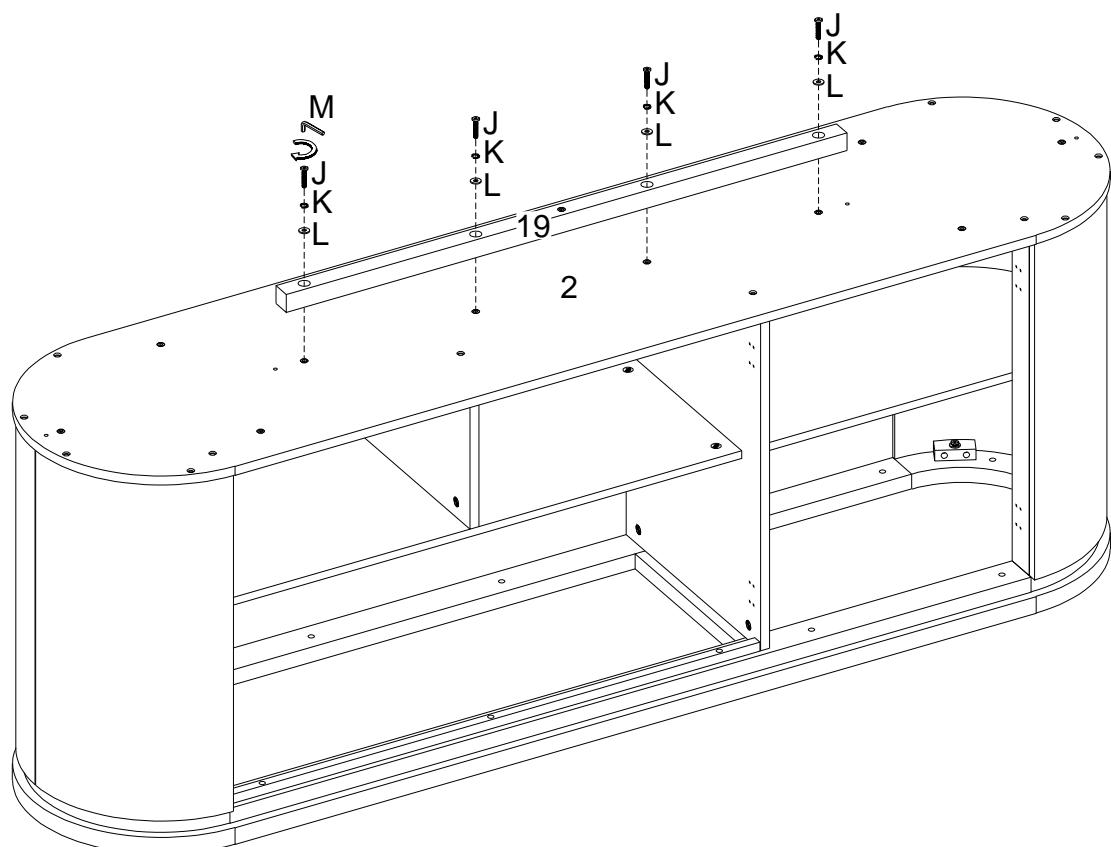


## Step 22

Screw the Middle Foot (20) into the Bottom Rail (19).

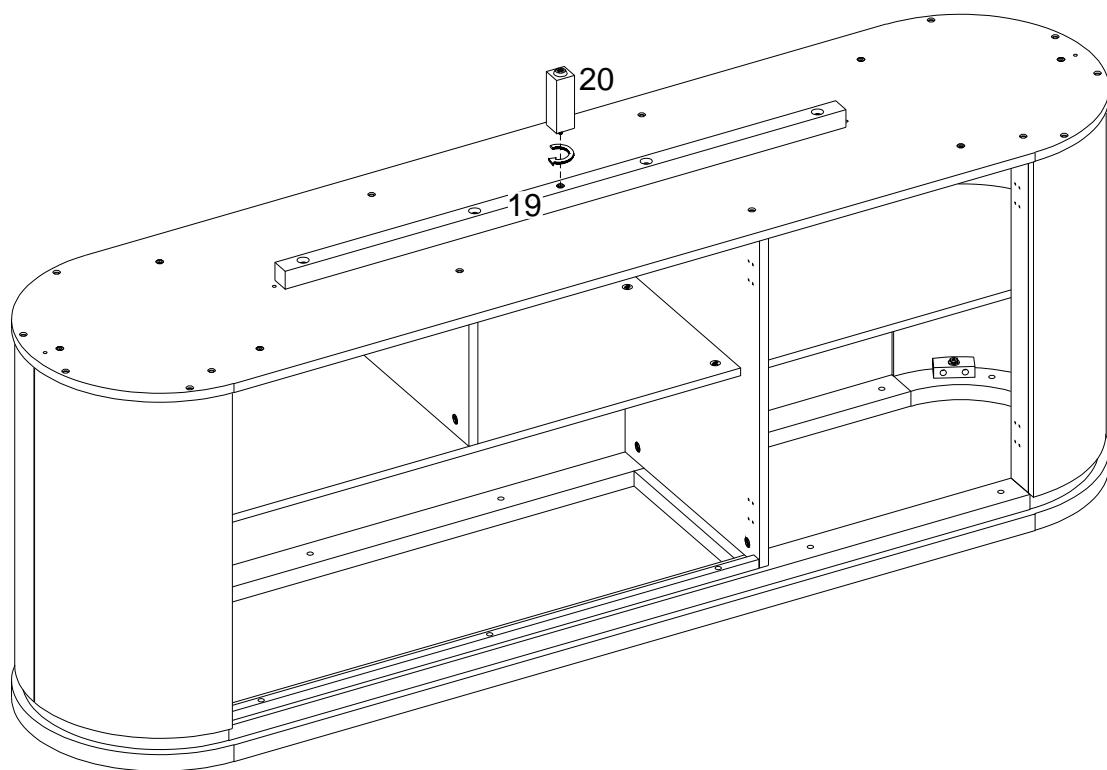



## Step 23

Secure the Leg Frames (21) to the Bottom Panel (2) using the (L) washer, (K) lock washer, and (J) bolts. Tighten with the hex key (M).

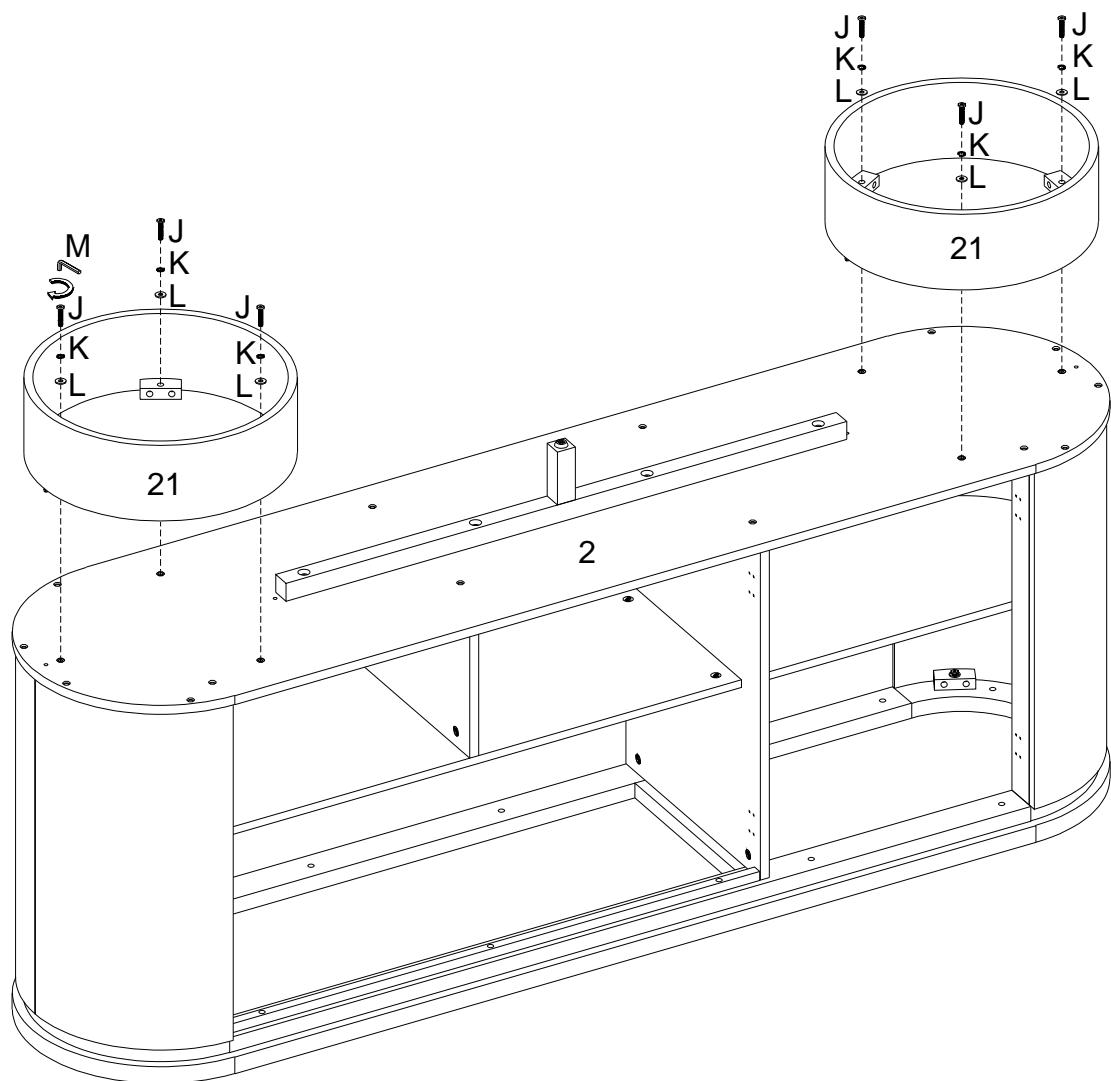


# Step 24

Evenly space plastic wedges (P) in between the back panels and the frame of the unit. Secure the wedges in place with the (Q) screws.

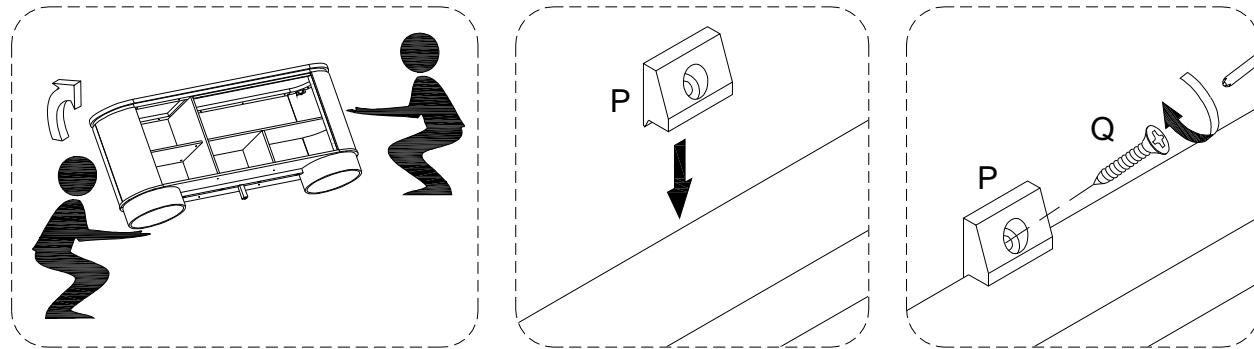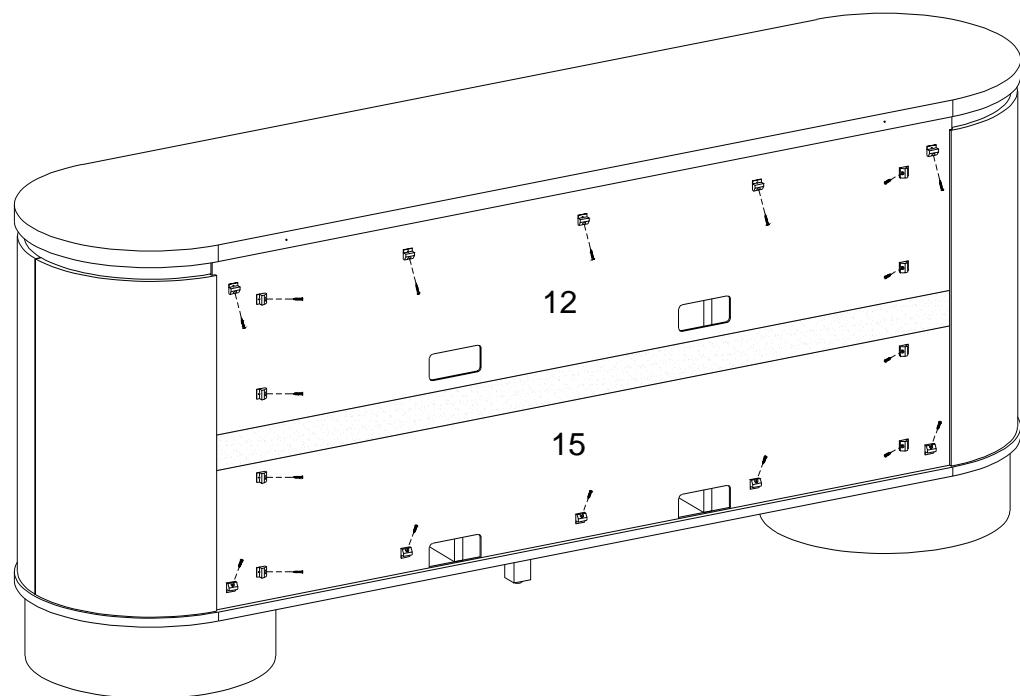


# Step 25

Use the provided stickers (D) to ensure a clean finish.

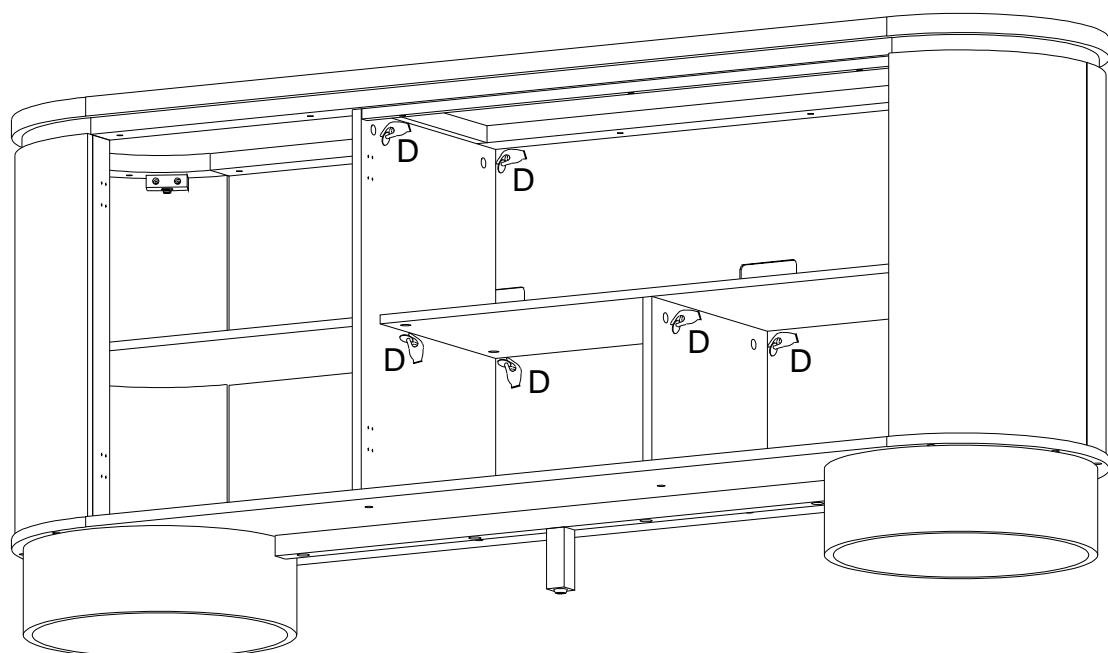


# Step 26

Stick rubber pads (T) to the Middle Door Panel (17), Right Door Panel (18), and the Left Door Panel (16). Then, attach the hinges (R) to each door using the (S) screws.

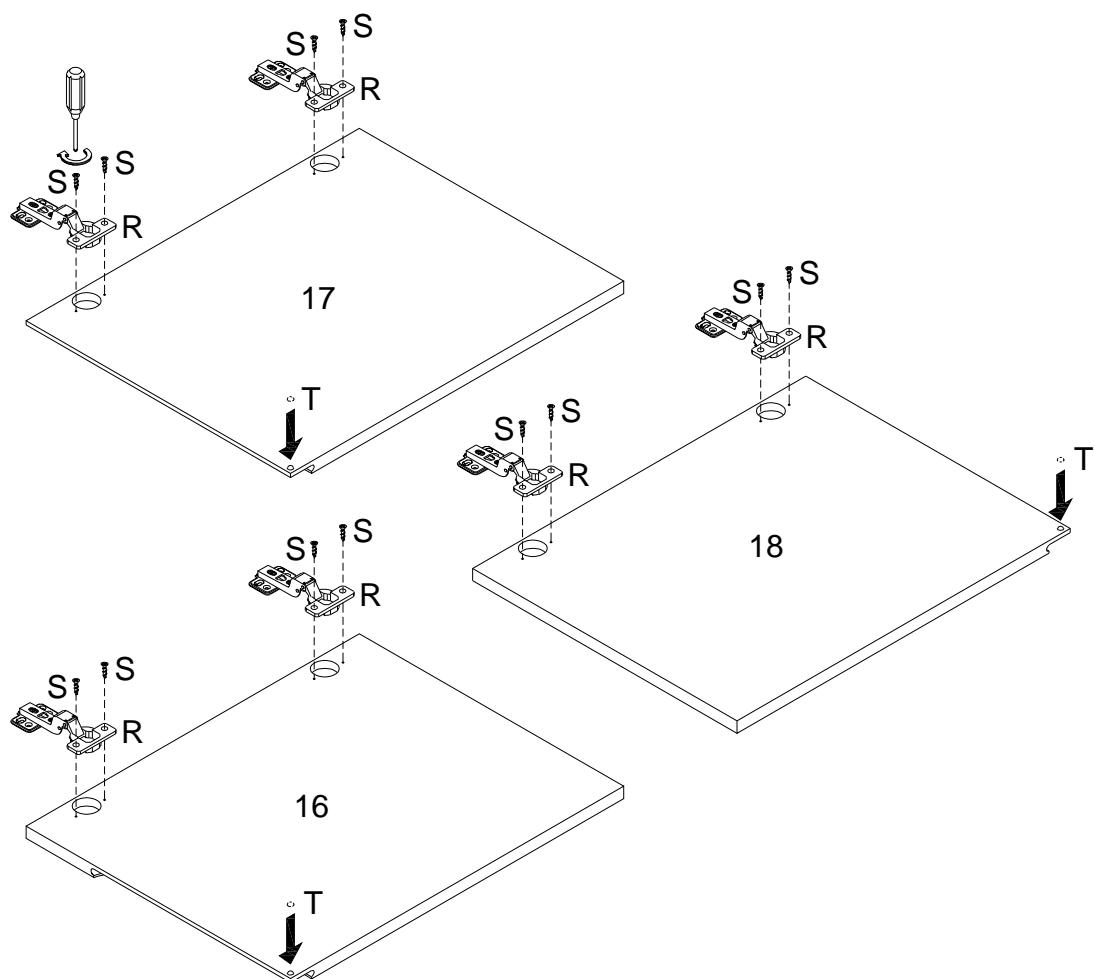


# Step 27

Now, attach the Left Door Panel (16) to the Left Front Molding (5) using the (S) screws. Then, attach the Middle Door Panel (17) to the Left Middle Divider Panel (9) using the (S) screws.

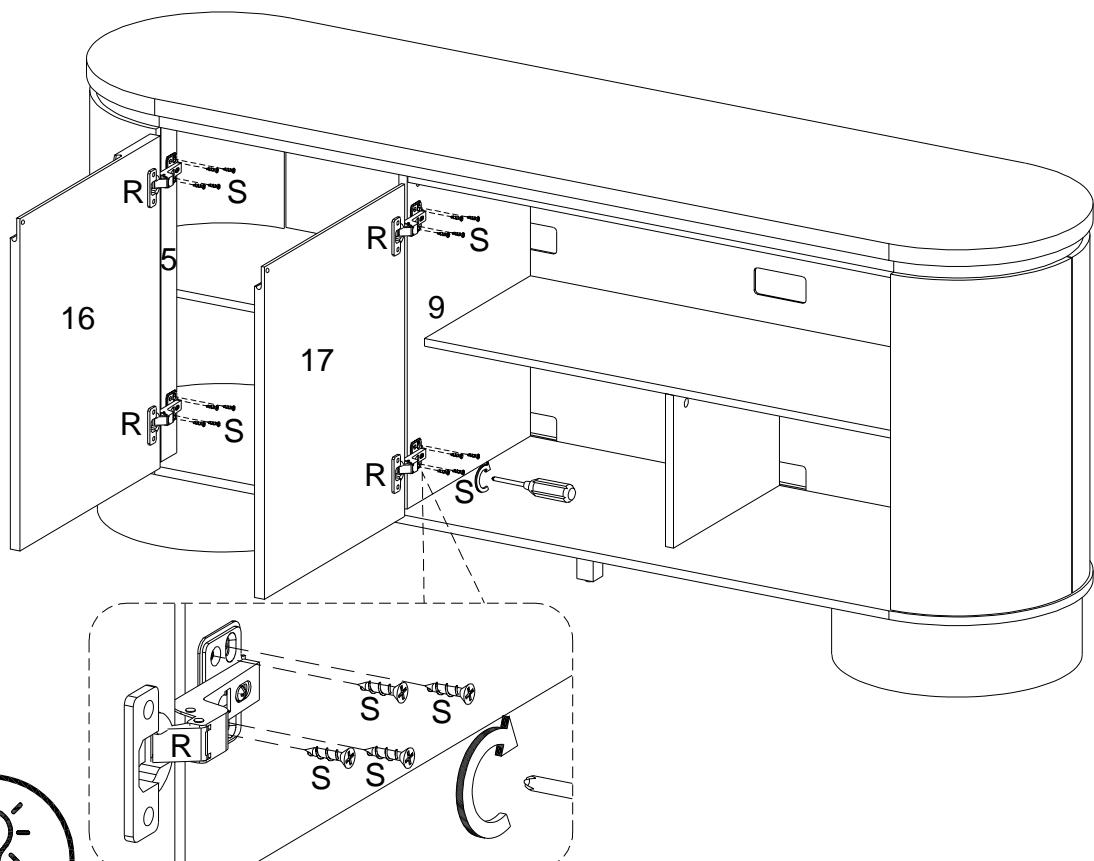


Tip


## Adjusting The Cabinet Doors

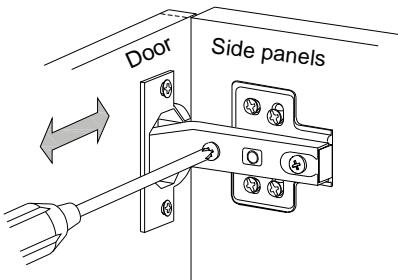

Adjust horizontal width  
with this screw.

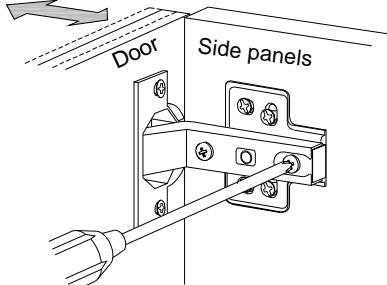


Adjust depth position  
by loosening the hinge arm  
mounting screw.

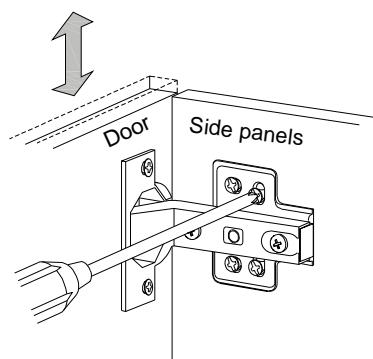

Adjust vertical height  
via the screws in the  
mounting plate.


## Step 28

Attach the Right Door Panel (18) to the Right Front Molding (8) using the (S) screws.

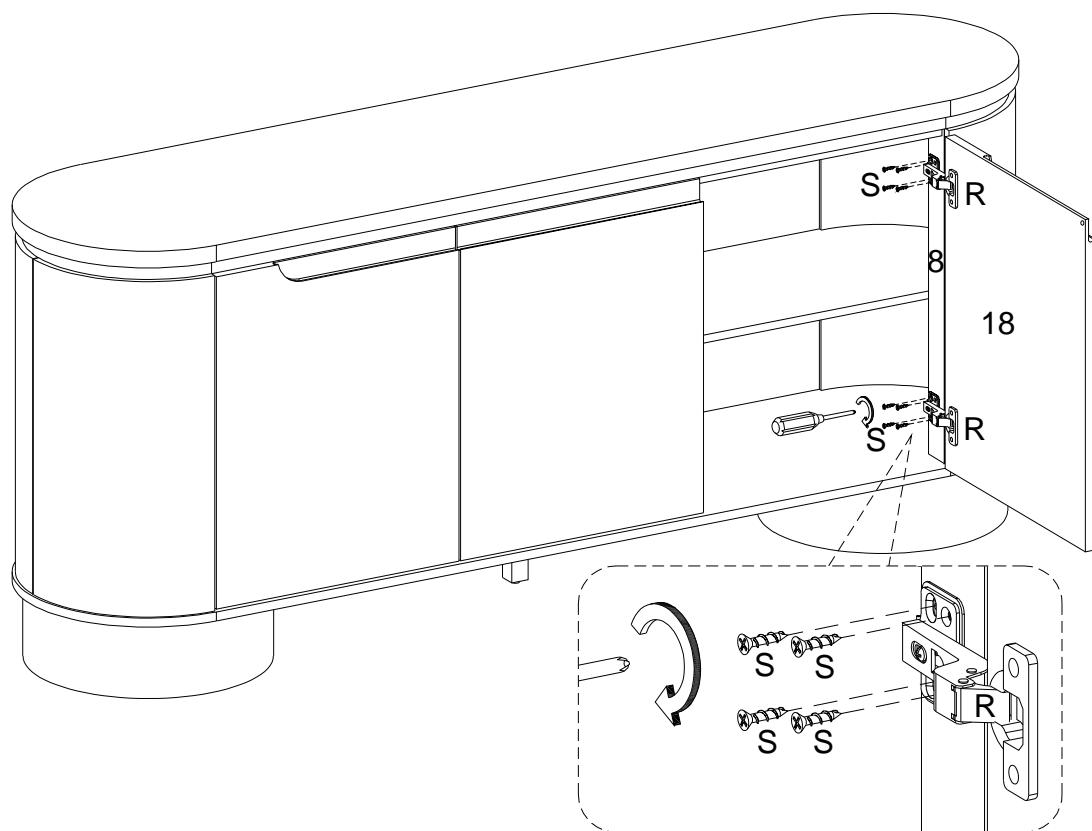


## Step 29

Twist the adjustable foot to ensure your piece is sitting level.

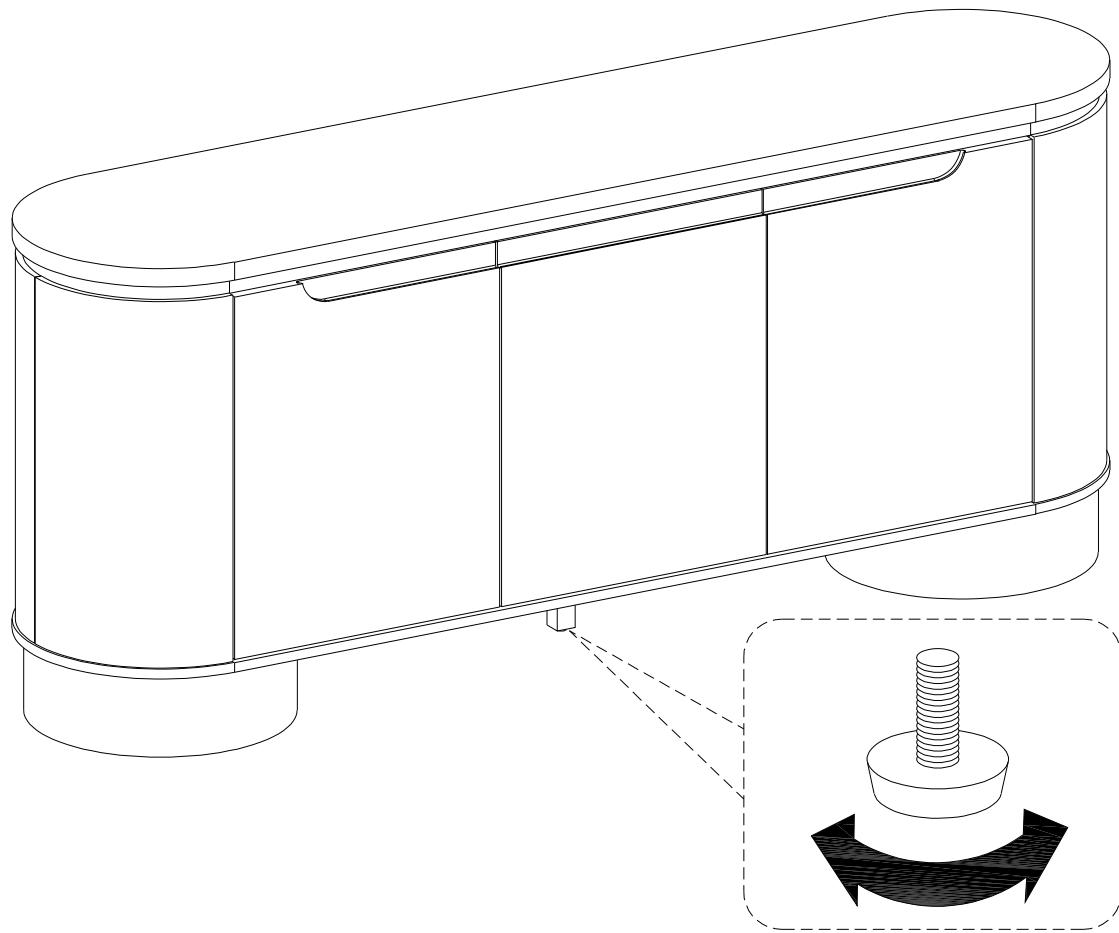


# Step 30

Attach the plastic strap (W) to the back of the unit using the (U) screws.

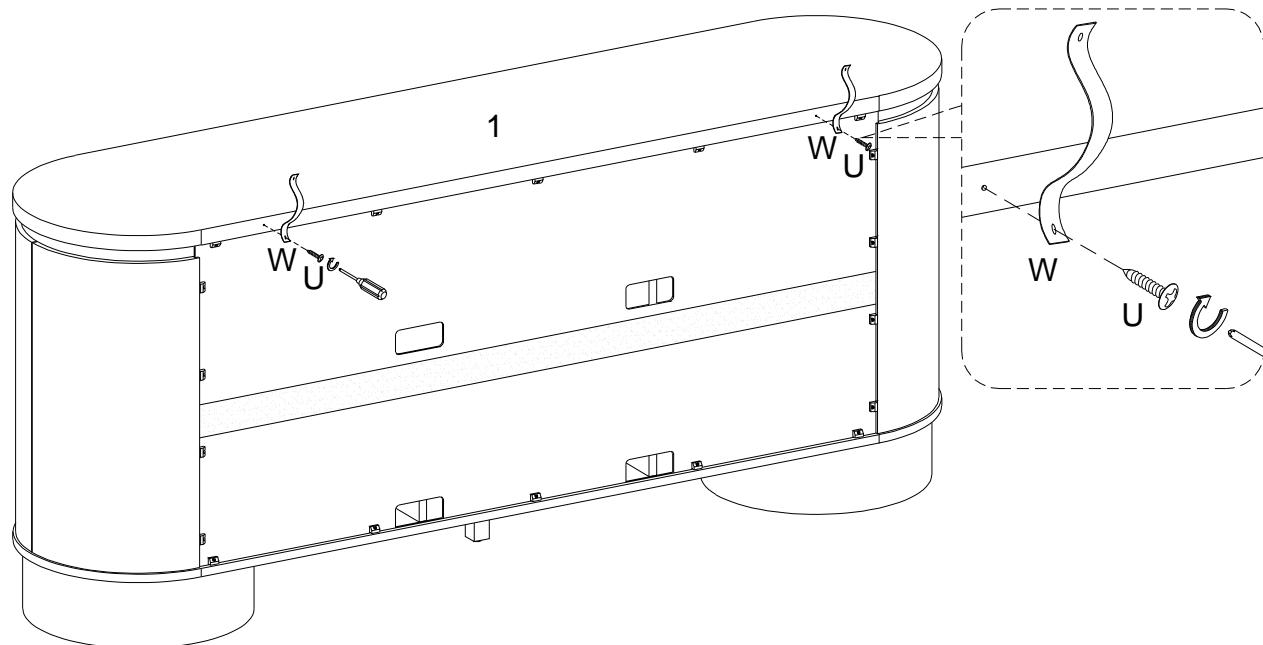

# Step 31


Secure your unit to the wall using the (V) screw, plastic strap (W), and the wall anchor (X).

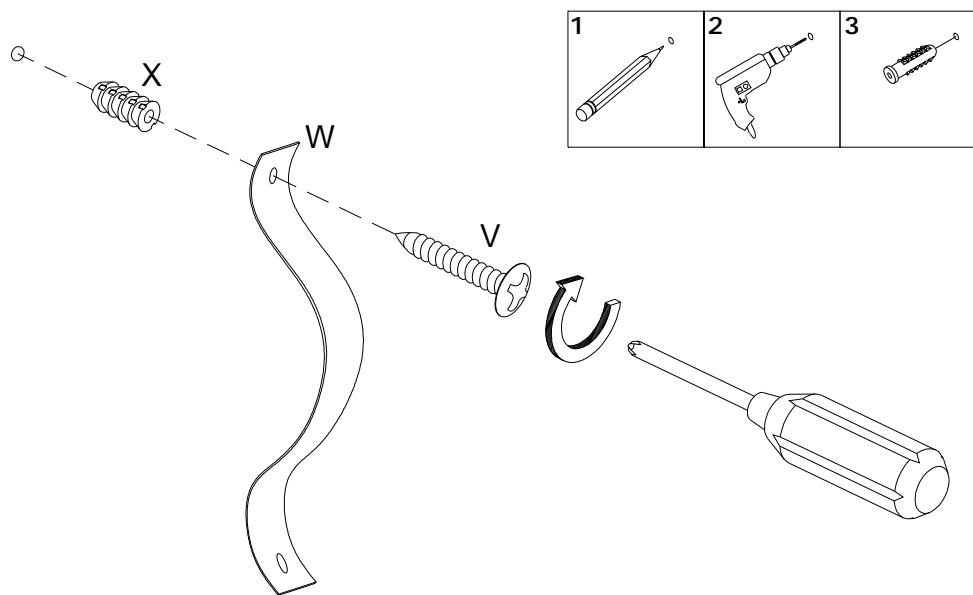

## Warning

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

# Final Assembly

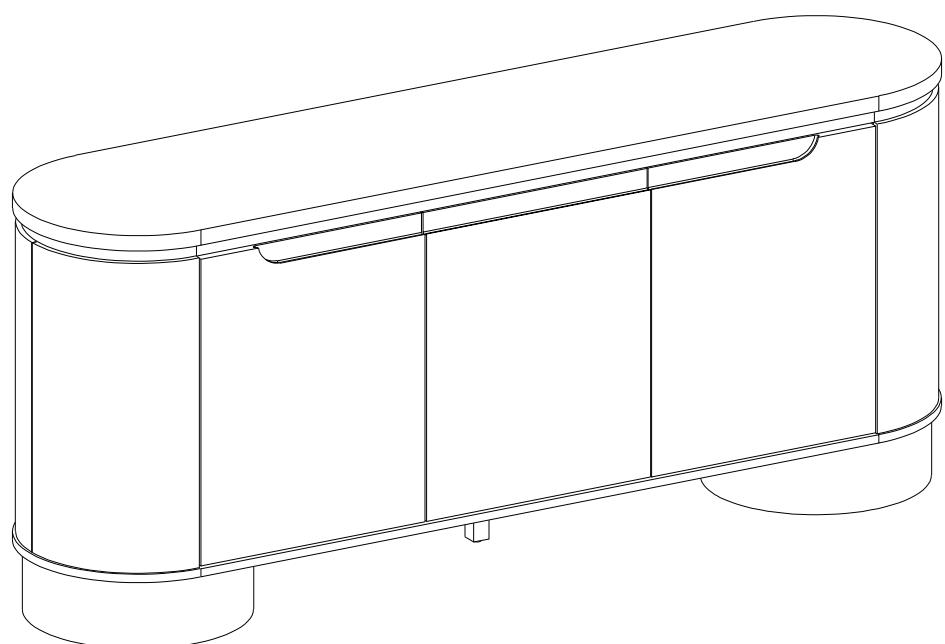

Congratulations on your new piece of furniture!

We would love to hear about it and see it.  
Please leave us a review or post a picture with  
**#mywalkereditonhome**

# Assembling furniture can be tricky sometimes.

Our customer service team, located in Utah, is here for product information, help assembling a product, or for any other customer support issue

Call us at **801-433-3008**

Email us at **service@walkeredison.com**

Visit our Customer Service website at  
**walkeredison.com/pages/customer-service**

We are available to help Monday -Thursday 8am-5pm, Friday 8am-3pm MST

For details on Assembly Videos, Assembly Instructions, Replacement Parts, and Customer service,

**SCAN HERE**

