

# WARNING!

Children have died from furniture tipover. Tip restraints have been included with this product; you must install the tip restraints according to these instructions in order to minimize the risk of furniture tipping.

NEVER allow children to climb or hang on furniture, including drawers or cabinet doors.

In addition to installing the restraints, to help prevent tip-over

1. NEVER put a TV or other heavy objects on top of this product".
2. Do not stand on the product



# Assembly Instructions


**Caution : You must read this before you proceed**

## Care & Maintenance

- 🚫 
  - Not for commercial use. For residential use only.
- ✓ 
  - Furniture may scratch floors. We recommend using furniture pads to protect your floors.
- 🚫 
  - Do not put hot items directly on furniture surface.
- 🚫 
  - Do not clean furniture with harsh cleansers or polish.
- 🚫 
  - Do not place furniture under direct sunlight.
- 🚫 
  - Do not place furniture near heating or cooling vents.
- 🚫 
  - Do not write on furniture without a padded barrier to protect the surface.
- 🚫 
  - Do not place furniture outside . For indoor use only.
- 🚫 
  - Stains may be removed with mild soap solution and damp cloth.
- 🚫 
  - Children should not climb or jump on the furniture.
  
- ✓ 
  - Dust and pick-up spills using a clean, non-colored, lint-free cloth.


Please look in carton for hardware packs and legs.

# Side Table


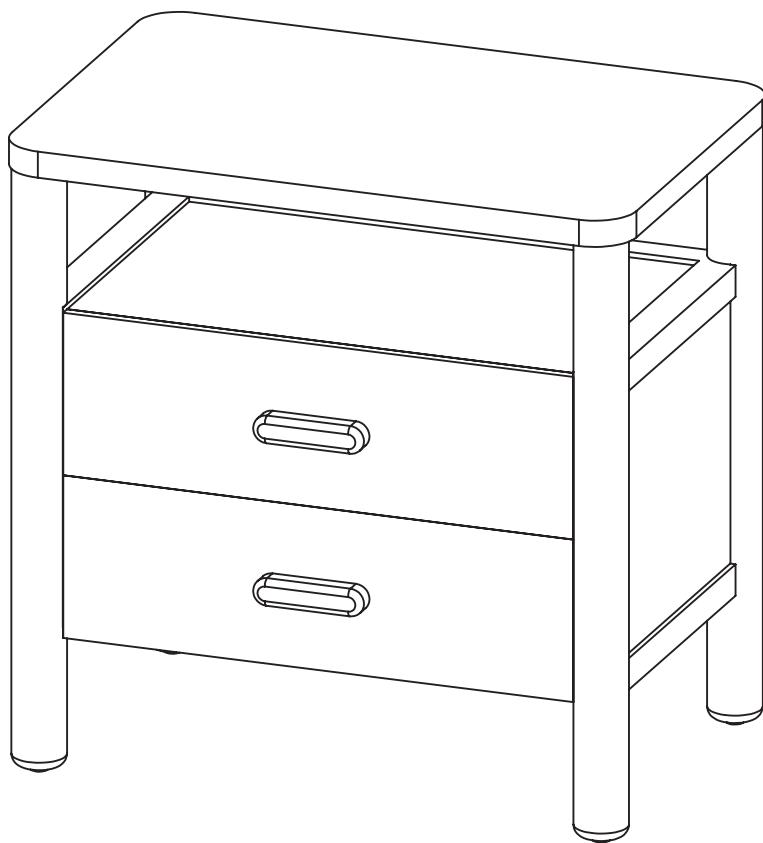


## Parts List


Label	Picture	Description	QTY
A	A line drawing of a rectangular panel with rounded corners, representing the top panel of the side table.	Top Panel	1

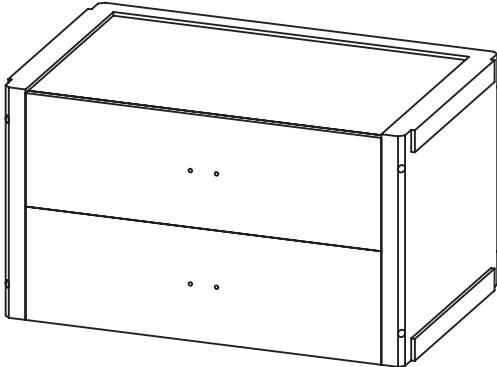B		Cabinet	1
C		Leg	4

## Hardware



Label	Picture	Description	QTY
①		Cam Bolt ( $\text{Ø}6*35\text{mm}$ )	4
②		Cam Nut ( $\text{Ø}15*9\text{mm}$ )	4
③		Bolt ( $\text{M6}*40\text{mm}$ )	8+1
④		Flat Washer	8+1
⑤		L-type Hexagon Wrench	1

## Restraint Device Hardware


⑥		Anti-Tipping sheet iron	2
⑦		Nut	2
⑧		Screw $\text{Ø}4*14\text{mm}$	2
⑨		Screw $\text{Ø}4*35\text{mm}$	2

# Assembly Preparation

Before  
Beginning  
Assembly:

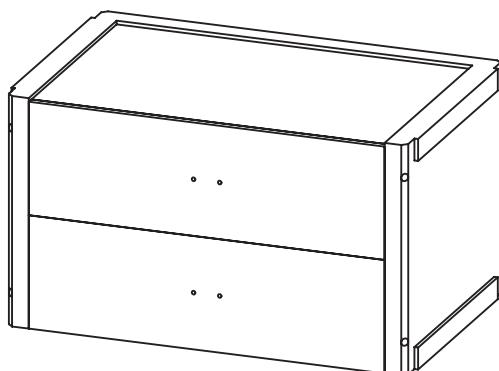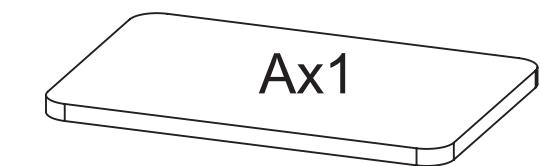

Cx4



① x4



② x4



③ x9



④ x9



⑤ x1



⑥ x2



⑦ x2



⑧ x2



⑨ x2



- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-

# Assembly Steps


## Overview

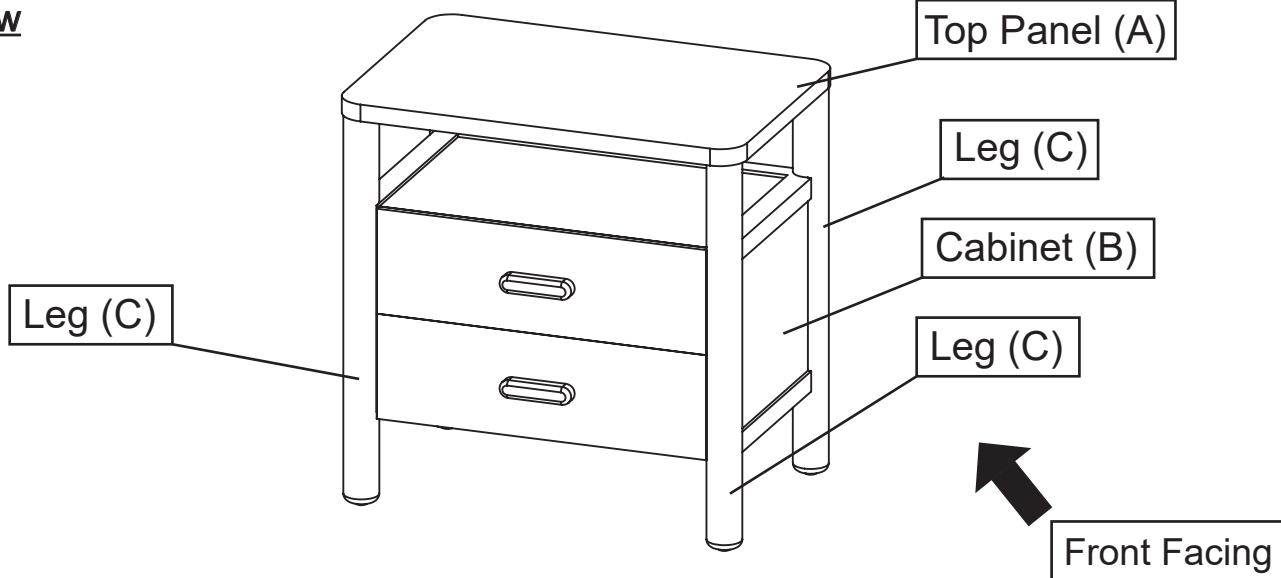

This side table has multiple parts and may require up to 30 minutes to assemble.


To give you an overview of the side table parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

## Step 1

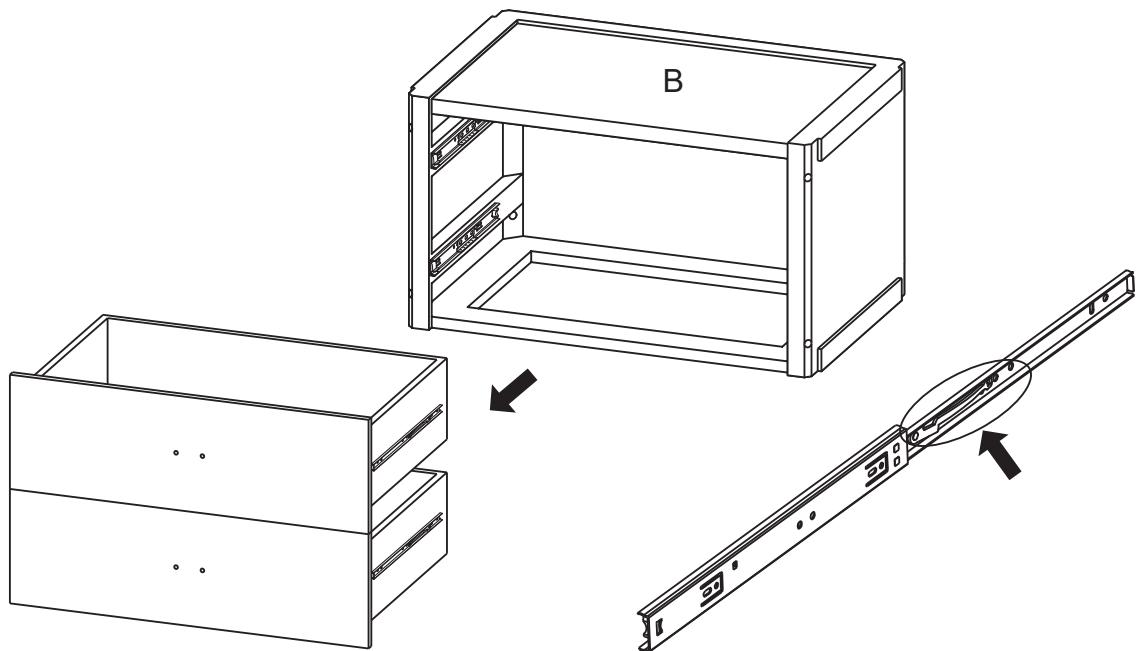



Take the drawer from the cabinet (B).

## Step 2

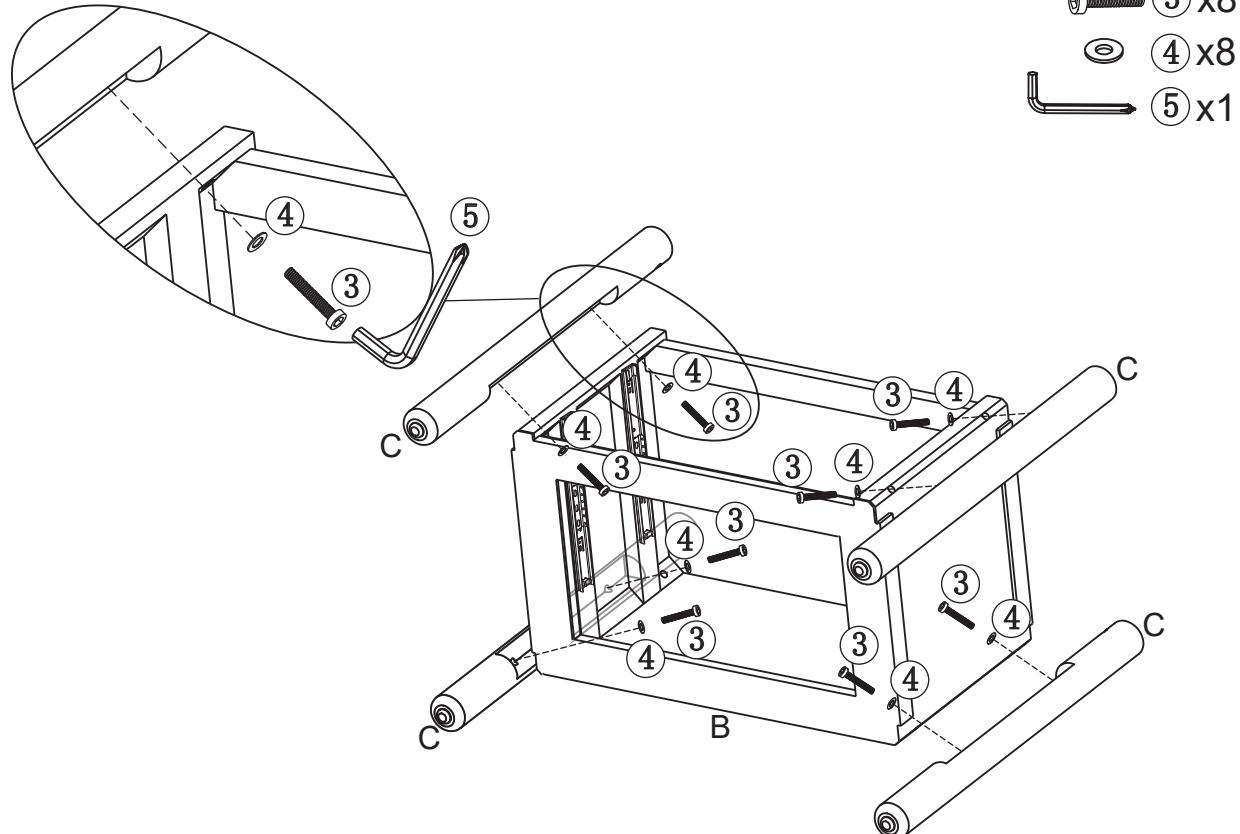

Attach the cabinet (B) to the leg(C) with bolt(③) and flat washer(④) using I-type hexagon wrench(⑤).


## Step 3

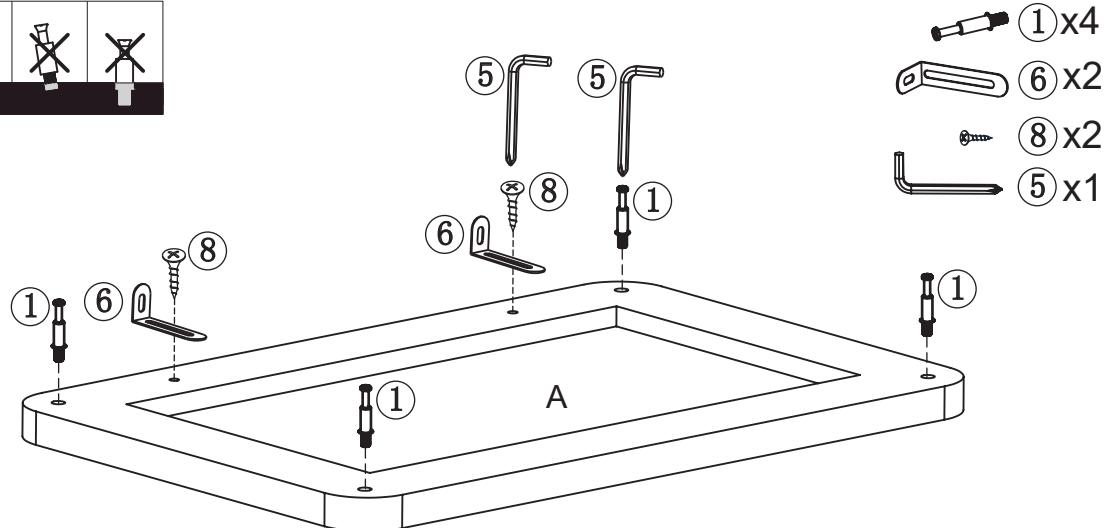



Attach cam bolt(①) to top panel (A) using I-type hexagon wrench(⑤).

Attach the long side of anti-tipping sheet iron ( ⑥ ) into top panel (A) with screw( ⑧ ) using I-type hexagon wrench(⑤).

#### Step 4



② X4  
⑤ x1

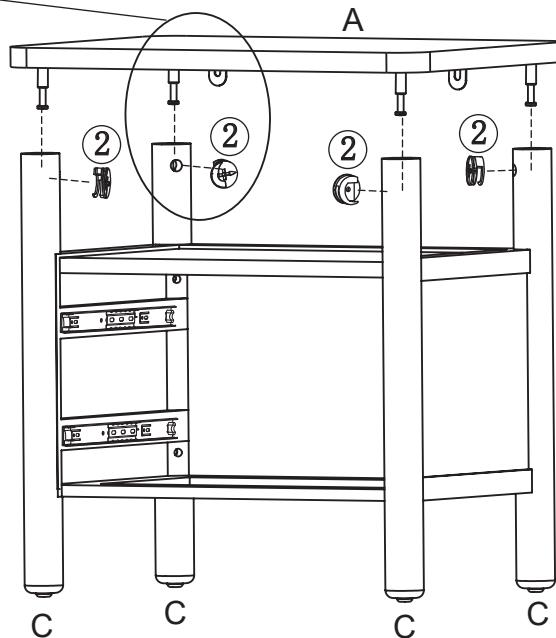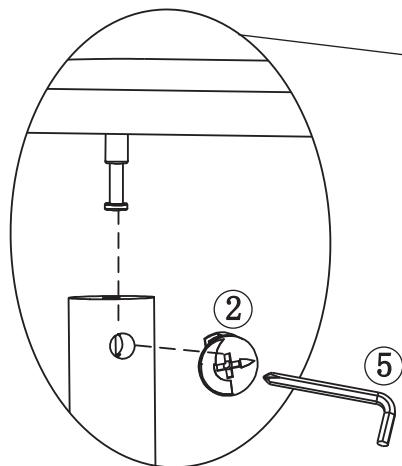


Attach the leg (C) to the top panel(A) with cam nut(②) using I-type hexagon wrench(⑤).


#### Step 5

⑤ x1

Handle inside drawer

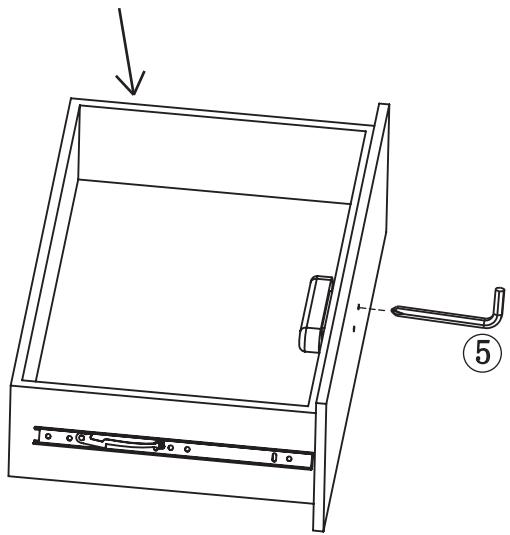


Handle outside drawer

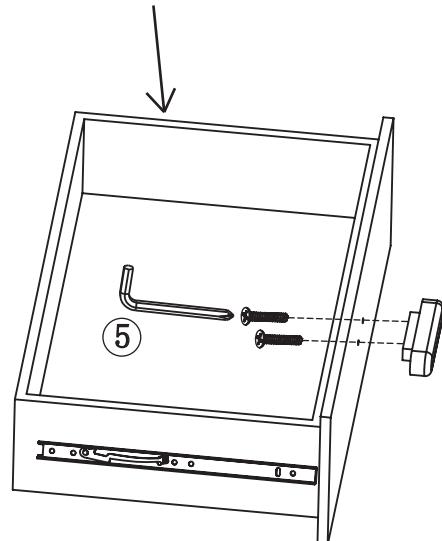


Lock the handle outside the drawer using I-type hexagon wrench(⑤).

## Step 6

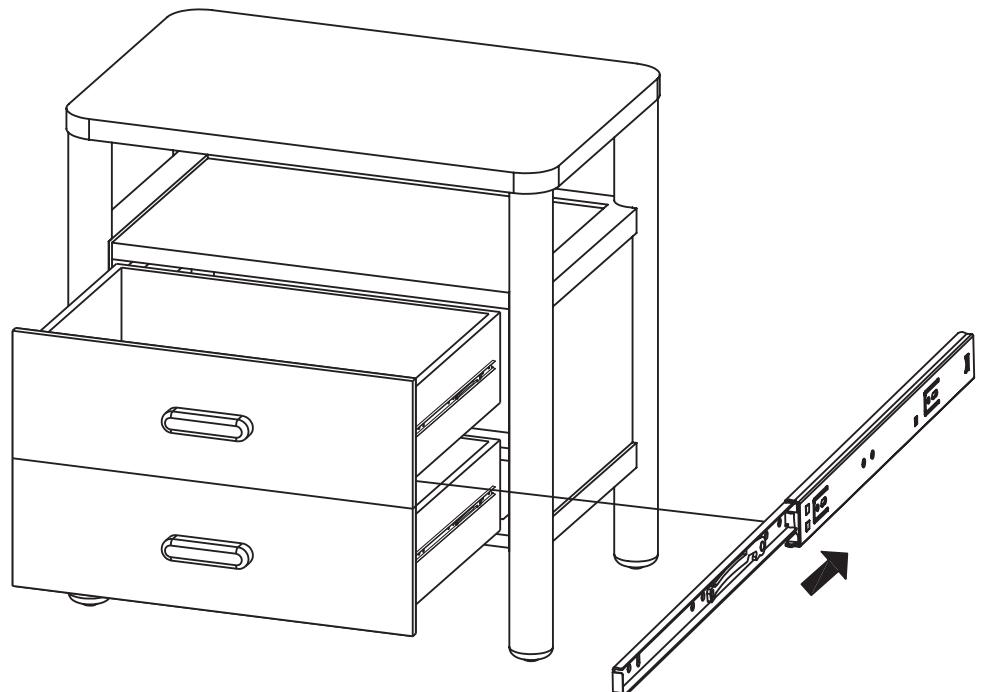


Please put the drawer in the cabinet (B).

## Step 7

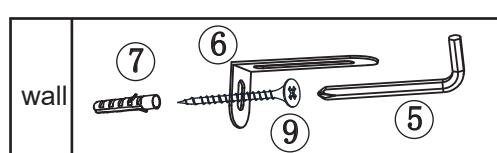


	7	x2
	9	x2
	5	x1

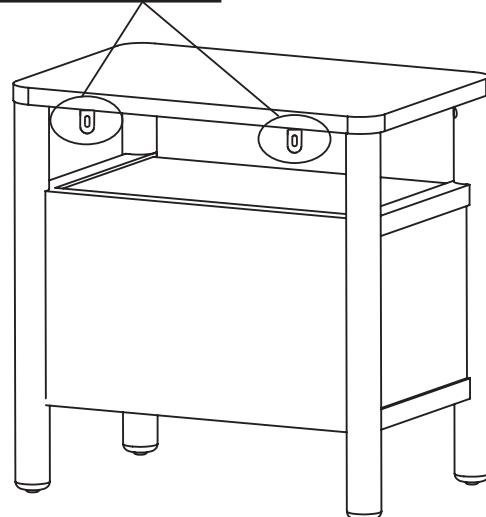

Screw the nut ( 7 ) into the wall. Install the short side of anti-tipping sheet iron ( 6 ) on the wall with screw( 9) using I-type hexagon wrench(5).

Step 8

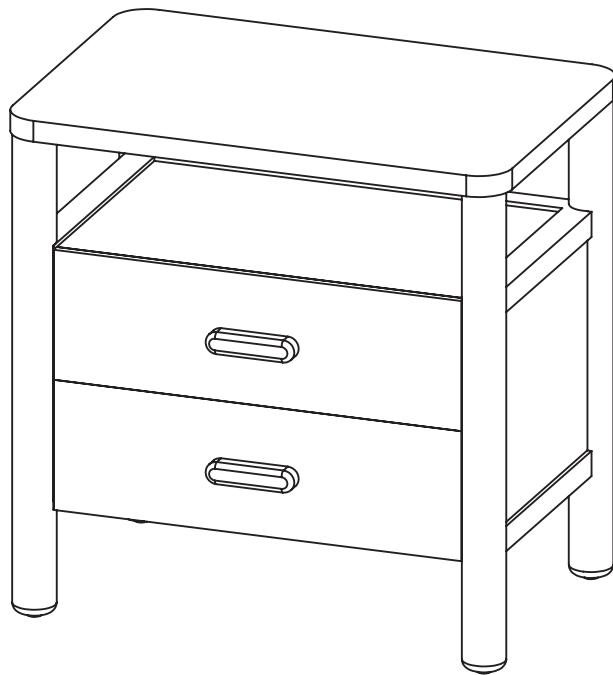

Note: If the assembled product is uneven, this can be resolved by adjusting the feet.

Your side table is ready for use.