

"Why Our Furniture Comes in Smaller, Easy-To-Assemble Packages"

We believe that thoughtful packaging and design are essential to providing quality furniture that's better for the environment and easier on your wallet. That's why our products are shipped in fully knock-down, space-efficient packaging. This approach reduces the carbon footprint of transportation, minimizes packaging waste, and ultimately allows us to pass on significant savings to you. Additionally, our flat-packed designs make it simple to move and assemble your new furniture at home, saving you time and costly delivery fees. With a little consumer effort, you'll enjoy great furniture at a lower cost while making a greener choice for the planet. Take your time, follow the instructions, and enjoy watching your vision come to life--piece by piece."

We believe you will absolutely love your new furniture. Please immediately examine this product carefully. Any request for missing part or damage replacement must be received within 90 days of your receipt of the product. For some reason you want to return the product, please contact us directly before you decide to return your product to the retailer. Our Customer Service team can answer most concerns and can assist you with any questions you may have about your new product.

Please contact us first by emailing service@casepiece.com

Have these ready when you email:

- **Item Number**
- **PO #**
- **Purchaser Name**
- **Description of the problem and/or the Part Number needed**
- **Proof of Purchase**

Replacements for missing or damaged parts or hardware are normally shipped within 3 to 5 business days and we thank you for your patient.

The item must be returned in good condition, in original box, with all original proof of purchase, parts and accessories, within the time frame specified by the retailer it was purchased from.

90-Day Limited Warranty Statement for Manufacturing Defects

Please read this Limited Warranty carefully. To maintain your Warranty, you will need to comply with the conditions stated here.

This warranty is for manufacturing defects only and does not cover damages as a result of misuse.

1. Our products sold comply with the description contained in this Warranty. All parts and products are warranted 90-Day from the original date of delivery except: parts and products used for commercial, contract, rental trade, institutional, or any other non-residential purposes; parts and products that have not been maintained in accordance with the care recommendations provided; parts and products damaged resulting from the consumer's improper assembly; or parts and products that are damaged or defective due to normal wear and tear.


2. To exercise rights under this warranty, proper documentation, i.e., photography, purchase order number, manufacturer's bar code label, and or any other pertinent information upon request is required. We reserve the right to repair or replace the product within the warranty period based upon the documentation received as support of a claim for consideration. We will not replace or repair any product if improper maintenance, improper handling, or improper use caused the damage. Any product sold from or modified by a Non-Authorized Dealer, Seller or Consumer will void the Warranty.

3. Cost of packaging and shipping to and from us is not covered by the warranty unless expressly arranged by us. This warranty does not extend to furniture that has been exchanged or replaced by us as settlement of an original claim of defective merchandise. This warranty does not extend to furniture that has been moved from delivery location on original purchase order.

We appreciate your business!










C90305 DR ASSEMBLY INSTRUCTION

HARDWARES LIST

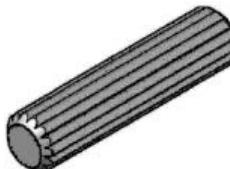ITEM	DESCRIPTION	DRAWING	QTY
A	MINIFIX CAM LOCK		66 PCS
B	MINIFIX CAM BOLT		66 PCS
C	WOOD DOWEL (M6 x 25MM)		66 PCS
D	6/8" NAIL		26 PCS
E	PLASTIC STRIP (H SHAPE)		1 PC
F	TRUSS M-SCREW (20MM)		12 PCS
G	HANDLE		6 PCS
H	TIPPING RESTRAINT		1 PC







C90305 DR ASSEMBLY INSTRUCTION

PARTS LIST

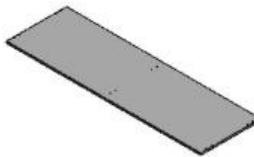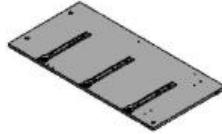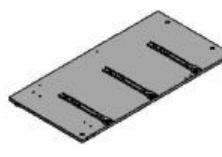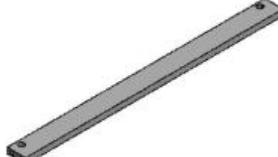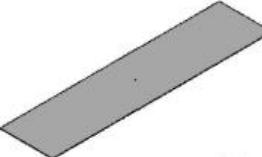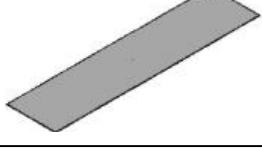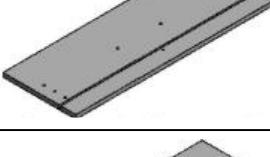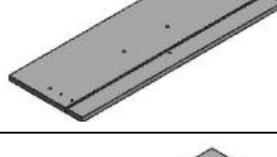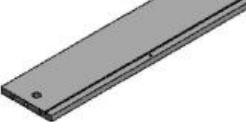
ITEM	DESCRIPTION	DRAWING	QTY
D1	TOP PANEL		1 PC
D2	LEFT PANEL		1 PC
D3	RIGHT PANEL		1 PC
D4	CENTER PANEL		1 PC
D5	SUPPORT RAIL		2 PCS
D6	BACK PANEL A		1 PC
D7	BACK PANEL B		1 PC
D8	DRAWER HEAD LEFT		3 PCS
D9	DRAWER HEAD RIGHT		3 PCS
D10	DRAWER BACK PANEL		6 PCS

C90305 DR ASSEMBLY INSTRUCTION

PARTS LIST

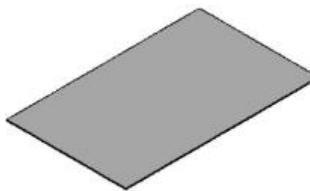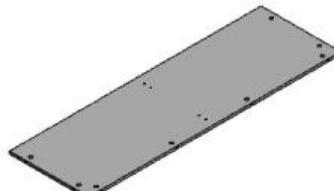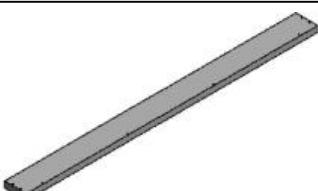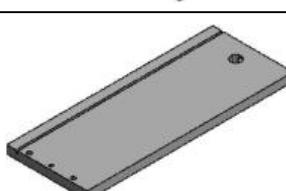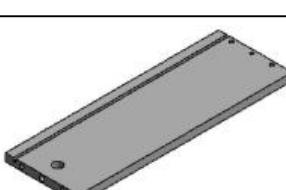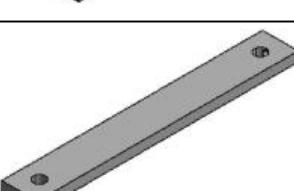
ITEM	DESCRIPTION	DRAWING	QTY
D11	DRAWER BOTTOM PANEL		6 PCS
D12	BOTTOM PANEL		1 PC
D13	FRONT BOTTOM PANEL		1 PC
D14	TIPPING PANEL		2 PCS
19	DRAWER LEFT PANEL		6 PCS
20	DRAWER RIGHT PANEL		6 PCS
21	DRAWER BOTTOM SUPPORT RAIL		6 PCS

*Note: All parts needed are shown in above picture.
Numbers only indicate the specific parts for easy assembly.


ASSEMBLY TOOLS REQUIRED	
<u>1. Screwdriver (not provide)</u>	<u>2. Hammer (not provide)</u>
	

C90305 DR ASSEMBLY INSTRUCTION

NOTE : - The outer board is for protection of packaging only, not part of furniture. Please throw it before assembly.

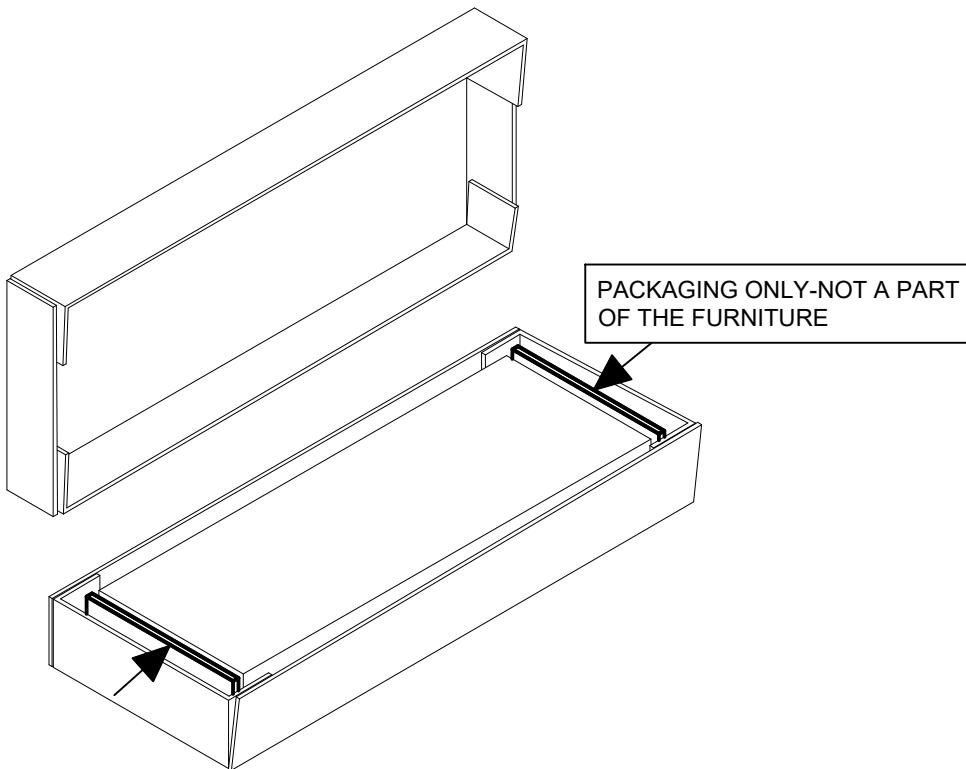


STEP 1

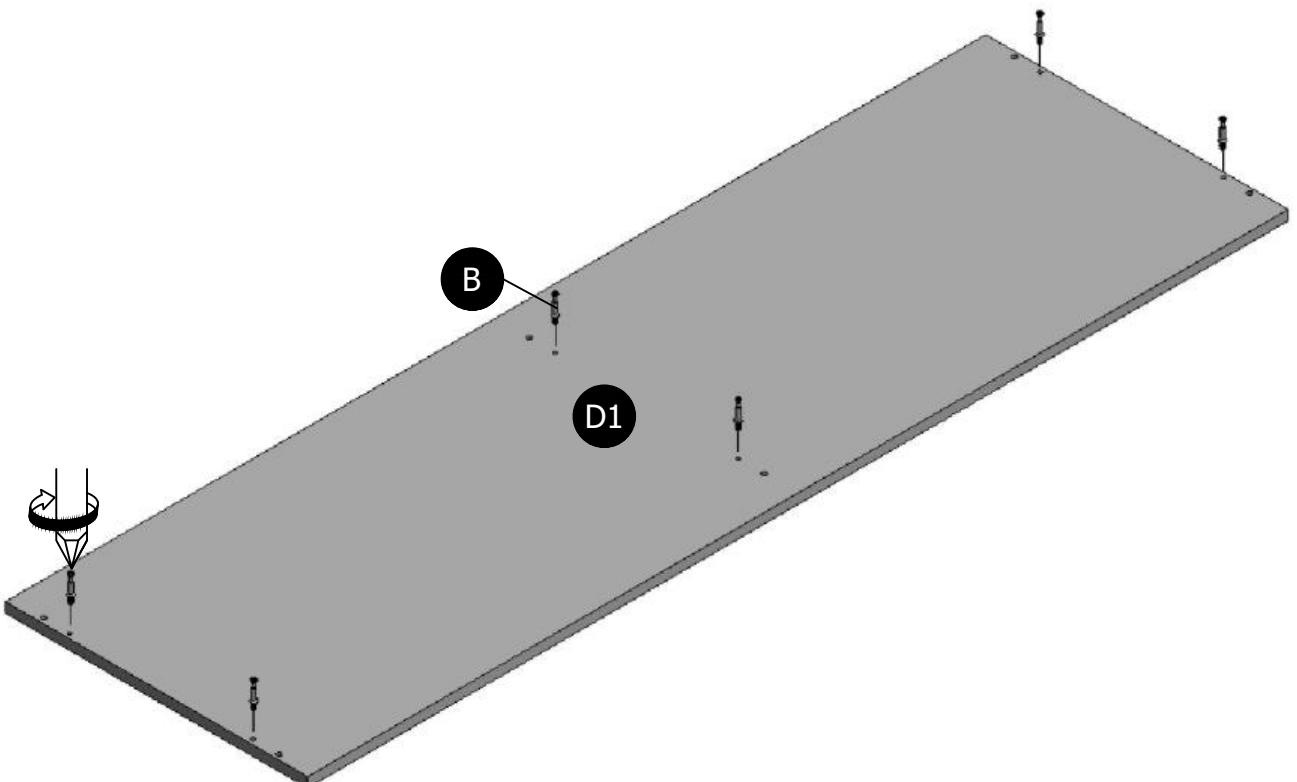

C90305 DR ASSEMBLY INSTRUCTION


STEP 2

NOTE : - Make sure arrows on each (A) point towards nearest edge with hole.

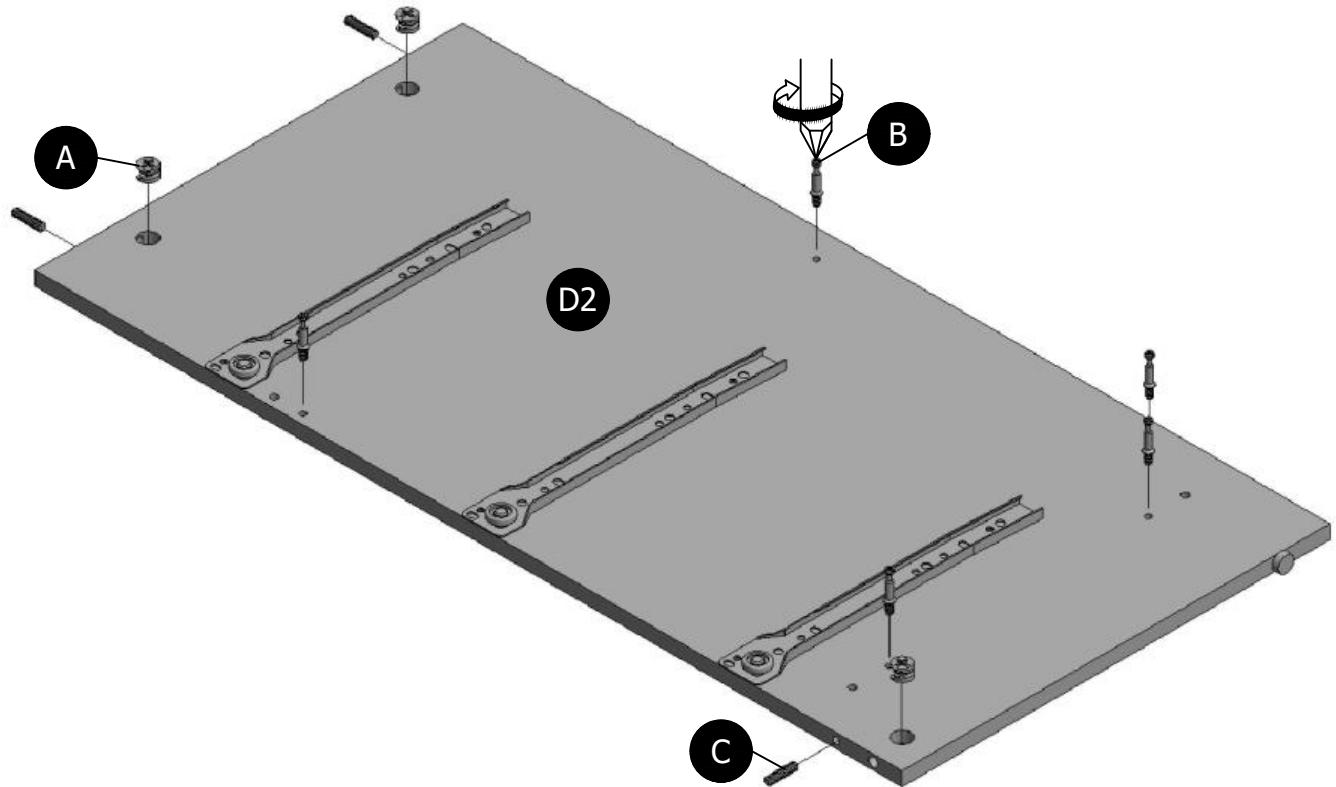

STEP 3


NOTE : - Make sure arrows on each (A) point towards nearest edge with hole.

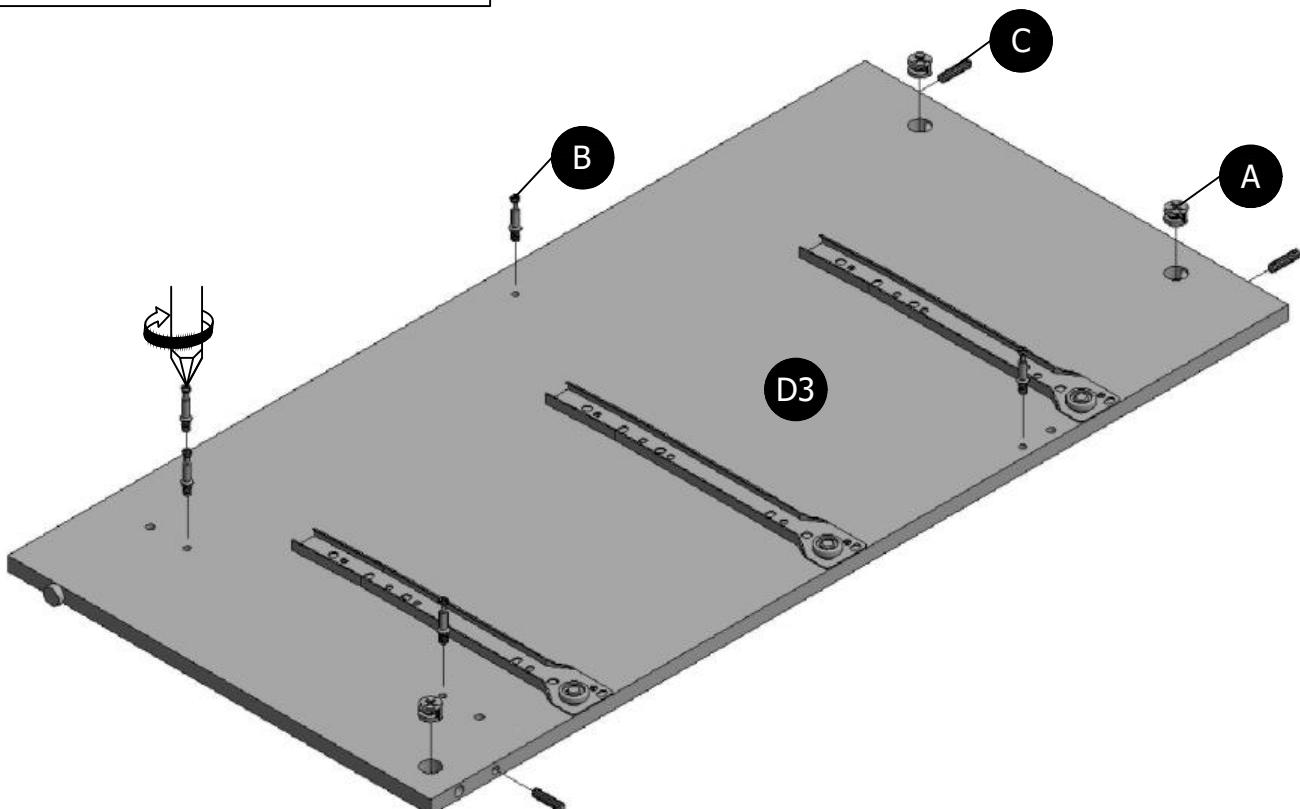

C90305 DR ASSEMBLY INSTRUCTION


STEP 4

NOTE : - Make sure arrows on each (A) point towards nearest edge with hole.

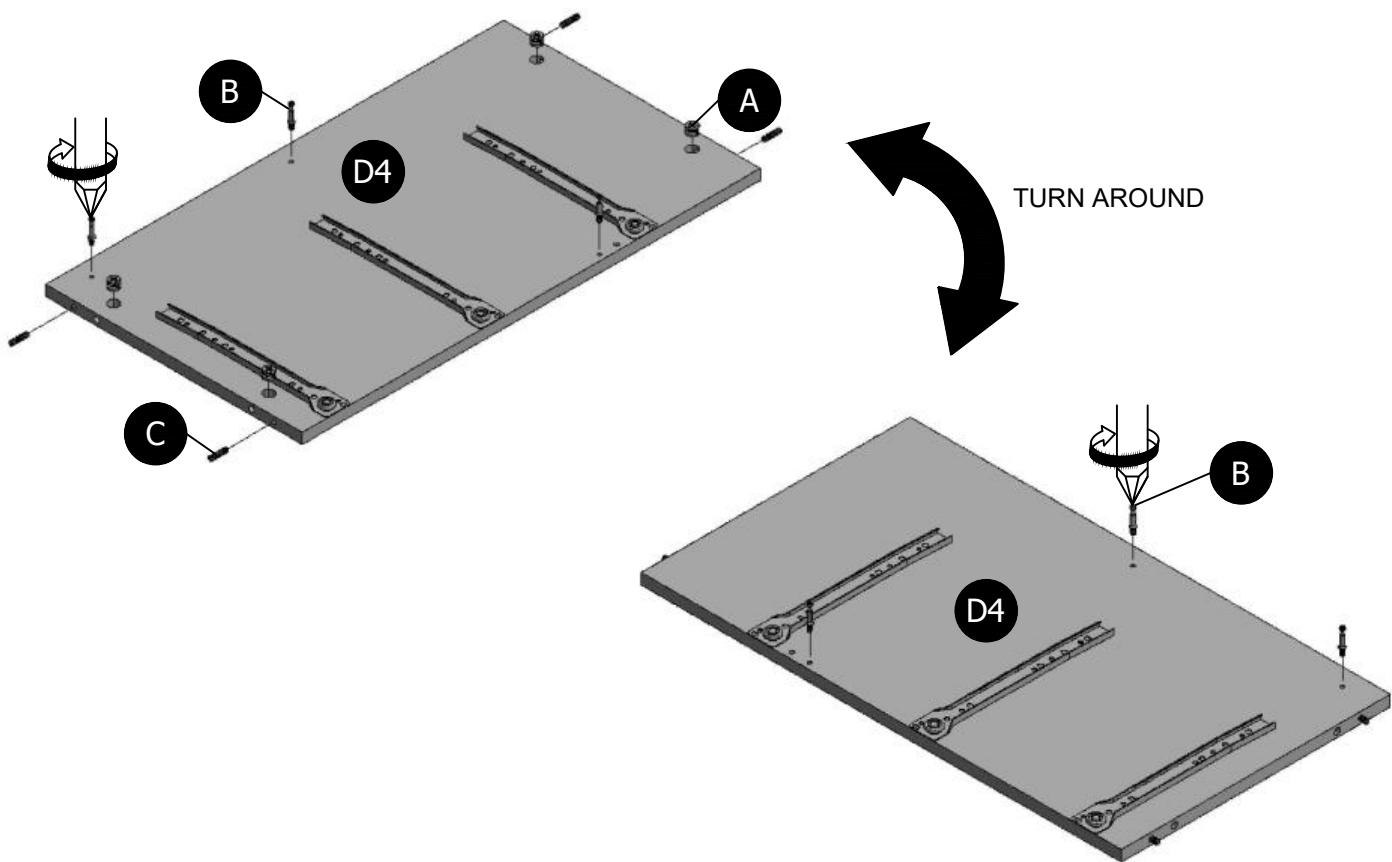

STEP 5

NOTE : - Make sure arrows on each (A) point towards nearest edge with hole.

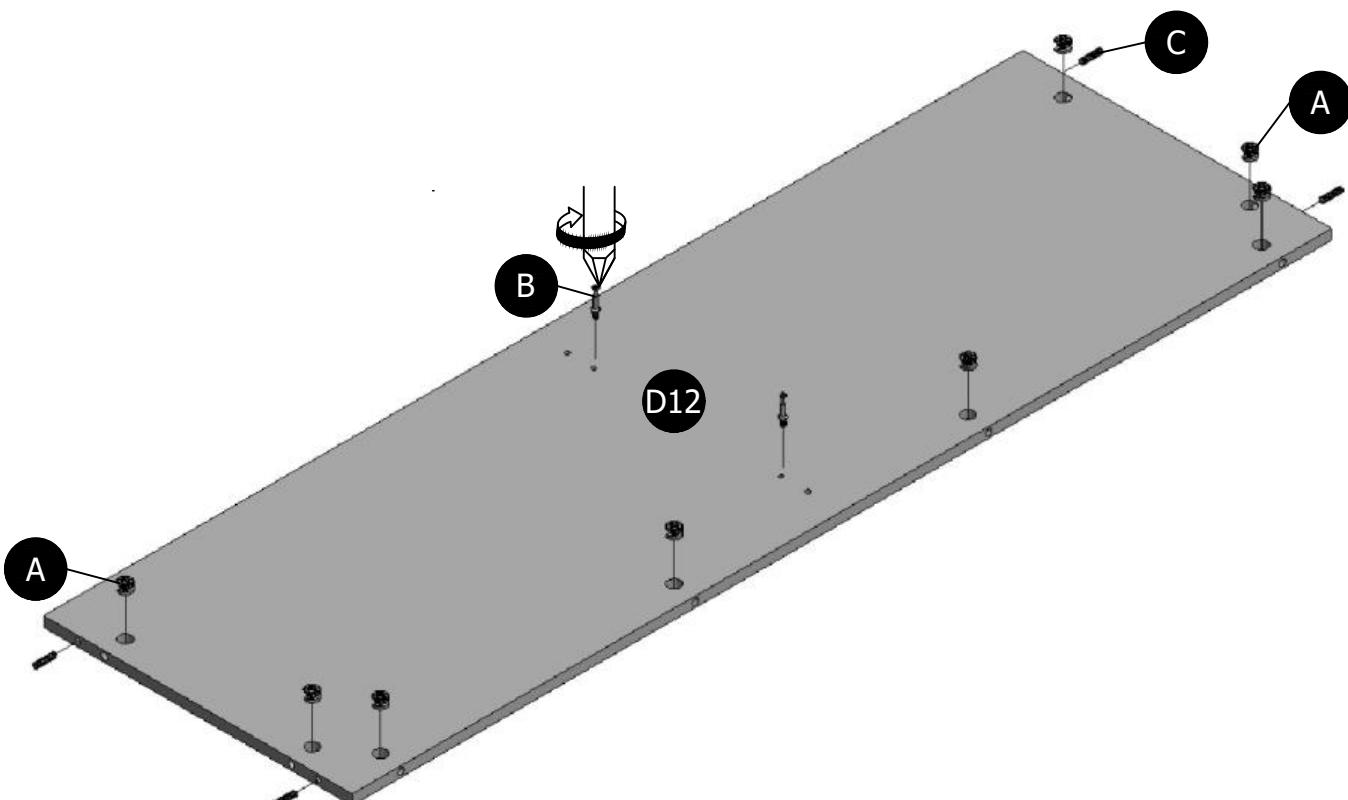


C90305 DR ASSEMBLY INSTRUCTION

STEP 6

NOTE : - Make sure arrows on each (A) point towards nearest edge with hole.


X 2

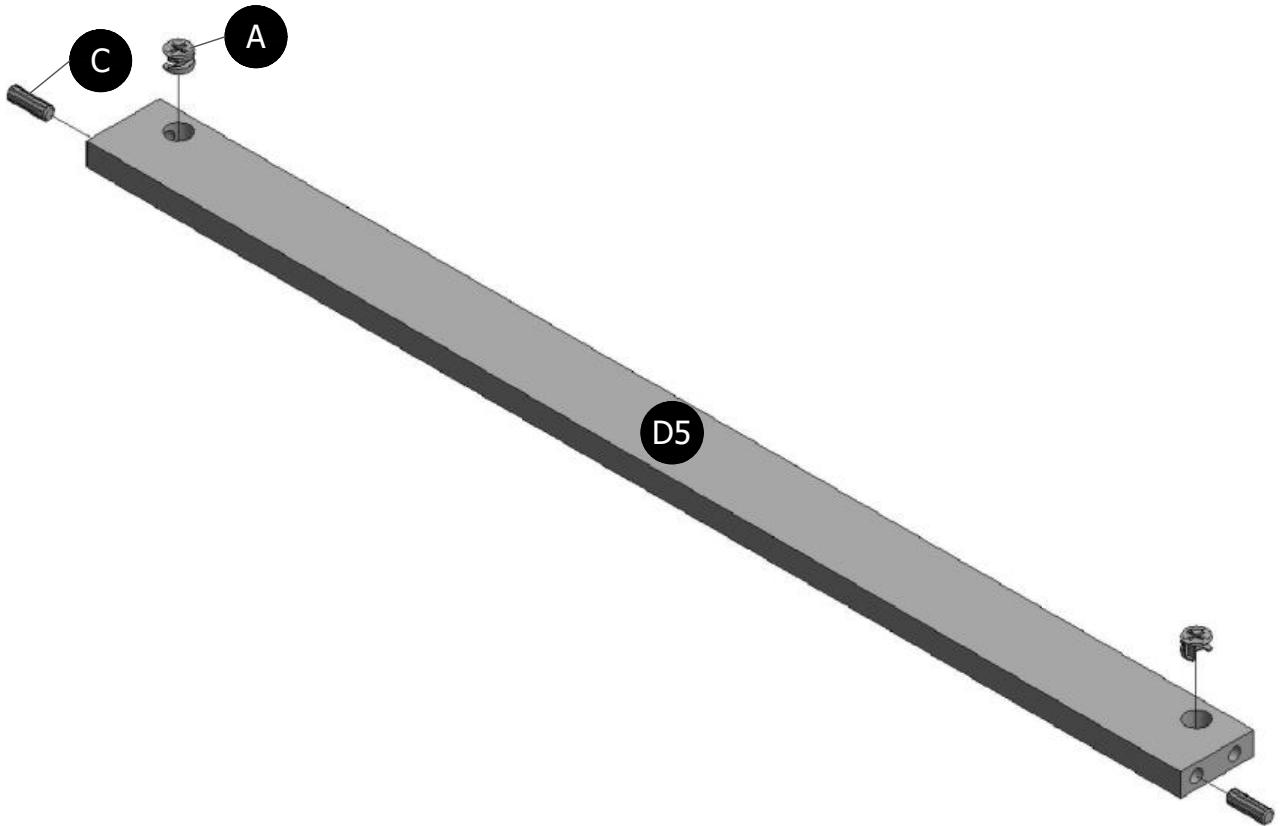

STEP 7


NOTE : - Make sure arrows on each (A) point towards nearest edge with hole.

X 2

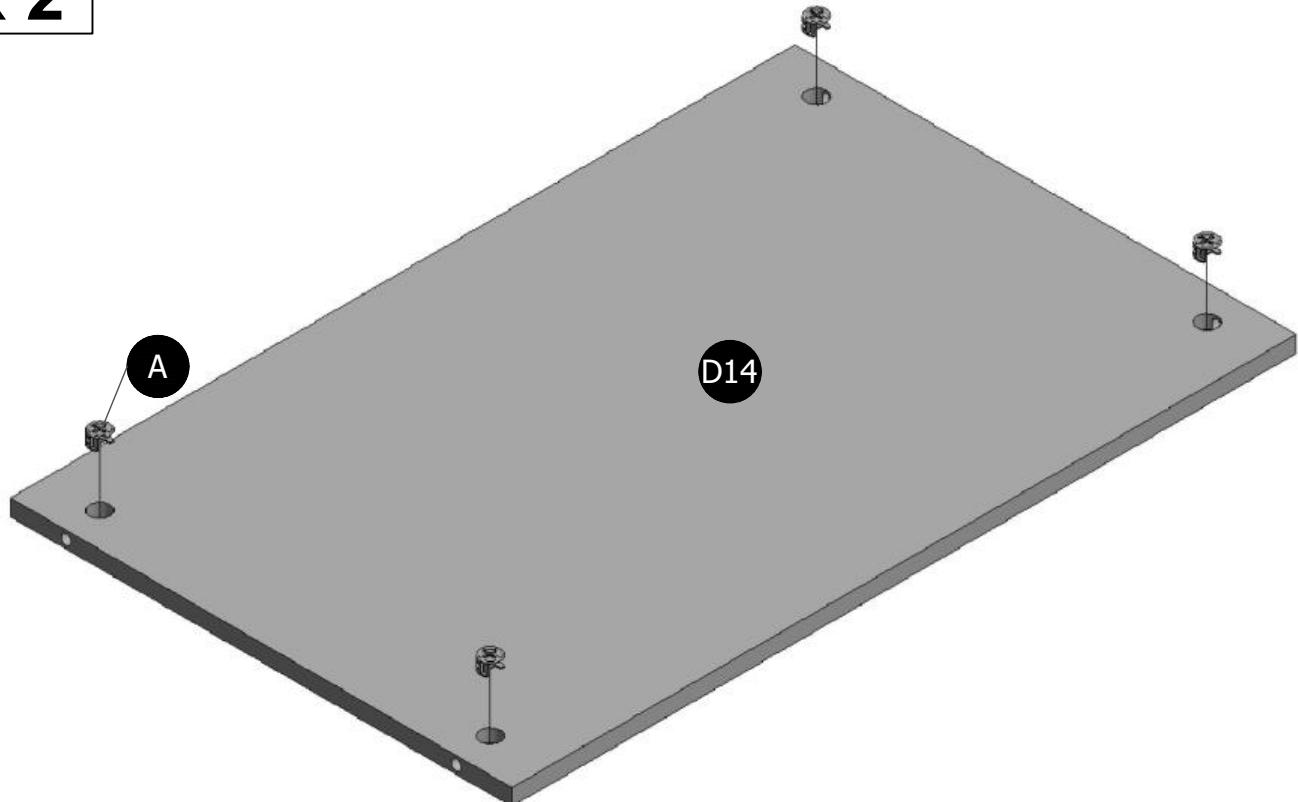


C90305 DR ASSEMBLY INSTRUCTION

STEP 8

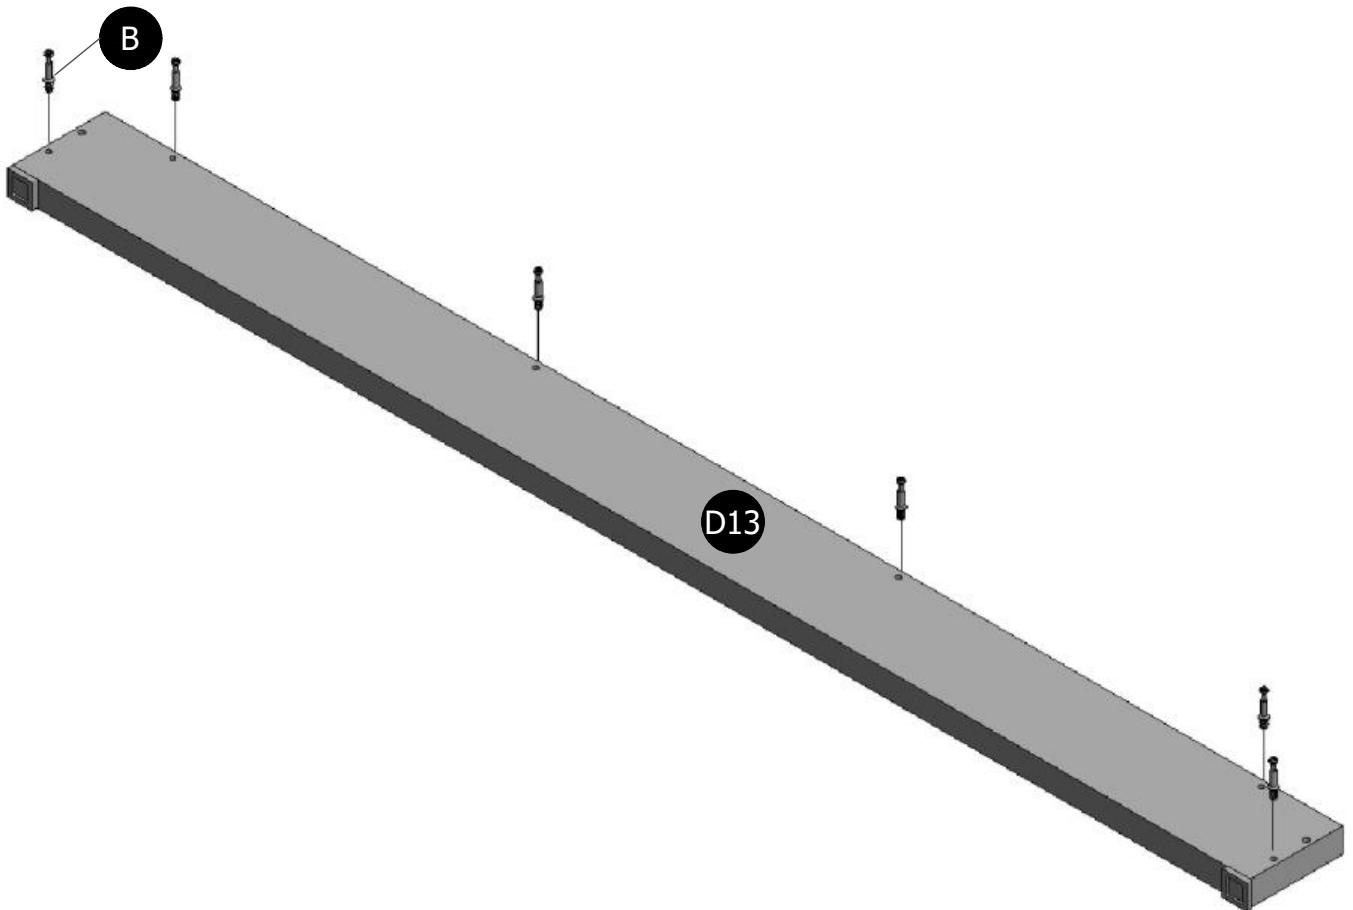


STEP 9

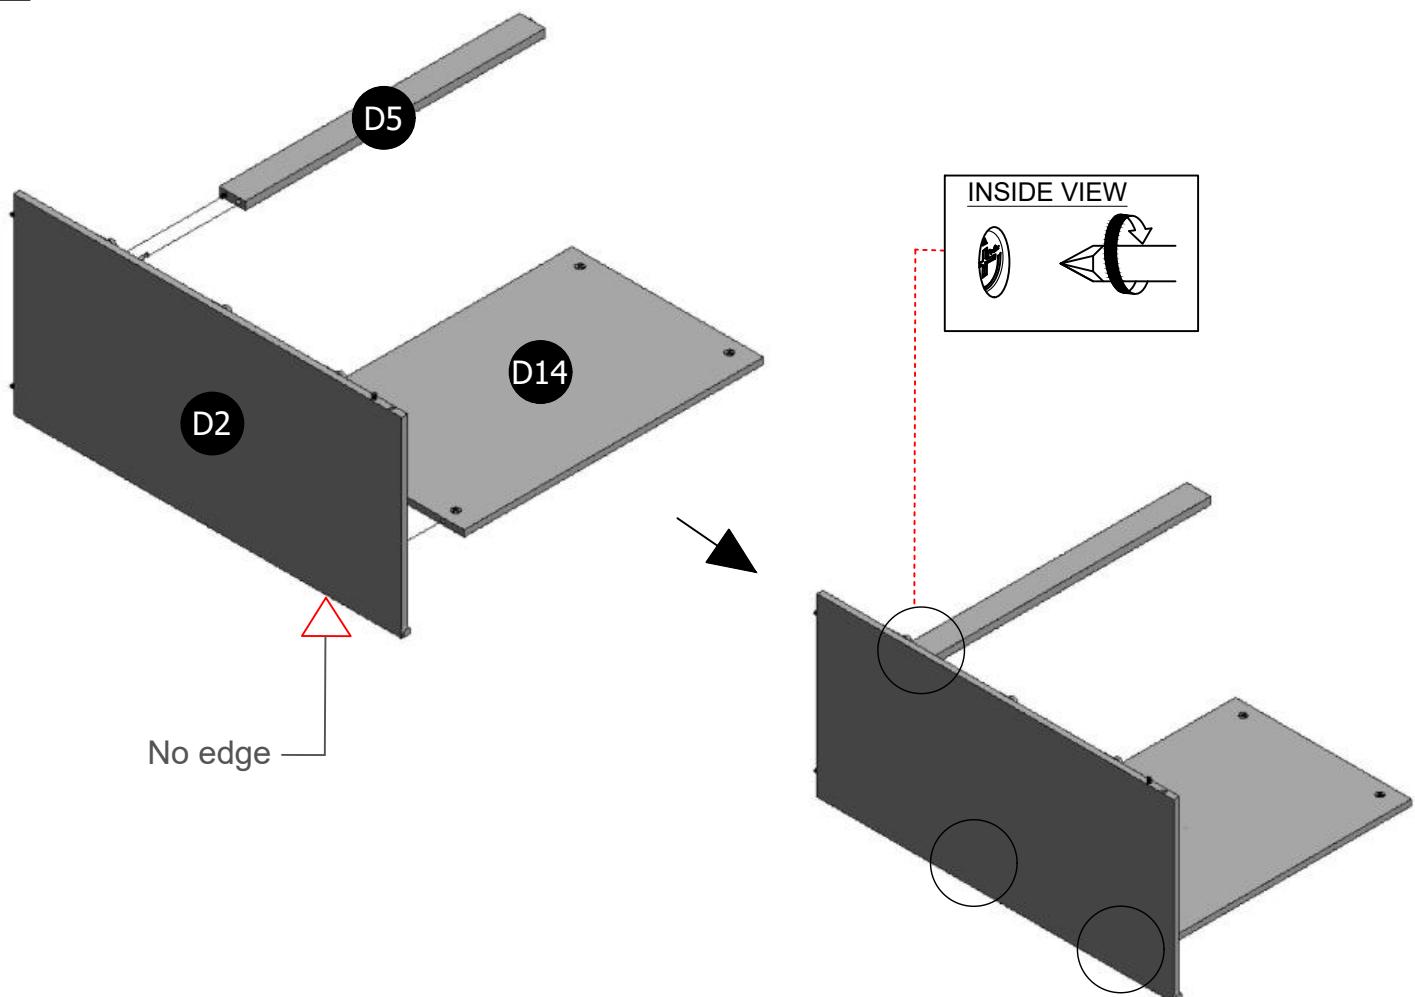


C90305 DR ASSEMBLY INSTRUCTION

STEP 10

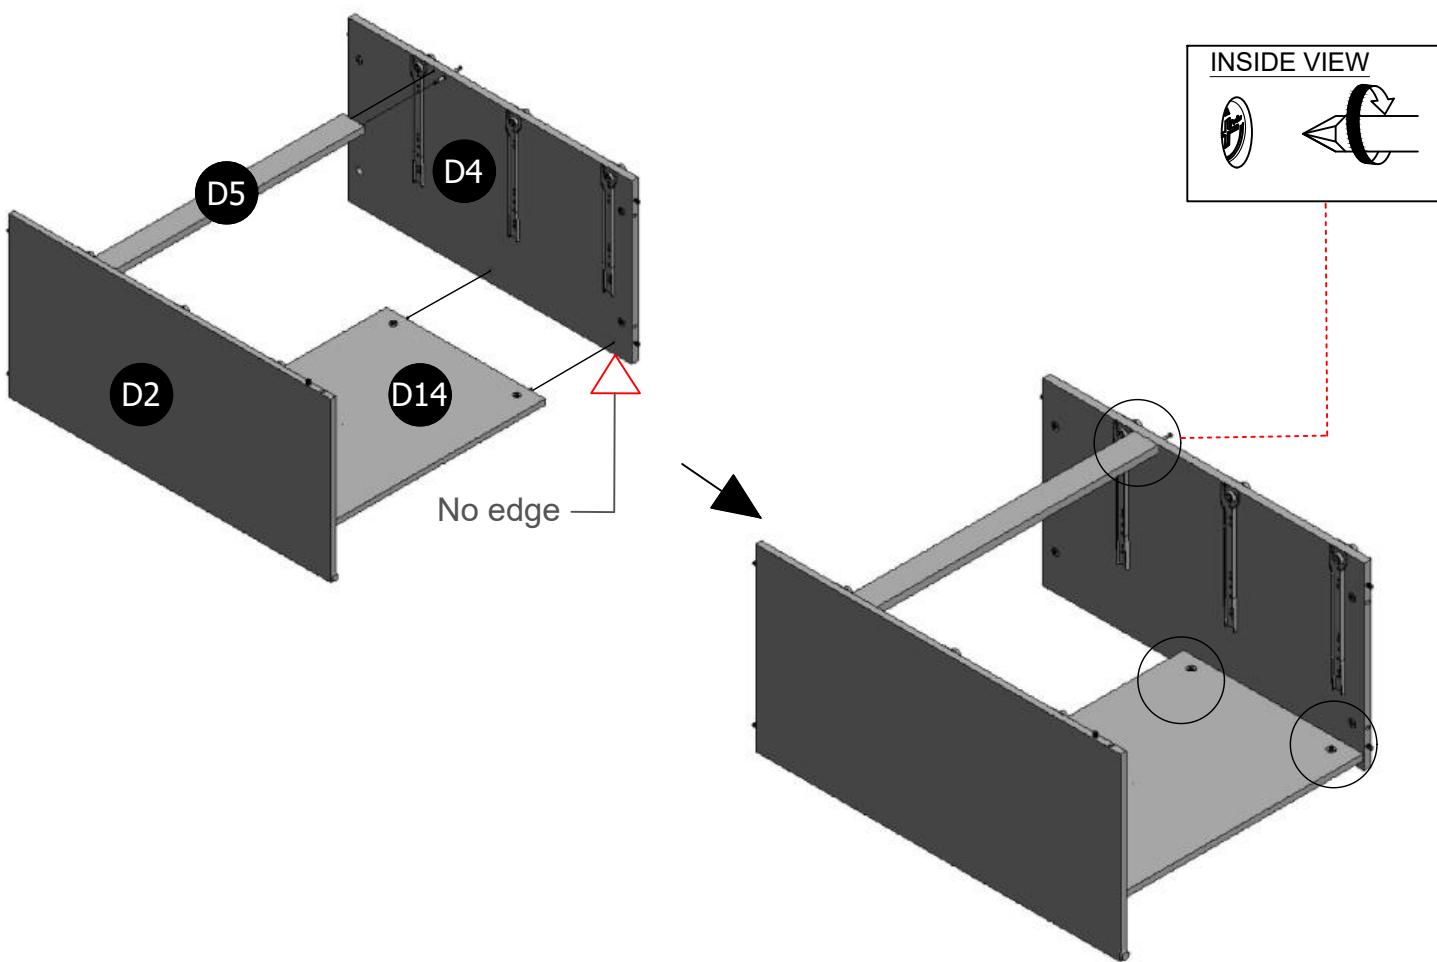


STEP 11

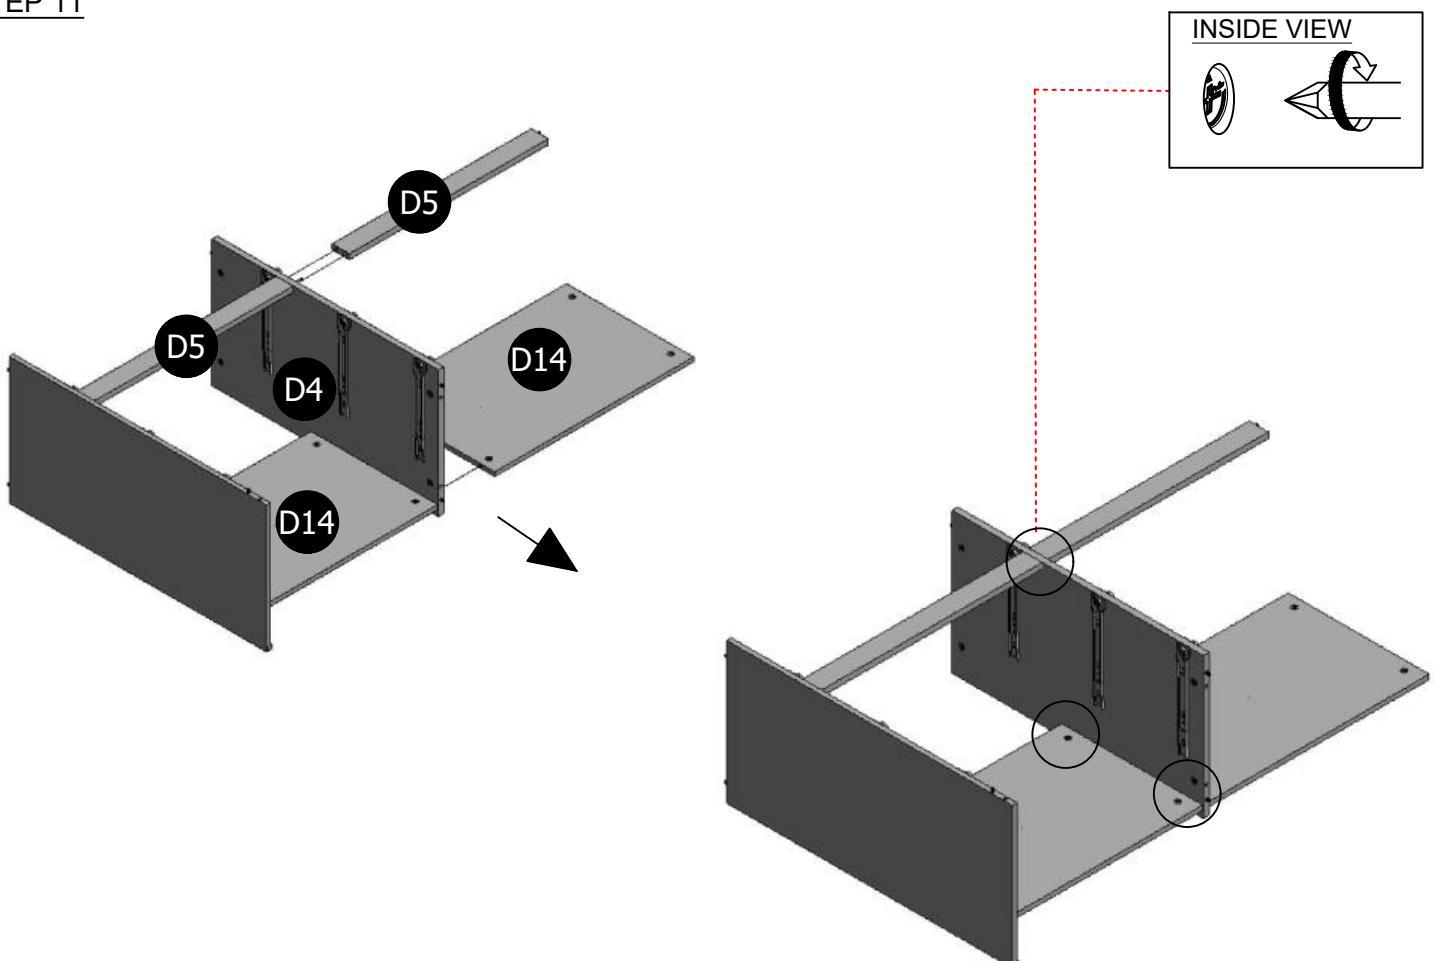


C90305 DR ASSEMBLY INSTRUCTION

STEP 12

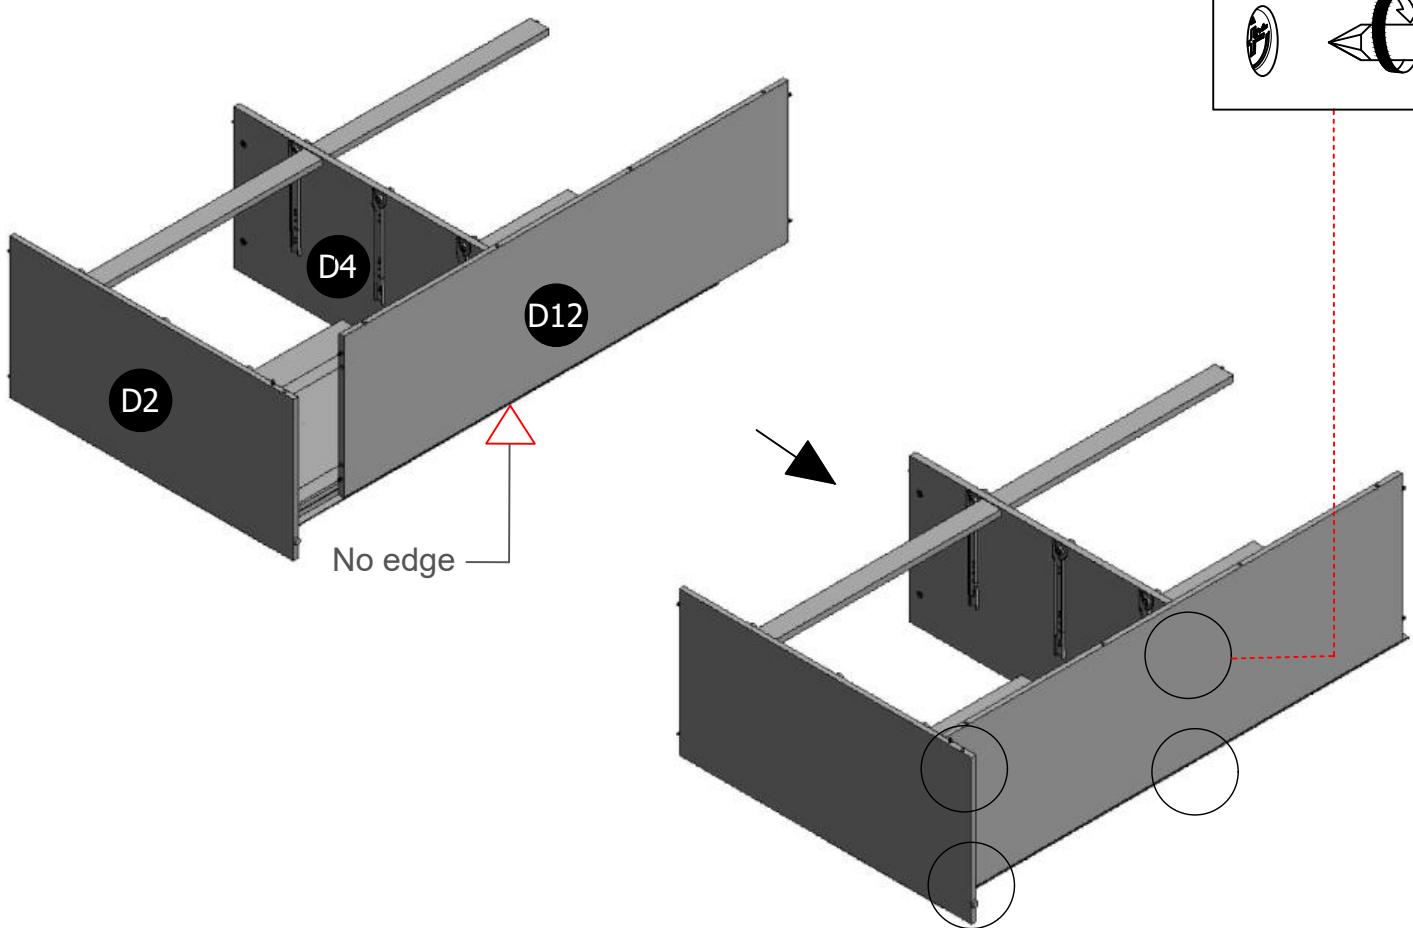


STEP 13

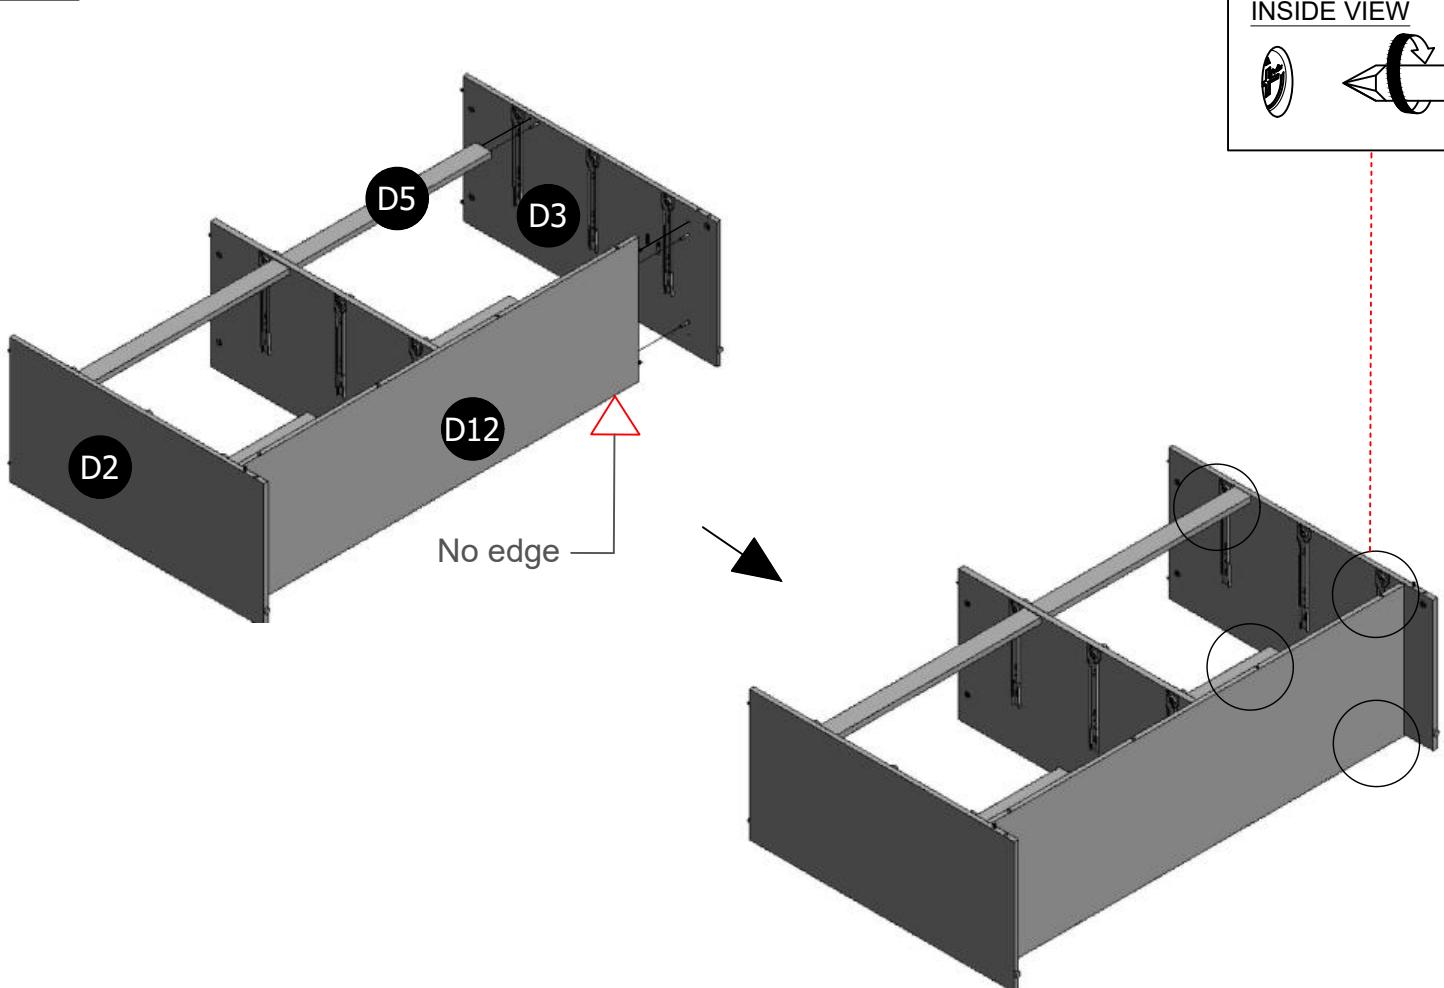


C90305 DR ASSEMBLY INSTRUCTION

STEP 14

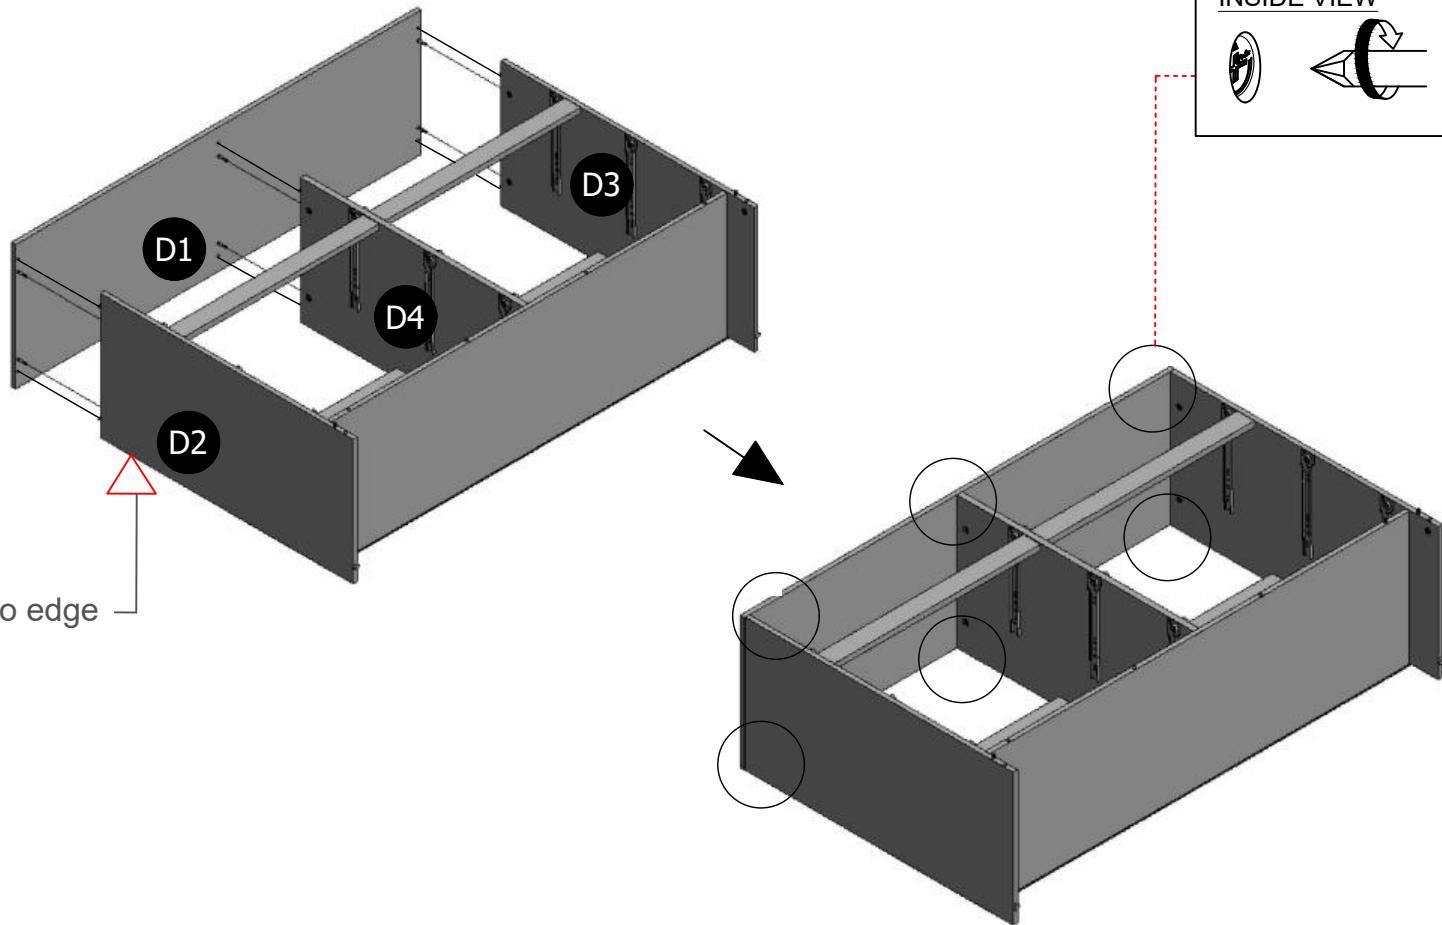


STEP 15

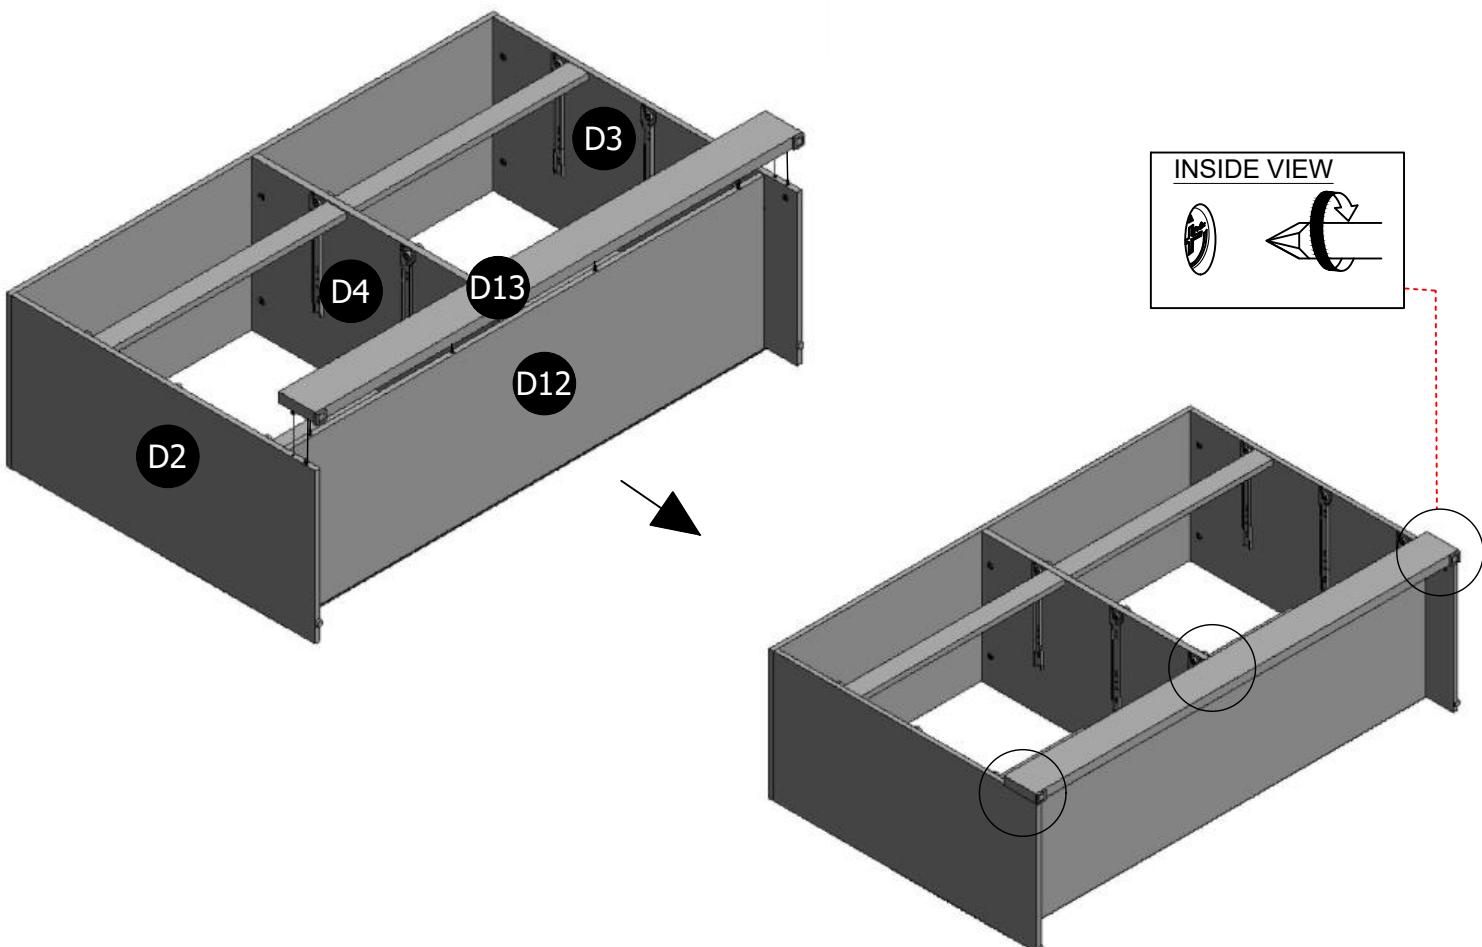

C90305 DR ASSEMBLY INSTRUCTION


STEP 16

Side with color paper must be the same.

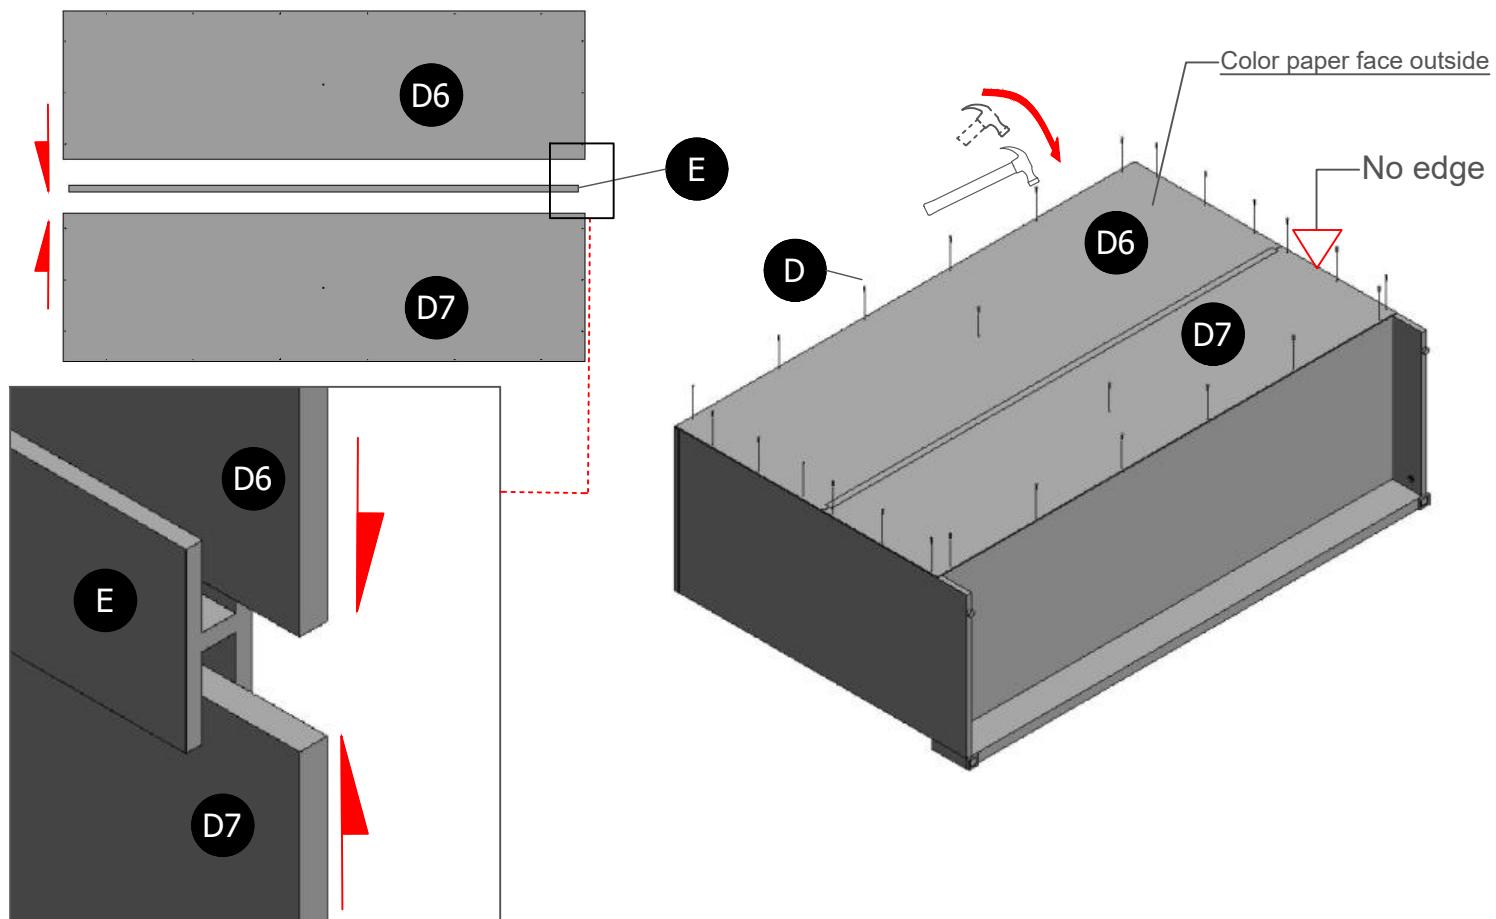

STEP 17

x 3

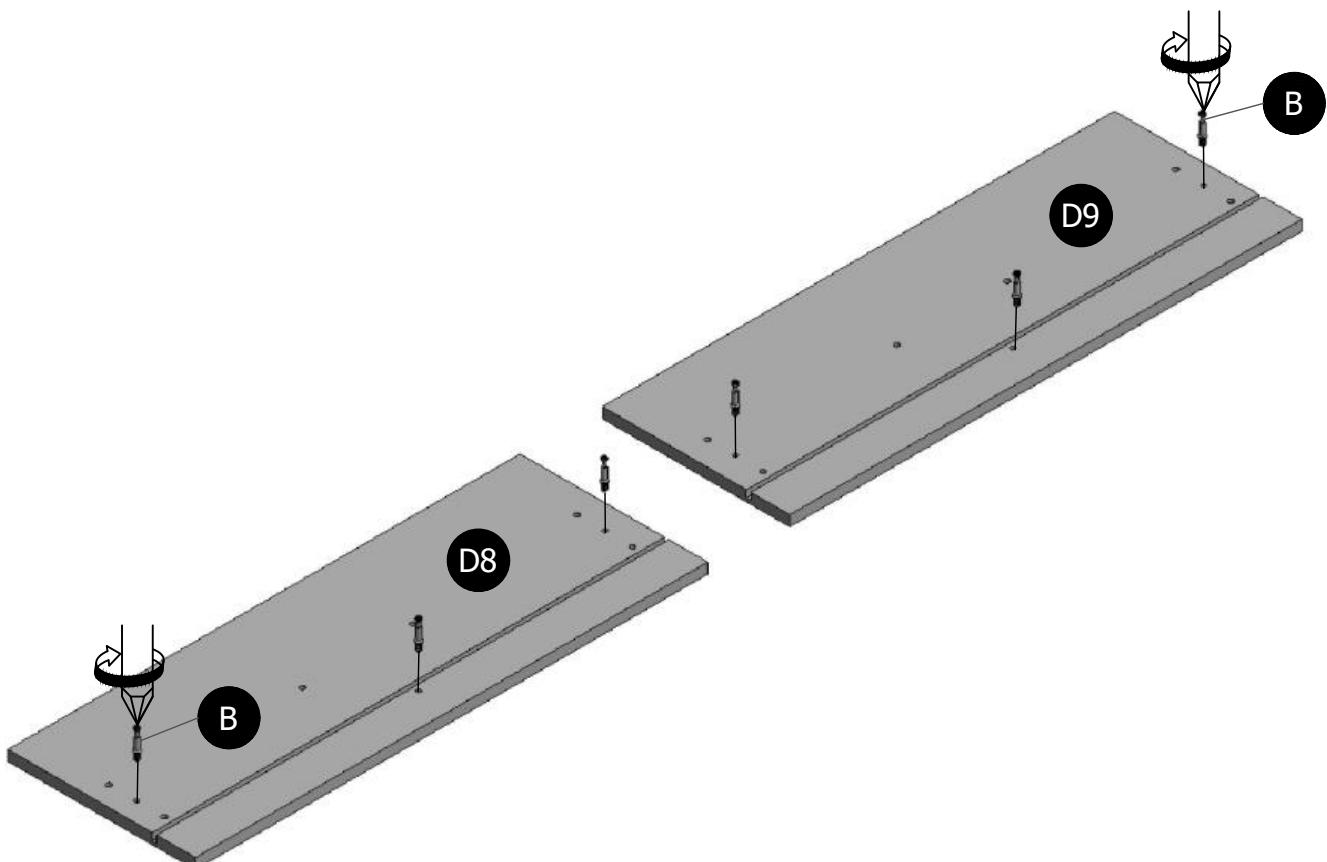


C90305 DR ASSEMBLY INSTRUCTION

STEP 18

NOTE : - Make sure arrows on each (A) point towards nearest edge with hole.


X 6

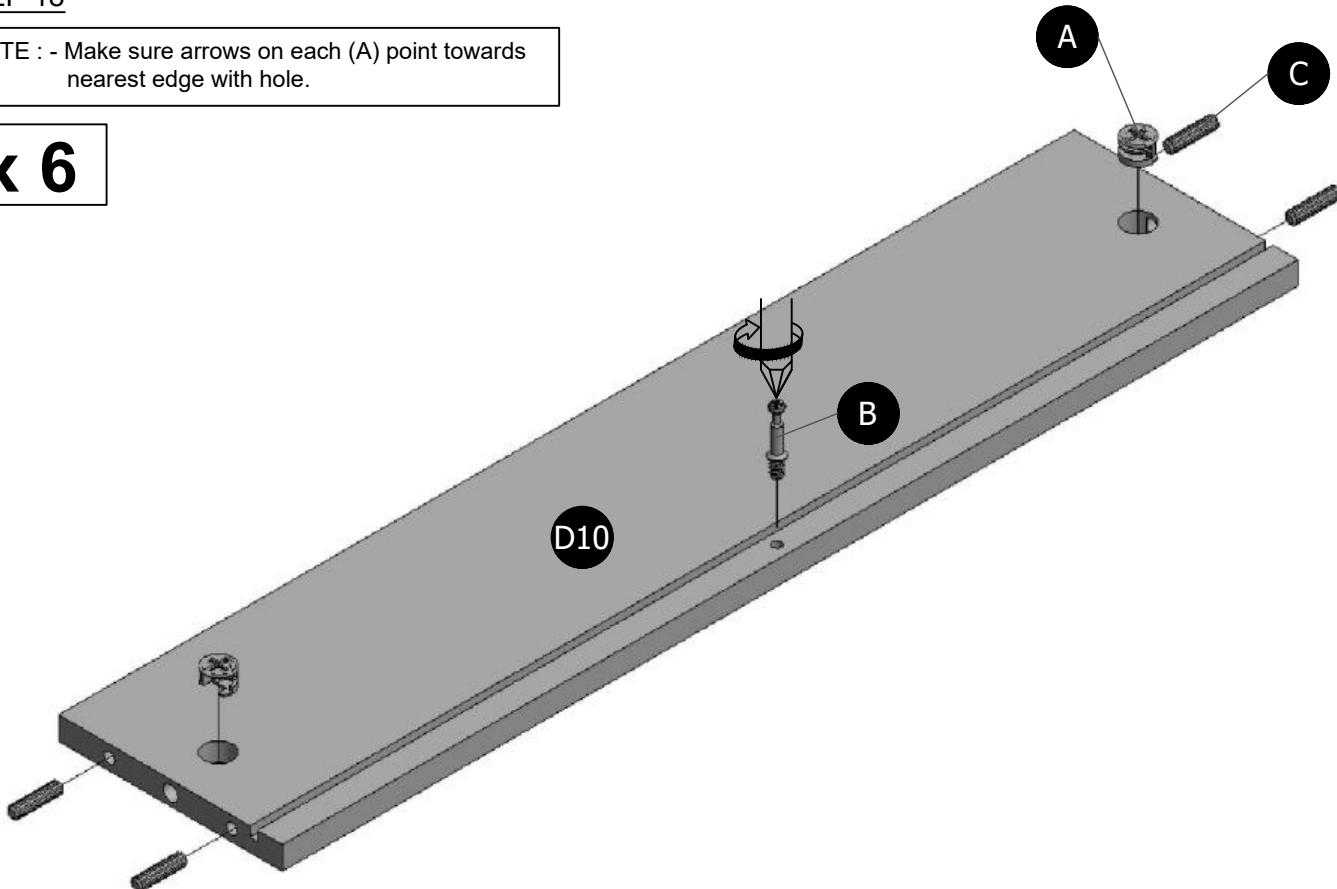

STEP 19

NOTE : - Make sure arrows on each (A) point towards nearest edge with hole.

X 6

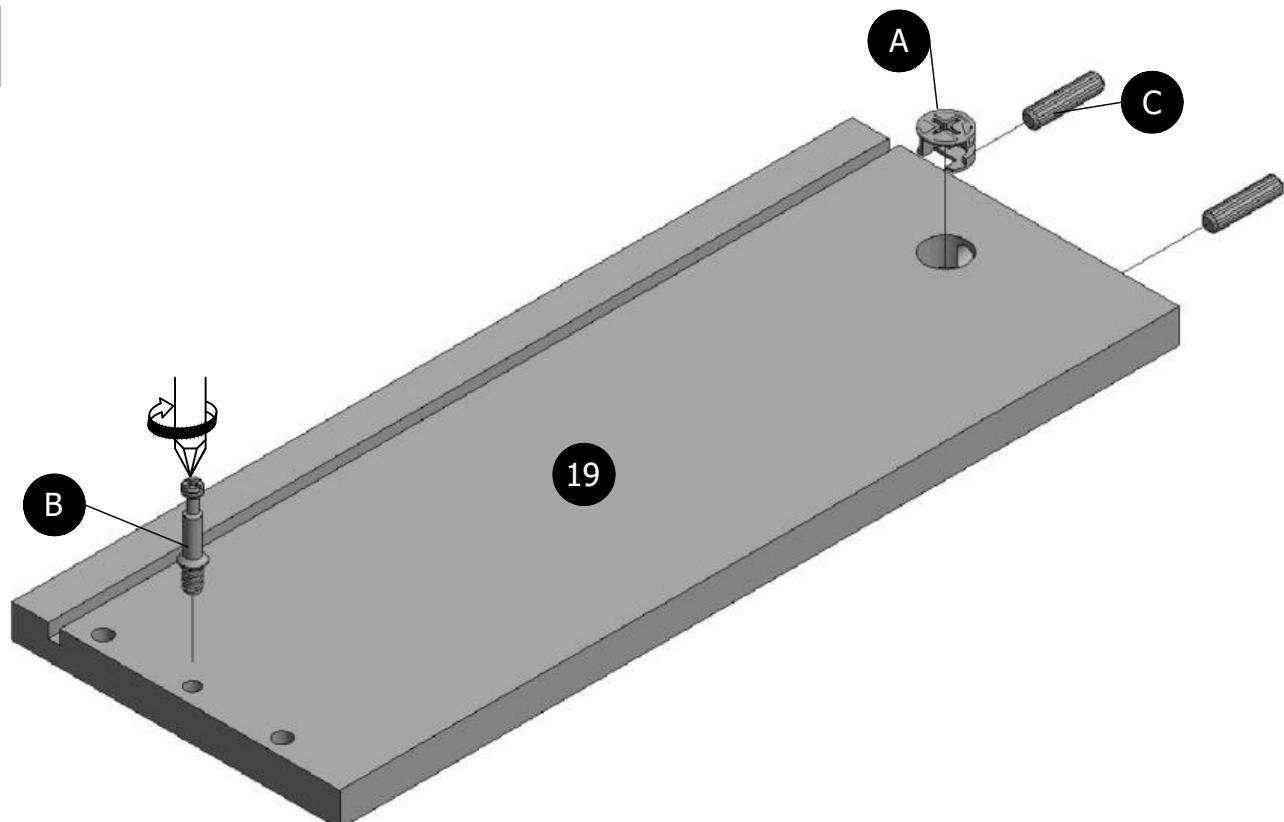


C90305 DR ASSEMBLY INSTRUCTION

STEP 20

NOTE : - Make sure arrows on each (A) point towards nearest edge with hole.


x 6

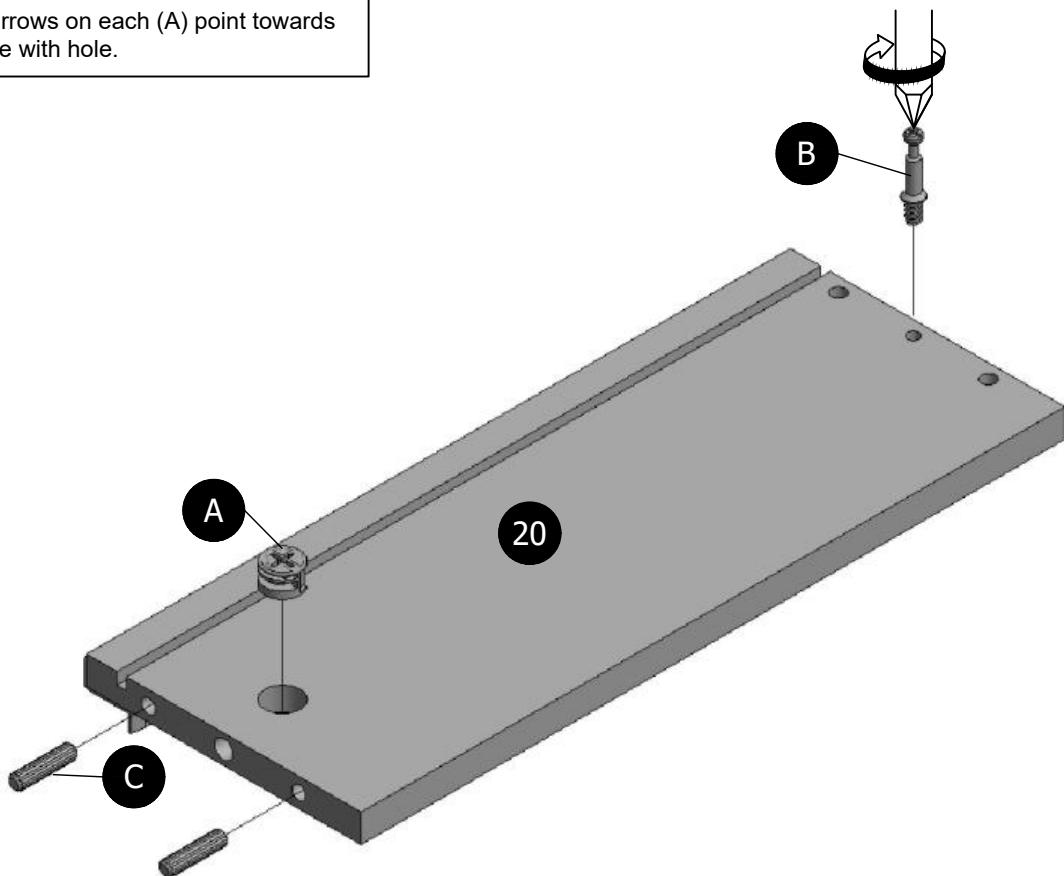

STEP 21

NOTE : - Make sure arrows on each (A) point towards nearest edge with hole.


x 6

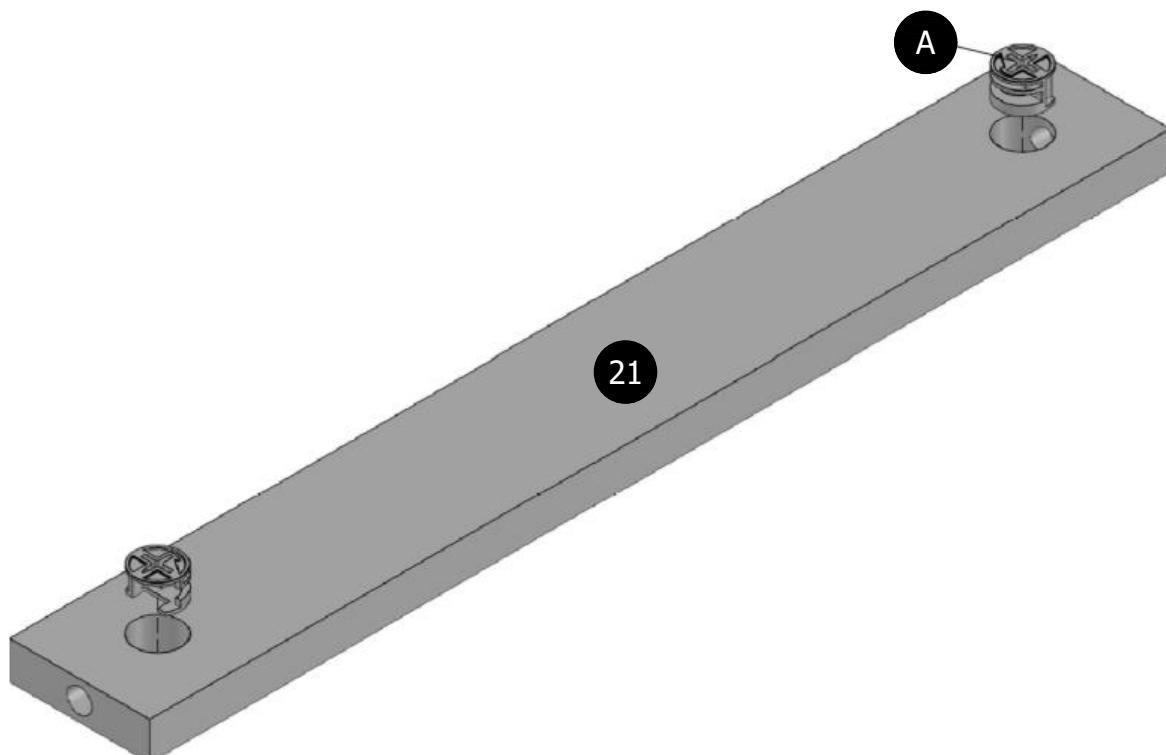

C90306 DR ASSEMBLY INSTRUCTION


STEP 22

x 6

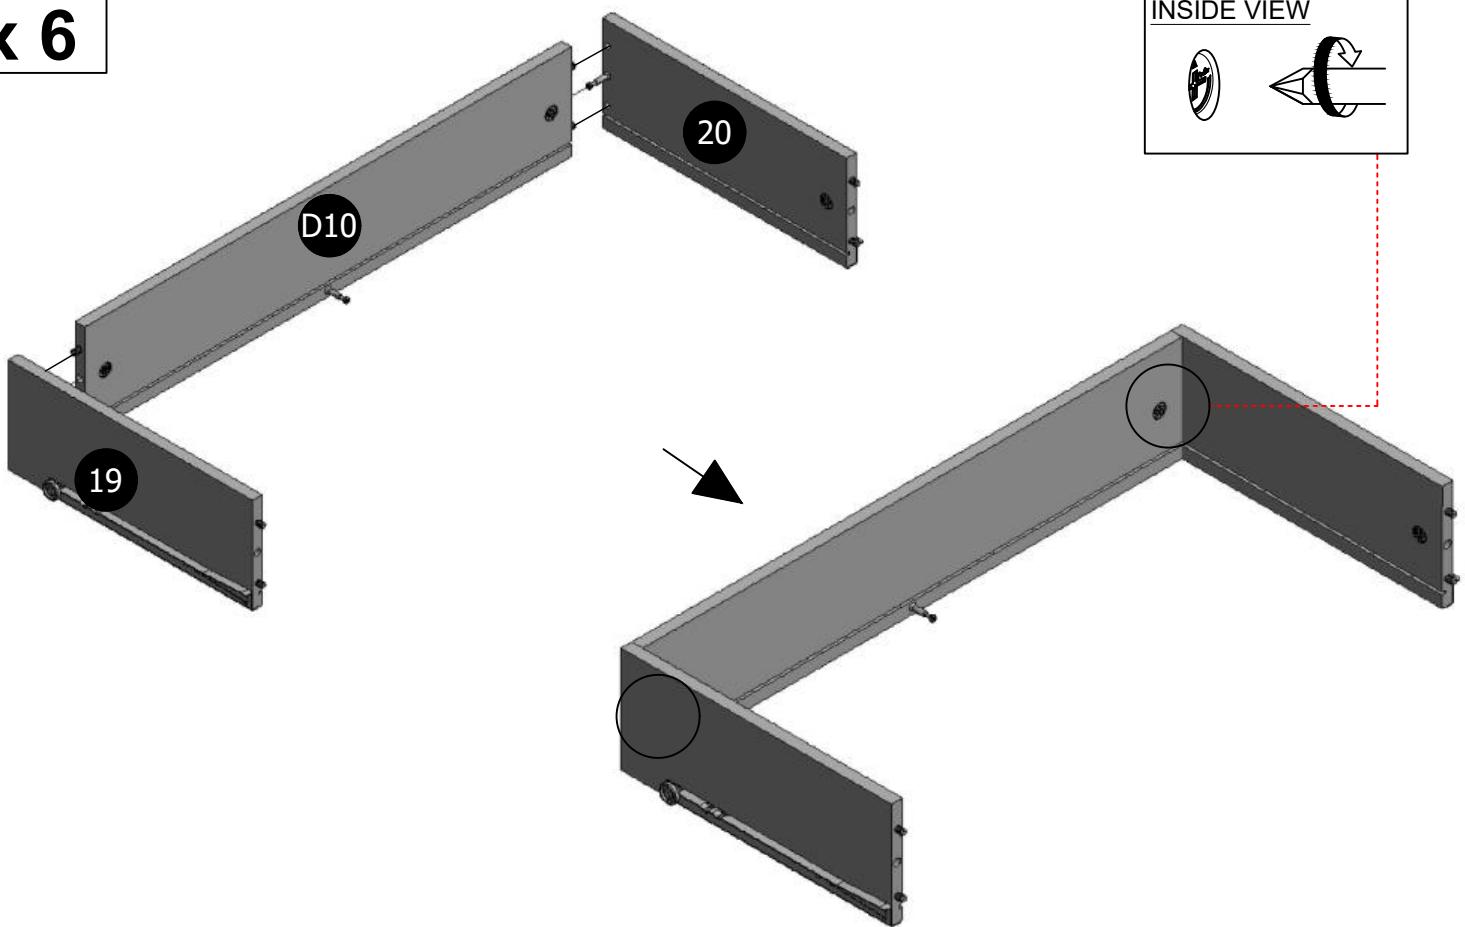

STEP 23

x 6


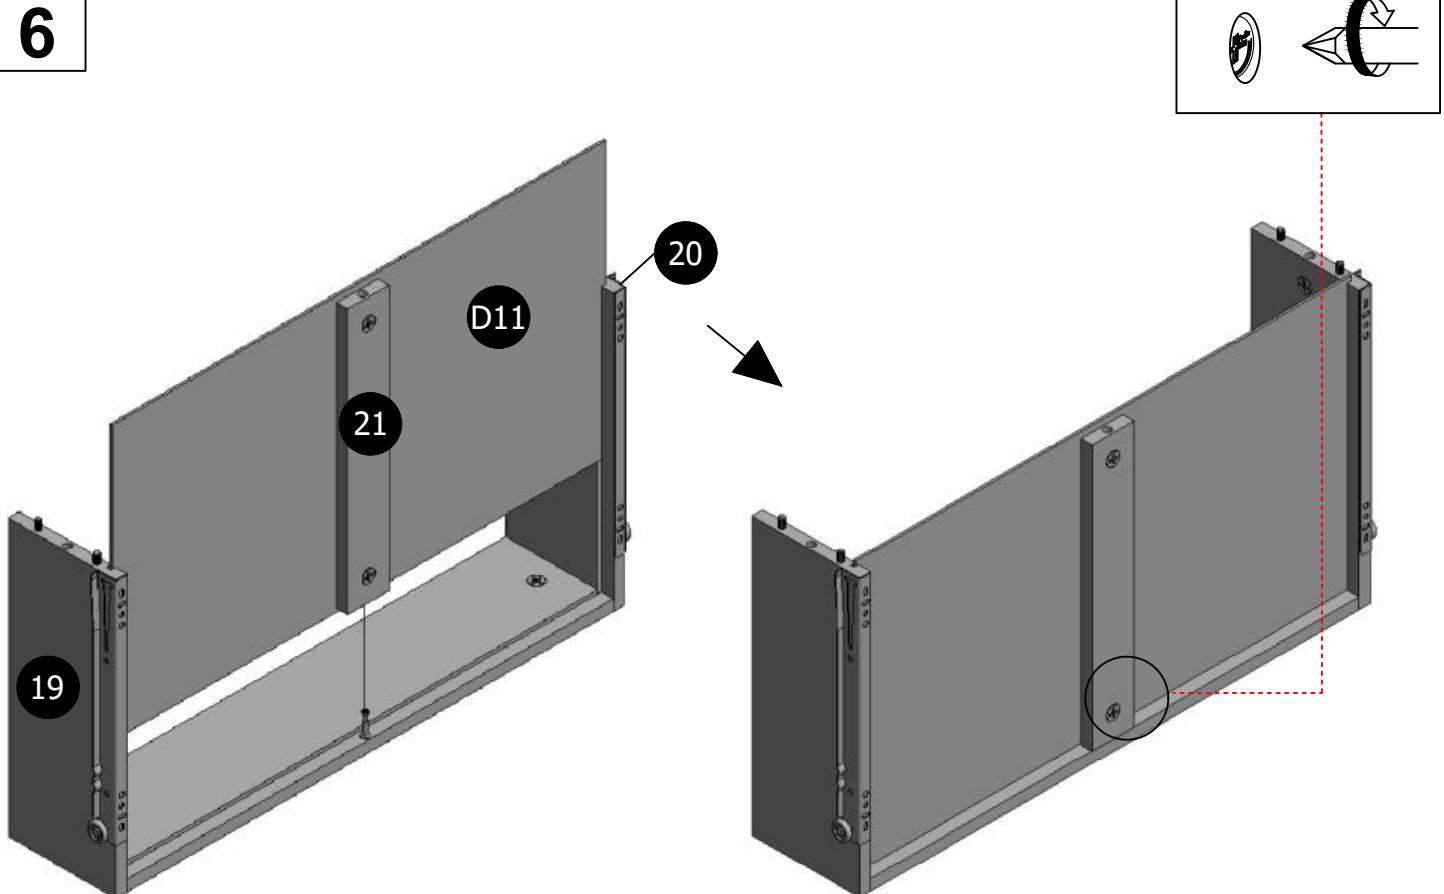


C90305 DR ASSEMBLY INSTRUCTION

STEP 24



x 3

INSIDE VIEW

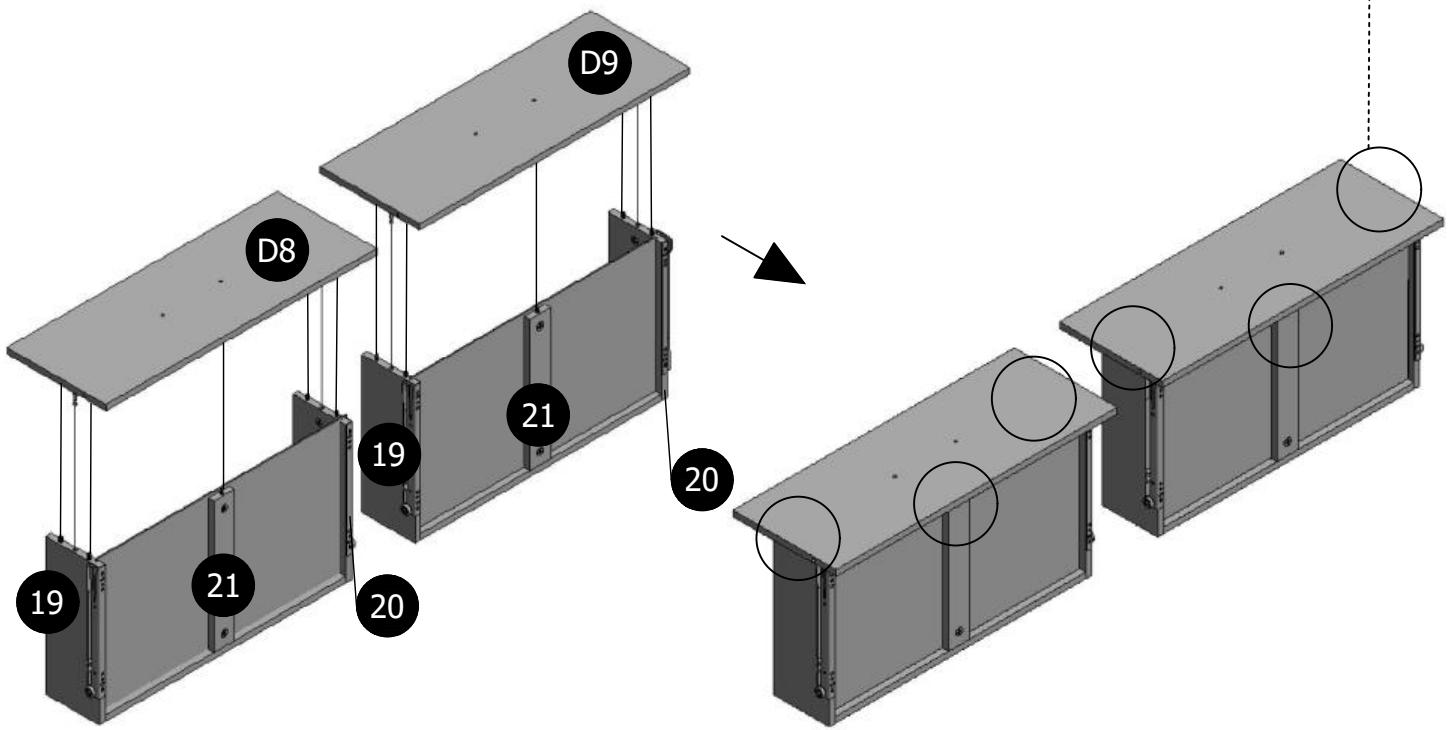


STEP 25

x 6

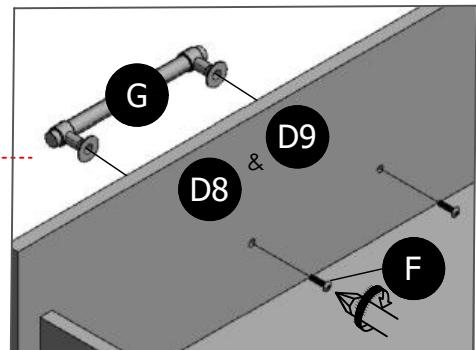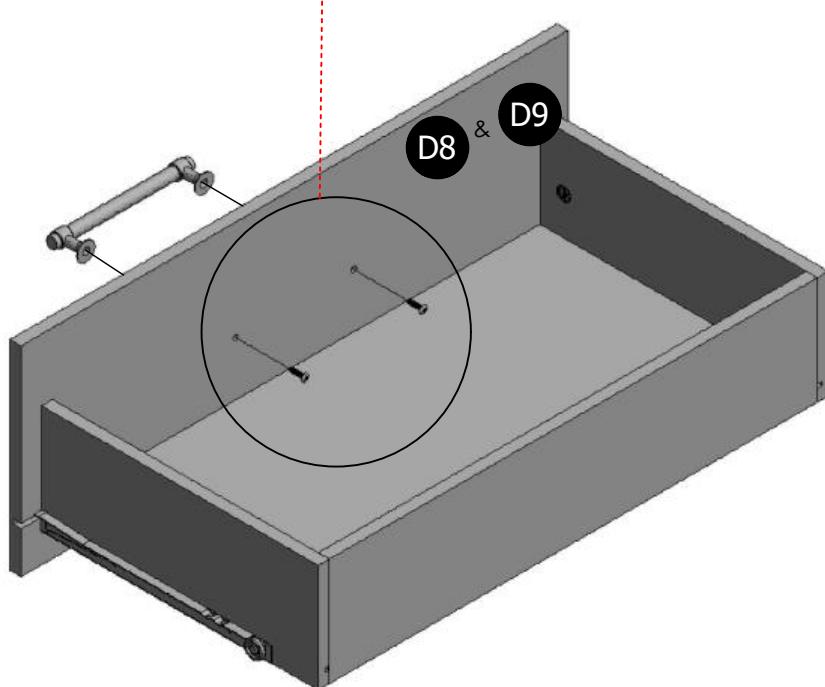


C90305 DR ASSEMBLY INSTRUCTION

STEP 26

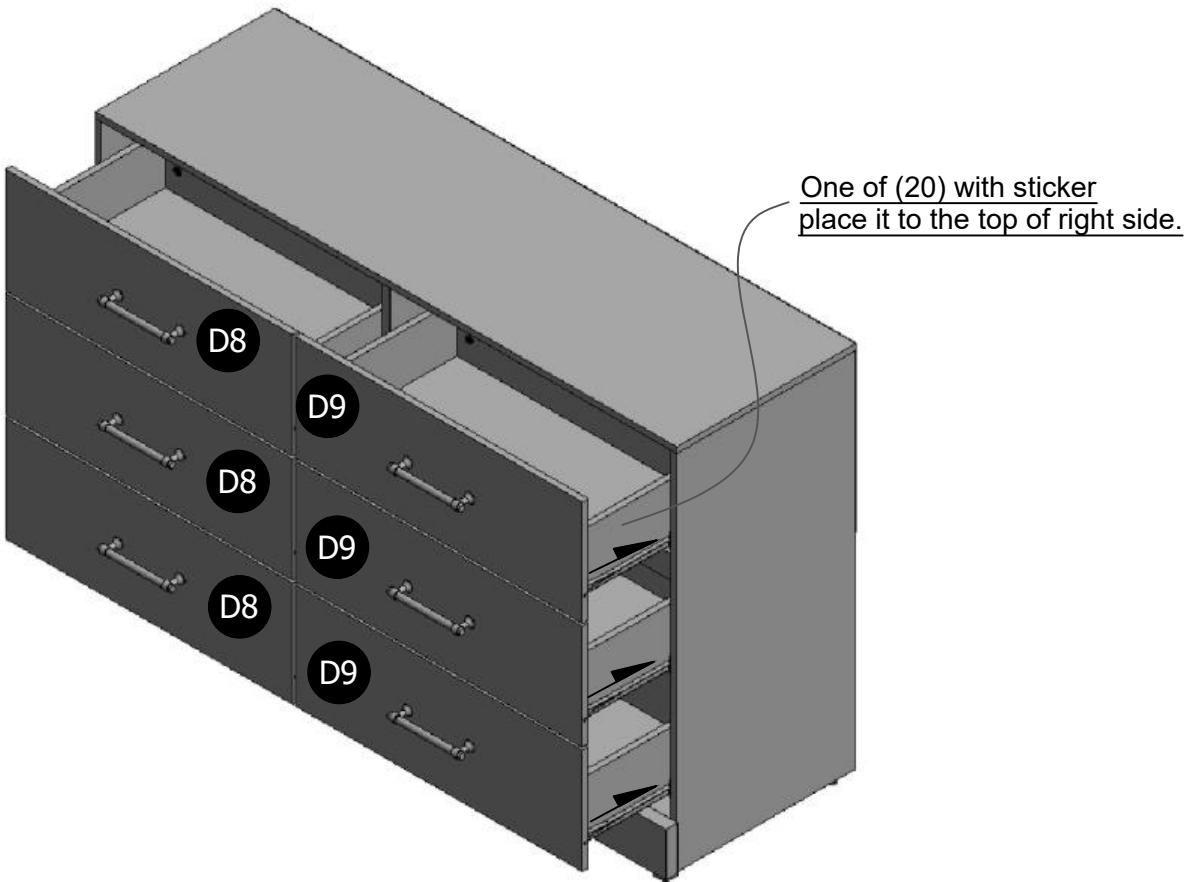

STEP 27

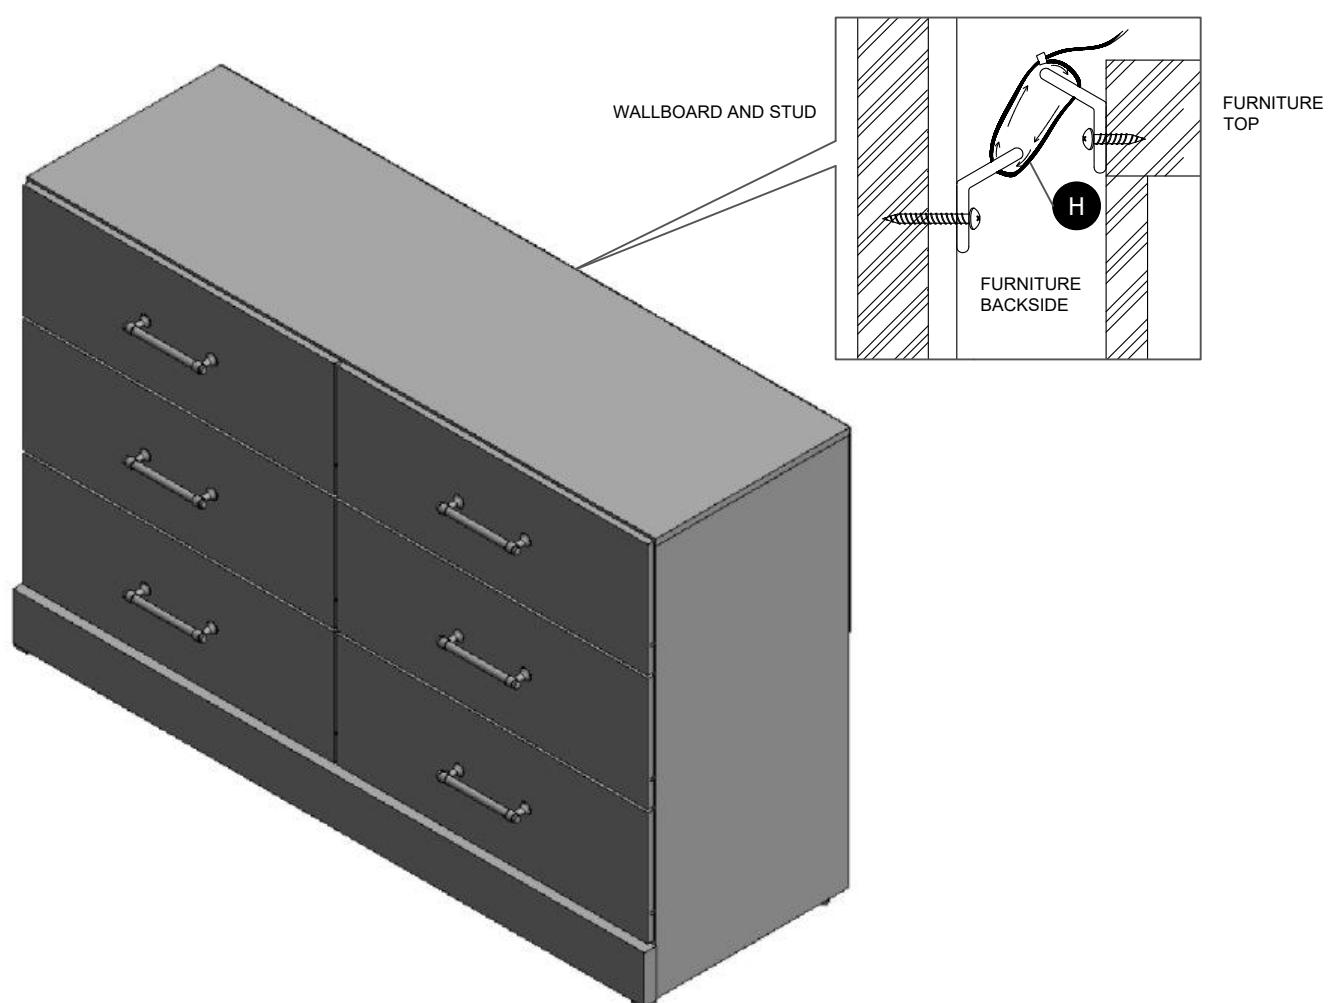

ASSEMBLY COMPLETED

C90305 DR ASSEMBLY INSTRUCTION

STEP 28