

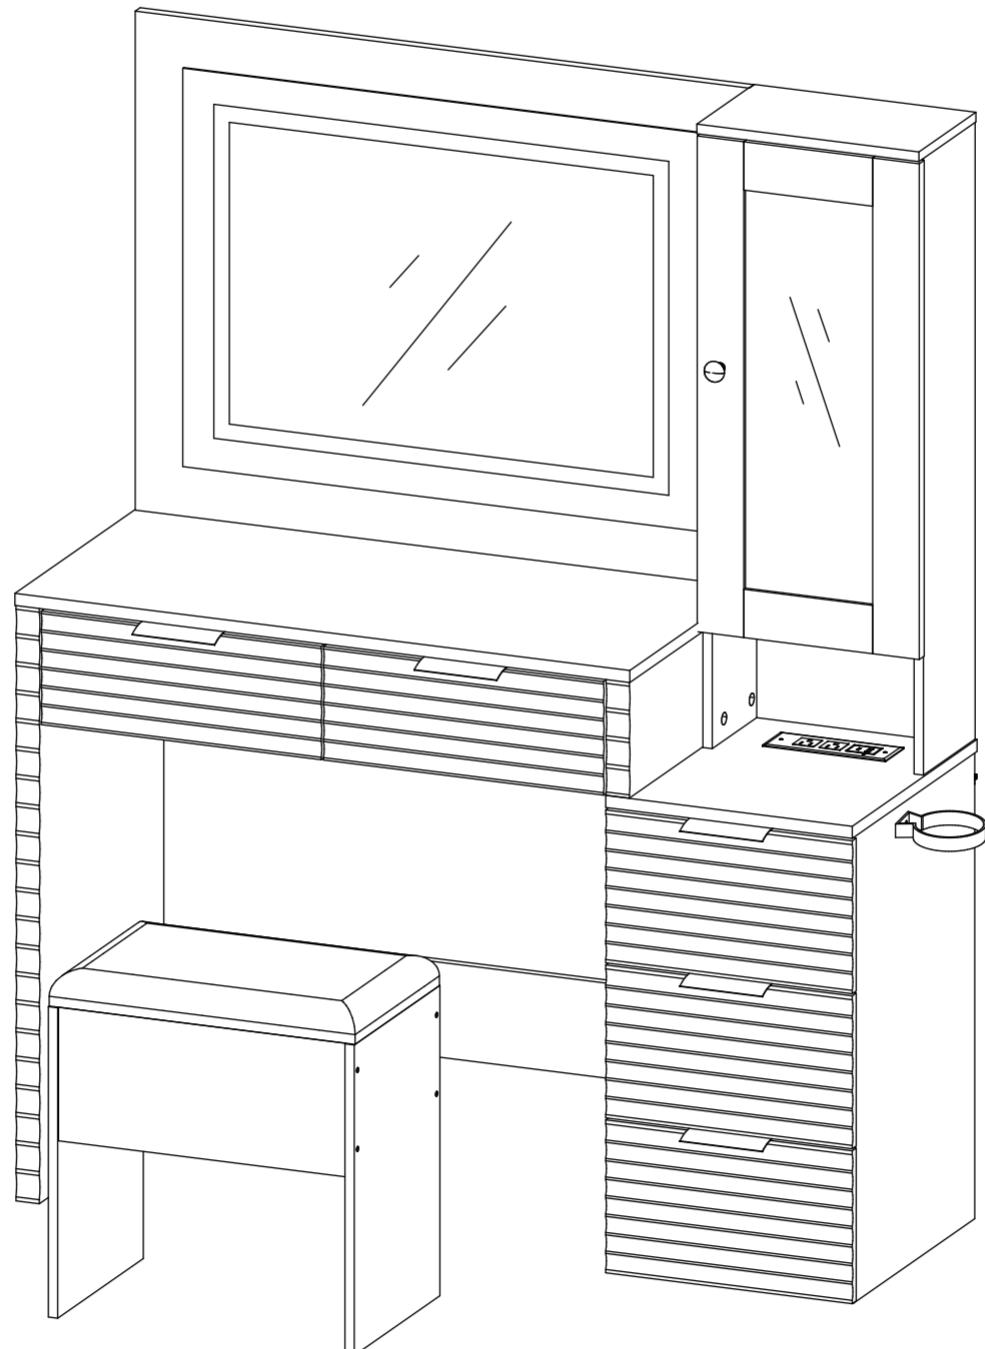
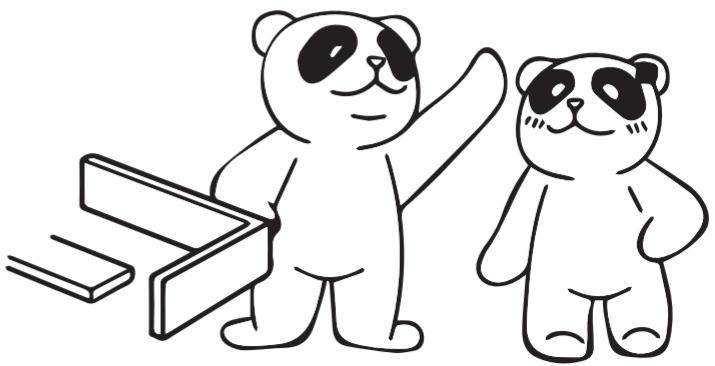
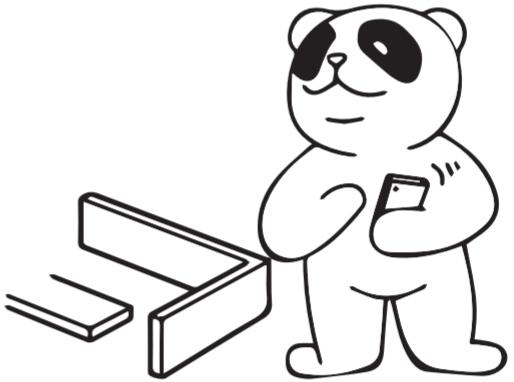





Assembly Instruction



SKU:N704P340248B

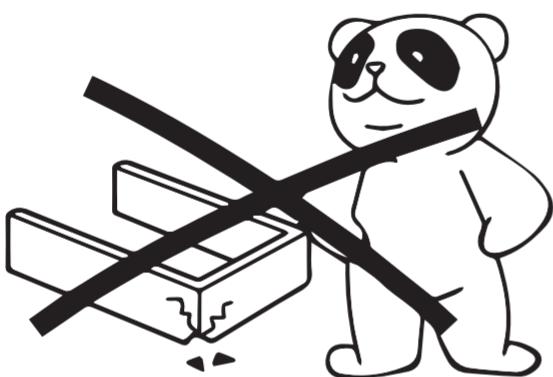

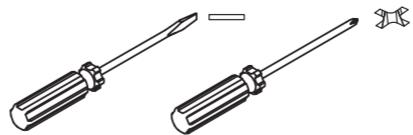

Installation Parts

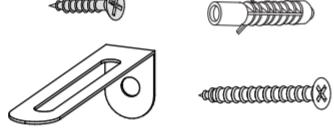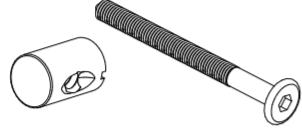Item no.	Reference Image	Qty.
A	 6x35	x82
C	CL+CR+DL+DR  12inches	x5
E	 M3.5x12	x80
G	 M3x14	x10
I		x1
K		x2
M		x1
O		x8
Q		x8
S		x1

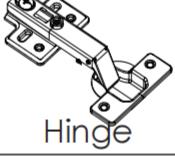Item no.	Reference Image	Qty.
B	 15x11	x82
D	 6x30	x13
F	 M5x40/#3	x25
H	 Hinge	x4
J		x5
L		x28
N		x1
P		x8
R		x1

Mounting Frame


Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
1		x1	2		x1
3		x1	4		x1
5		x1	6		x1
7		x1	8		x1
9		x1	10		x1
11		x1	12		x1
13		x2	14		x1
15		x1	16		x1

Mounting Frame

Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
17		x1	18		x1
19		x1	20		x1
21		x1	22		x1
23		x1	24		x1
25		x2	26		x2
27		x2	28		x2
29		x3	30		x3
31		x3	32		x3

Mounting Frame

Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
33		x3	34		x1
35		x2	36		x1
37		x1	38		x1

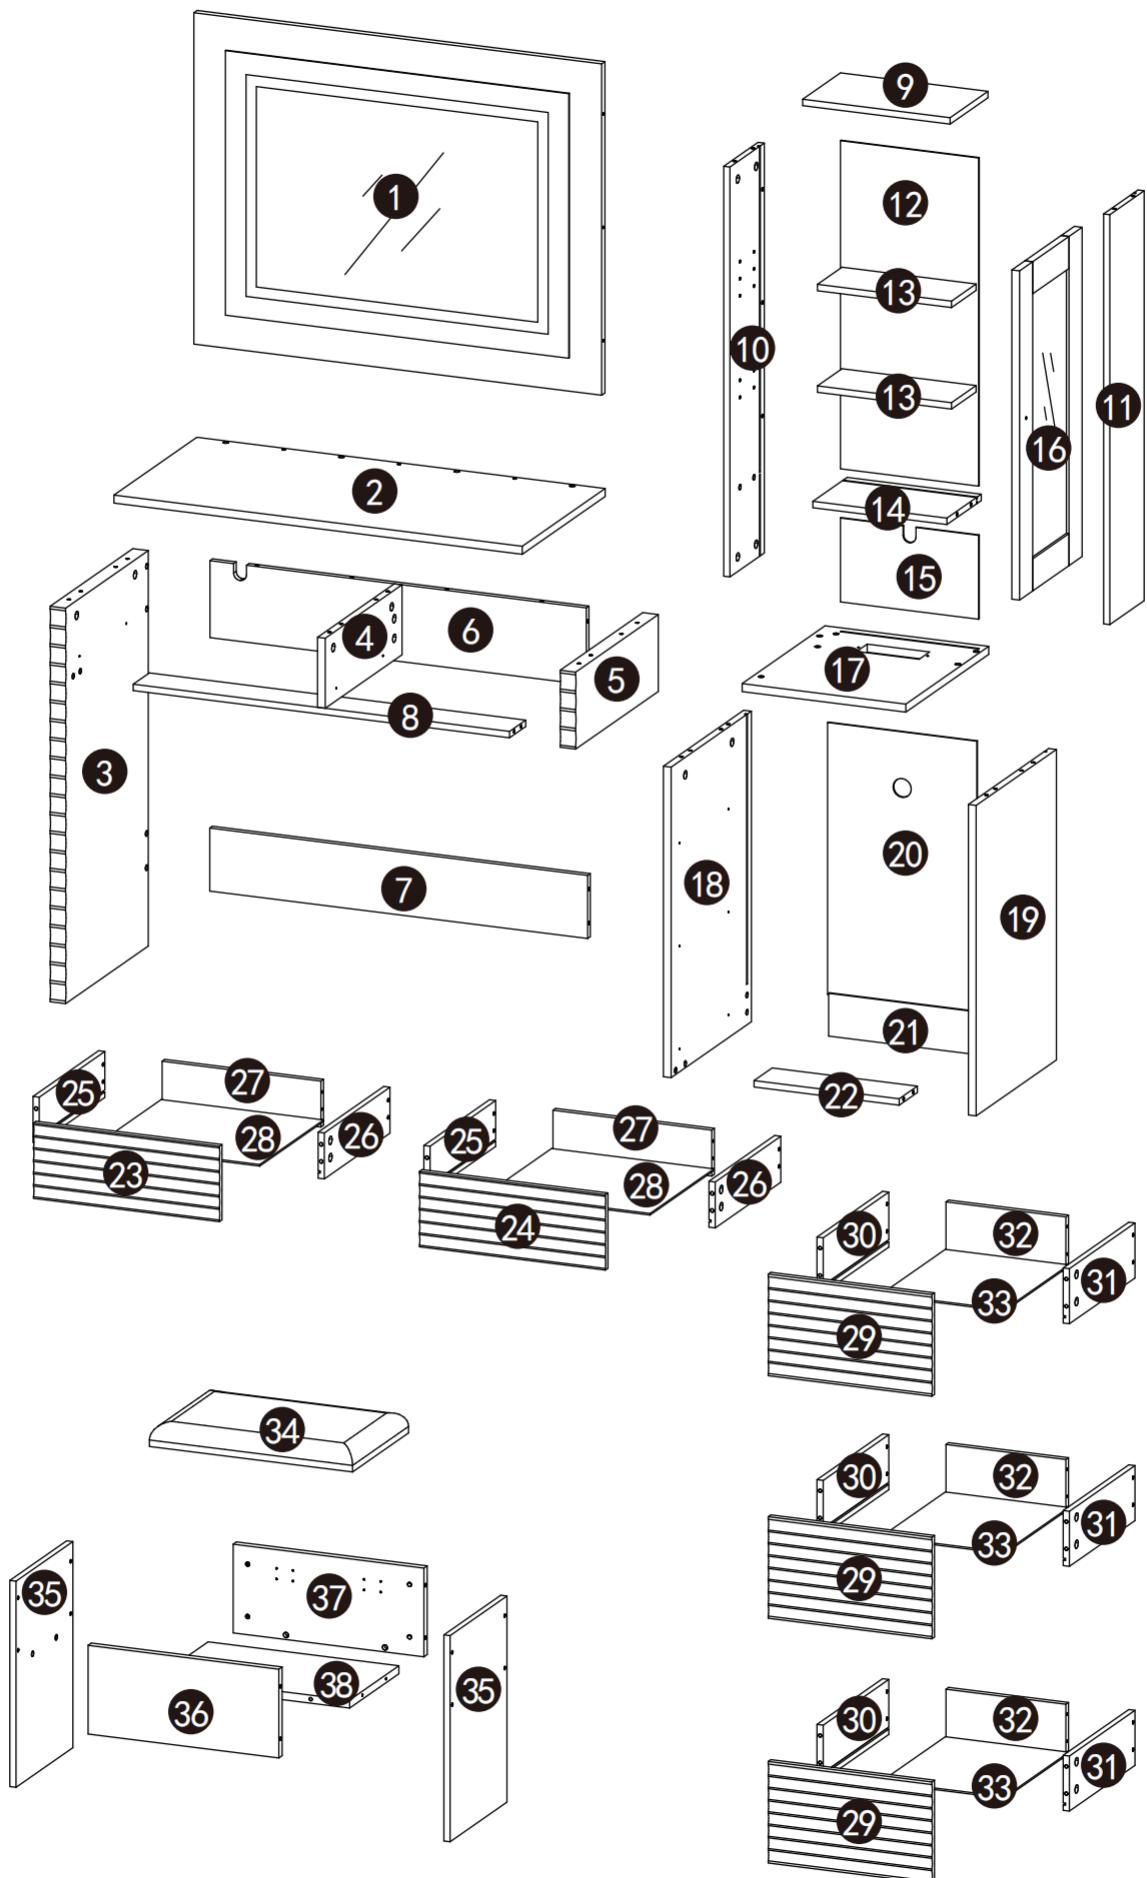





1

YOU WILL NEED

CL x2

CR x1

E x6

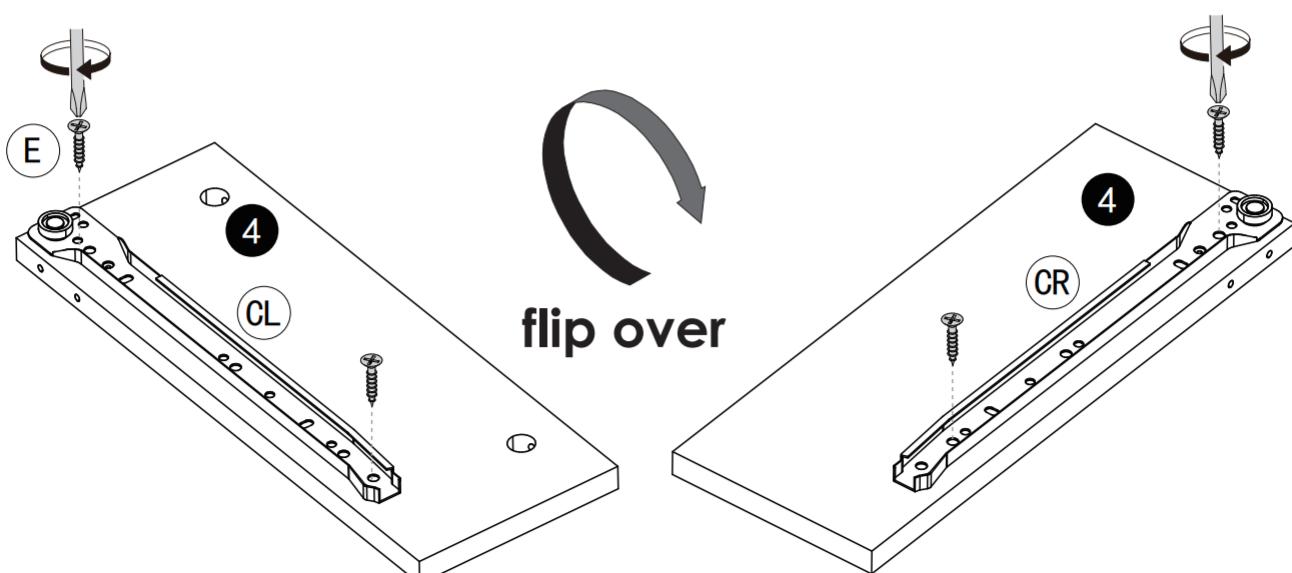
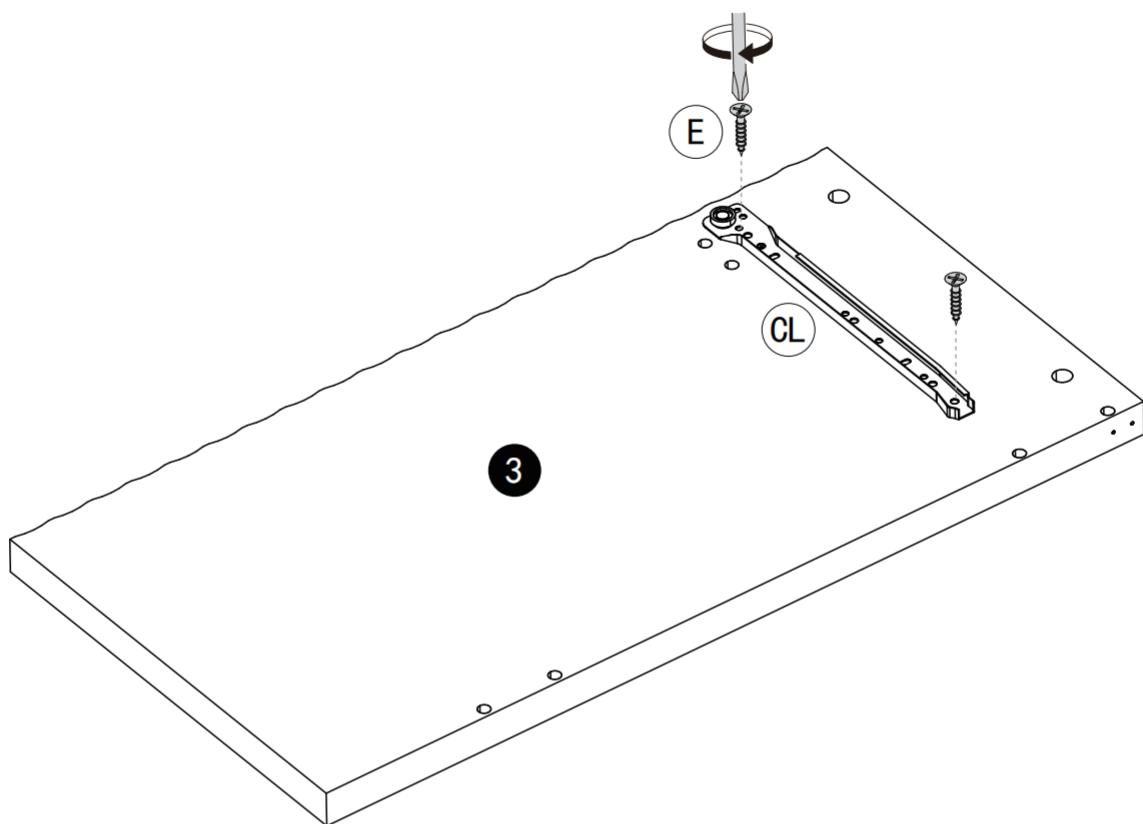
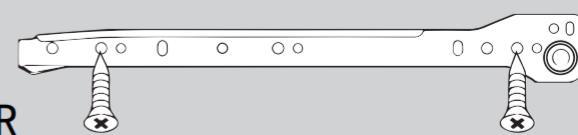
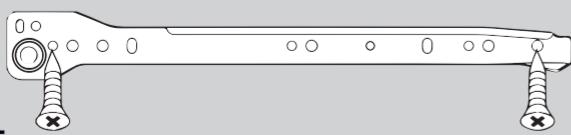


YOU WILL NEED

CL x3





CR x3





E x12

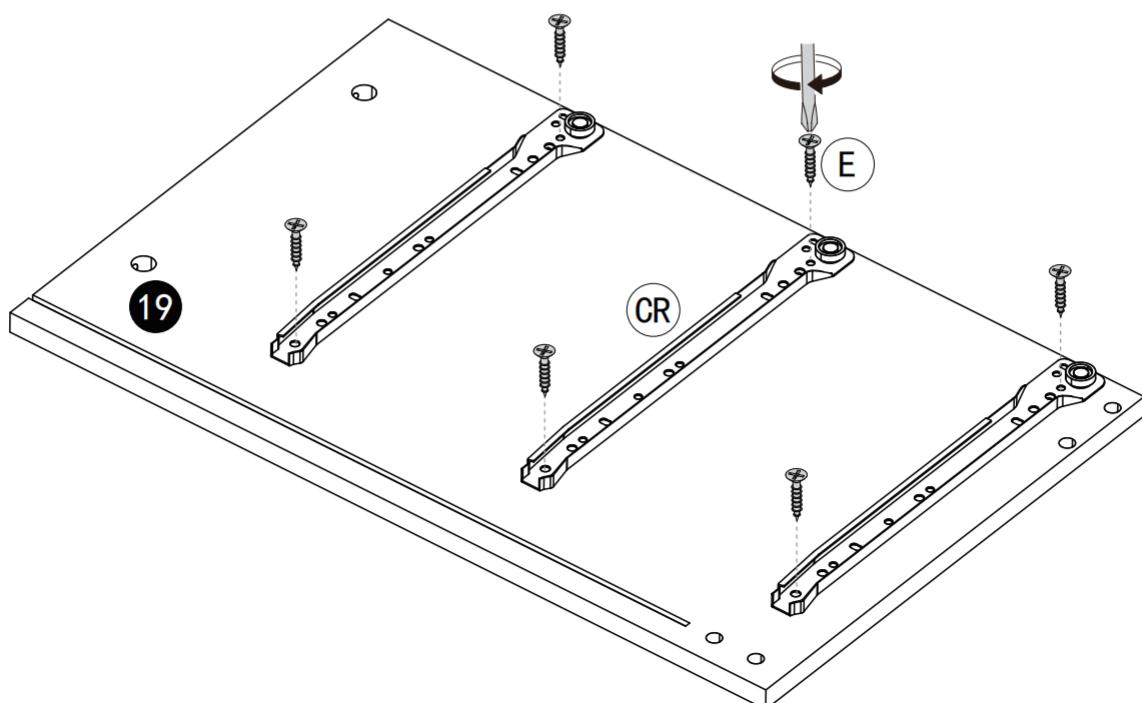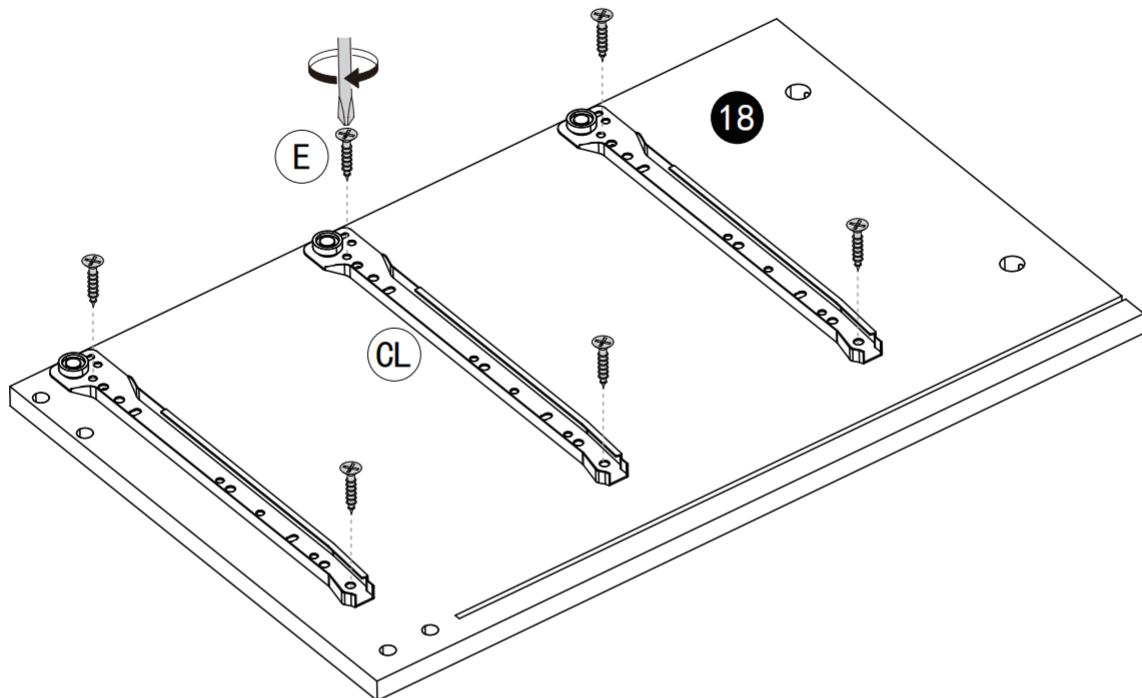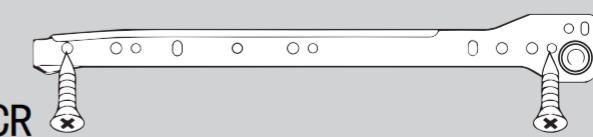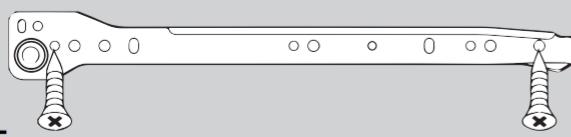

3**YOU WILL NEED****A x8** **B x8**

Installation method of three in one rod and buckle

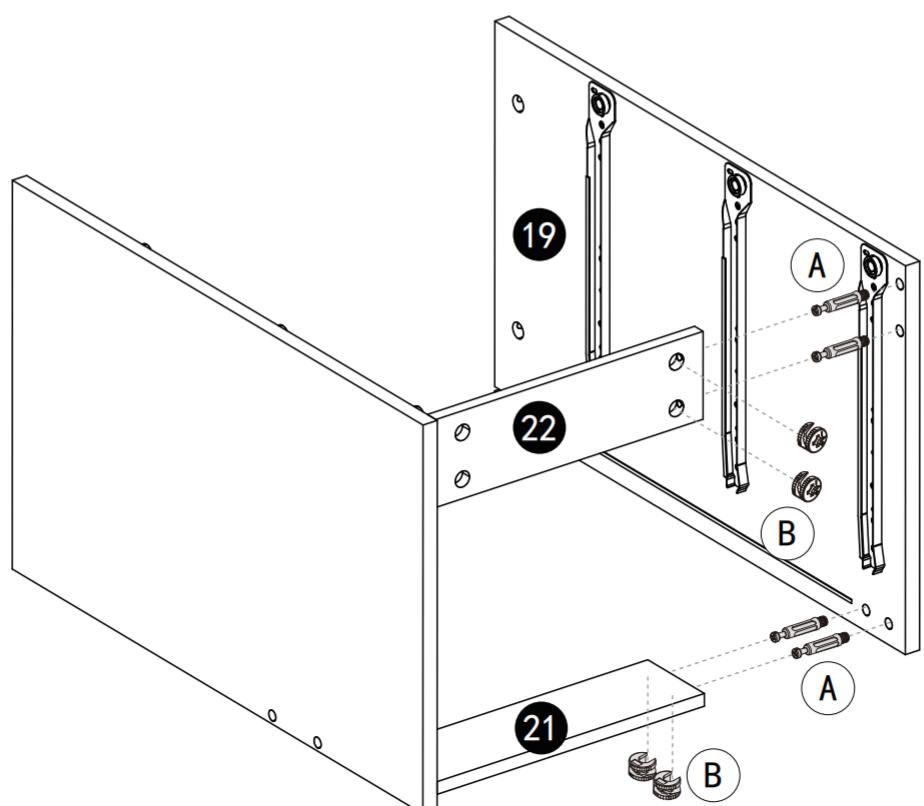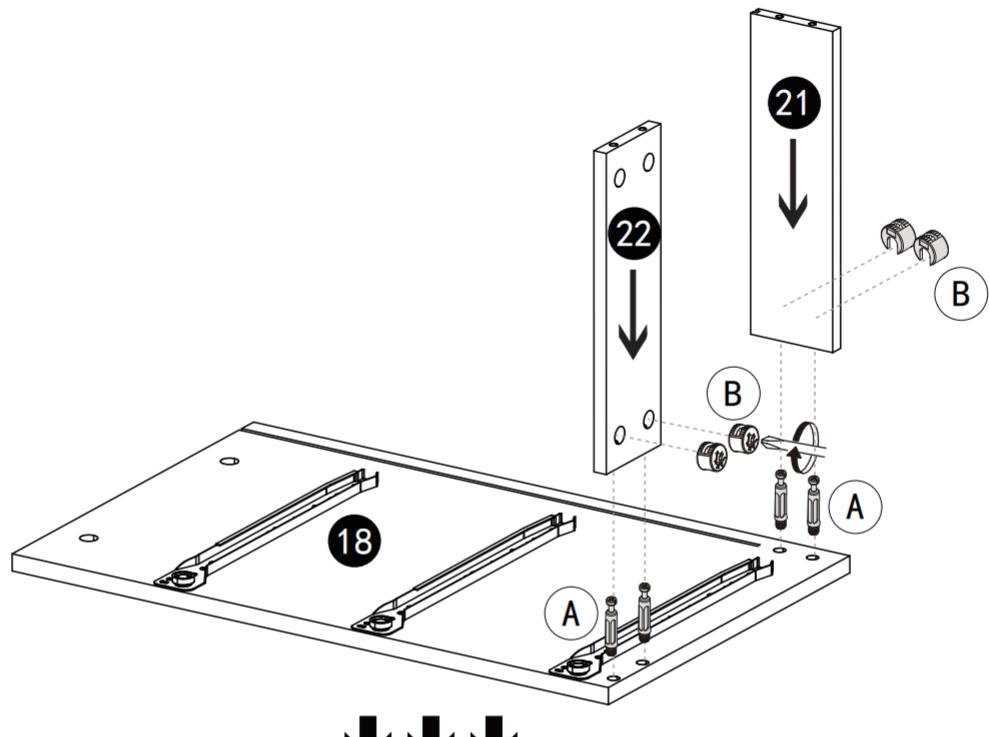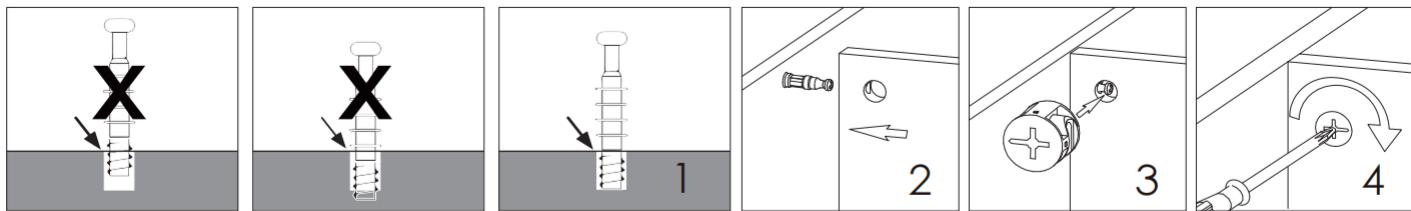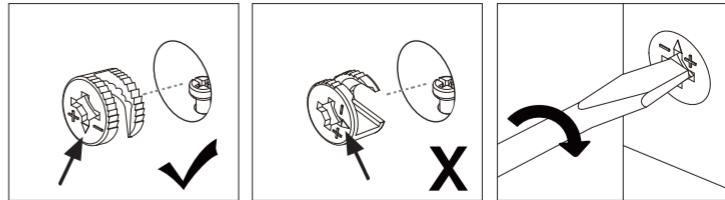


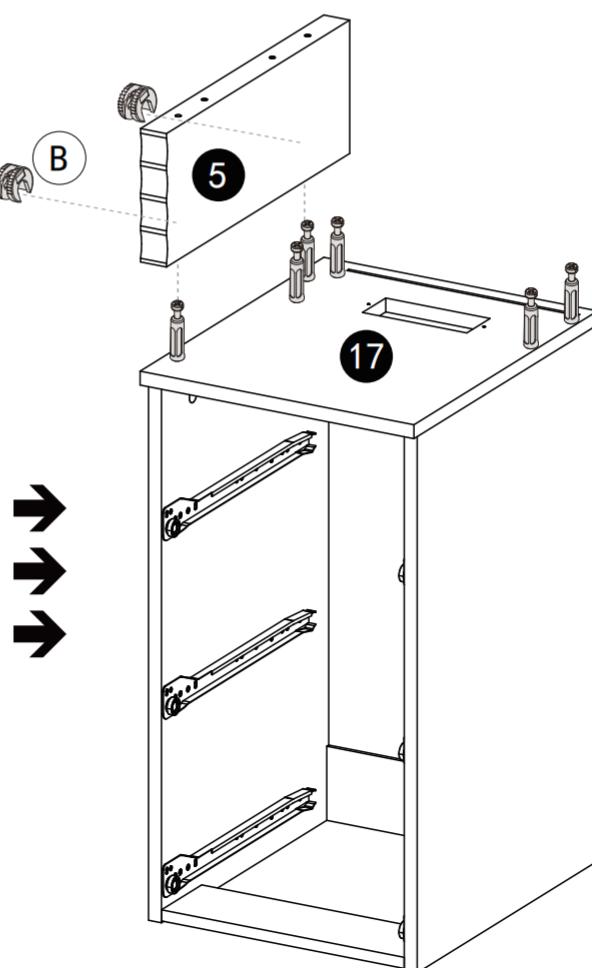
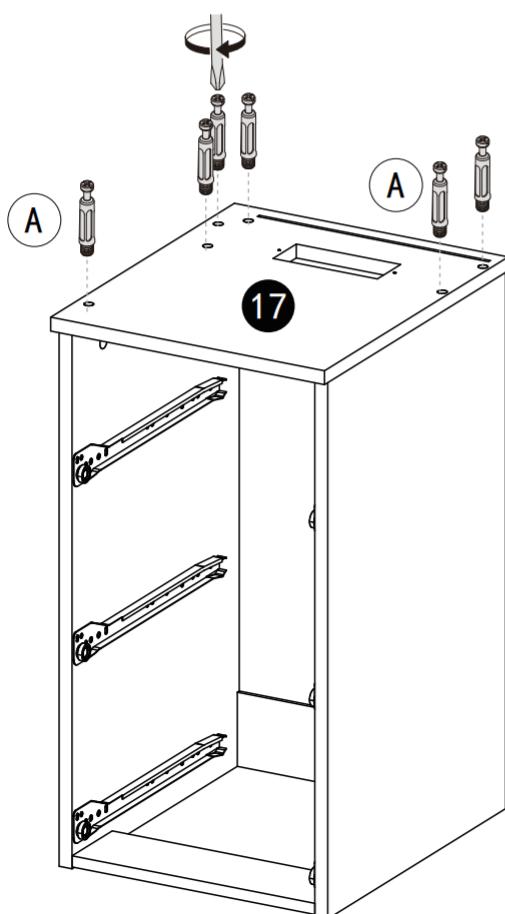
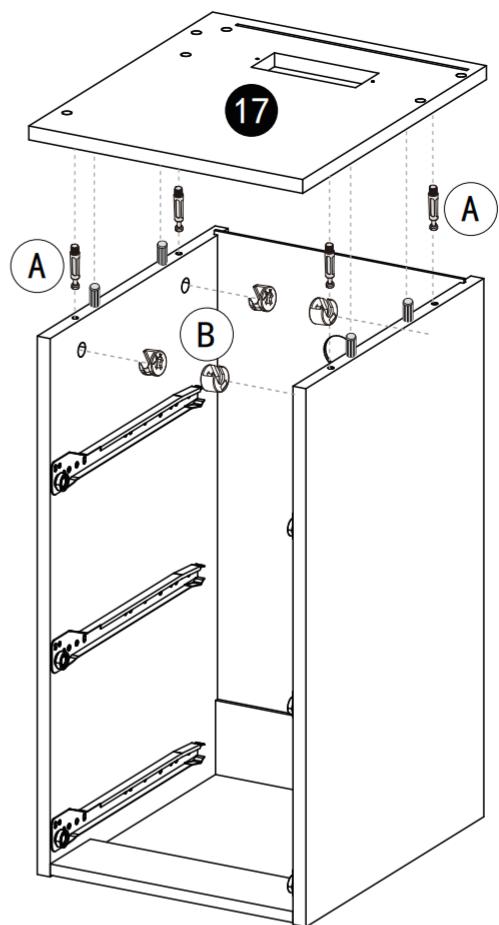
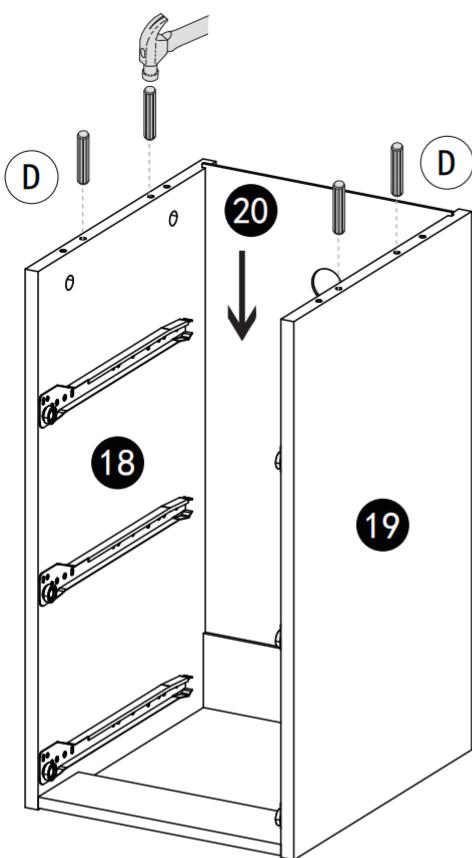




YOU WILL NEED

CR x1

E x4

M x1

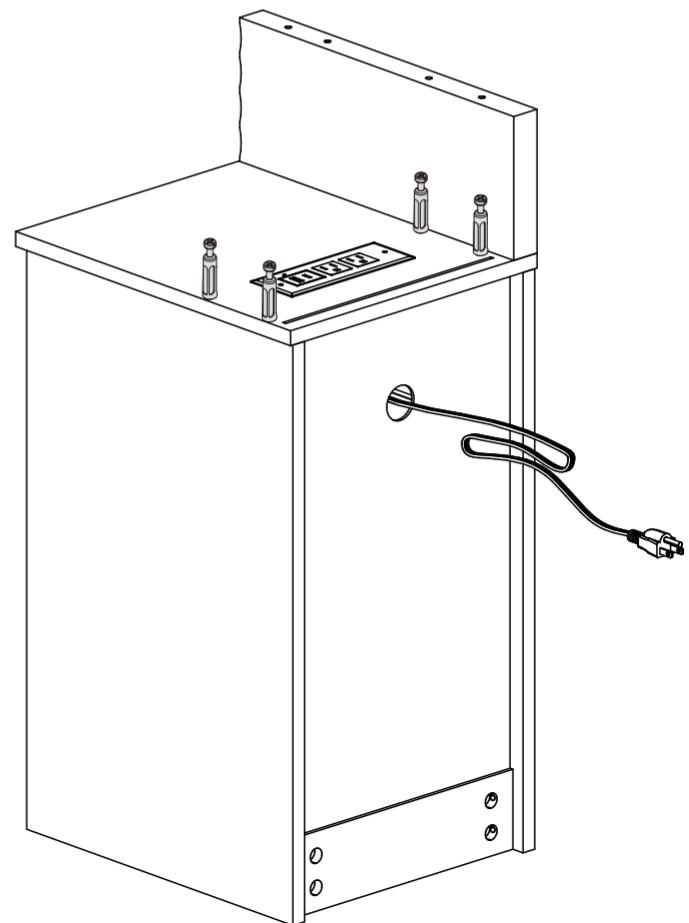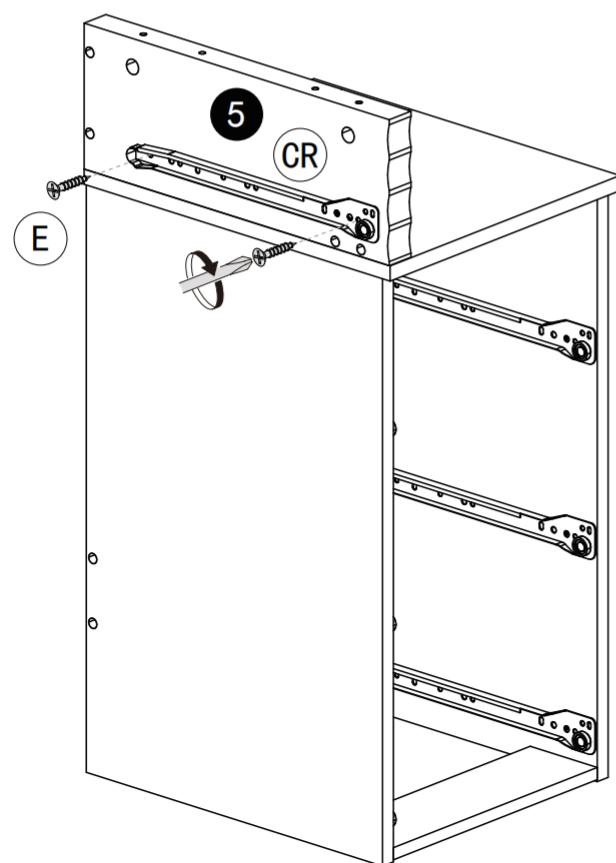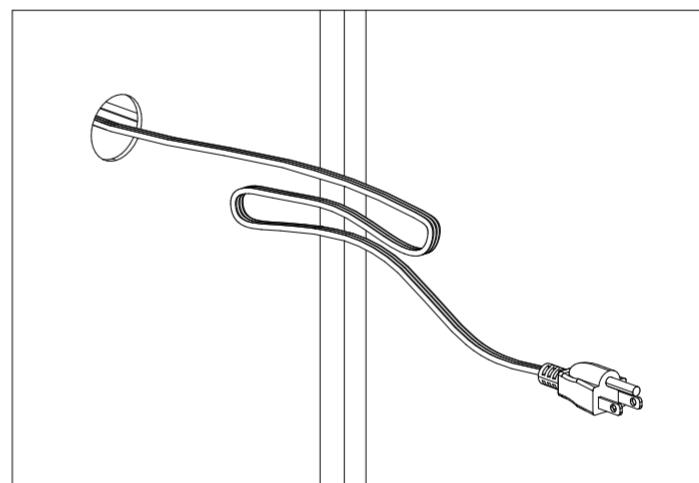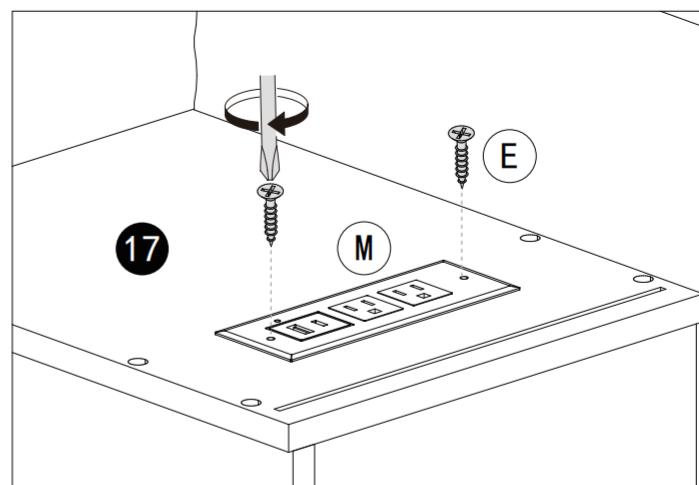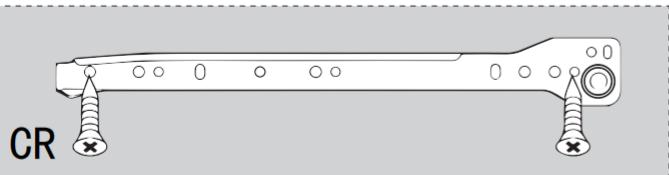

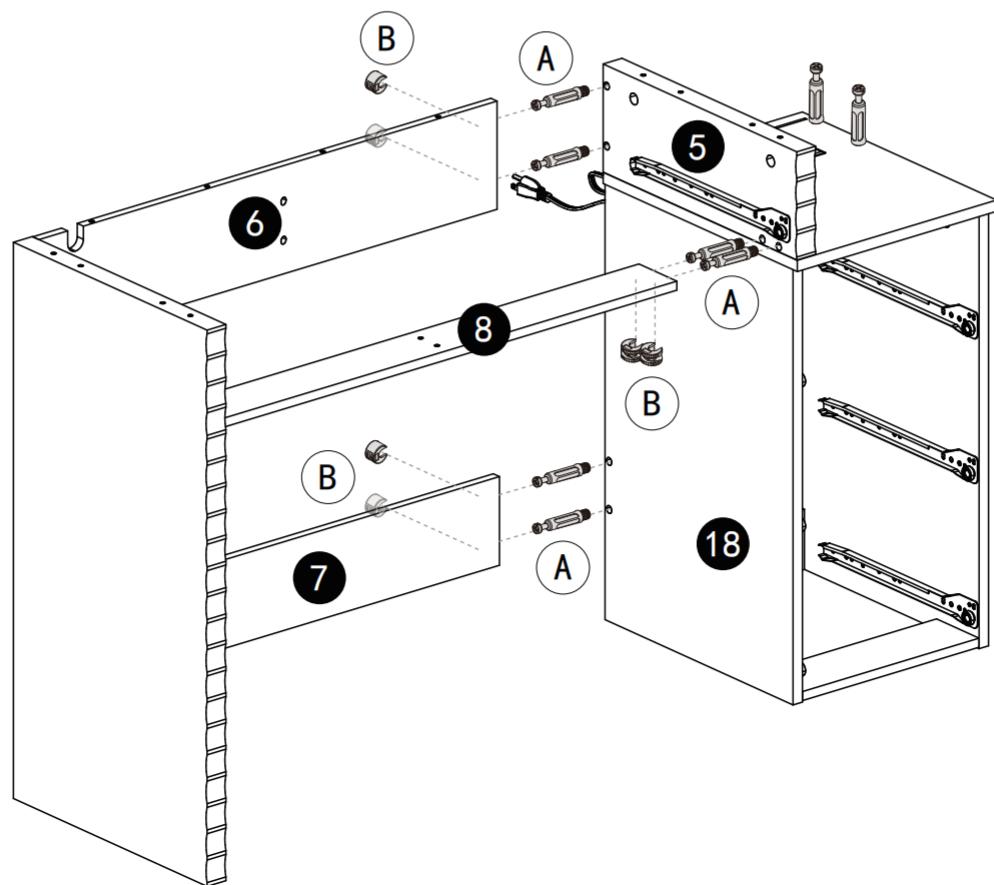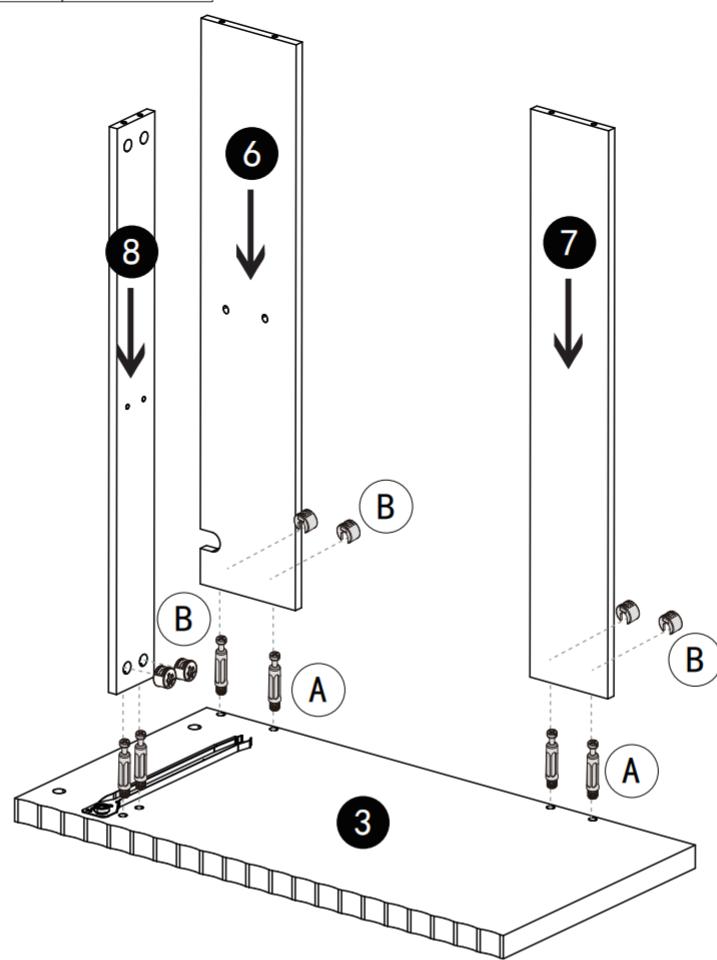

7



YOU WILL NEED

A x2

B x2


D x6

F x2

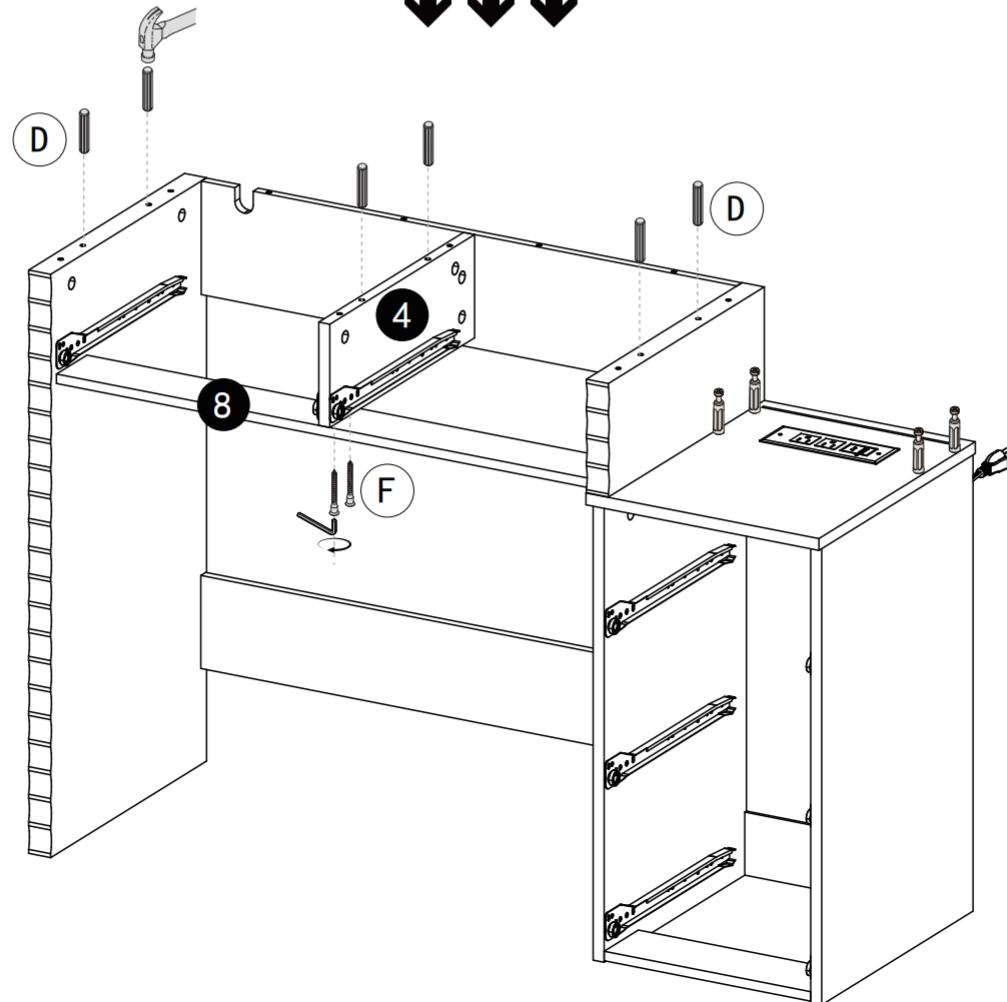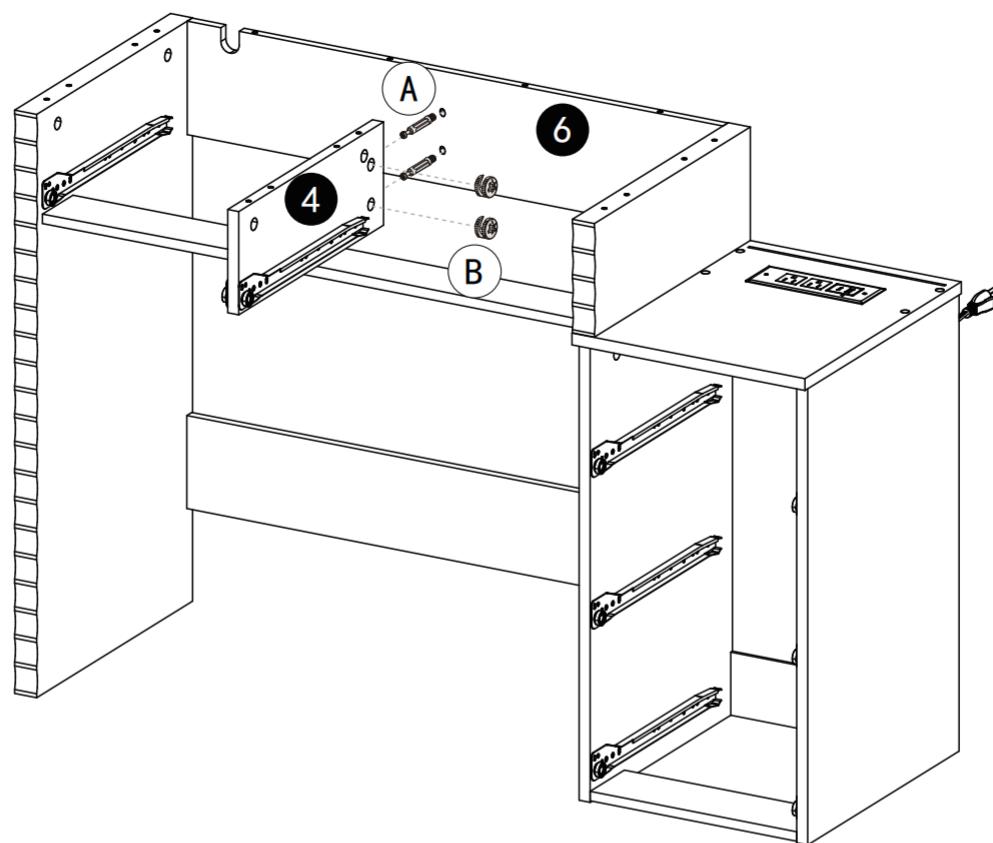

YOU WILL NEED

A x10	B x10	K x1
-------	-------	------


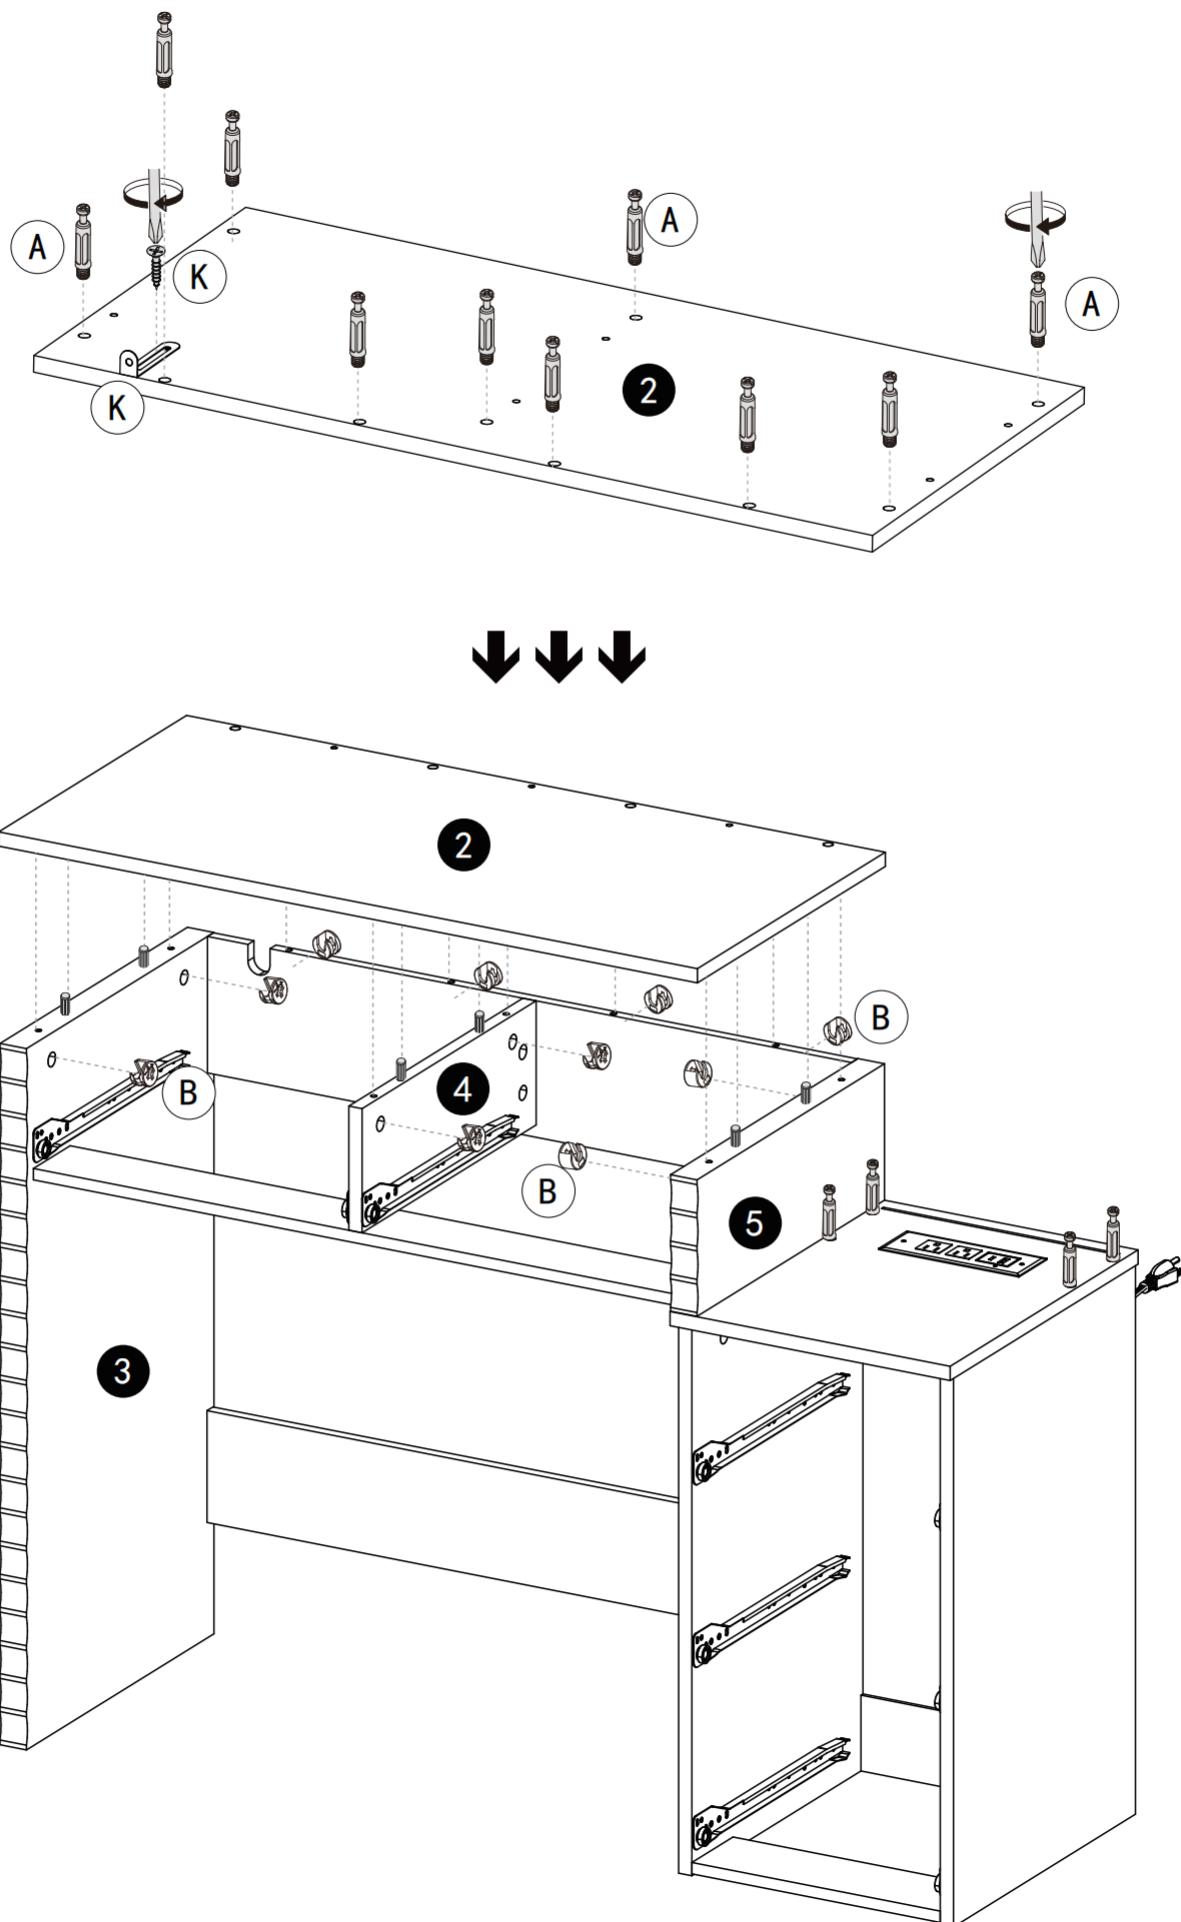




YOU WILL NEED

A x4

B x4

K x1

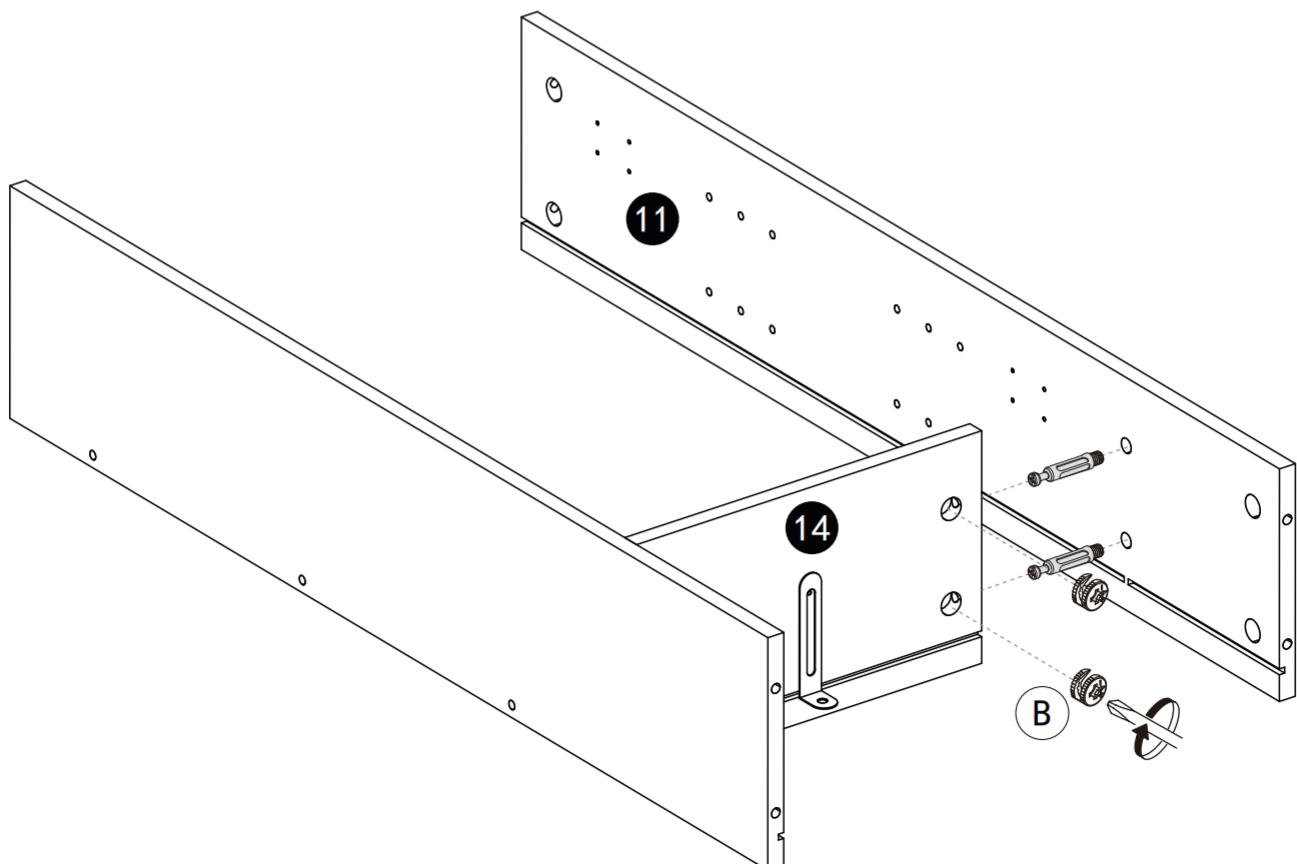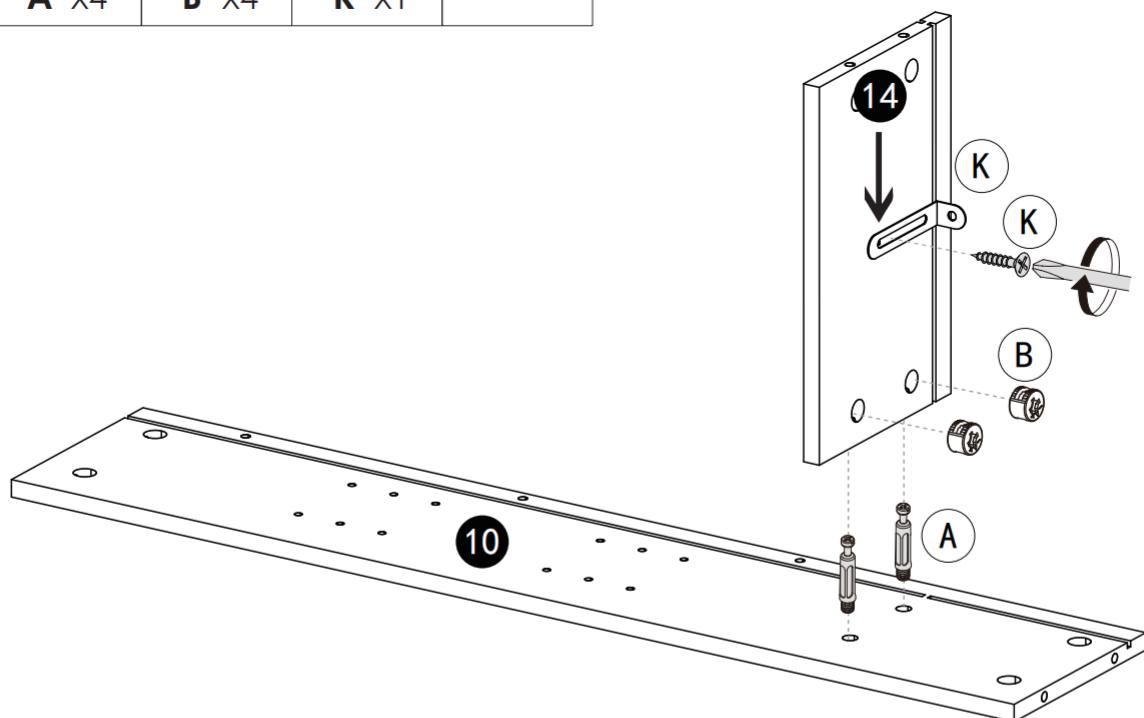

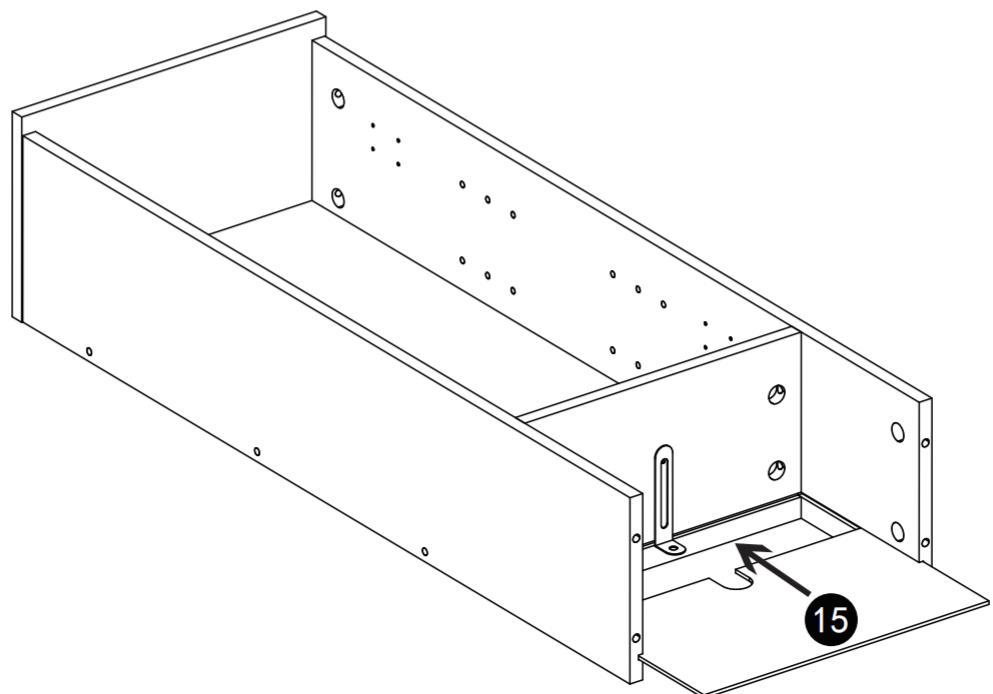
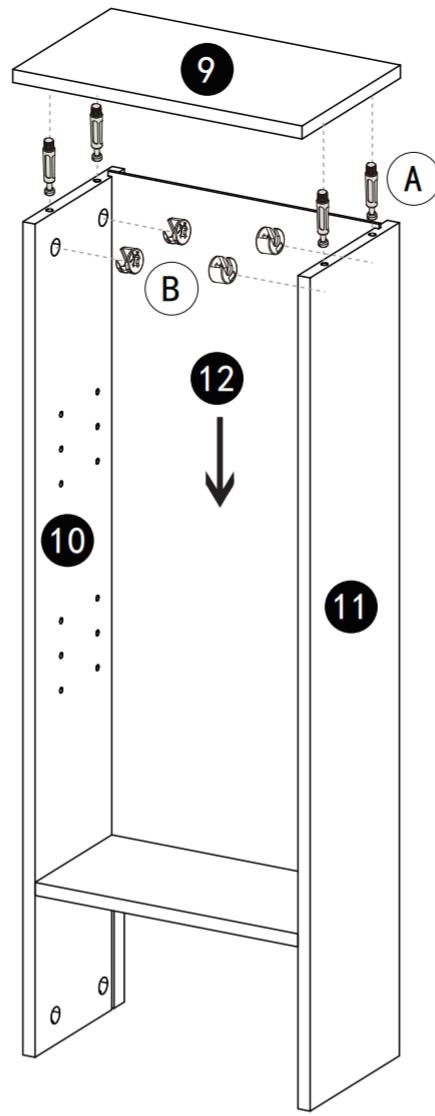


YOU WILL NEED

A x4






B x8






D x3

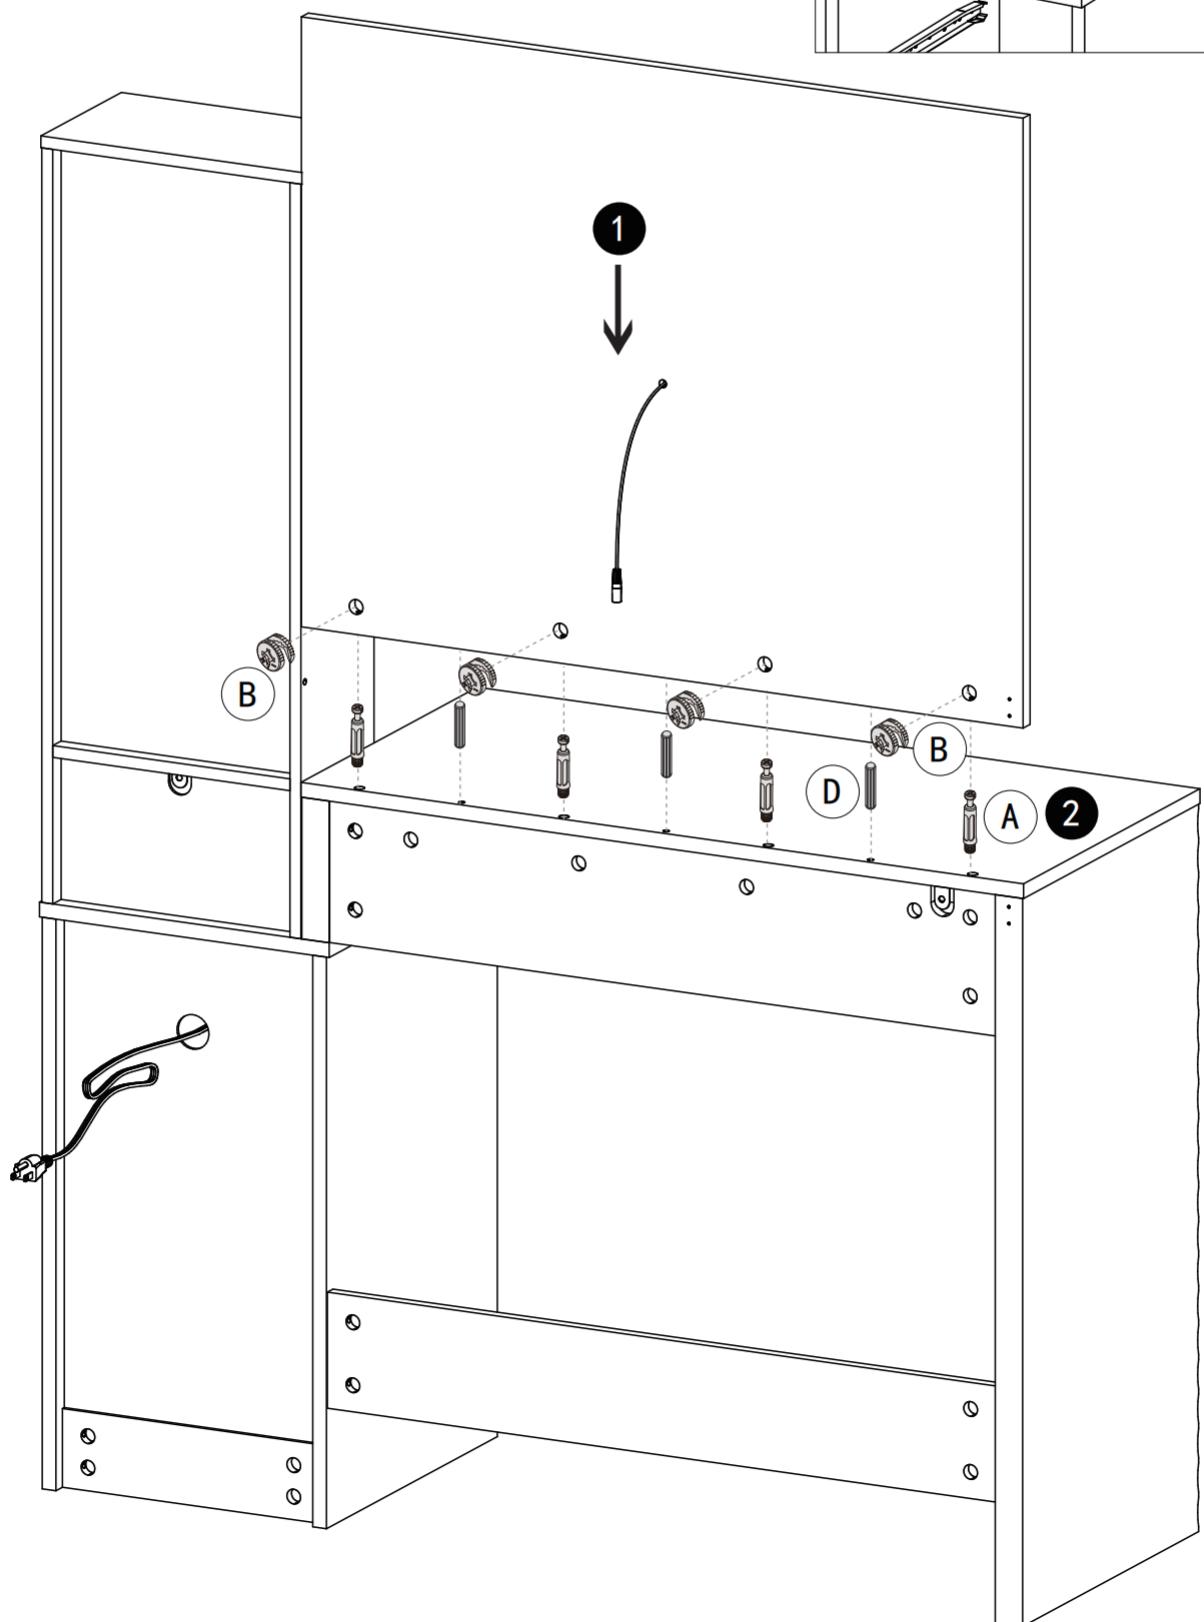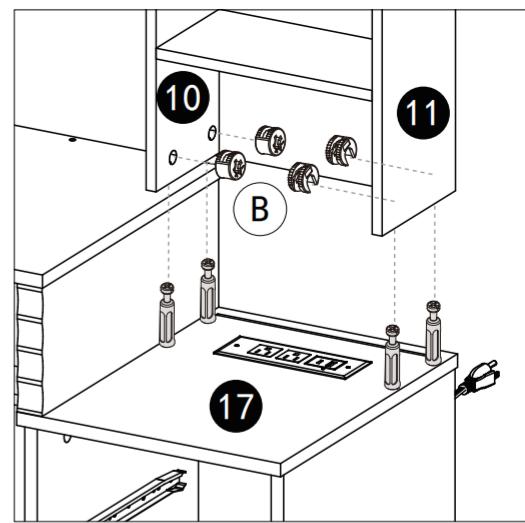


YOU WILL NEED

Q x8	G x8	E x4	N x1	F x3	S x1
-------------	-------------	-------------	-------------	-------------	-------------

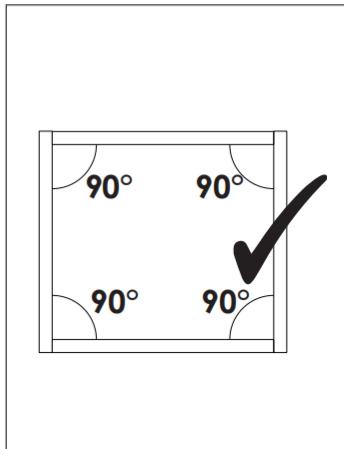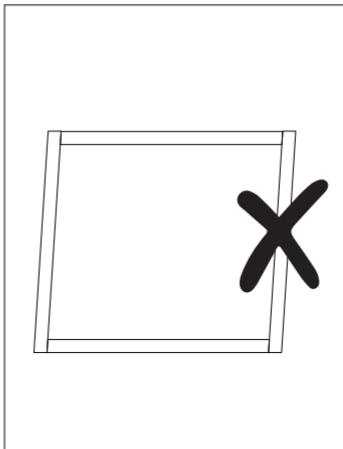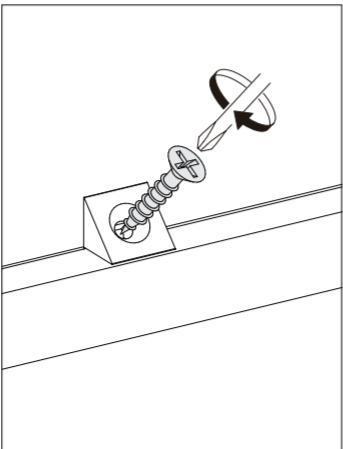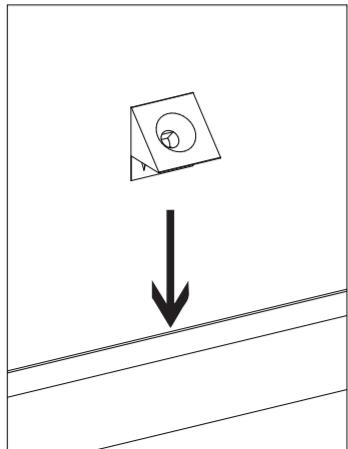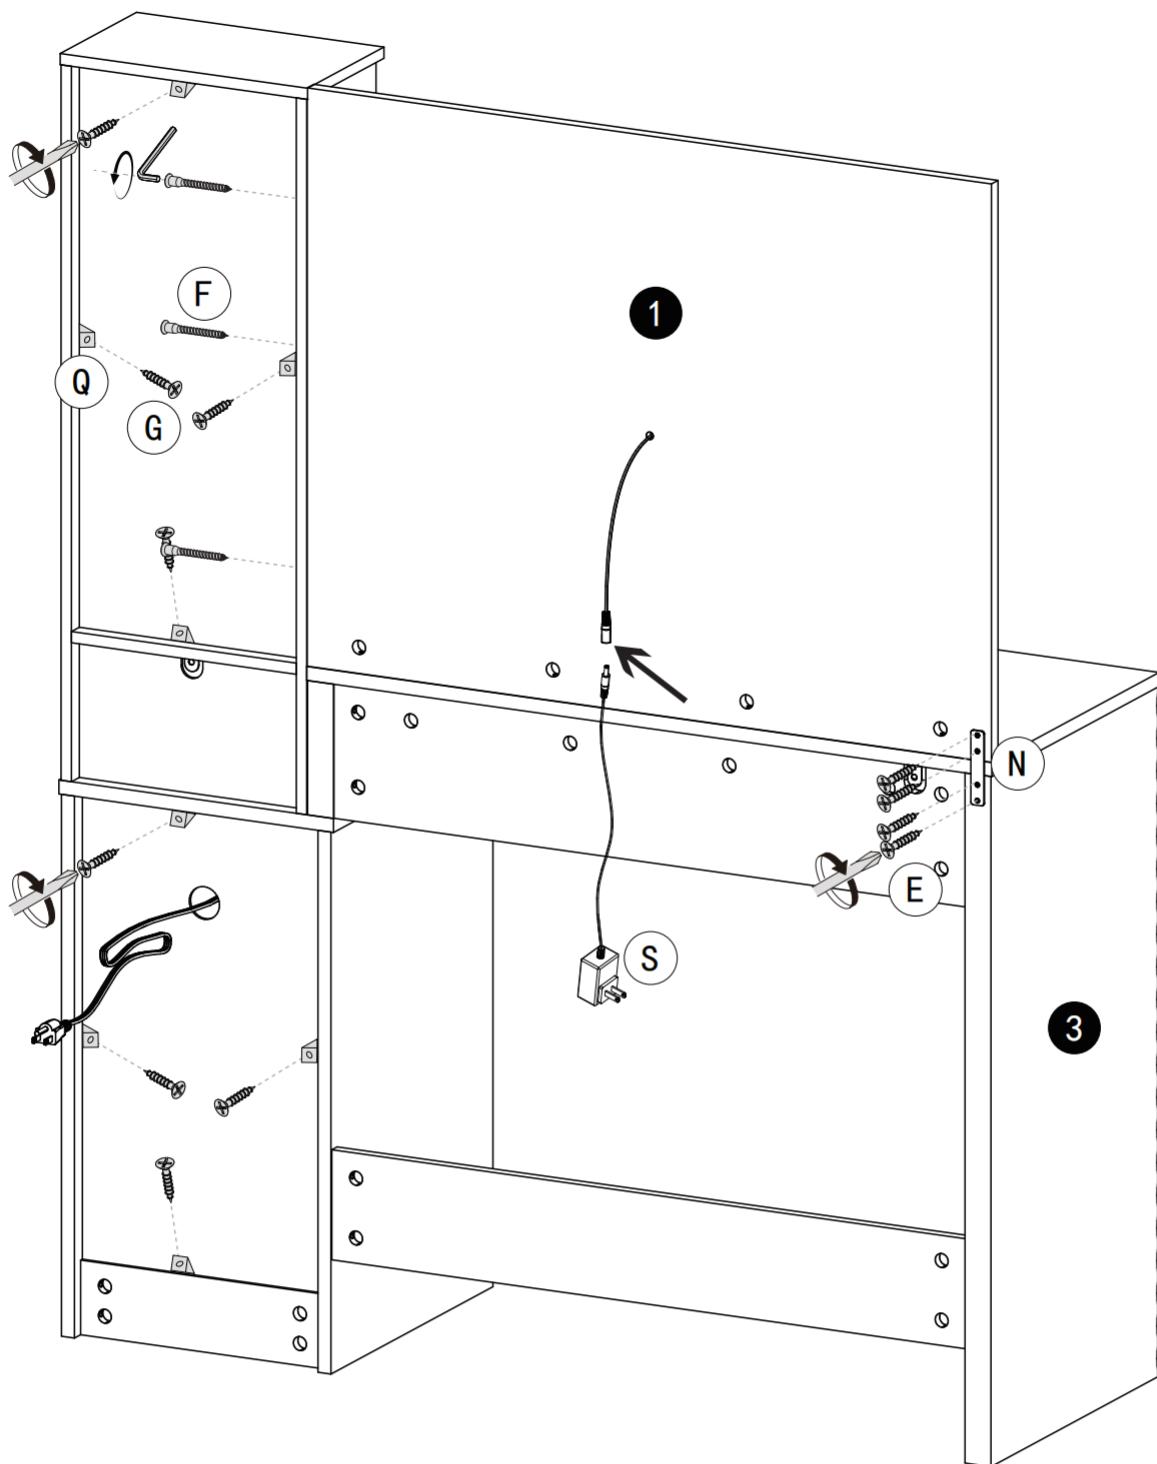


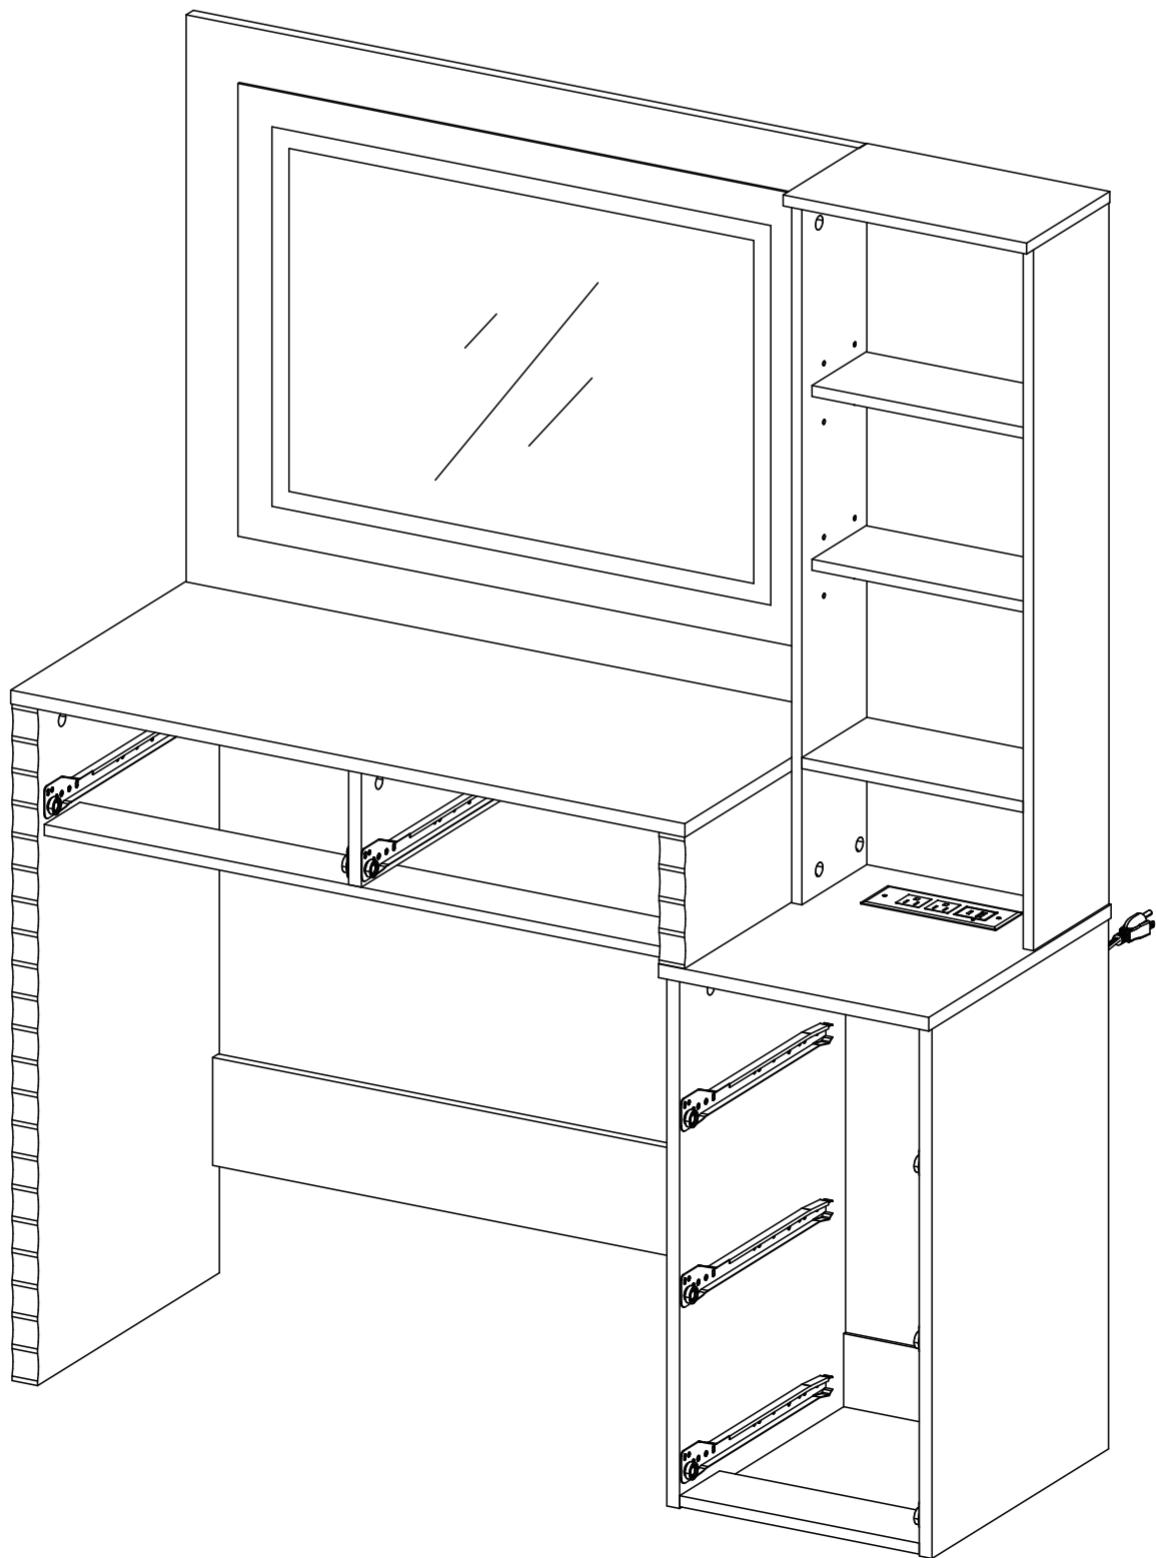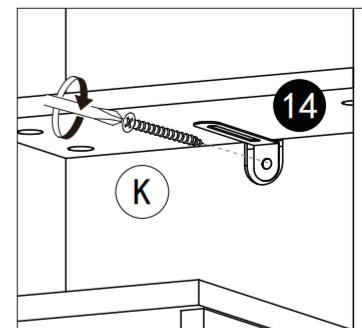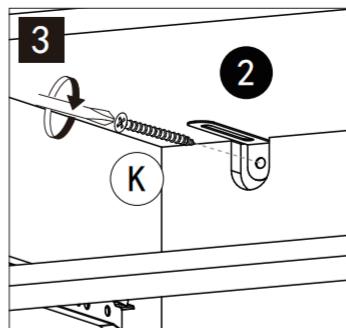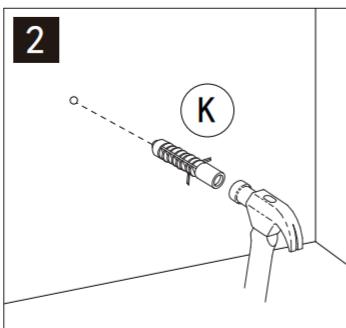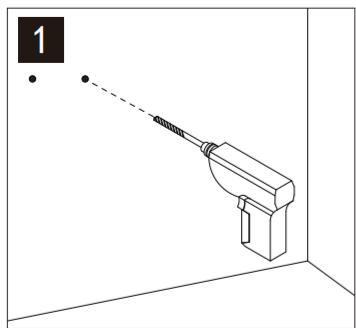


1

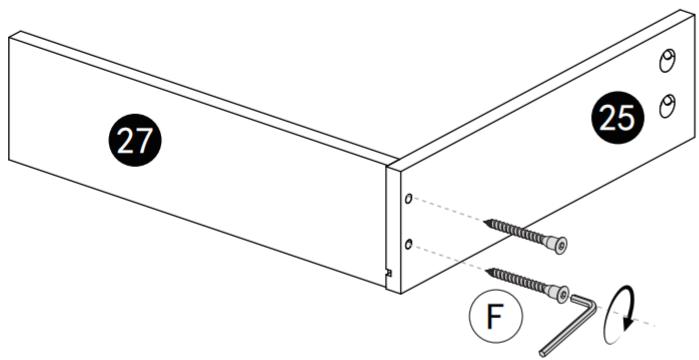

2

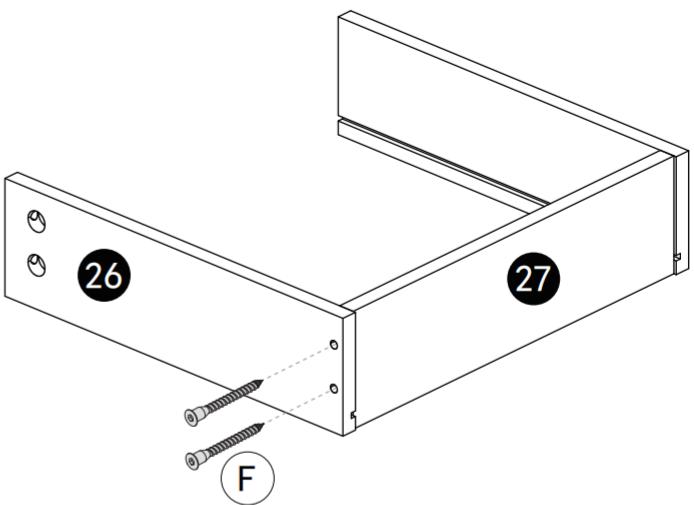


3

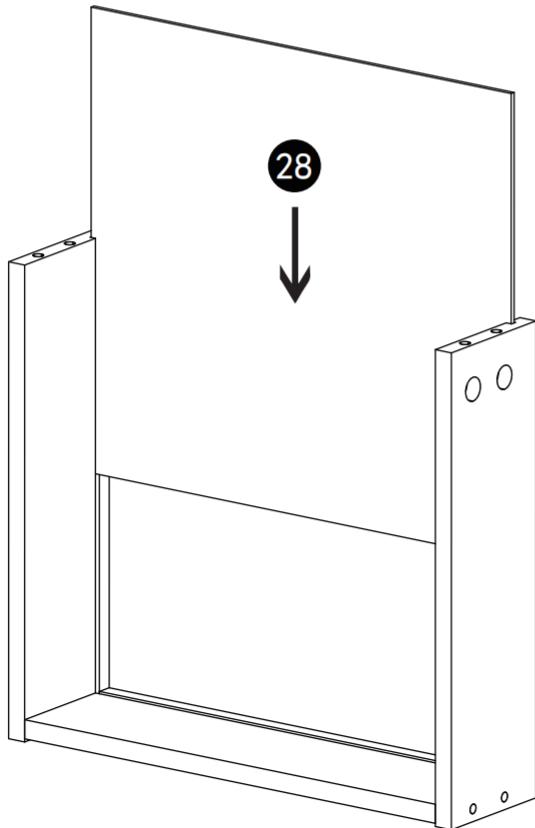

x2

4

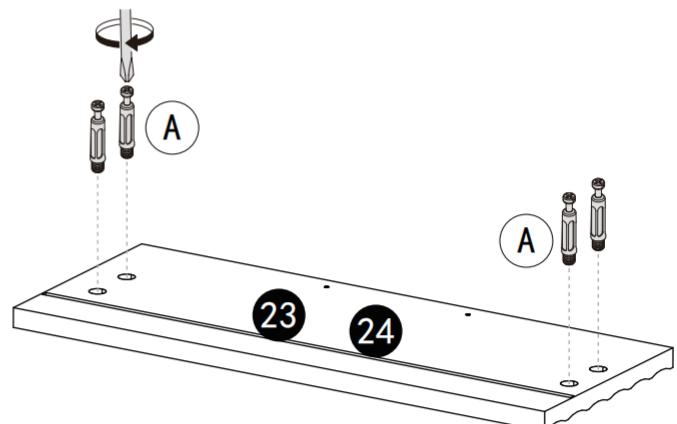

YOU WILL NEED



B x8

J x2


DL x2

DR x2


E x12

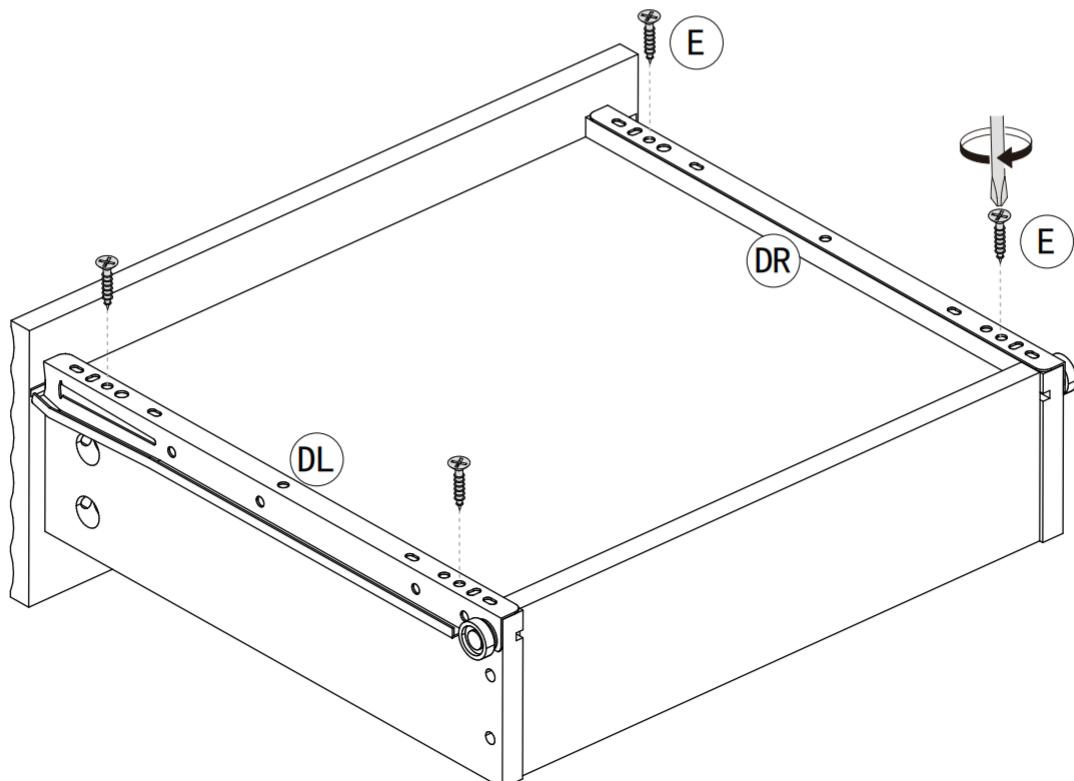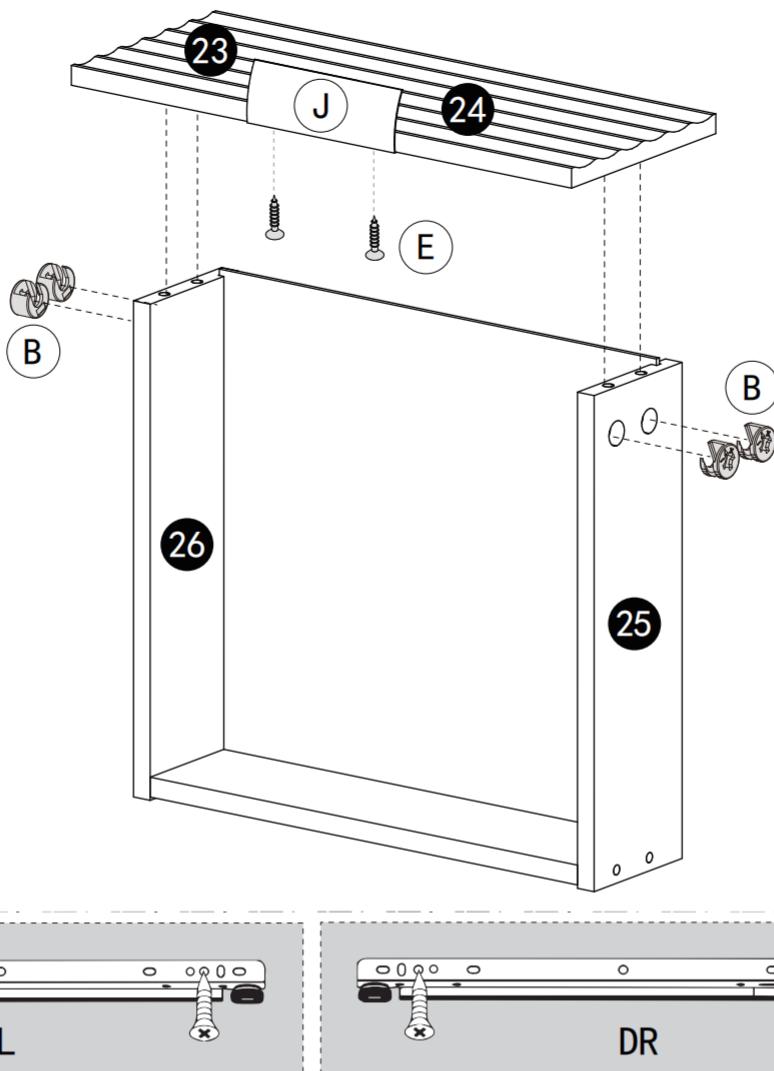


1

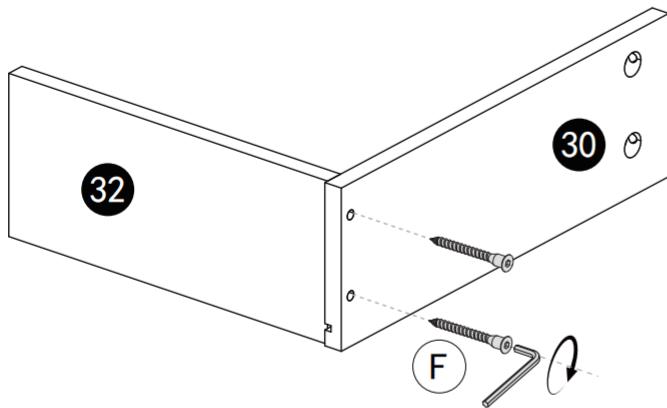

2

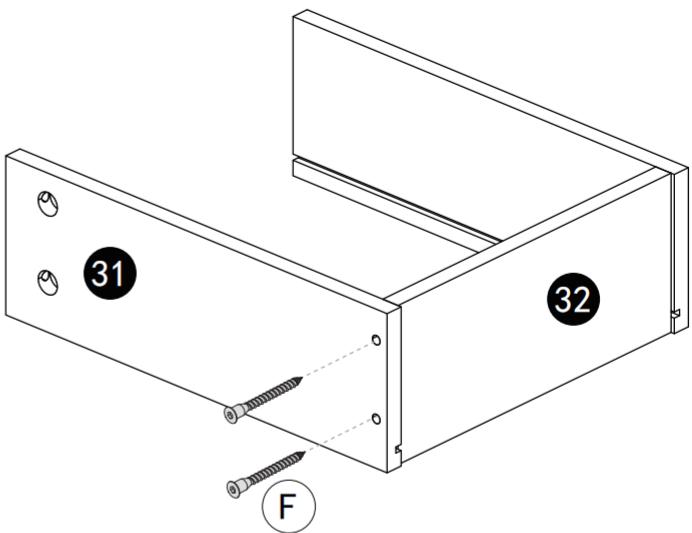


3

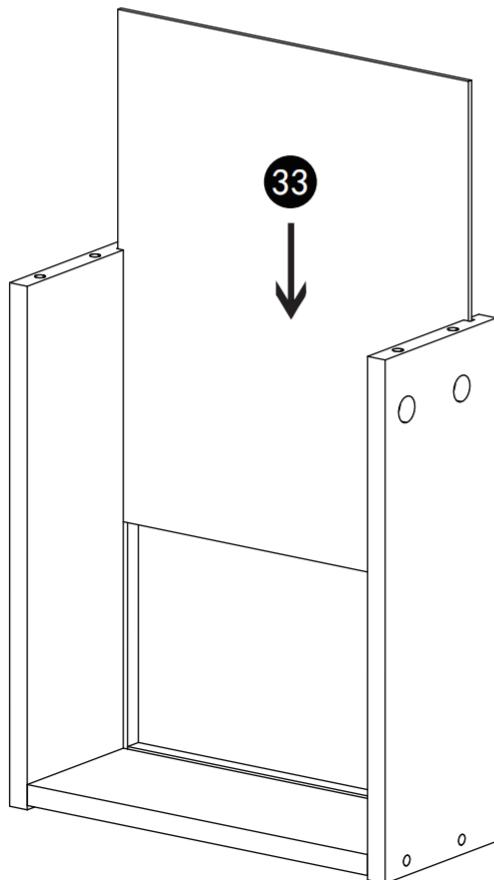

x3

4

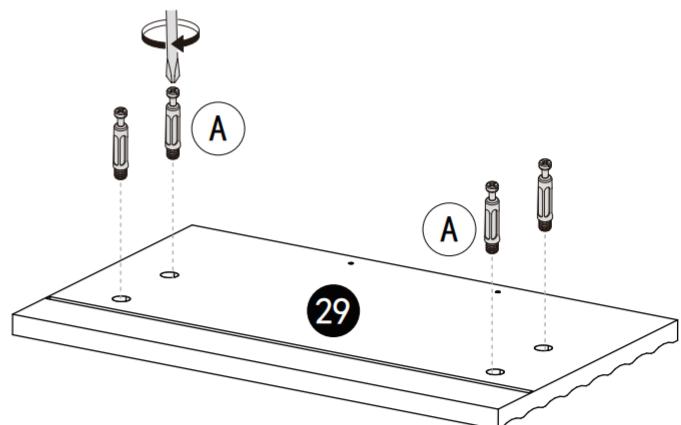

YOU WILL NEED


B x12

J x3




DL x3




DR x3



E x18

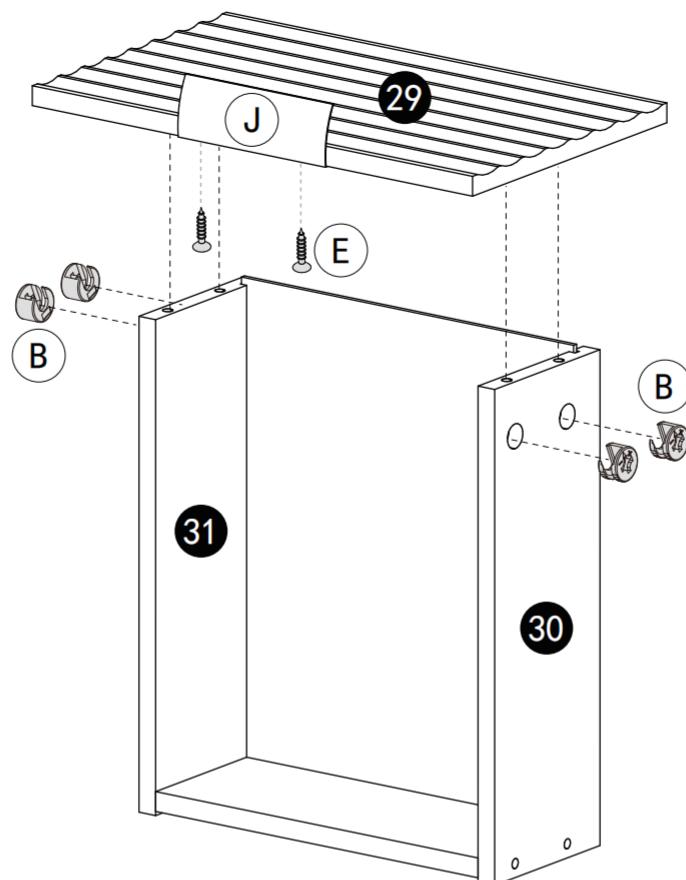

x3

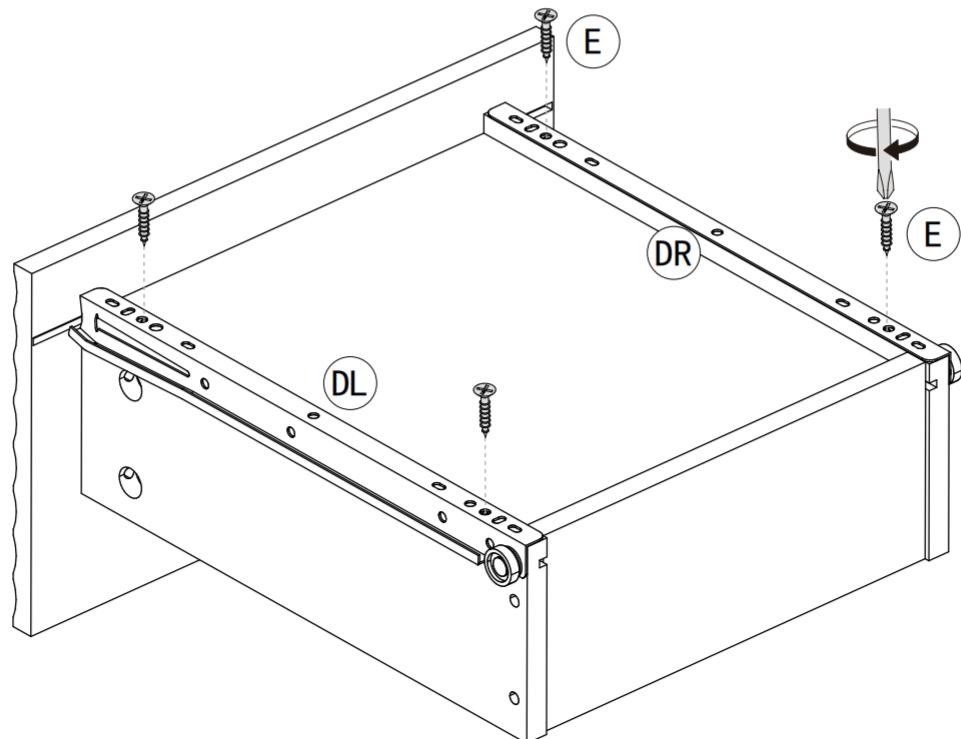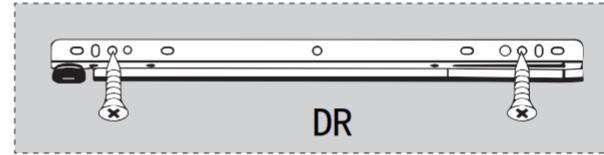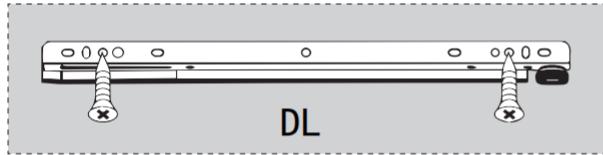

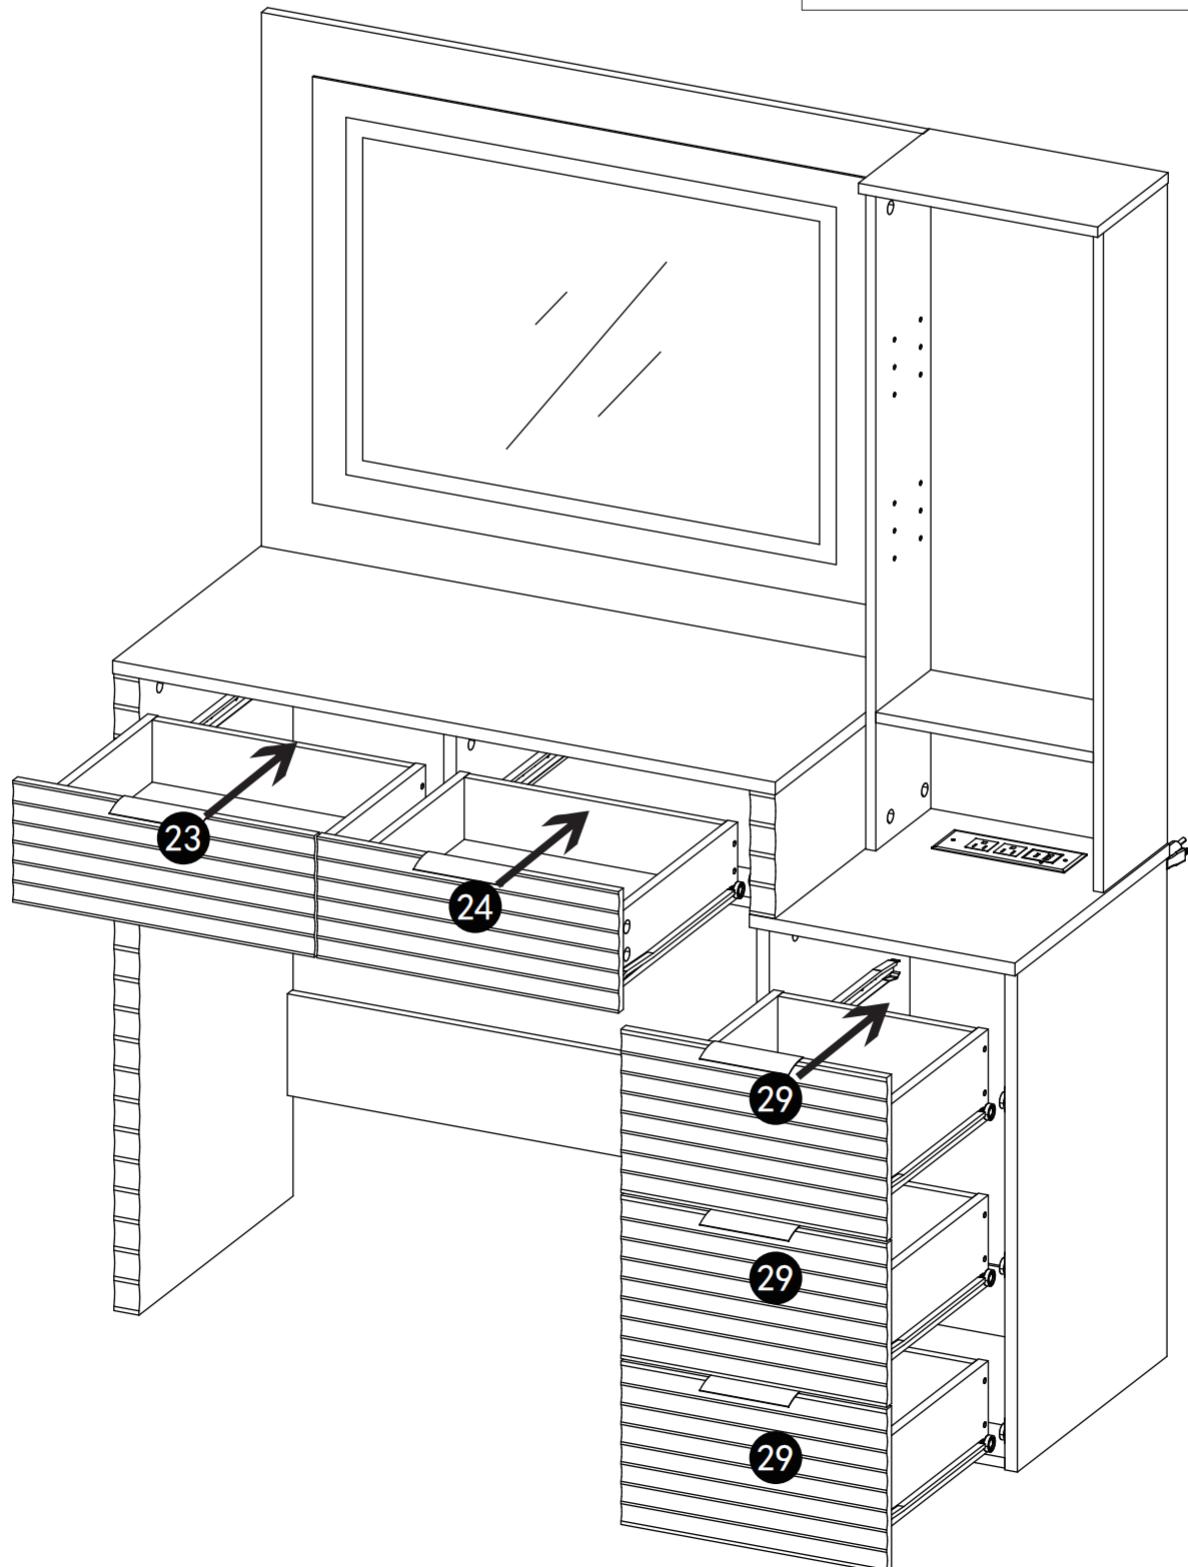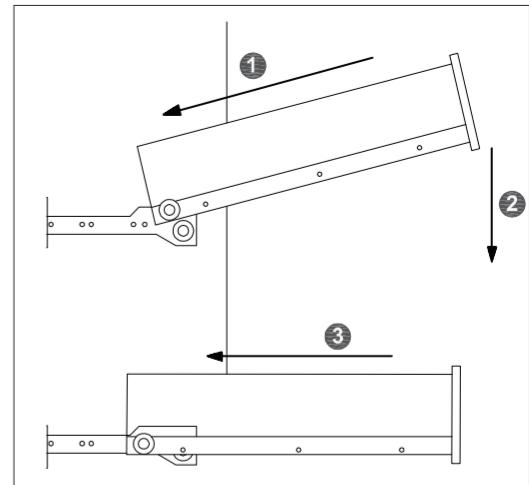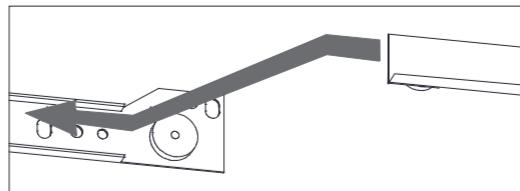

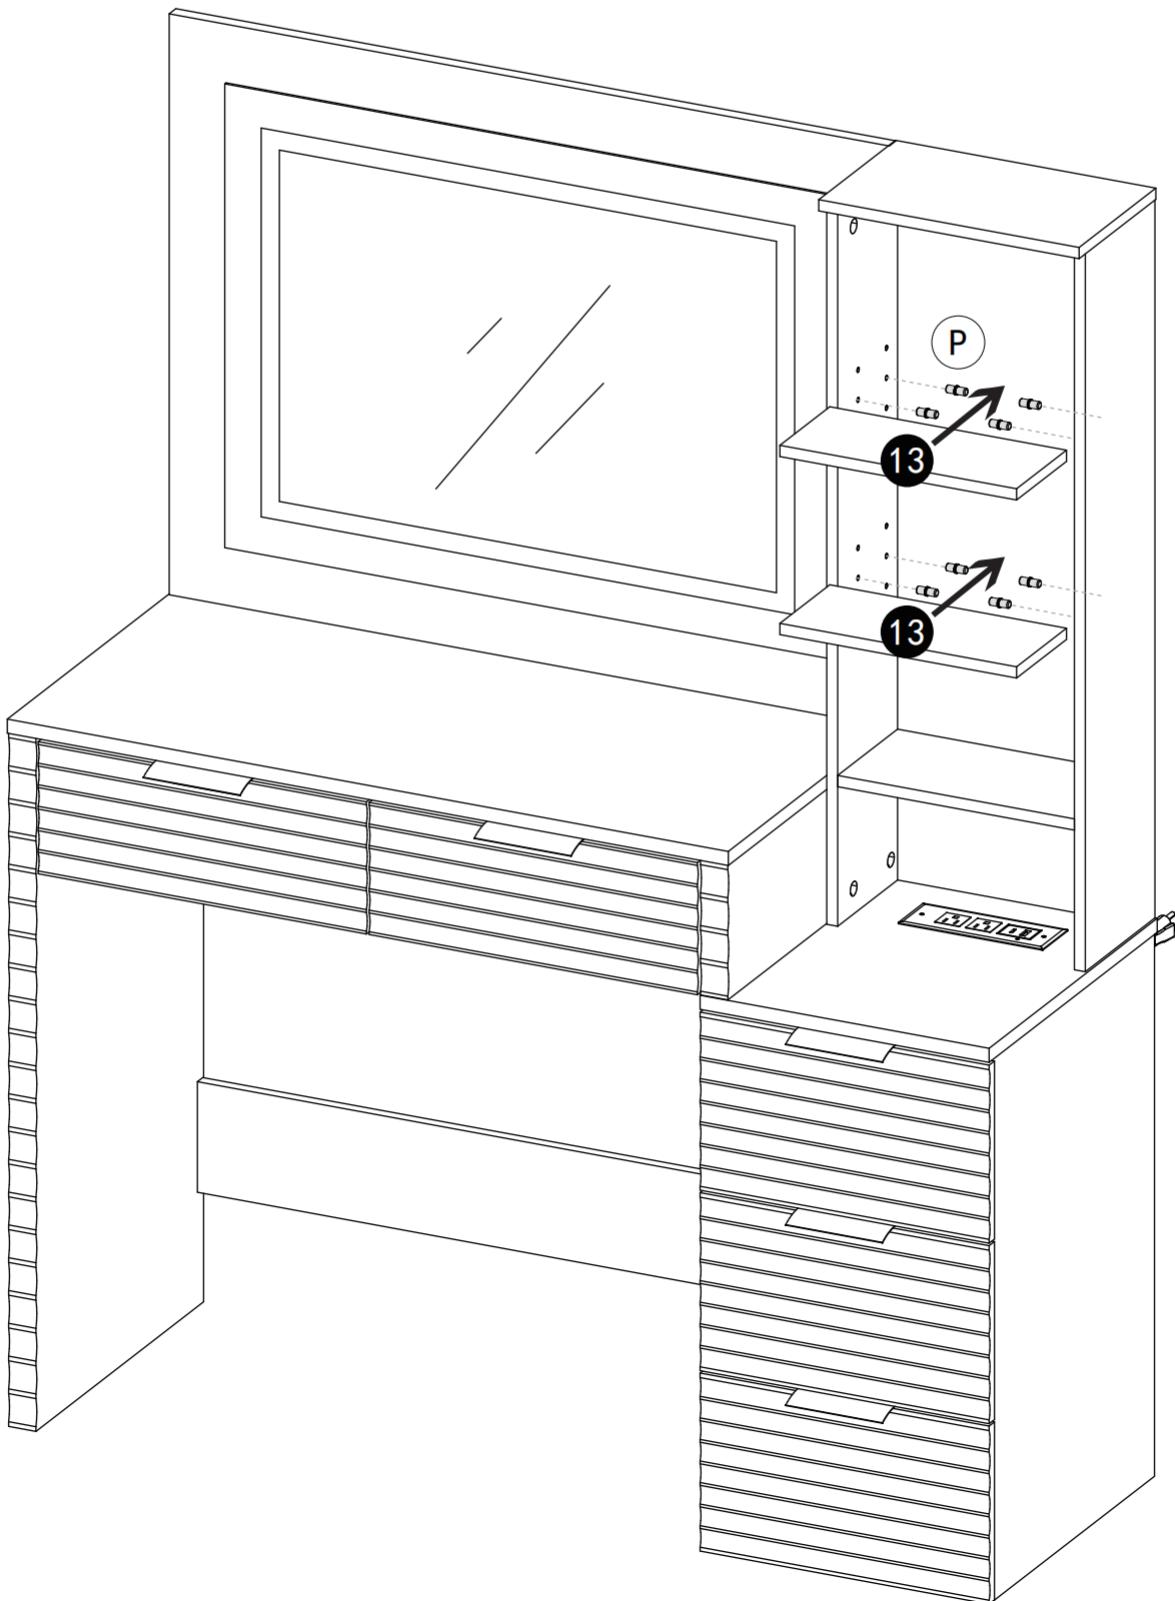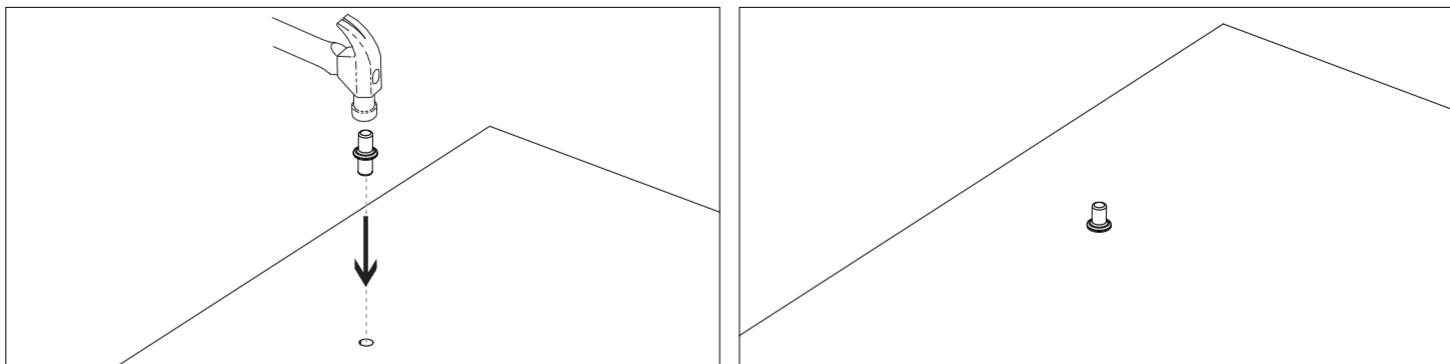


YOU WILL NEED

H x2


E x12

I x1

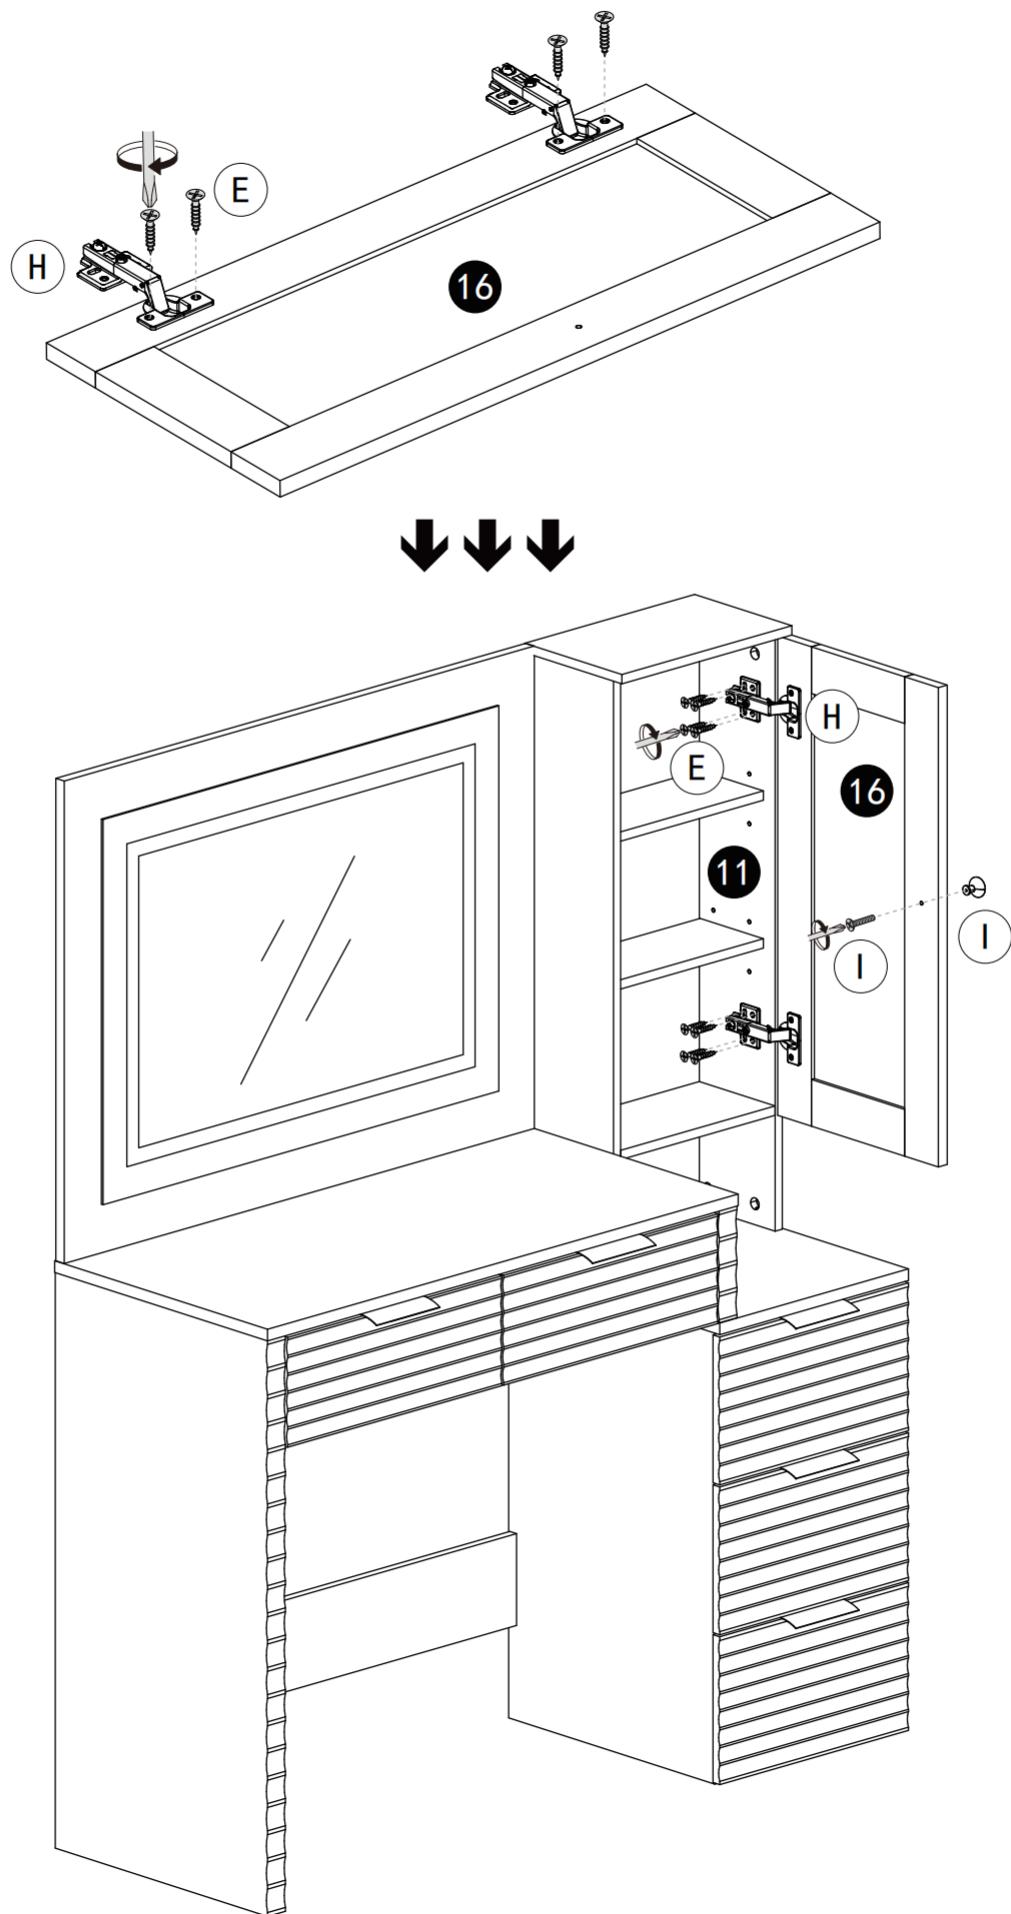


Hinge adjustment

To facilitate the adjustment, install the E1 screw first, and then install the E2 screw.

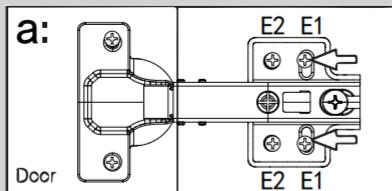**Hinge adjustment**

a: To move doors up or down: loosen screws shown and move doors to suit.

Once doors are aligned, re-tighten Screws

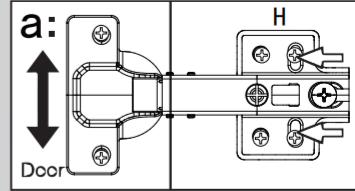


Great bend




Middle curve






Straight arm

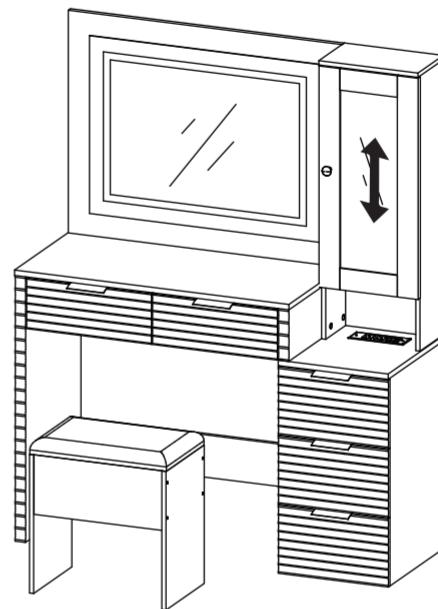**Hinge adjustment**

b: To move doors in or out: loosen screw shown and move doors to suit.

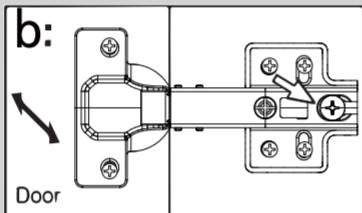**Hinge adjustment**

c: To move doors left or right: loosen screw shown to move doors to suit.

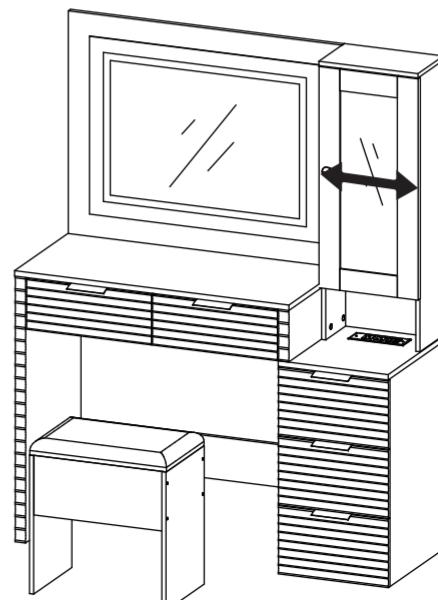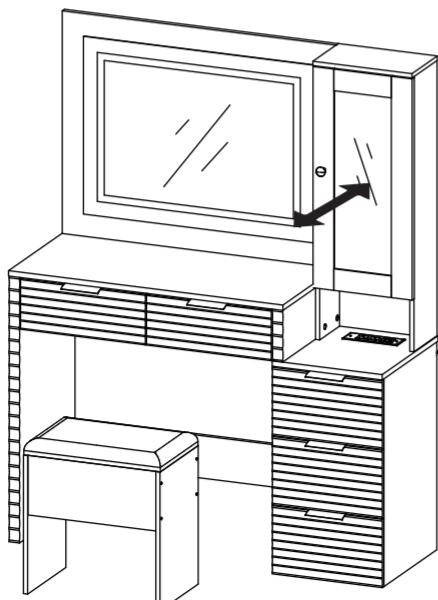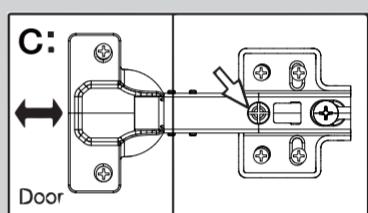





YOU WILL NEED

A x6

B x6

H x2

E x8

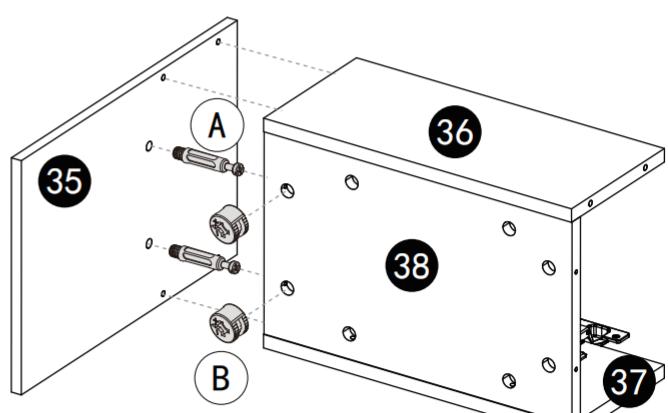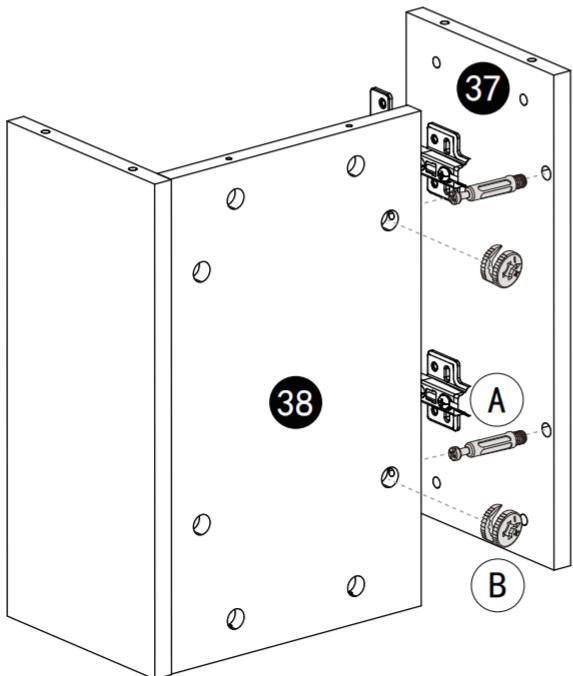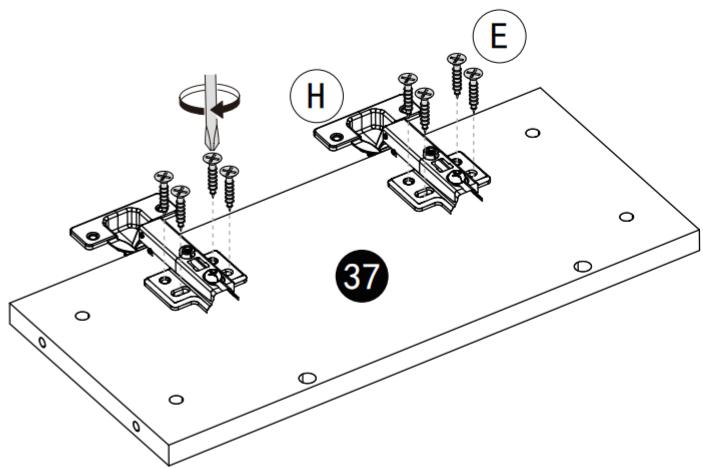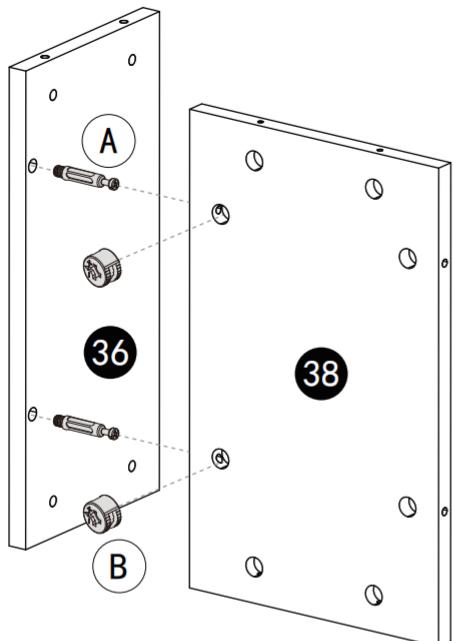



YOU WILL NEED


A x2

B x2

O x8

E x4

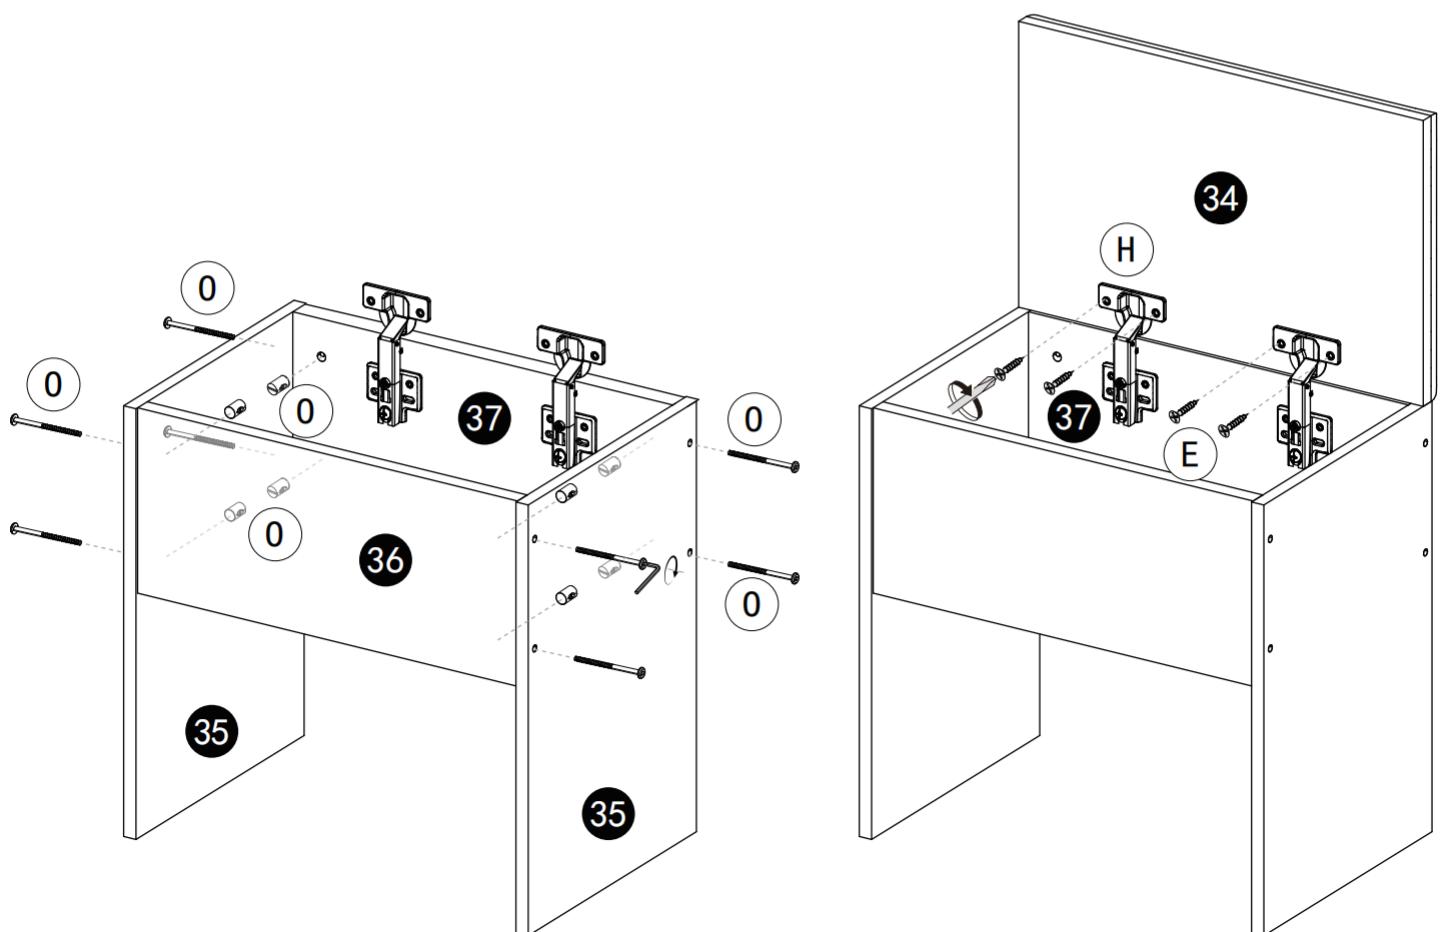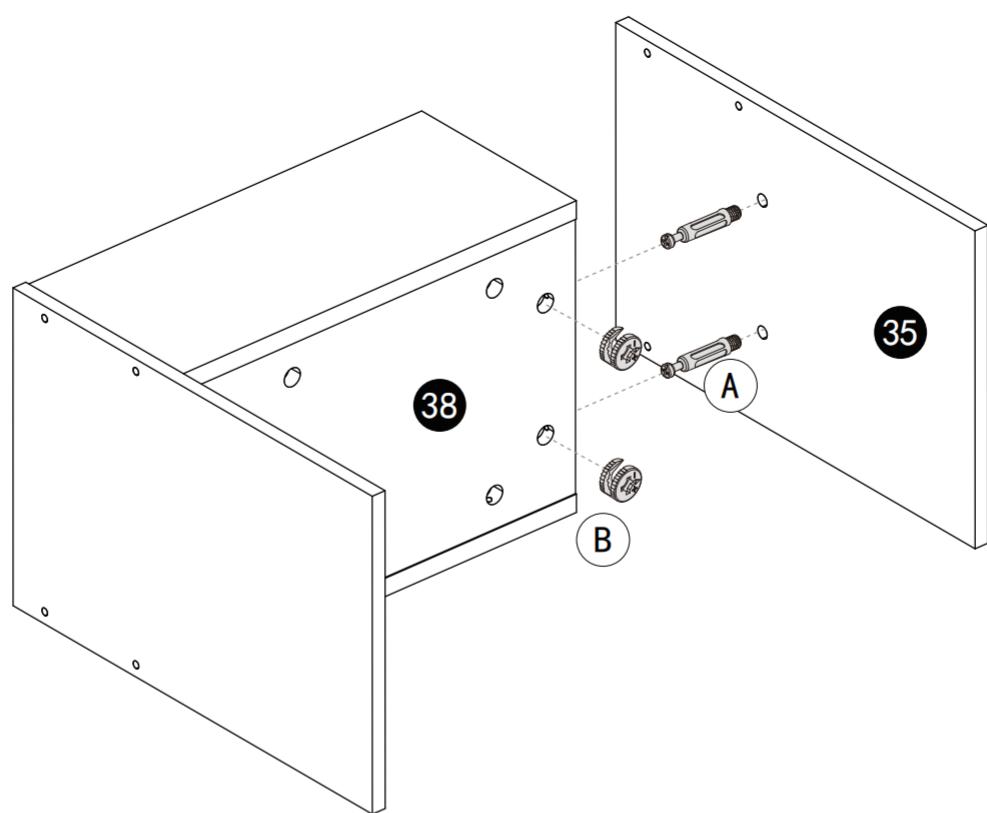

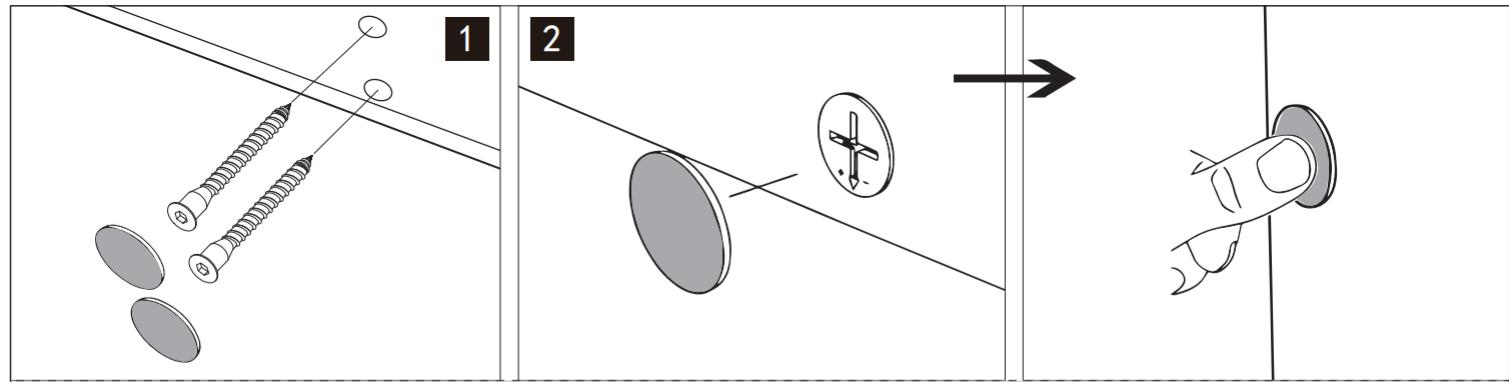

Add L fittings to all exposed holes on the front of the product

YOU WILL NEED

G x2

R x1

L x28

