


# ISAIAS RATTAN LOVESEAT

DESIGN#CWK4003A

Assembly Instructions

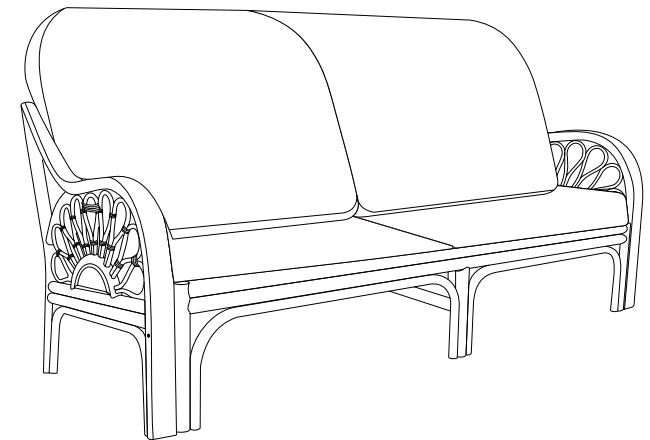

**Need help?**

Feel free to contact us via email or call  
if you have any specific questions!

**contact us:**

[cs@safavieh.com](mailto:cs@safavieh.com)

866-422-9070

**SAFAVIEH**  
C O U T U R E


Thank you for bringing  
Safavieh Couture into  
your home.

Everything we make is  
super easy to set up, including your  
new chairs. You don't need any  
additional equipment.


Parts List

- A x 1


Back Frame


- B x 1


Seat Frame


- C x 2


Legs


- D x 2


Armrest


- E x 1


Horizontal Support


- F x 1

Horizontal Backrest


- G x 1


Seat & Back Cushions




Hardware List

- HW 1 x 4


Hex Socket Bolt M6x1.0x80mm


- HW 2 x 12


Hex Socket Bolt M6x1.0x50mm


- HW 3 x 12

Allen Key M4



- HW 4 x 16

Hole Cover




1

Align the screw holes on the 2 Armrest (B) with the screw holes on the front Leg ( C ).  
Attach them together by using the Allen Key (HW3) to screw in 4 of the Hex Socket Bolts (HW1) as shown.  
Make sure the bolts are in the holes properly before tightening.

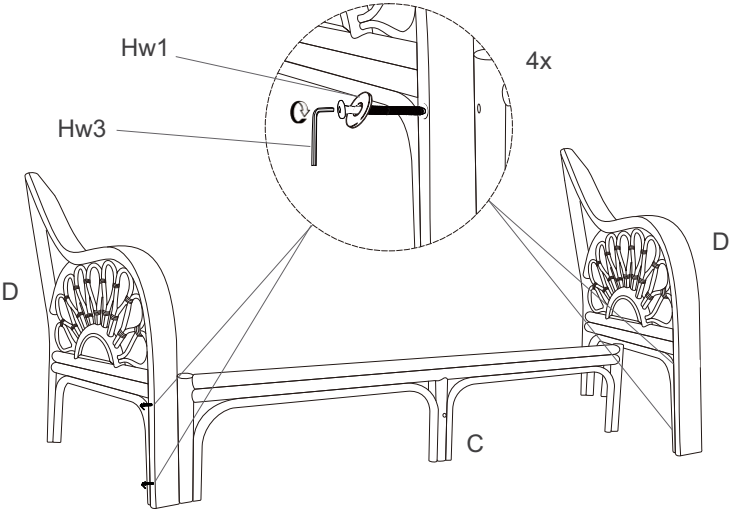


2


Align the screw holes on the 2 Armrests (B) with the screw holes on the back Leg ( C ).  
Attach them together by using the Allen Key (HW 3) to screw in 4 of the Hex Socket Bolts (HW 2)  
as shown. Make sure the bolts are in the holes properly before tightening.

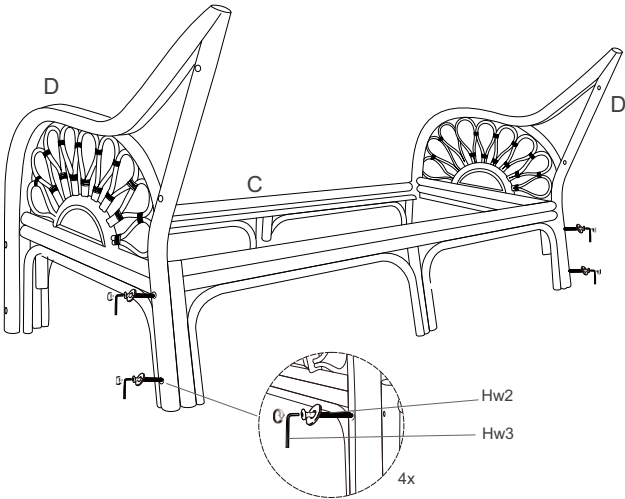


Align the screw holes on the 2 Legs ( C ) with the screw holes on the Horizontal Support ( E ).  
Attach them together by using the Allen Key ( HW 3 ) to screw in 2 of the Hex Socket Bolts ( HW 2 )  
as shown. Make sure the bolts are in the holes properly before tightening.

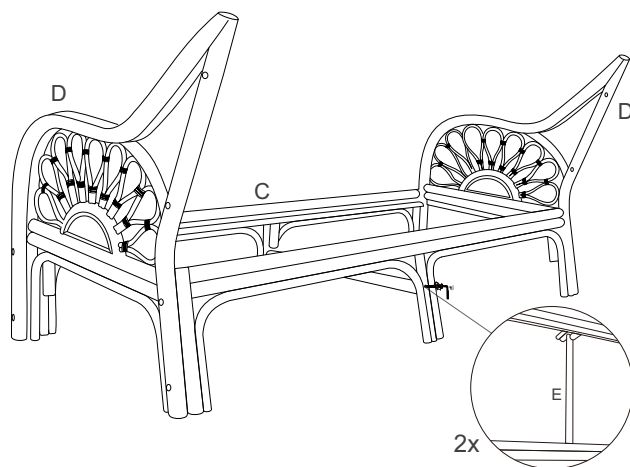

Attach the Horizontal Backrest ( F ) to the back leg ( C ) by using the Allen Key ( HW 3 ) to screw in 2 of the Hex Socket Bolts ( HW 2 ) as shown. Attach the Back Frame ( A ) to the 2 Armrests ( D ) and the Horizontal Backrest ( F ) by using the Allen Key ( HW 3 ) to screw in 4 of the Hex Socket Bolts ( HW 2 ) as shown.

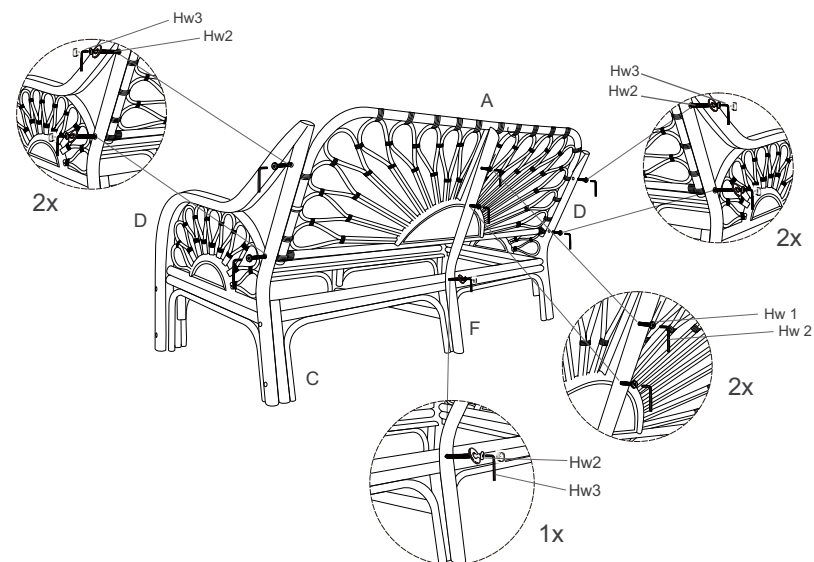

Place the Seat Frame (B) on the assembled frame. Place the Cushion (G) on the Seat Frame (B).  
Insert the Hole Covers (HW4) Press with small hammer make sure to apply all the holes cover properly.

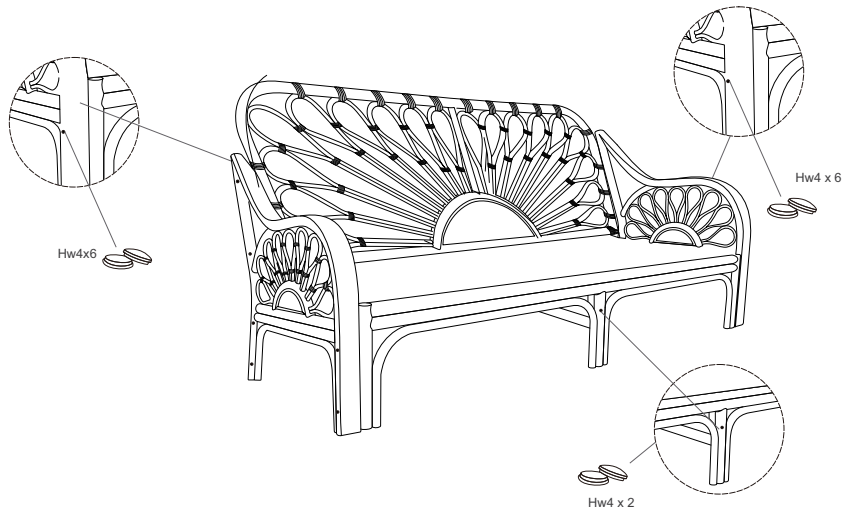

Place the Loveseat in the place where you will use it. We'd love to see it – just tag us (we're @safavieh) and use the hashtag #safavieh on Instagram!

