


WALKER EDISON
TM

Upholstered Bed

SKU# WECHA03KB4

SKU# WECHA03QB4

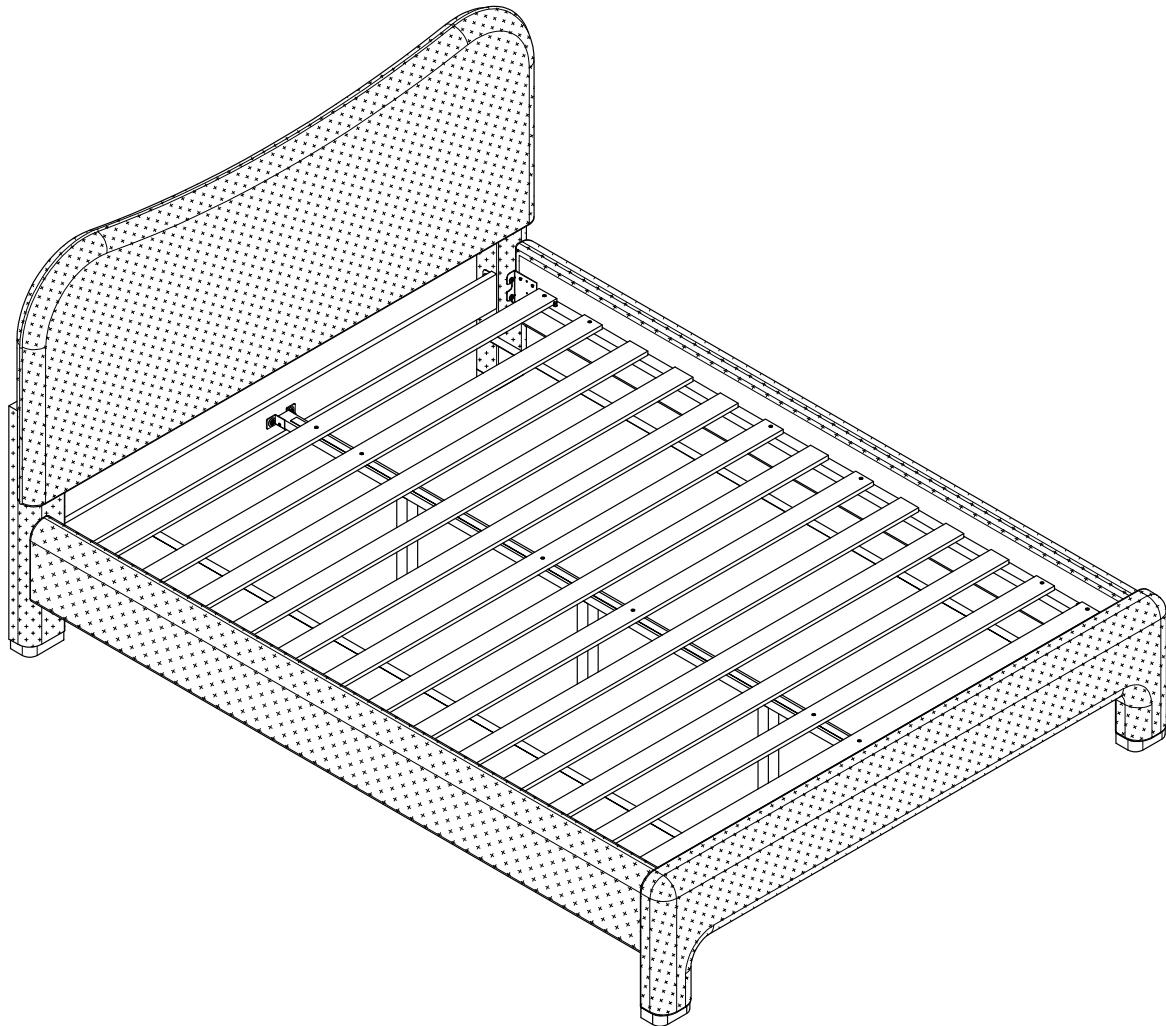

For Residential Use Only

Please visit our website for the most current instructions, assembly tips, report damage, or request parts. www.walkeredison.com

WE Time to get started


Set up a clean and soft workplace to get started and avoid damage during the assembly. It also helps to double-check that you've got all the pieces and parts before diving in to assembly.

Estimated time for assembly



People recommended for assembly


Make it a team effort! Grab a friend for quicker, easier assembly.

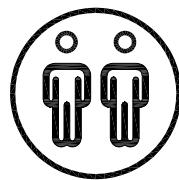

2 People Build

Use power tools with caution


You can cause cracking or damage to the material and easily strip the hardware. If you choose to use a power tool, your product will no longer be covered under Walker Edison's warranty.

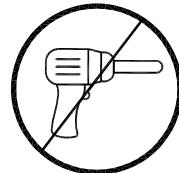





Scan to get assembly tips and help!

WE Parts List

Part Number	Description	Quantity
1	Headboard	1
2	Bottom Rail	1
3	Side Rail	2
4	Middle Headboard Support Rail	1
5	Left Headboard Post	1
6	Right Headboard Post	1
7	Center Support Rail	1
8	Bed Slats	1
9	Middle Support Legs	3
10	Bottom Rail Foot	2
11	Left Headboard Foot	1
12	Right Headboard Foot	1

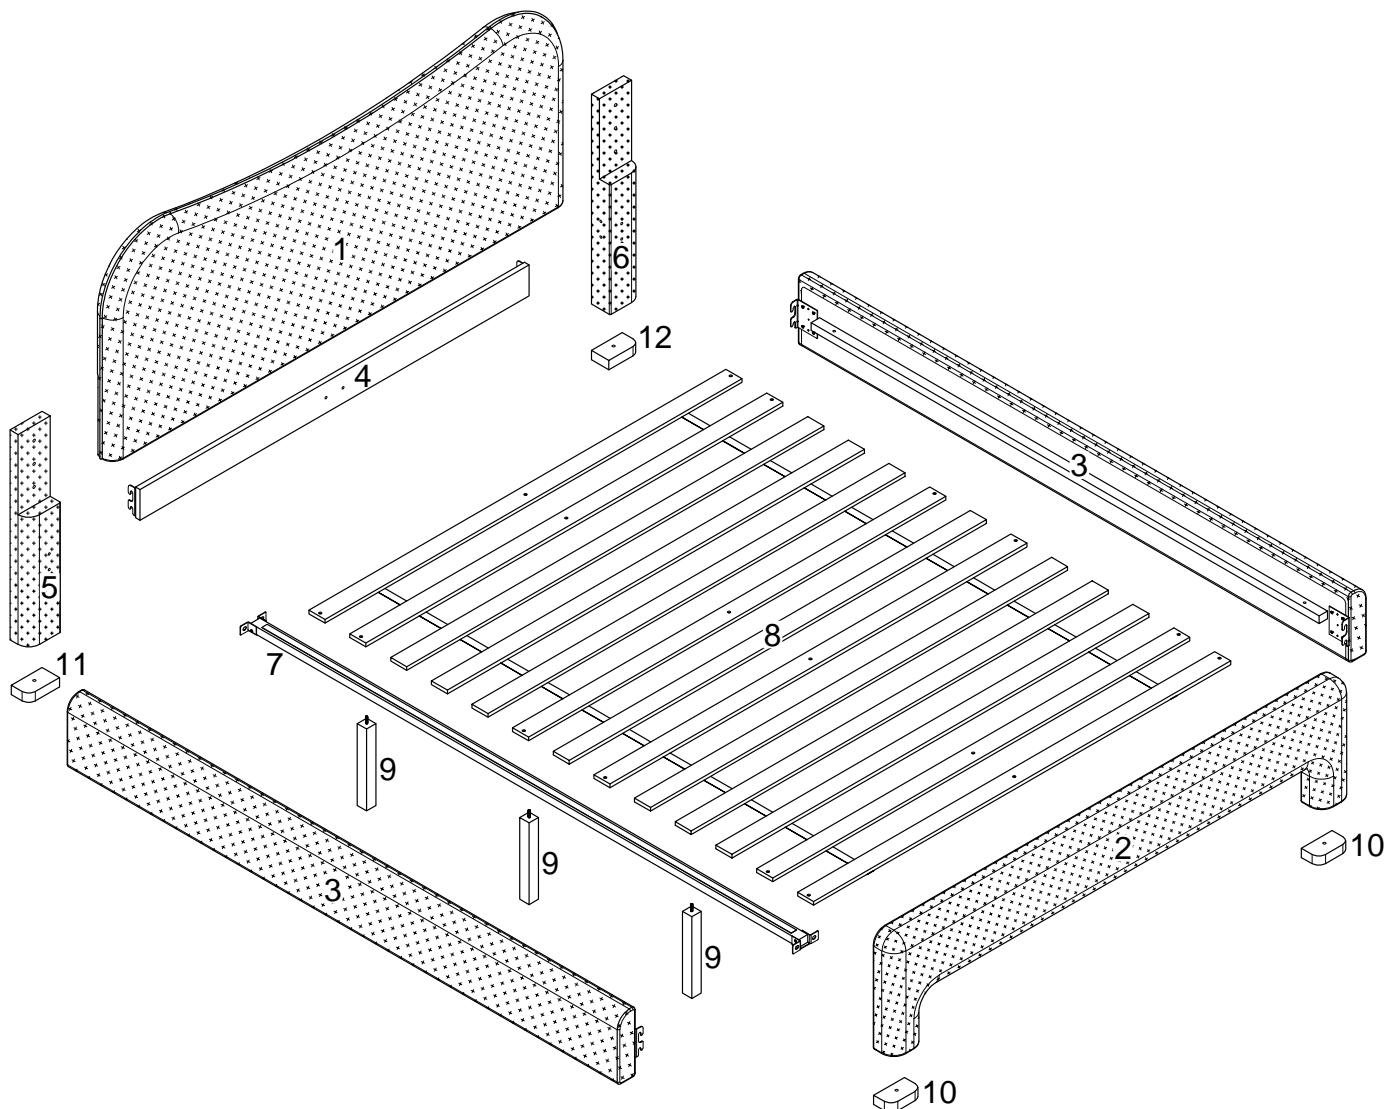


WE Hardware List

Part	Size	Name	Quantity	
A		5/16"x50mm	Bolt	6
B		5/16"x40mm	Bolt	4
C		5/16"x30mm	Bolt	14
D		5/16"x20mm	Bolt	2
E		5/16"x22mm	Washer	26
F		5/16"x13mm	Spring washer	26
G		4x25mm	Screw	18
H		8x30mm	Wooden dowel	4
J		40mm	Felt pad	4
K		M5	Hex key	1
L			Screwdriver	1


The hardware quantities listed above are required for proper assembly.
Extra hardware pieces may be included.

Step 1

Let's get started! Using the (B) bolt, spring washer (F), and washer(E), connect a Bottom Rail Foot (10) to both ends of the Bottom Rail (2). Then, attach a Left Headboard Foot (11) to the Left Headboard Post (5) and a Right Headboard Foot (12) to the Right Headboard Post (6). Tighten all bolts with the provided hex key (K).

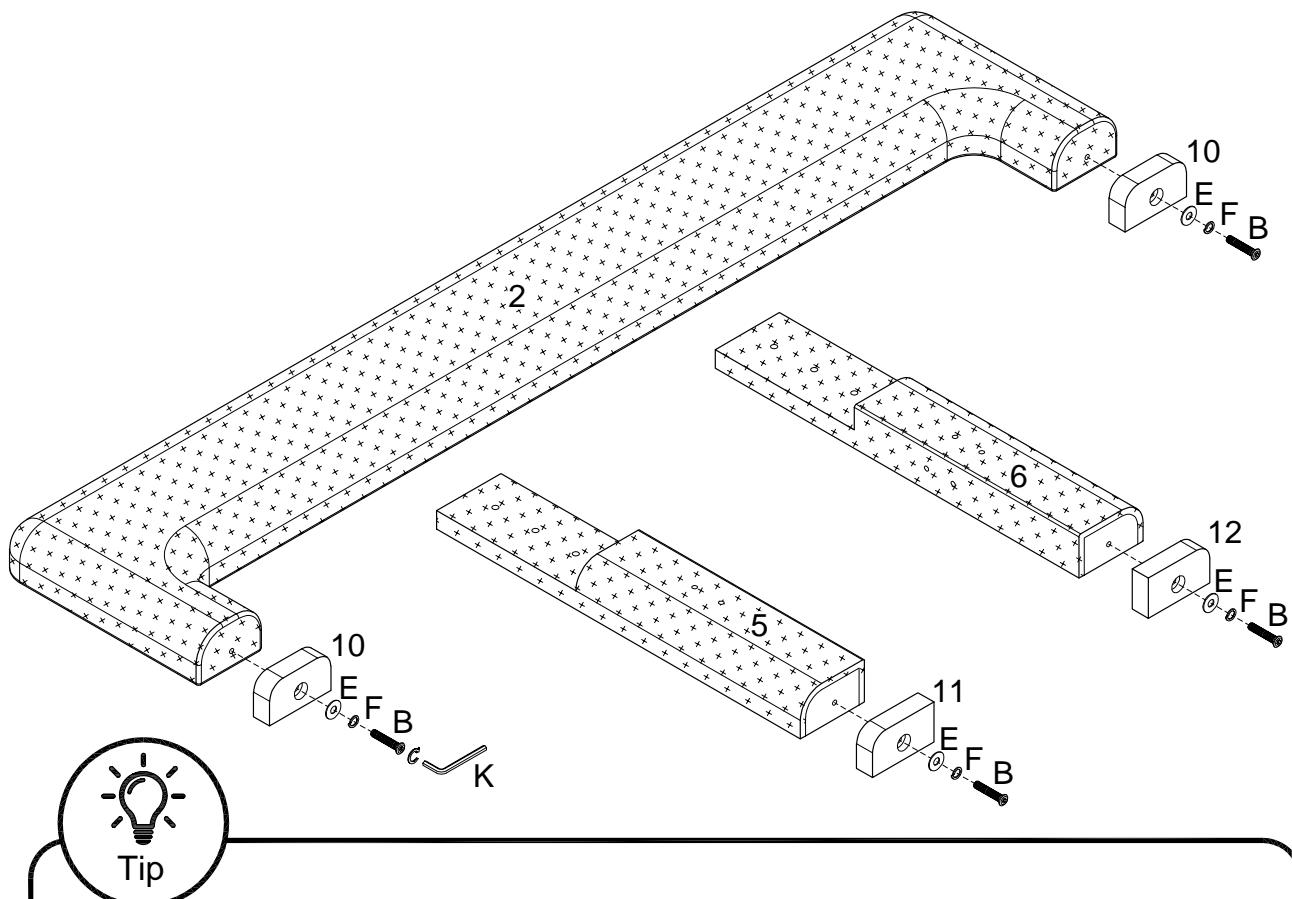


To keep your product looking its best and scratch-free, try assembling it on a soft surface like carpet or a blanket. This helps prevent any accidental scratches and keeps your furniture in top shape!

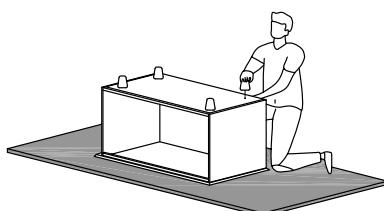


Step 2

Stick a felt pad (J) to the bottom of each foot (10,11, 12).

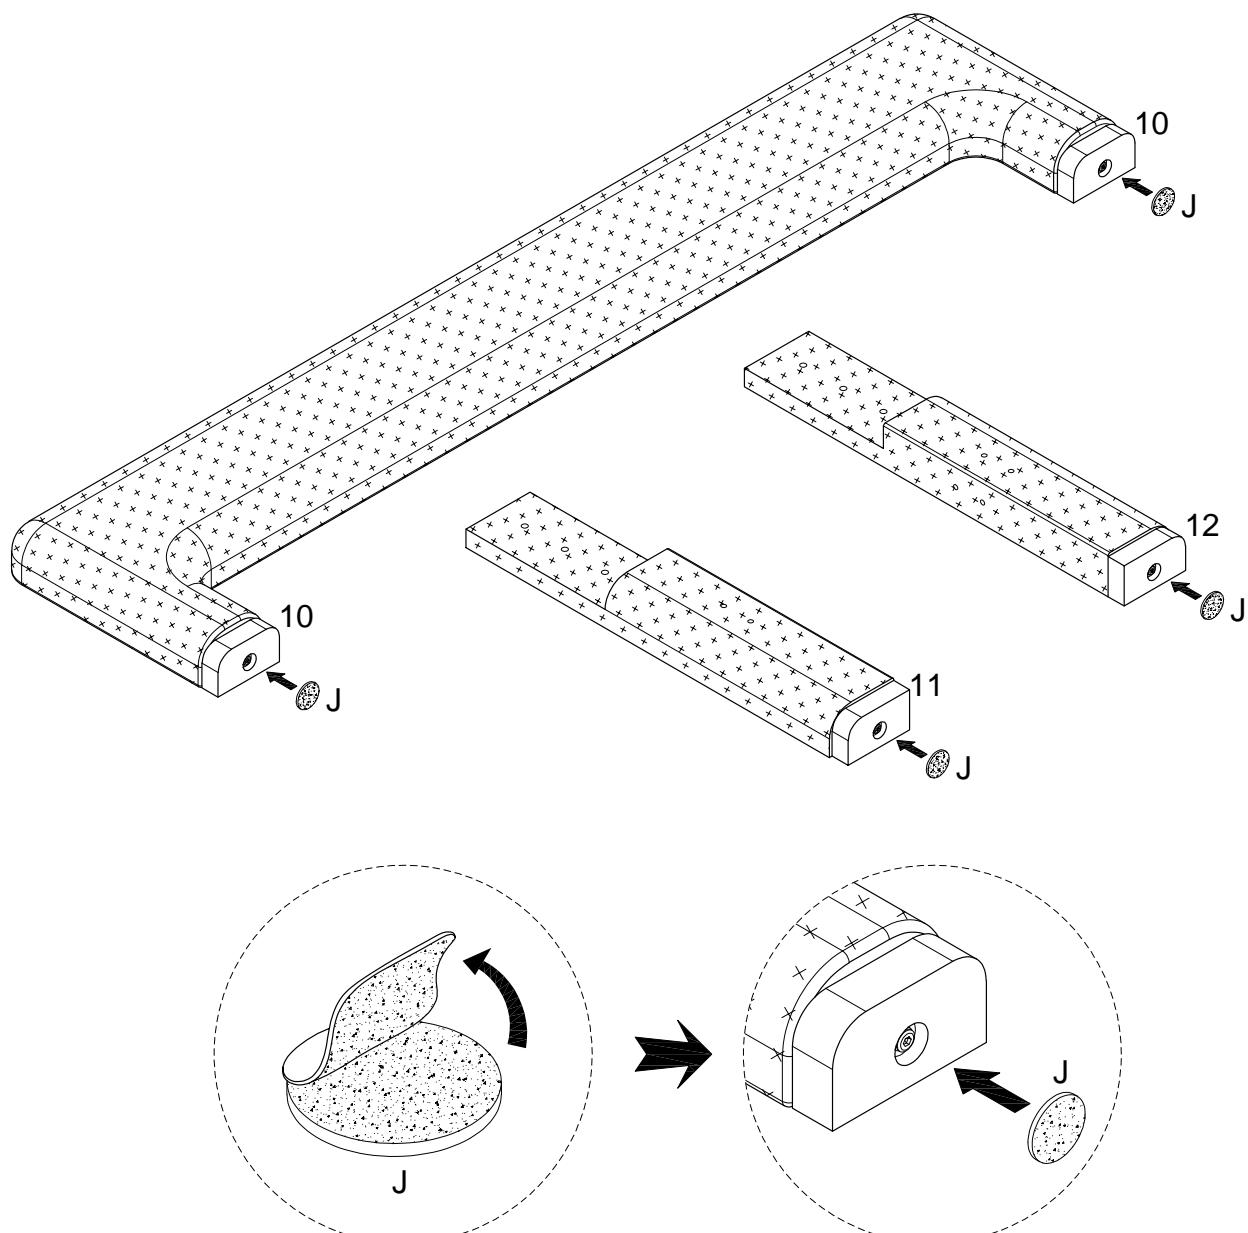

Step 3


Attach the Right Headboard Post (6) and the Left Headboard Post (5) to the Headboard (1) using the (A) bolt, spring washer (F), and washer (E). Use the hex key (K) to partially tighten the bolts—secure them to approximately 75% tightness.

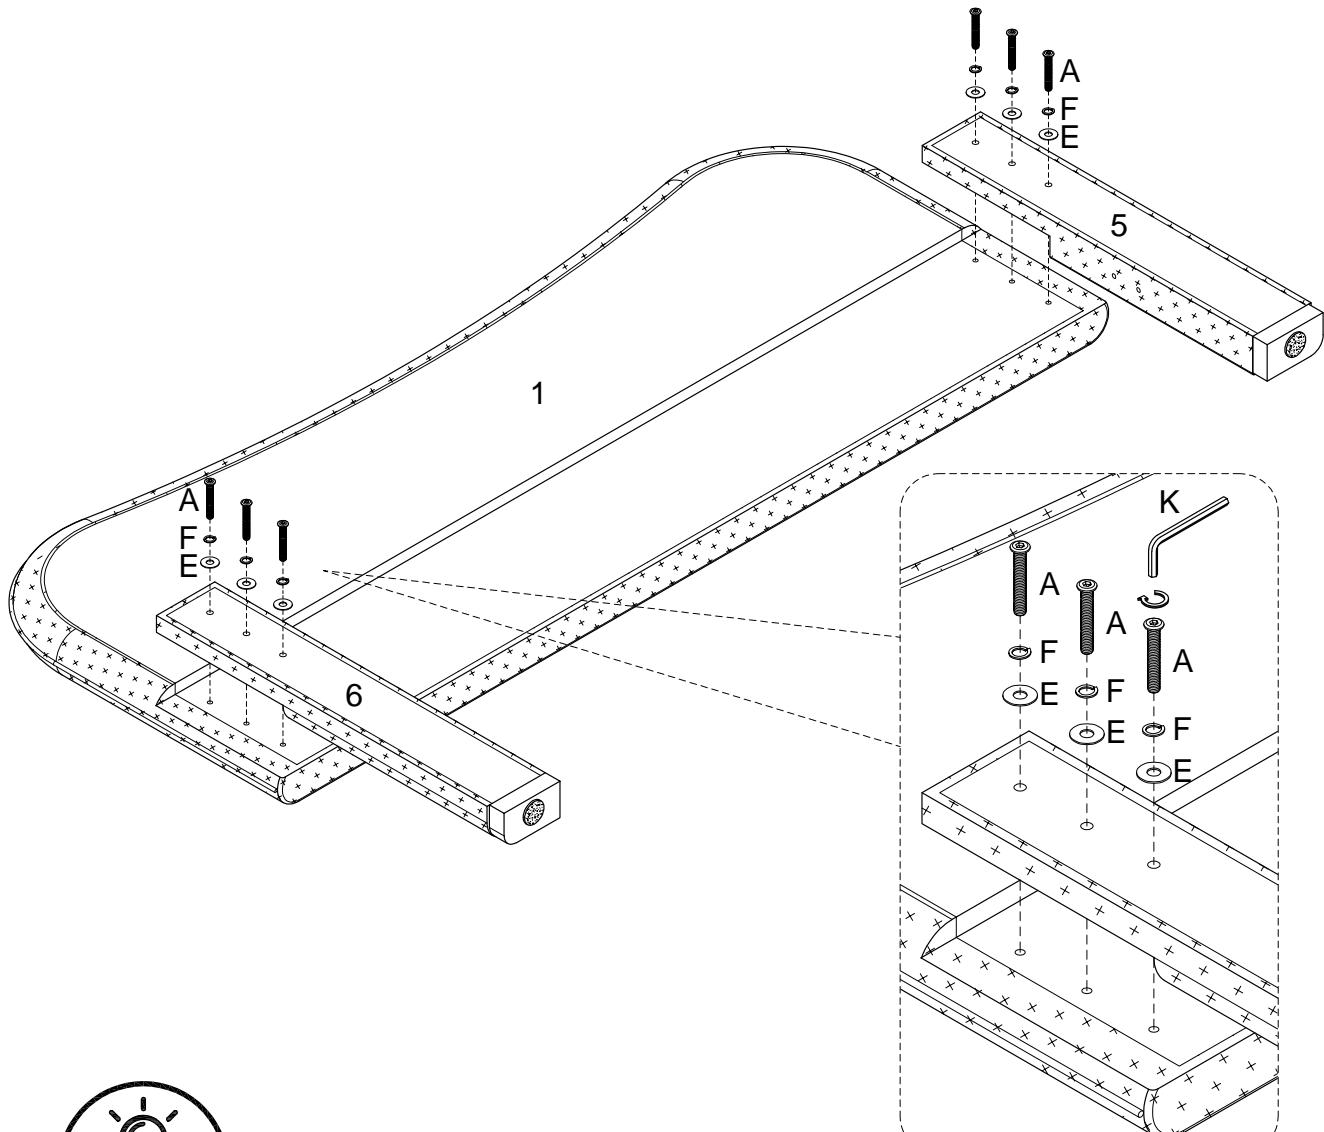

Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes. Tighten only to 75% for now.

Step 4

Insert bolts (C), spring washers (F), and washers (E) into the Left Headboard Post (5), Right Headboard Post (6), and Bottom Rail (2). Use the hex key (K) to partially tighten the bolts—secure them to approximately 50% tightness.

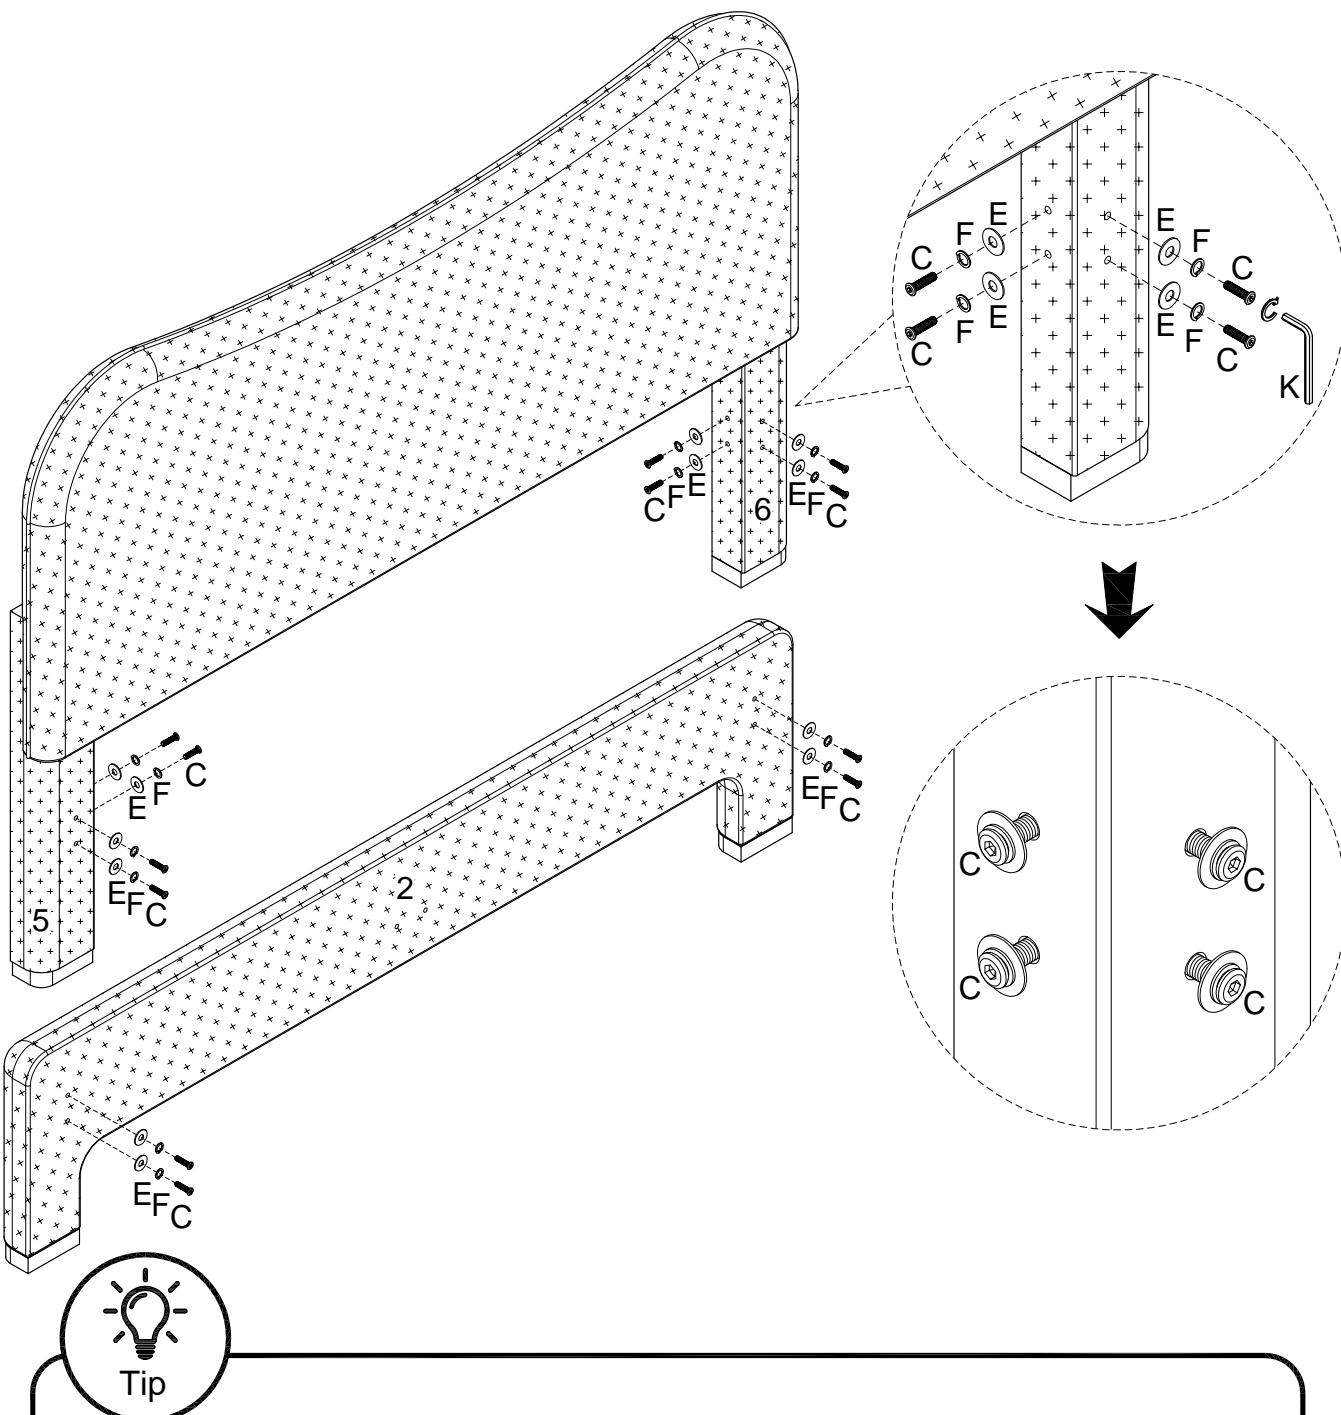


Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes. Tighten only to 50% for now.



Step 5

Hook the Middle Headboard Support Rail onto the (C) bolts in the Right Headboard Post (6) and the Left Headboard Post (5). Then, tighten the (C) bolts all the way using the hex key (K).

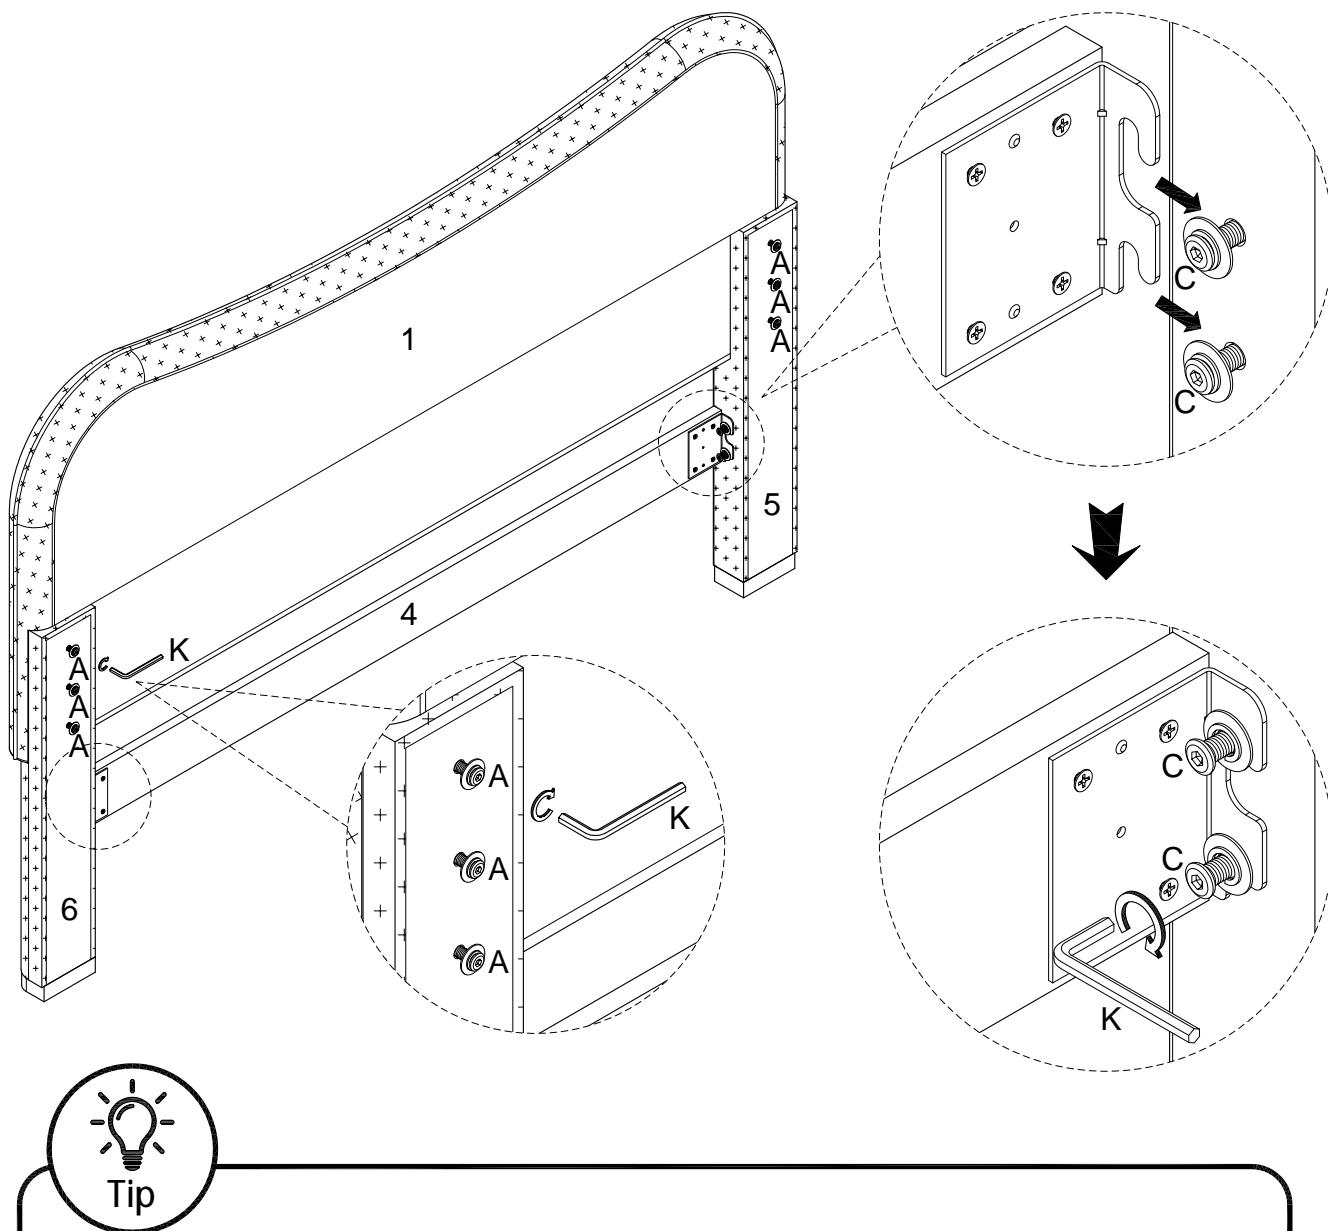


Tip



Carefully flip the headboard over on a flat surface and make sure the headboard post are touching the ground evenly before tightening everything to 100%.


Step 6

Now, hook the Side Rails (3) onto the (C) bolts in the Right Headboard Post (6) and the Left Headboard Post (5). Make sure to prop the Side Rails (3) up. Then, tighten the (C) bolts all the way using the hex key (K).

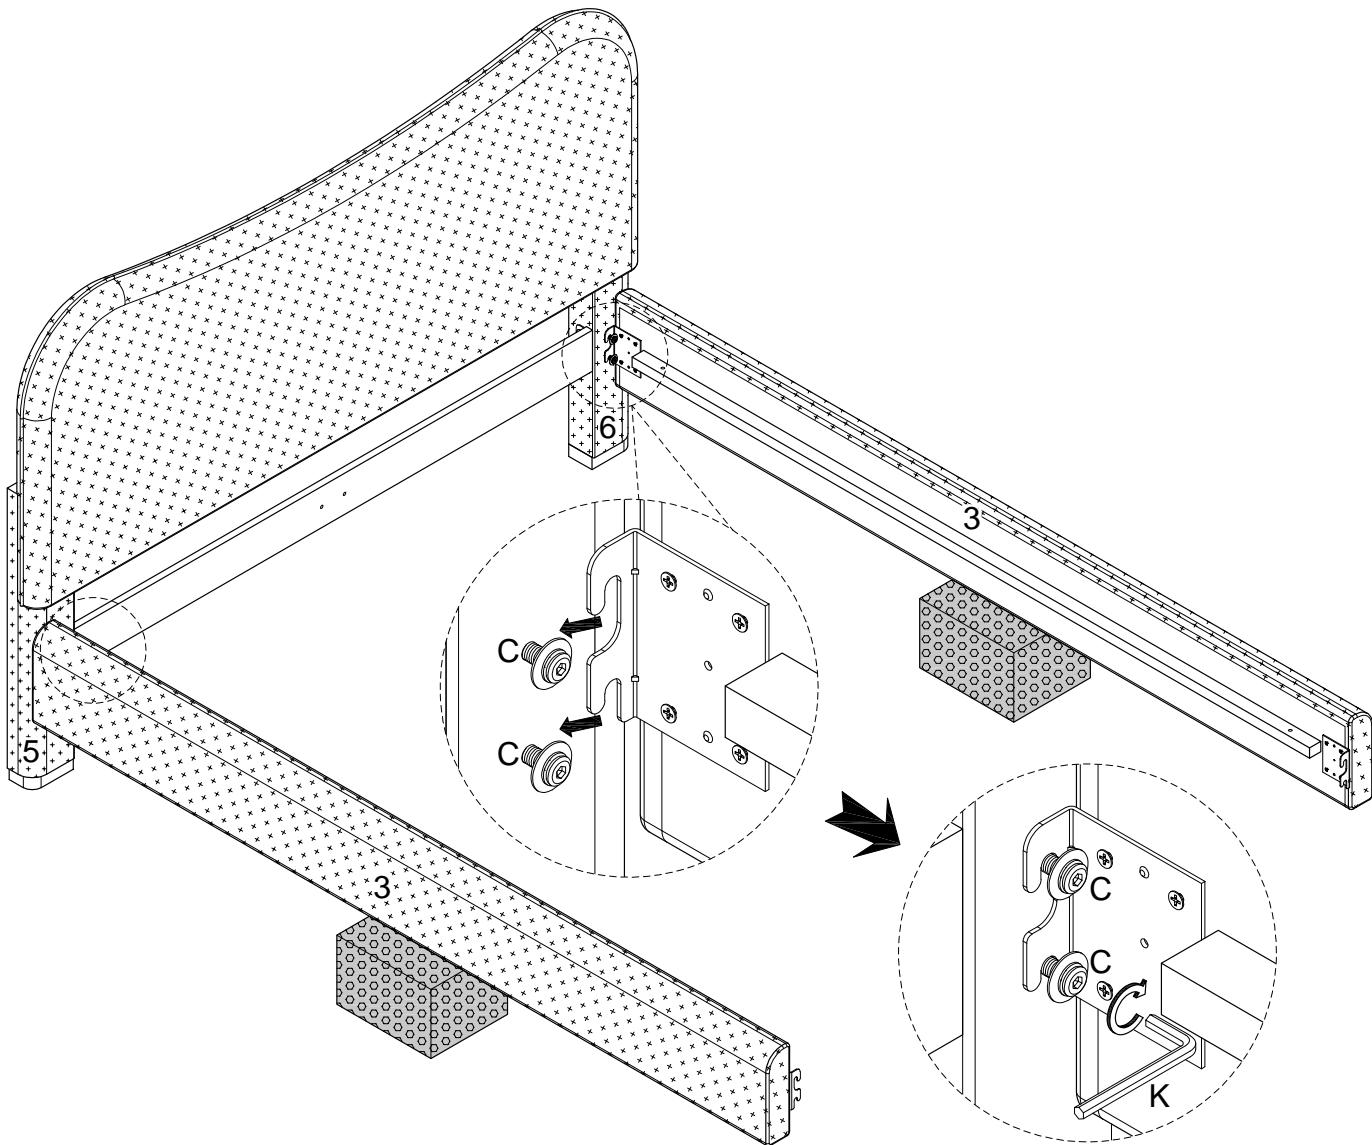


Step 7

Hook the other side of the Side Rails (3) onto the (C) bolts in the Bottom Rail (2). Then, tighten the (C) bolts all the way using the hex key (K).

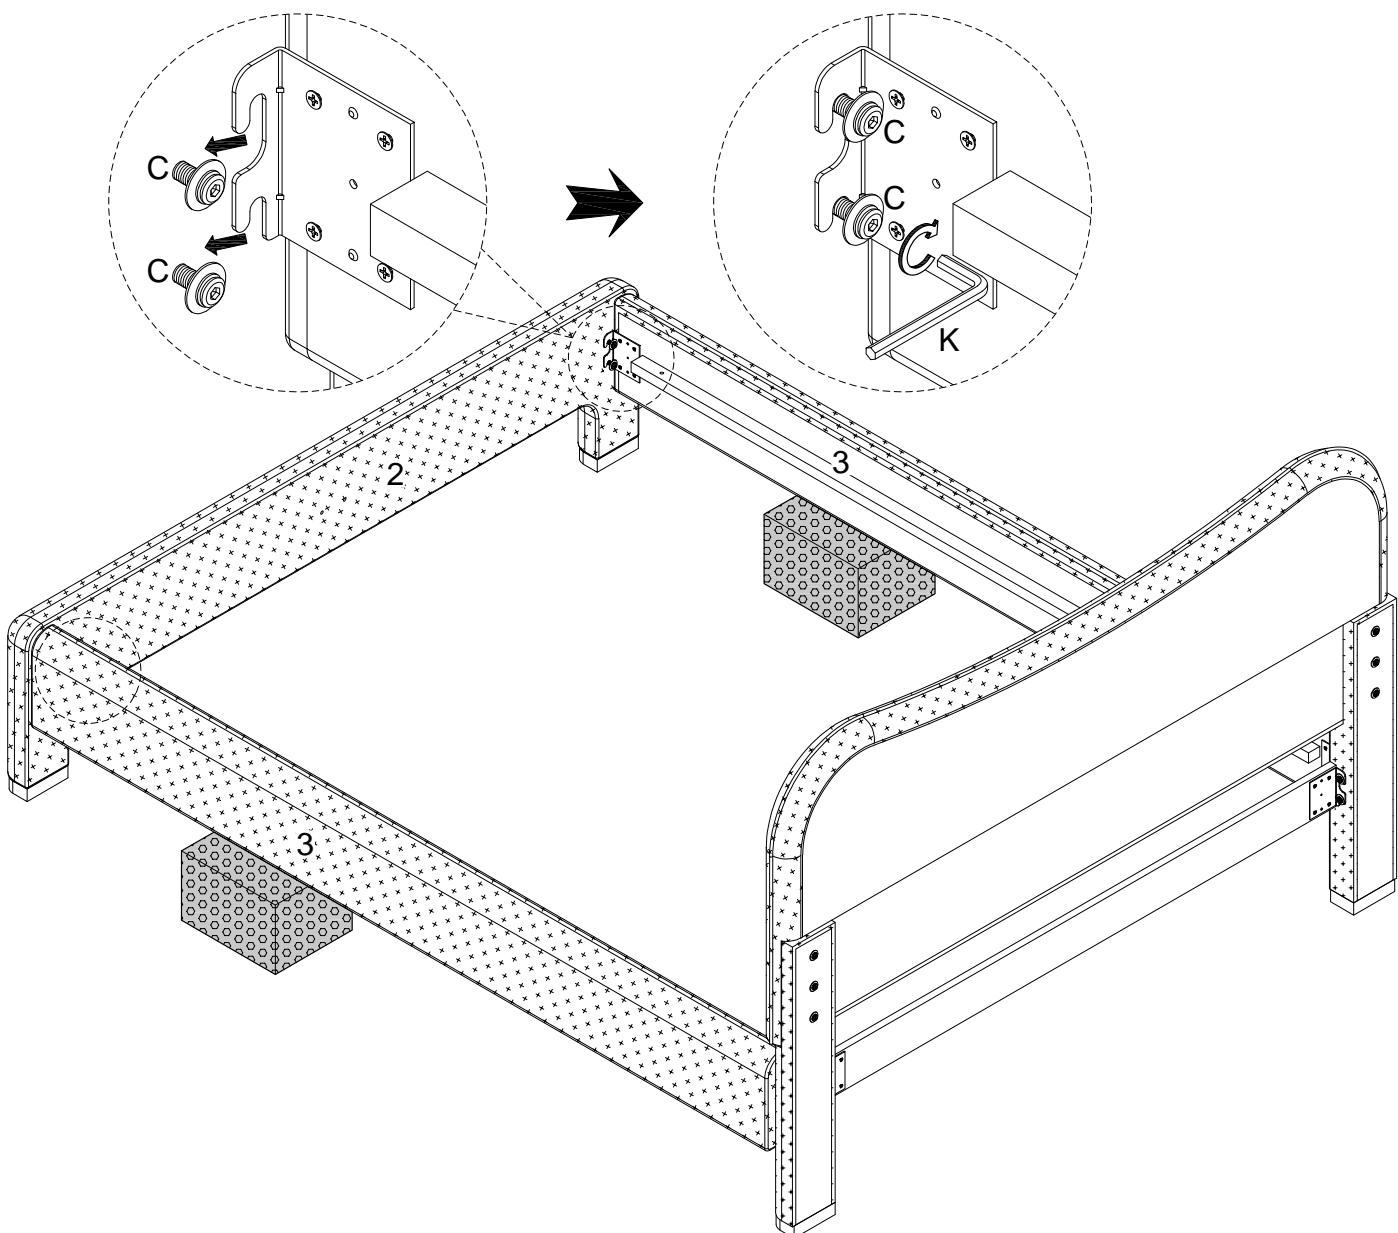


Step 8

Remove the protective cap on each Middle Support Leg (9). Then, screw the three Middle Support Legs (9) into the Center Support Rail (7).

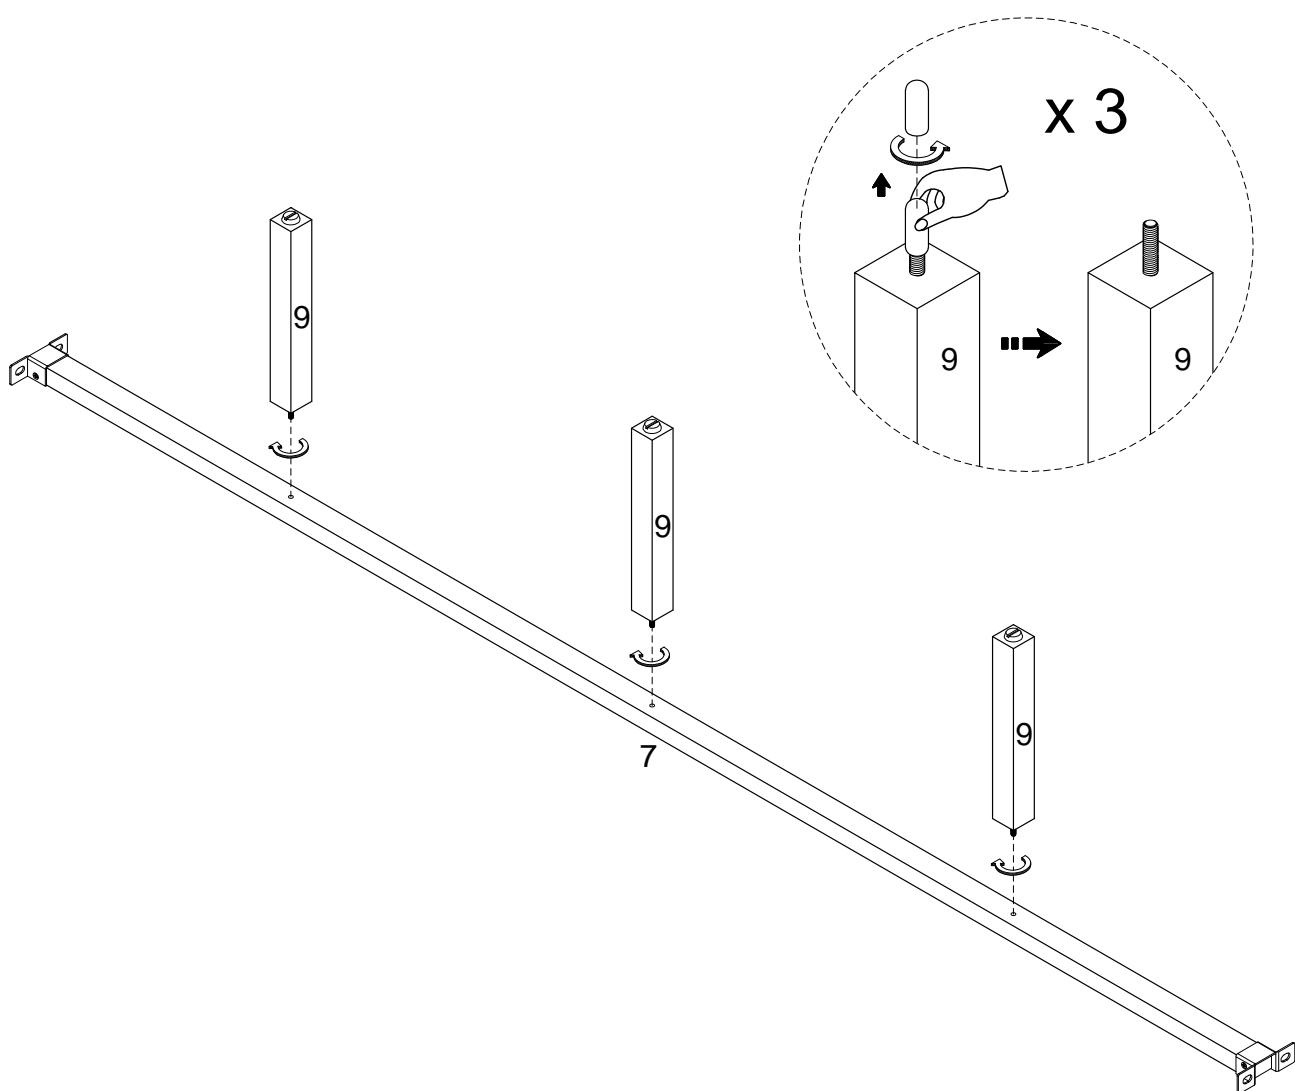


Step 9

Position the Center Support Rail (7) by placing one end into the bracket on the Bottom Rail (2). Then, fasten it using bolts (C), spring washers (F), and washers (E). Tighten with the hex key (K).

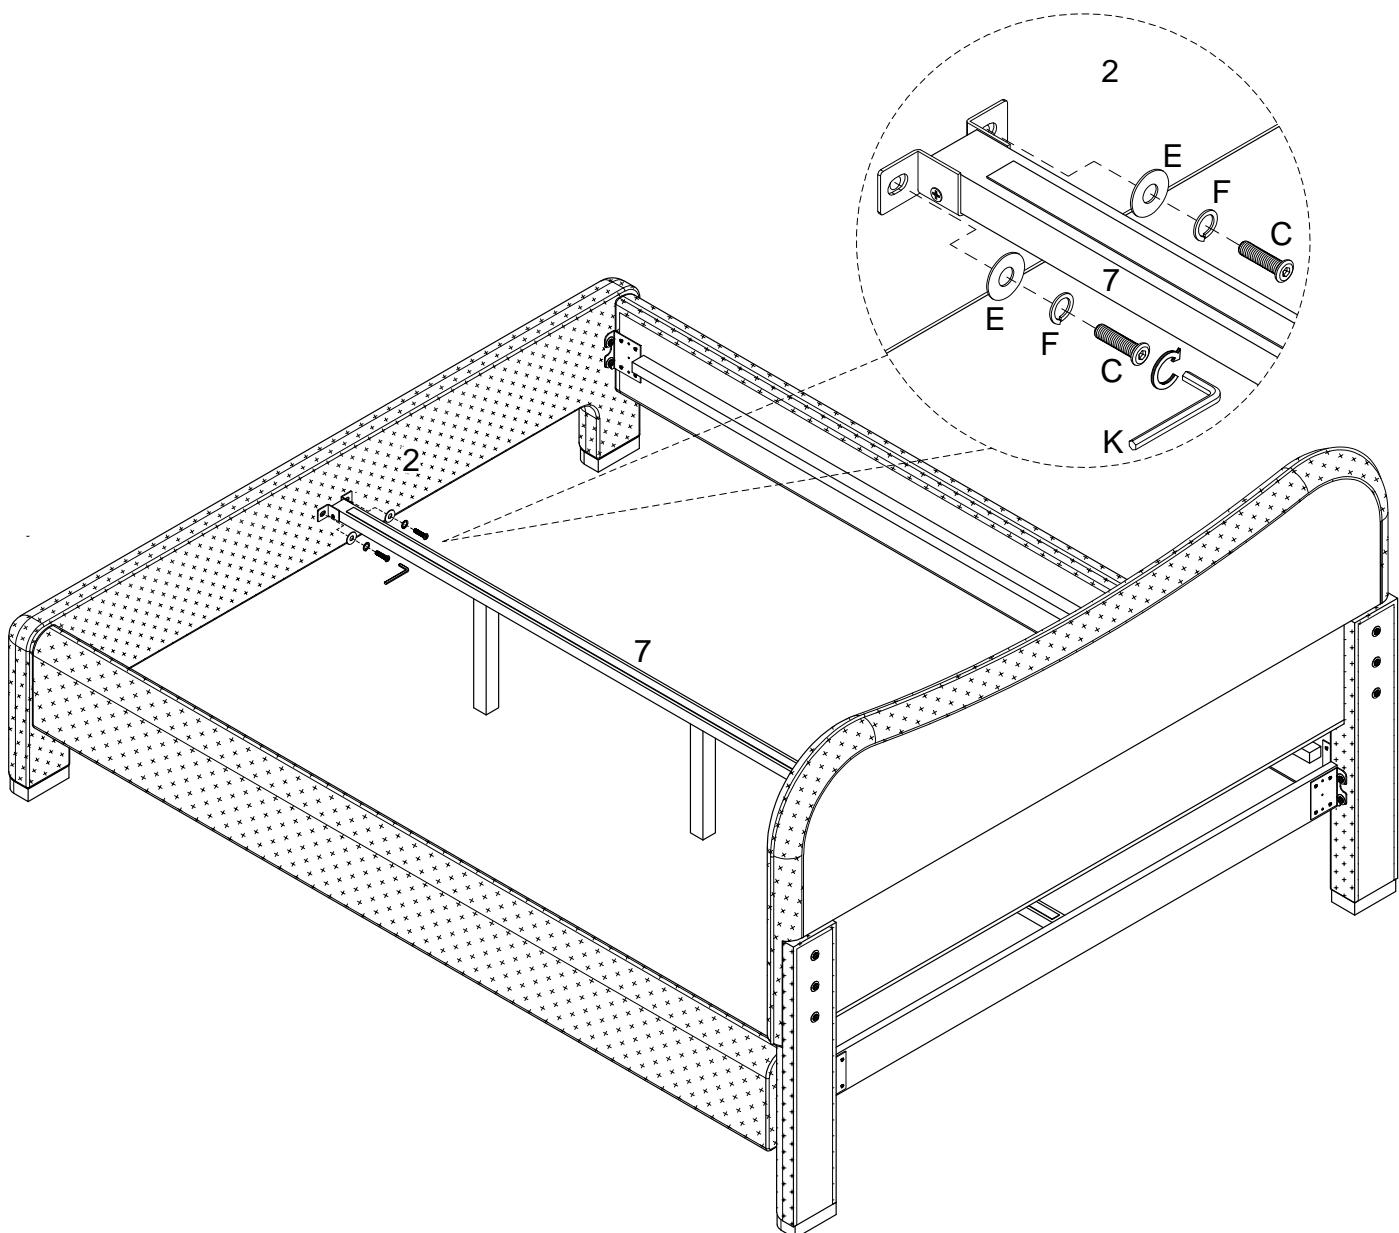


Step 10

Making sure the other end of the Center Support Rail (7) is in the bracket on the Middle Headboard Support Rail (4), fasten it in place using bolts (D), spring washers (F), and washers (E). Tighten with the hex key (K).

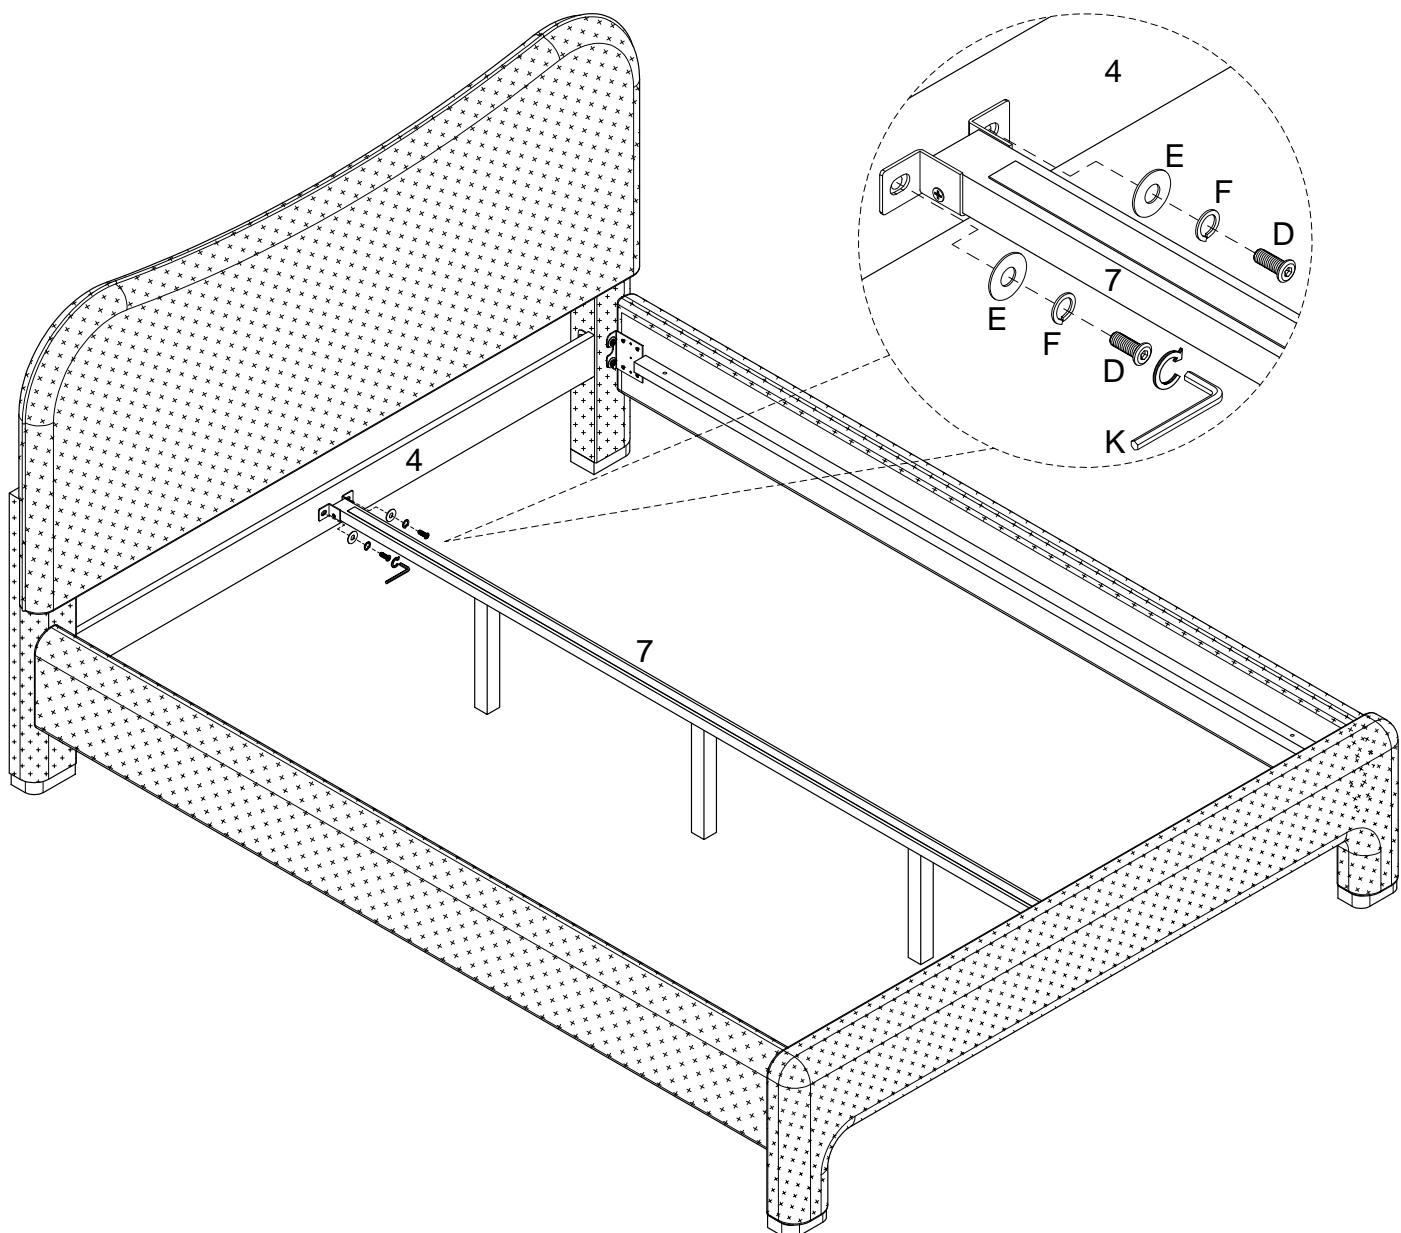


Step 11

Adjust the height of the adjustable feet to ensure the bed is level and stable.

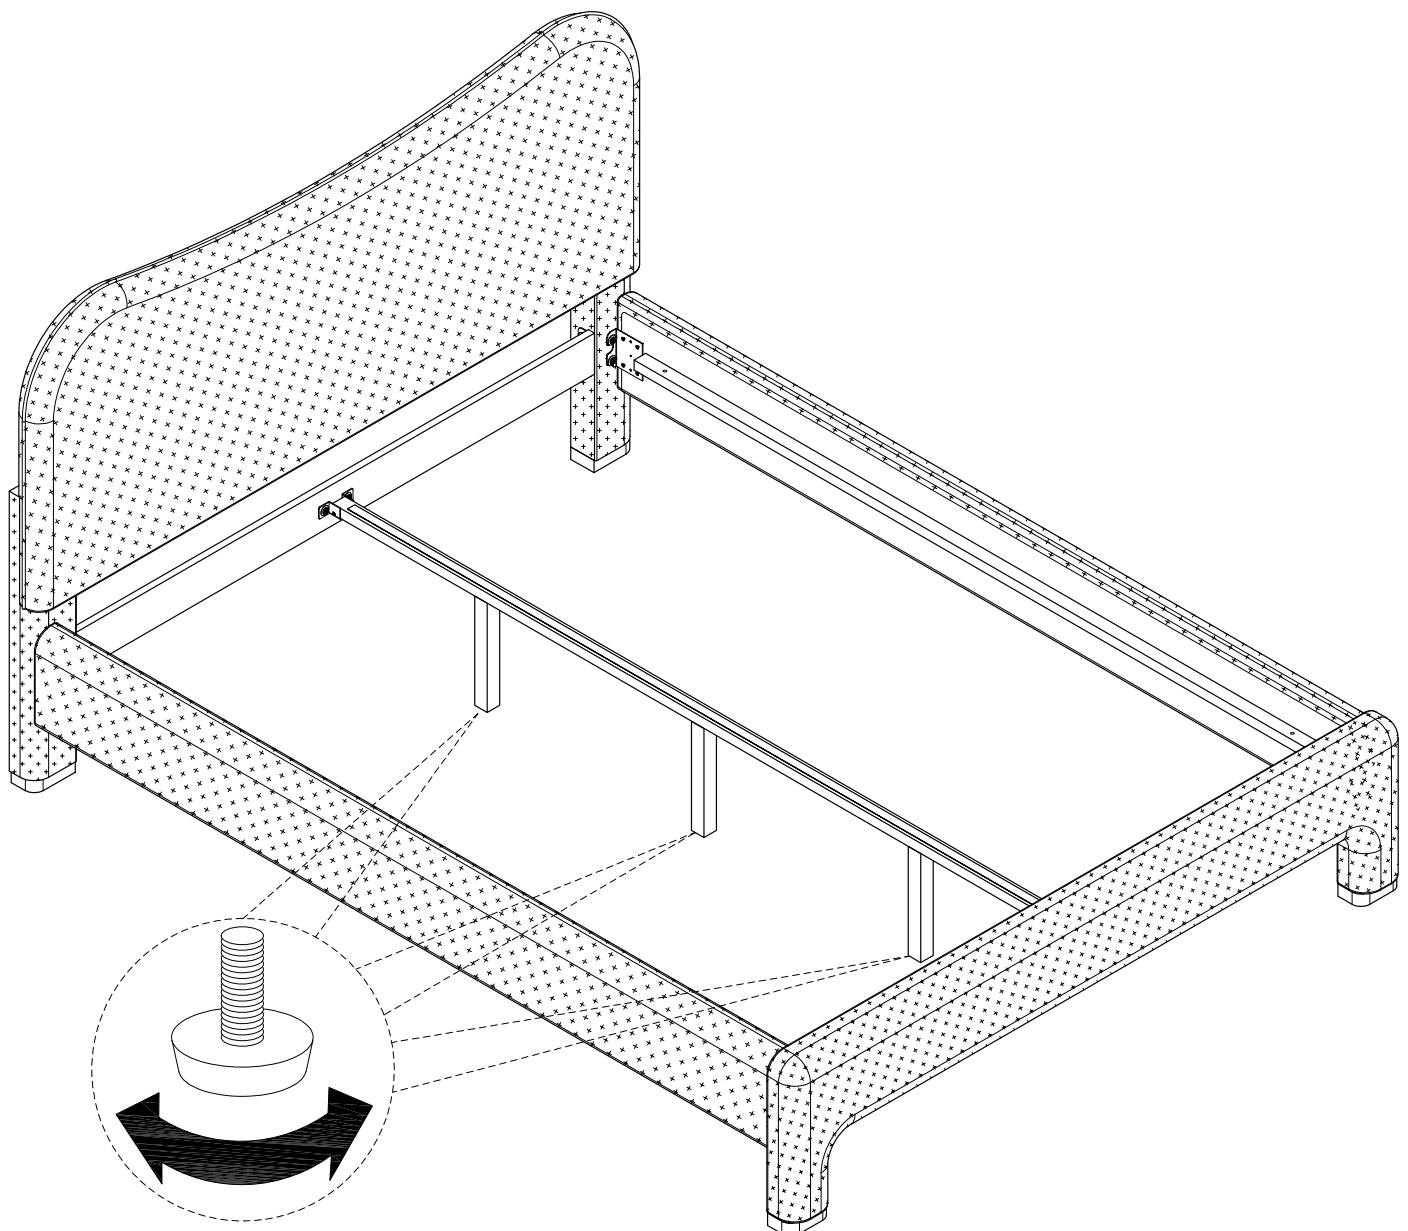


Step 12

Insert wooden dowels (H) into both ends of each Side Rail (3).

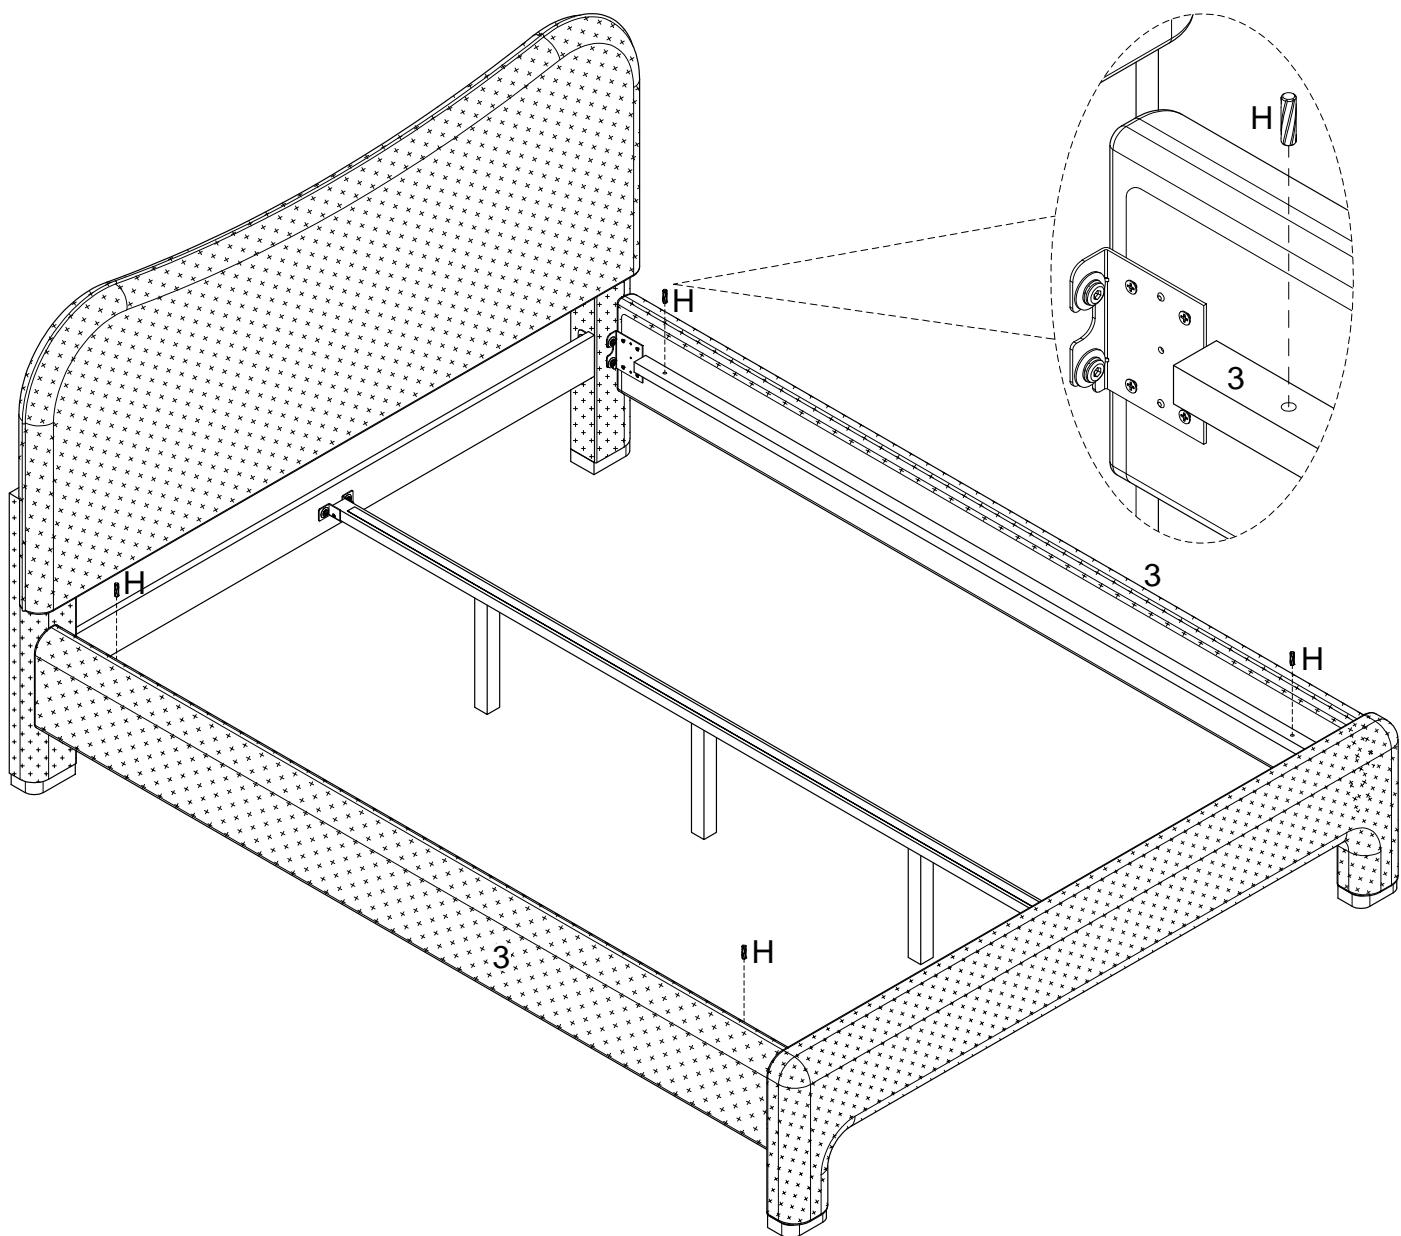


Step 13

Lay the Bed Slats (8) out and secure in place using the (G) screws and the provided screwdriver (L).

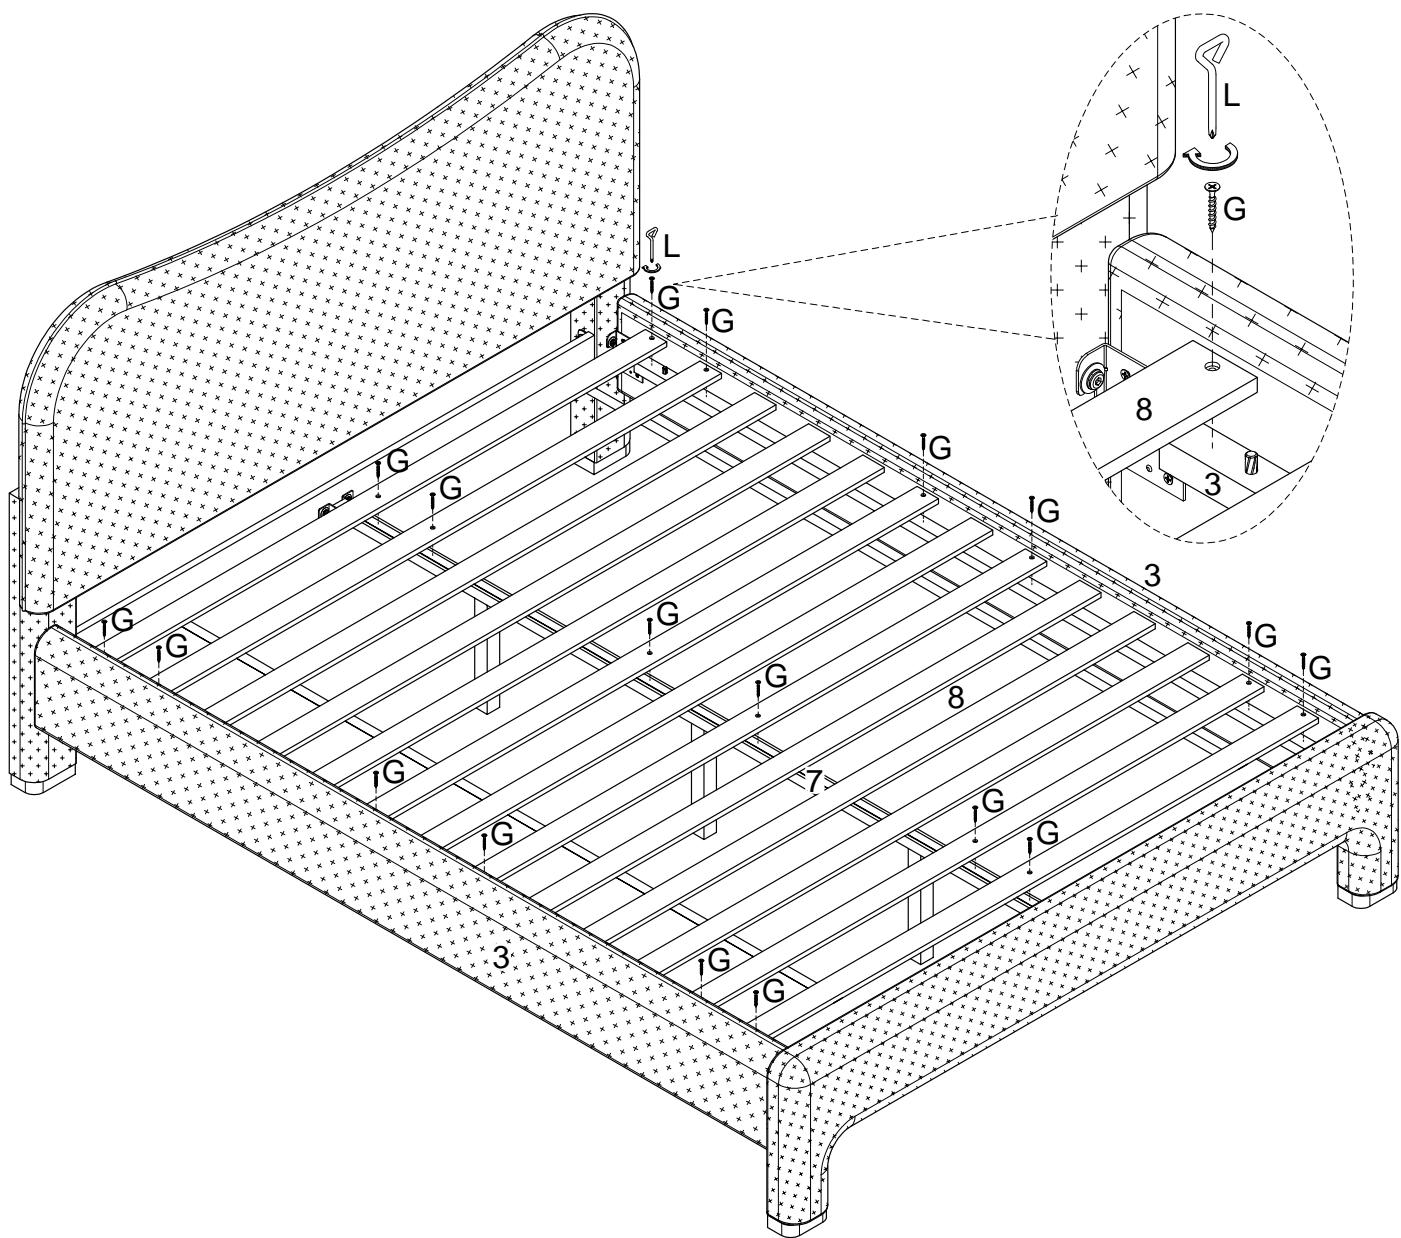

Final Assembly

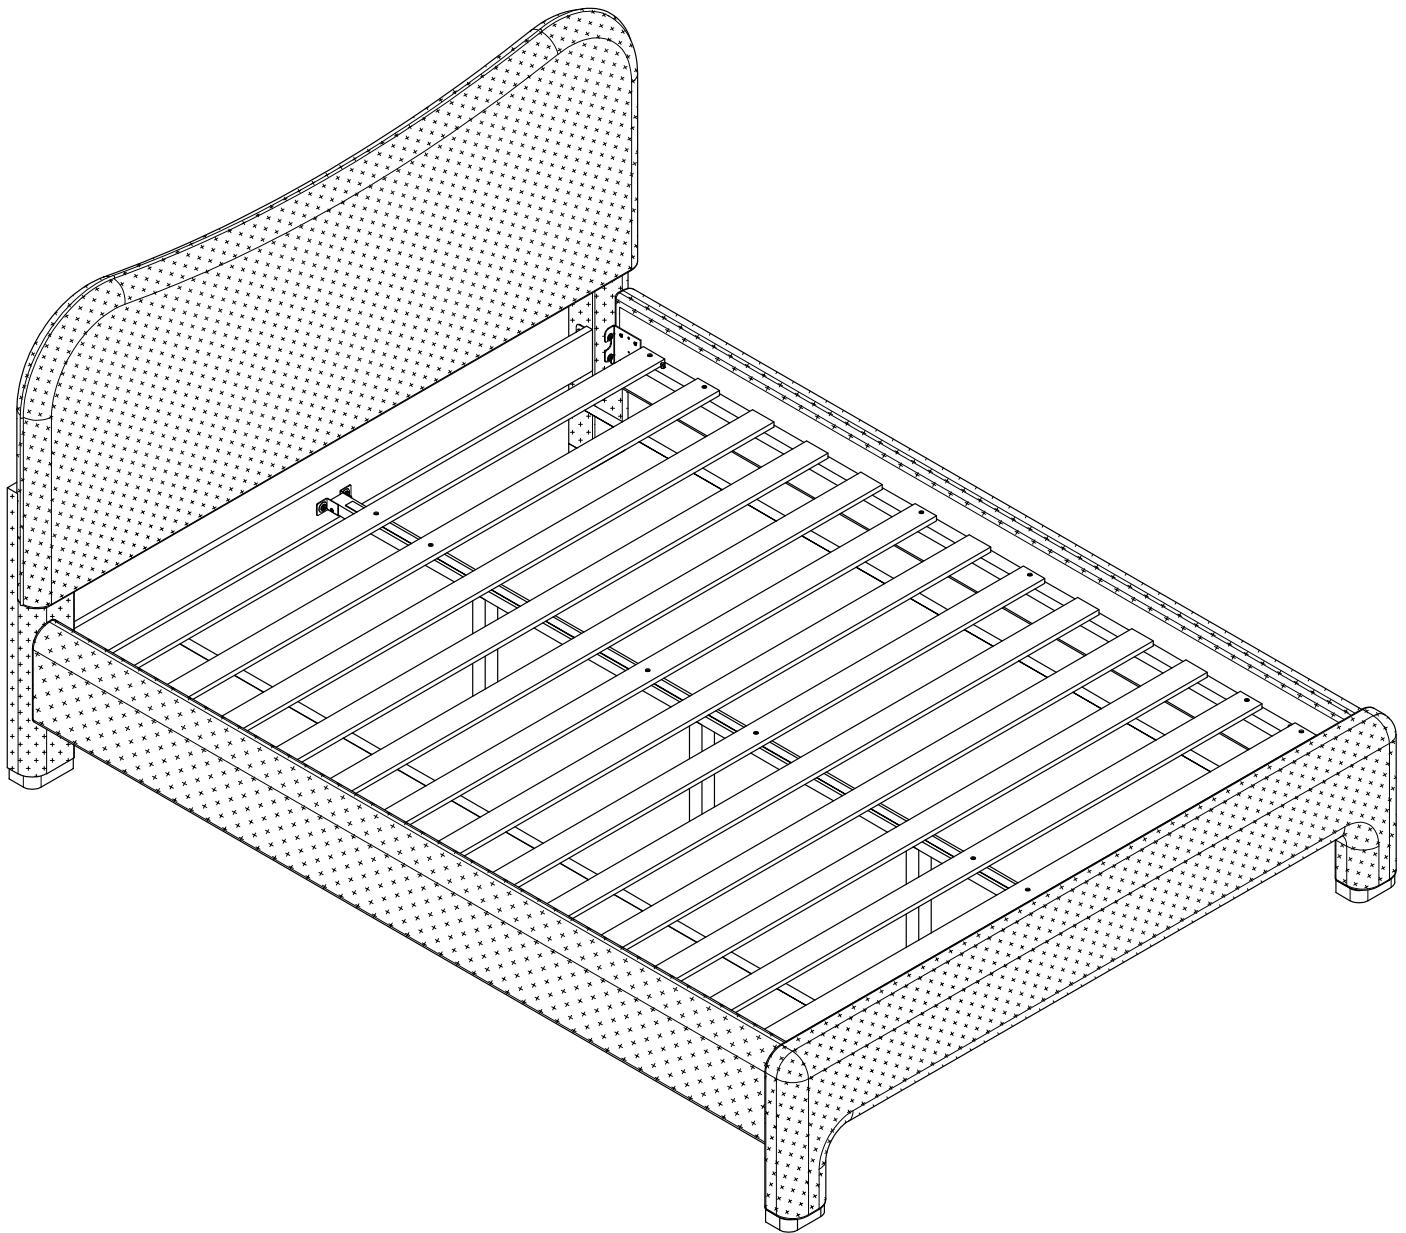

Congratulations on your new piece of furniture!

We would love to hear about it and see it.
Please leave us a review or post a picture with
#mywalkeredisonhome

Assembling furniture can be tricky sometimes.

Our customer service team, located in Utah, is here for product information, help assembling a product, or for any other customer support issue

Call us at **801-433-3008**

Email us at **service@walkeredison.com**

Visit our Customer Service website at

walkeredison.com/pages/customer-service

We are available to help Monday -Thursday 8am-5pm, Friday 8am-3pm MST

For details on Assembly Videos, Assembly Instructions, Replacement Parts, and Customer service,

SCAN HERE

