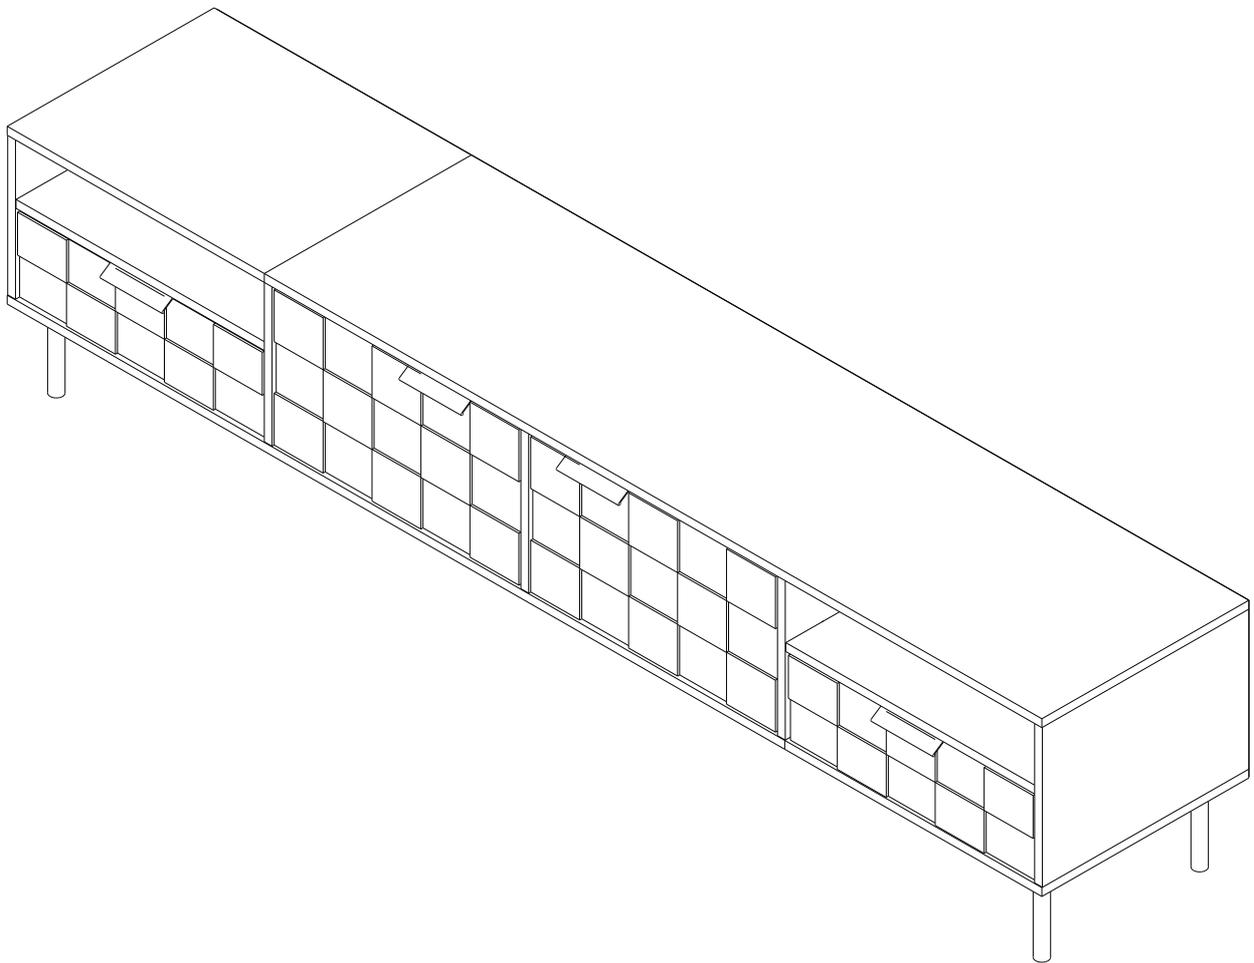
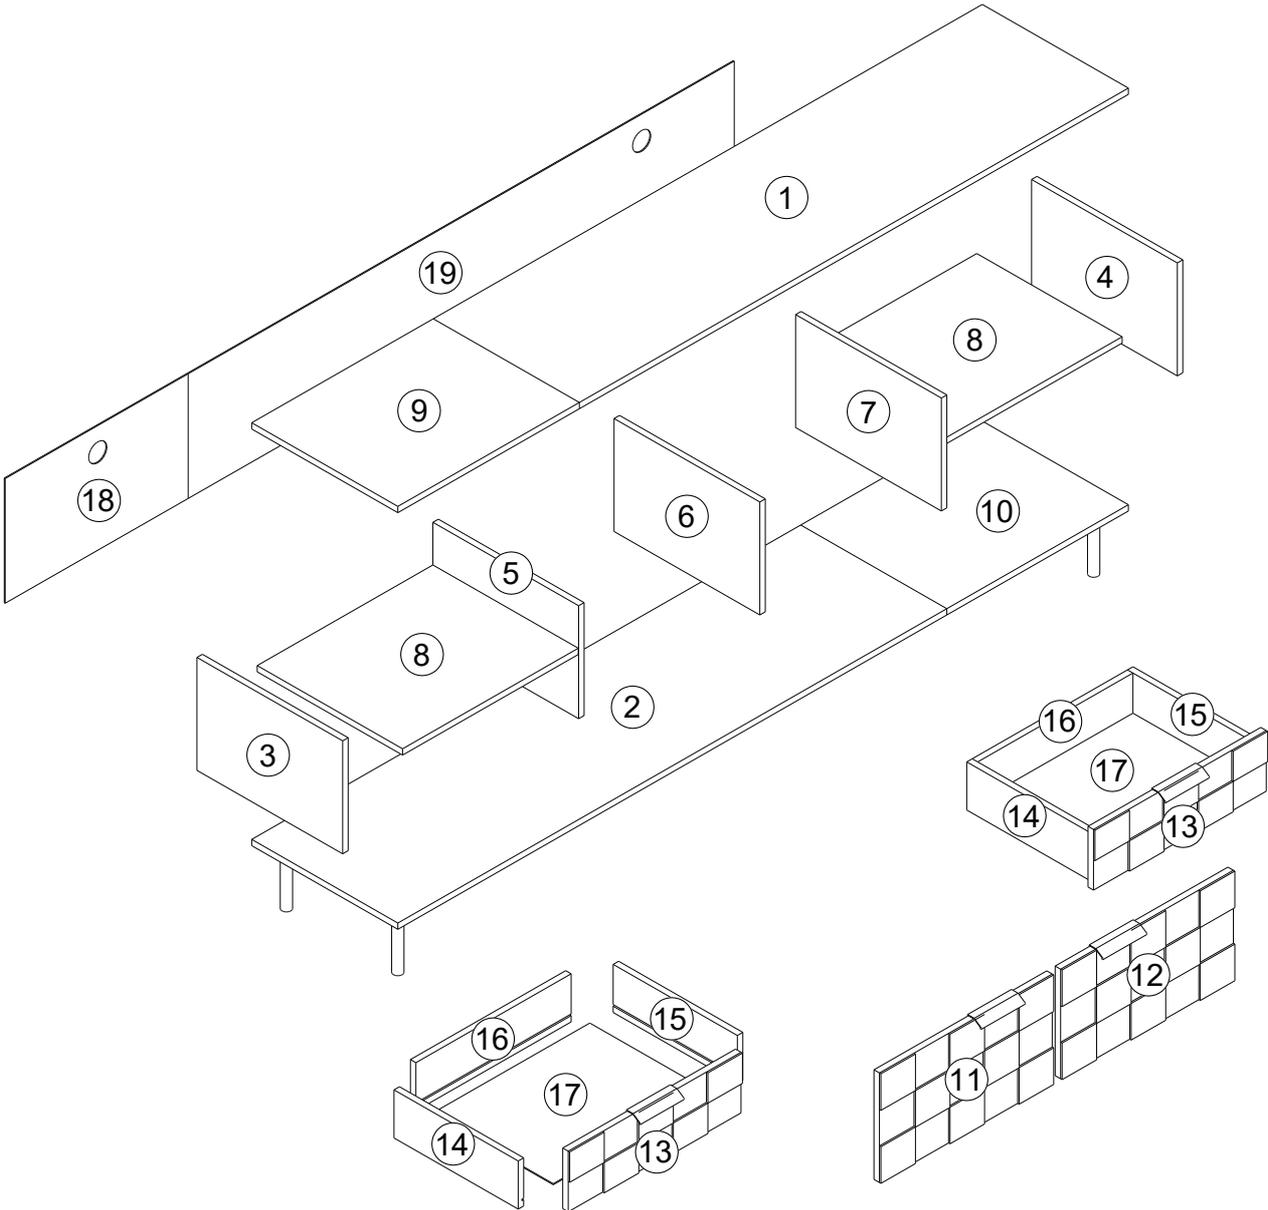


ASSEMBLY INSTRUCTIONS

SKU CODE: (N710P401530P)

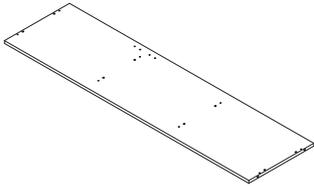
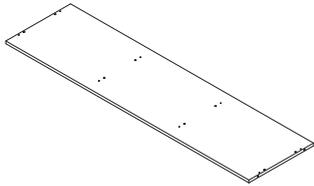
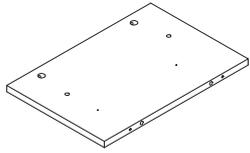
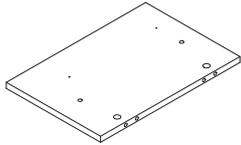
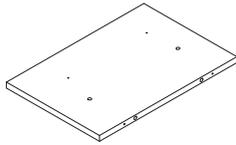
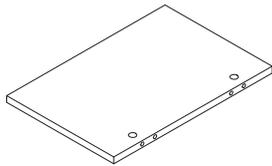
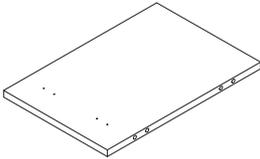
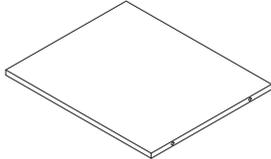
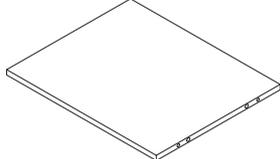
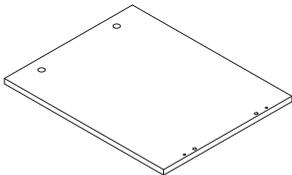
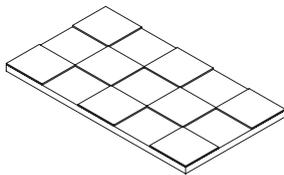
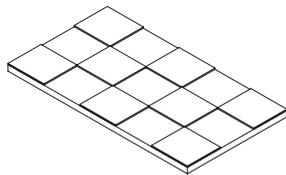
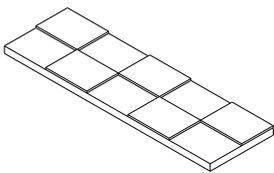
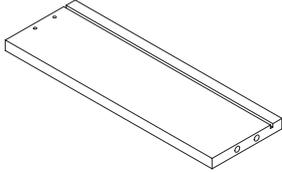
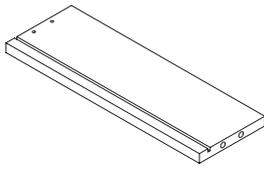
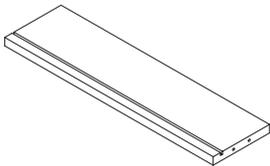
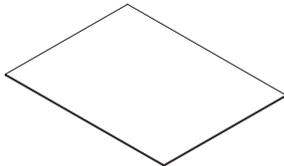
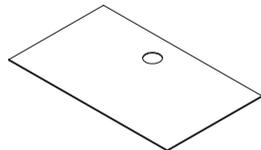
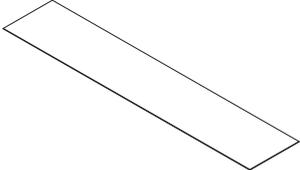


Detail View









Part List


N710P401530P

<p>1</p>  <p>Top Panel - 1 pc</p>	<p>2</p>  <p>Bottom Panel - 1 pc</p>	<p>3</p>  <p>Side Panel (Left) - 1 pc</p>
<p>4</p>  <p>Side Panel (Right) - 1 pc</p>	<p>5</p>  <p>Left Panel (Center) - 1 pc</p>	<p>6</p>  <p>Centre Panel - 1 pc</p>
<p>7</p>  <p>Right Panel (Center) - 1 pc</p>	<p>8</p>  <p>Shelf - 2 pcs</p>	<p>9</p>  <p>Top Panel (Left) - 1 pc</p>
<p>10</p>  <p>Horizontal Panel (Bottom) - 1 pc</p>	<p>11</p>  <p>Door Panel (Left) - 1 pc</p>	<p>12</p>  <p>Door Panel (Center) - 1 pc</p>
<p>13</p>  <p>Front Panel Drawer - 2 pcs</p>	<p>14</p>  <p>Left Panel Drawer - 2 pcs</p>	<p>15</p>  <p>Right Panel Drawer - 2 pcs</p>
<p>16</p>  <p>Back Panel Drawer - 2 pcs</p>	<p>17</p>  <p>Bottom Panel Drawer - 2 pcs</p>	<p>18</p>  <p>Back Panel (Left) - 1 pc</p>
<p>19</p>  <p>Back Panel (Right) - 1 pc</p>		

Hardware List N710P401530P

A  Ø8*50mm	B  Ø8*30mm	C 
Wood Dowel (4 pcs)	Wood Dowel (32 pcs)	Cam Bolt (18 pcs)
D 	E  Ø4 x 45mm	F  Ø4*38mm
Cam Nut (18 pcs)	Chip Board Screw (10 pcs)	Chip Board Screw (8 pcs)
G  Ø3.5 x 16mm	H  14" (T1.1)	I  150 X 25mm
Chip Board Screw (86 pcs)	Drawer Slide (Black) (2 sets)	Metal Leg (7 pcs)
J 	K  7/8"	L 
PVC Handle AC110 (Black)(4 pcs)	Hydraulic Hinges (4 pcs)	PVC Door Stopper (2 pcs)
M  75 X 40 X 2mm	N  3/4"	
Metal Plate (2 pcs)	Nails (56 pcs)	


ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)



PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

A	B	C	L	G
				
4 PCS	8 PCS	14 PCS	2 PCS	2 PCS

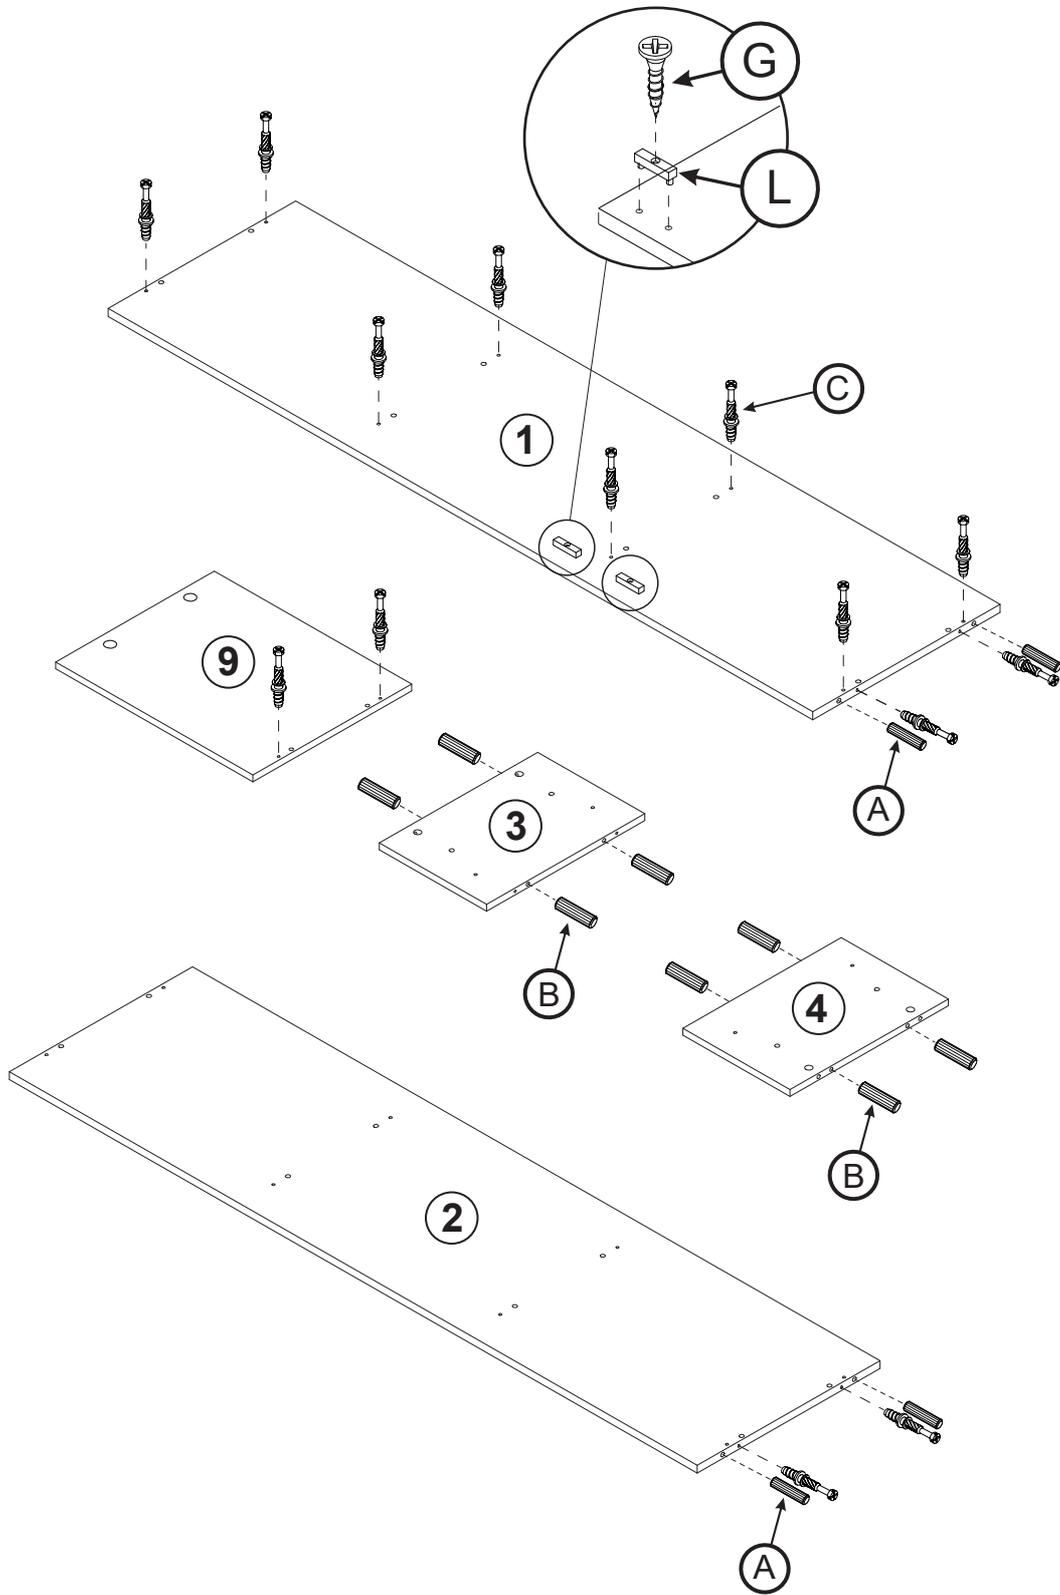


STEP 2:

B




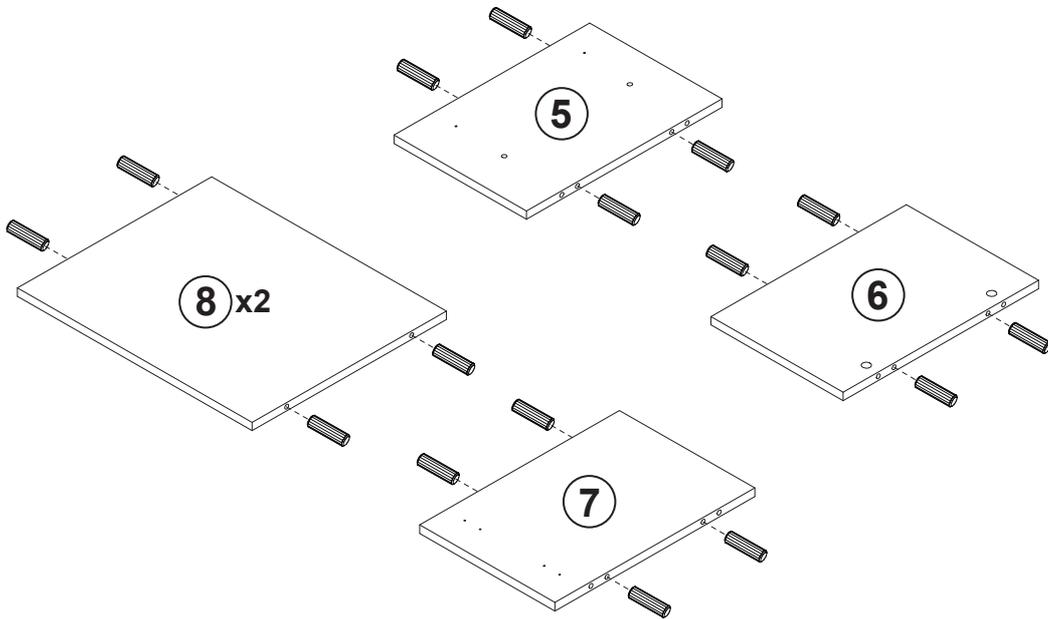20 PCS



STEP 3:

H









2 SETS


G



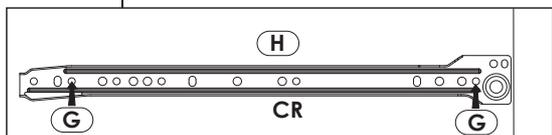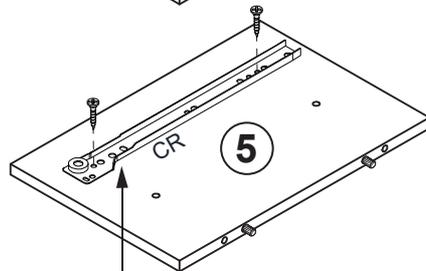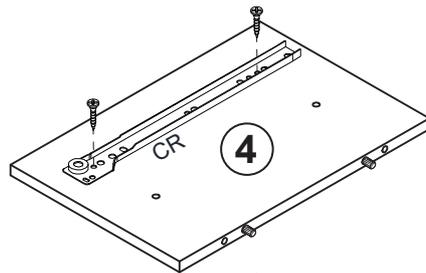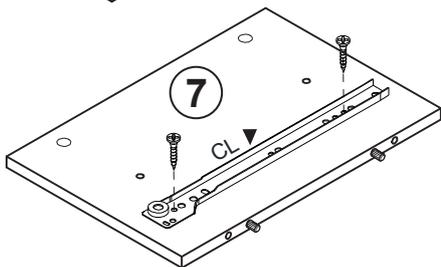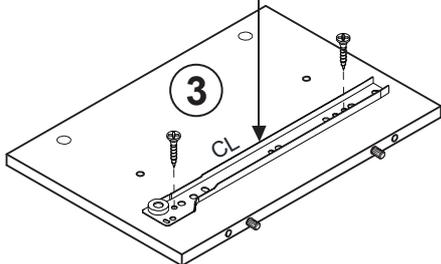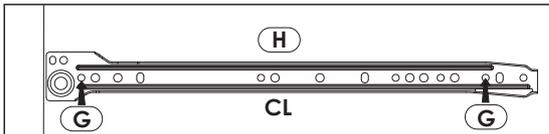8 PCS



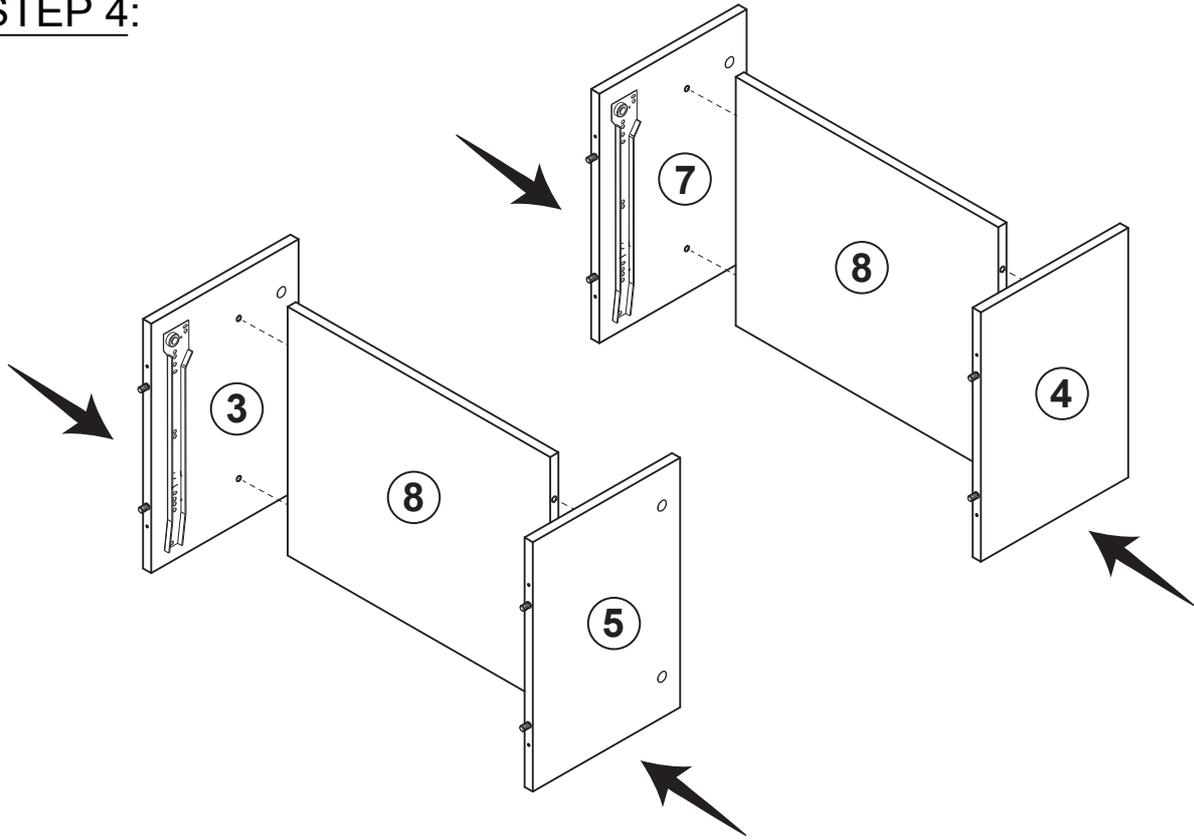STEP 4:





STEP 5:


D



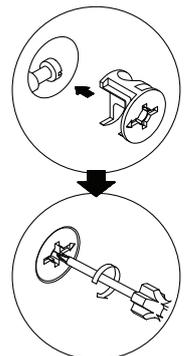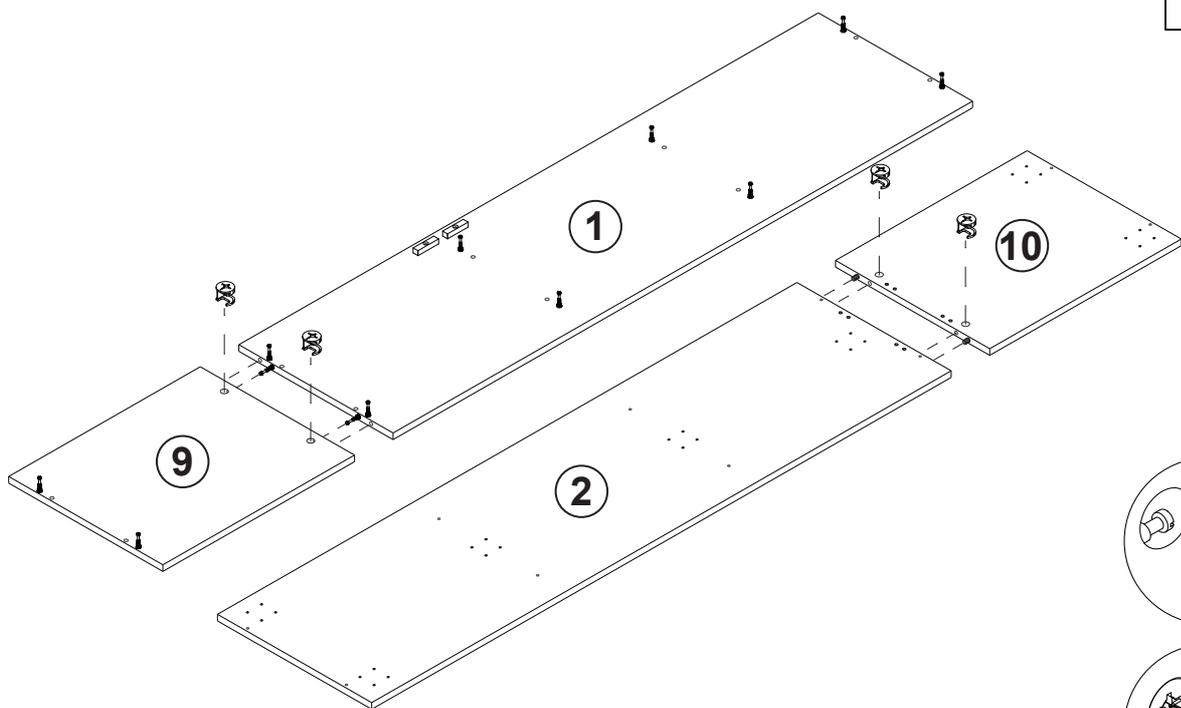4 PCS



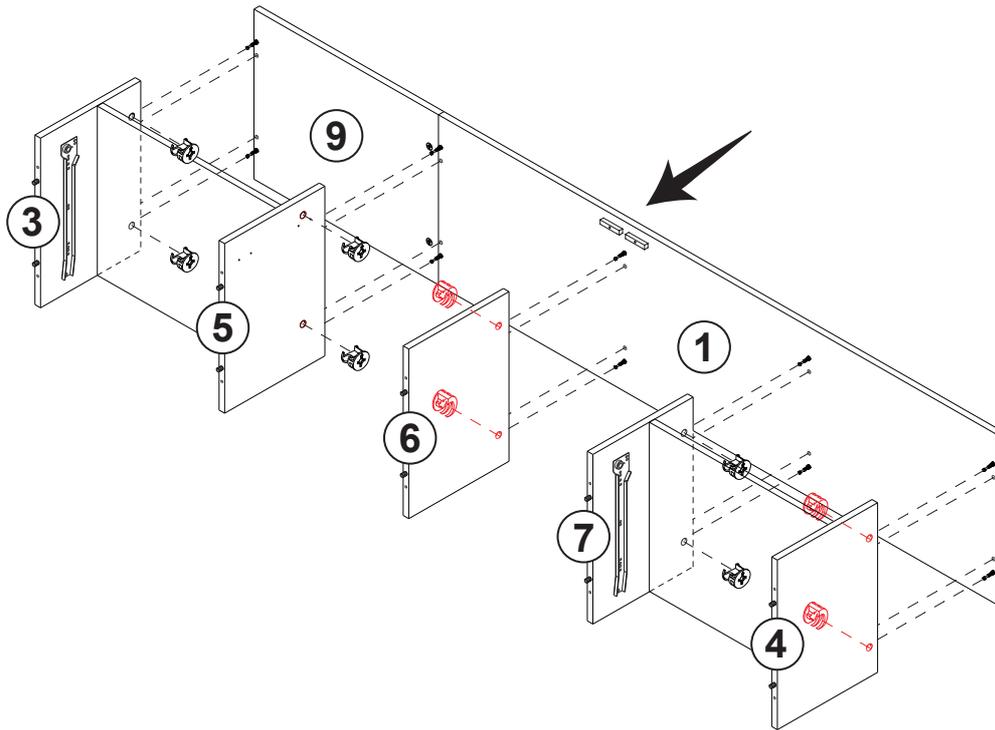
STEP 6:




D



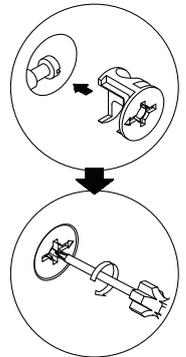
10 PCS



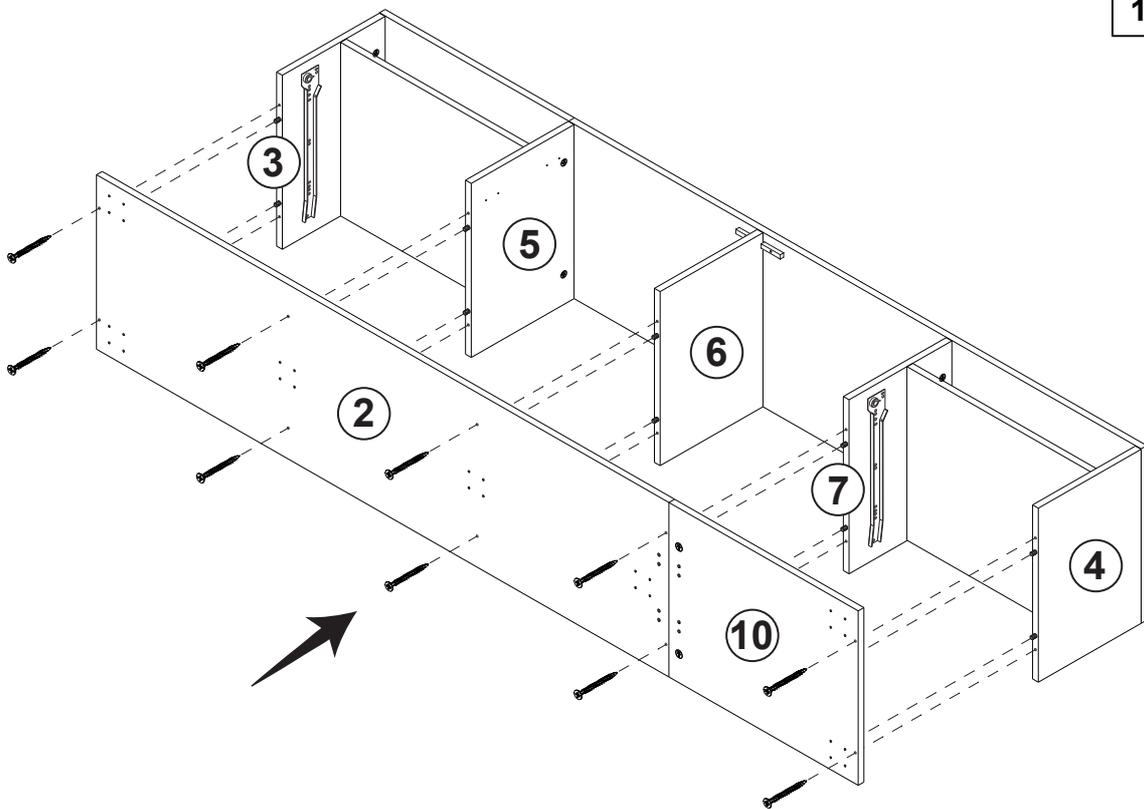STEP 7:





E



10 PCS


STEP 8:

N

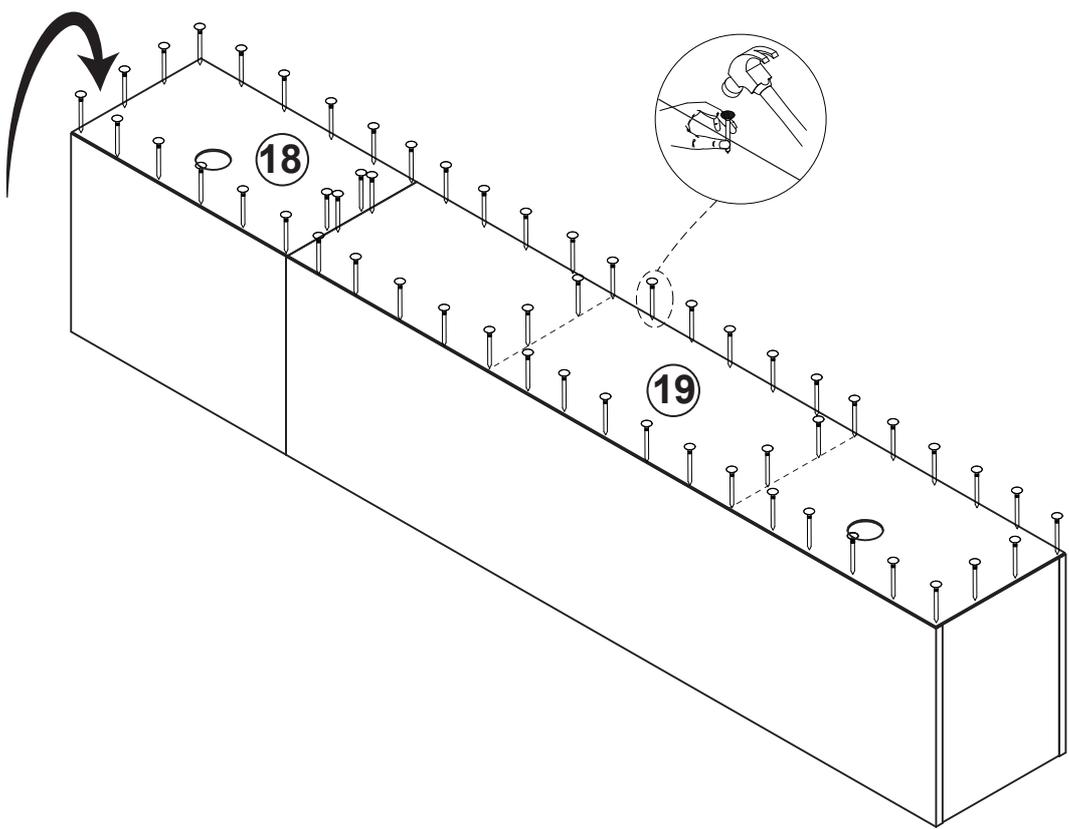56 PCS



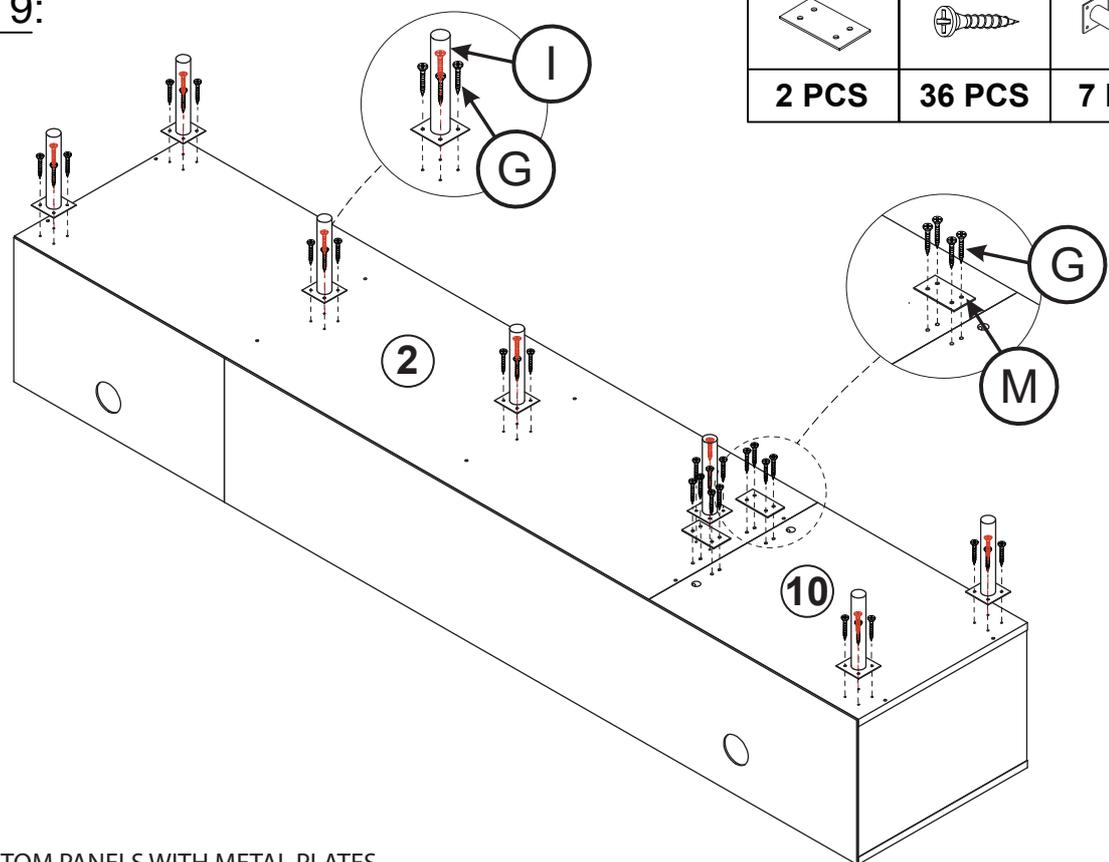STEP 9:


M	G	I
		
2 PCS	36 PCS	7 PCS




REMARK!
SECURE BOTTOM PANELS WITH METAL PLATES


STEP 10:

G	K
	
8 PCS	4 PCS

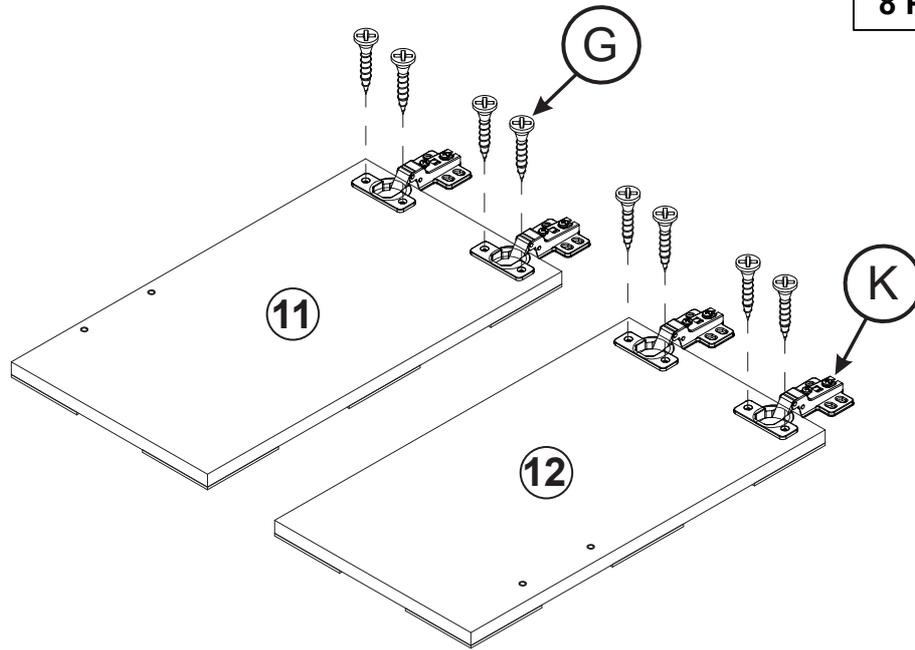


STEP 11:

J	G
	
2 PCS	20 PCS

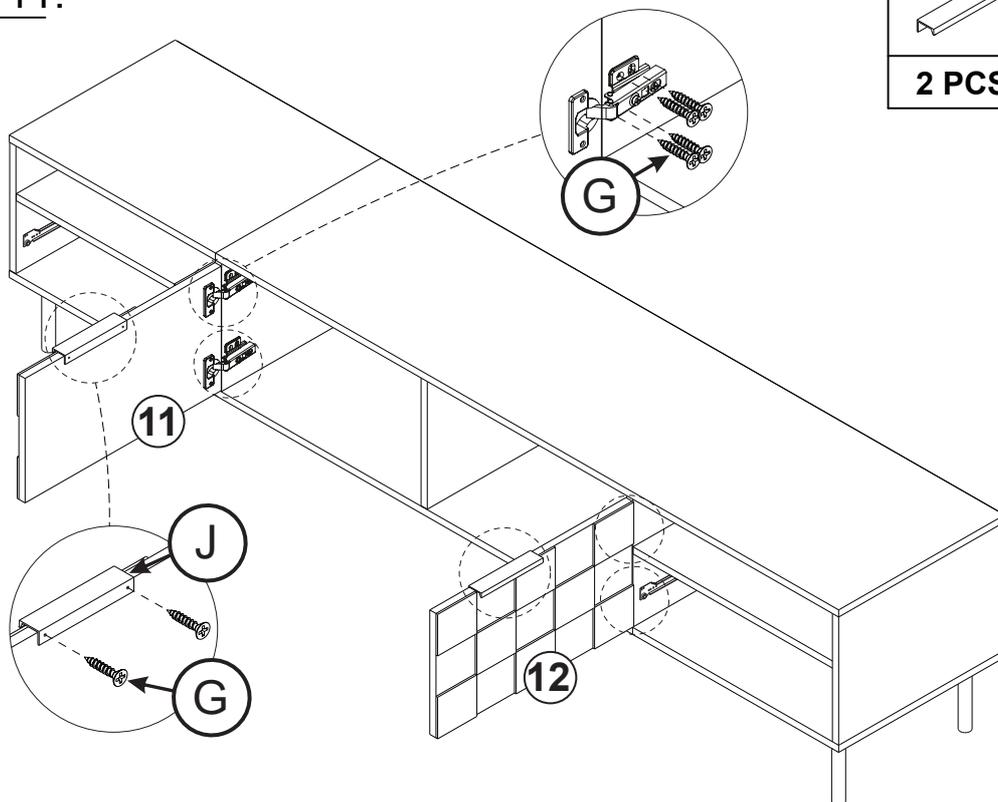

STEP 12:

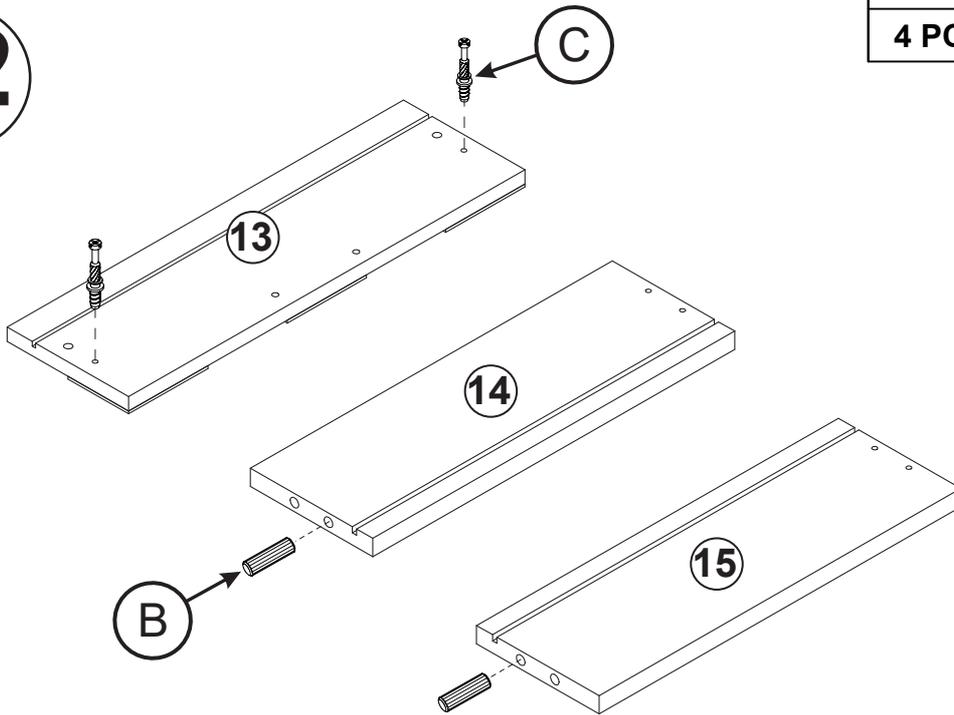
x2



C		B	
4 PCS		4 PCS	

STEP 13:

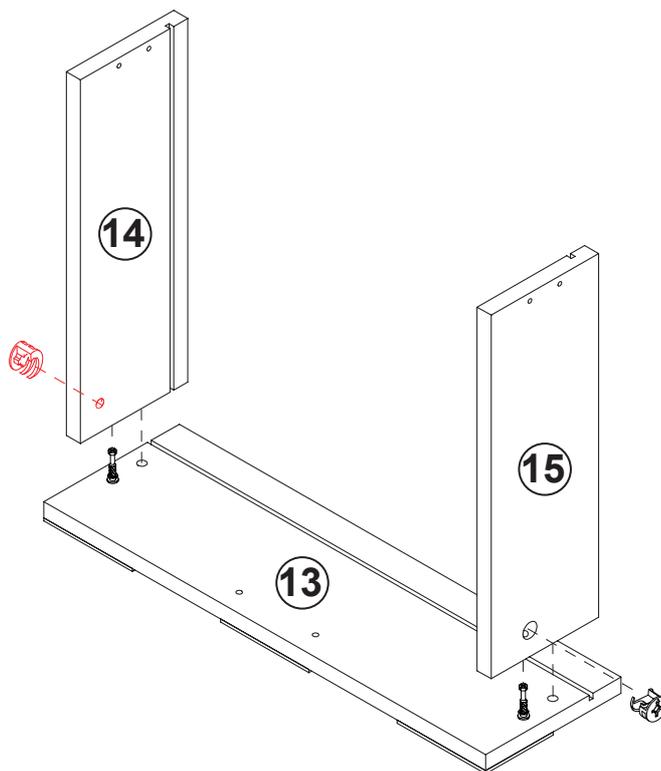x2




D	
4 PCS	

REMARK!
TIGHTEN BOTH SIDES


STEP 14:

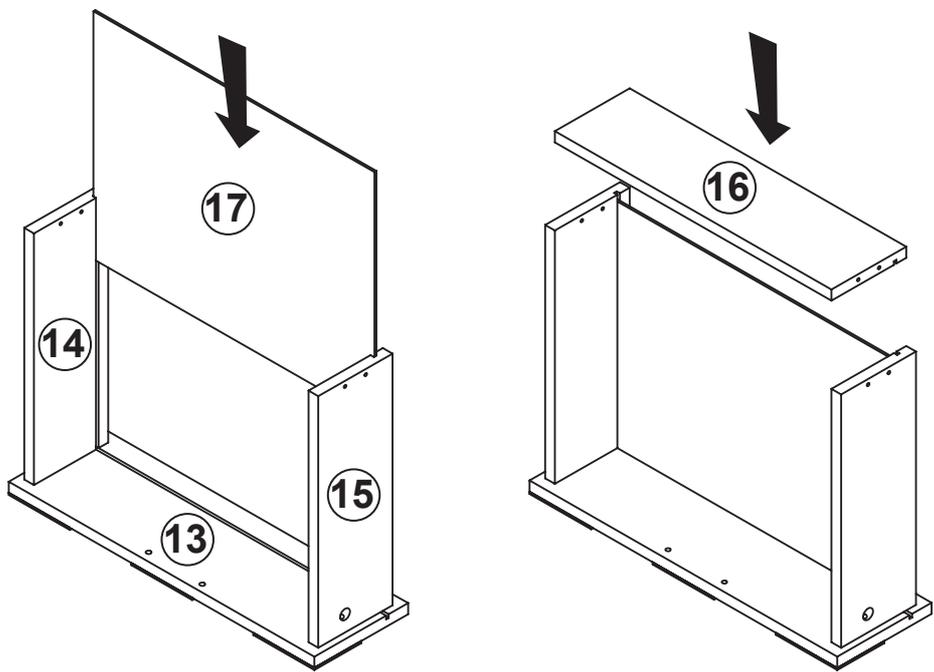x2




STEP 15:

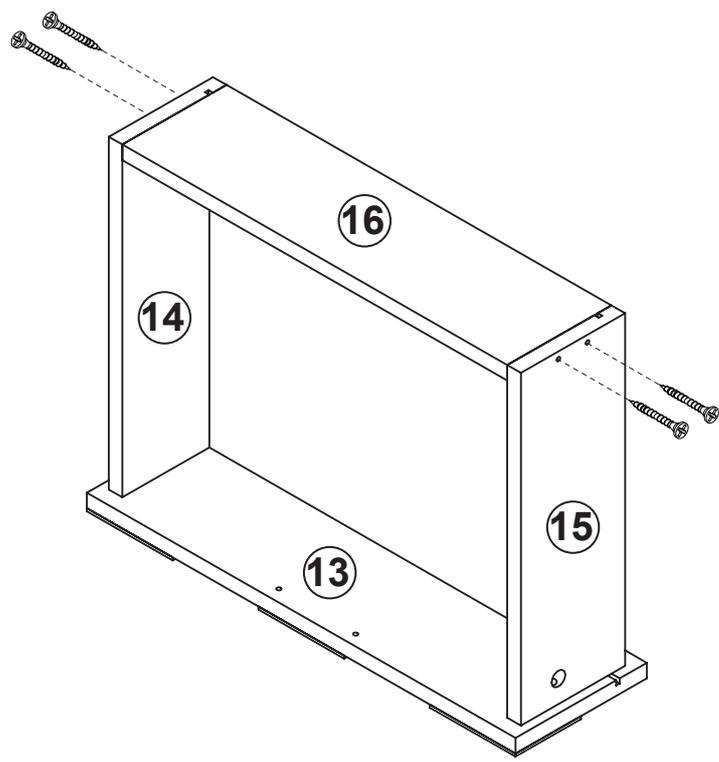x2




F



8 PCS


STEP 16:

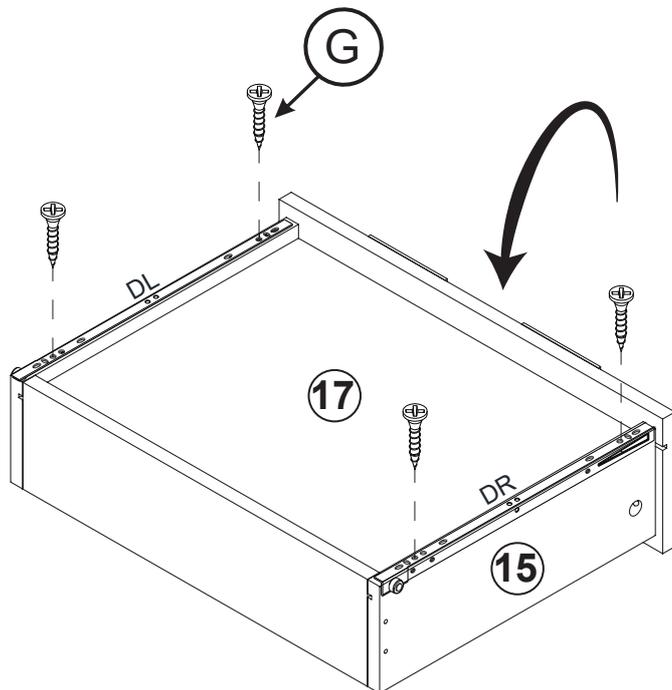x2



H	G
2 SETS	8 PCS

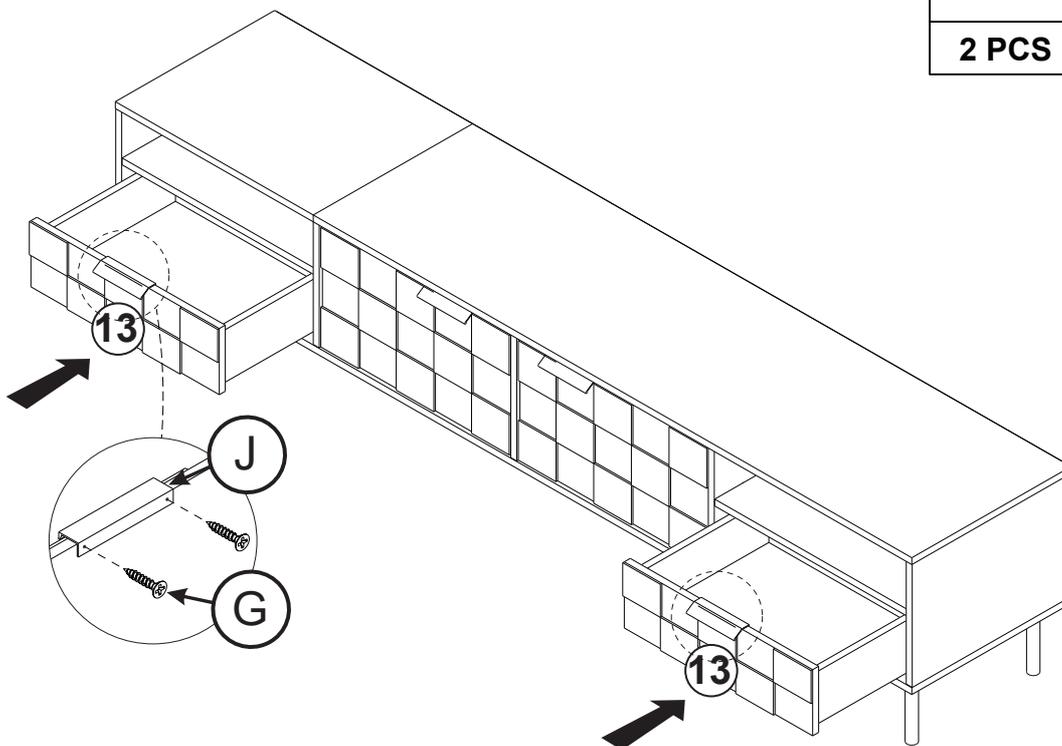STEP 17:



J	G
2 PCS	4 PCS

REMARK!
PLACE ON THE CENTRE OF PANELS

STEP 18:

