


Let's build the

# Keith Nightstand

SKU 32620

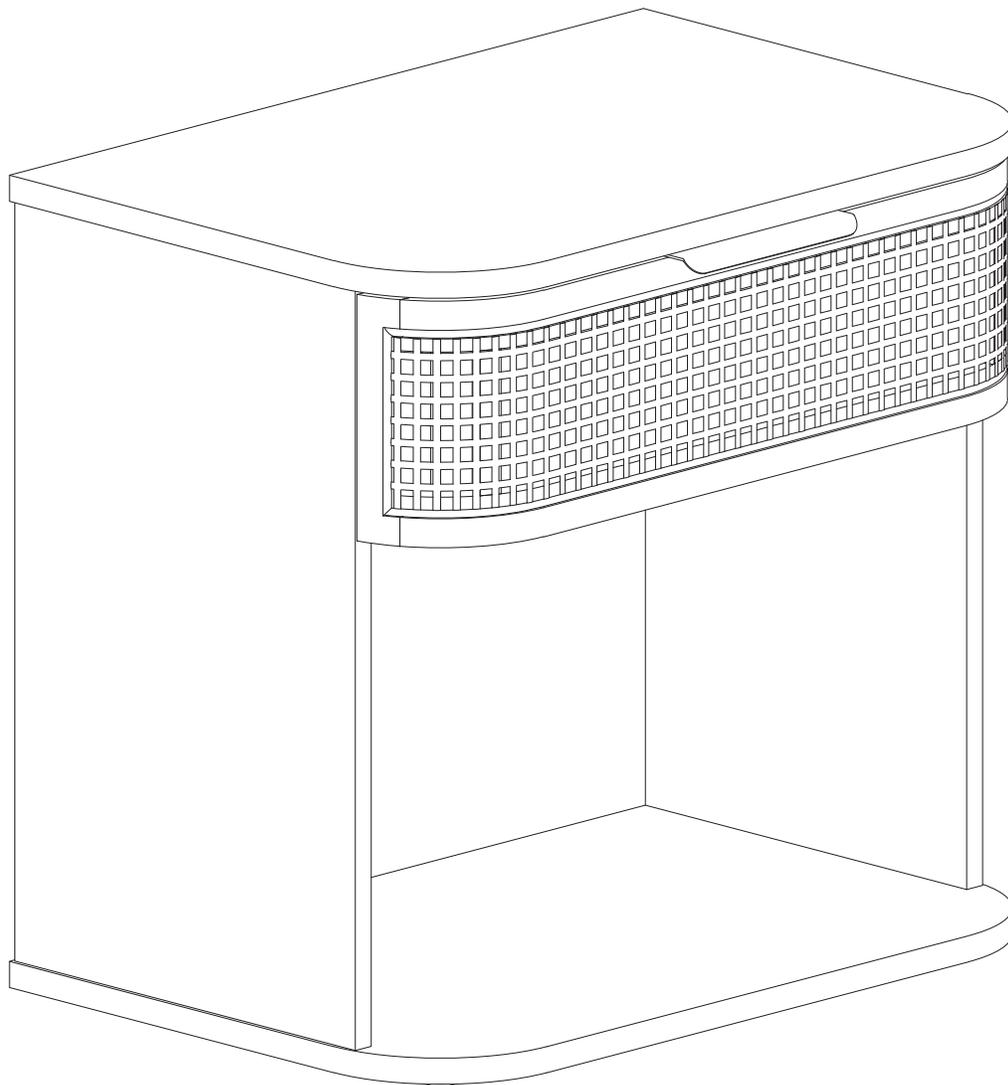

**Scan me!**

Free Lifetime  
Guarantee

 **nathan james**

25-1210-VN

# Ok, let's get rolling

This should be easy, just follow our instructions and you will be back to Netflix in no time.

## Estimated time for assembly



45:00


## What you need

- Some of your favourite bubbly or your preferred relaxant
- Use the packaging carton as a working surface to prevent product damage during assembly
- Phillips-head screwdriver

Do not use a drill



## Weight Limitation

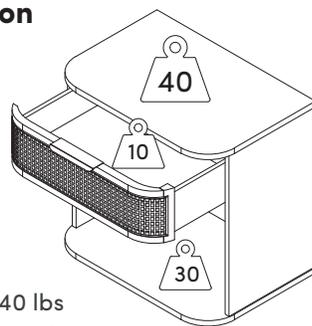

Top Max. Capacity: 40 lbs

Top Drawer Max. Capacity: 10 lbs.

Bottom Max. Capacity: 30 lbs.

Toll-free at 1-866-619-1004

Help@nathanjames.com

Nathanjames.com/help

## What's included


Description	Qty
A Top Panel	1
B Side Panel (Right)	1
C Side Panel (Left)	1
D Back Panel (Top)	1
E Back Panel (Bottom)	1
F Bottom Panel	1
G Drawer Panel (Front)	1
H Drawer Panel (Side - Right)	1
I Drawer Panel (Side - Left)	1
J Drawer Panel (Bottom)	1
K Drawer Panel (Back)	1

Scan me!

Free Lifetime  
Guarantee



# The goods

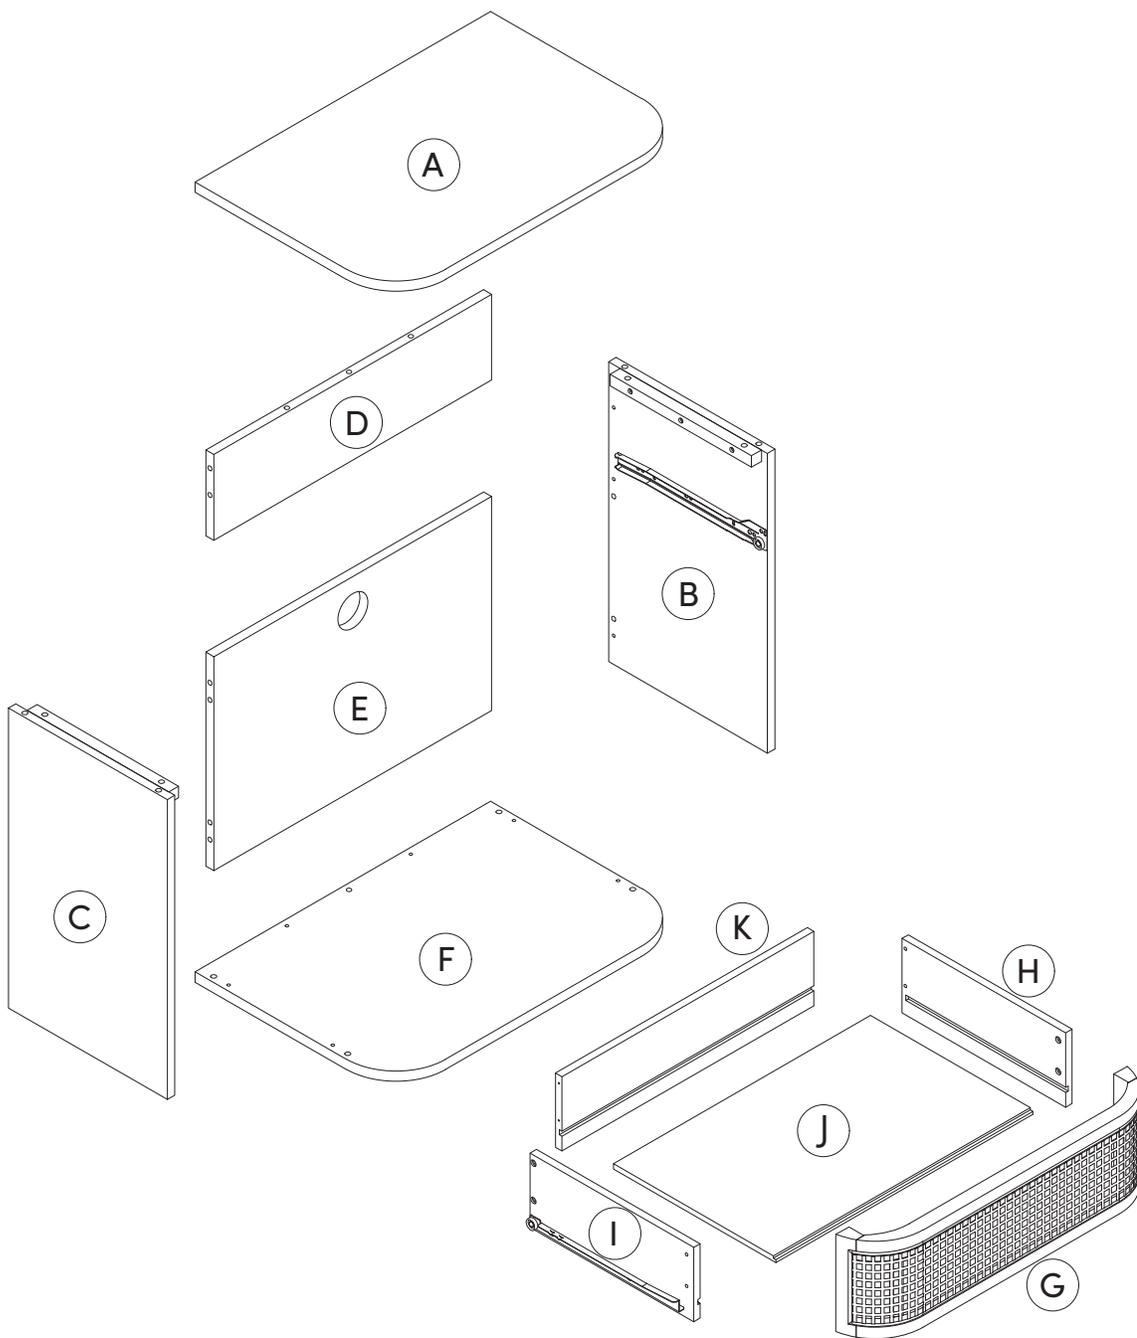


## IMPORTANT

1. Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
2. Do not over tighten screws and bolts to avoid stripping.
3. Please use hand tools to assemble this product. Do not use power tools.

# What's included

Description		Qty
1	Handle	1
2	Ø8 x 30mm Wooden Dowel (Extra 2pcs)	18
3	Cam Bolt (Extra 1pc)	11
4	Cam Lock (Extra 1pc)	11
5	Ø1/4" x 32mm Hex Button Head Bolt	4
6	Ø1/4" x 10mm Spring Washer	4
7	Ø1/4" x 13mm Flat Washer	4
8	M3.5 x 15mm Screw	3
9	M4 x 25mm Screw	8
10	M4 x 40mm Screw	4
11	Plastic Nailhead Feet (extra)	2
12	Allen Key	1

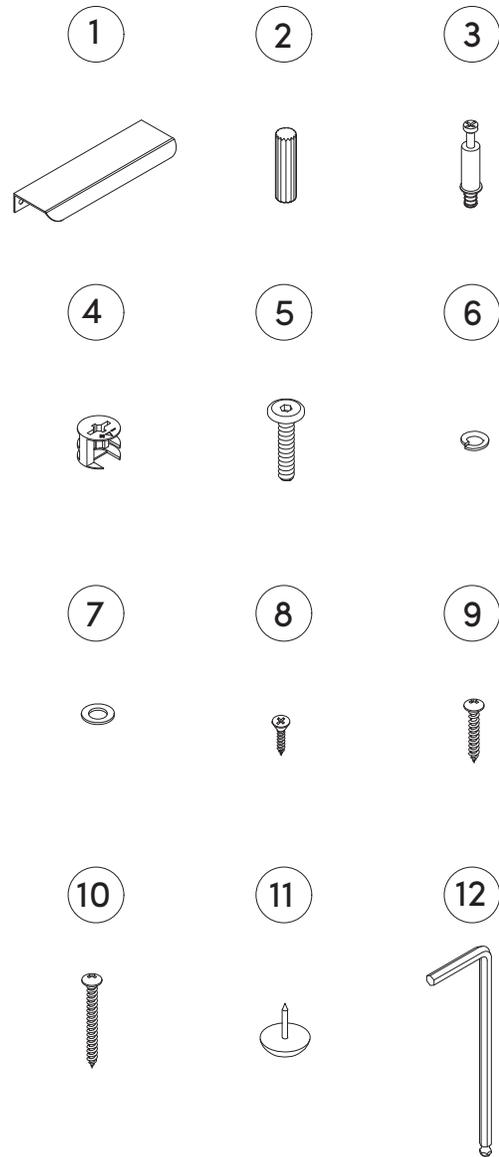


# How to use cam locks

## Did you know?

Cam locks are used to join two panels together, usually the edge of one to the flat side of another.


First, your cam bolt (or cam pin) will need to be properly inserted into the flat side of the board.

**Important Note:** Only tighten the cam bolt until it is secure. Do not over-tighten.

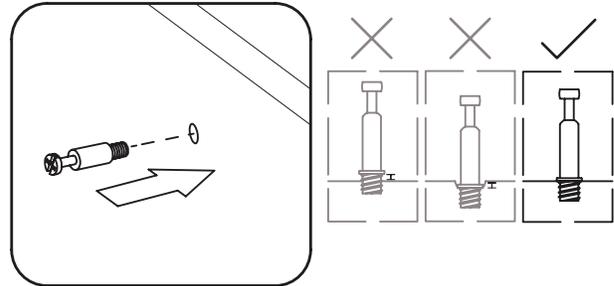


Next, you will fit the proper hole on the edge of the associated joining panel over the cam bolt.

**Important Note:** When installed properly, the head of the cam bolt will be visible through the larger hole on the side of the joining panel.

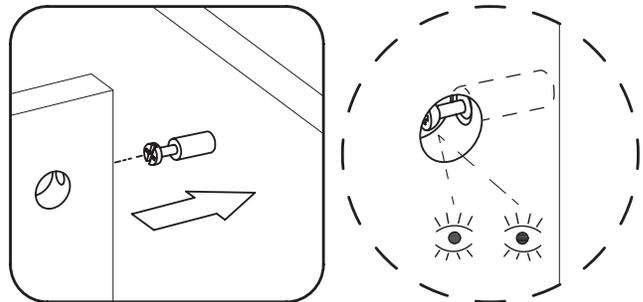


Next, you will notice the cam lock has a “C” shaped back. Commonly, an arrow on the front of the cam lock points in the same direction as the open section on back.

Using these as your cue, insert the cam lock into the large hole so the opening of the “C” fits over the head of the cam bolt.

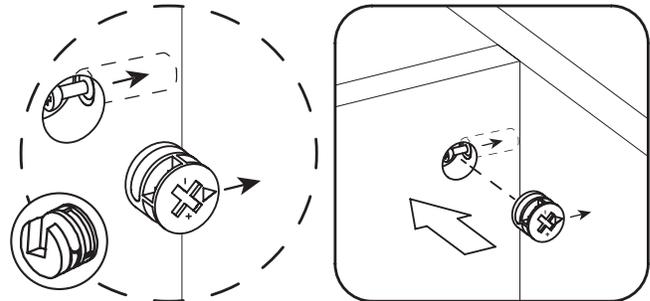

Using a screwdriver, you will turn the cam lock until it stops, usually at 90° or 180°. You will feel the panels pulling closer until they are secured.

**Important Note:** Only turn the cam lock until the panels are fully engaged & feel secure. Turning too far may lead to hardware failure.

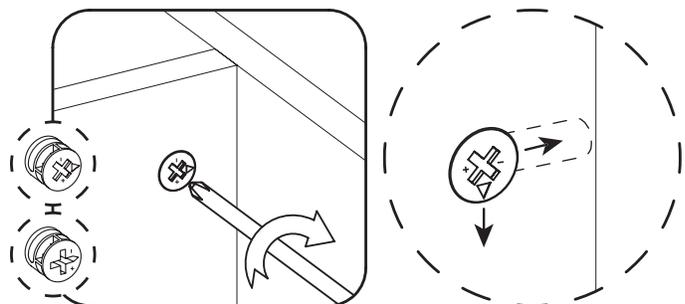

## Still having issues?

**If a cam lock seems to be spinning in place or is not “catching” or pulling the panels together as expected,** first remove the cam lock & try again while making sure that everything is properly positioned & oriented.

**If you are still having issues getting things working as expected,** first remove the cam lock, then unscrew the cam bolt slightly (less than 1 complete turn) to see if that helps with the alignment of the cam lock & bolt.

# Step 1


Lay down packaging or use an area rug as a soft working surface and let's get started!

Screw the Cam Bolts (3) into the Top Panel (A), the Bottom Panel (F), the Side Panel (Right) (B), the Side Panel (Left) (C).

3



x10pcs

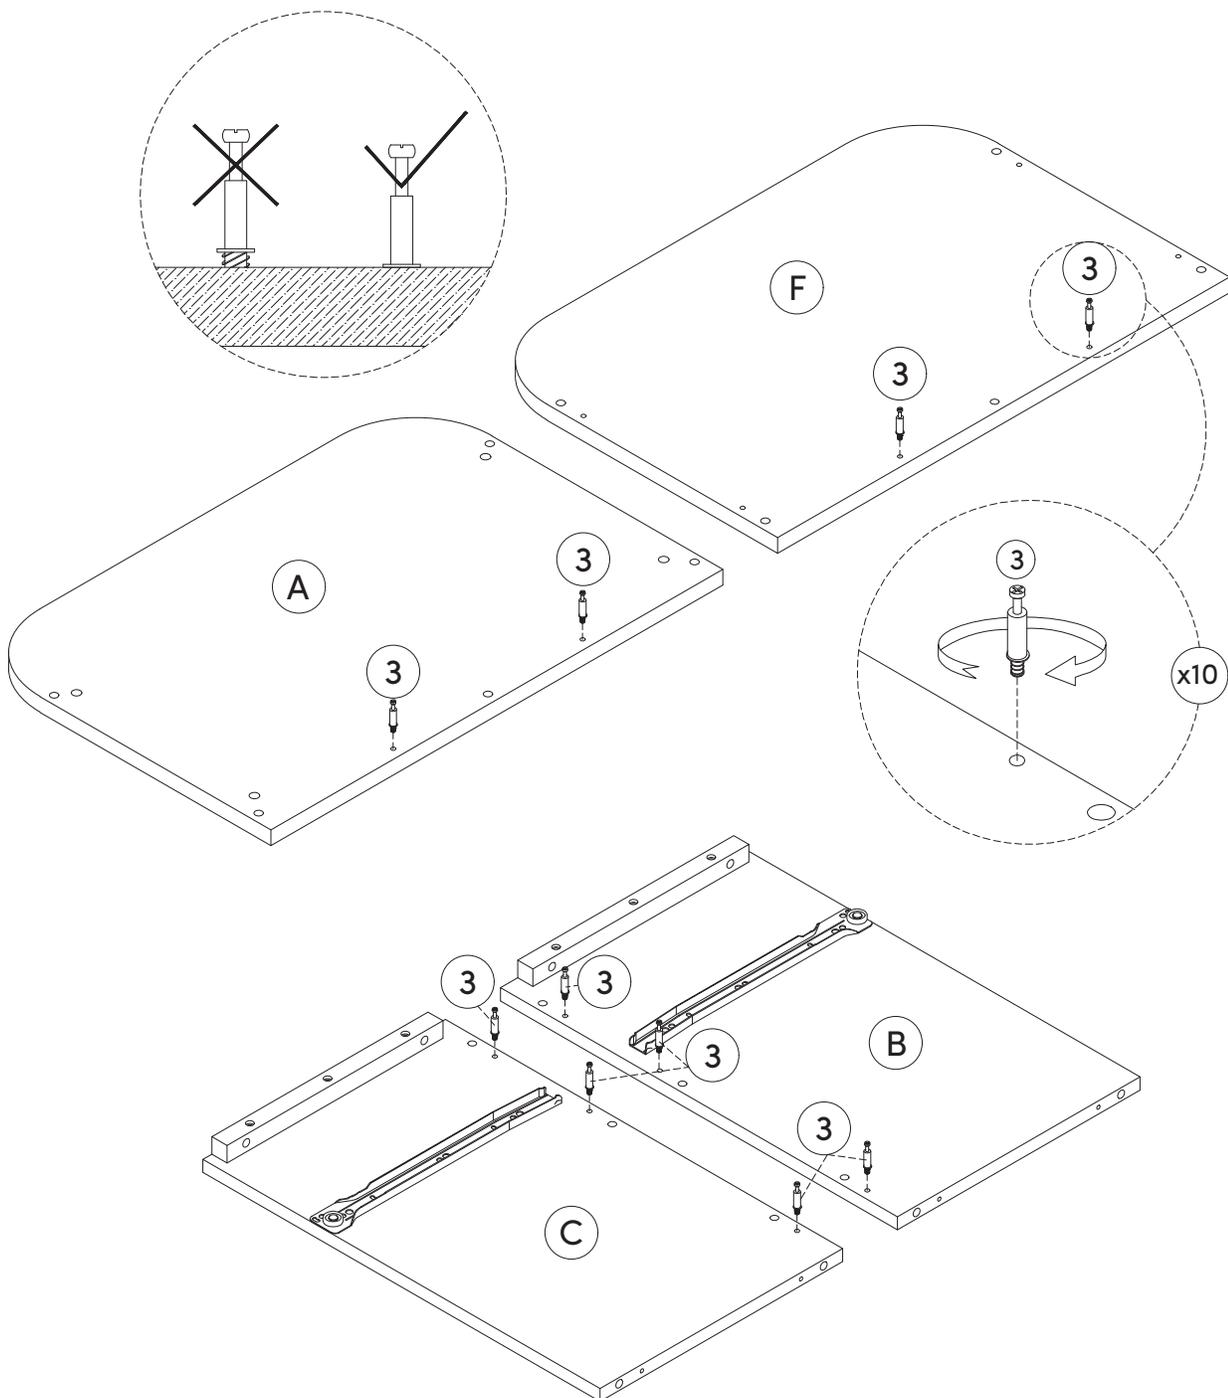

# Step 2

Insert the Wooden Dowel (2) into the Side Panel (Left) (C). Then place the Back Panel (Top) (D) over top the Wooden Dowels (2). Make sure to line things up as shown below. Finally, use the Cam Locks (4) to secure the Side Panel (Left) (C) to the Back Panel (Top) (D).

2




x1pc

4



x1pc

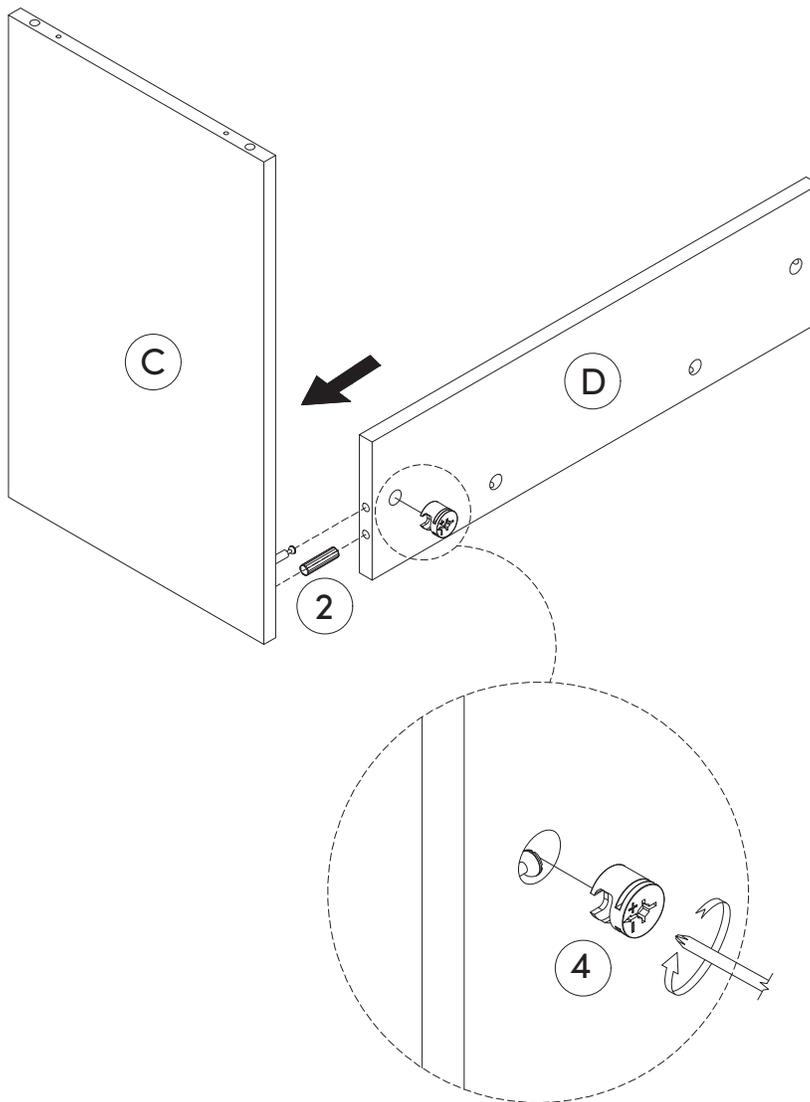

# Step 3

Insert the Wooden Dowels (2) into the Side Panel (Left) (C). Then place the Back Panel (Top) (D) over top the Wooden Dowels (2). Make sure to line things up as shown below. Finally, use the Cam Locks (4) to secure the Side Panel (Left) (C) to the Back Panel (Top) (D).


2

4



x2pcs

x2pcs

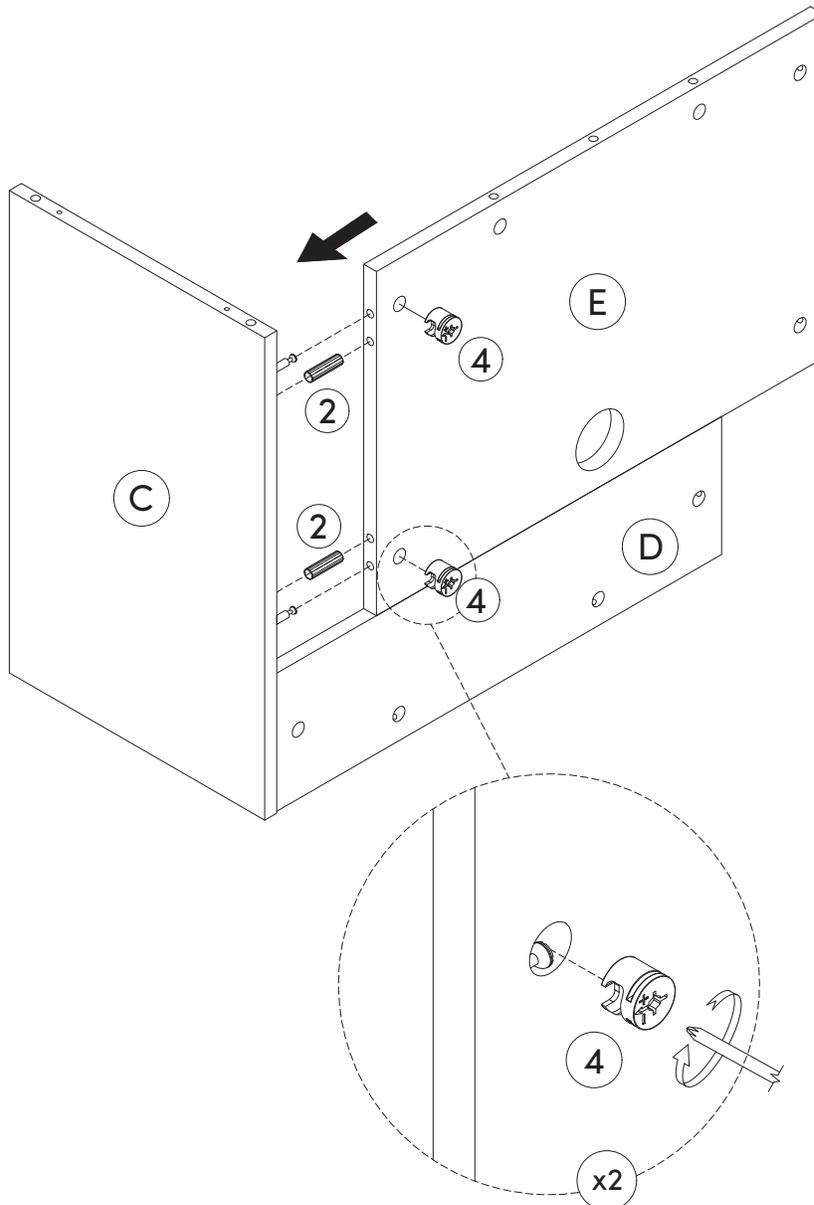

# Step 4

Continue by inserting another three Wooden Dowels (2) into the end of the Back Panel (Top) (D) & the Back Panel (Bottom) (E). Then place the Side Panel (Right) (B) over top the Wooden Dowels (2).

Make sure to line things up as shown below.

Finally, use the Cam Locks (4) to secure the Side Panel (Right) (B) to the Back Panel (Top) (D) & the Back Panel (Bottom) (E).


2

4



x3pcs

x3pcs

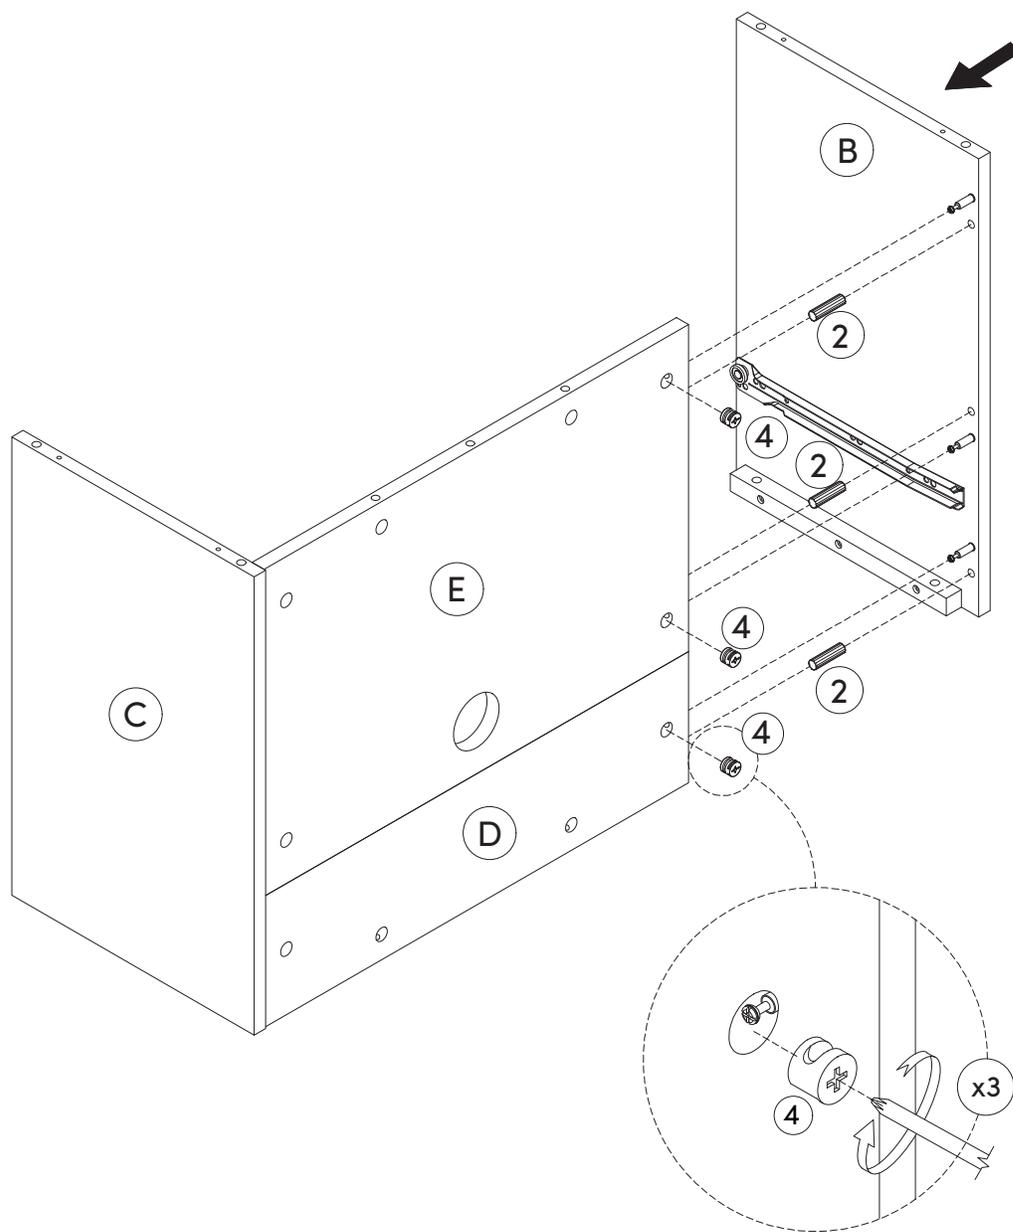


# Step 5

Insert five Wooden Dowels (2) into the ends of the assembly from Step 4. Then, place the Bottom Panel (F) over top the Wooden Dowels (2).

Make sure to line things up as shown below.


Finally, use the M4 x40mm Screws (10) to secure the Bottom Panel (F) in place.



x5pcs





x4pcs

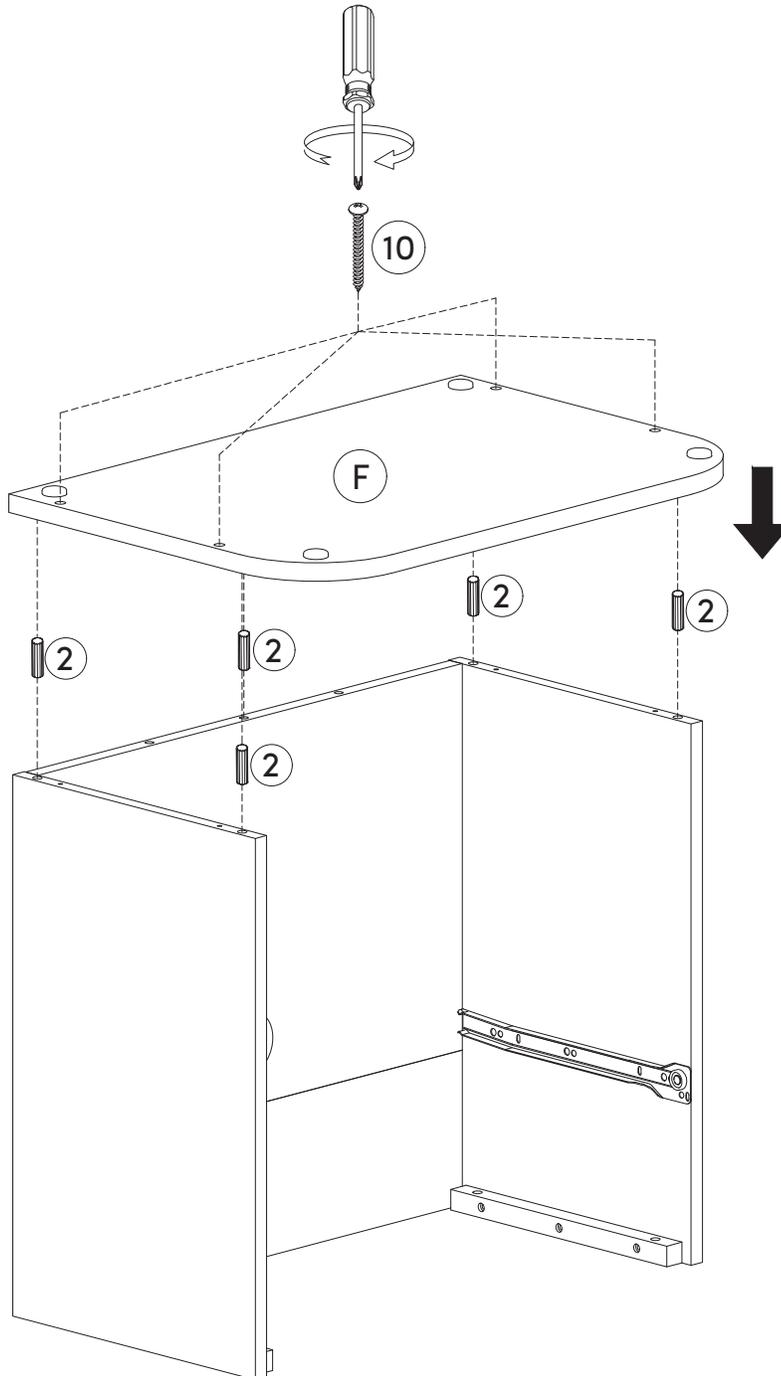

# Step 6

Insert five Wooden Dowels (2) into the assembly from Step 5. Then, place the Top Panel (A) over top the Wooden Dowels (2). Make sure to line things up as shown below. Next, slide the Spring Washers (6) and Flat Washers (7) onto the Bolts (5). Use these parts and the Allen Key (12) to secure the Top Panel (A) into place.

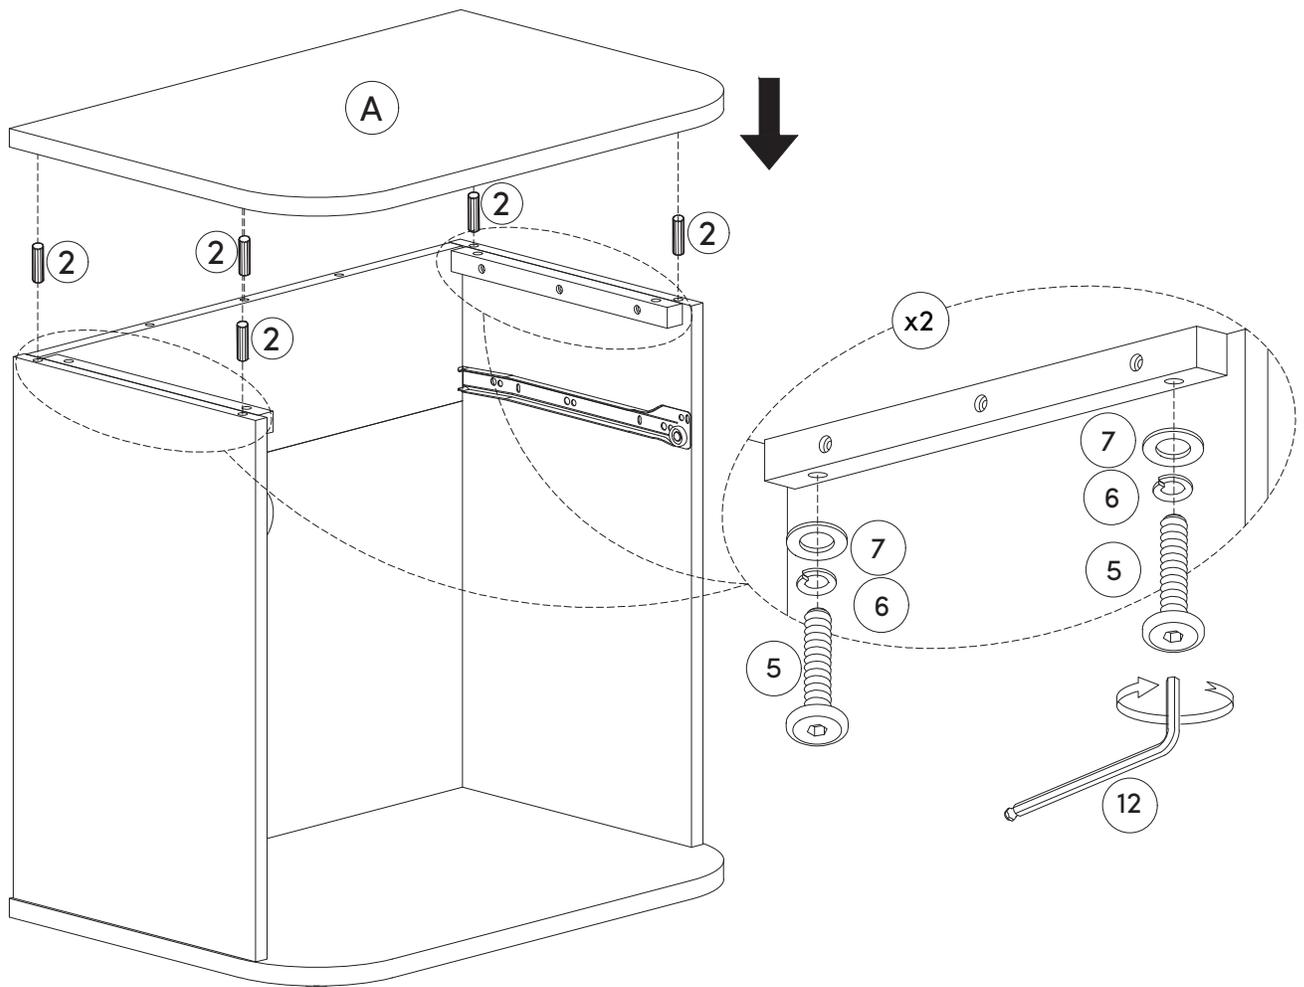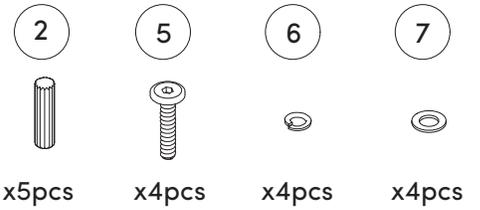


# Step 7

On the back, use two Cam Locks (4) to secure the Bottom Panel (F) to the Back Panel (Bottom) (E), and another two Cam Locks (4) to secure the Top Panel (A) to the Back Panel (Top) (D).

4



x4pcs

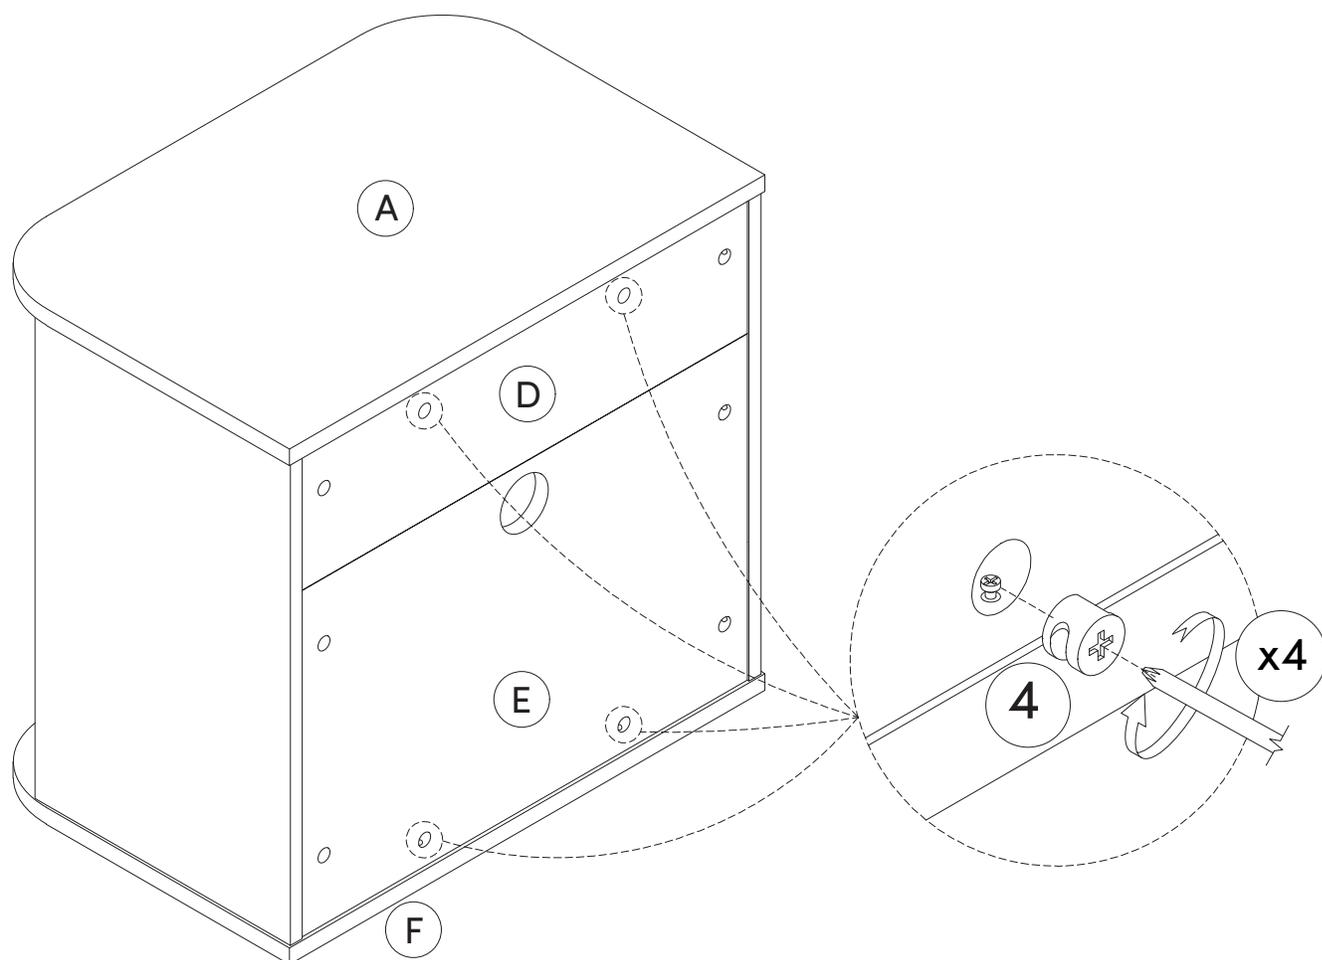

# Step 8

Let's get started on the drawers!

Firstly, use two M4 x 25mm Screws (9) to secure the Drawer Panel (Side - Right) (H) to the Drawer Panel (Back) (K).


Next, slide the Drawer Panel (Bottom) (J) into the drawer, it should fit smoothly into the grooves.

Finally, use another two M4 x 25mm Screws (9) to secure the Drawer Panel (Side - Left) (I) to the Drawer Panel (Back) (K).

9



x4pcs

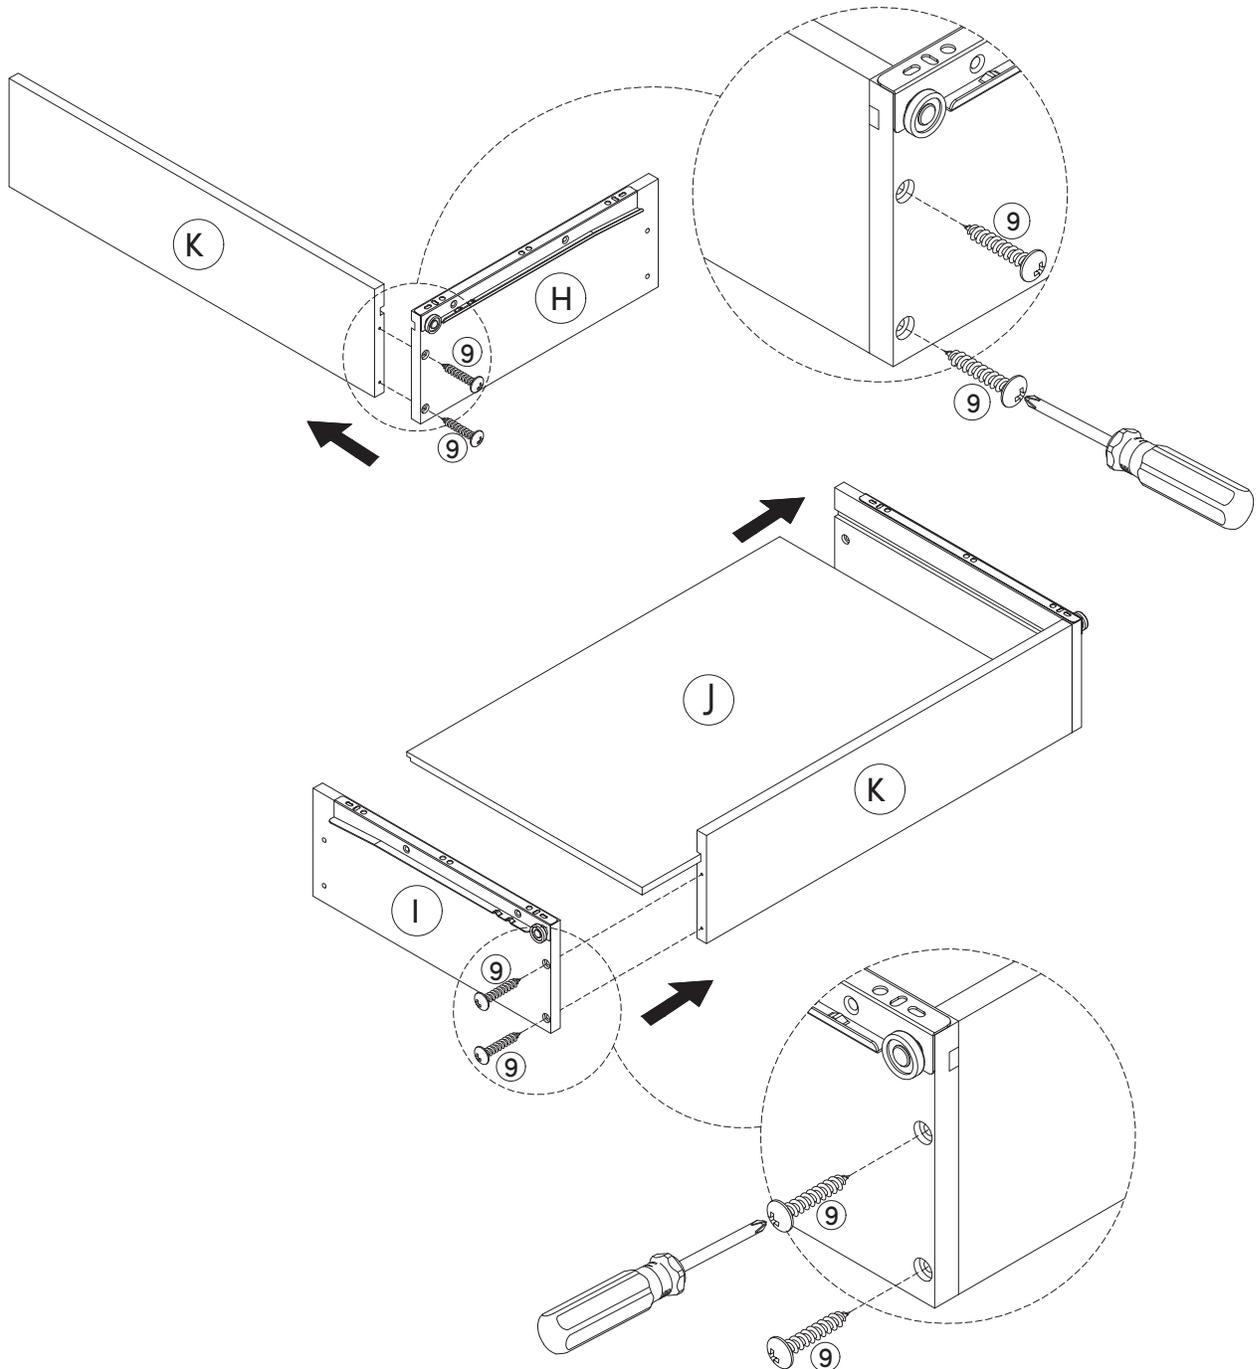


# Step 9

Next, using the M4 x 25mm Screws (9) secure the Drawer Panel (Front) (G) to the partial drawer assembly from Step 8.

9





x4pcs

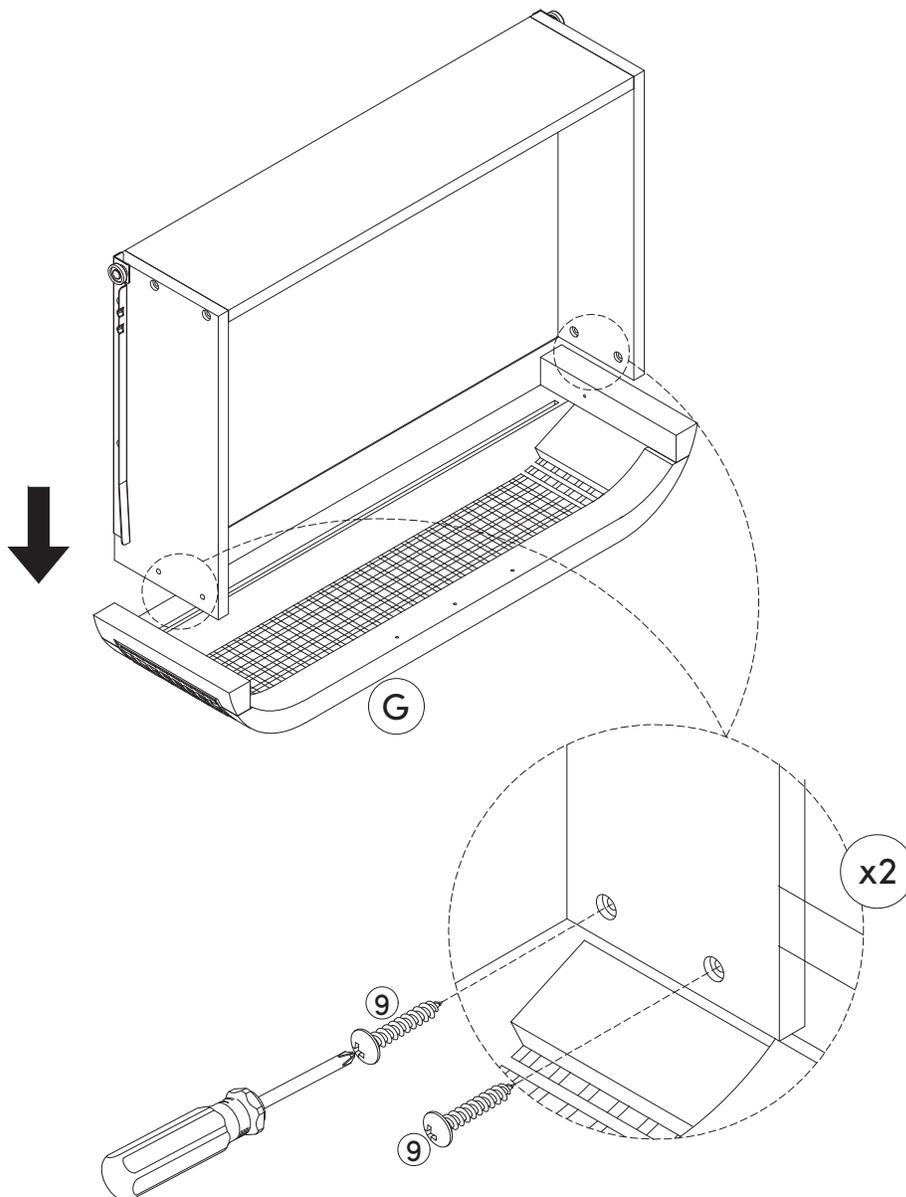


# Step 10

Finally, secure the Handle (1) to the Drawer Front (G) using the M3.5x15 Screws (8).

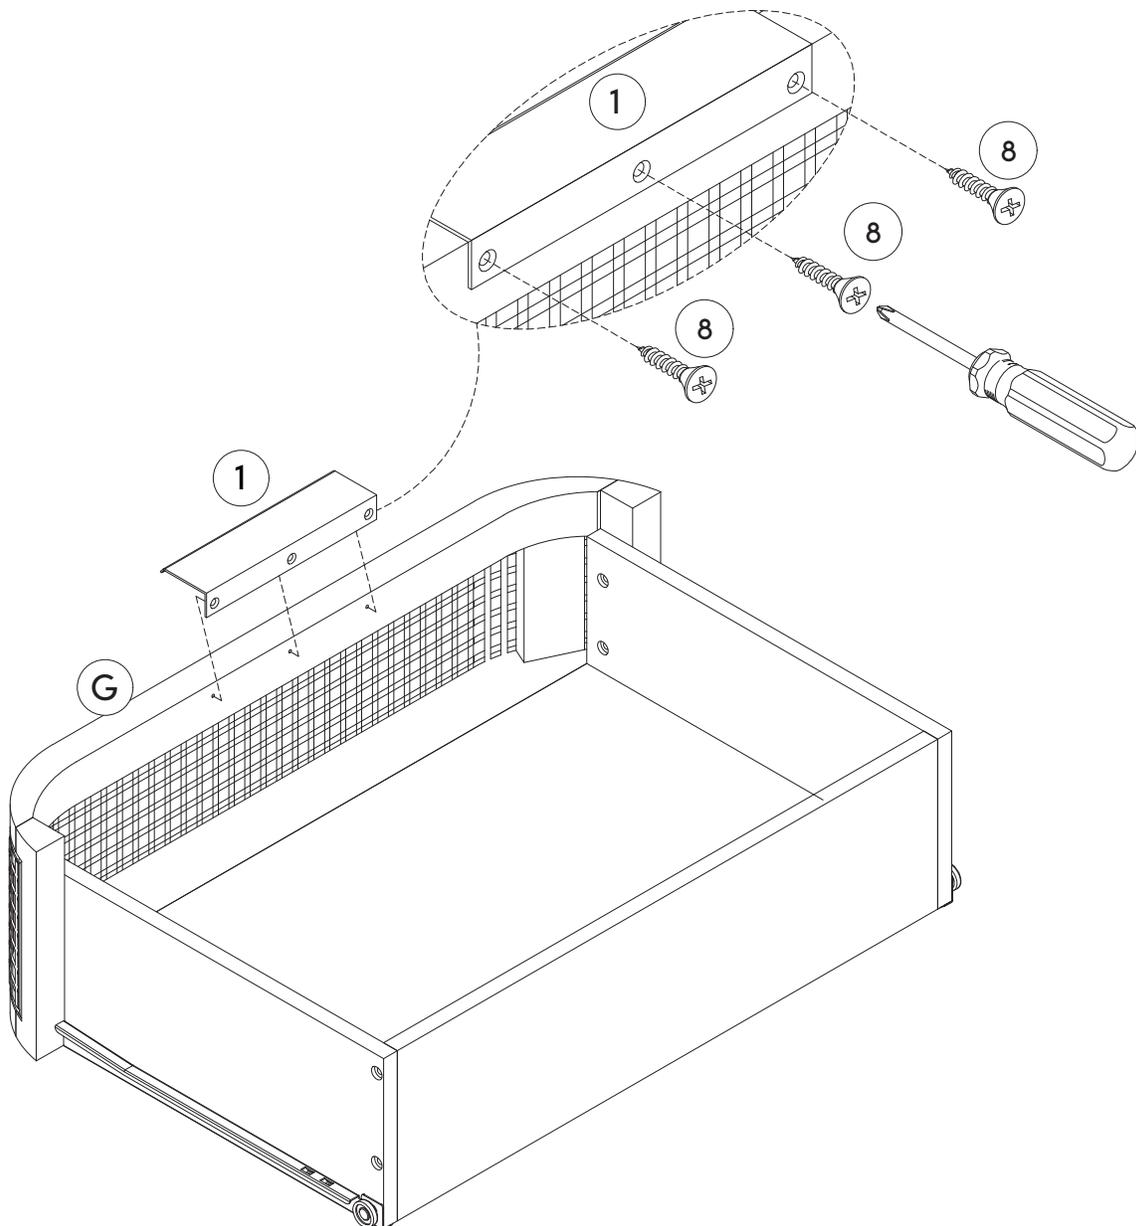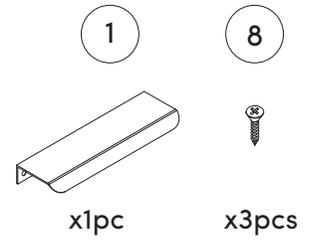

# Step 11

Insert the drawer into the nightstand.

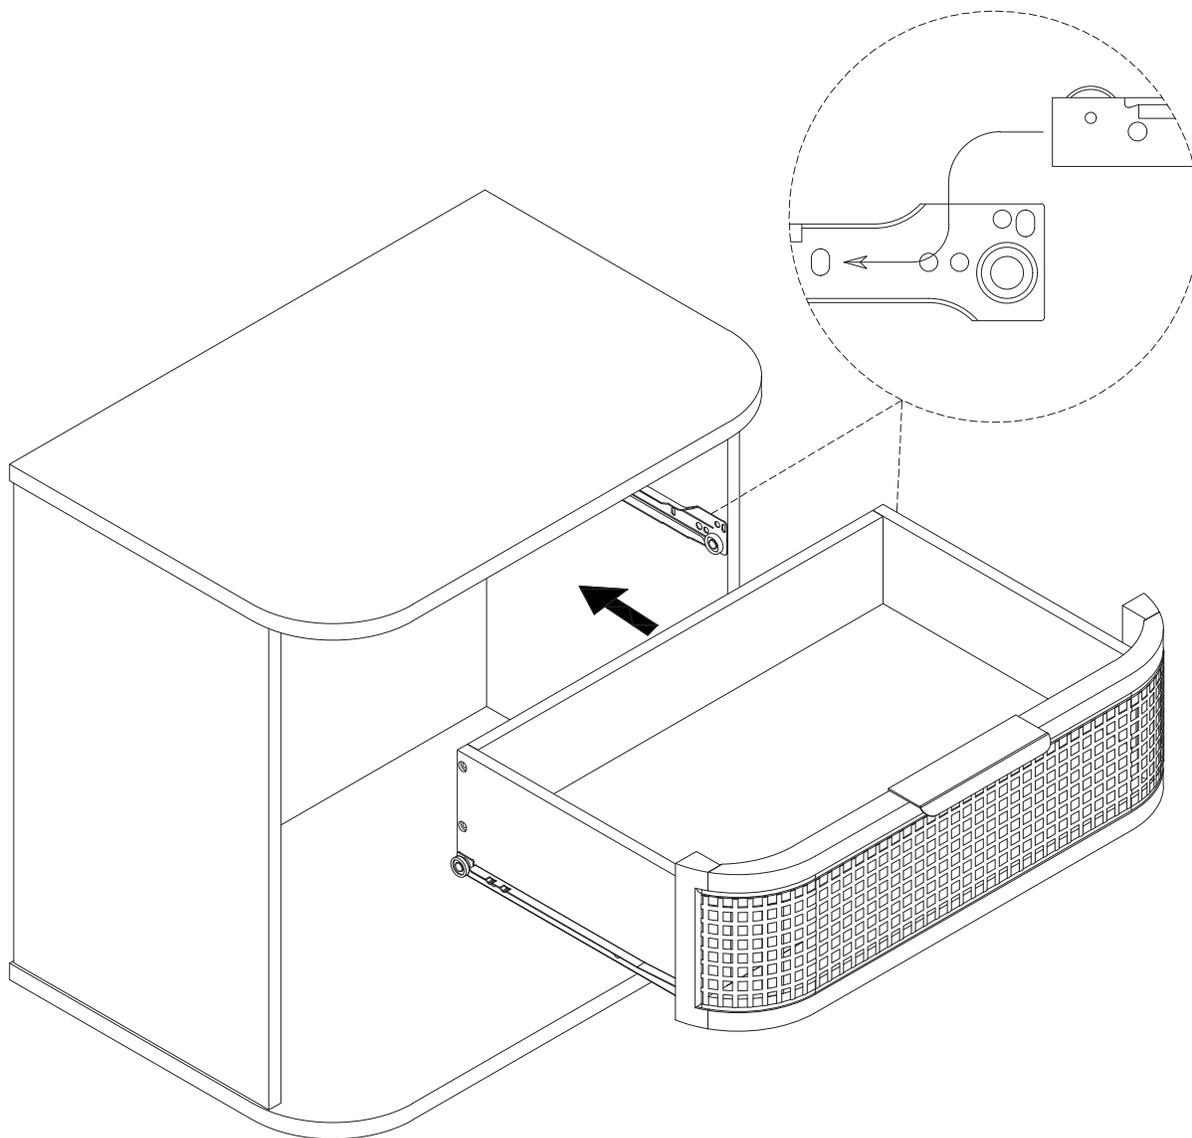

# No heartburn, when we handle the return

Give us a call **1-866-619-1004** or shoot us a message at **help@nathanjames.com** we will issue you a free replacement with **zero hassle**.

## Our way



Give us a call

---



Replacement

---



You

## Their way



Re-package item

---



Schedule pick up

---



Track package

---



Replacement

---



You

We really don't want you to go through the hassle of re-packaging your item and sending it back, because let's be honest...nobody has time for that.

# Safety first, fun later

We want your product to last as long as possible, so we recommend that you tighten the screws 2 weeks after assembly and for added safety check the tightness of all screws every 2 months.

For proper care and treatment, please check our website at [NathanJames.com/products](http://NathanJames.com/products)

## Safe use of this product starts with you.

Use this product responsibly with the primary concern for your safety. Follow assembly instructions carefully and inspect product upon receipt and each use.

Nathan James and its parent companies cannot be held legally responsible for any injuries or death resulting from failure to follow instructions or improper use of this product.

## Do not modify the structure of this product in any way.

Our products have been tested to meet specific safety measures as they were originally intended to be sold. Any modifications will present the risk of creating significant safety issues which NJ will not be responsible for.

## Proper use

- DO NOT** use for commercial purposes
- DO NOT** place on uneven floor or surface
- DO NOT** use as a step-stool or stand on nightstand
- DO NOT** put hot liquid directly on nightstand
- DO NOT** leave spilled liquid on nightstand
- DO NOT** use if nightstand is damaged or broken
- DO NOT** make temporary repairs
- DO NOT** use outdoors

# We are only in business if you're happy

For starters, thanks for being you.

☎ Toll-free at 1-866-619-1004

✉ Help@nathanjames.com

🌐 NathanJames.com/help

We do our best to ensure your furniture arrives without any problems, but occasionally mistakes happen—as humans we are imperfect beings. In the event that a part is damaged or missing, we will be more than happy to provide you with replacement part(s) for free.

## Lifetime Guarantee

We believe in making things that last. That's why every product is backed by our Lifetime Guarantee. No hidden clauses. No runaround. If it breaks, we'll replace it—plain and simple. This isn't just a promise—it's our commitment to quality, and to you.

This product comes with a Lifetime Guarantee from the date of purchase. Please use your phone to scan the QR code on the cover of this booklet to register your product or visit <https://goo.gl/i9dk3q>



### Did we do alright? Please spread the love!

If you are happy with your product, tell your friends and family about us, or even better, leave us a review online. Spreading the word gives us the opportunity to make more people happy and keep our prices low for your next purchase.

*Brooke Burdon*

Founder, Nathan James