


SW 8651 - F/Q/K

1.

BACK VIEW

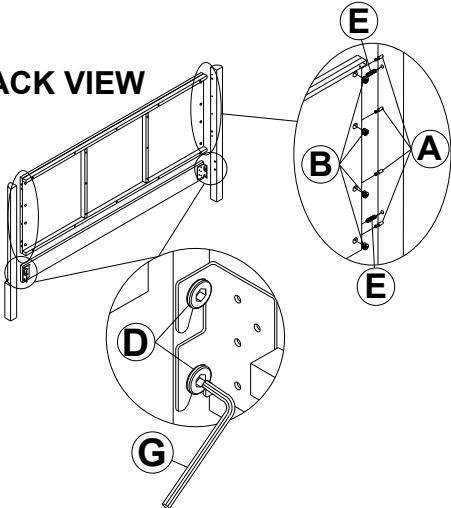


Attach the headboard bottom rail (P3) to the headboard post (P2) using hardware:

D = 4pcs
G = 1pc

Attach the headboard post (P2) to the headboard (P1) using hardware:

A = 8pcs
B = 8pcs
E = 4pcs


2.

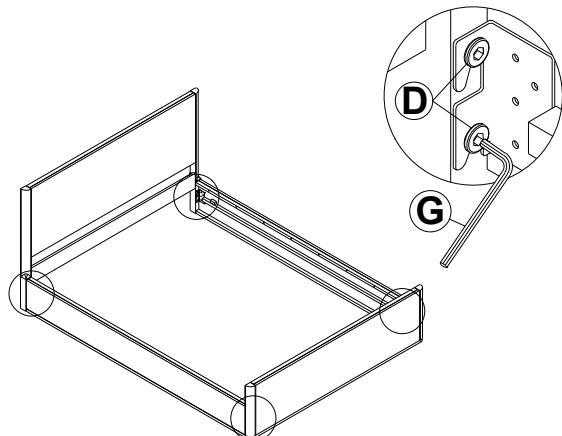

Attach the side rail (P5) to the headboard post (P2) and footboard (P4) using hardware:

D = 8pcs
G = 1pc


3.

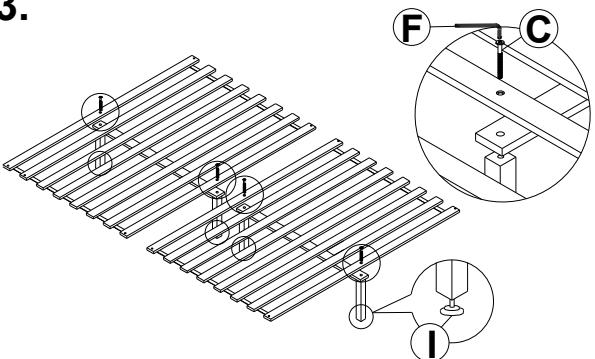

Fix the adjuster (I) to the support leg (P8) using hardware:
I = 4pcs

Attach the support leg (P8) to the center rail (P6) and bed slats (P7) using hardware:
C = 4pcs
F = 1pc

4.

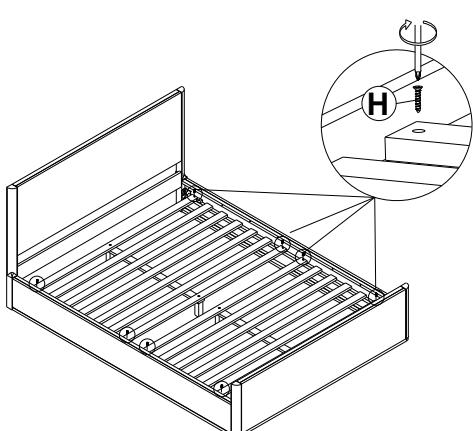

Lay the bed slats (P7) between the side rail (P5) using hardware:
H = 8pcs

****Apply pressure with your knee to the side rail whilst attaching the slats to ensure that the slats are flush against the inside of side rail****

WARNING!!

- Remove hardware from box and sort by size.
- Please check to see that hardware and parts are present prior start of assembly.
- Please follow attached instruction in the same sequence numbered to ensure fast and easy assembly.
- Do not use this bed if any part is broken, torn or missing.
- The assembly of this product requires two people.
- Do not use any power tools as this may damage the frame and will invalidate any claim.

PART LIST

P1	Headboard	=	1pc
P2	Headboard Post	=	L-1pc R-1pc
P3	Headboard Bottom Rail	=	1pc
P4	Footboard	=	1pc
P5	Side Rail	=	2pcs
P6	Center Rail	=	2pcs
P7	Bed Slats	=	14pcs
P8	Support Leg	=	4pcs

HARDWARE LIST

A	MINIFIX SCREW 24MM	=	8pcs
B	MINIFIX HOUSING Ø15 X 10MM	=	8pcs
C	M6 X 50MM JCBC	=	4pcs
D	M8 X 20MM JCBB	=	12pcs
E	WOOD DOWEL M8 X 30MM	=	4pcs
F	ALLEN KEY M4	=	1pc
G	ALLEN KEY M5	=	1pc
H	M4 X 25MM SCREW	=	8pcs
I	ADJUSTER	=	4pcs

