


ASSEMBLY INSTRUCTIONS

SE SD80450WI-CLB

20.01.2025

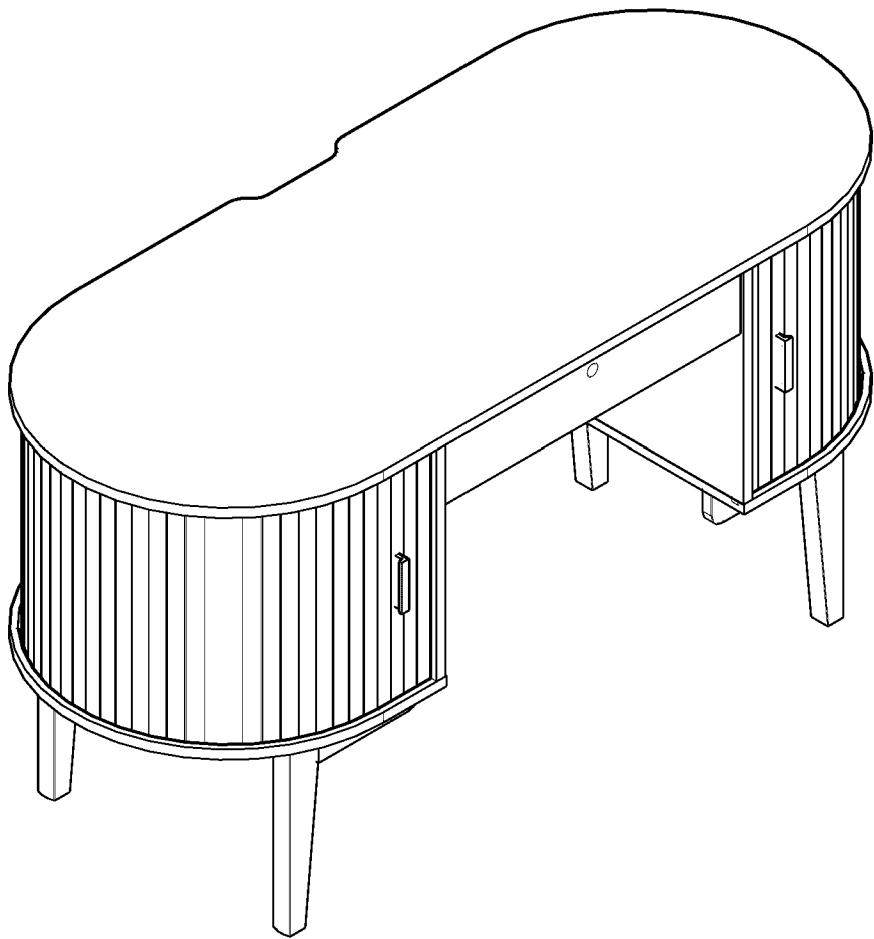

Let's get started!



Read through all of
the instructions
before starting



Care instructions are
listed in the last step
of this manual



Approx. 60 minutes
assembly time



Make sure you have all
parts and components
before discarding any
packing materials



2 people recommended
for assembly

Only use hand tools to assemble this item. Do not use power tools.
Do not tighten bolts or screws completely until all hardware is lined
up and inserted into the holes.


Do not over-tighten screws and bolts to avoid stripping the hardware or
cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to
work. This will prevent damage and scratches to your floors or the
item while you're assembling the product.

Keep all components and packing out of reach of children or animals
to avoid risk of choking or suffocation.

Furniture components:

- ① Top Panel x1
- ② Bottom Panel (L) x1
- ③ Bottom Panel (R) x1
- ④ Side Panel x2
- ⑤ Center Panel (L) x1
- ⑥ Center Panel (R) x1
- ⑦ Back Stand Panel x2
- ⑧ Back Panel x1
- ⑨ Shelf Panel x2
- ⑩ Door Panel x2
- ⑪ Drawer Face Panel x1
- ⑫ Drawer Side Panel (L) x1
- ⑬ Drawer Side Panel (R) x1
- ⑭ Drawer Back Panel x1
- ⑮ Drawer Mdf Board x1
- ⑯ Leg Frame (Short)(L) x2
- ⑰ Leg Frame (Short)(R) x2
- ⑱ Leg Frame (Long) x2
- ⑲ Leg Panel (L) x2
- ⑳ Leg Panel (R) x2

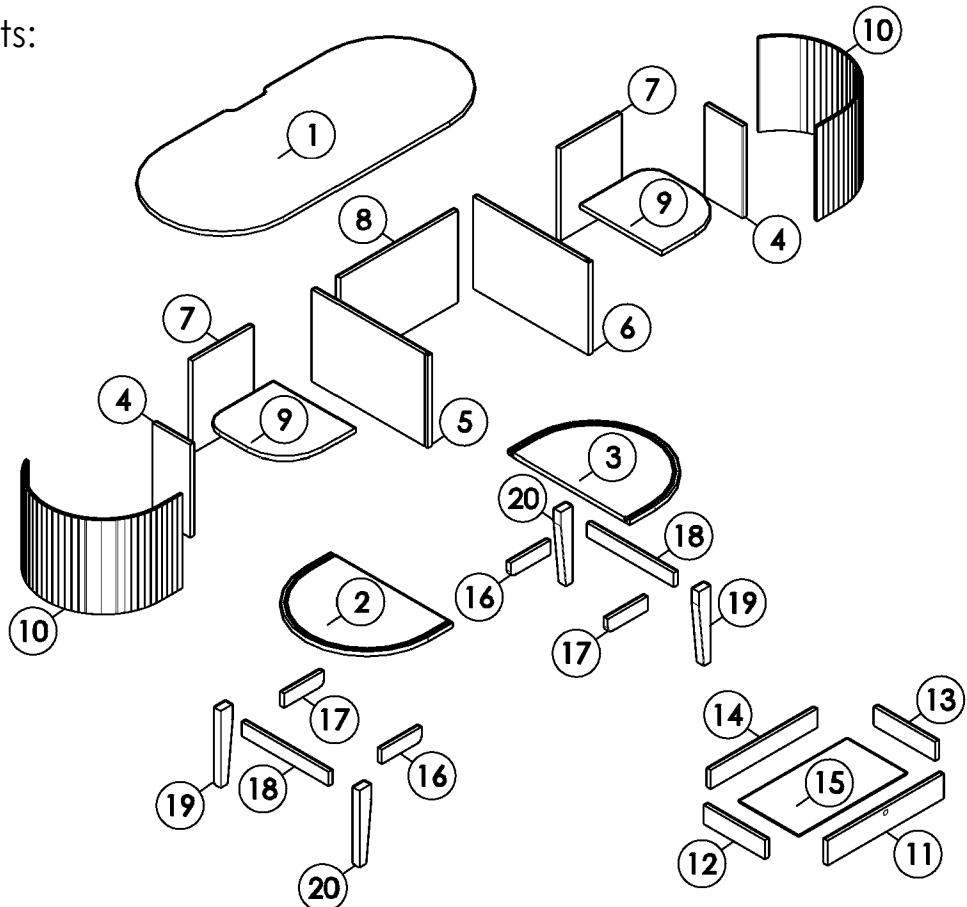

Provided hardware:

| | | | |
|---|-------------------------------|--|--------------------------------|
| | | | |
| A Cam Pin M5x24MM x27 | B Cam Lock x27 | C Wood Dowel M8x30MM x36 | D Iron Shelf Support x8 |
| | | | |
| E Drawe Slide 12" x1 Screw M3.5x12MM x12 | F Screw M4x38MM x4 | G Candle Wax x1 | H Camlock x1 |
| | | | |
| I Screw M6x50MM x8 | J White Leg Pin x4 | K PVC Handle- 7043.64 x2 Screw M4x20MM x4 | L Screw M4x65MM x12 |
| | | | |
| M Allen Key x1 | | | |

What you need:





Step 1

HARDWARE :

(G) Candle Wax x1

COMPONENTS :

- (1) Top Panel x1
- (2) Bottom Panel (L) x1
- (3) Bottom Panel (R) x1

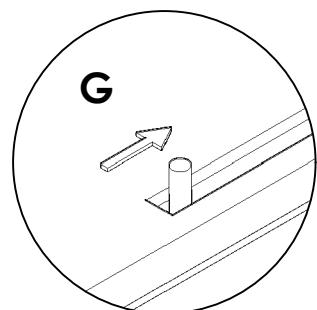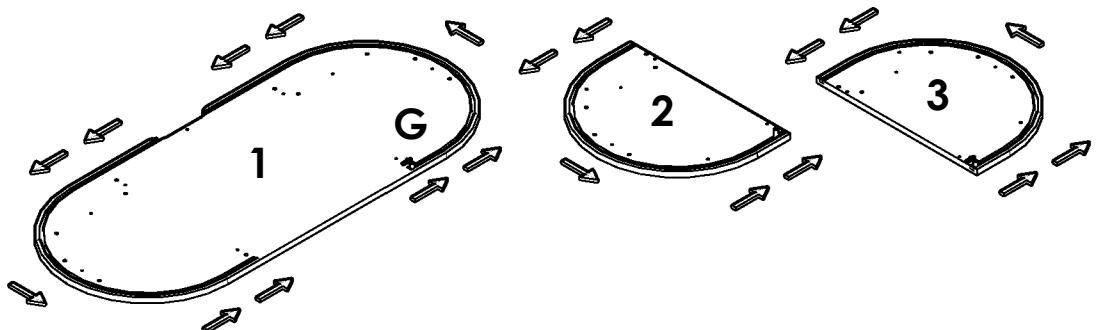

Applying Hardware G (Candle Wax) to the Door Groove:

Use Hardware G: Rub the Hardware G (Candle Wax) along the groove of the door. This application will facilitate smoother sliding of the door.



Step 2

HARDWARE :

(A) Cam Pin M5x24MM x17

COMPONENTS :

- (1) Top Panel x1
- (2) Bottom Panel (L) x1
- (3) Bottom Panel (R) x1

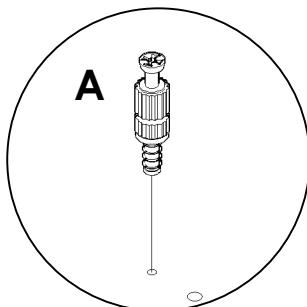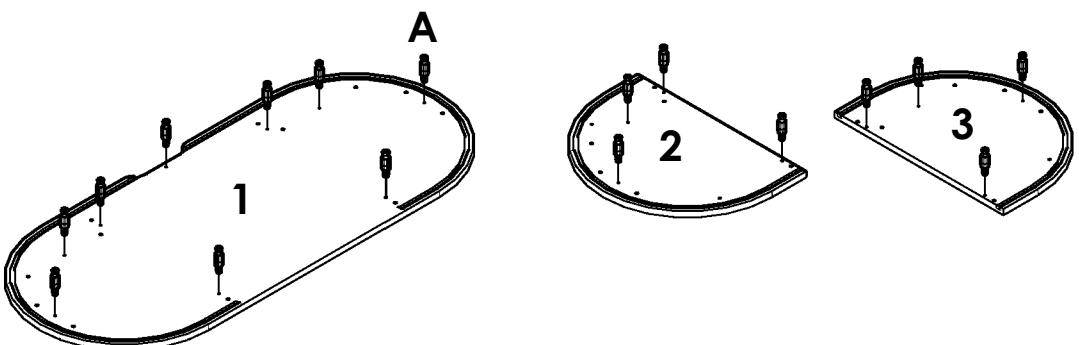

Installation Cam Pin:

Please insert the screw on panel using a screwdriver.


Step 3

HARDWARE :

- (A) Cam Pin M5x24MM x10
- (B) Cam Lock x27
- (C) Wood Dowel M8x30MM x36
- (D) Iron Shelf Support x8
- (E) Drawer Slide 12" x1
- Screw M3.5x12MM x6
- (H) Camlock x1

COMPONENTS :

- (4) Side Panel x2
- (5) Center Panel (L) x1
- (6) Center Panel (R) x1
- (7) Back Stand Panel x2
- (8) Back Panel x1
- (11) Drawer Face Panel x1
- (12) Drawer Side Panel (L) x1
- (13) Drawer Side Panel (R) x1
- (16) Leg Frame (Short)(L) x2
- (17) Leg Frame (Short)(R) x2
- (18) Leg Frame (Long) x2
- (19) Leg Panel (L) x2
- (20) Leg Panel (R) x2




















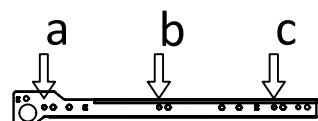


Screw in hole a,b and c

CL for panel (5)

CR for panel (6)

Installation Cam Pin:
Please insert the screw on panel using a screwdriver.

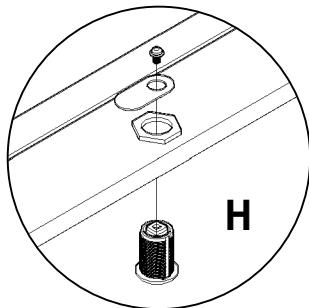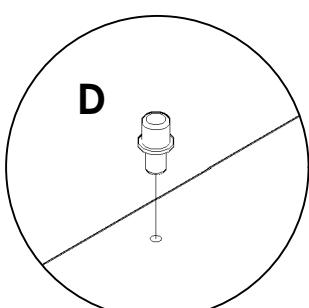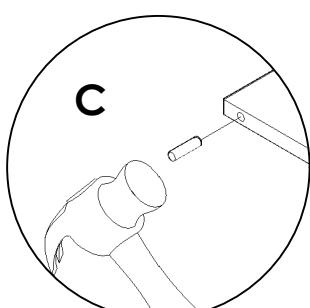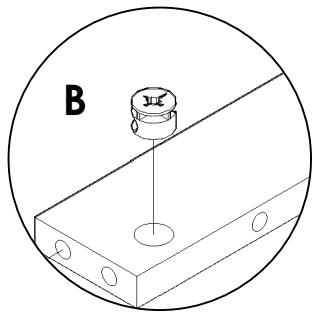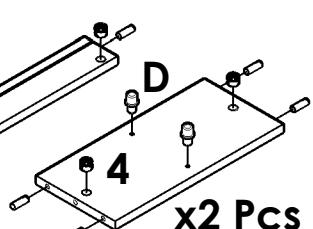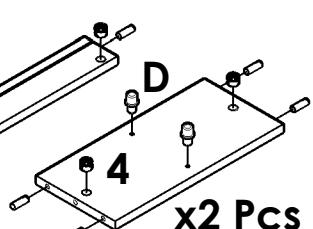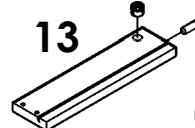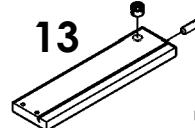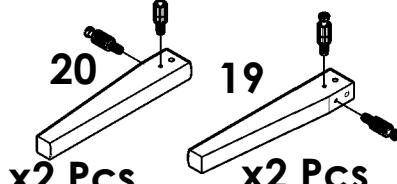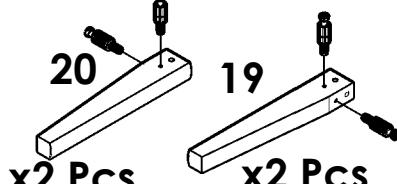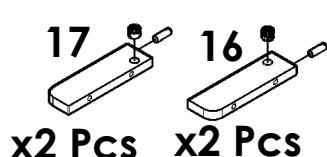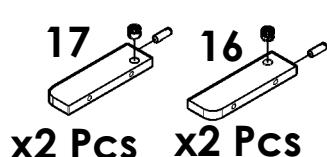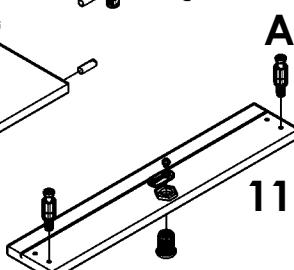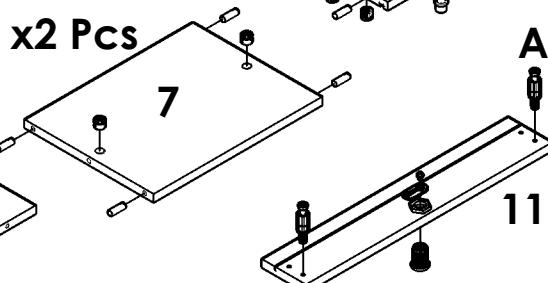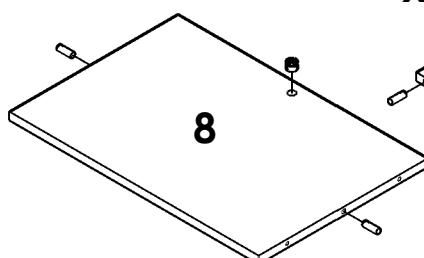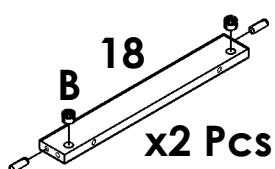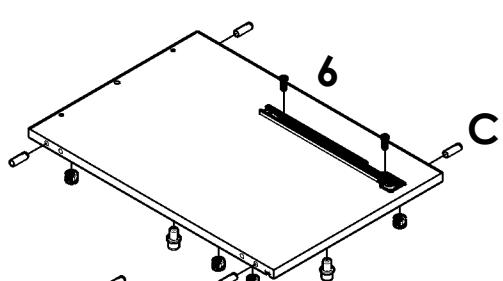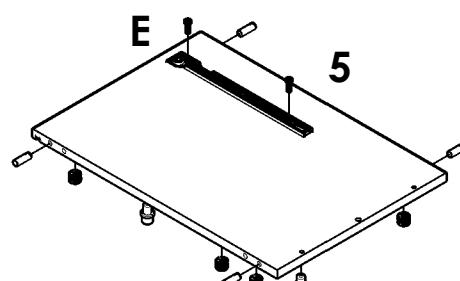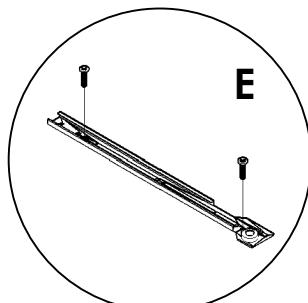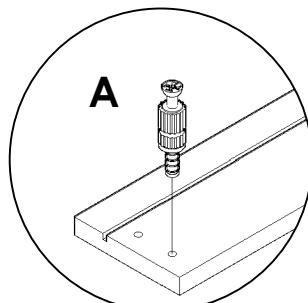

Installation :

As Shown, Please using the hammer to insert the cam lock(B), wood dowel (C), iron shelf support (D) and camlock (H) into hole of panel.



Step 4

HARDWARE :

- (J) White Leg Pin x4
- (M) Allen Key x1

COMPONENTS :

- (16) Leg Frame (Short) (L) x2
- (17) Leg Frame (Short) (R) x2
- (18) Leg Frame (Long) x2
- (19) Leg Panel (L) x2
- (20) Leg Panel (R) x2

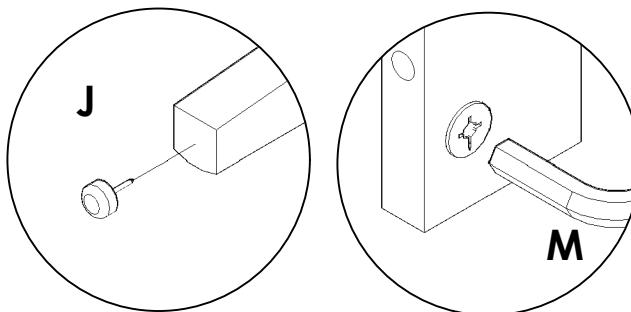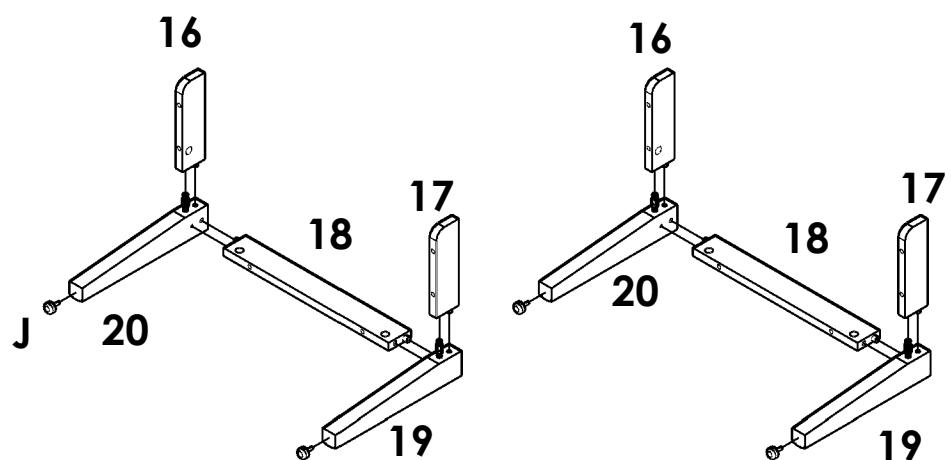

Installation:

As shown, the head of minifix housing goes into the open mouth of the mini fix bolt. Use Allen Key then turn the minifix housing so it tightens over the mini fix bolt.


Step 5

HARDWARE :

- (I) Screw M6x50MM x4
- (M) Allen Key x1
- (L) Screw M4x65MM x12


COMPONENTS :

- (2) Bottom Panel (L) x1
- (3) Bottom Panel (R) x1

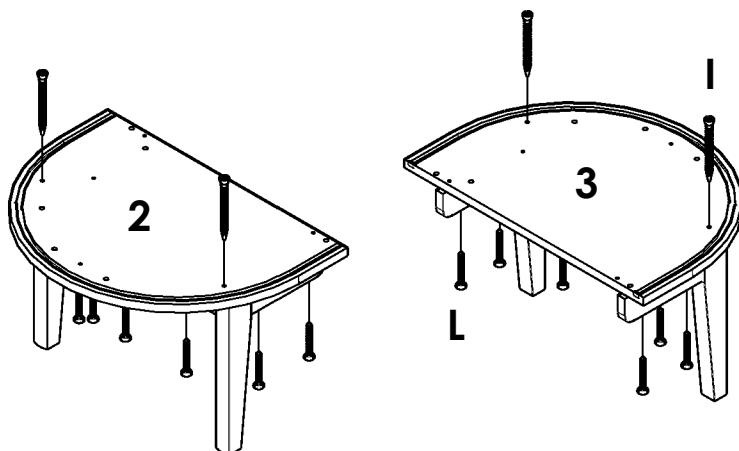

Installation Hardware:

As Shown, Please using the allen key to insert hardware with screw(I) into hole of panel.

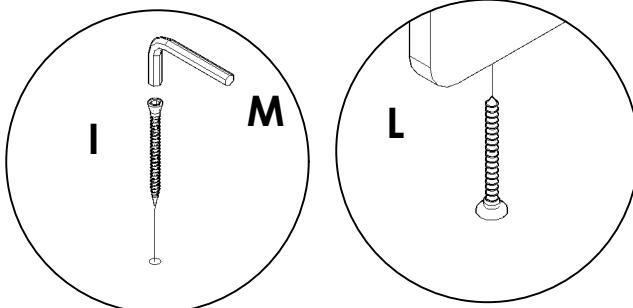


Step 6

HARDWARE :

- ① Screw M6x50MM x4
- ② Allen Key x1


COMPONENTS :

- ⑤ Center Panel (L) x1
- ⑥ Center Panel (R) x1
- ⑧ Back Panel x1

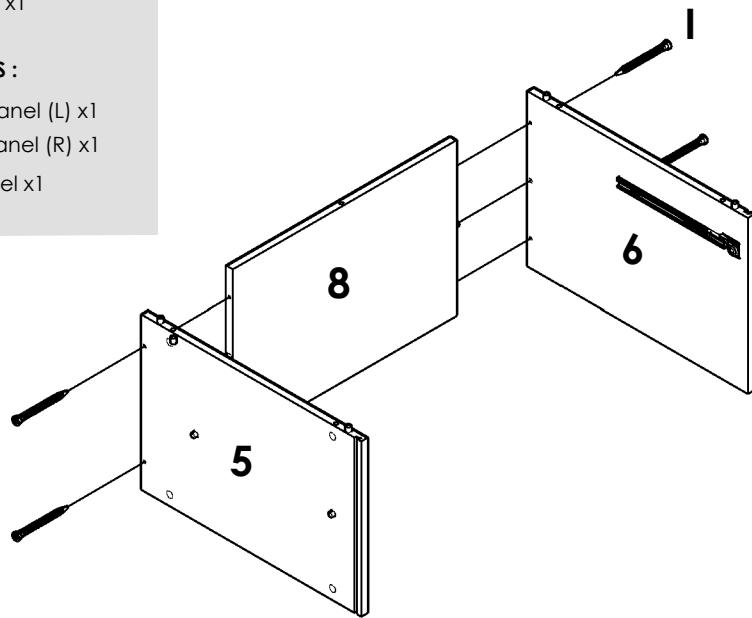

Installation Hardware:

As Shown, Please using the allen key to insert hardware with screw(1) into hole of panel.

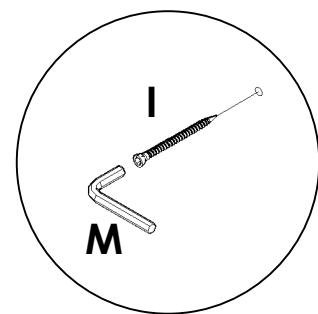


Step 7

HARDWARE :

- ② Allen Key x1


COMPONENTS :

- ① Top Panel x1
- ④ Side Panel x2
- ⑦ Back Stand Panel x2

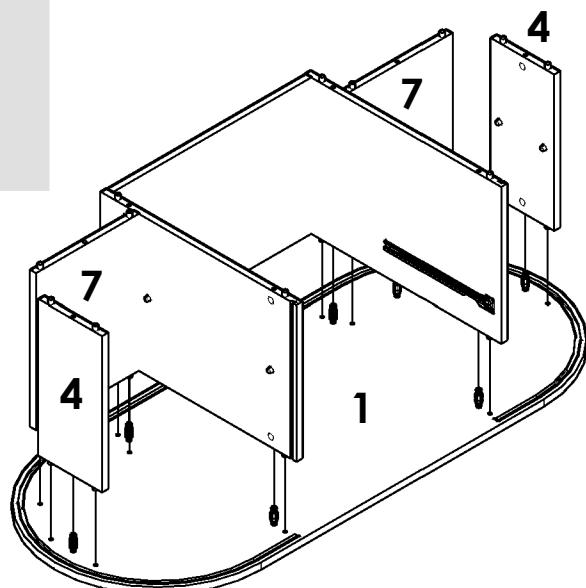

Installation:

As shown, the head of minifix housing goes into the open mouth of the mini fix bolt. Use Allen Key then turn the minifix housing so it tightens over the mini fix bolt.

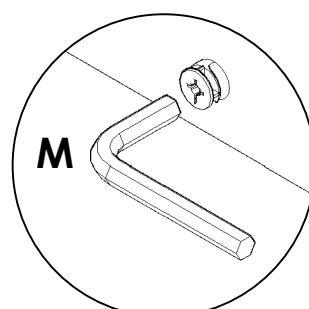

Step 8



HARDWARE :

(M) Allen Key x1

COMPONENTS :

(2) Bottom Panel (L) x1

(3) Bottom Panel (R) x1

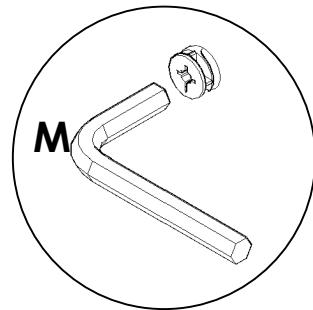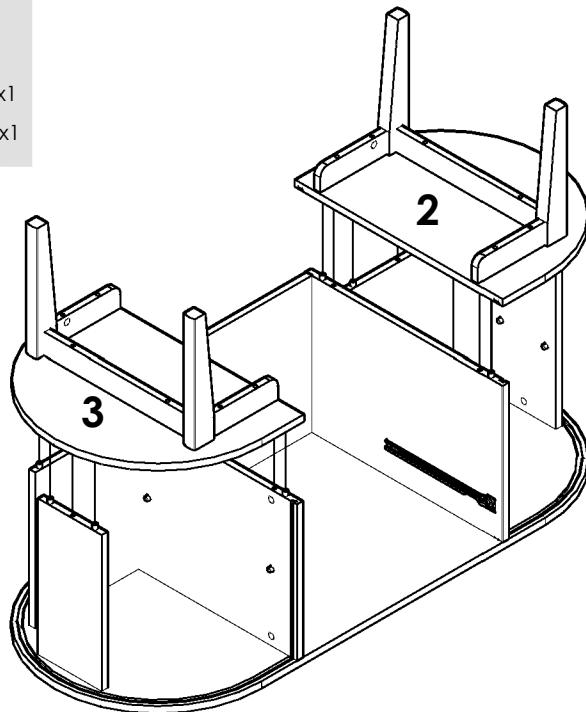**Installing the Panel**

Align the Panel: Position the panel so that it aligns with the holes in the panels. Join all panel together.

Secure with Hardware: Use hardware B, and an allen key to securely fasten the panel.

Step 9


HARDWARE :

(K) PVC Handle-7043.64 x2
Screw M4x20MM x4

COMPONENTS :

(10) Door Panel x2


Back View

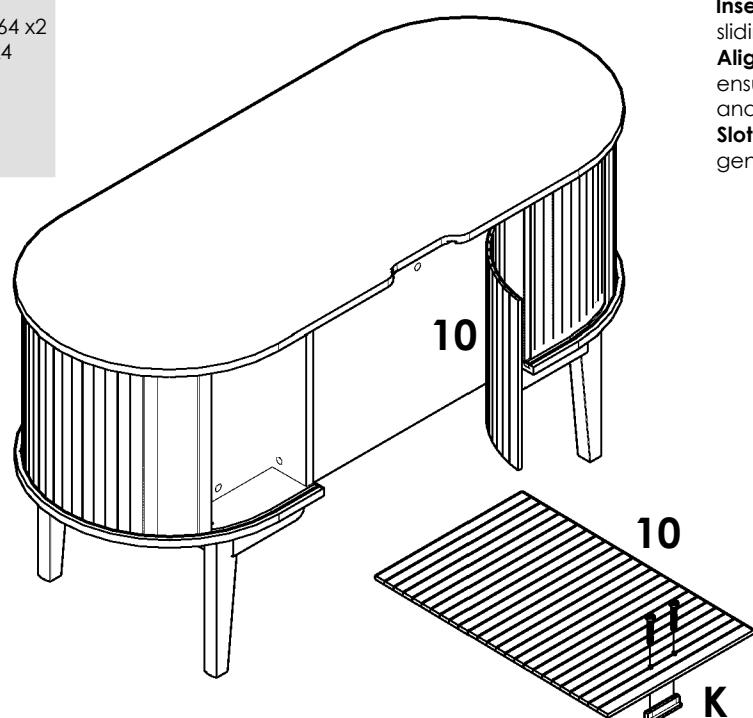**Inserting the Sliding Door:**

Insert Door from Behind: Carefully insert the sliding door, Part No. 10, from the back.

Align with Grooves: Before slotting it in, ensure the door is aligned with the top and bottom grooves.

Slot and Pull Forward: Once it is slotted in, gently pull it straight towards the front end.

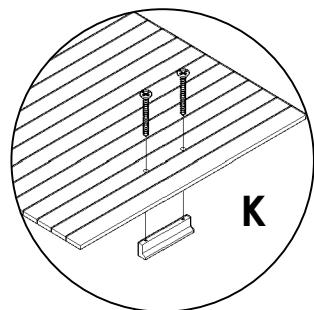


K

Step 10

COMPONENTS :

- ⑨ Shelf Panel x2

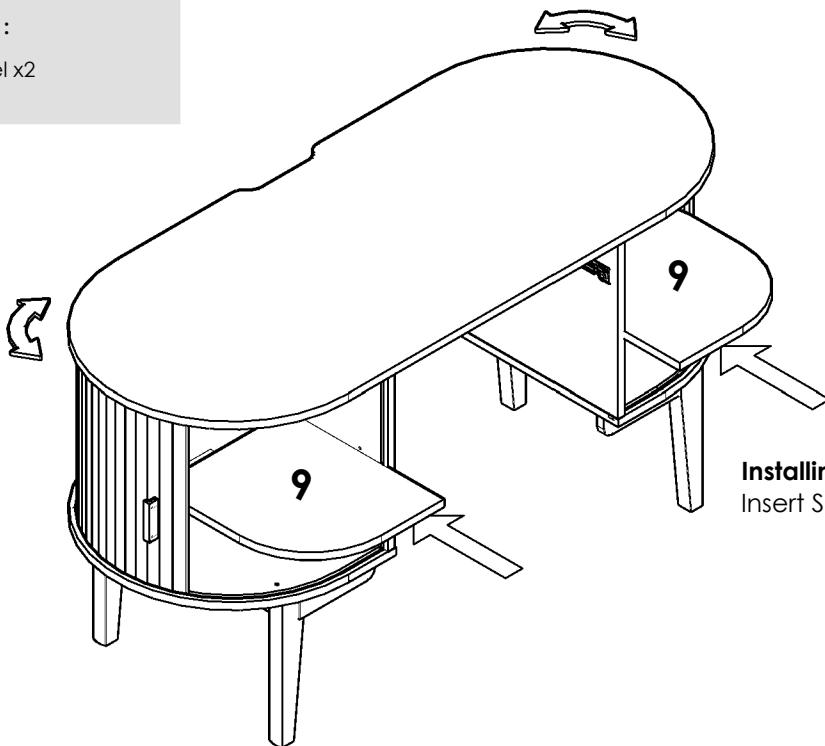

Installing Shelf Panel:

Insert Shelf Panel into the cabinet.


Step 11

HARDWARE :

- ⑤ Screw M4x38MM x4

COMPONENTS :

- ⑫ Drawer Side Panel (L) x1
- ⑬ Drawer Side Panel (R) x1
- ⑭ Drawer Back Panel x1

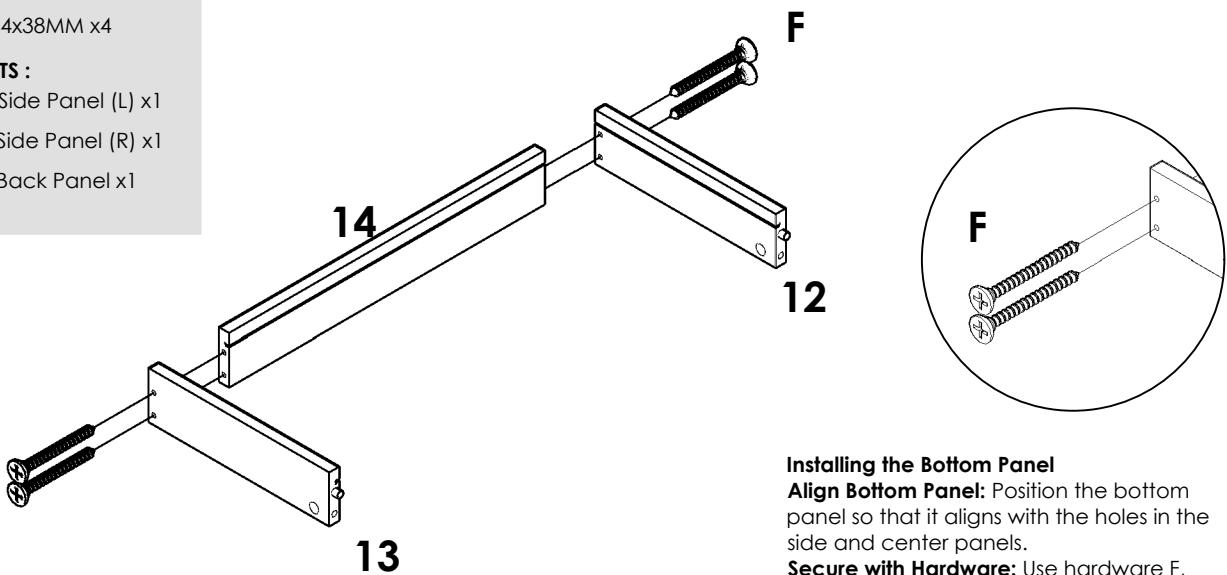

Installing the Bottom Panel

Align Bottom Panel: Position the bottom panel so that it aligns with the holes in the side and center panels.

Secure with Hardware: Use hardware F, which includes M4x38mm screws, and a screwdriver to securely fasten the panel.

Step 12


HARDWARE :

(M) Allen Key x1

COMPONENTS :


(11) Drawer Face Panel x1

(15) Drawer Mdf Board x1

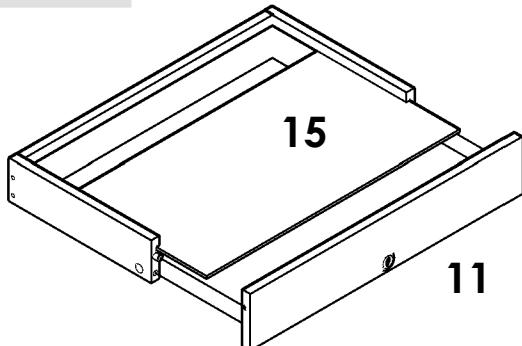

Installation:



As shown, the head of minifix housing goes into the open mouth of the mini fix bolt. Use Allen Key then turn the minifix housing so it tightens over the mini fix bolt.

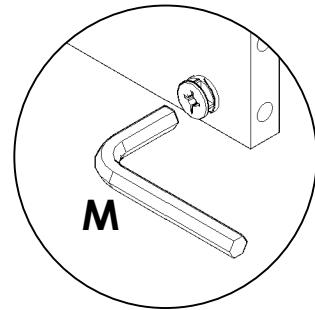

Step 13

HARDWARE :

(E) Drawer Slide 12" x1
Screw M3.5x12MM x6

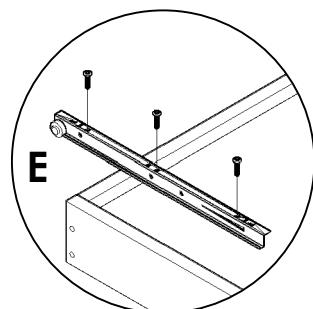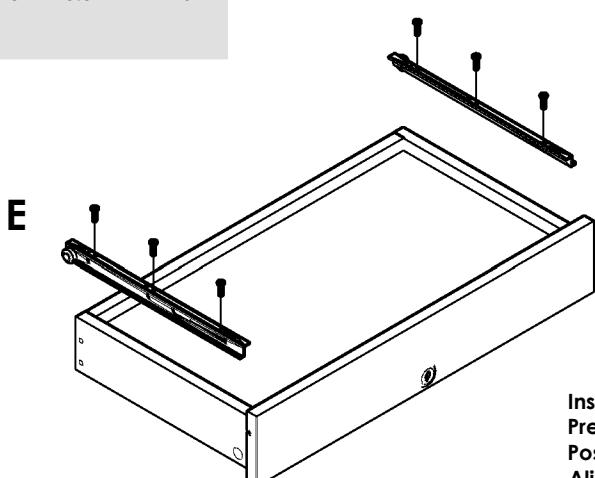

Installing Ball Bearing Slide Part B on the Drawer:


Prepare Drawer Bottom: Place the drawer with its bottom side facing up.

Position Ball Bearing Slide: Set the ball bearing slide Part B on the drawer.

Align with Drawer Face: Ensure Part B is aligned with the drawer face.

Secure with Screws: Use an M3.5 x 16mm screw and a screwdriver to fasten the slide securely to the drawer.

Step 14

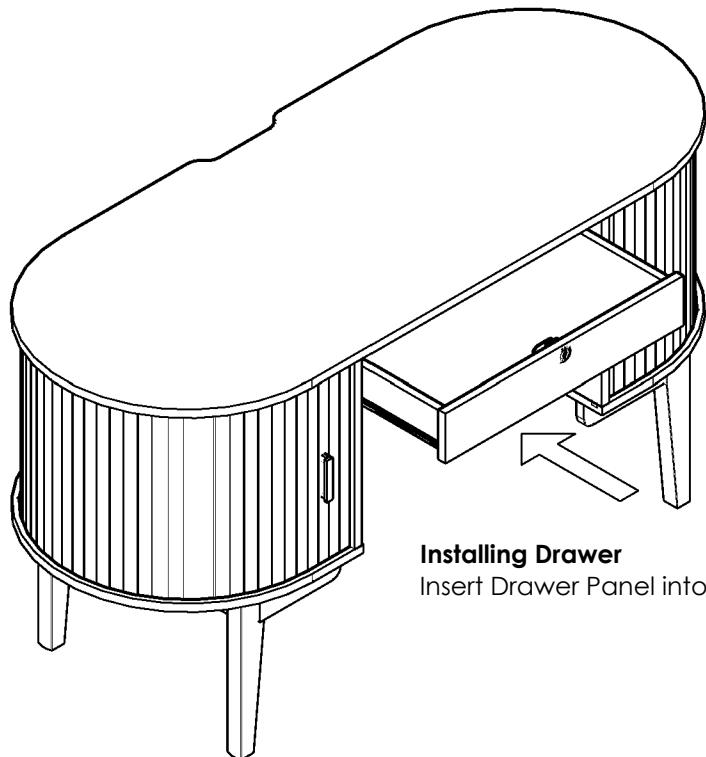

Installing Drawer

Insert Drawer Panel into the cabinet.

Great job!

Model Description assembly is complete.



CARING FOR YOUR ITEM

Indoor use only.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemicals, as they could damage the finish or integrity of the item.

