

Care & Maintenance


- ✓  
 - Furniture may scratch floors. We recommend using furniture pads to protect your floors.
 - ✗  
 - Do not put hot items directly on furniture surface.
 - ✗  
 - Do not clean furniture with harsh cleansers or polish.
 - ✗  
 - Do not place furniture under direct sunlight.
 - ✗  
 - Do not place furniture near heating or cooling vents.
 - ✗  
 - Do not write on furniture without a padded barrier to protect the surface.
 - ✗  
 - Do not place furniture outside . For indoor use only.
 - ✗  
 - Not for commercial use. For residential use only.
 - ✗  
 - Stains may be removed with mild soap solution and damp cloth.
 - ✗  
 - Children should not climb or jump on the furniture.
-
- ✓ 
 - Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in N778P364095 for hardware packs and legs.
Sets often ship in multiple boxes and may arrive a day or two apart.


ASSEMBLY INSTRUCTIONS

FULL BED

SKU CODE: N778P364095
SKU CODE: N778P364096



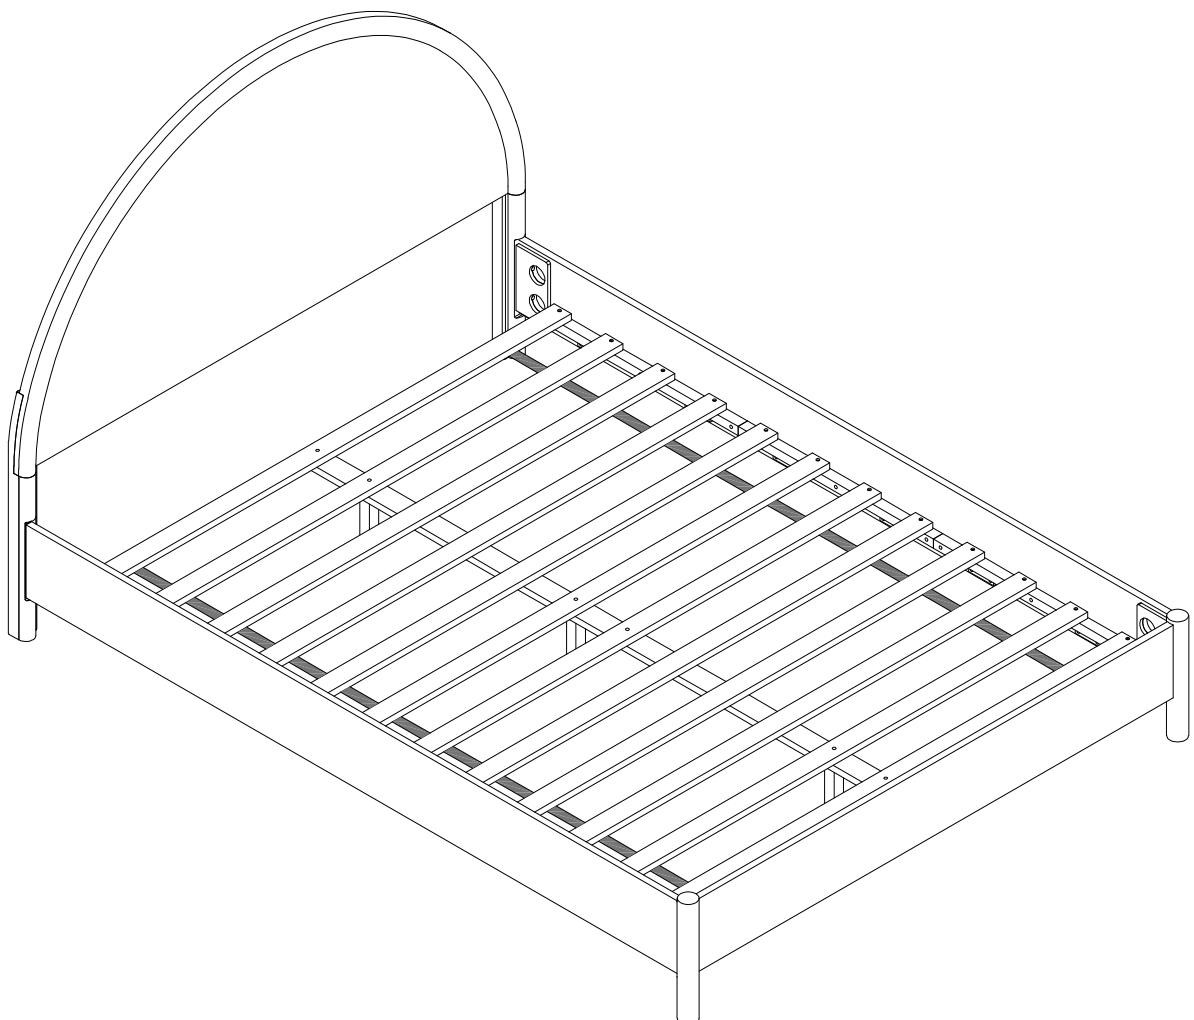


Detail View

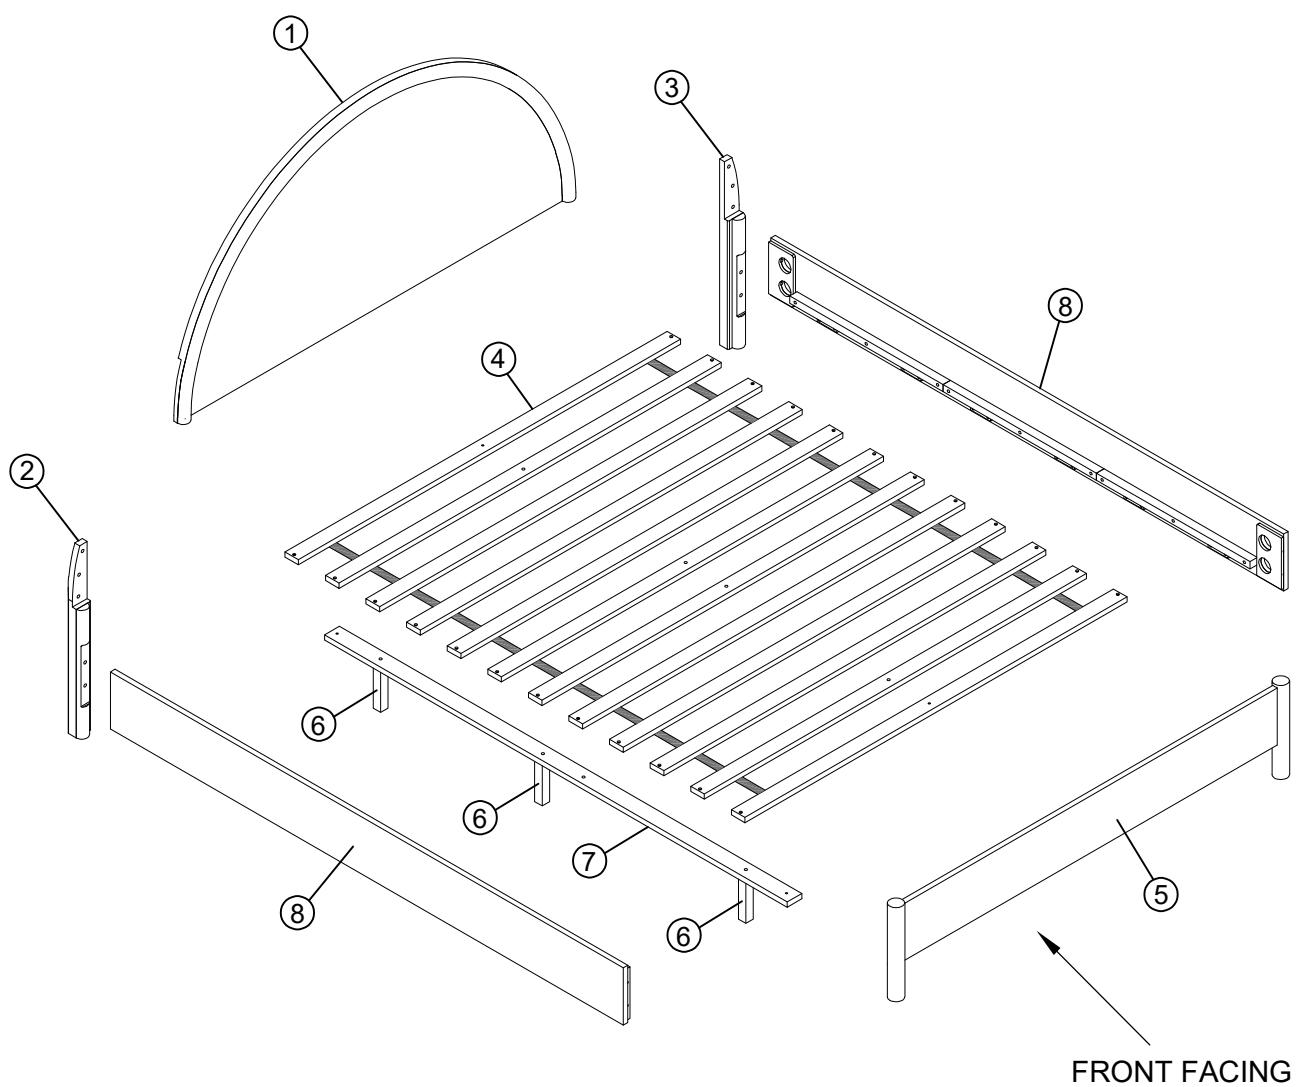

Part List





N778P364095 + Hardware inside

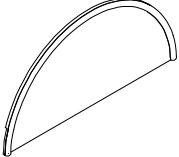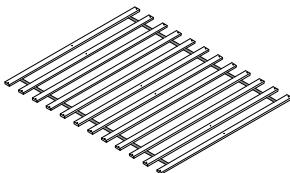① x 1PC  Panel Headboard	② x 1PC  Left Headboard Leg
③ x 1PC  Right Headboard Leg	④ x 1PC  Slat Roll
⑤ x 1PC  Footboard	⑥ x 3PCS  Support Leg



N778P364096

⑦ x 1PC  Center Support Bar	⑧ x 2PCS  Side Rails
--	--


Hardware List

(A) x 7PCS  Ø5/16" x 45mm Bolts	(B) x 4PCS  Ø1/4" x 50mm Bolts	(C) x 3PCS  Ø1/4" x 32mm Bolts
(D) x 15PCS  Ø5/16" x 14mm Spring Washer	(E) x 7PCS  Ø5/16" x 19mm Flat Washer	(F) x 6PCS  Ø1/4" x 13mm Spring Washer
(G) x 6PCS  Ø1/4" x 19mm Flat Washer	(H) x 2PCS  M4x58mm Allen Wrench	(I) x 9PCS  Ø5/16" x 88mm Hanger Bolt
(K) x 9PCS  Ø5/16" x 12x6mm Hexnut	(L) x 9PCS  Ø5/16" x Ø50mm Half Moon Washer	(M) x 1PC  70x12x2mm Open Wrench
(N) x 25PCS  #4x30mm Screw		

ASSEMBLY TOOLS REQUIRED(NOT INCLUDED)

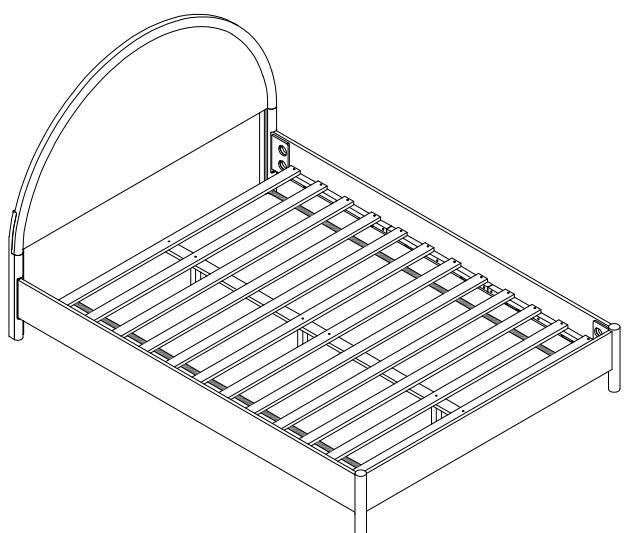


STEP 1:

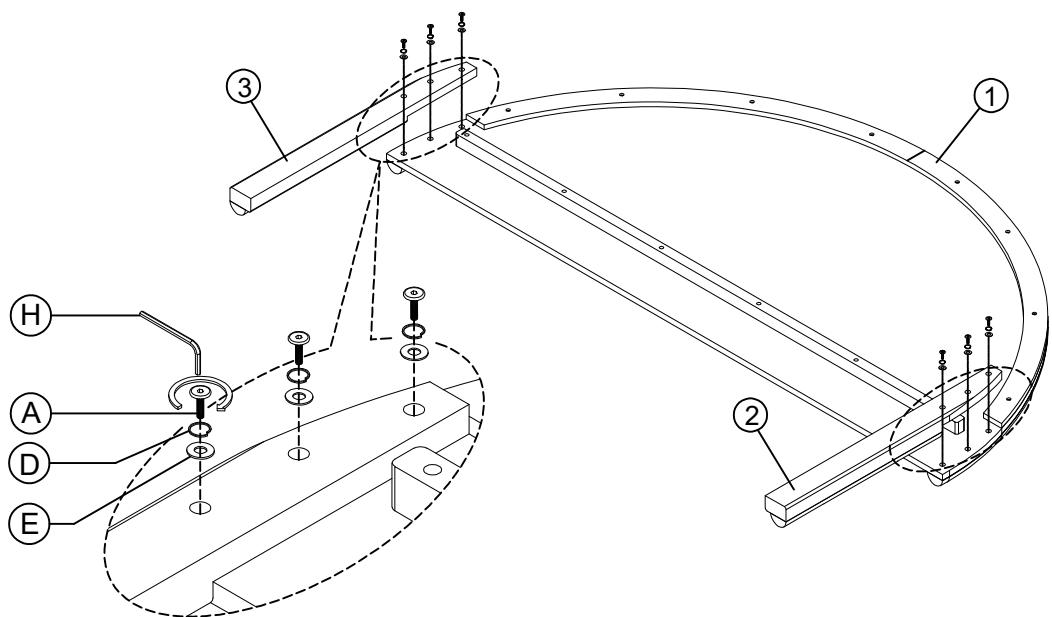


Assemble the Panel Headboard (1) to the Left Headboard Leg (2) and Right Headboard Leg (3) using Bolts (A), Spring Washers (D), and Flat Washers (E). Tighten them with the Allen Wrench (H) .

STEP 2:

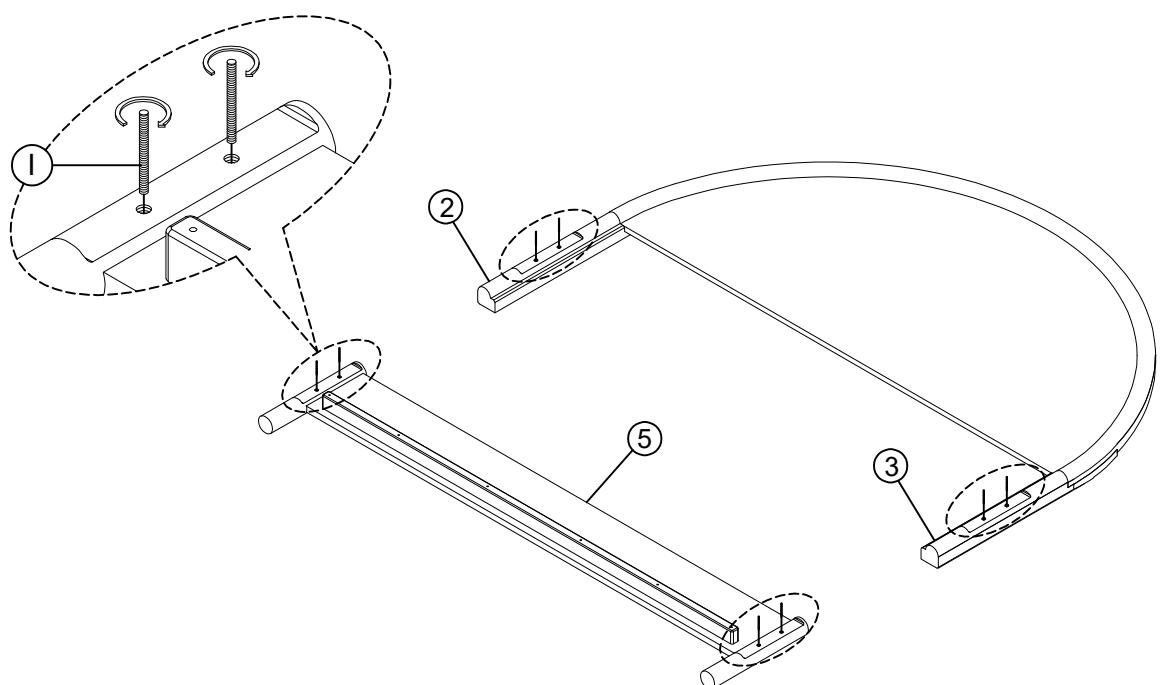


Attach the Hanger Bolts (I) to the Left Headboard Leg (2), Right Headboard Leg (3), and Footboard (5).

STEP 3:

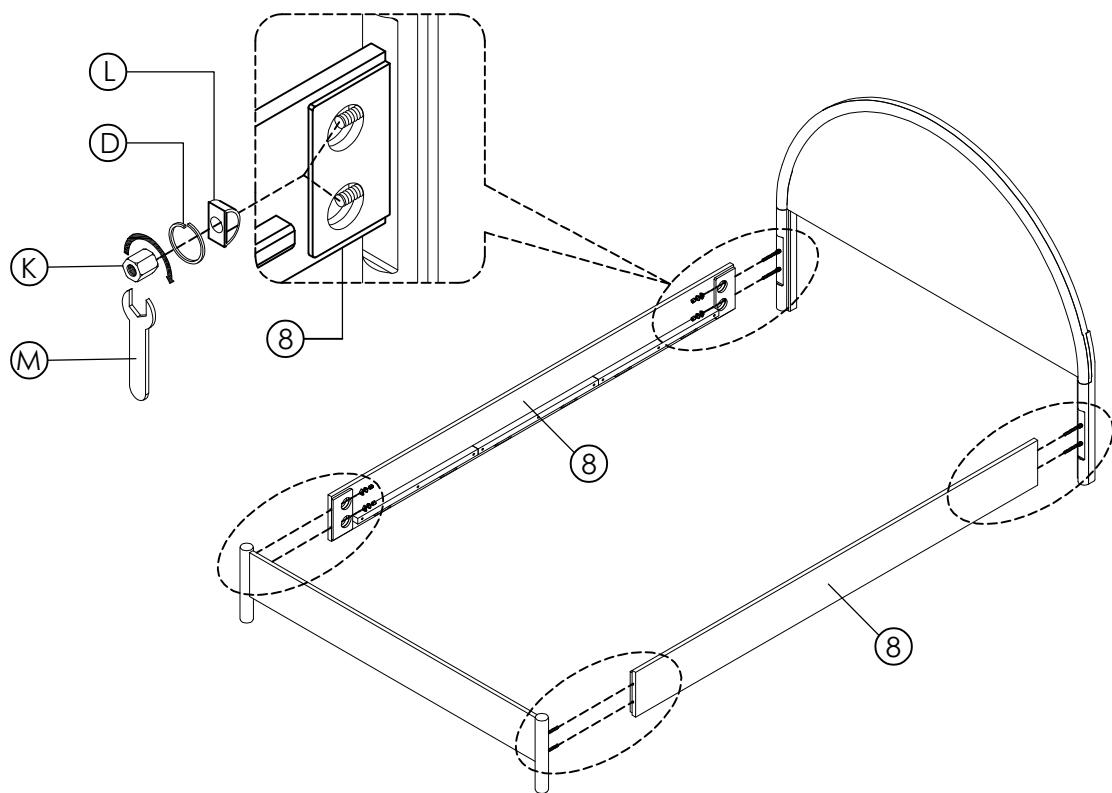


Assemble the Headboard and Footboard to the Side Rails (8) using Hex Nuts (K), Spring Washers (D), and Half Moon Washers (L) to secure the Headboard, Side Rails, and Footboard together. Tighten all nuts with the Open Wrench (M).

STEP 4:

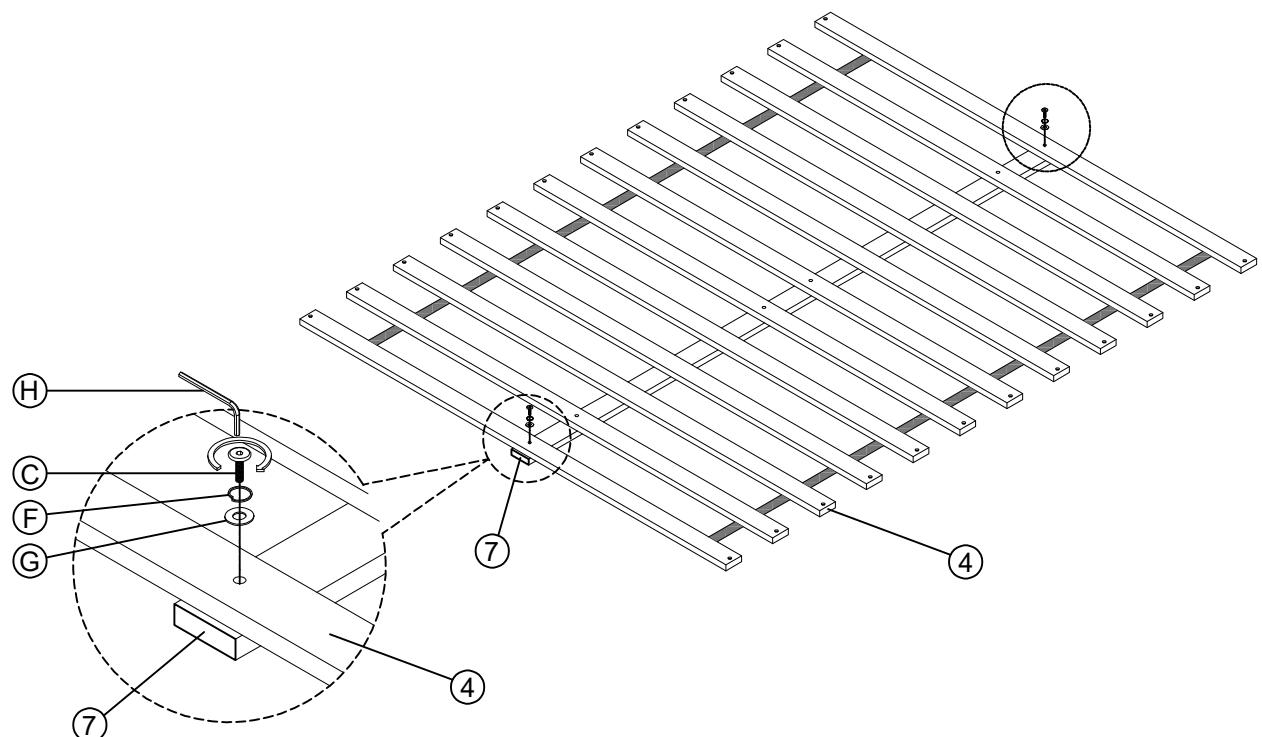


Assemble the Slat Roll (4) to Center Support Bar (7) using Bolts (C), Spring Washers (F), and Flat Washers (G). Tighten them with the Allen Wrench (H).

STEP 5:

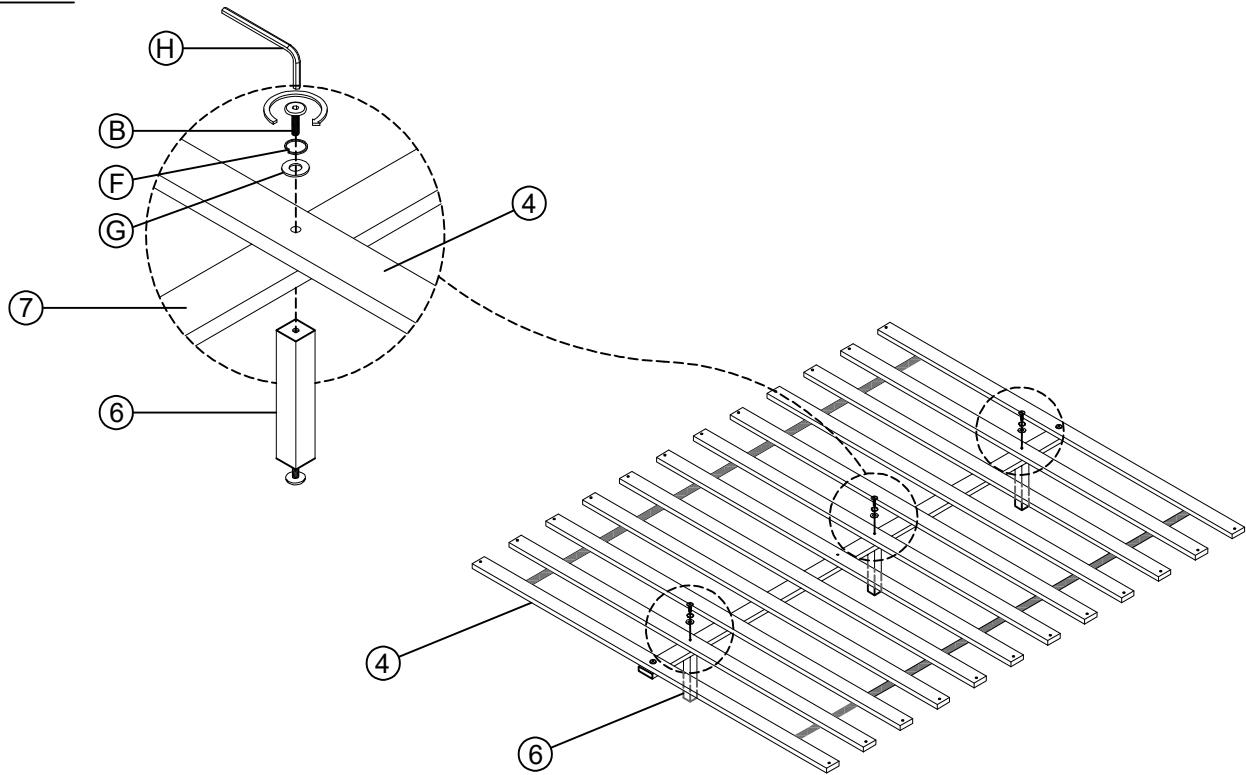


Attach the Support Leg (6) to the assembled Slat Roll (4) and Center Support Bar (7) using Bolts (B), Spring Washers (F), and Flat Washers (G). Tighten them with the Allen Wrench (H).

STEP 6:

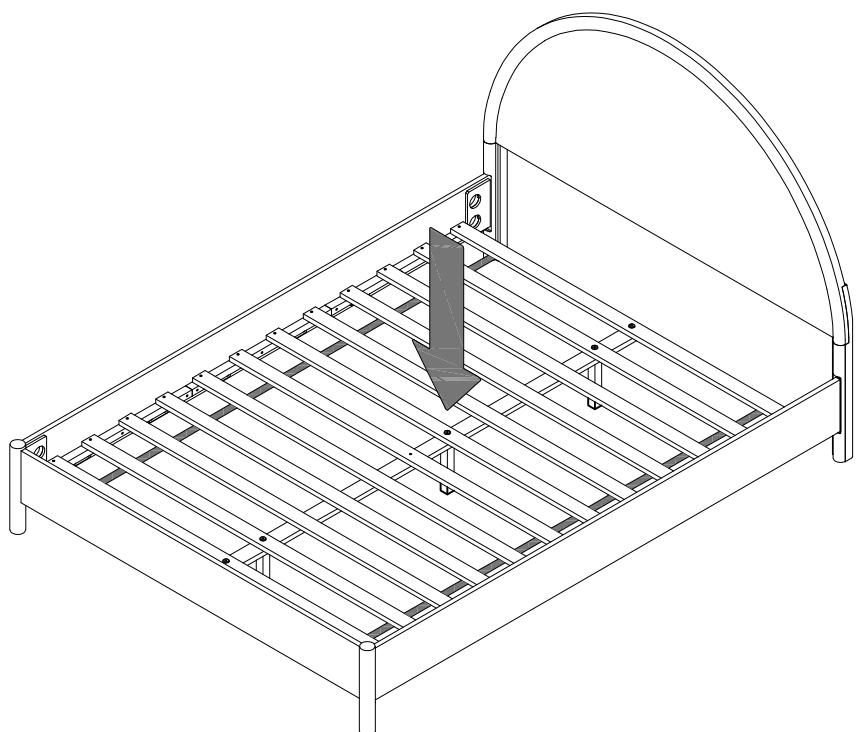

Place the assembled Slat Roll (4) Center Support Bar (7) and Support Leg (6) onto the Side Rails.

STEP 7:

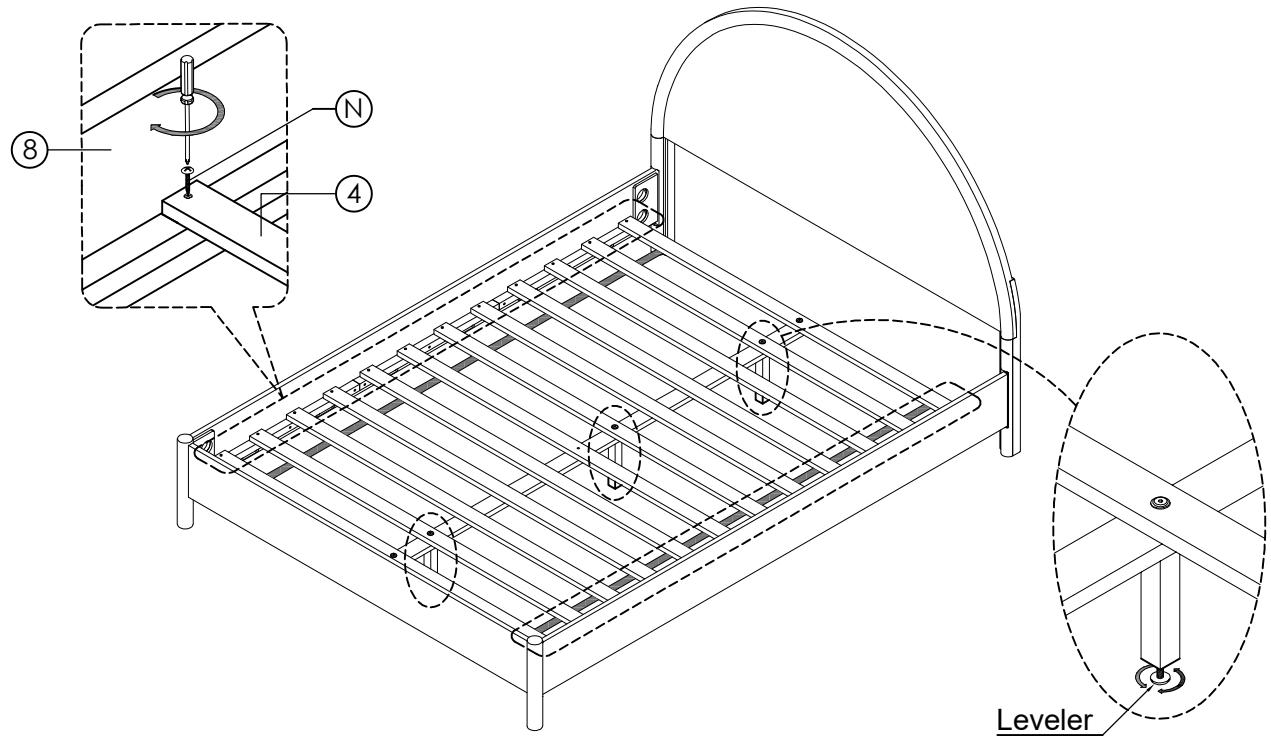


Use Screws (N) to secure the Slats Roll (4) to the Side Rails (8). You may adjust the leveler at the bottom of the Support Leg (6) to balance it with the floor.

STEP 8:

- Check for wobbles.
- In a sequential manner, gradually tighten all Bolts until evenly secured.
- Inspect the Bed and make sure all parts are adequately connected
- With assistance from your adult partners, adjust the levelers to desired height to avoid wobbles.
- To adjust the Levelers, get assistance from an adult partner to lift/lean and hold the Bed while you are working.

Your Bed is ready for use.

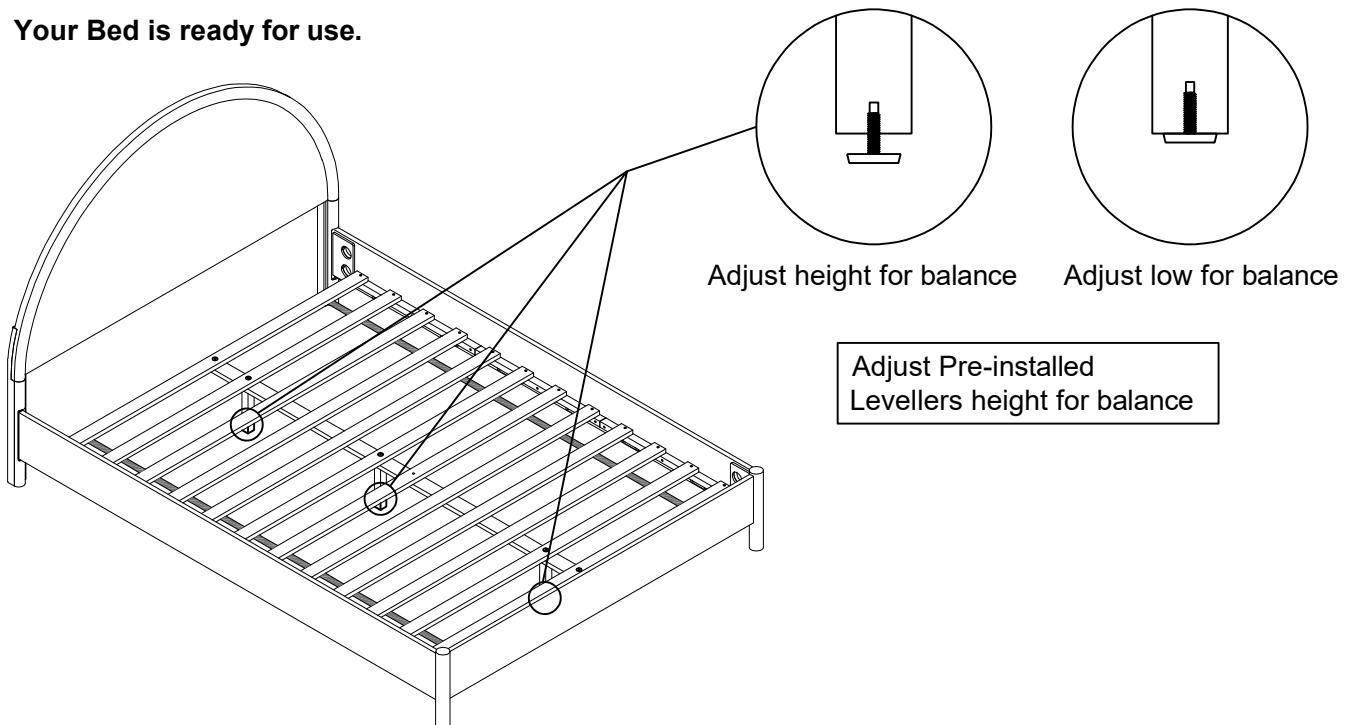

****Please note: this Bed can only be used on a flat, level surface.**