

Assembly Instructions

Caution : You must read this before you proceed

Care & Maintenance

- Not for commercial use. For residential use only.

- Furniture may scratch floors. We recommend using furniture pads to protect your floors.

- Do not put hot items directly on furniture surface.

- Do not clean furniture with harsh cleansers or polish.

- Do not place furniture under direct sunlight.

- Do not place furniture near heating or cooling vents.

- Do not write on furniture without a padded barrier to protect the surface.

- Do not place furniture outside. For indoor use only.

- Stains may be removed with mild soap solution and damp cloth.


- Children should not climb or jump on the furniture.

- Dust and pick-up spills using a clean, non-colored, lint-free cloth.


Please look in N778P390640 for hardware packs and legs.
Sets often ship in multiple boxes and may arrive a day or two apart.


KING SIZED WOODEN BED

N778P390639
N778P390640


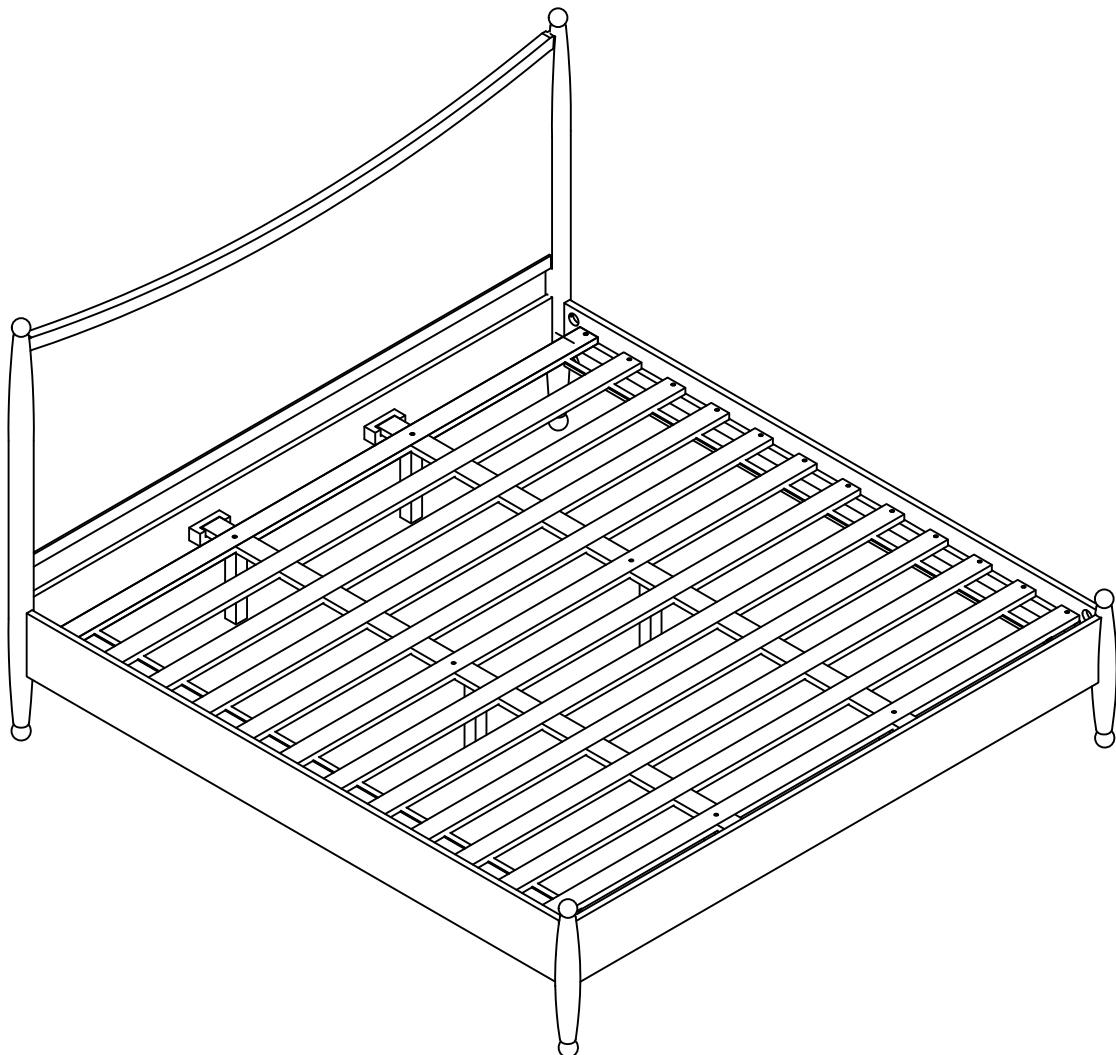


Parts List

Label	Picture	Description	QTY
1		HB PANEL	1PC
2		FOOT BOARD	1PC
3		SIDE RAIL	2PCS
4		FRONT SLAT	1Set (6Pcs/set)
5		CENTER RAIL	2Pcs
6		SUPPORT STAND	6Pcs
7		BOTTOM BAR	1PC
8		HB POST(LEFT)	1PC





















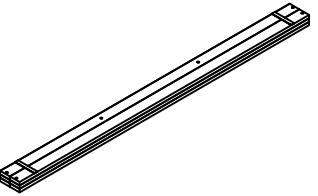
9		HB POST(RIGHT)	1PC
10		FB POST(LEFT)	1PC
11		FB POST(RIGHT)	1PC
12		BACK SLAT	1Set (6Pcs/set)

Hardware

Label	Picture	Description	QTY
A		JCBC SCREW M6 x 25MM	10Pcs
B		CHIPBOARD SCREW M4X32mm	28Pcs
C		SPRING WASHER M6	18Pcs
D		FLAT WASHER M6	18Pcs
E		ALLEN KEY M4	1Pc
F		WOOD DOWEL M8 x 35MM	12Pcs
G		CAM-LOCK 15 x 12MM	4Pcs
H		CAM-BOLT 5 x 25MM	4Pcs
I		CAM-LOCK COVER 17 x 5MM	4Pcs
J		STUD BOLT M6 X 45	8Pcs
K		HEX NUT M6	8Pcs
L		SPANNER M10	1Pc
M		HALF MOON NUT M8	8Pcs

Assembly Preparation


Before Beginning Assembly:

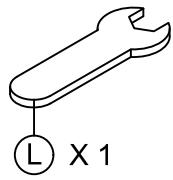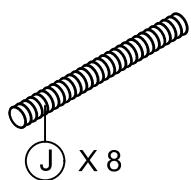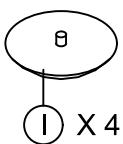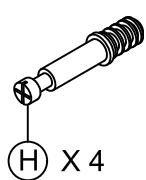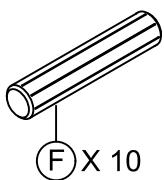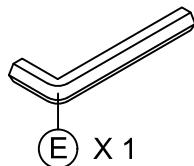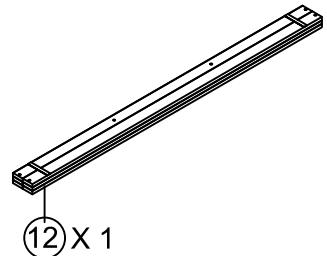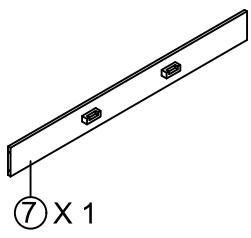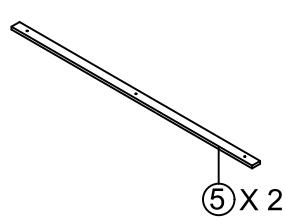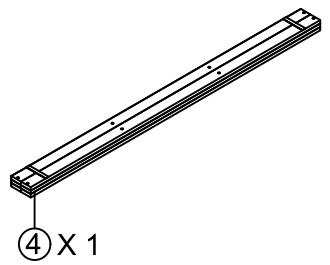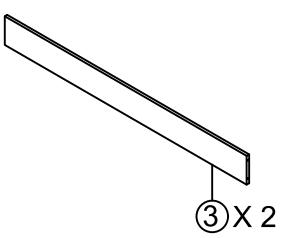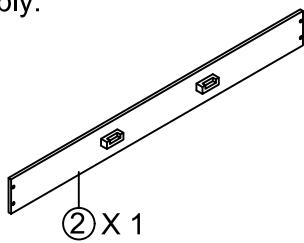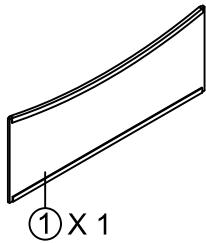




- Read instruction, cover to cover-
- Assembly by two adult-
- Do not assemble on flooring or carpet-
- Assembly on a clean non-marring surface (packing form)-
- Read instruction, cover to cover-

Overview

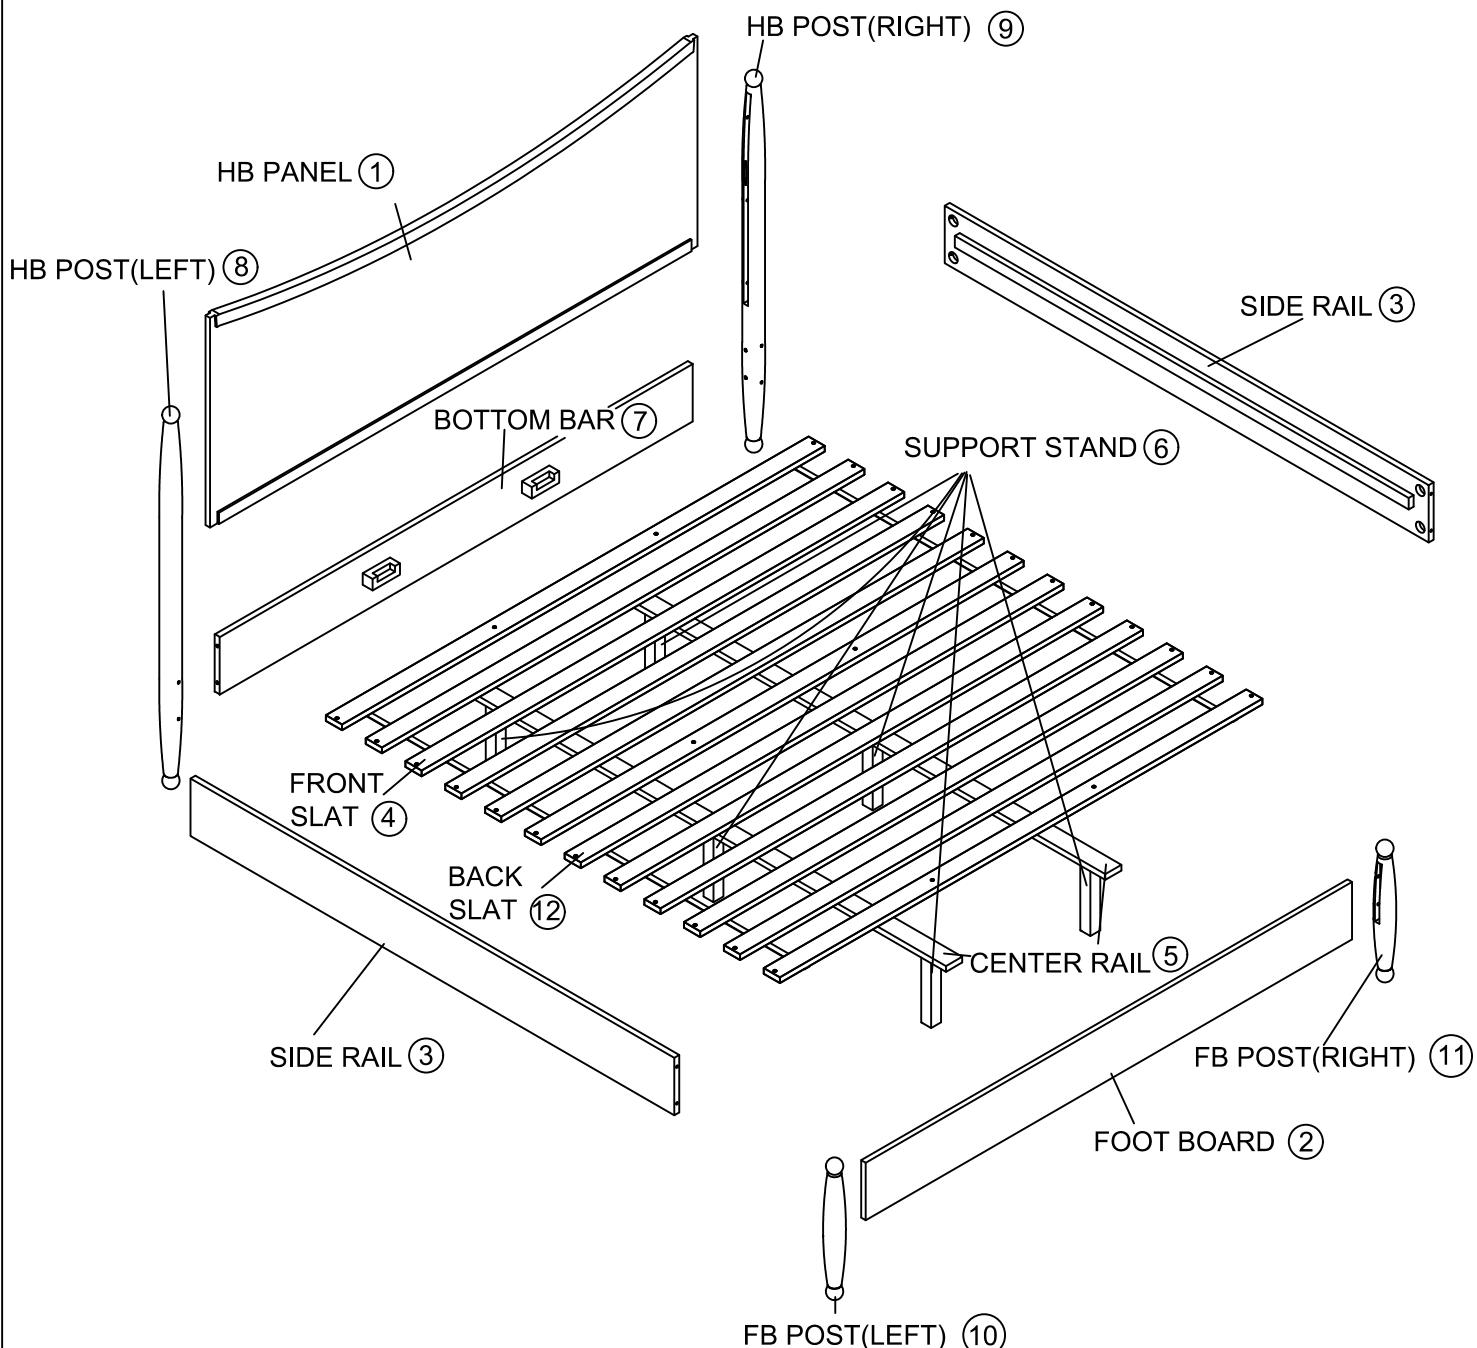


This King Bed has multiple parts and may require up to some 60 minutes to assemble. To give you an overview of the King Bed parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarize yourself with the parts and steps before assembly

STEP 1

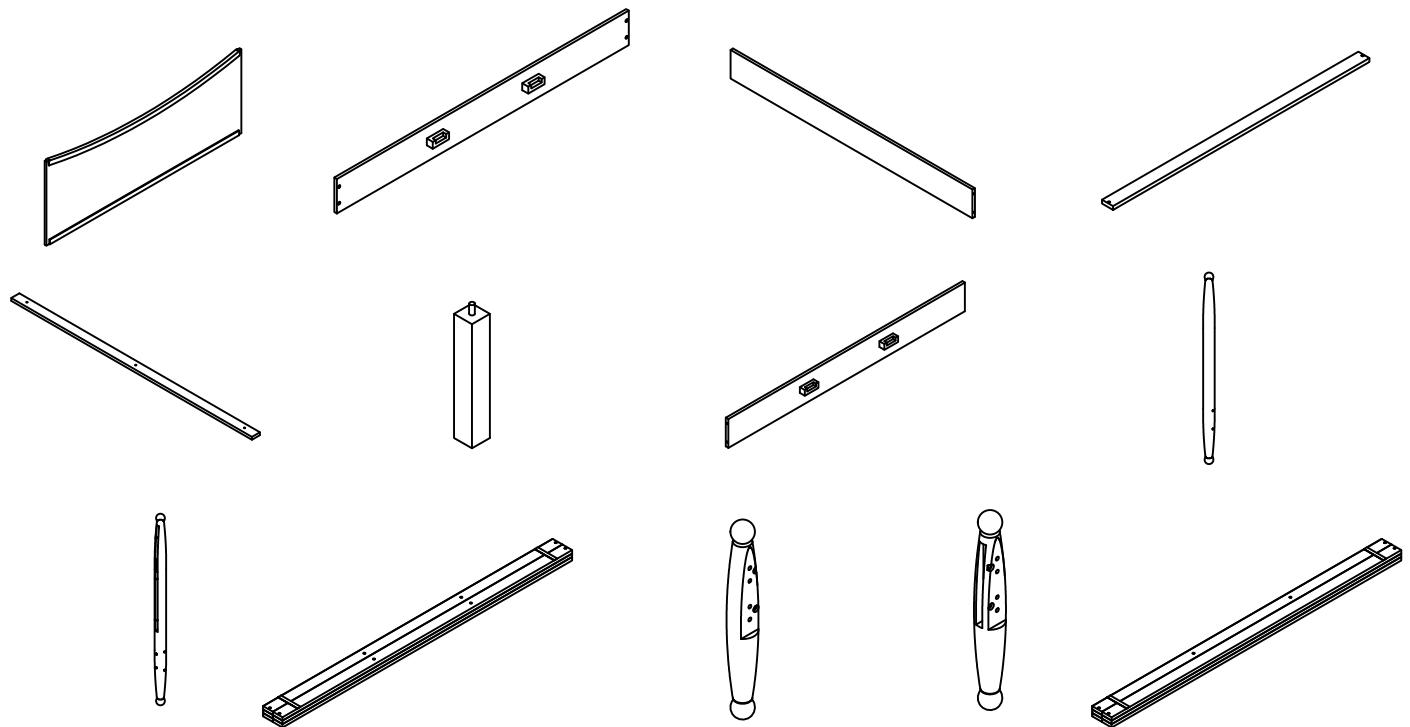

Unpack and place all parts on a clean, non-marring surface.


STEP 2

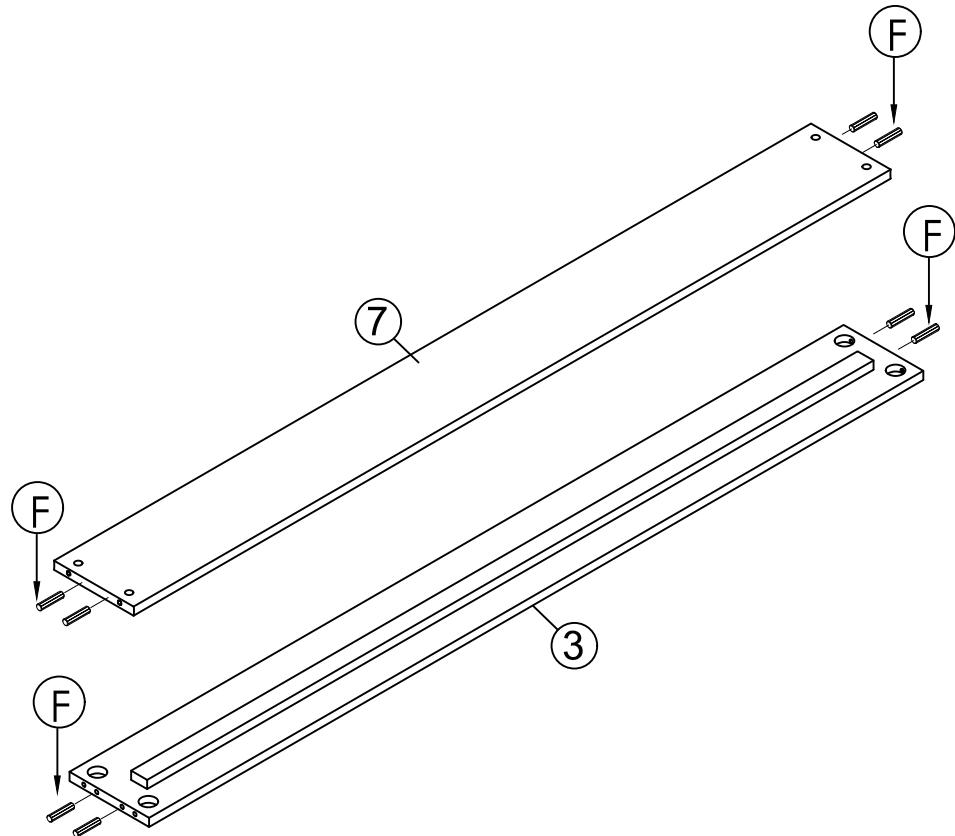

Place the Side Rail (3) and Bottom Bar (7) on a clean, soft surface with the top side facing upward to prevent scratches or damage.

Insert Wood Dowel (F) to Bottom Bar (7) and Left & Right Side Rail (3).


STEP 3

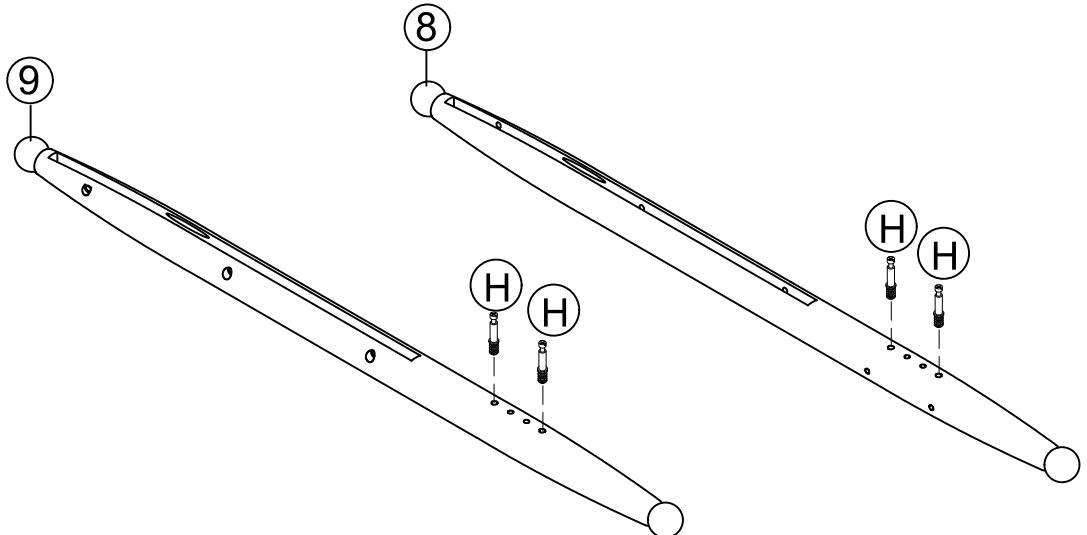

Insert & secure Cam Bolt (H) to HB Left & Right Post (8 & 9)

NOTE : Do not over tighten the Cam Bolt (H).

STEP 4

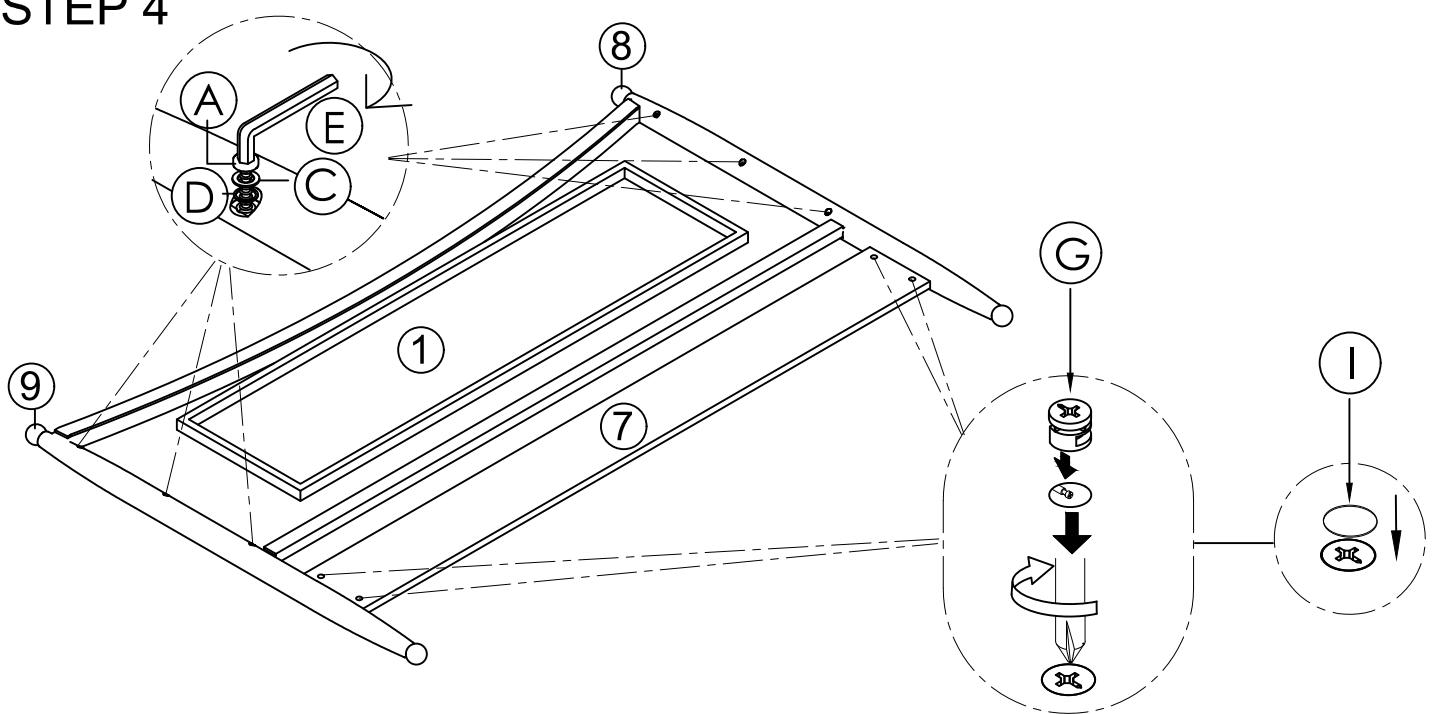


Position the HB Left & Right Post (8 & 9), HB Panel (1) and Bottom Bar (7) as shown in the illustration above.

Secure HB Panel (1) to HB Left & Right Post (8 & 9) and using Allen Key (E) secure with JCBC Screw (A), Spring Washer (C) and Flat Washer (D).

Bottom Bar (7) to Left & Right HB Post (8 & 9) and secure with Cam Lock (G).

Cover Cam Lock (G) with Cam Lock Cover Cover (I).


STEP 5

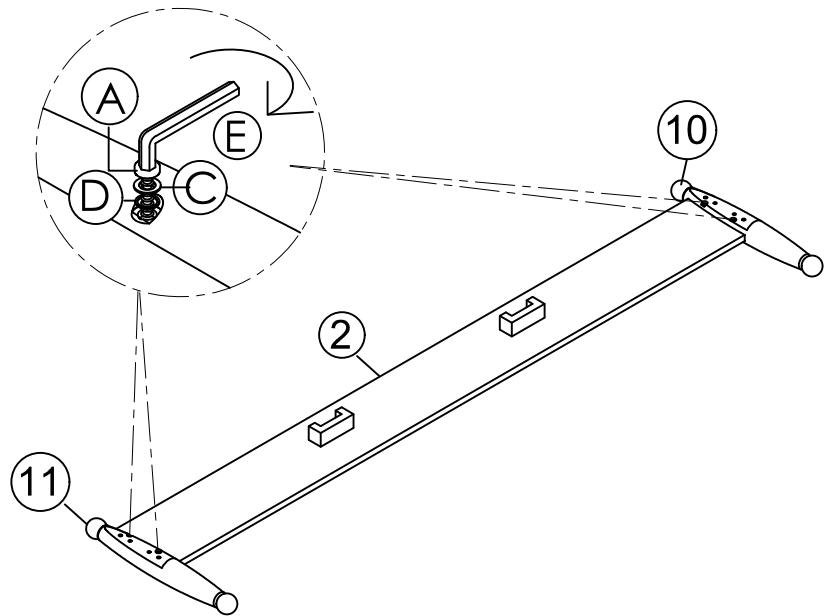

Position the FB Left & Right Post (10 & 11), FB Panel (2) as shown in the illustration above.

Secure FB Panel (2) to FB Left & Right Post (10 & 11) and using Allen Key (E) secure with JCBC Screw (A), Spring Washer (C) and Flat Washer (D).


STEP 6

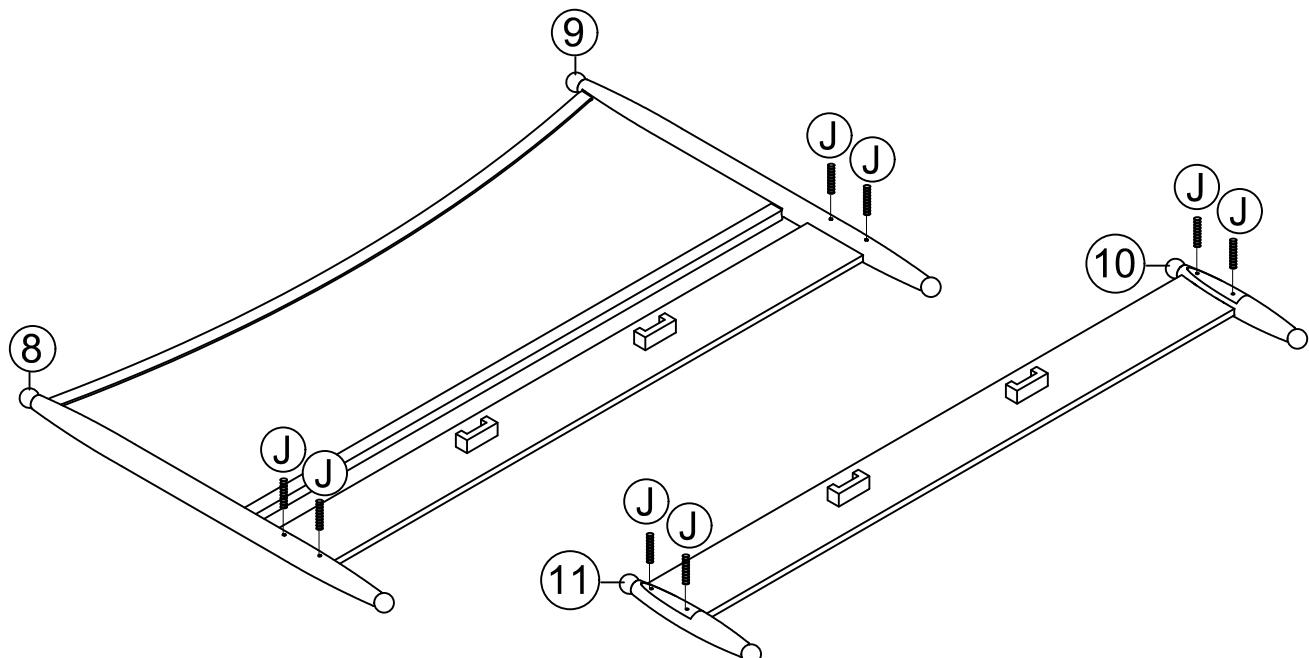

Secure Stub Bolt (J) to HB Left & Right Post (8 & 9) and FB Left & Right Post (10 & 11).


NOTE : Do not over tighten the Stub Bolt (J).

STEP 7

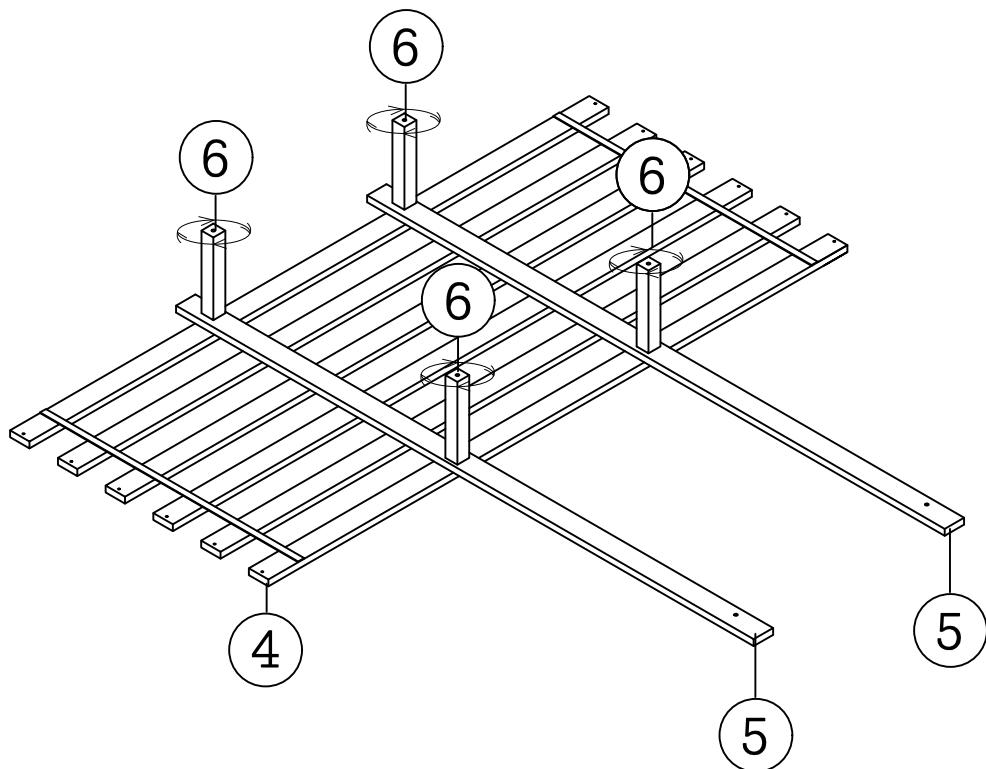


Secure Support Stand (6) to Front Slat (4) through Center Rail (5).

STEP 8

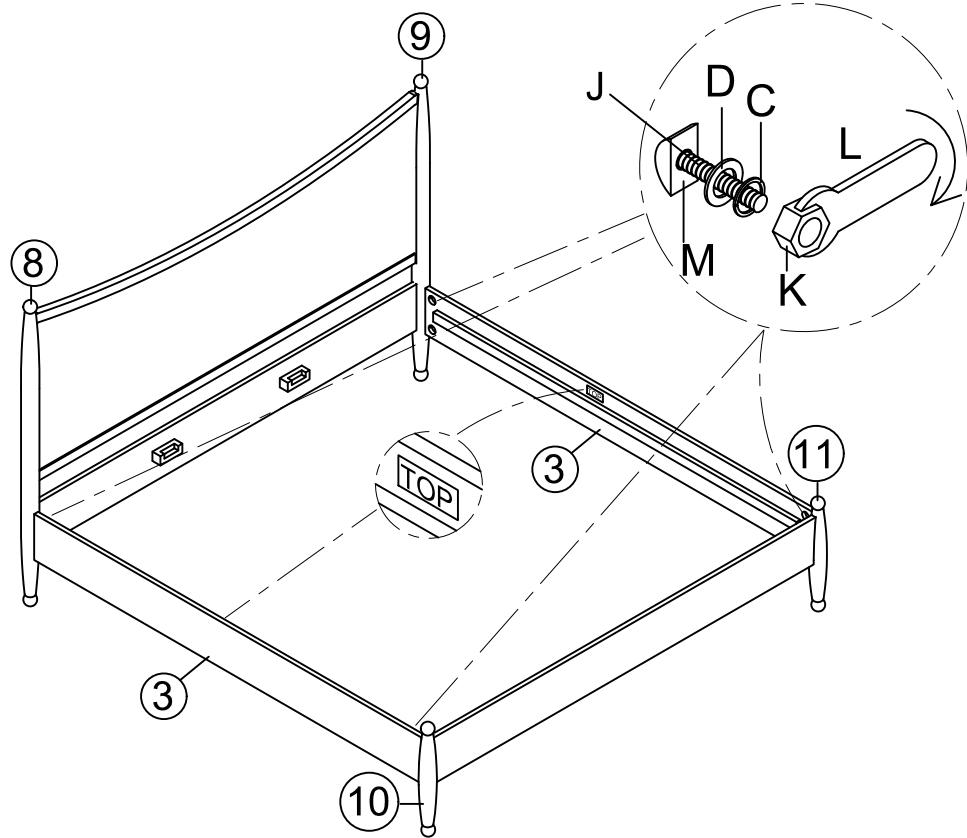


Secure Side Rail (3) to HB Left & Right Post (8 & 9) & FB Left & Right Post (10 & 11). Use Hex Nut (K), Spring Washer (C), Flat Washer (D) and Half Moon Nut (M) to fasten Stub Bolt (J) at Left & Right Headboard Post (8 & 9) & Footboard (2). Use Spanner (L) to drive Hex Nut (K).

STEP 9

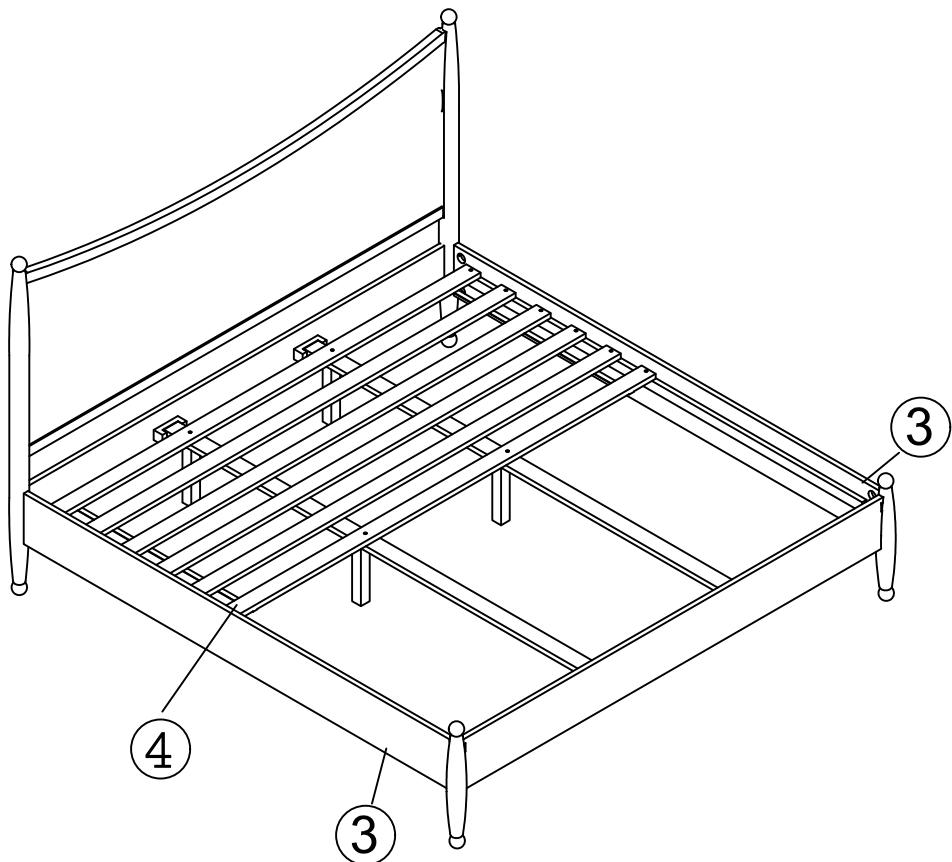


Place Front Slats (4) to Side Rail (3).

STEP 10

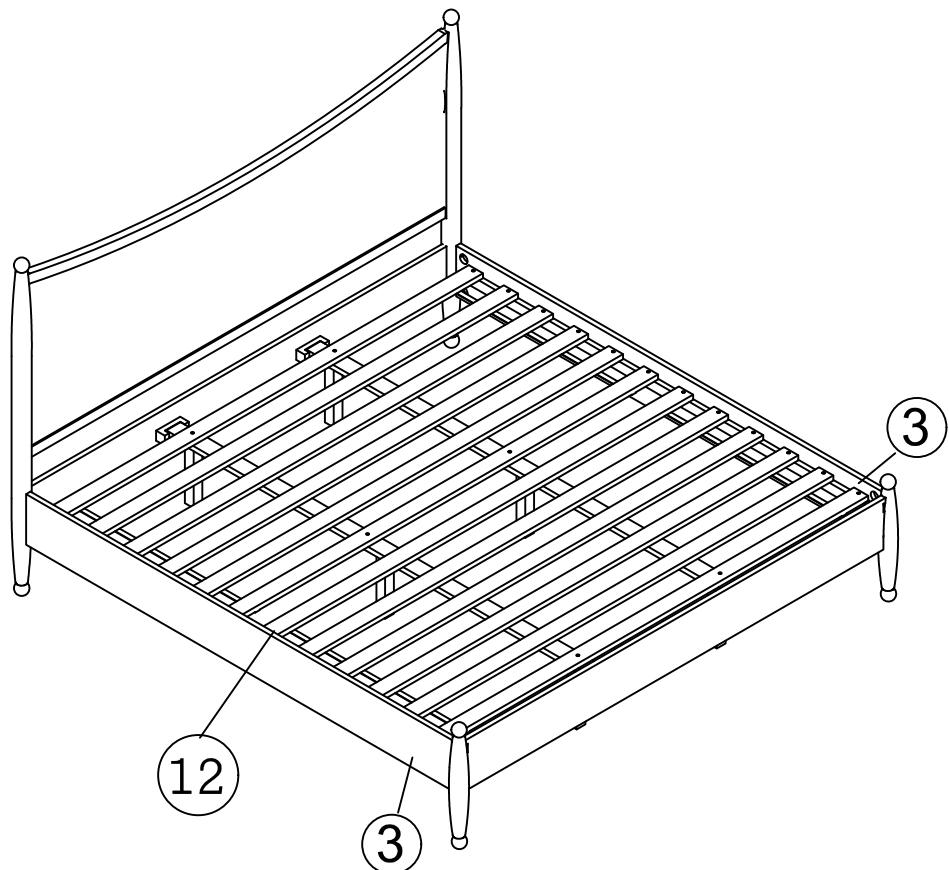

Place Back Slats (12) to Side Rail (3).

STEP 11

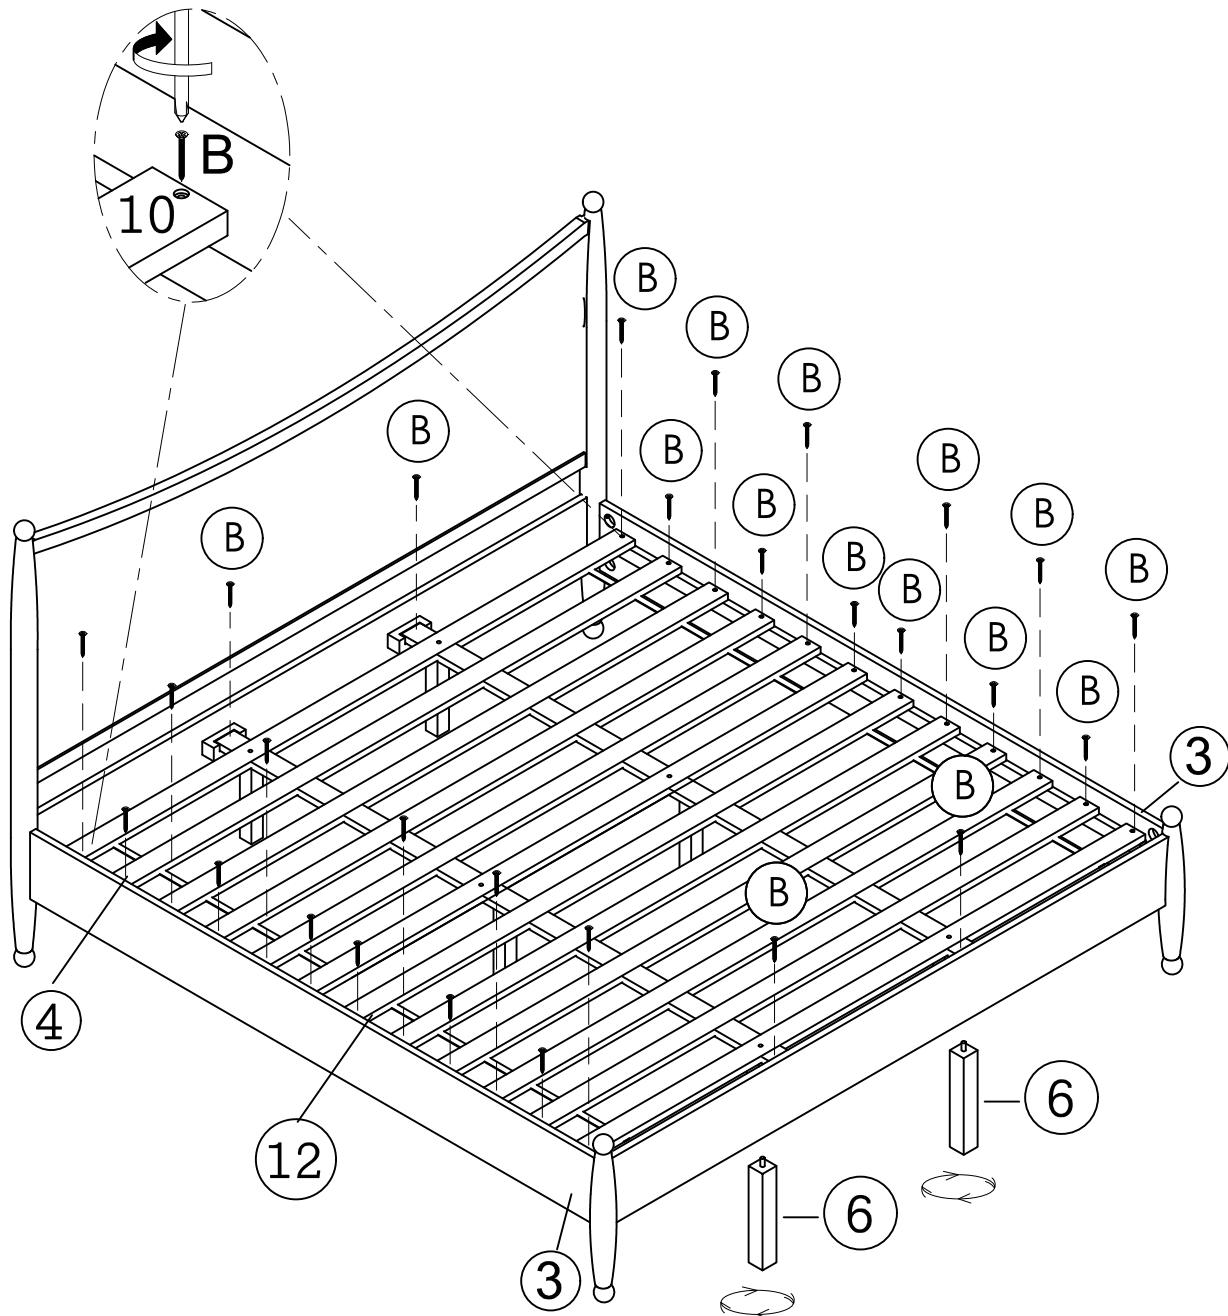


Next, Attach Front Slat (4) and Back Slat (12) to Side Rail (3) using Chipboard Screw (B) to secure.

Secure Support Stand (6) to Back Slat (12) through Center Rail (5).

STEP 12

- Check for wobbles.
- In a sequential manner, gradually tighten all Bolts until evenly secured.
- Inspect the Bed and make sure all parts are adequately connected.**
- With assistance from your adult partner, adjust the levelers to desired height to avoid wobbles.
- To adjust the Levelers, get assistance from an adult partner to lift/lean and hold Bed while you are working

Your King Bed is ready for use.

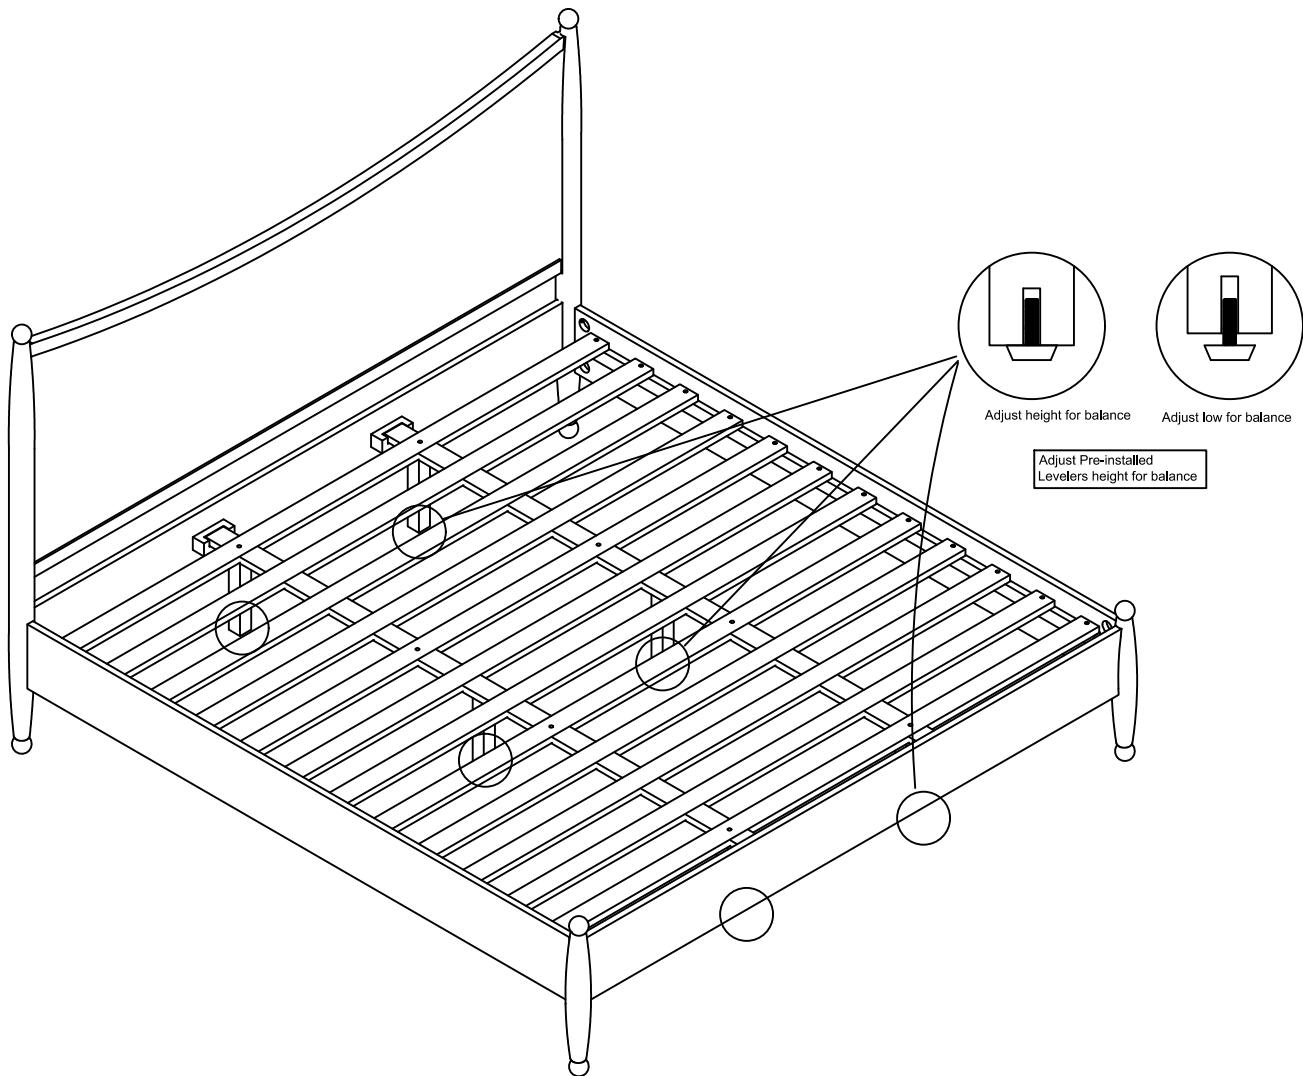

**This King Sized Wooden Bed can only used on a flat, level surface.