


Kitchen Island Carts

Assembly Instructions - Please keep for future reference

SKU: N707P396287/N707P396288

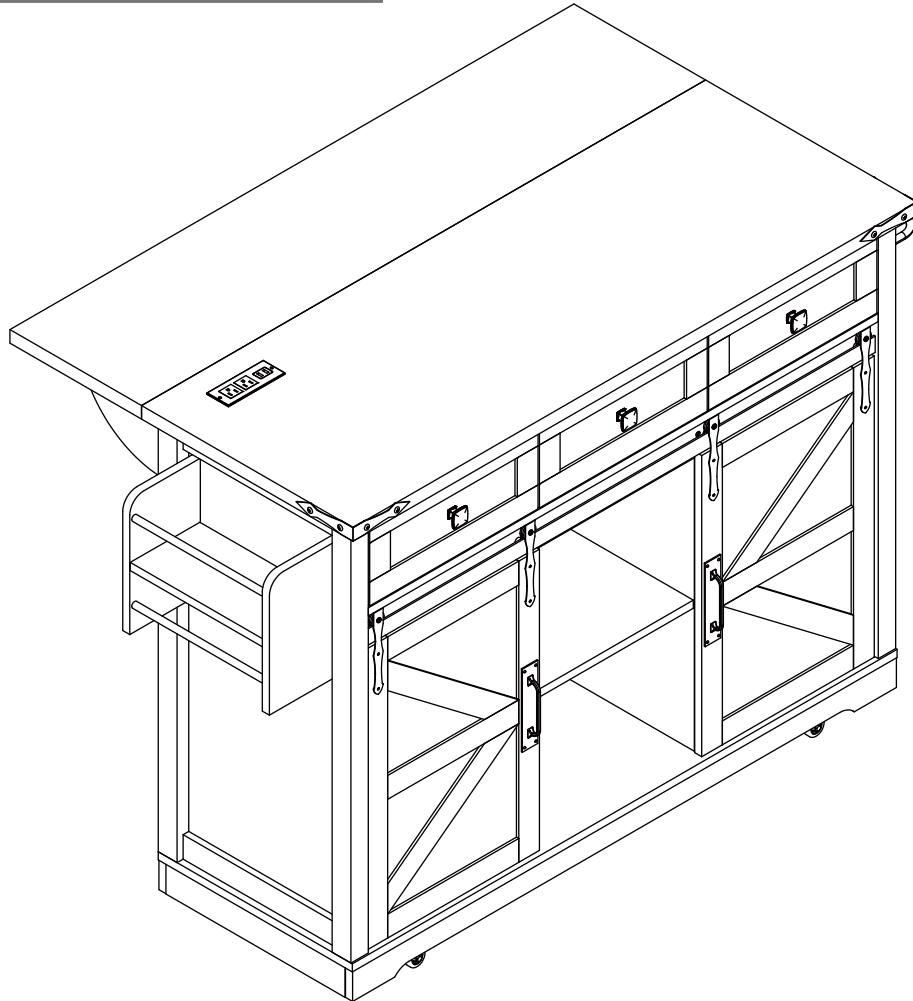

Dimensions

Width-47.2inch

Depth-17.7inch+11inch

Height-36.2inch

Important – Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

WARNING

In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose








Please note that only the anti tip strap is provided.

You will need to provide wall plugs and screws applicable for your wall type



Components - Fittings

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

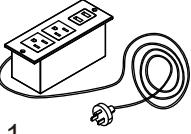(A)	(B)	(C)	(D)
 Cam Bolt x 42	 Cam lock x 42	 6*40mm Dowel x 34	 3.5*30mm Screw x 18
 3*12mm Screw x 91	 Hold hands + 4*22mm Screw x 2	 7x40mm Screw x 12	 6*50mm Screw x 2
 6*25mm Screw x 23	 Iron bar x 1	 Caster x 3	 Locking caster x 2
 hinge x 7	 Pivot x 10	 Angle iron x 4	 Hold hands x 3 4*16mm Screw x 3
 Pulley x 4	 Pulley x 1	 Screwdriver x 1	 Y2 x2 Y1
 3*16mm Screw x 12	 Allen Wrench x 1	 x1	
 Runner 300mm x 3	 Runner 300mm x 3	 Runner 300mm x 3	 Runner 300mm x 3

Ruler - Use this ruler to help correctly identify the screws



The screws length is measured from the head to the point (35mm screw shown).


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

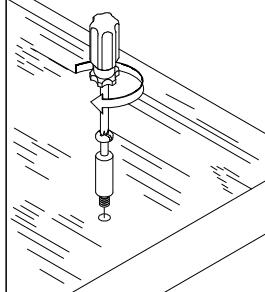

Step 2

Push the male camlock into the entry hole.

2

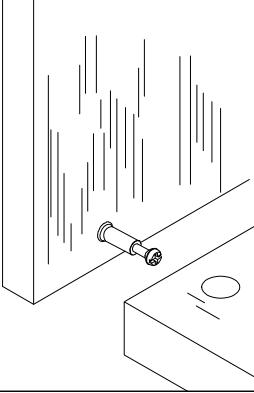


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

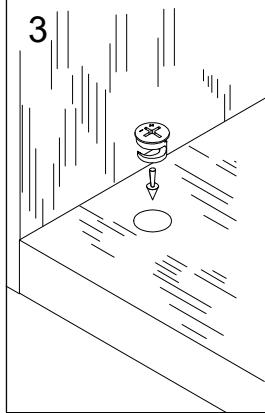


Step 4

Turn the female camlock clockwise with a screwdriver.



You should feel a click when the camlock is locked in place.

The joint is now secure.

4

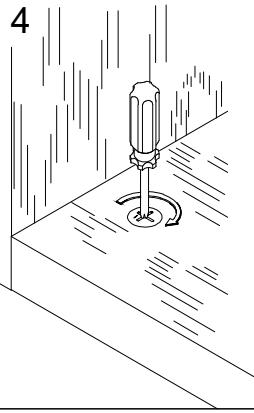


Tools required

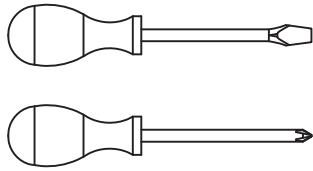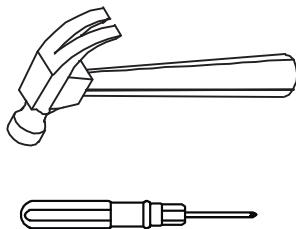













Phillips screwdriver
(medium & large)

Assembly Instructions






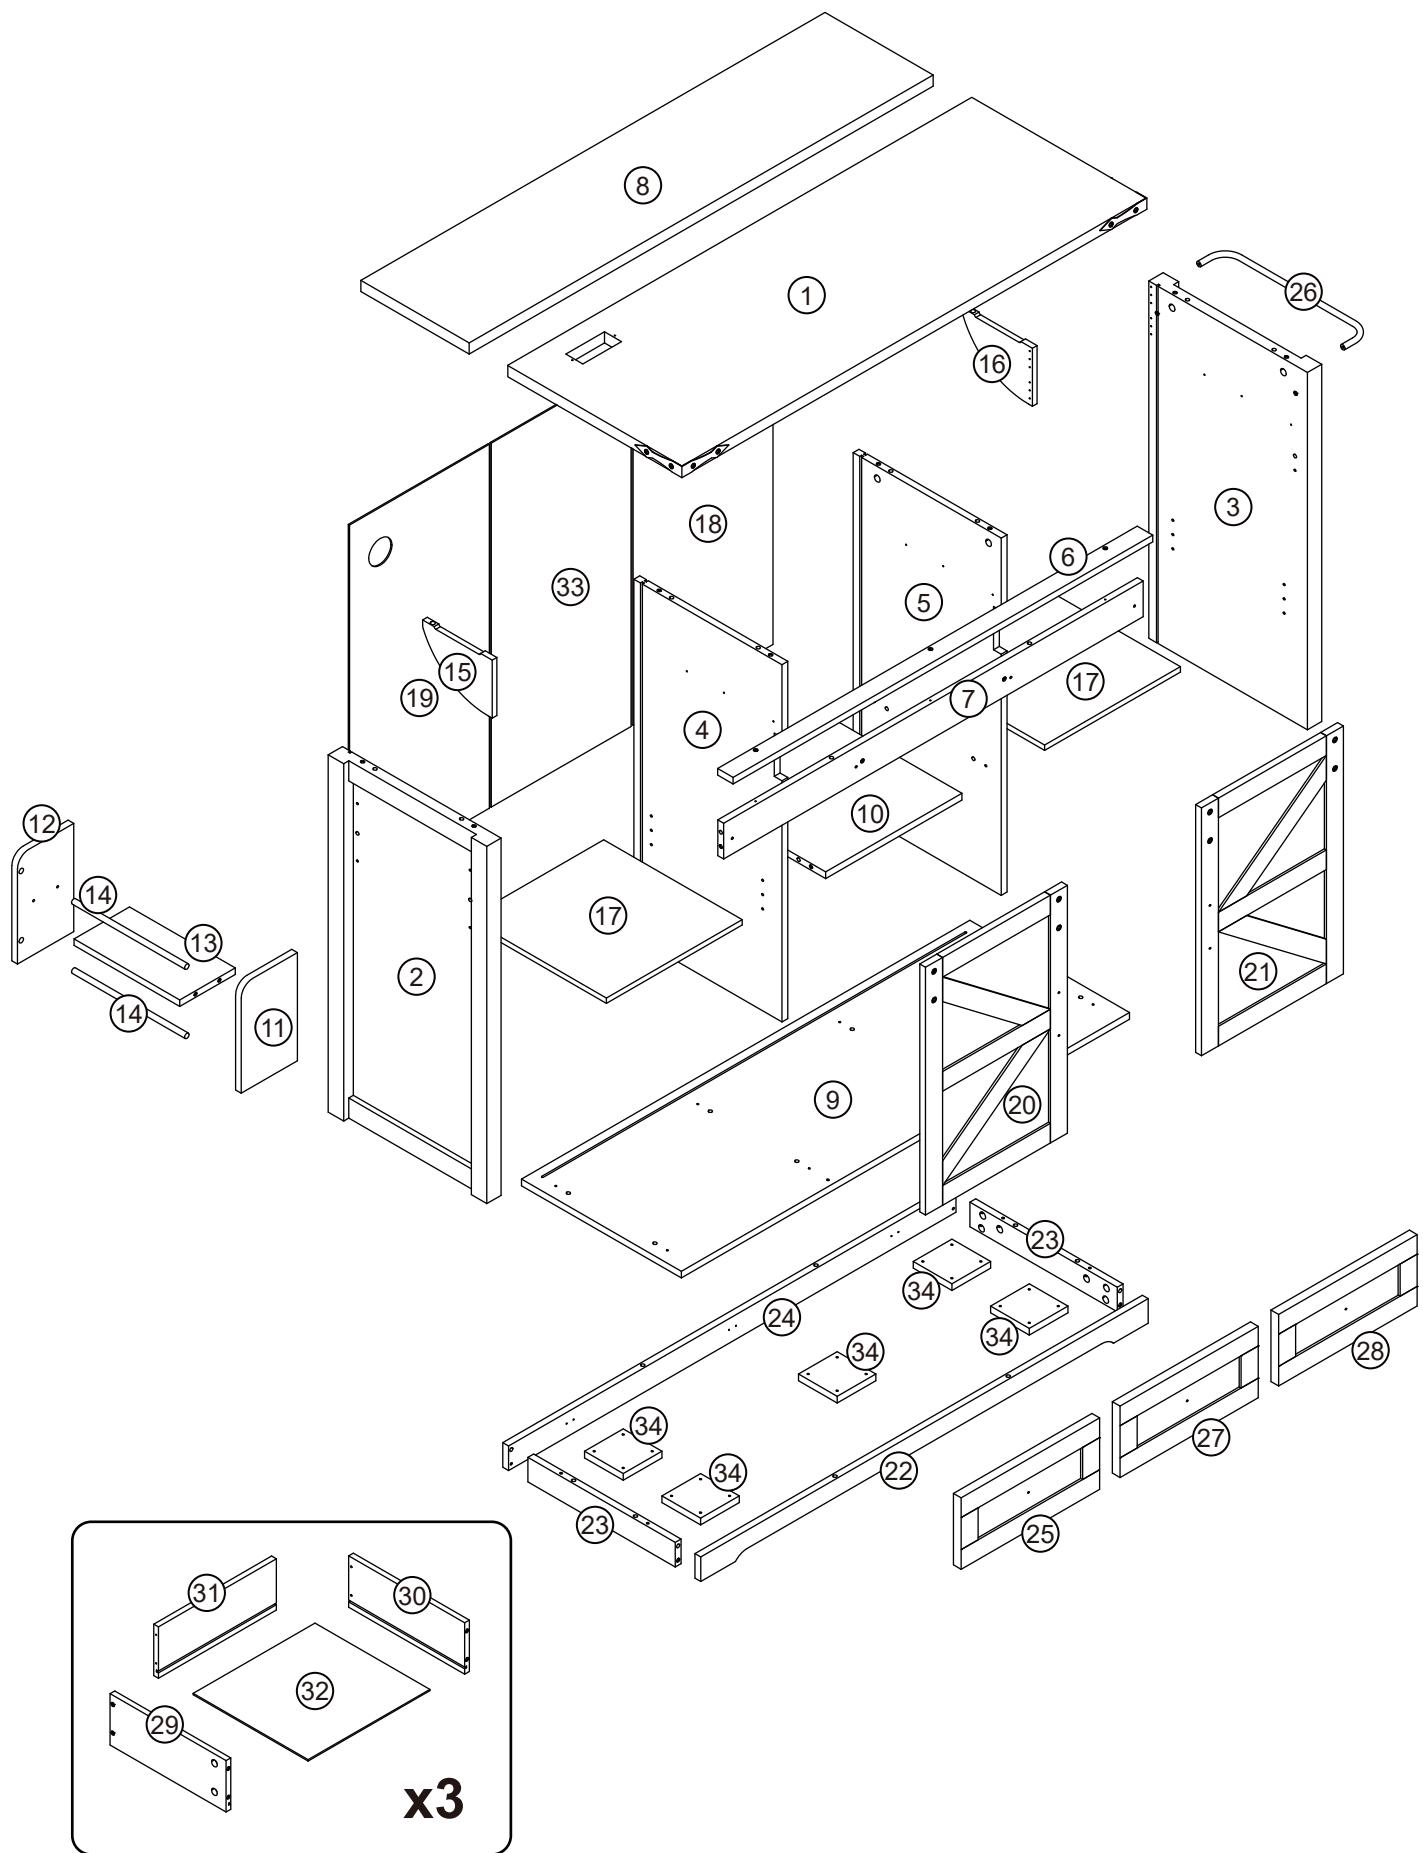


Assembly Instructions





BOX A - N707P396287

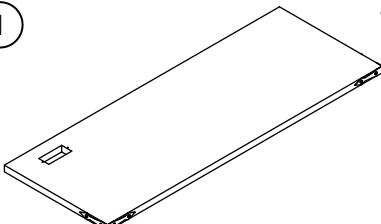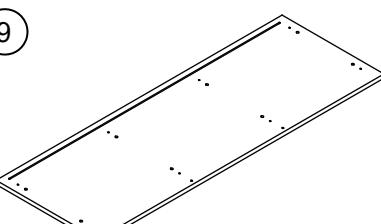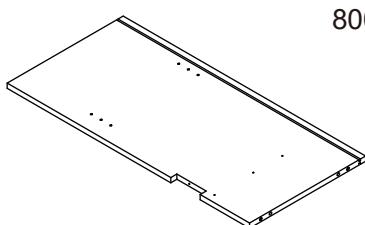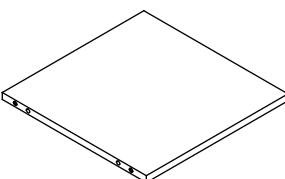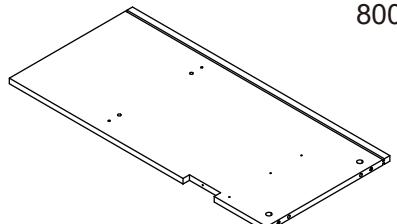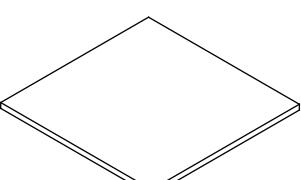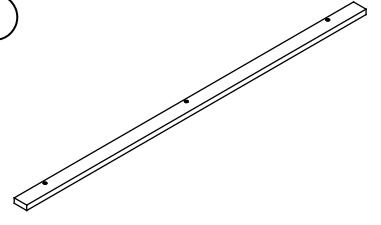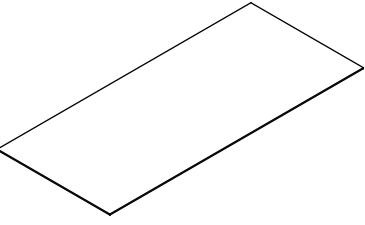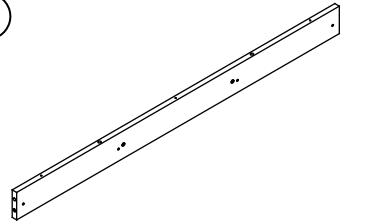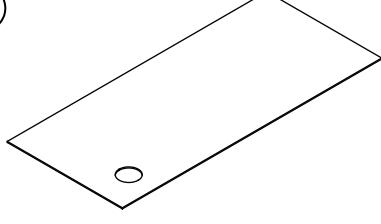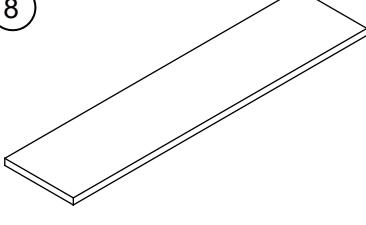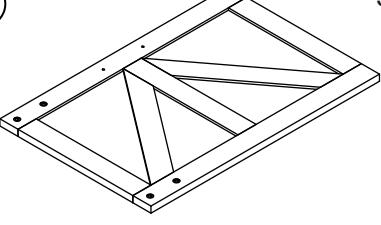 1	 1
 1	 1
 1	 2
 1	 1
 1	 1
 1	 1














Assembly Instructions

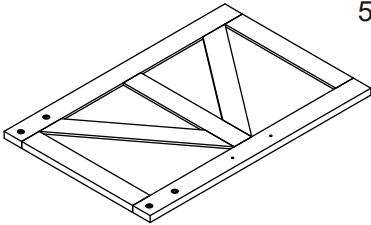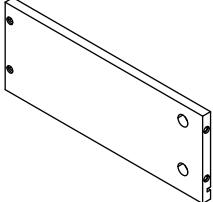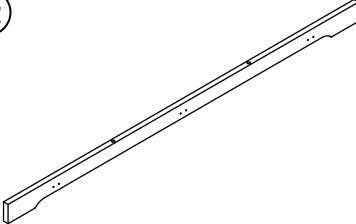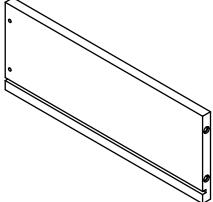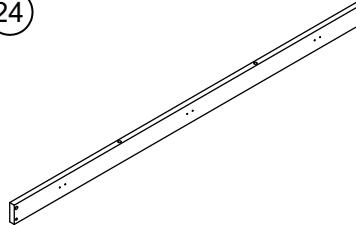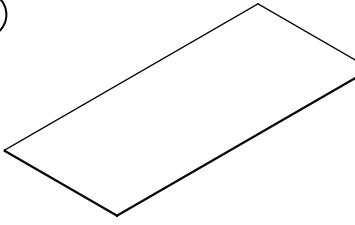 21	556 x 366 x 15 mm	 29	301 x 114 x 12 mm	1	3
 22	1156 x 56 x 15 mm	 30	301 x 114 x 12 mm	1	3
 24	1156 x 56 x 15 mm	 33	808 x 358 x 4 mm	1	1

BOX B - N707P396288

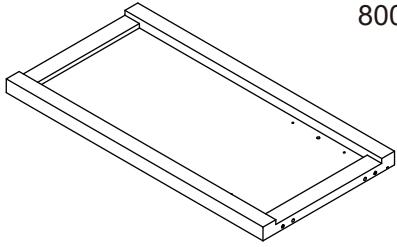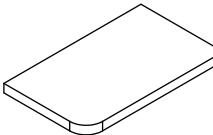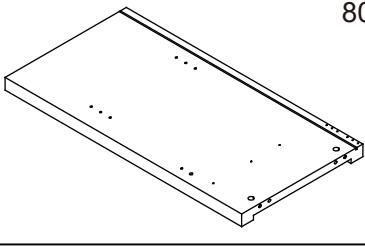
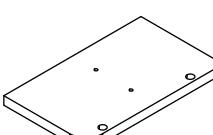
 2	800 x 412 x 37 mm	 11	250 x 150 x 15 mm	1	1
 3	800 x 412 x 37 mm	 12	250 x 150 x 15 mm	1	1

Assembly Instructions

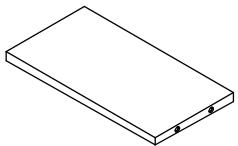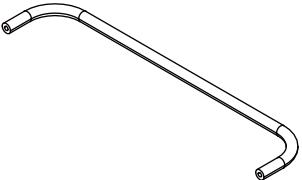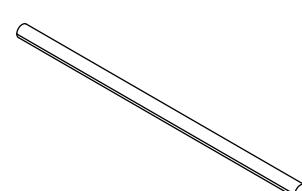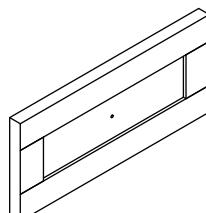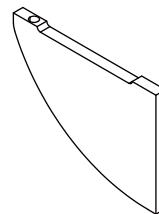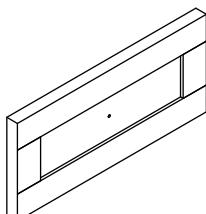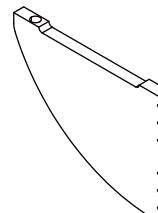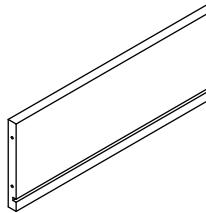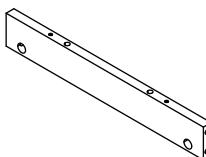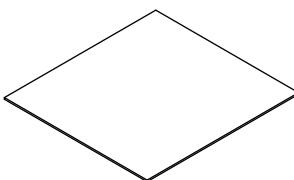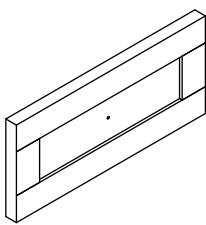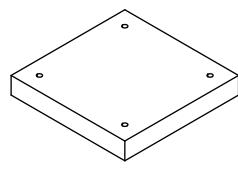
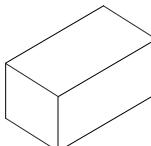
 13	288 x 148 x 15 mm	 26	379 x 80 x 13 mm	1
 14	308 x 16 mm	 27	357 x 160 x 16 mm	1
 15	180 x 134 x 15 mm	 28	357 x 160 x 26 mm	1
 16	180 x 134 x 15 mm	 31	301 x 114 x 12 mm	3
 23	384 x 56 x 15 mm	 32	308 x 295 x 4 mm	3
 25	358 x 160 x 20 mm	 34	100 x 100 x 15 mm	5
 1	Hardware kid x1			

Assembly Instructions

Step 1

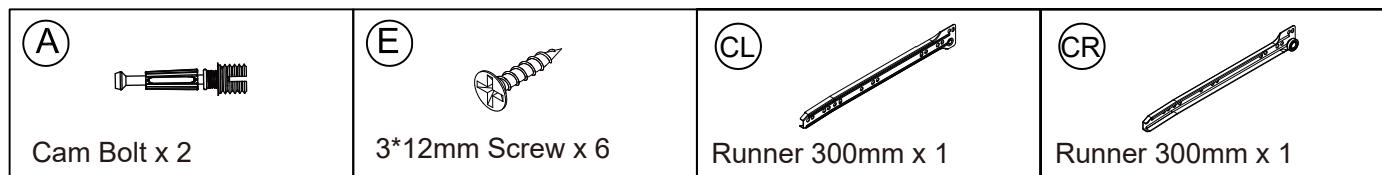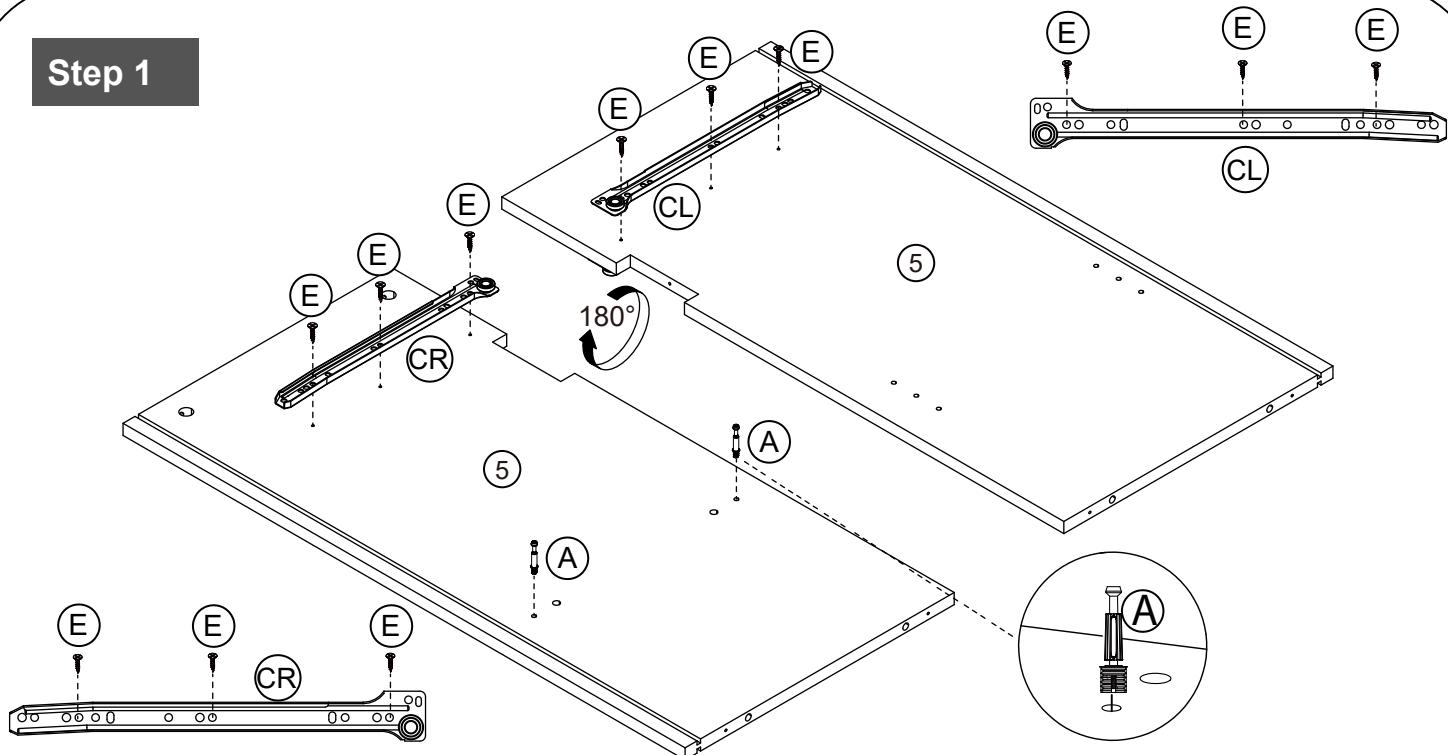


Step 2

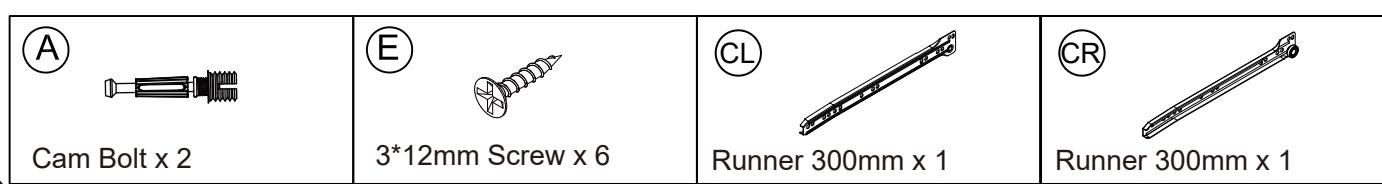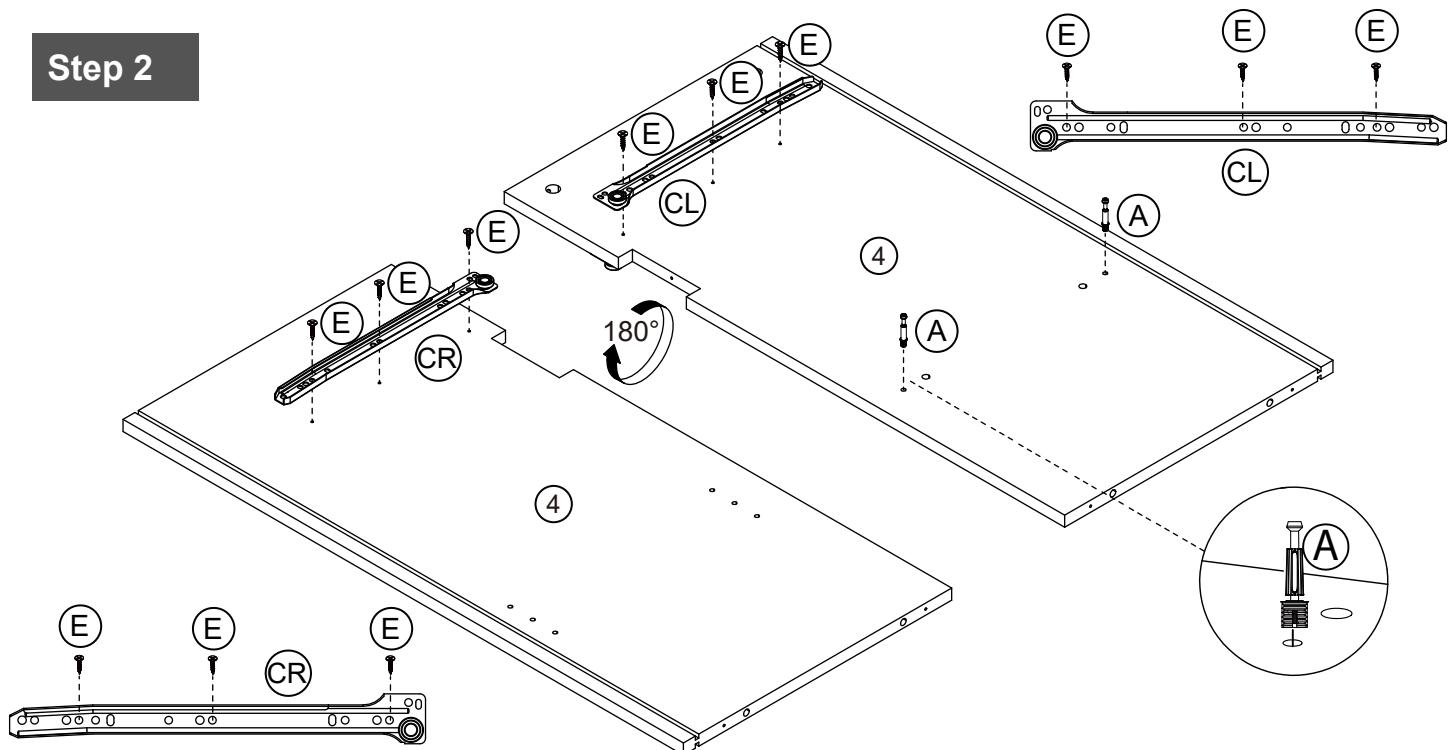


Assembly Instructions

Step 3

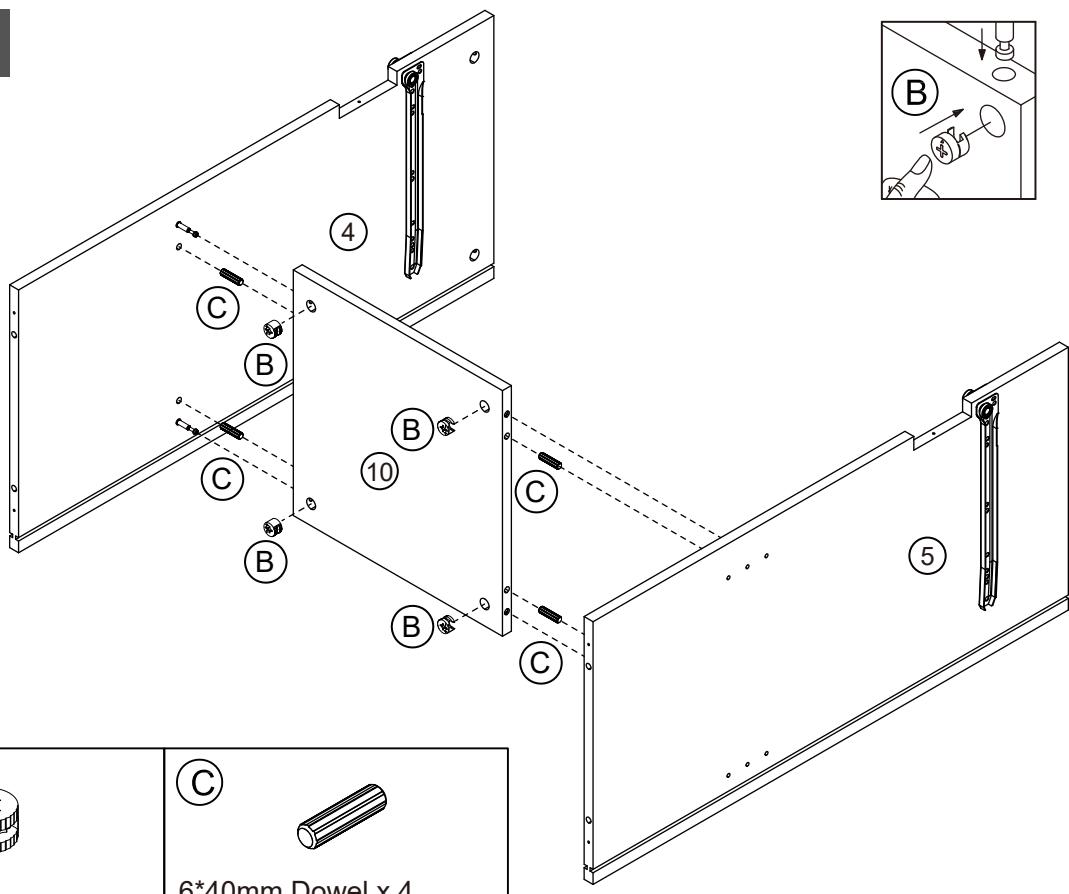


Step 4

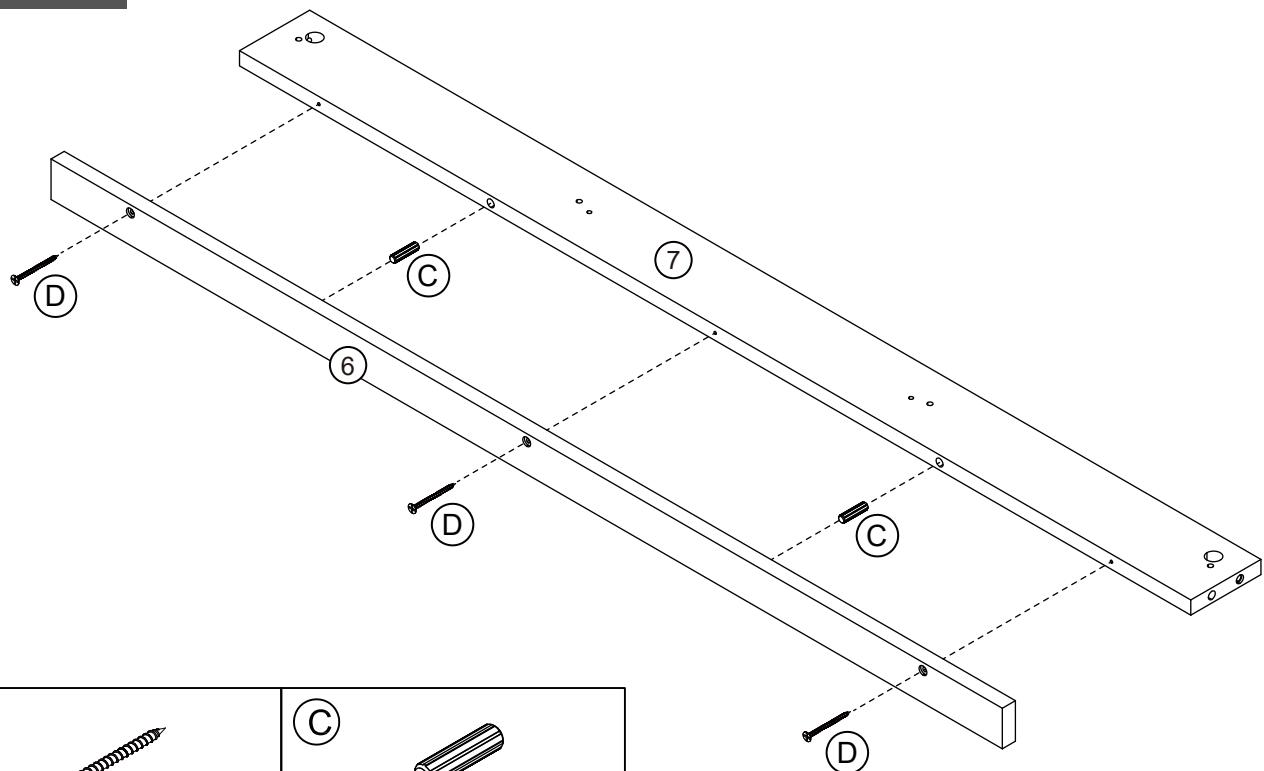


Assembly Instructions

Step 5

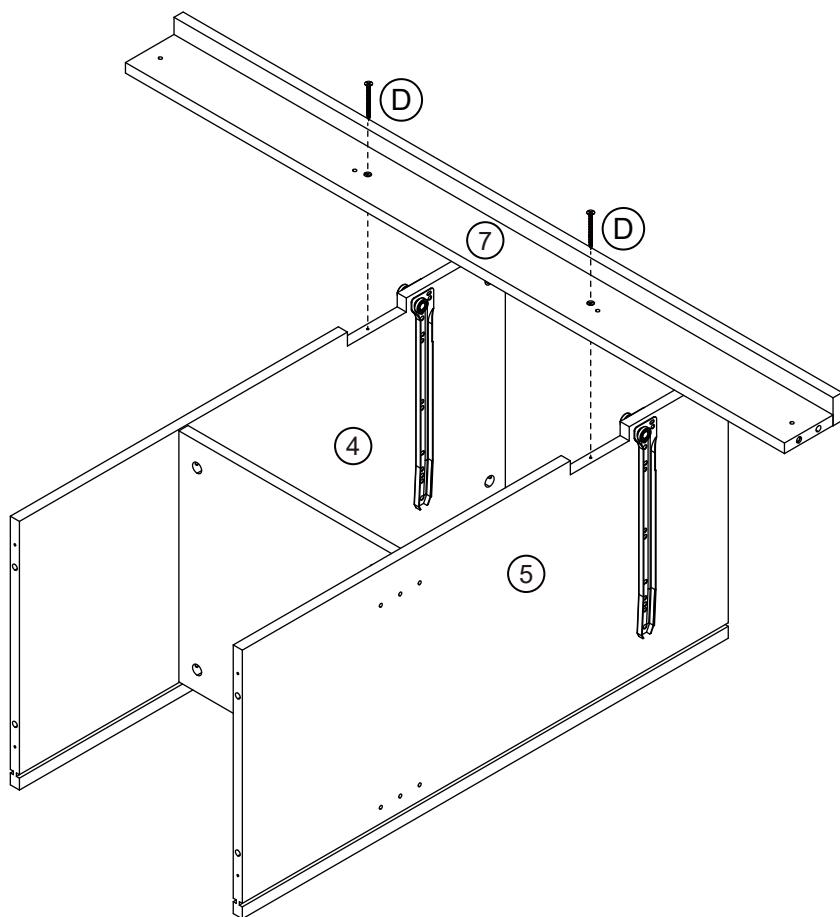


Step 6

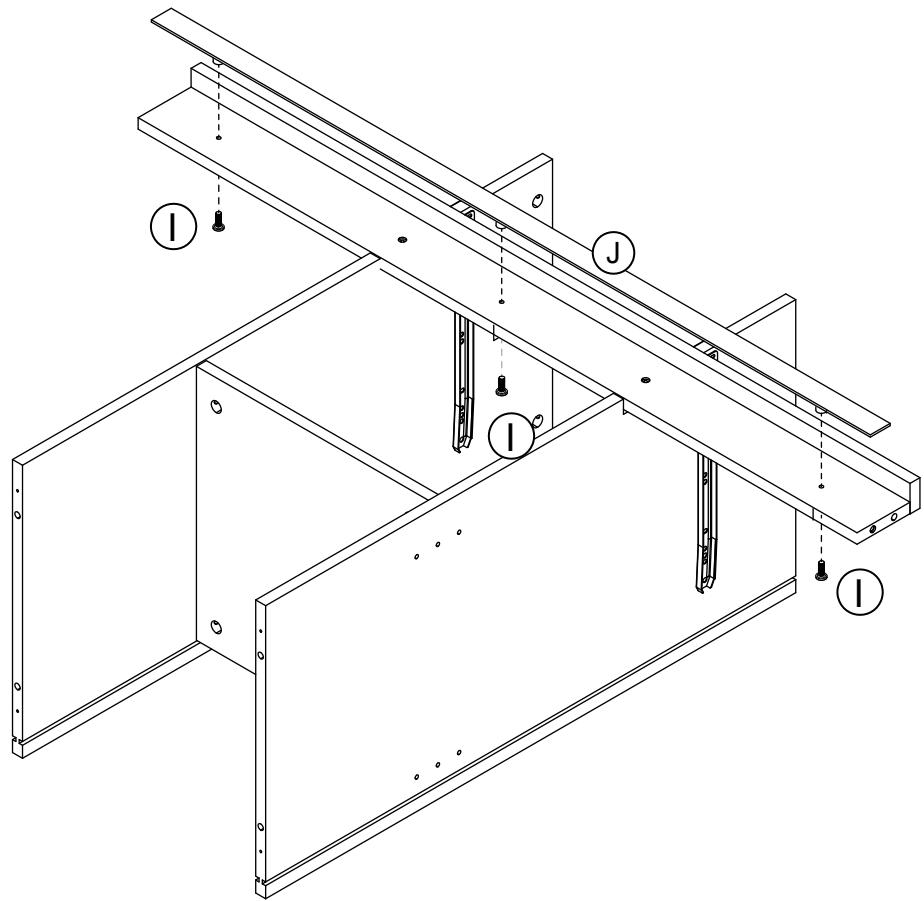


Assembly Instructions

Step 7


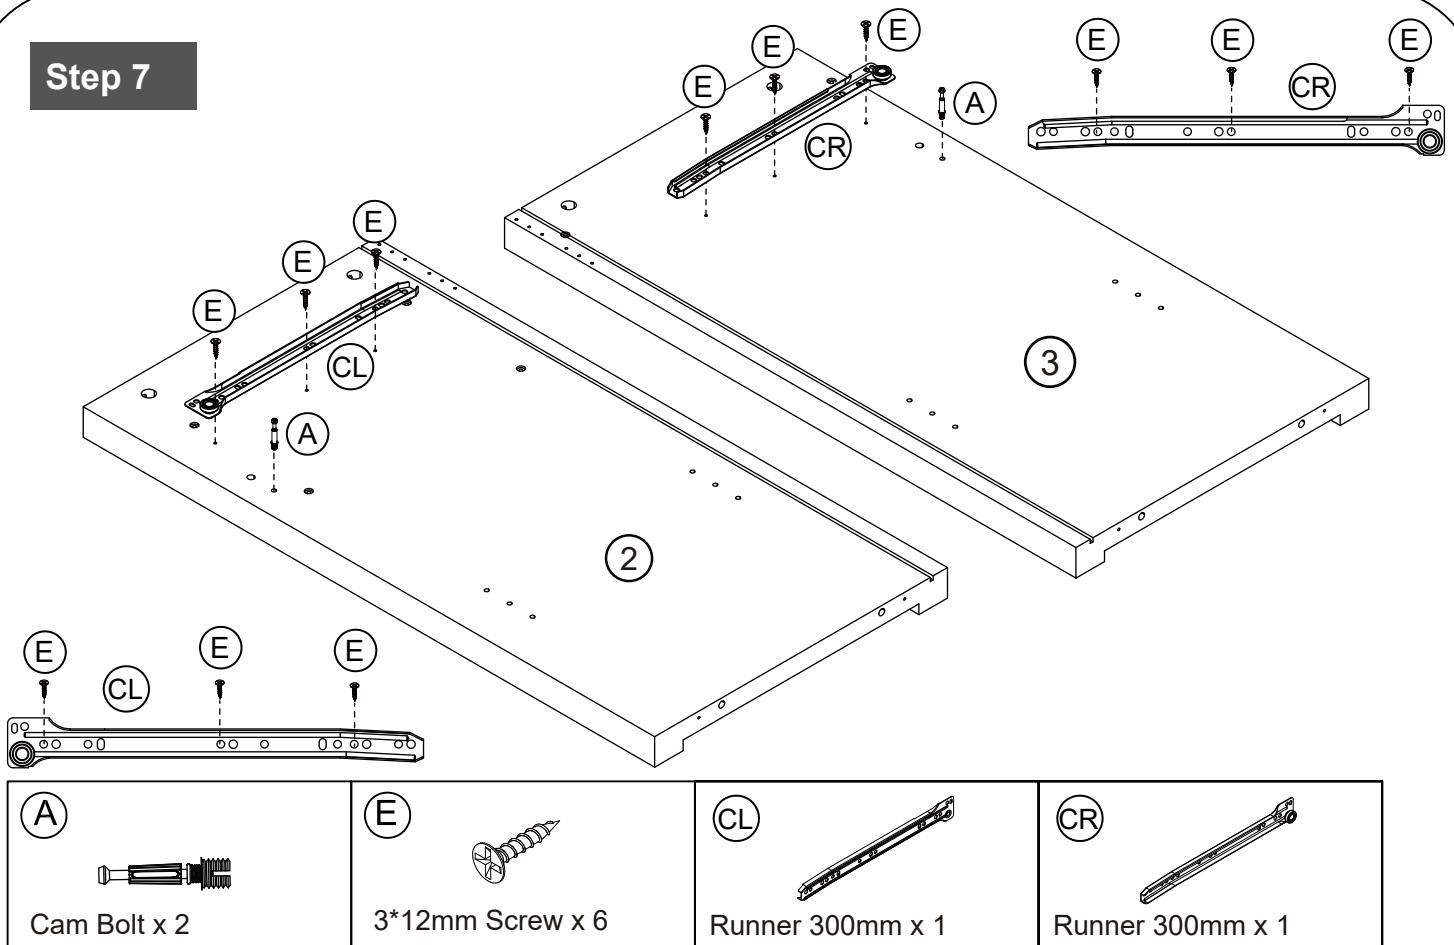


Step 8


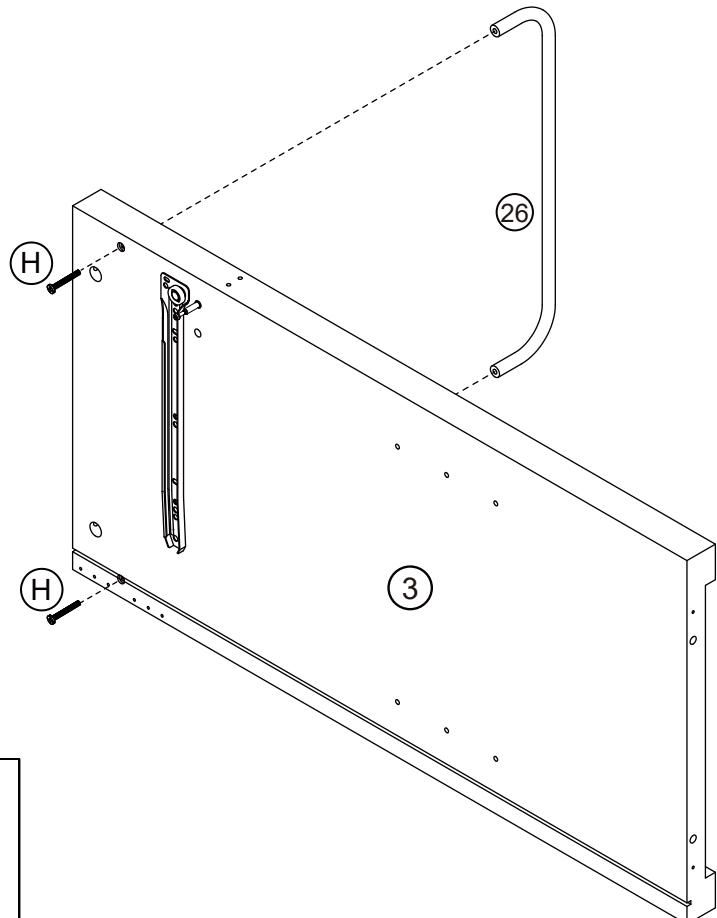


Assembly Instructions

Step 9

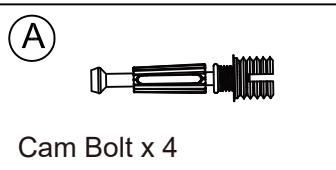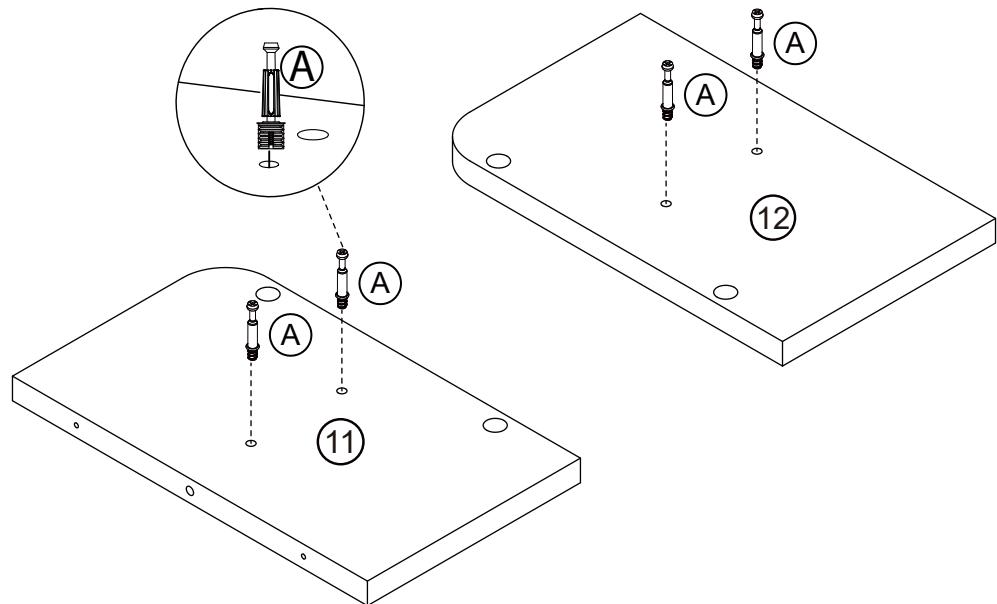


Step 10

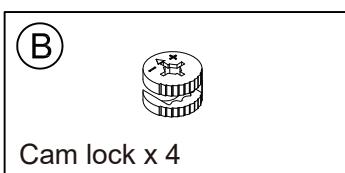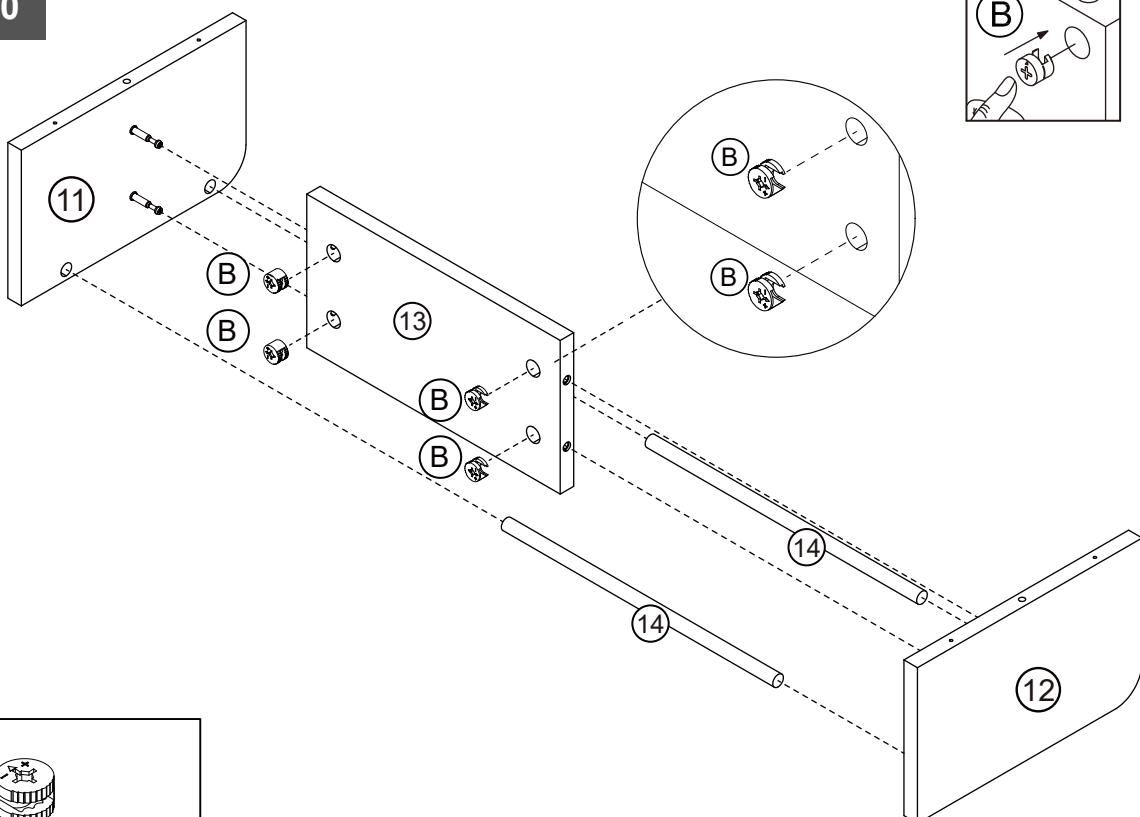


Assembly Instructions

Step 11

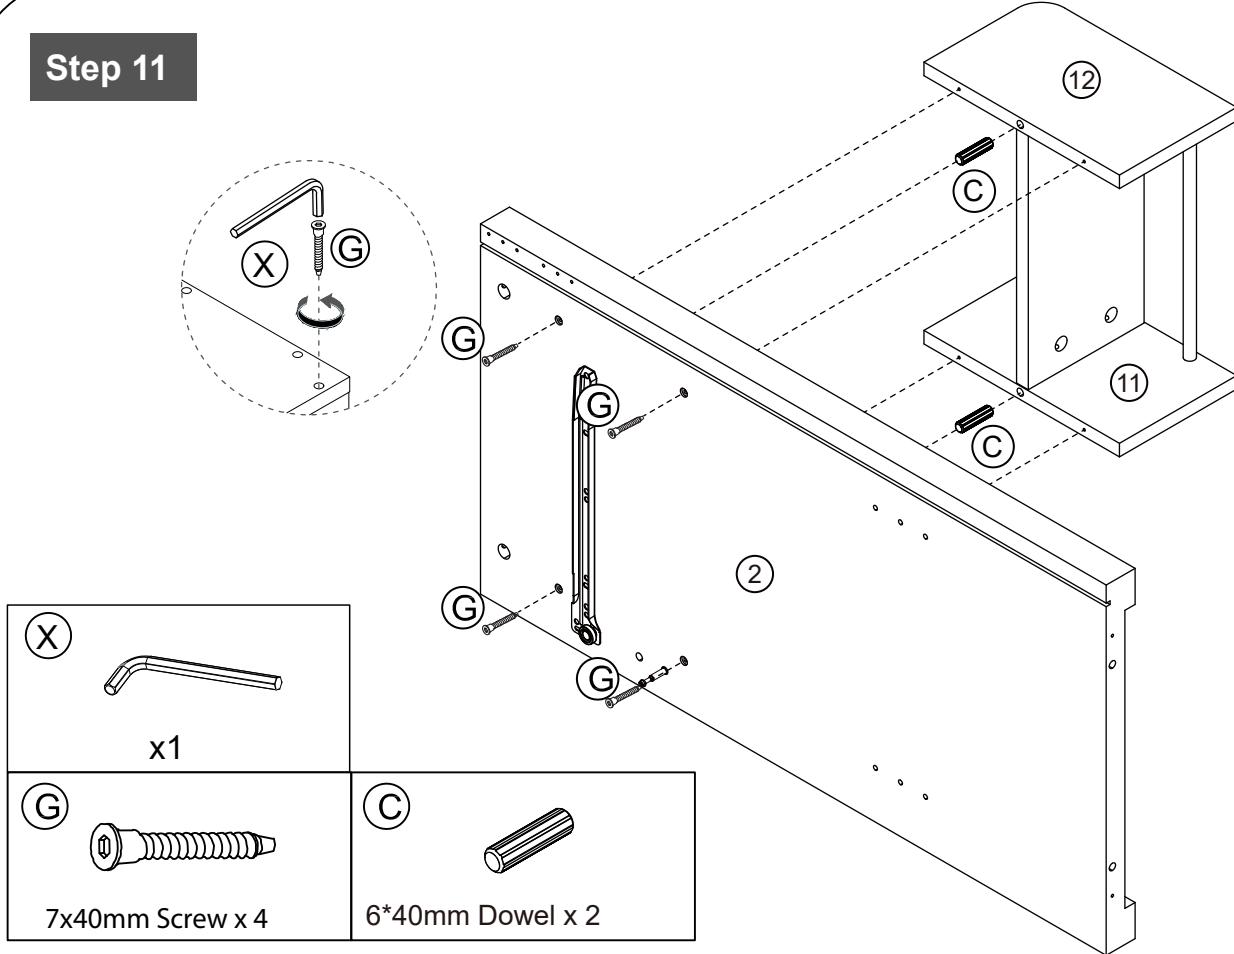


Step 12

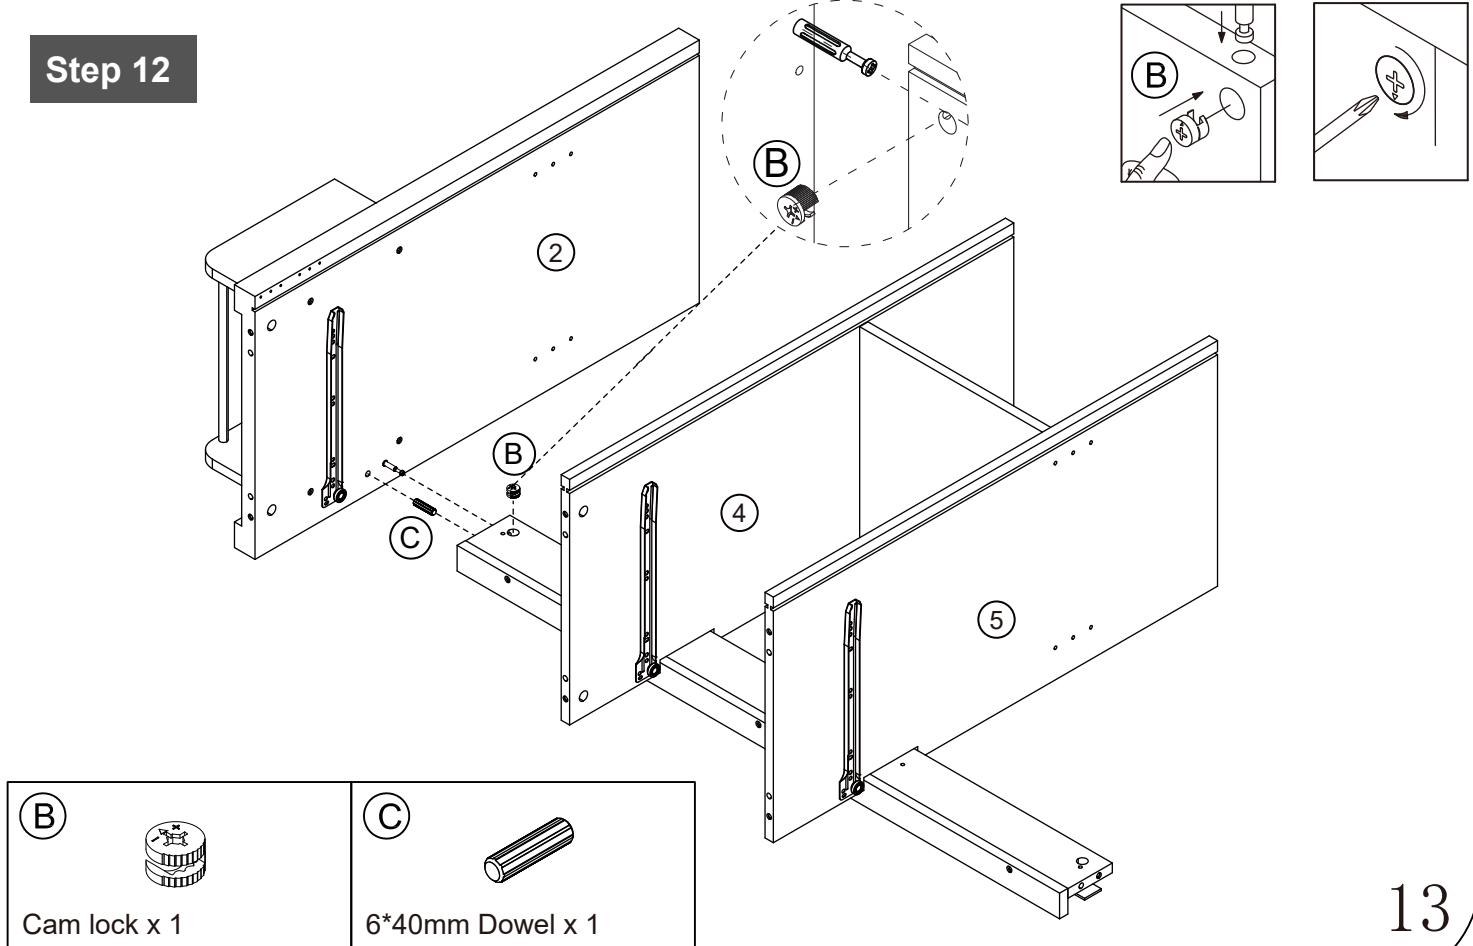

Assembly Instructions

Step 13

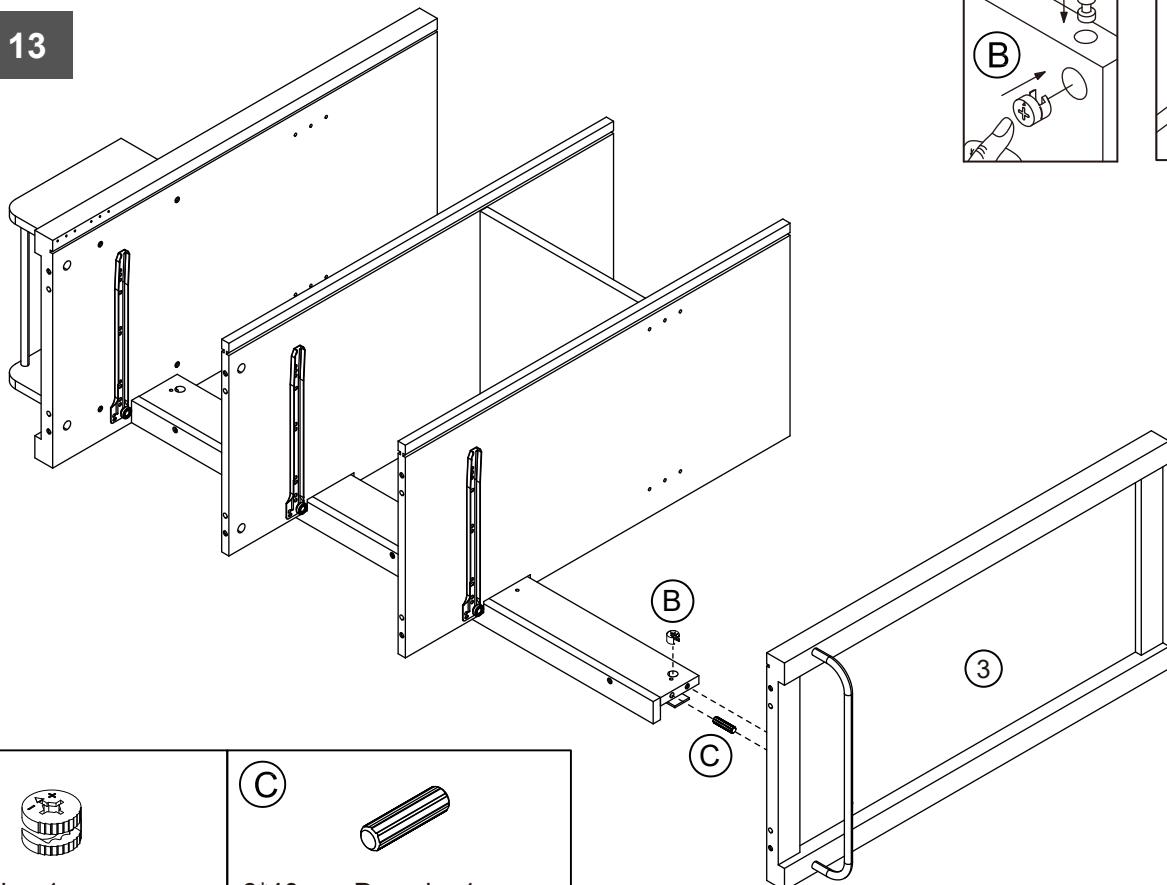

(B)




Cam lock x 1

(C)



6*40mm Dowel x 1

Step 14

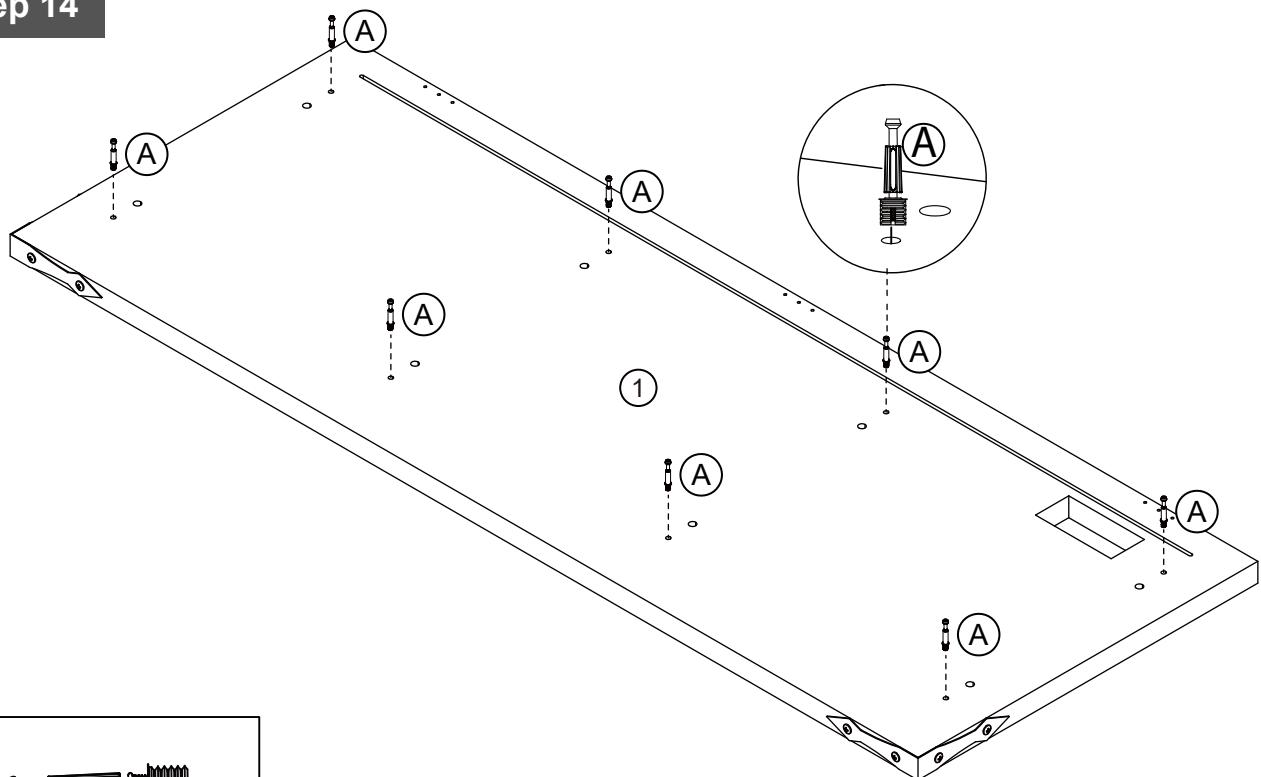





(A)




Cam Bolt x 8

Assembly Instructions

Step 15

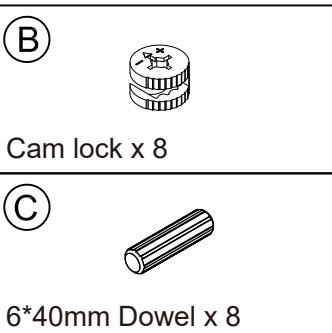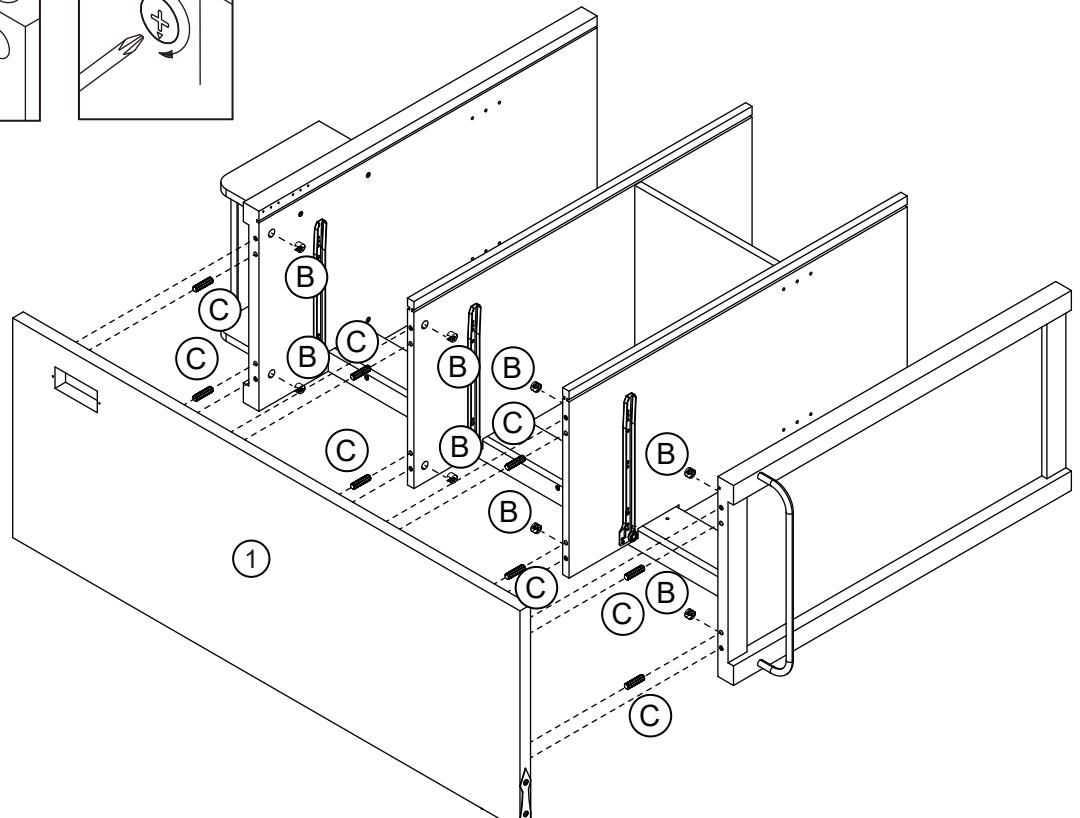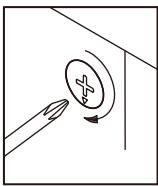
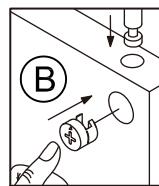


Step 16


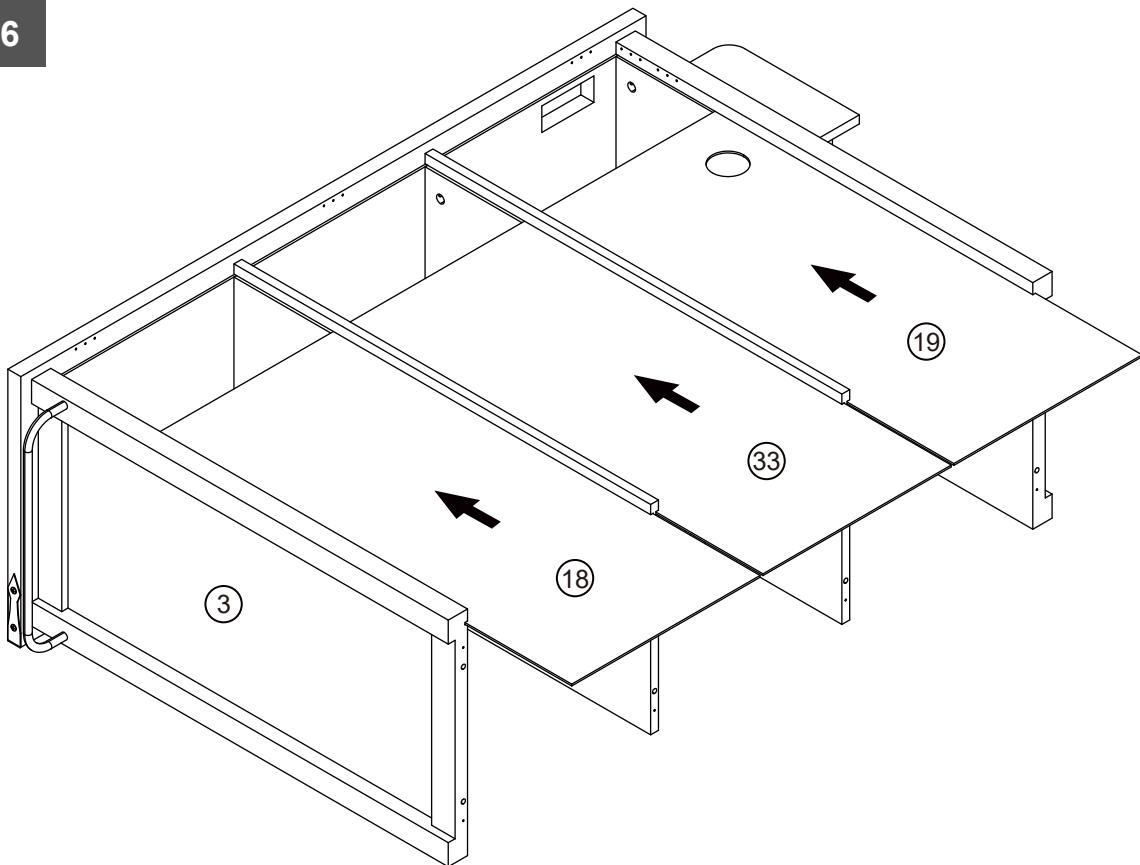


Assembly Instructions

Step 17

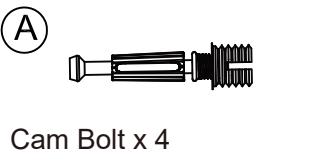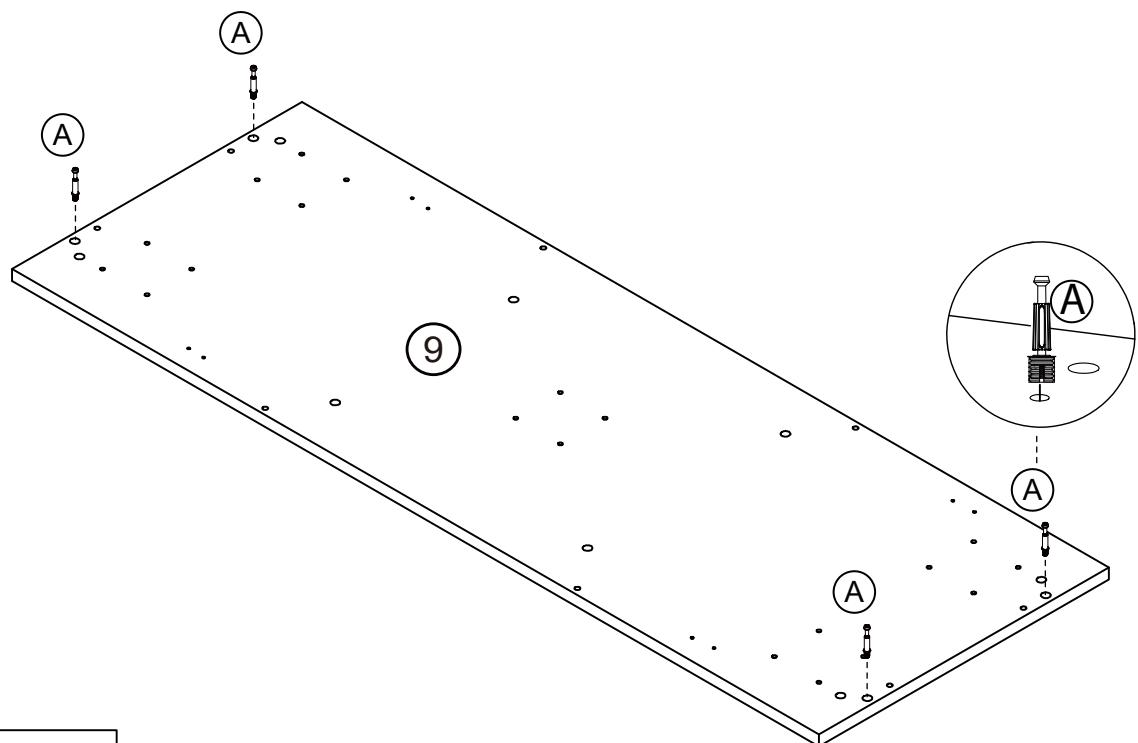


Step 18


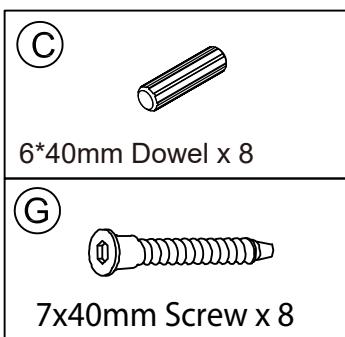
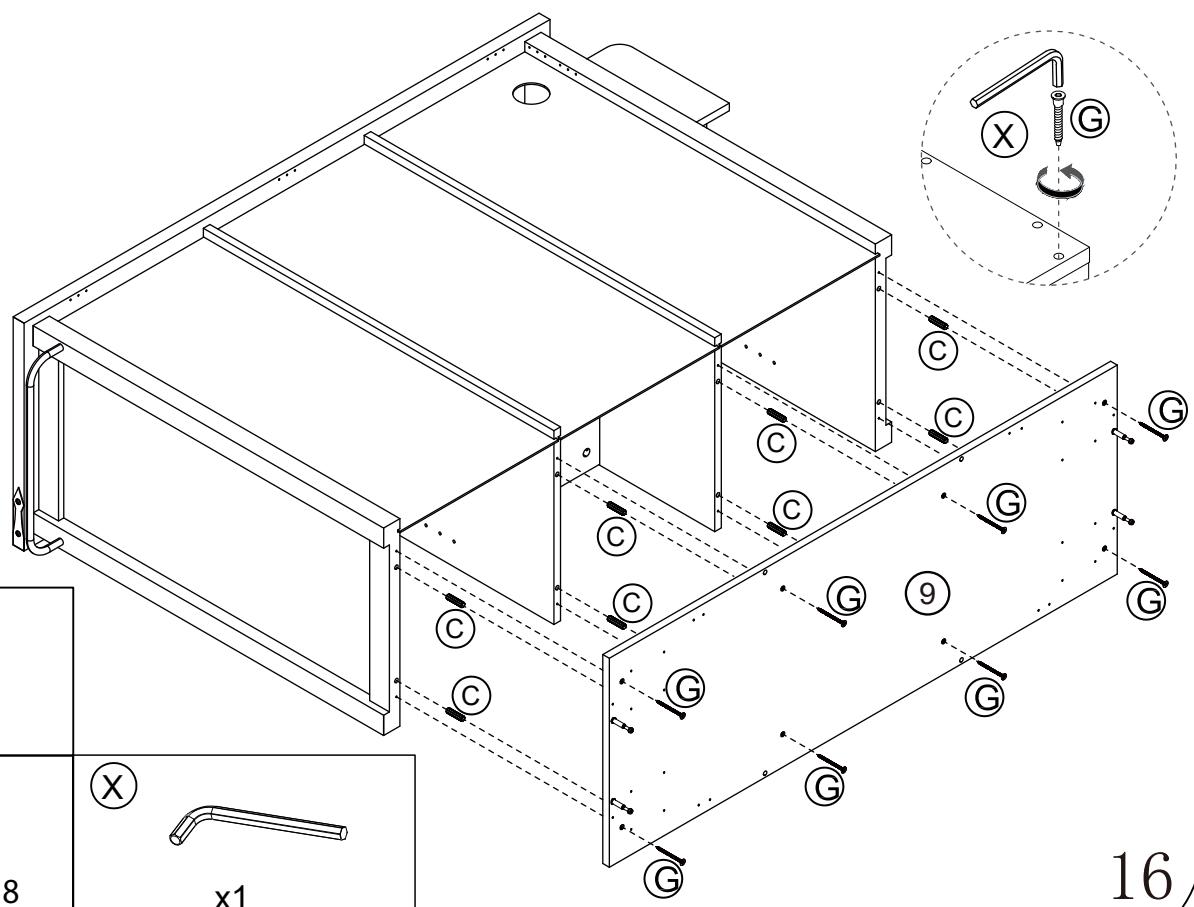


Assembly Instructions

Step 19

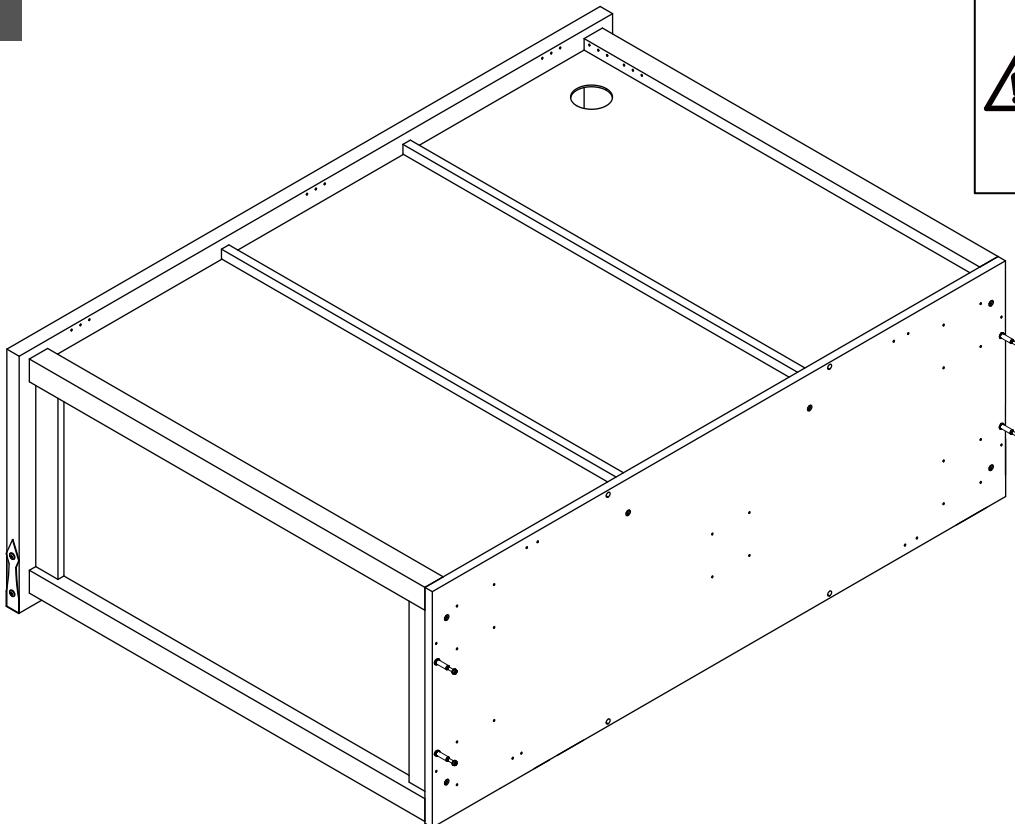


Step 20

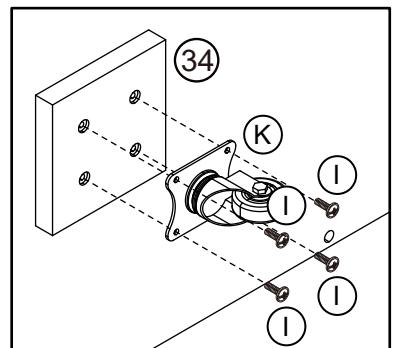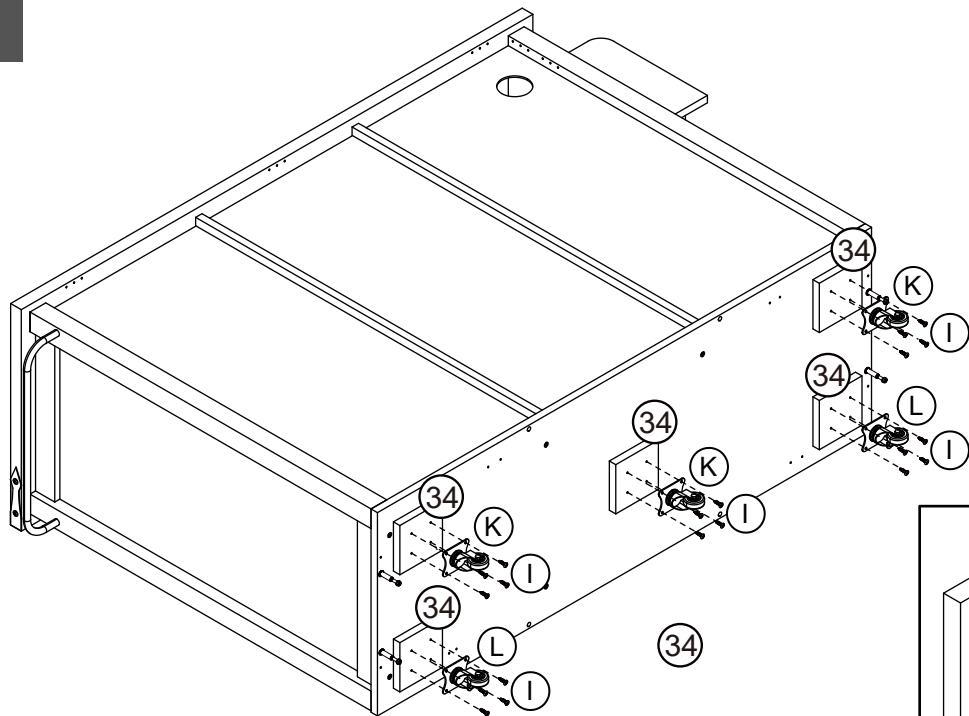

Caster x 3




Locking caster x 2




6*25mm Screw x 20

Assembly Instructions

Step 21


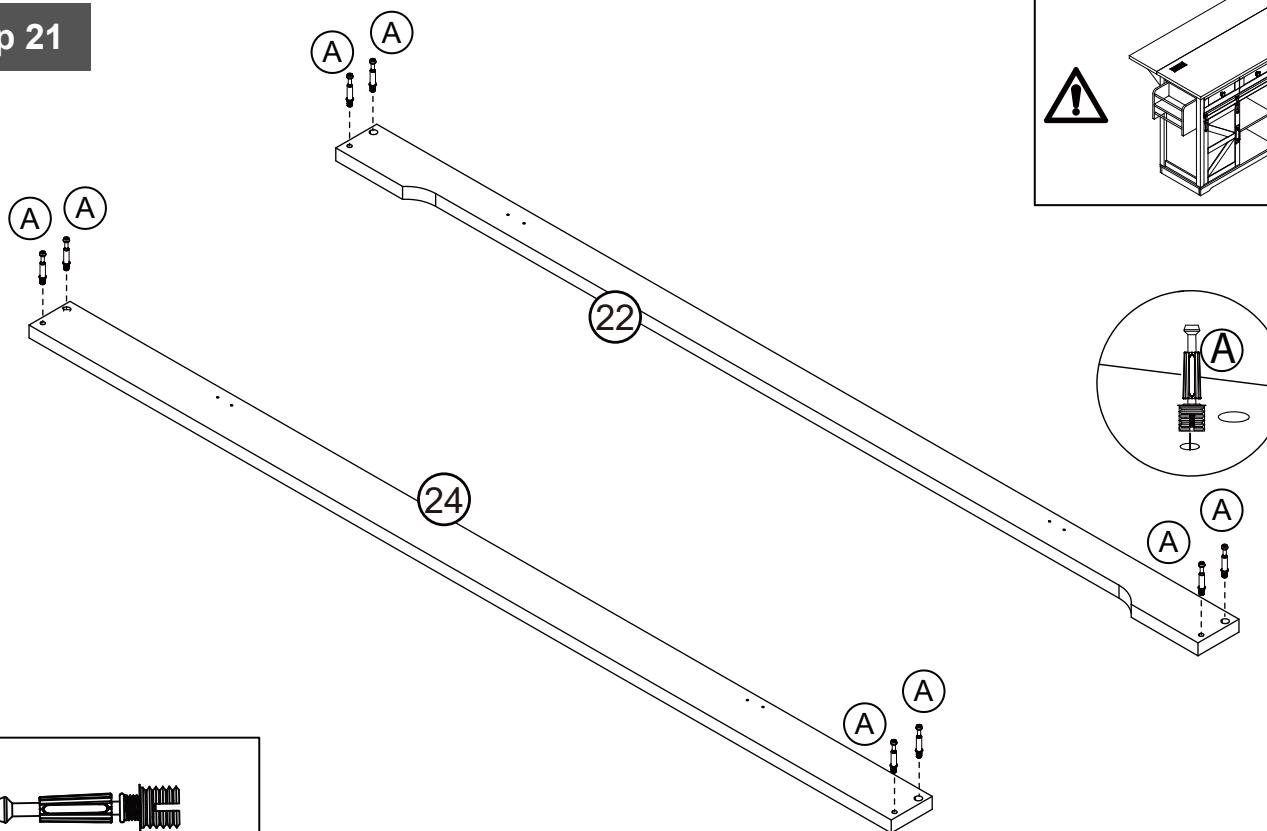


Step 22

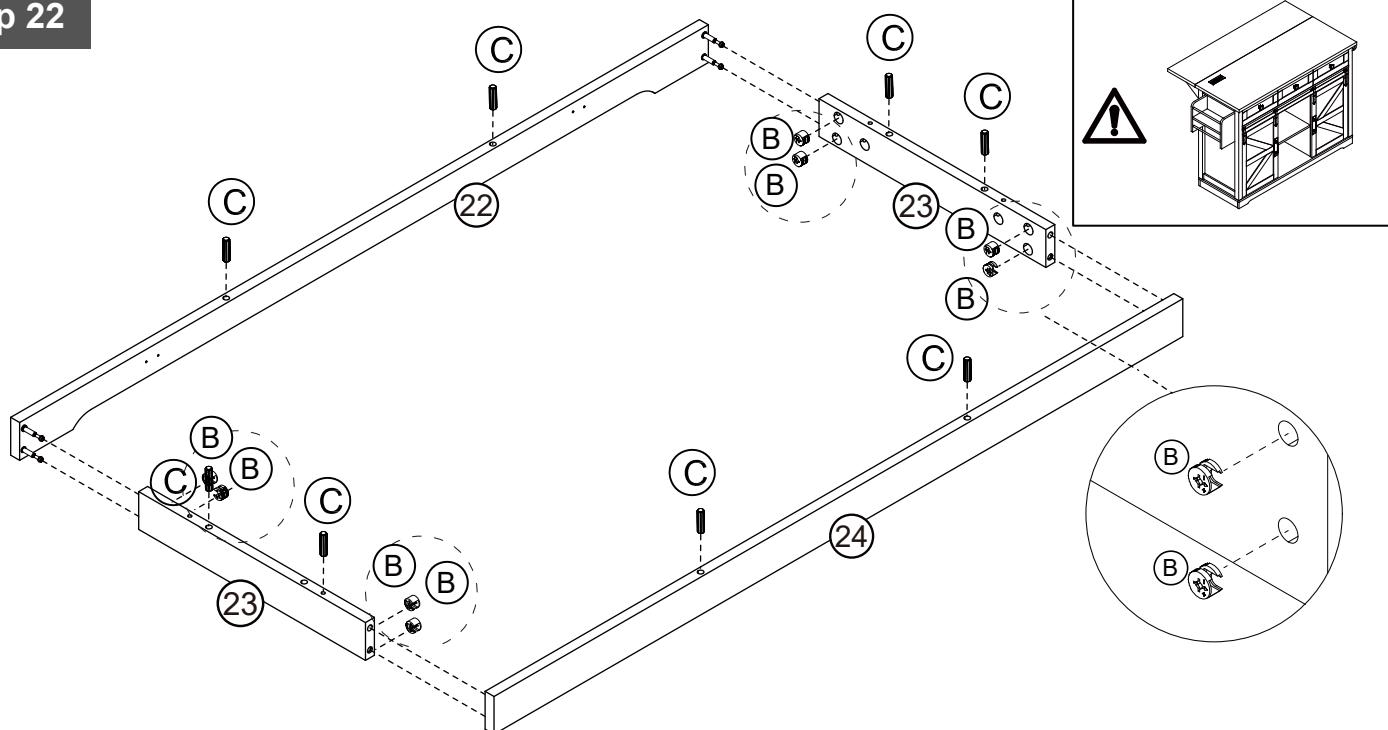






(B) Cam lock x 8

(C) 6*40mm Dowel x 8


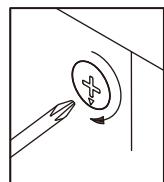
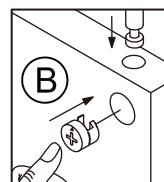


Assembly Instructions

Step 23

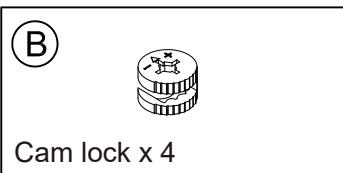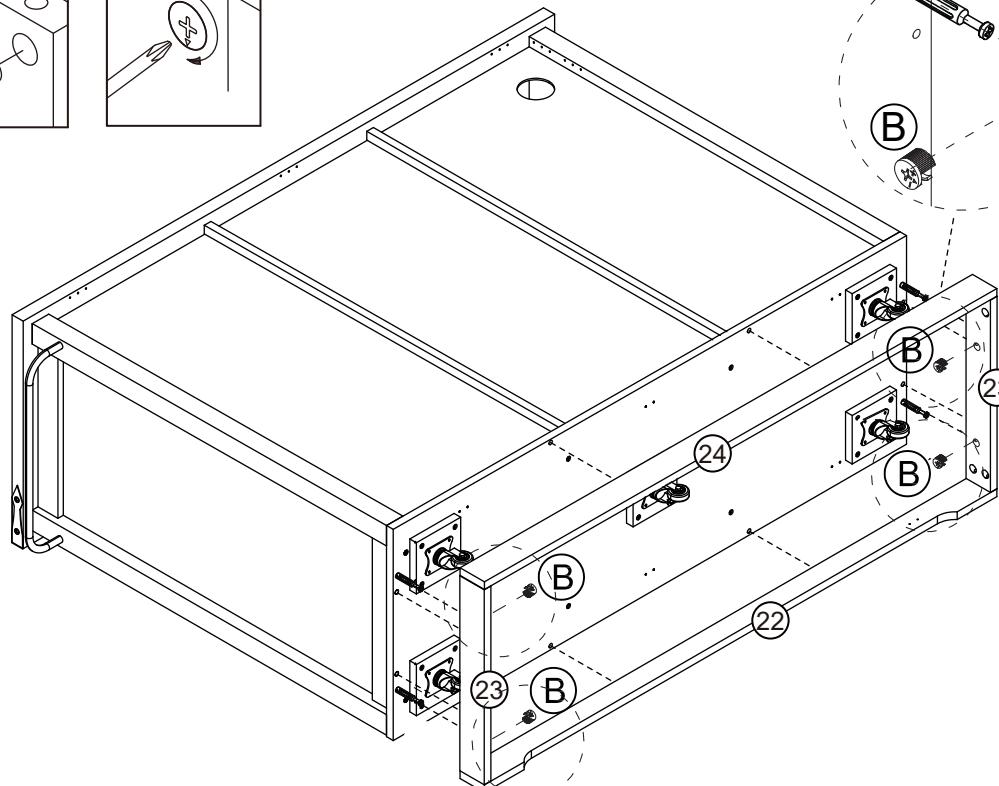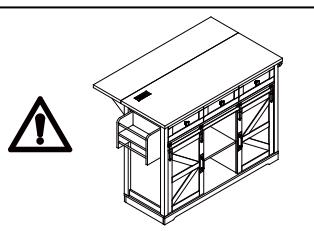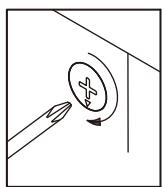
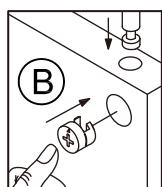


Step 24

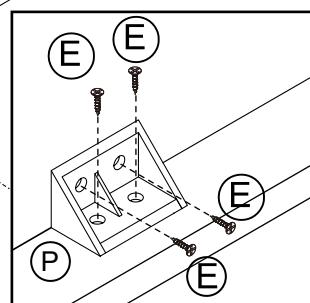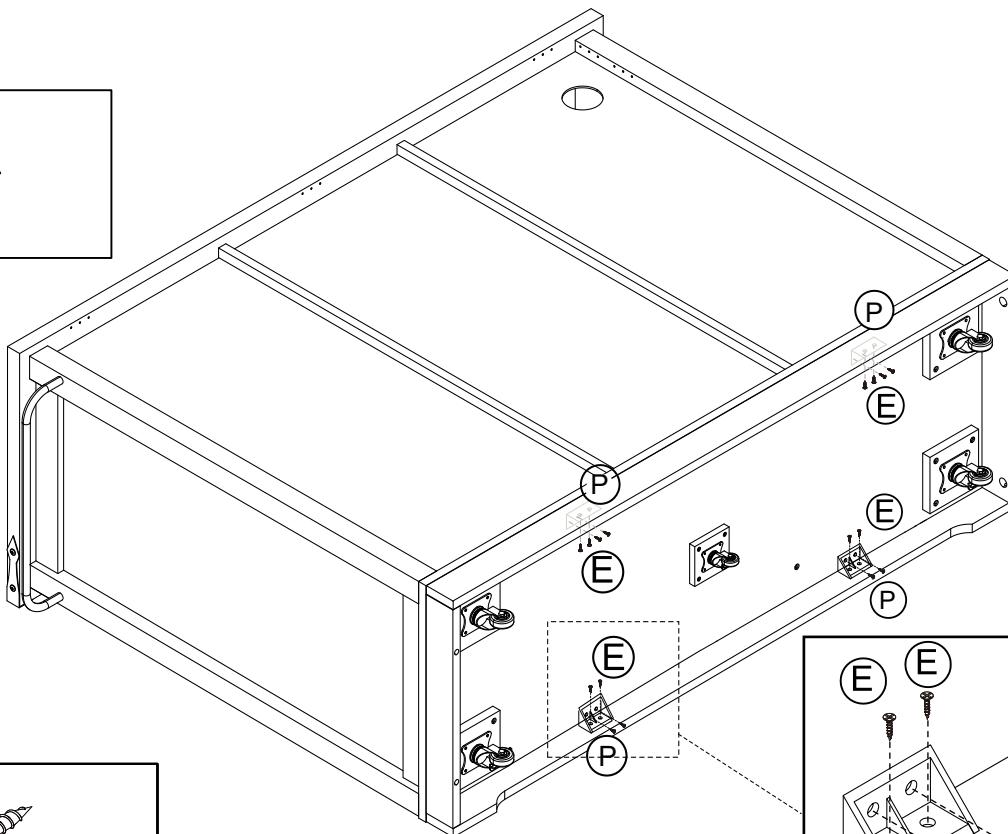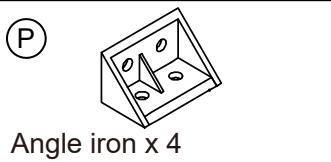


Assembly Instructions

Step 25

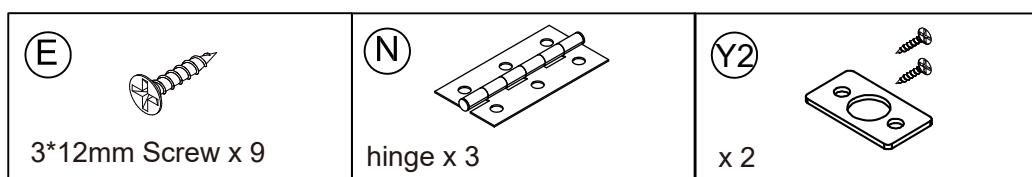
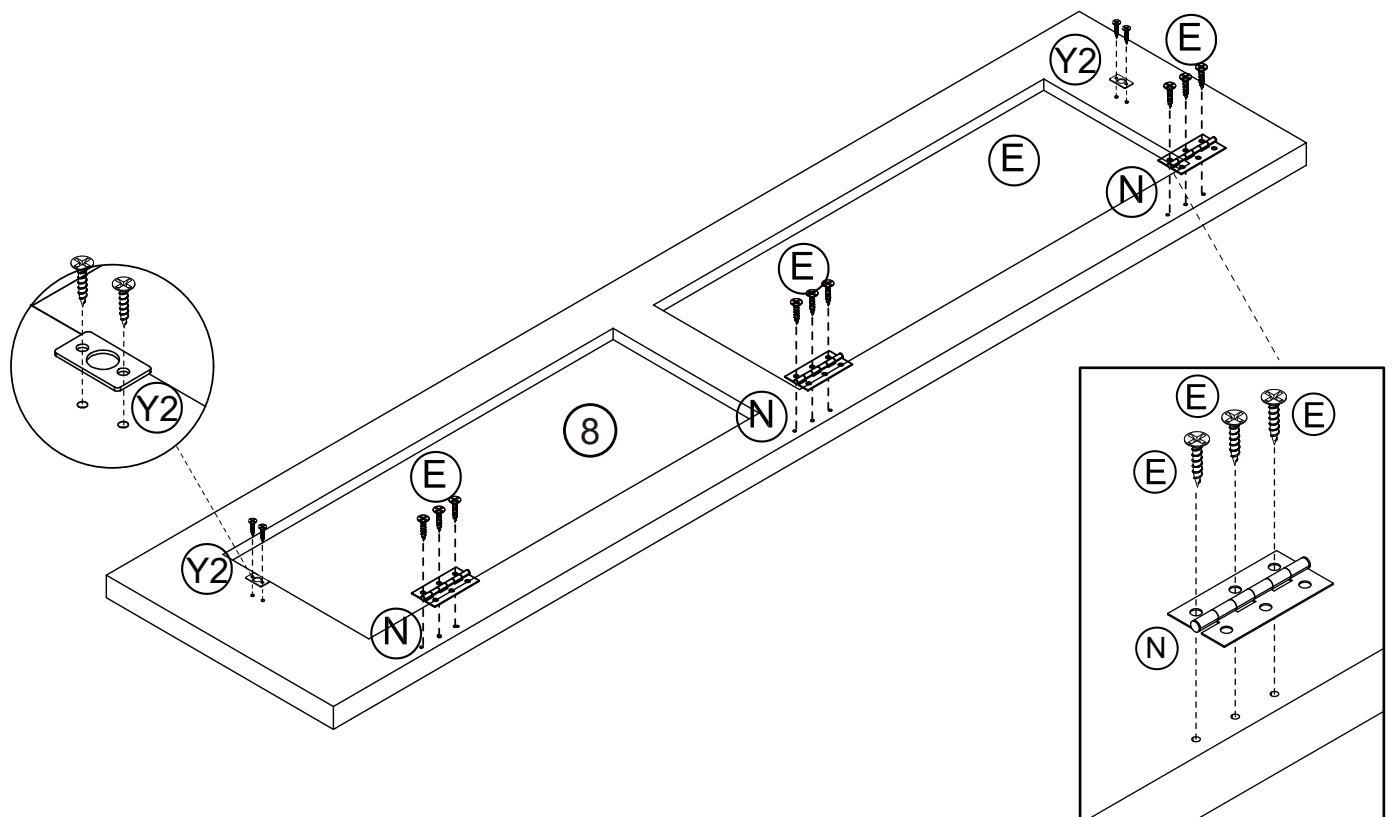


Assembly Instructions


Step 26

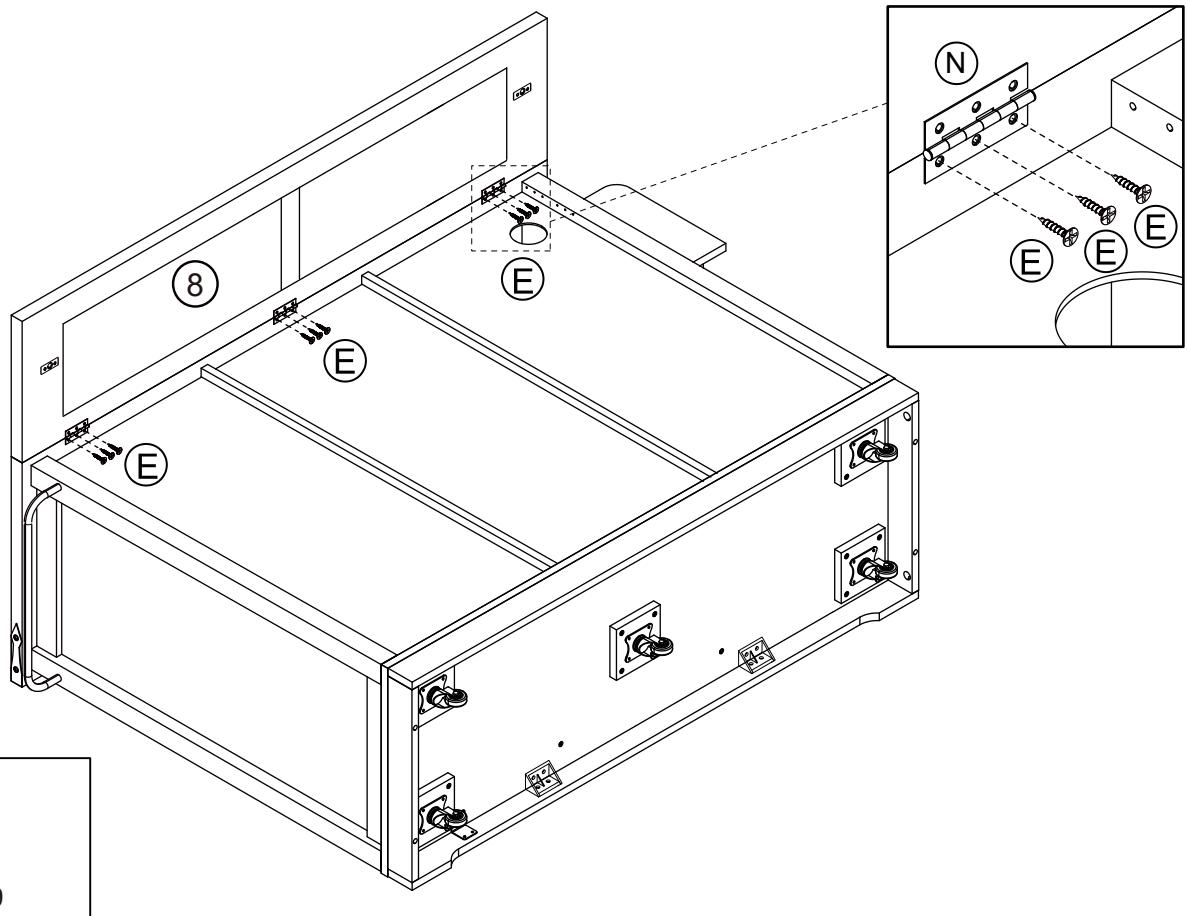

Step 27

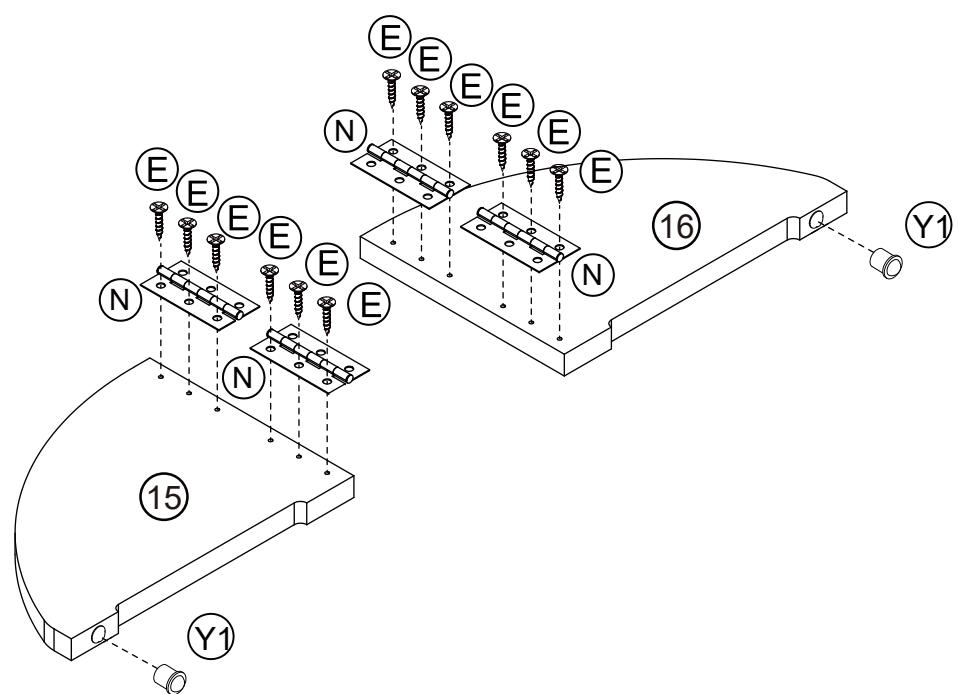

3.5*12mm Screw x 12




hinge x 4




x 2

Assembly Instructions

Step 28



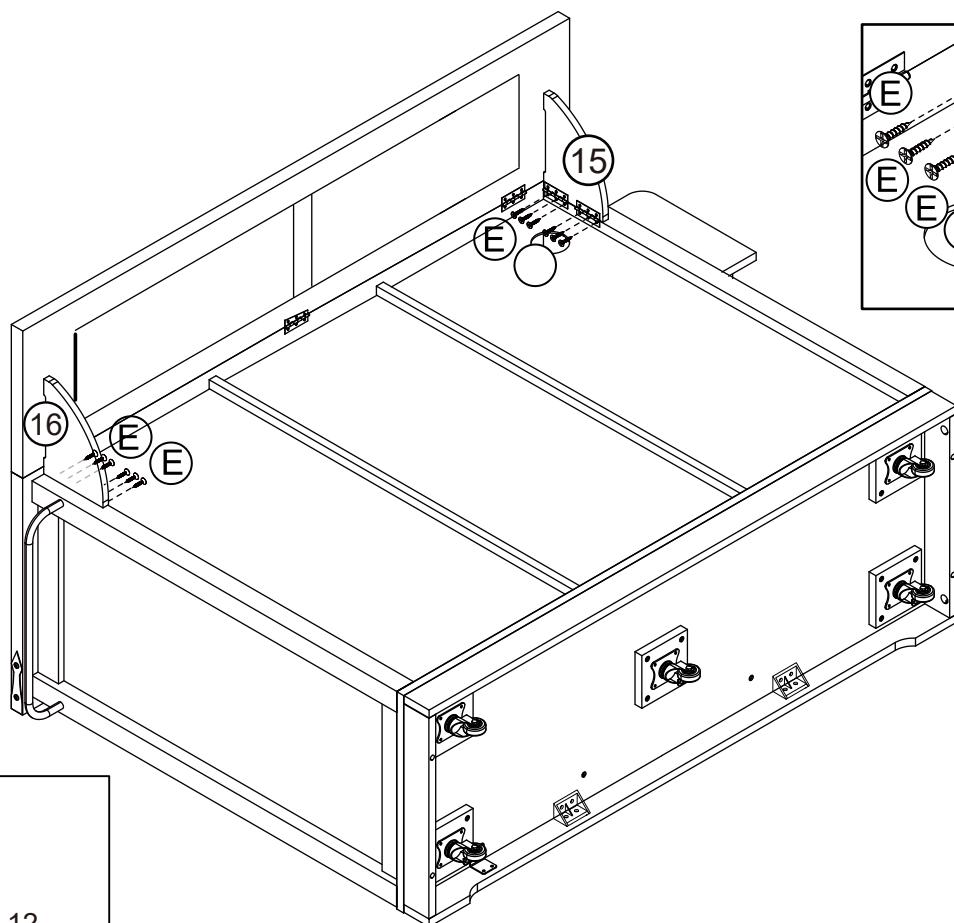


Step 29

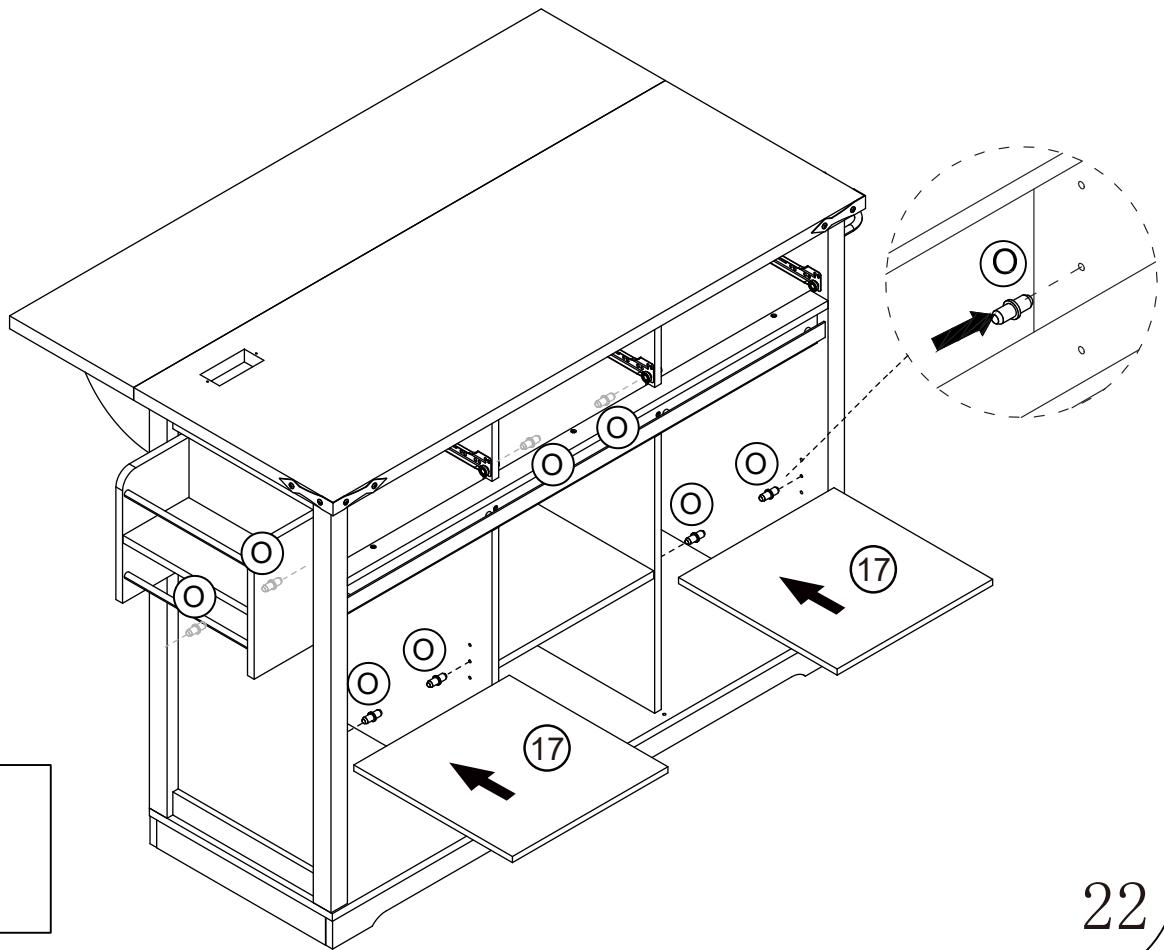


Assembly Instructions

Step 30

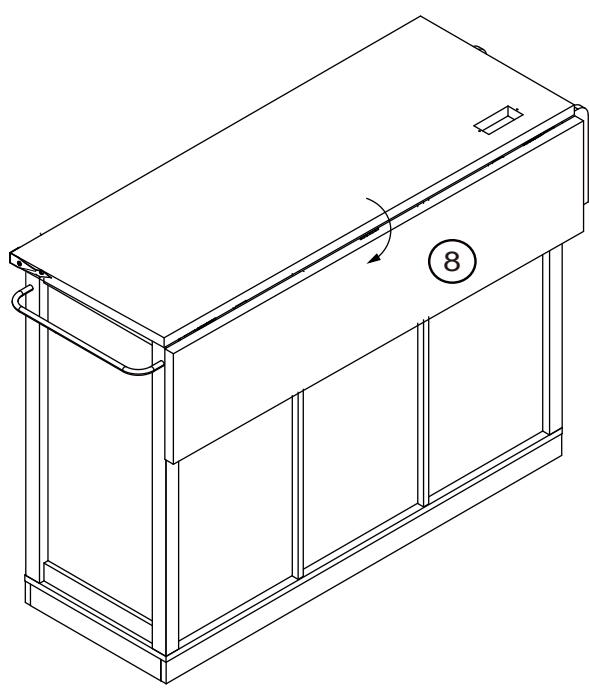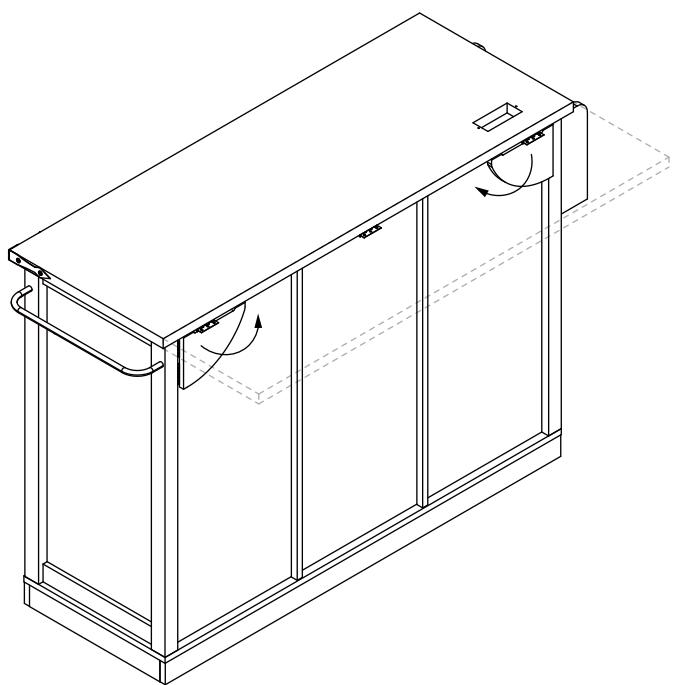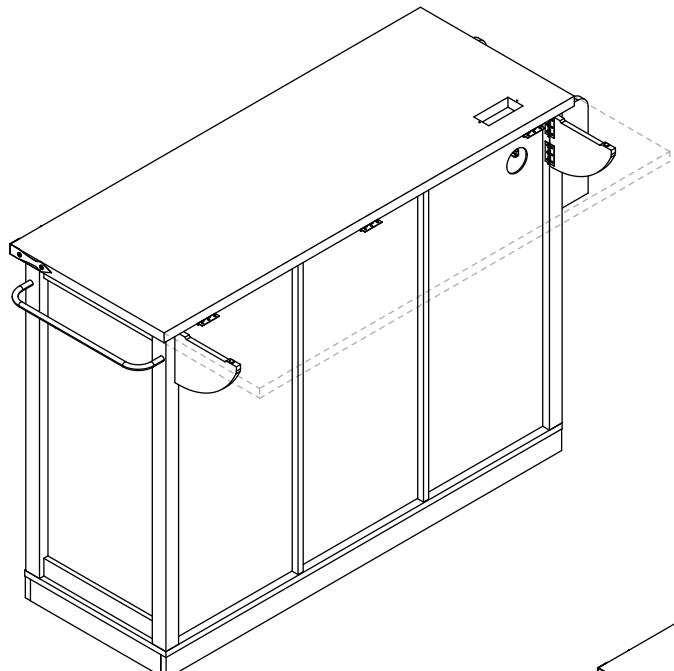


Assembly Instructions

Step 31

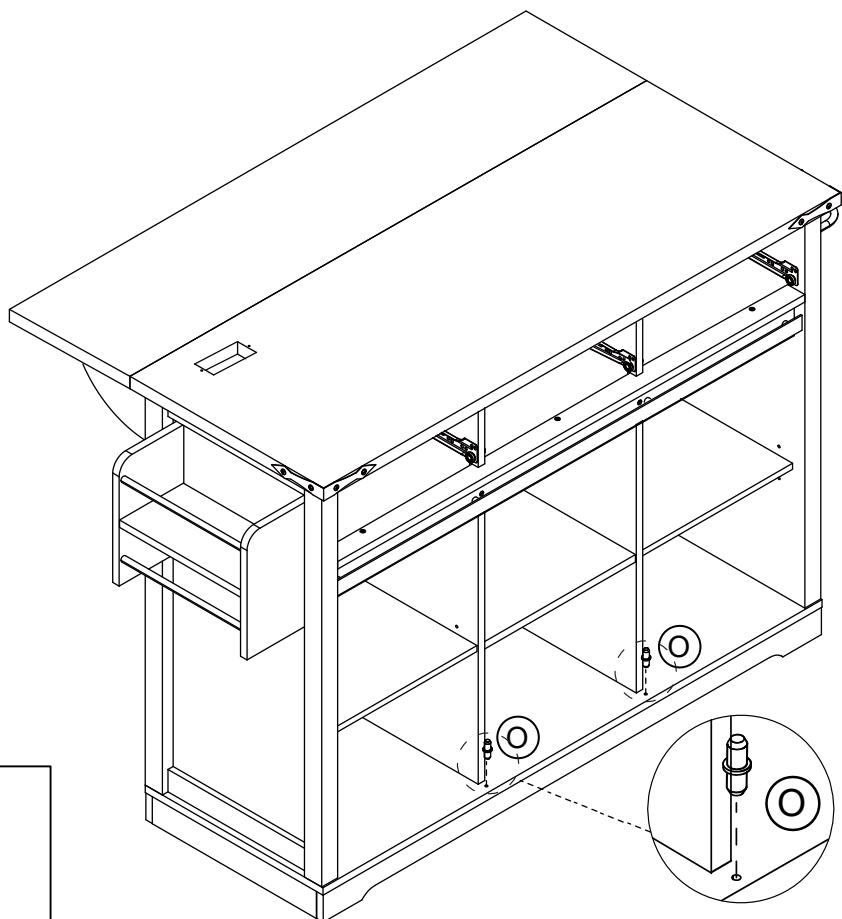


Step 32

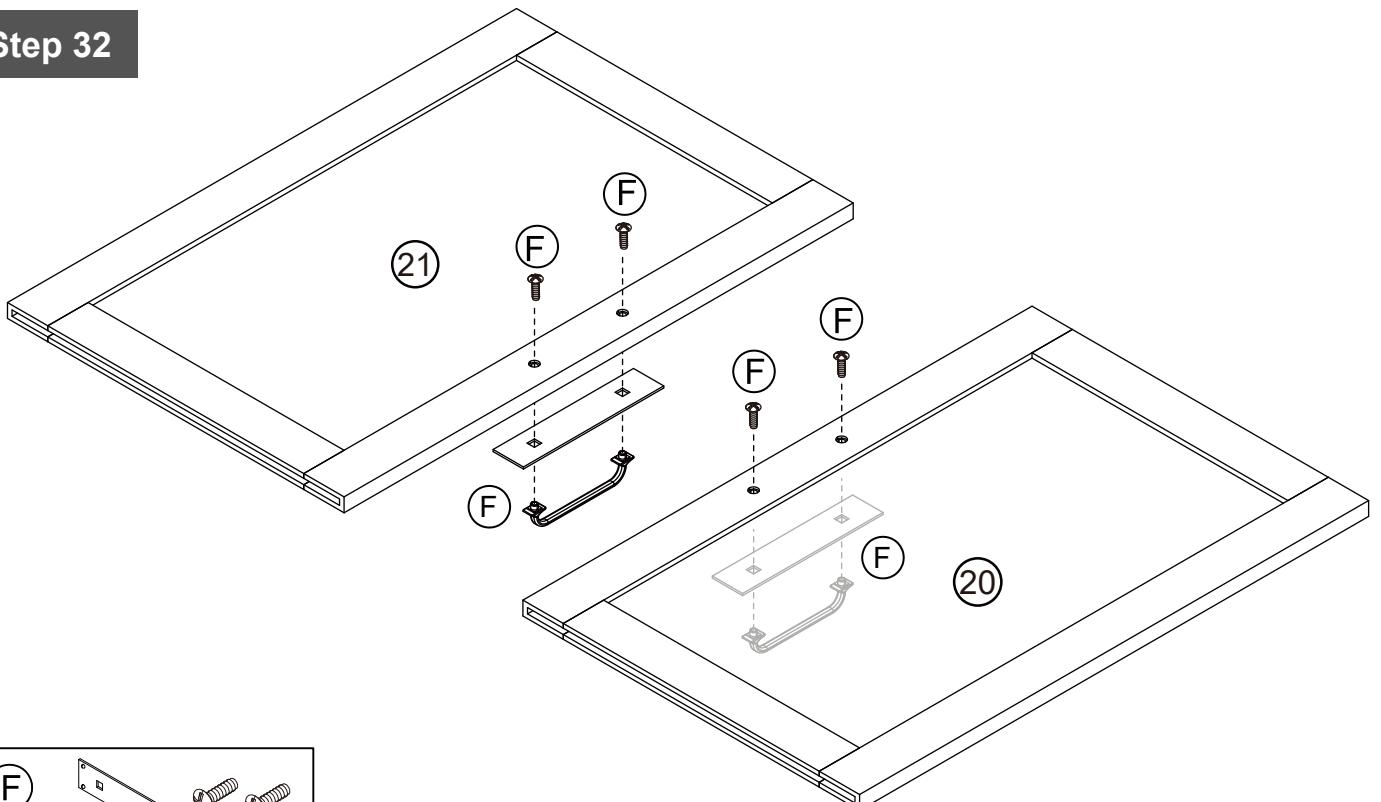


Assembly Instructions

Step 33

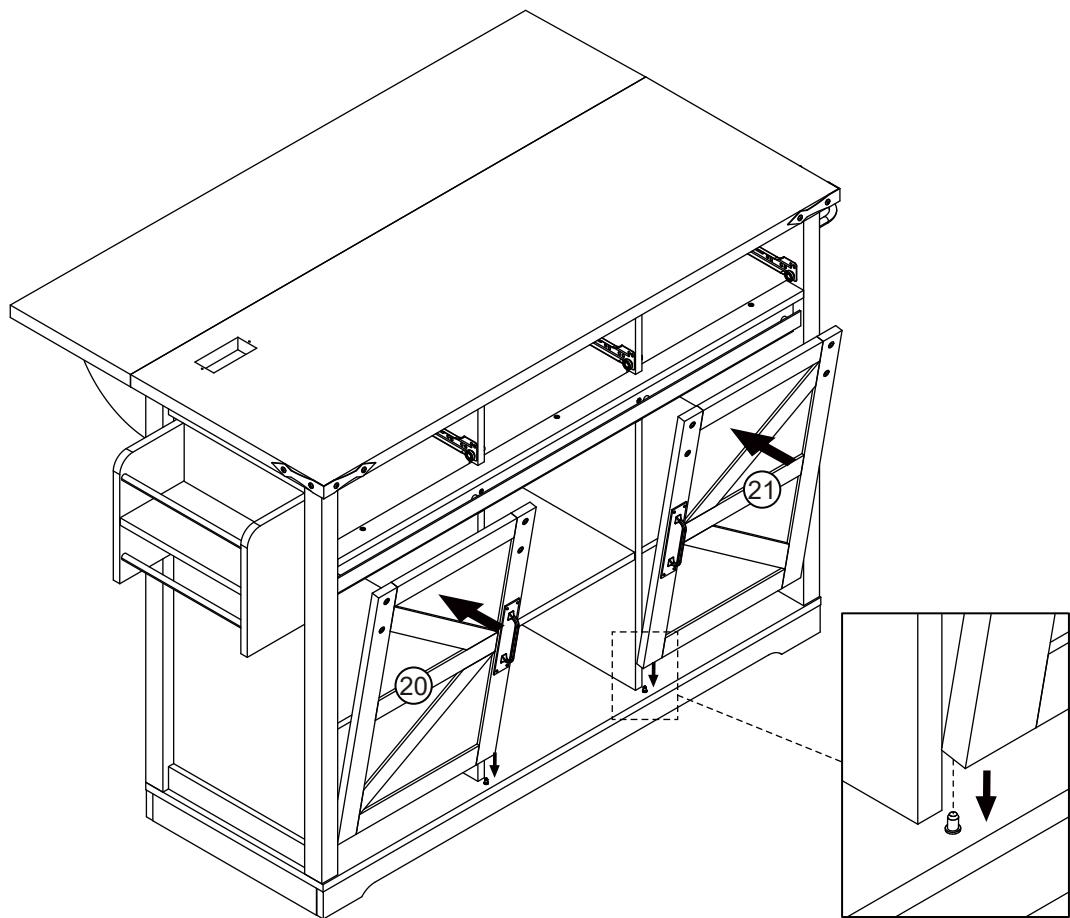


Step 34

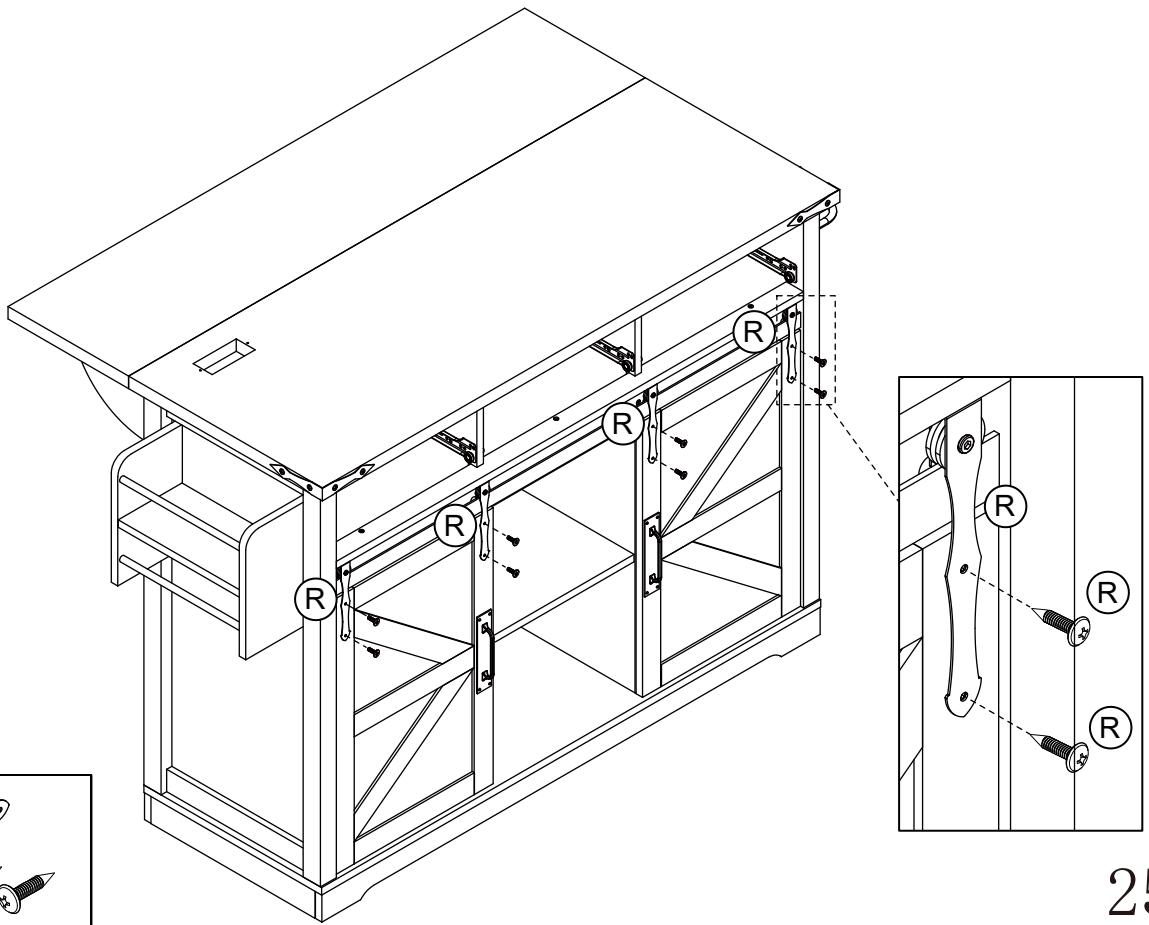


Assembly Instructions

Step 35


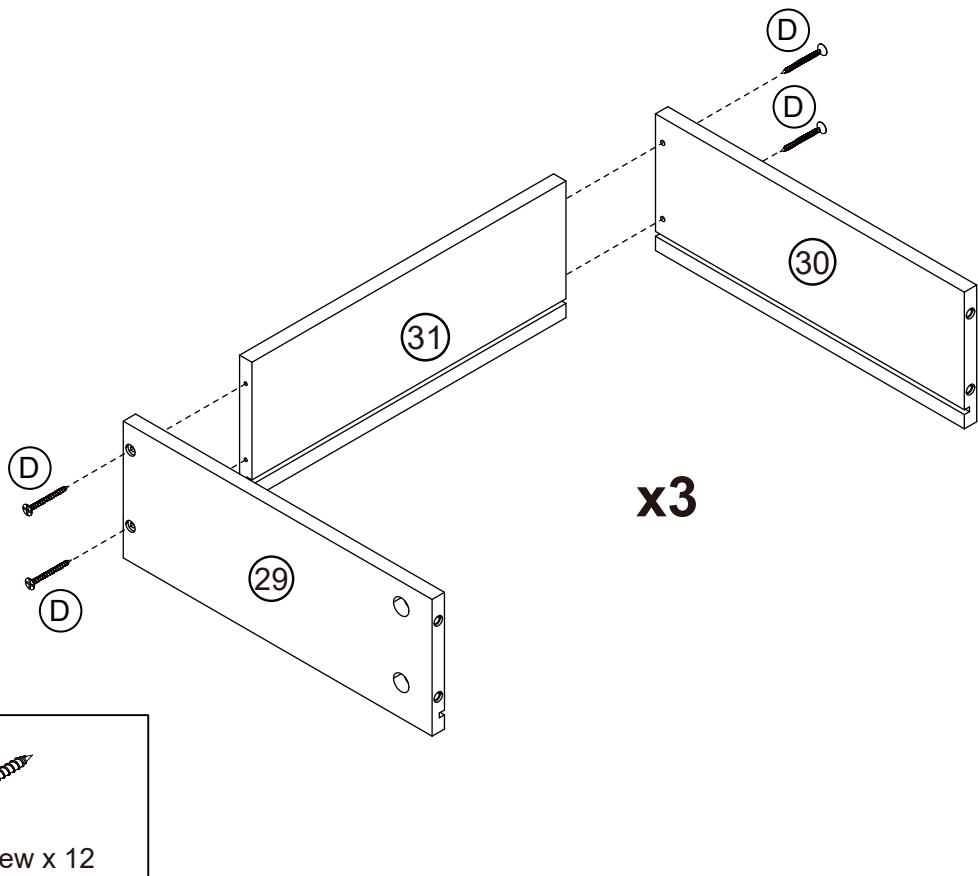


Step 36


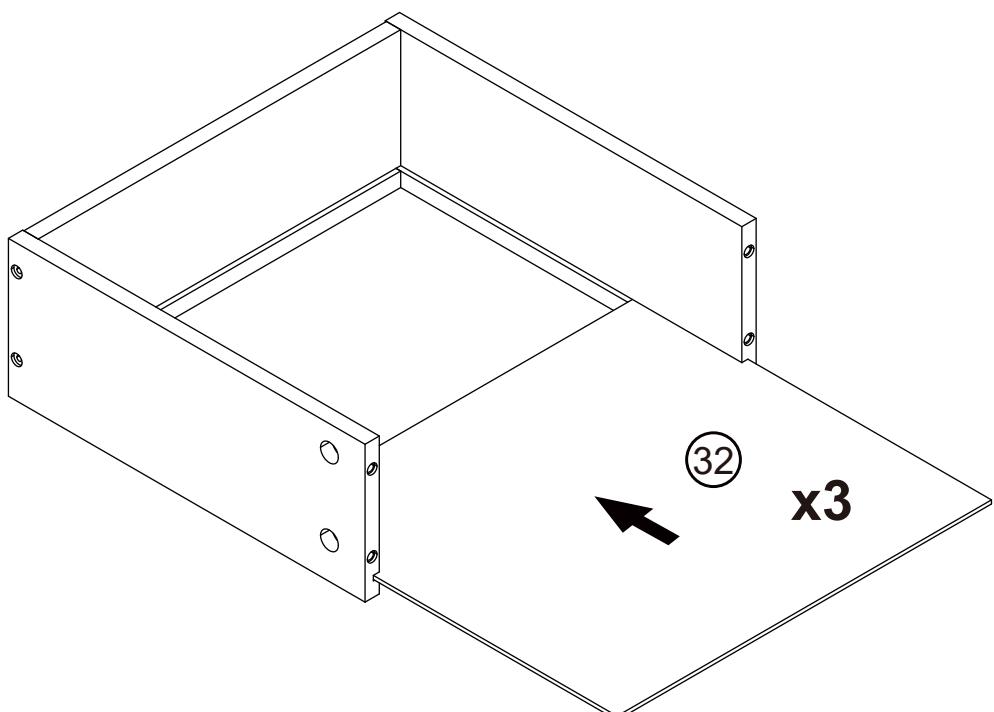


Assembly Instructions

Step 37

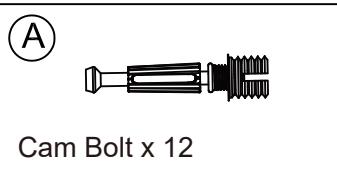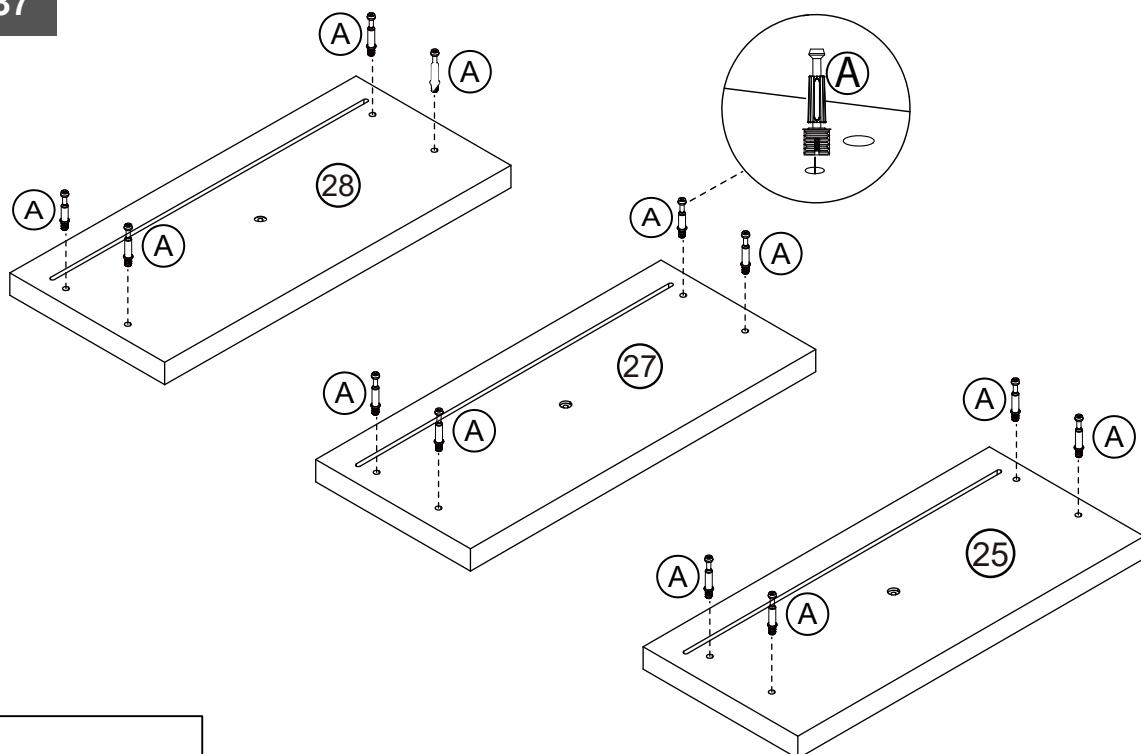


Step 38

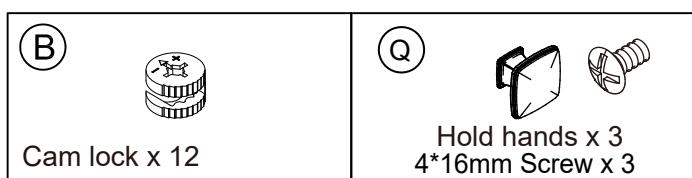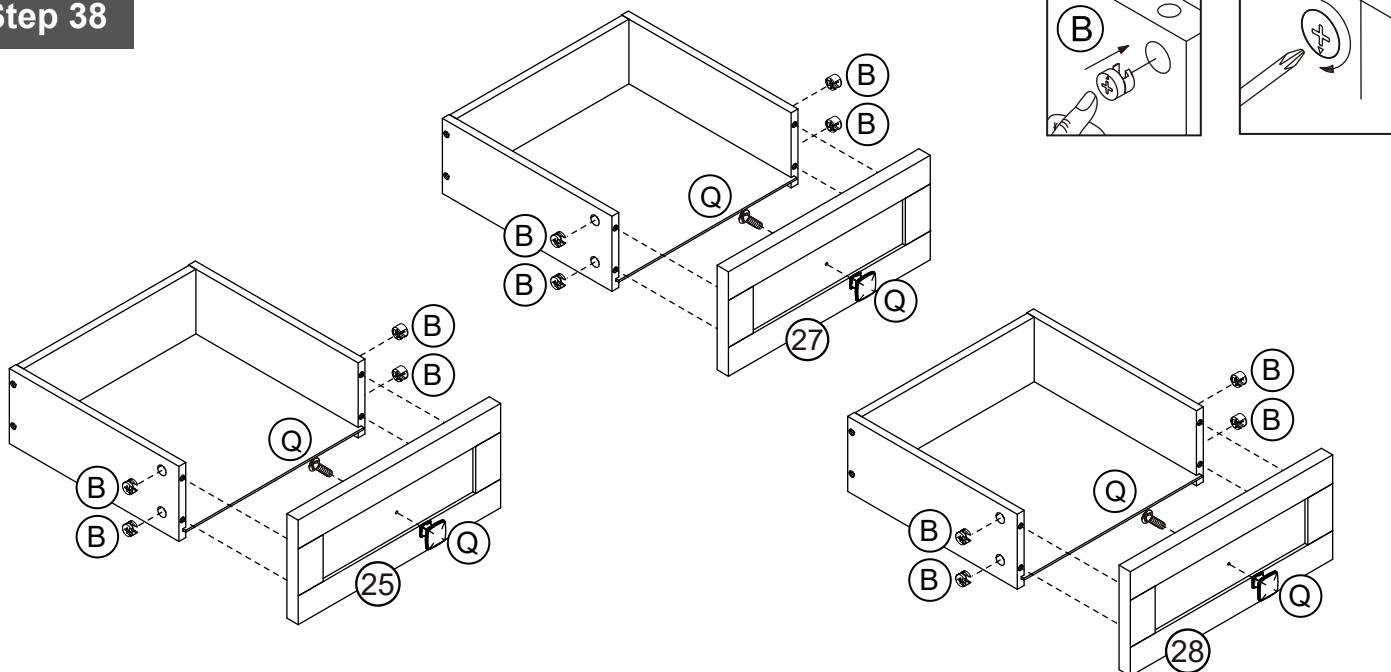

Assembly Instructions

Step 39

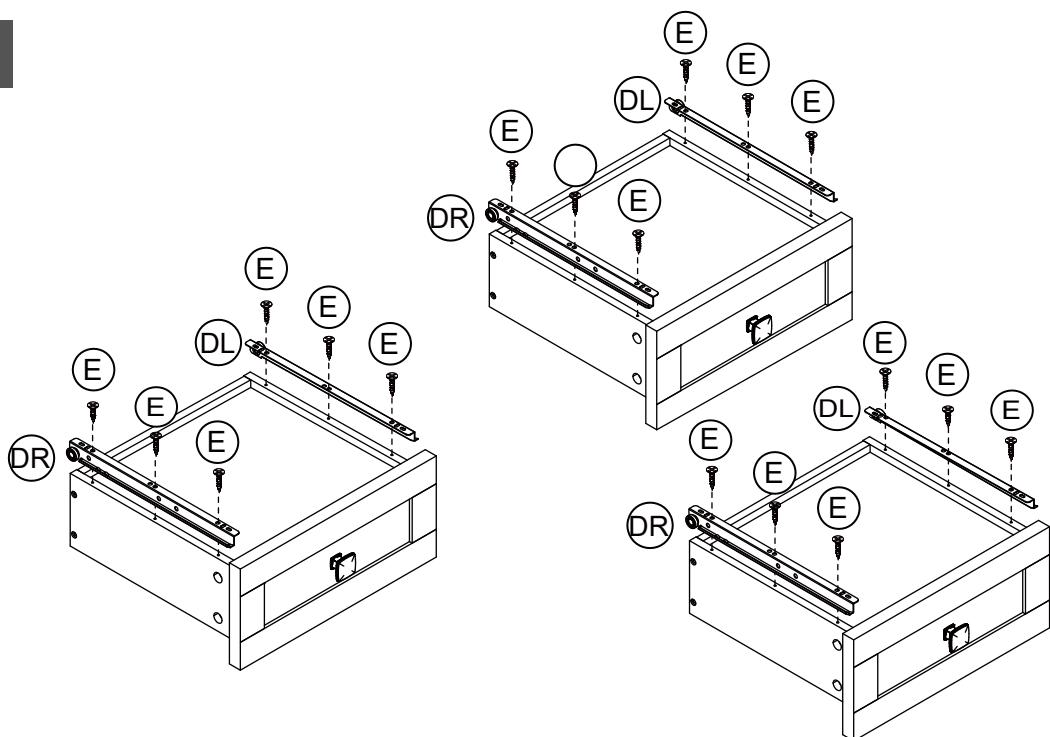

3*12mm Screw x 18




Runner 300mm x 3




Runner 300mm x 3

Step 40


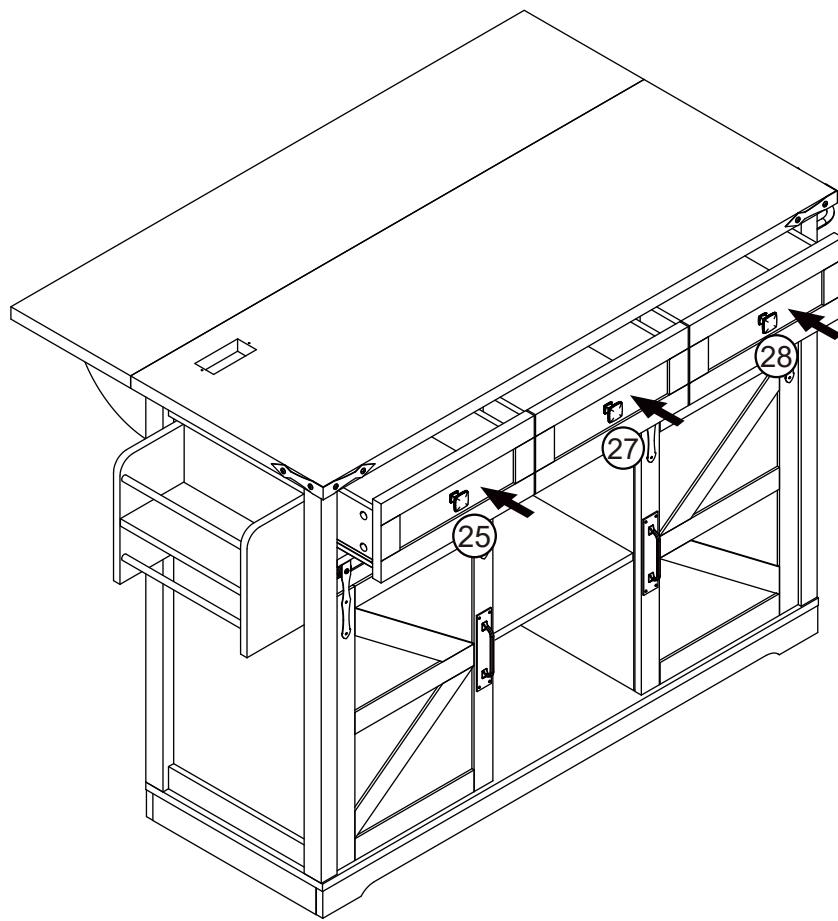


Assembly Instructions

Step 41

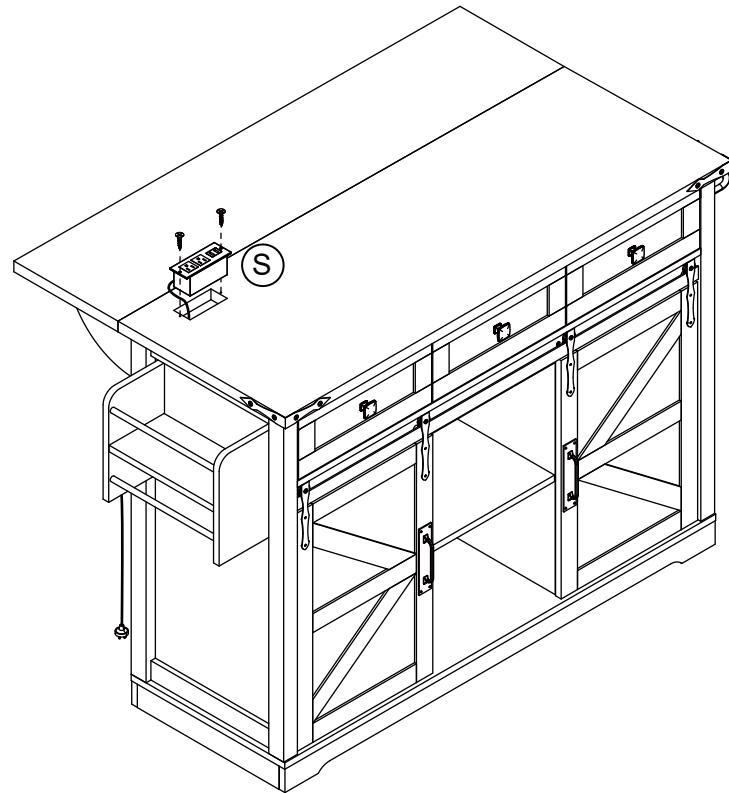

Step 42

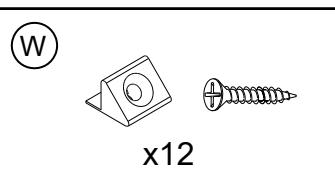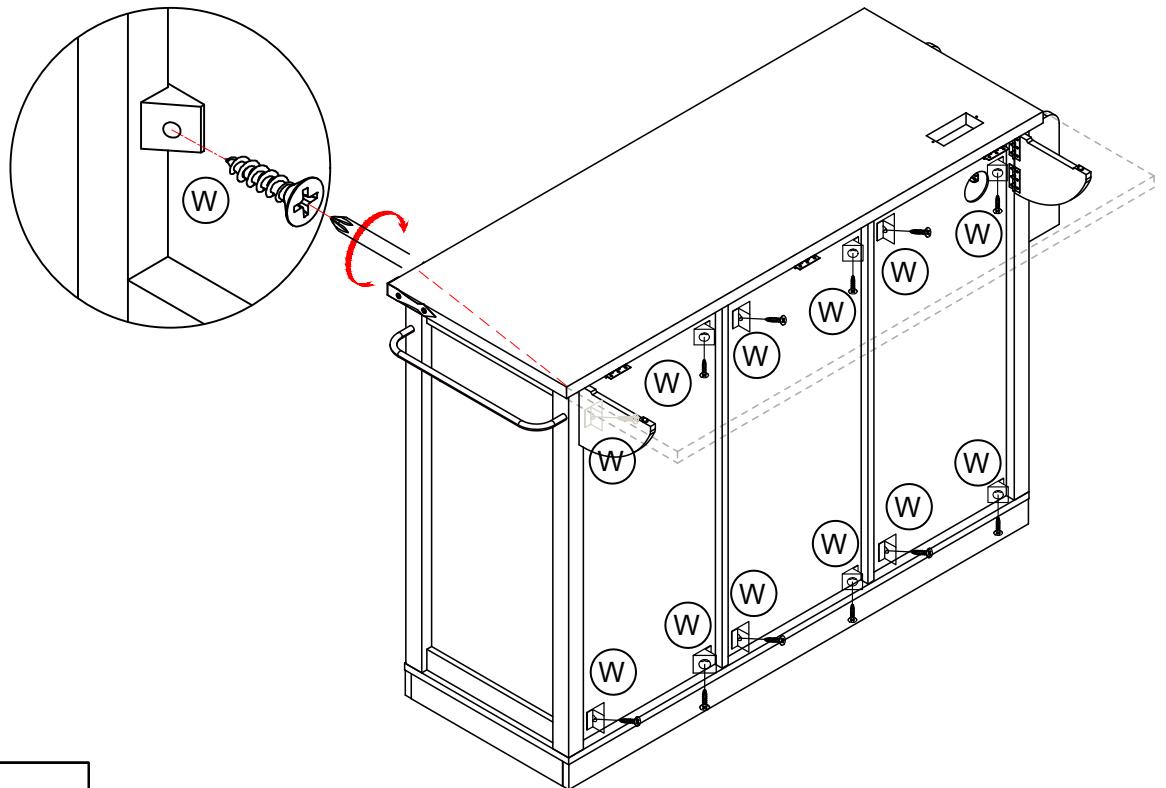

Assembly Instructions

Step 43

