


ASSEMBLY INSTRUCTIONS


TWIN BOOKCASE FLOOR BED

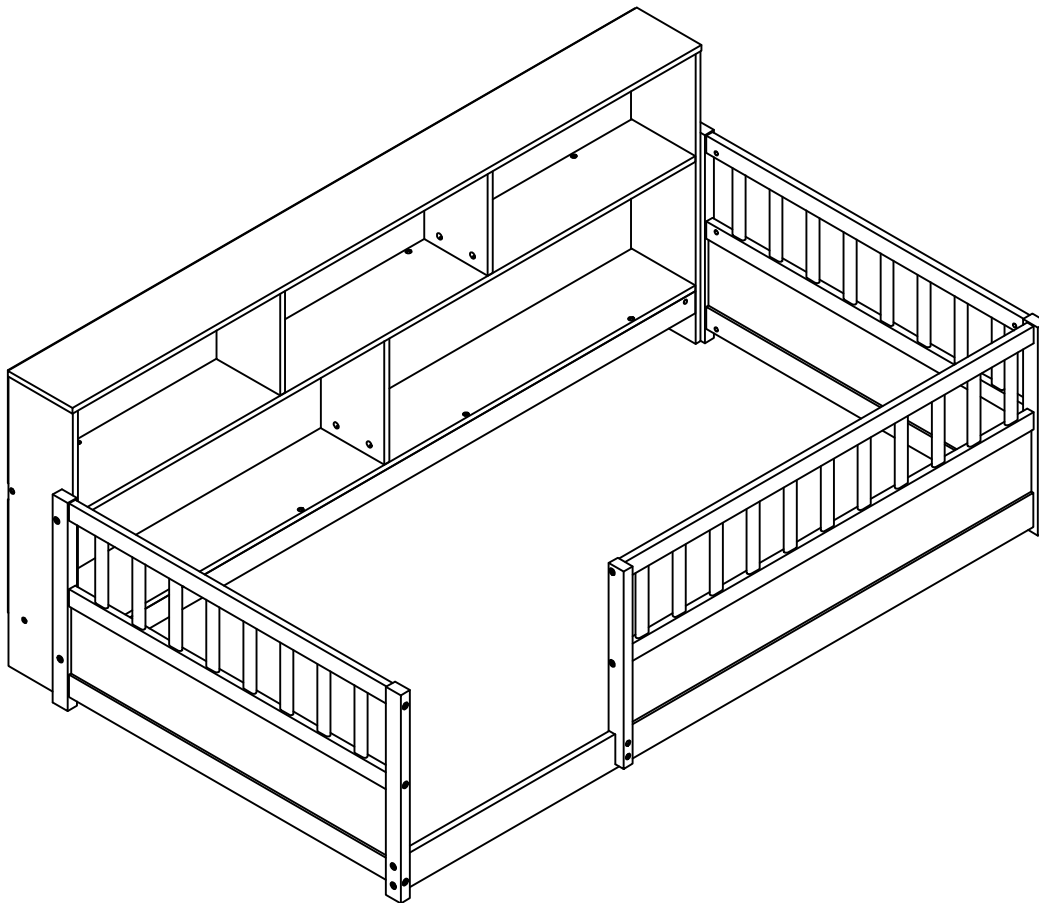
















SWB029-T

Contact us: 13826959116@163.com




Detail View

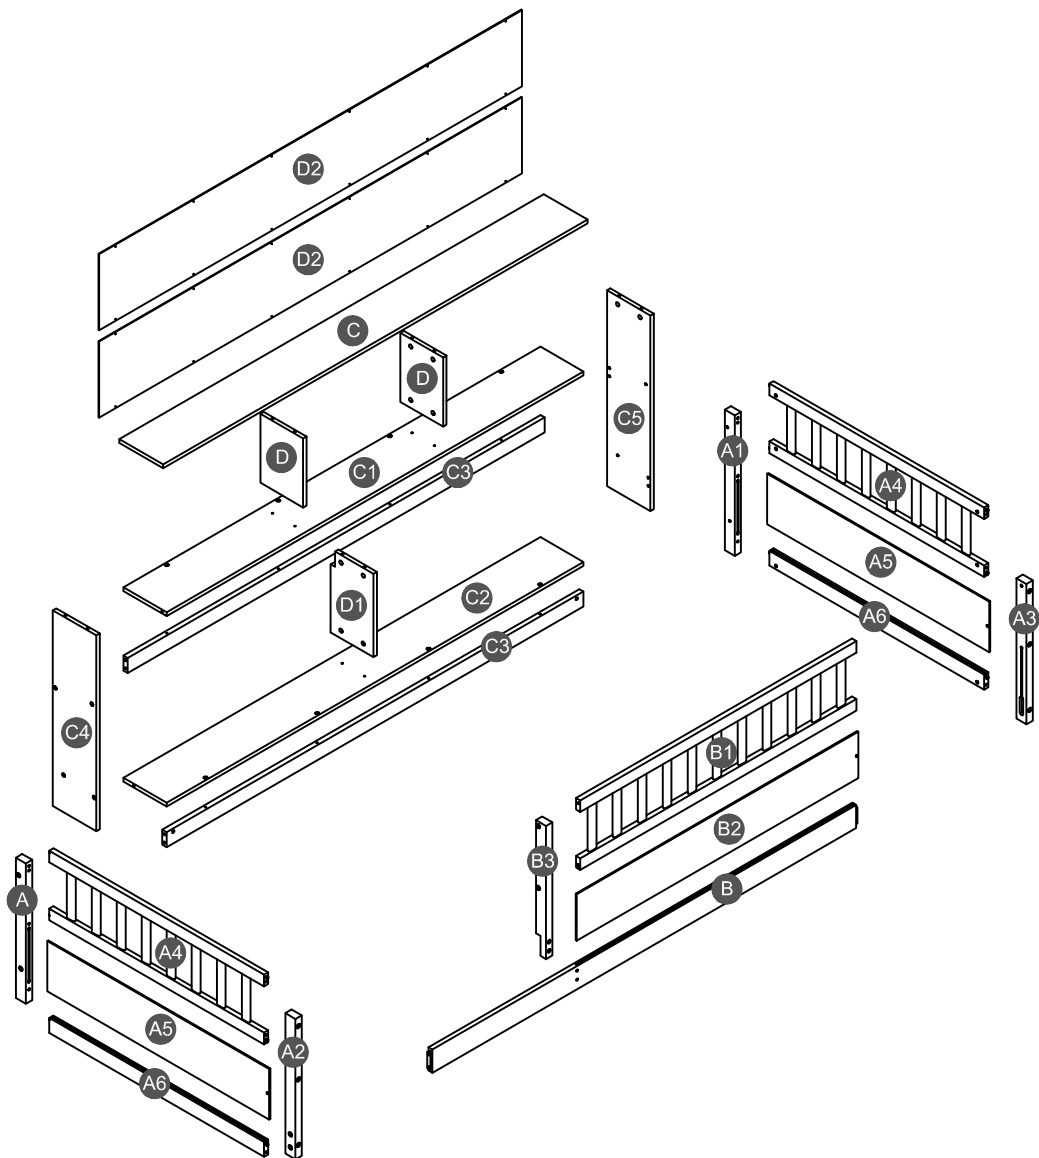


Part List

A  Leg (Left Back) - 1pc	A1  Leg (Right Back) - 1pc	A2  Leg (Left Front) - 1pc
A3  Leg (Right Front) - 1pc	A4  Frame (HB & FB)- 2pcs	A5  Panel HB & FB - 2pcs
A5  Horizontal bar HB & FB - 2pcs	B  Horizontal front - 1pc	B1  Frame guard rail (Front) - 1pc
B2  Front panel- 1pc	B3  Support guard rail - 1pc	C  Top panel - 1pc
C1  Upper shelf panel -1pc	C2  Lower shelf panel - 1pc	C3  Horizontal bar - 2pcs
C4  Left side panel- 1pc	C5  Right side panel -1pc	D  Upper mid panel - 2pcs
D1  Lower mid panel - 1pc	D2  Back panel - 2pcs	

Hardware List


1  (Ø15)1/4"*80mm Hex-Head bolts (24pcs)	2  (Ø12)1/4"*60mm Hex-Head bolts (4pcs)	3  (Ø12)1/4"*35mm Hex-Head bolts (2pcs)
4  1/4"*15 (9.5mm) Horizontal-Hole bolts(28pcs)	5  Ø3.5*15mm Wood screws (24pcs)	6  (1/4")4.5*58mm Allen key (1pc)
7  Ø14*9mm Cam lock(16pcs)	8  Ø7*35mm Cam lock (16pcs)	9  Ø8*30mm Wood dowel (4pcs)
10  (Ø12)1/4"*40mm Hex-Head bolts (8pcs)		

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)



PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !


STEP 1:

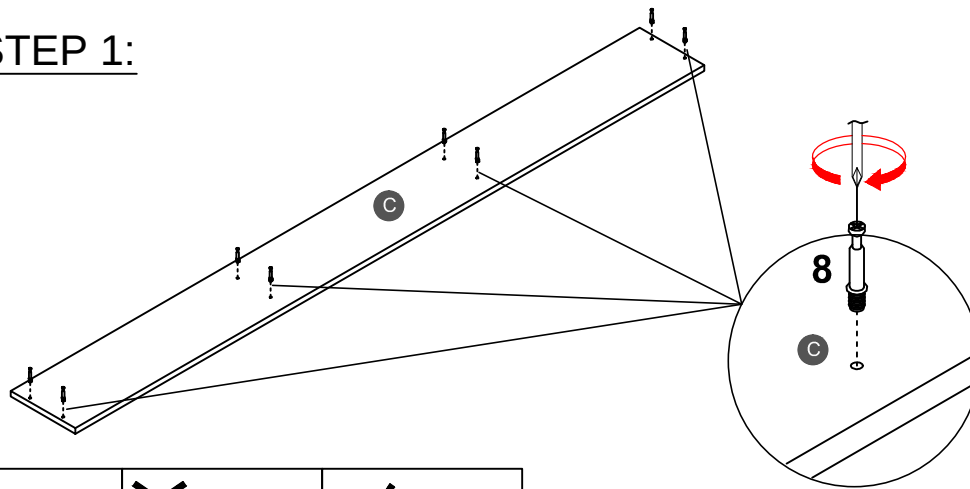


8



8PCS

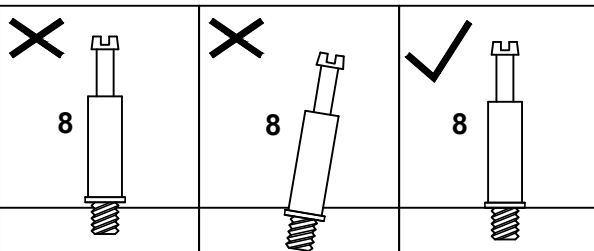

STEP 2:

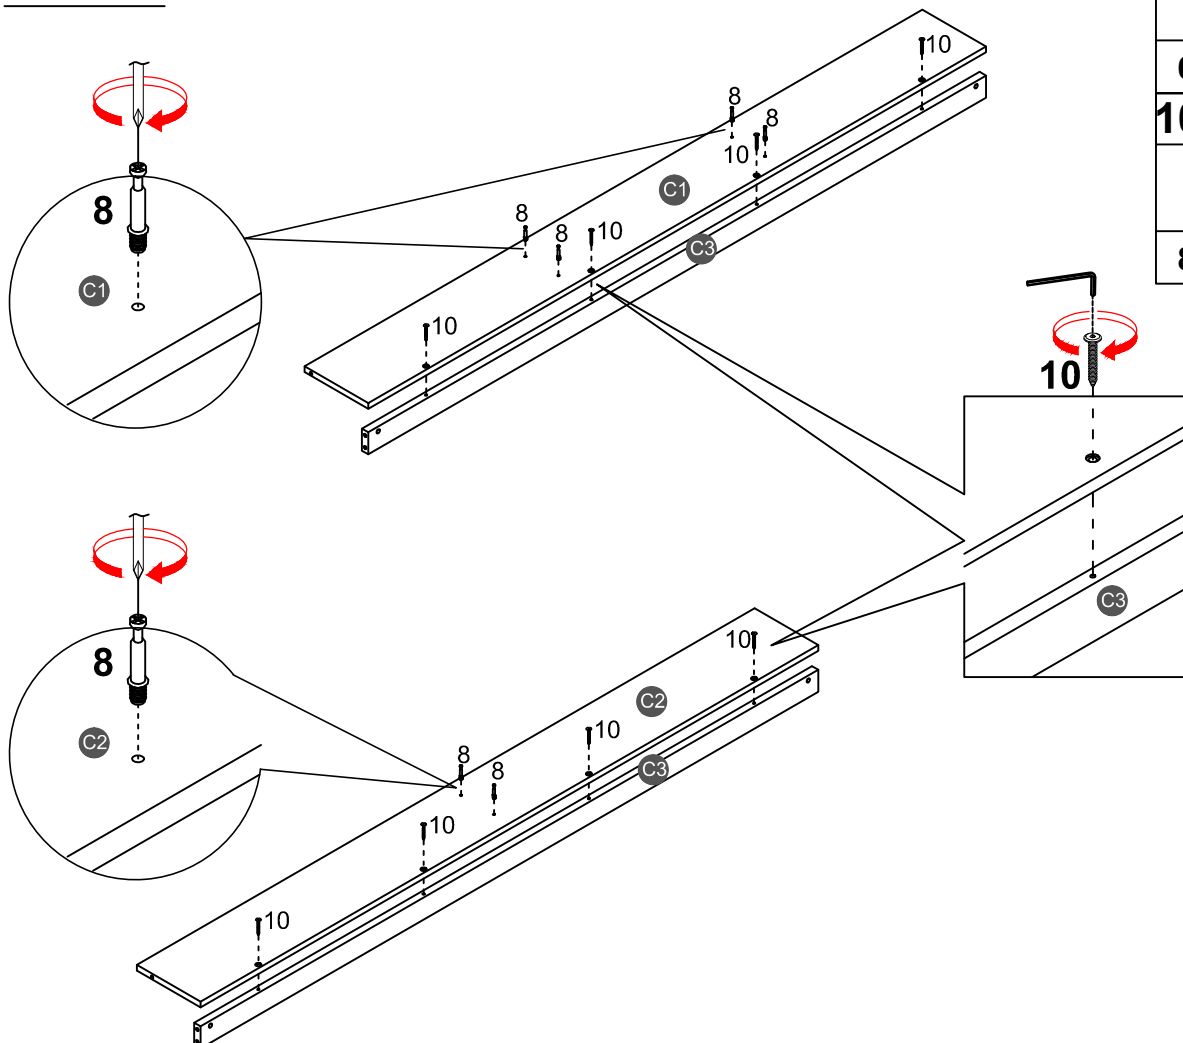

8





6PCS

10



8PCS

STEP 3:

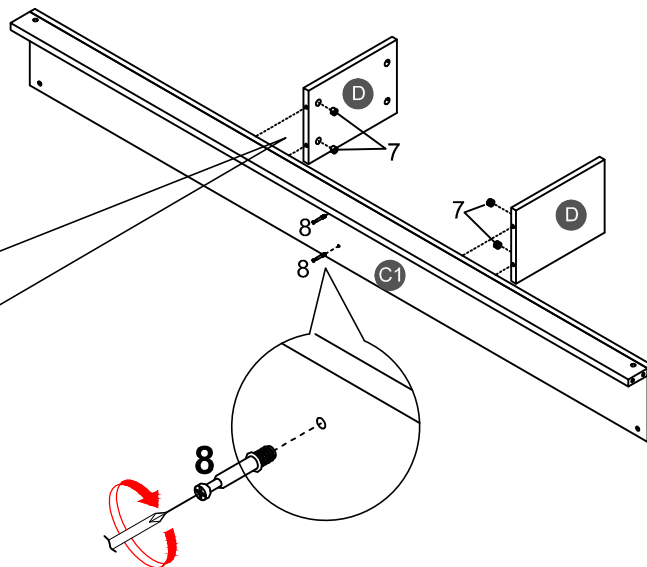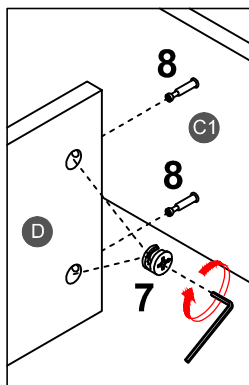


7




4PCS

8





2PCS

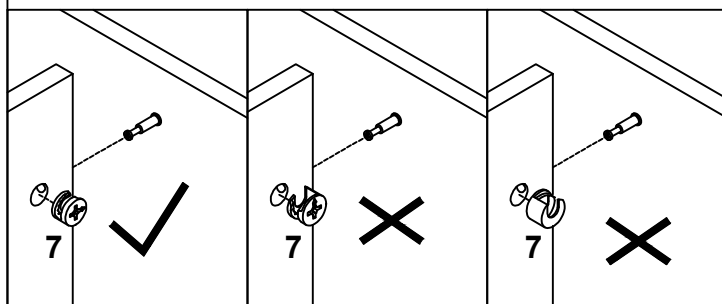

Note: Place hardware #7 with the "X" face outward, and make sure that the arrowhead is upward. Then, place hardware #7 into the hole of hardware #8 and tighten it clockwise with a hand screwdriver. (Please do NOT use an electric screwdriver.)

STEP 4:

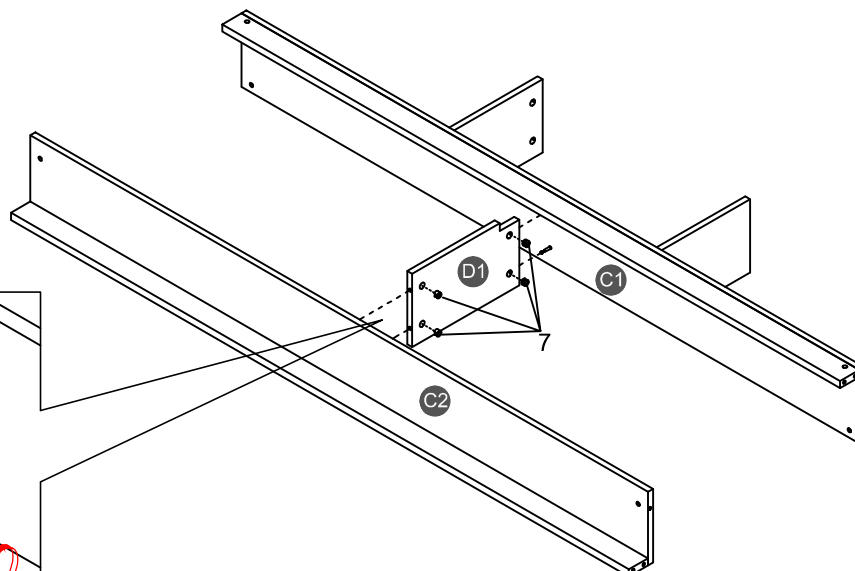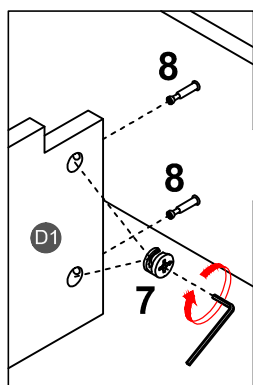


7




4PCS

STEP 5:

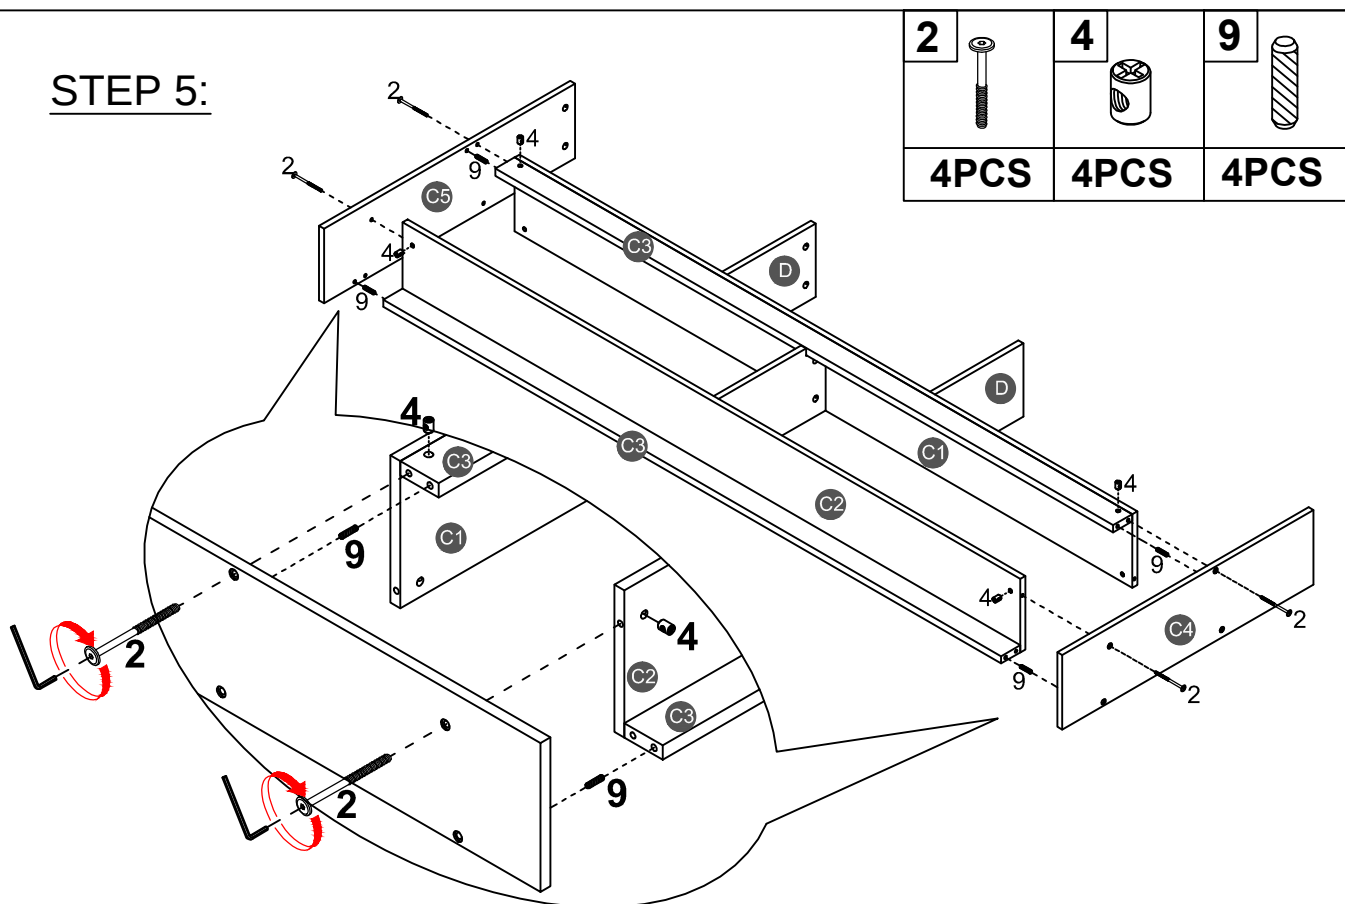

STEP 6:

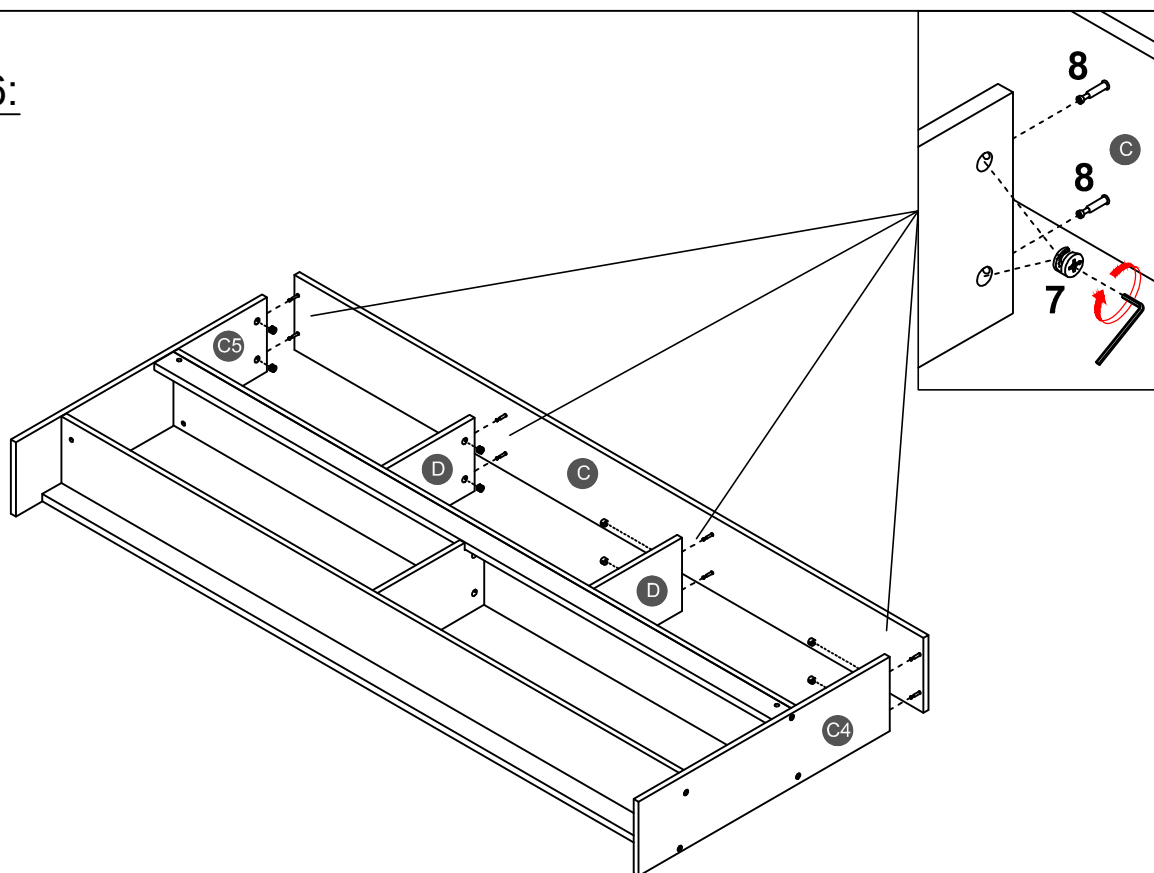


STEP 7:


5




x24

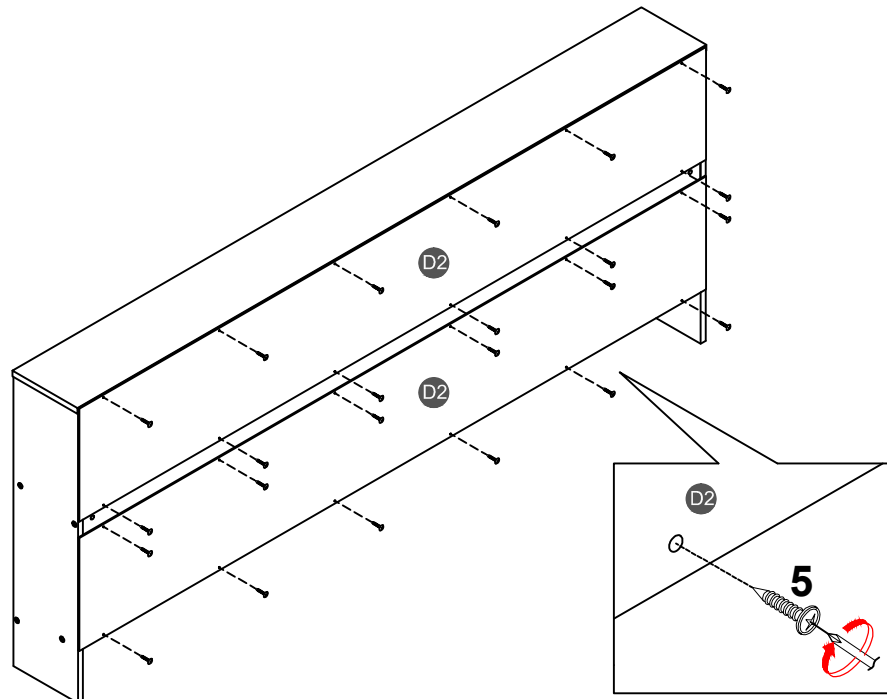



STEP 8:

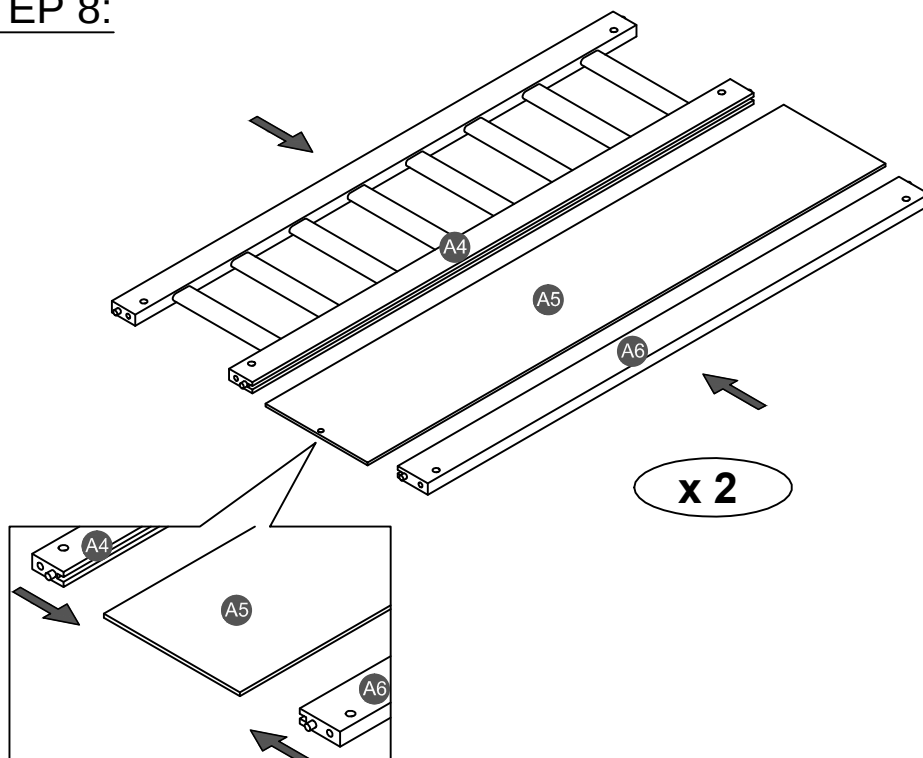

STEP 9:

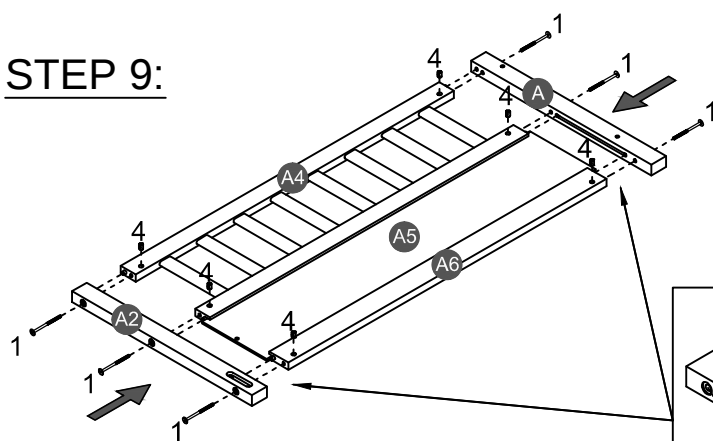


1	4
	
6PCS	6PCS

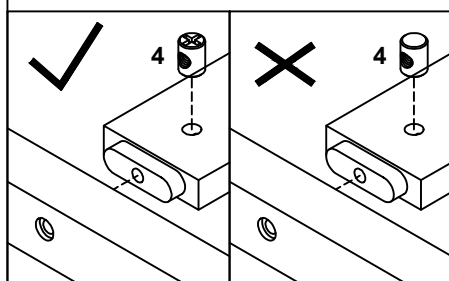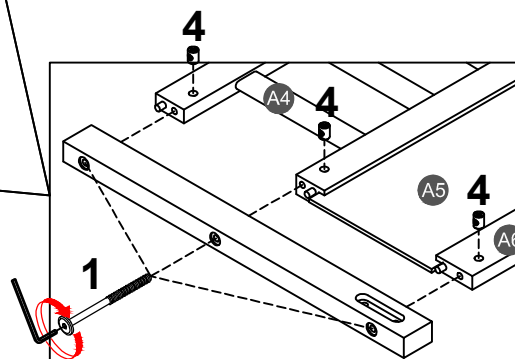

Note: Part 4 will face up with the "x" mark on it, otherwise it cannot be tightened


STEP 10:

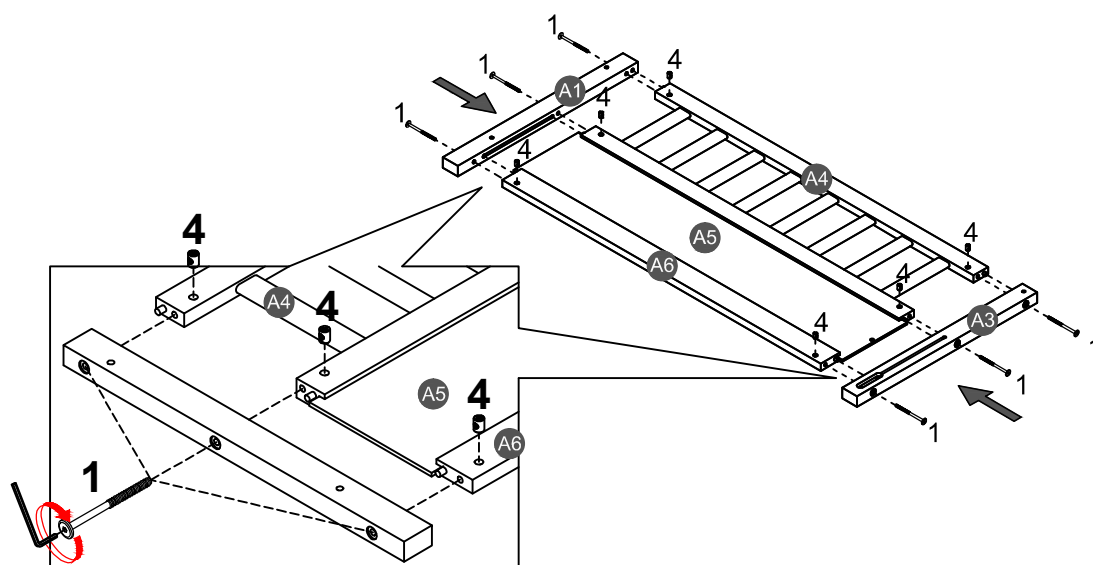

1	4
	
6PCS	6PCS


STEP 11:

1		4	
8PCS		8PCS	

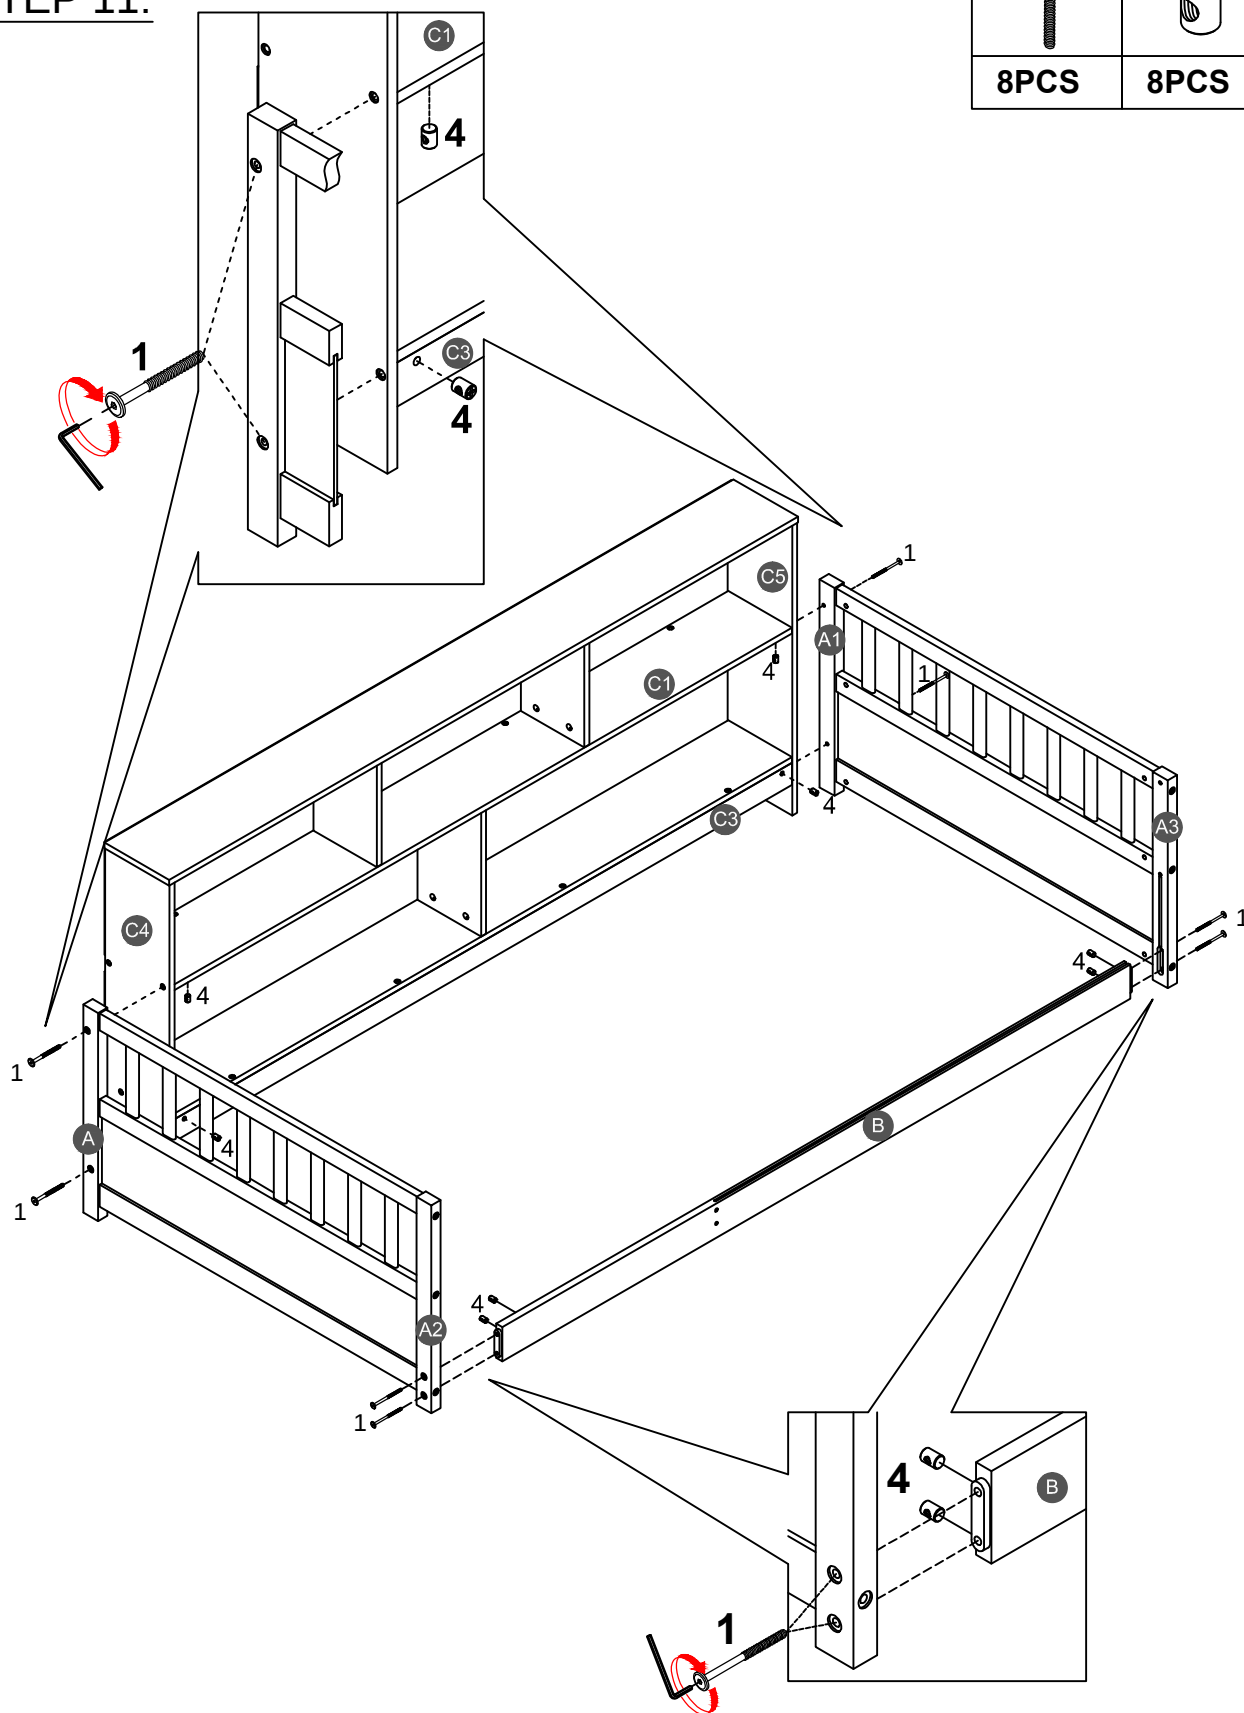


STEP 12:

1		4	
2PCS		2PCS	

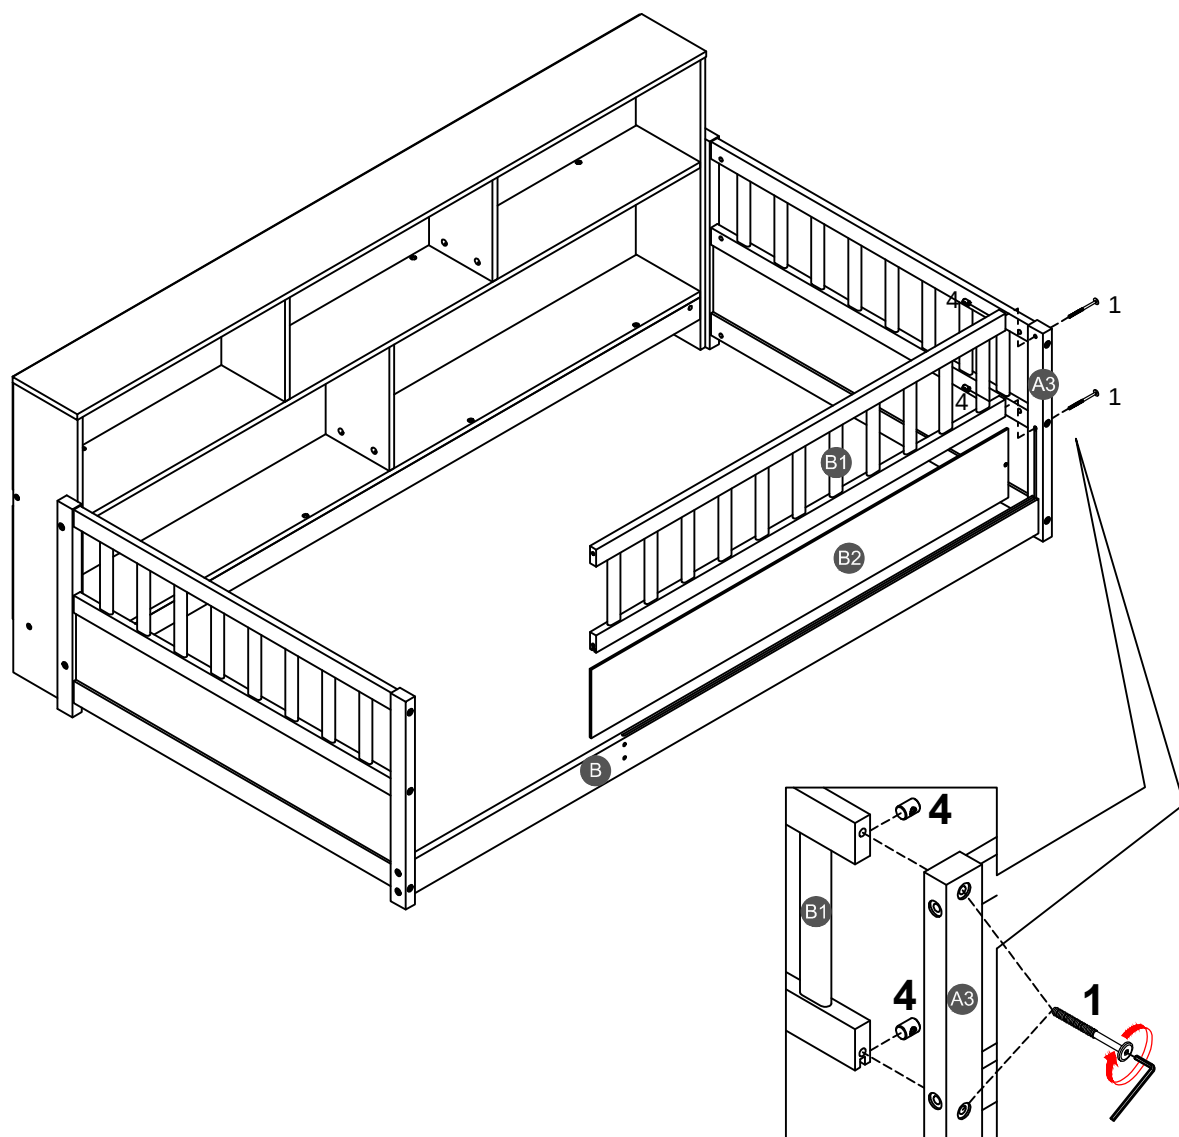

STEP 13:

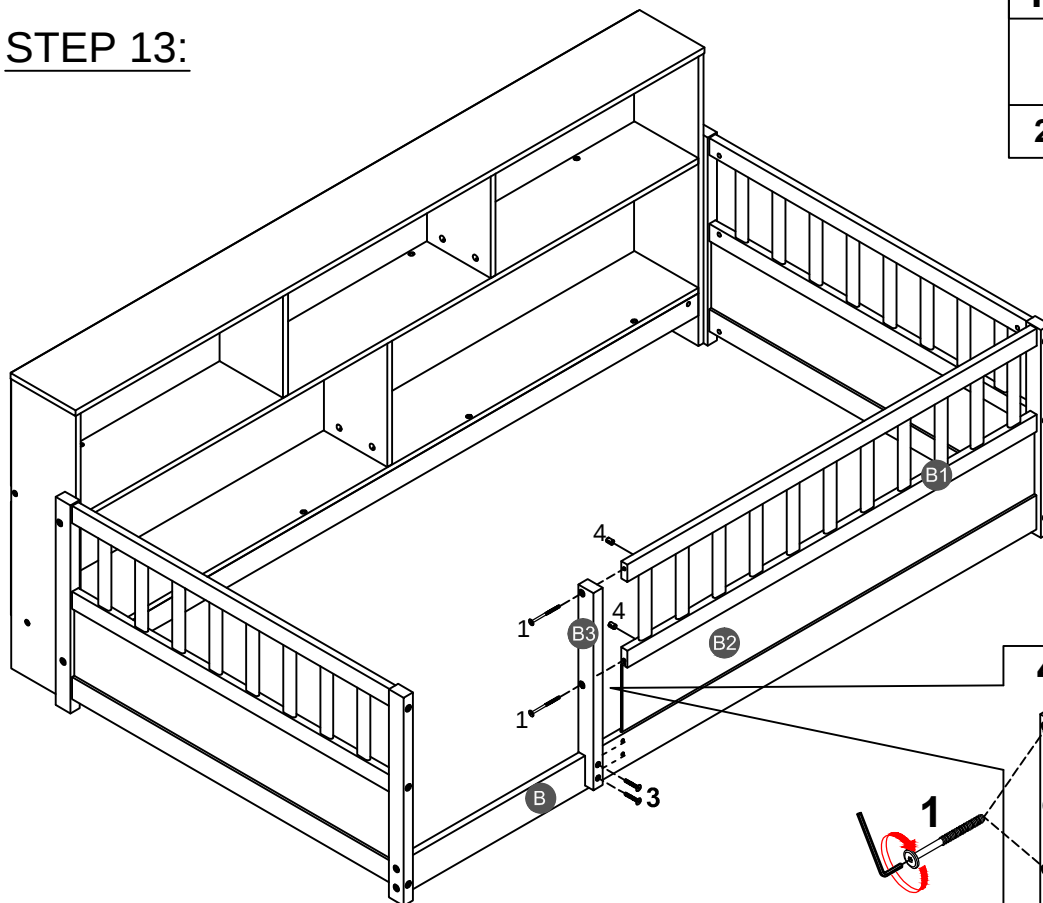

1		3	
2PCS		2PCS	
		4	
		2PCS	

