


Assembly Instruction

———— CBN202 ———

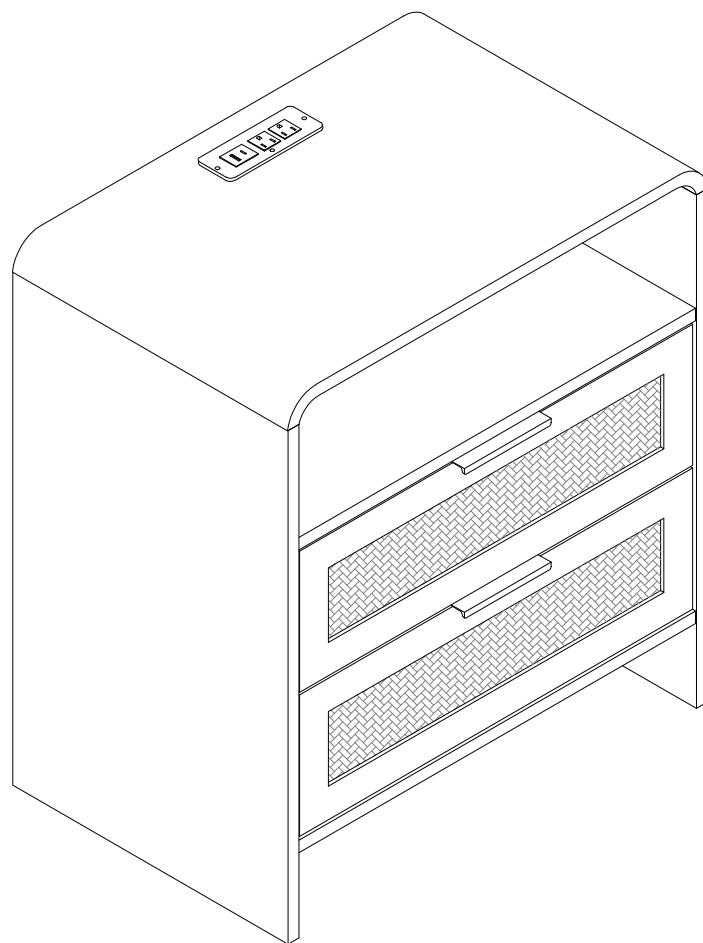

General Guidelines

- Please read the following instruction carefully and use the product accordingly.
- Please keep this manual and hand it over when you transfer the product.
- This summary may not include every detail of all variations and considered steps. Please contact us when further information and help are needed.


Notes

- The product is intended for indoor use only. The product must be assembled and used in accordance with the provisions of the manual. Personal injury and/or damage to product may occur if products are used outside of their intended purposes and/or if products have been changed/modified from their original design. The seller does not assume any responsibility or liability with respect to any injury/damage caused by incorrect assembly or improper use.
- Avoid long-term exposure to humid environments to prevent mildew.
- Keep the product away from fire sources and high temperatures. Do not expose the product to direct sunlight.
- Do not place any hot objects on the surface of the product.
- If there are any defective or missing parts after unpacking, please cease assembly immediately and contact us.
- Please assemble the item on a spacious surface and do not place the unwrapped product directly on the ground to avoid product damage.
- Please do not stand or sit on the wooden boards.
- Please wear gloves during the assembly and/or disassembly process to avoid scratches from any sharp edges.
- Please match the corresponding part and fitting based on the part number in the manual.
- If the part does not match with the fitting, please check the piece as specified in this manual.
- During assembly, first loosely align all screws with the corresponding pre-drilled holes and then tighten the screws one by one.
- Periodically inspect screw tightness while the product is in use. If necessary, retighten to ensure structural integrity.
- If you accidentally spill water or another liquid on the surface, immediately wipe clean with a dry towel.
- Please keep the product away from sharp, pointed objects and corrosive substances to prevent product damage.
- Please place this item on level, solid ground during use.




Warnings














- During assembly, keep all small parts out of the reach of children. It may be fatal if swallowed or inhaled.
- Children should not climb or play on the product in order to avoid tipping over the furniture and causing serious injury.
- To avoid the potential dangers of suffocation, please keep all parts and packaging (film, plastic bags, foam, etc.) away from babies and children.
- Keep sharp objects and corrosive items away from the product to avoid any damage or injury.
- Do not shake or move violently during use to avoid tipping over the product.

Parts List (EN)




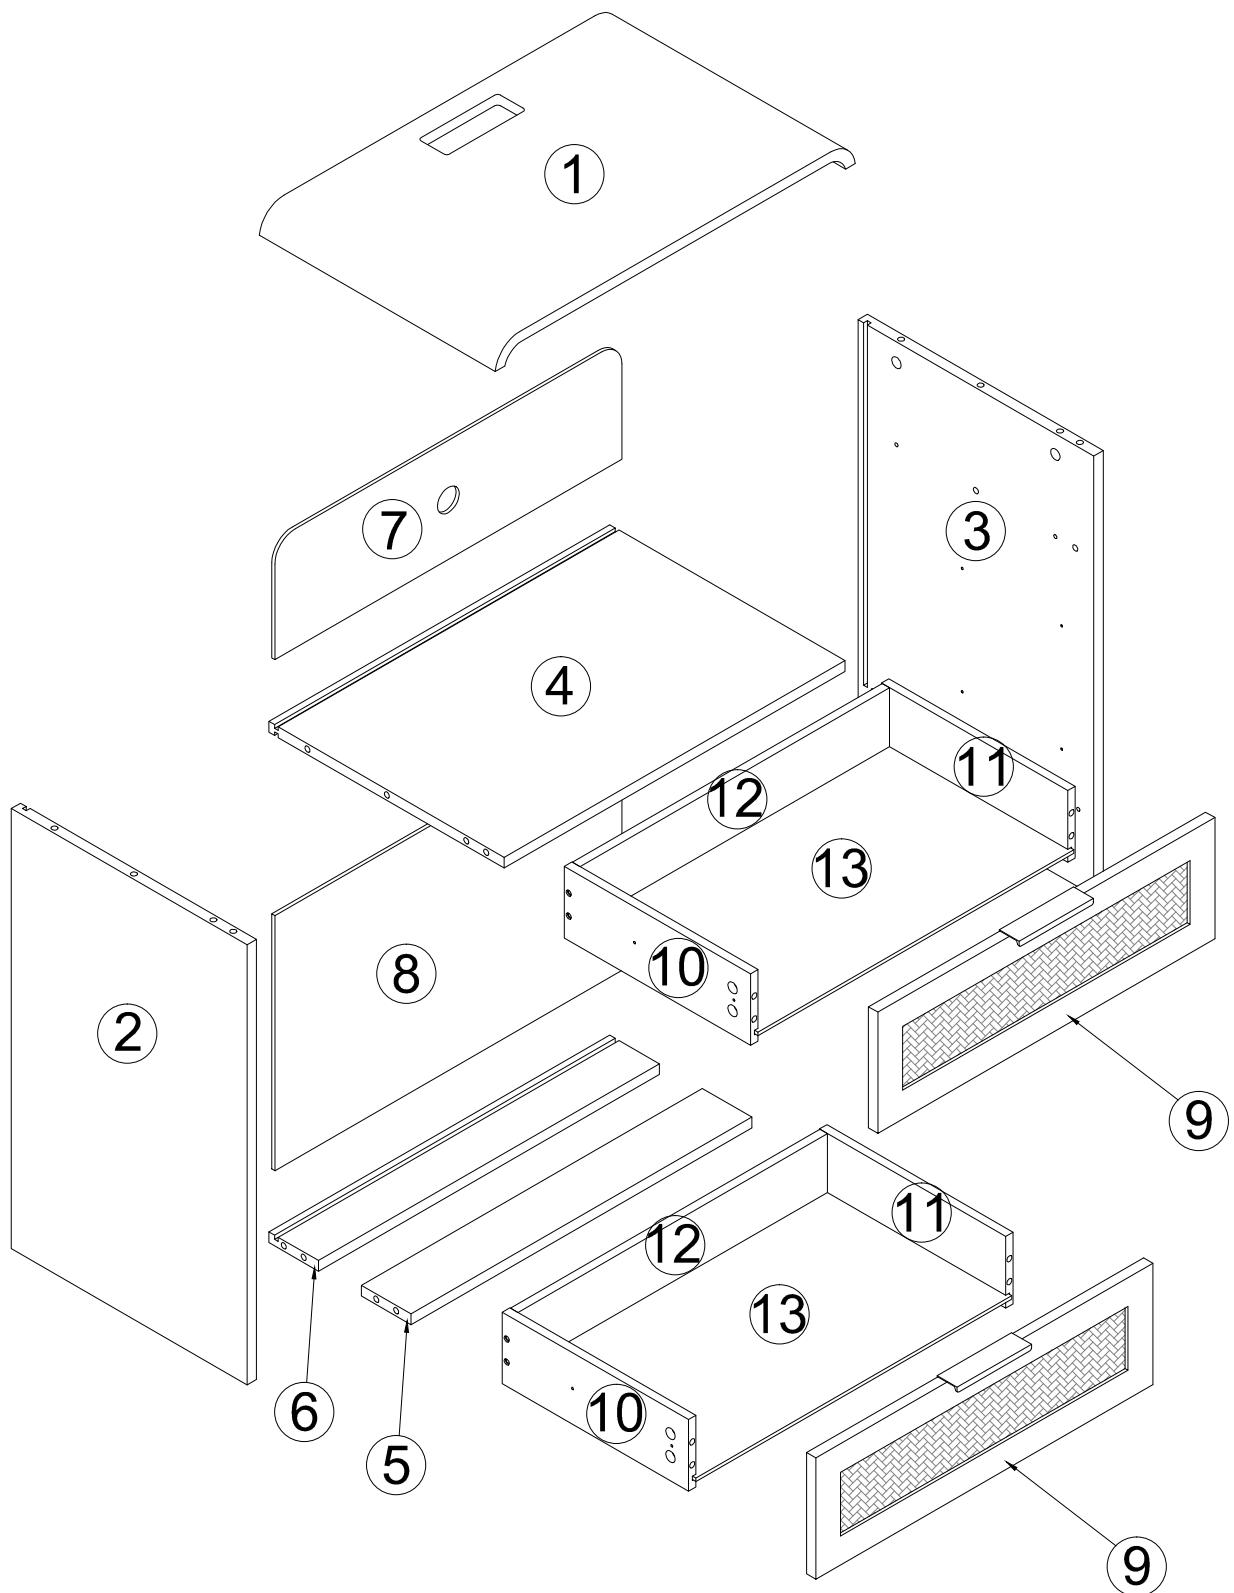


Parts List (EN)

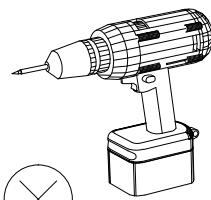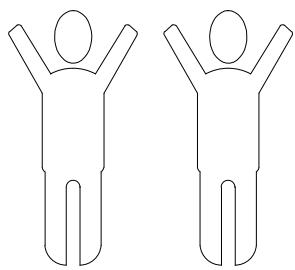

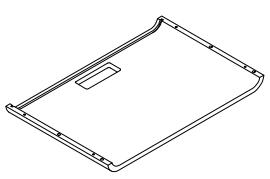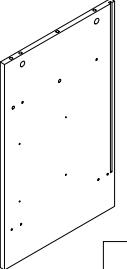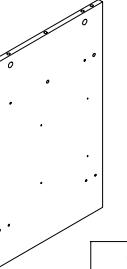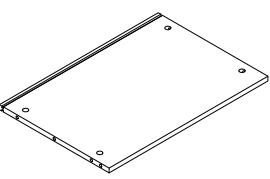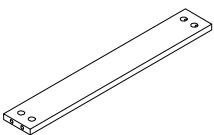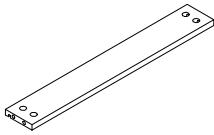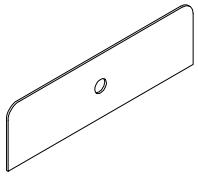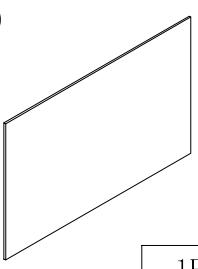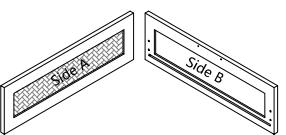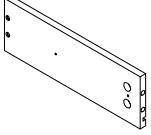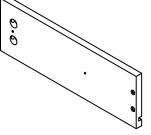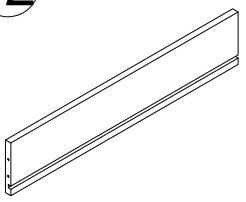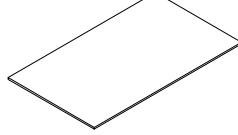1  1PC	2  1PC	3  1PC	4  1PC
5  1PC	6  1PC	7  1PC	8  1PC
9  2PCS	10  2PCS	11  2PCS	12  2PCS
13  2PCS			

Parts List (EN)

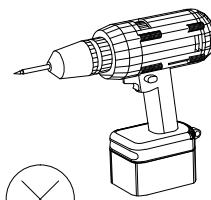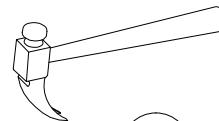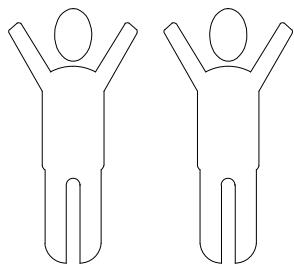

No. A
Quantity:24+2 Pcs
Cam Lock Dowel
8*28mm




No. B
Quantity:24+2 Pcs
Cam
Ø15




No. C
Quantity:8+1 Pcs
Sticker
Ø20



No. D
Quantity:8+1 Pcs
Dowel
8*30mm




No. E
Quantity:2 Sets
Drawer Slider
10"




No. F
Quantity:22+2 Pcs
Screw
M3.5*12mm



No. G
Quantity:8+1 Pcs
Screw
M4*30mm




No. H
Quantity:2 Pcs
Handle




No. I
Quantity:4+1 Pcs
Foot Pad
Ø15



No. J
Quantity:1 Pc
Power strip




No. K
Quantity:1 Pc
Screwdriver

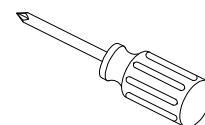

No. L
Quantity:6+1 Sets
Plastic Wedge



Instructions For Fastening CAM-BOLT and CAM-LOCK




CAM-BOLT



CAM-LOCK

Tools Required



INSERTING AND TIGHTENING CAM-BOLT

Place Cam-bolt on pre-drilled hole and screw in vertically

Shoulder is flushed (on the same level) with the panel.

Shoulder is above the panel.

Place Cam-bolt on the designated pre-drilled holes on the panel. Use a Phillips Screwdriver to screw-in Cam-bolt vertically until shoulder is flushed (on the same level) with panel.

INSERTING CAM-LOCK

Insert Cam-lock with arrow align to Cam-bolt head **CORRECT**

WRONG

TIGHTENING CAM-LOCK

Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.


Use a Flat-head Screwdriver to turn Camlock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4ths of a turn) -- over-tightening could damage Cam-lock or/and Cam-bolt.

STEP 1

Before Assembly

Tips Before Your Start





How to separate the drawer slider:

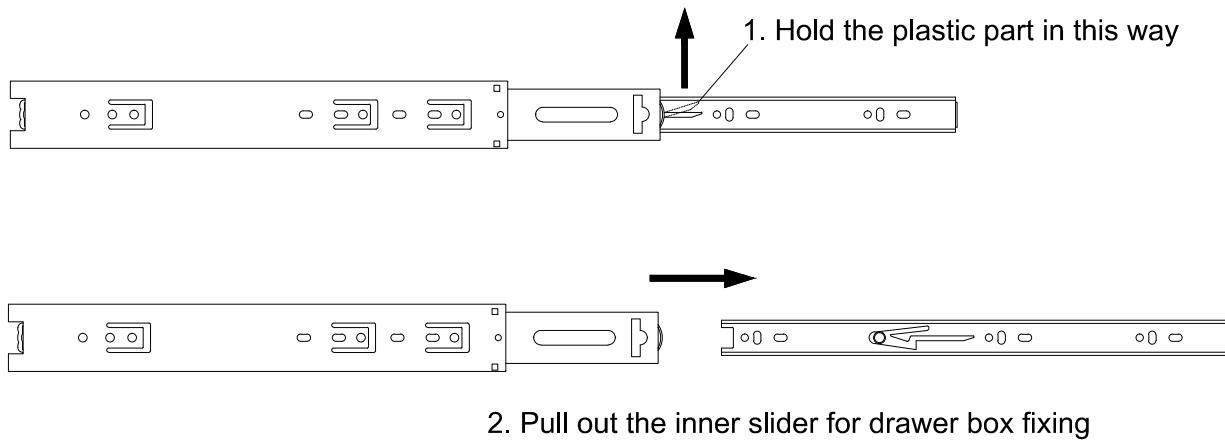

STEP 2







Please pull the drawer slide out to a suitable position to install the screws.

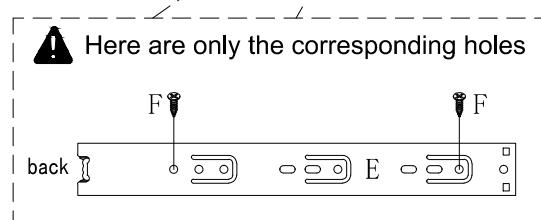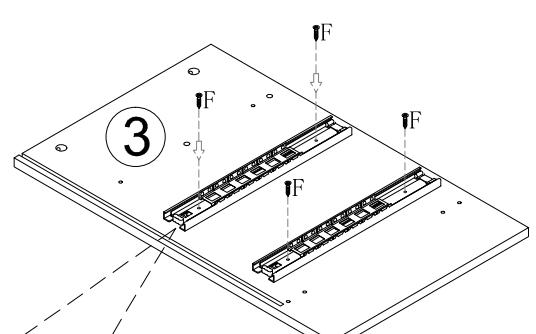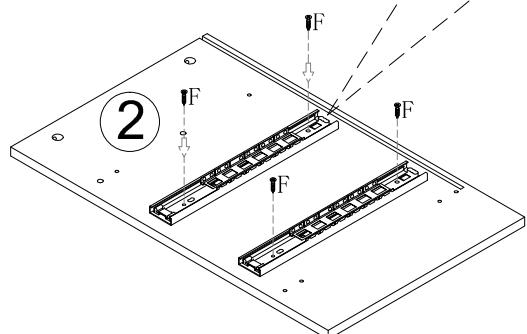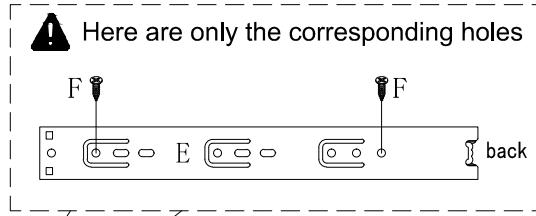


	E×2Sets
	F×8PCS



STEP 3

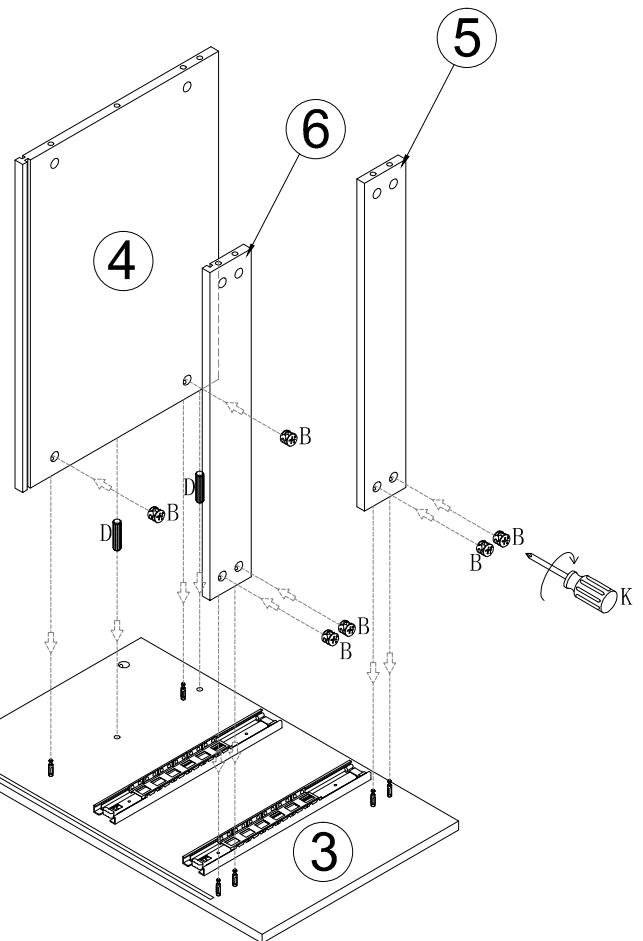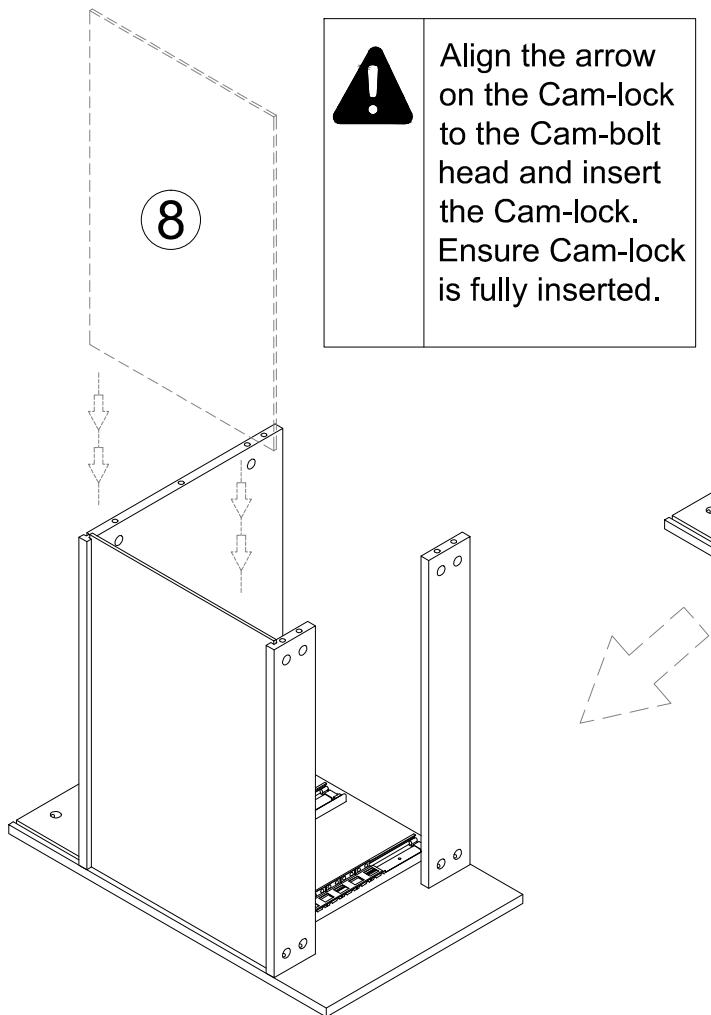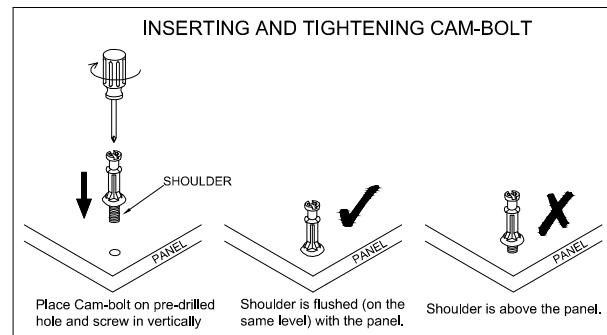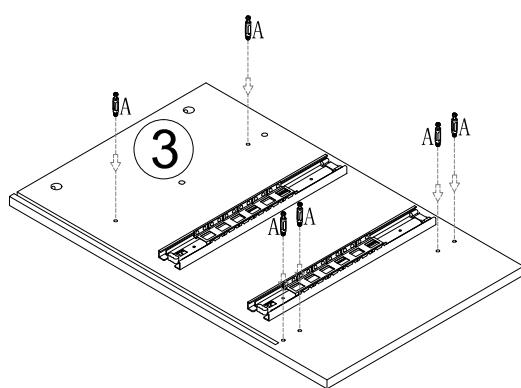




	A×6PCS
	B×6PCS
	D×2PCS

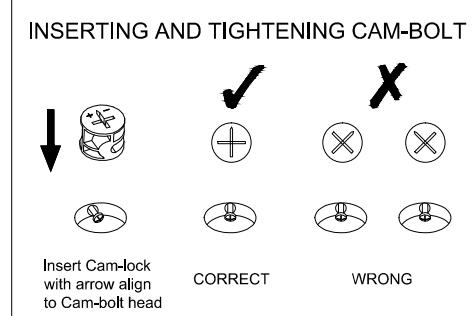

STEP 4

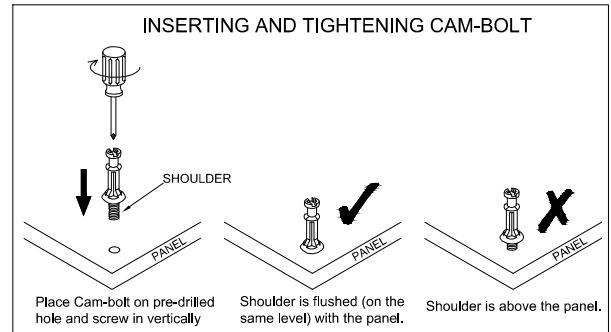
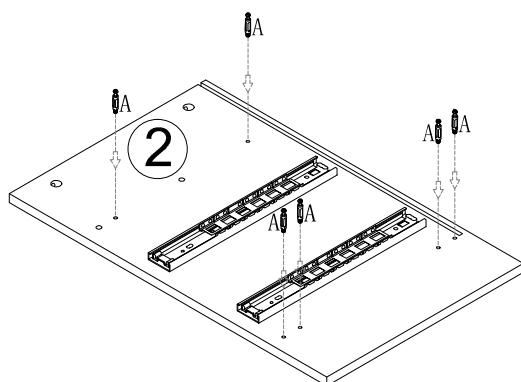


Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

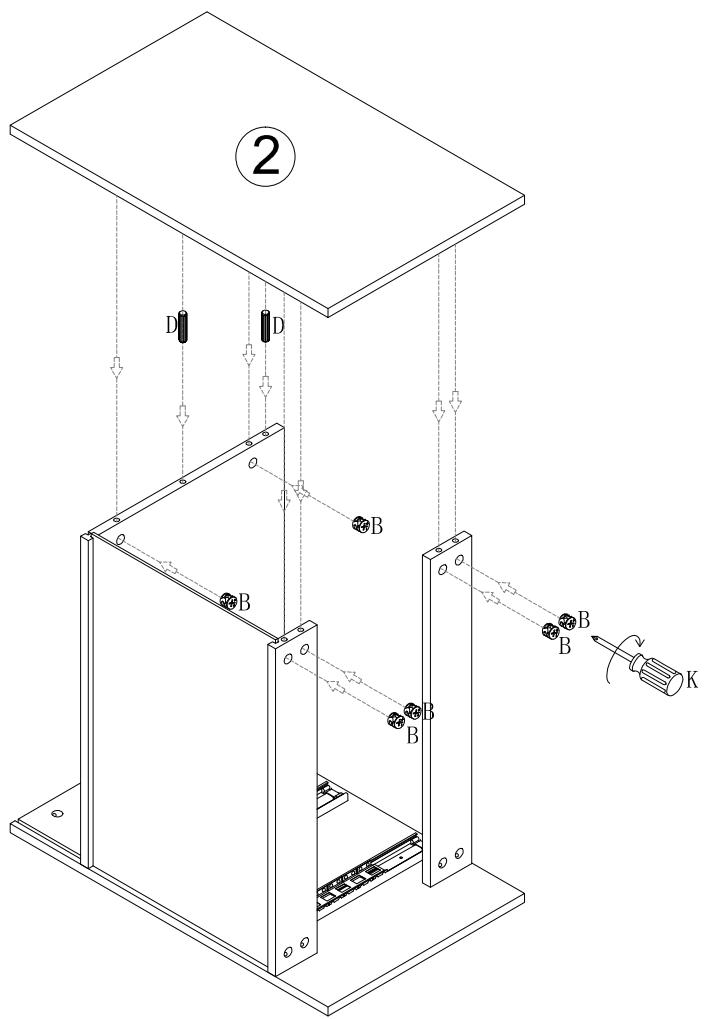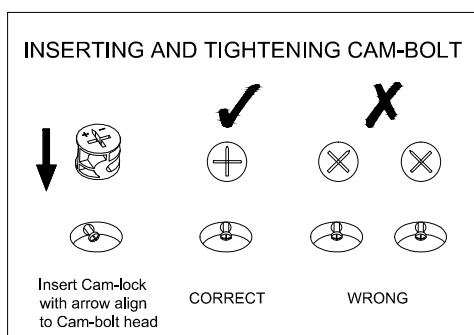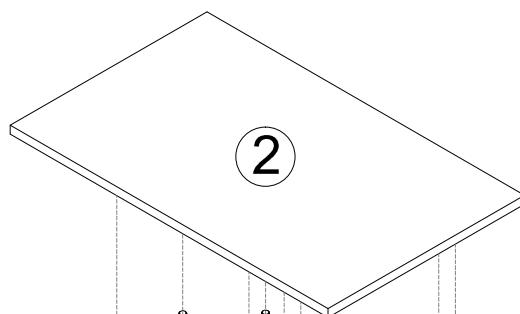



	A×6PCS
	B×6PCS
	D×2PCS

STEP 5


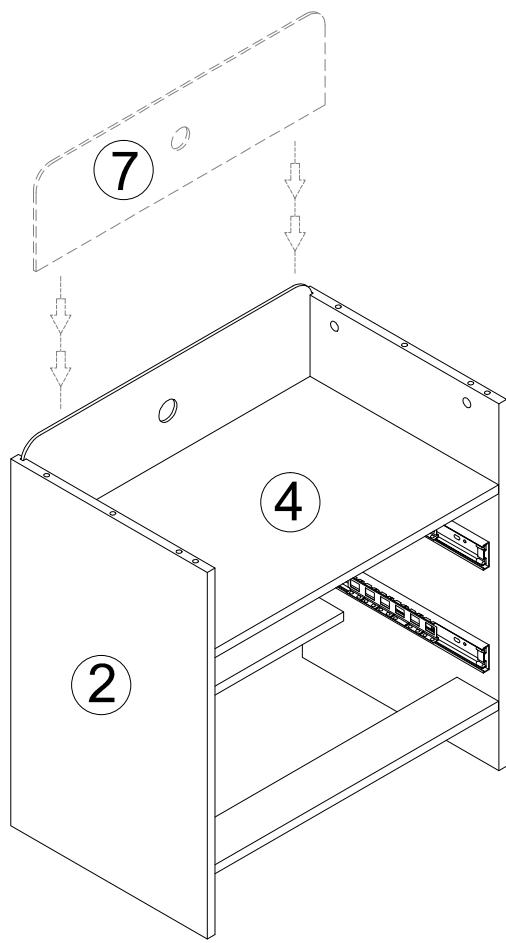
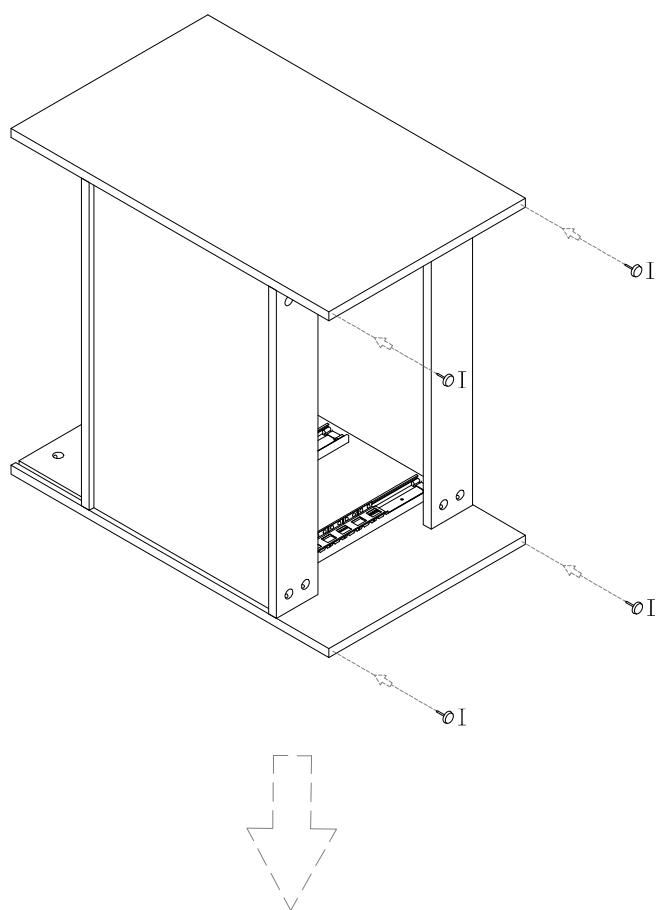


1x4PCS

STEP 6

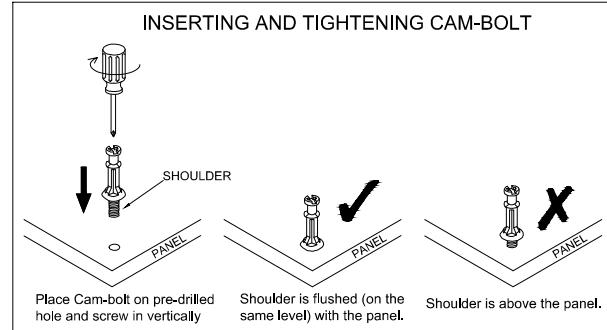
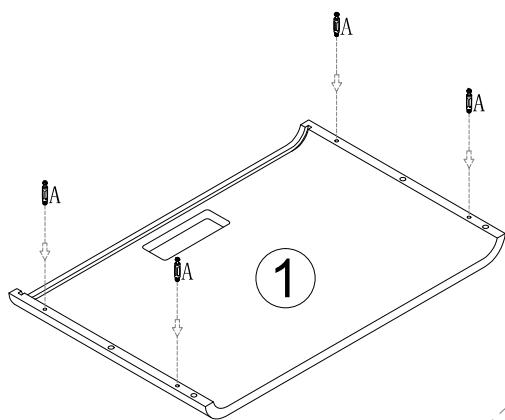


Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

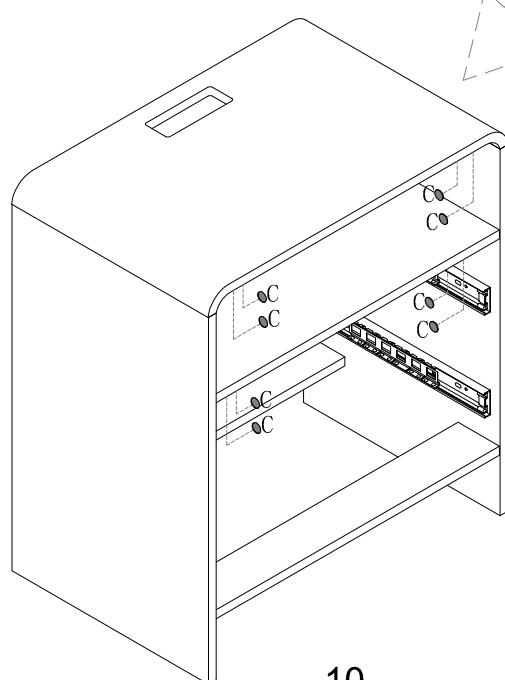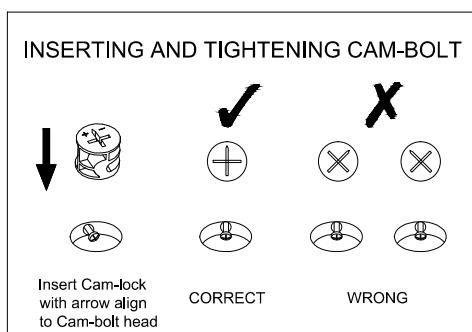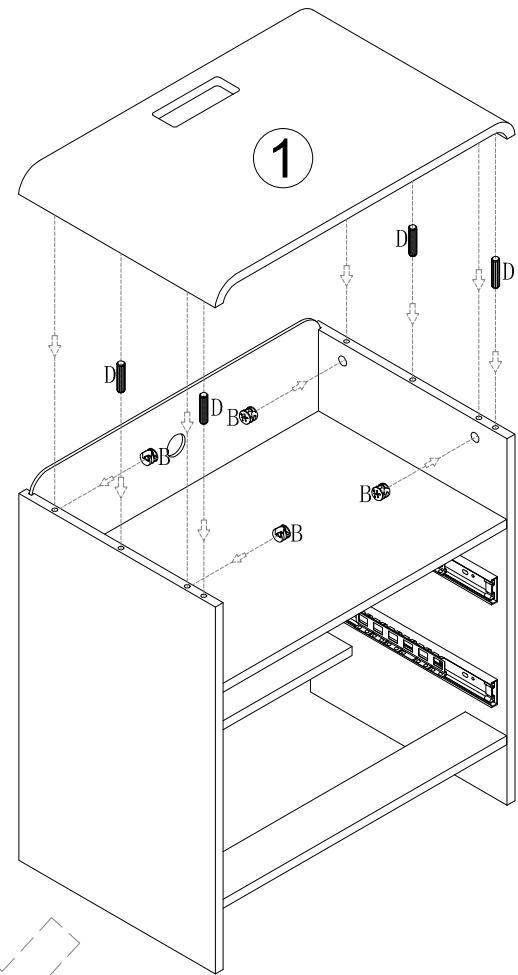

	A×4PCS
	B×4PCS
	C×8PCS
	D×4PCS



STEP 7

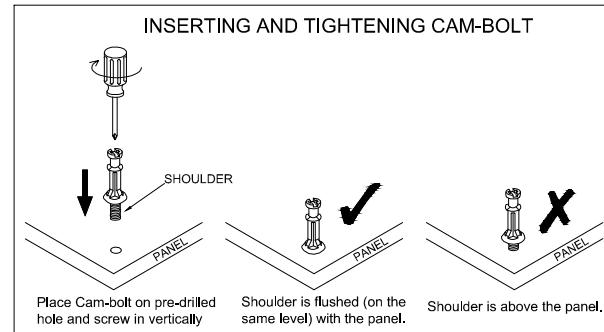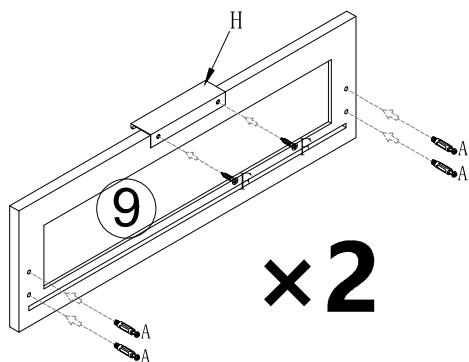

!
Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.






INSERTING AND TIGHTENING CAM-BOLT

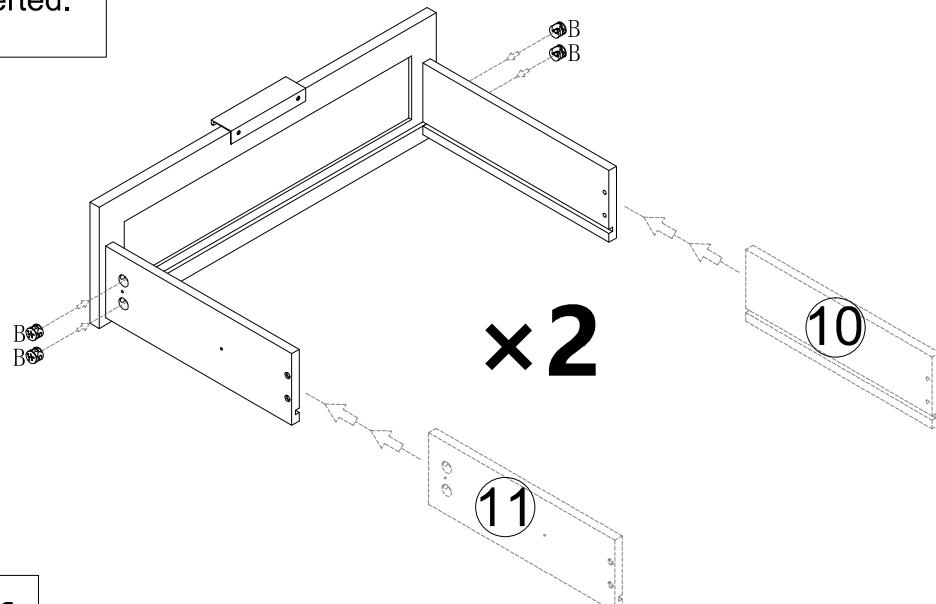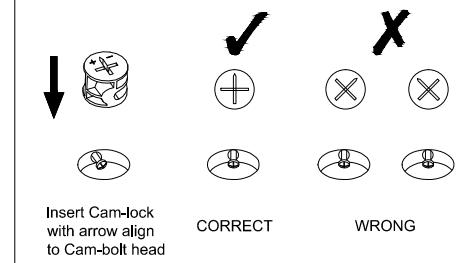


	A×8PCS
	B×8PCS
	F×4PCS
	H×2PCS

STEP 8

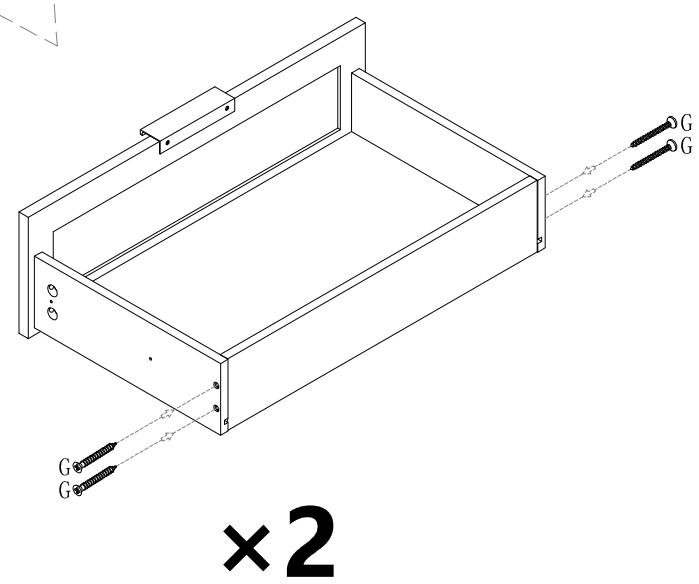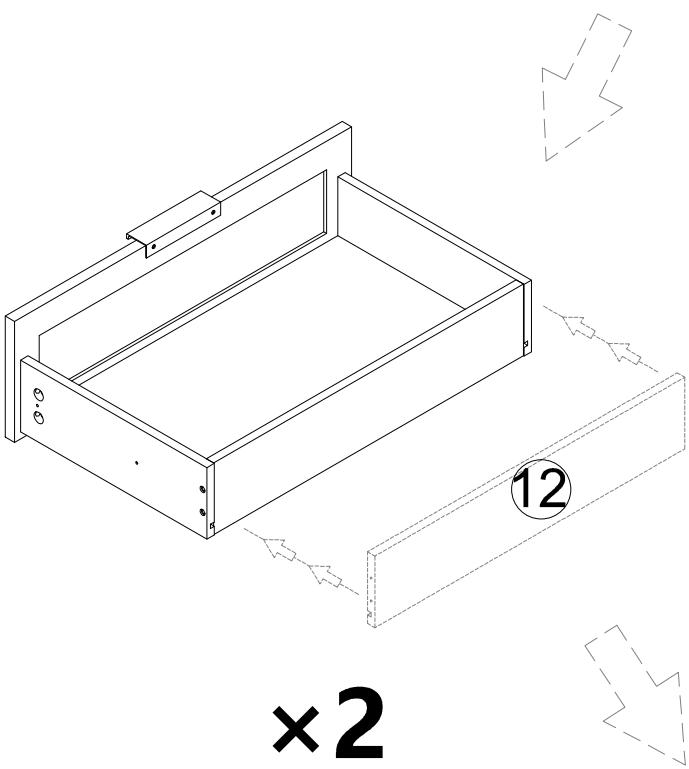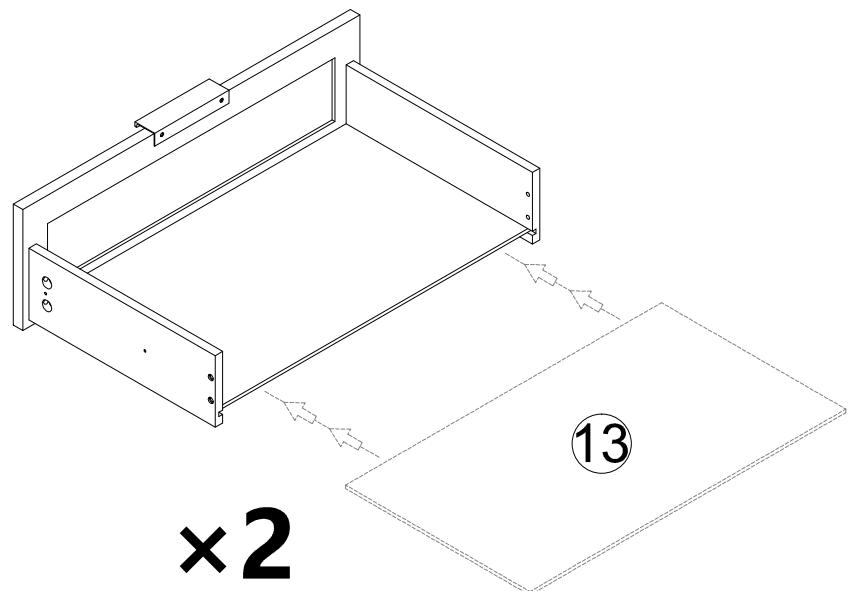


STEP 9

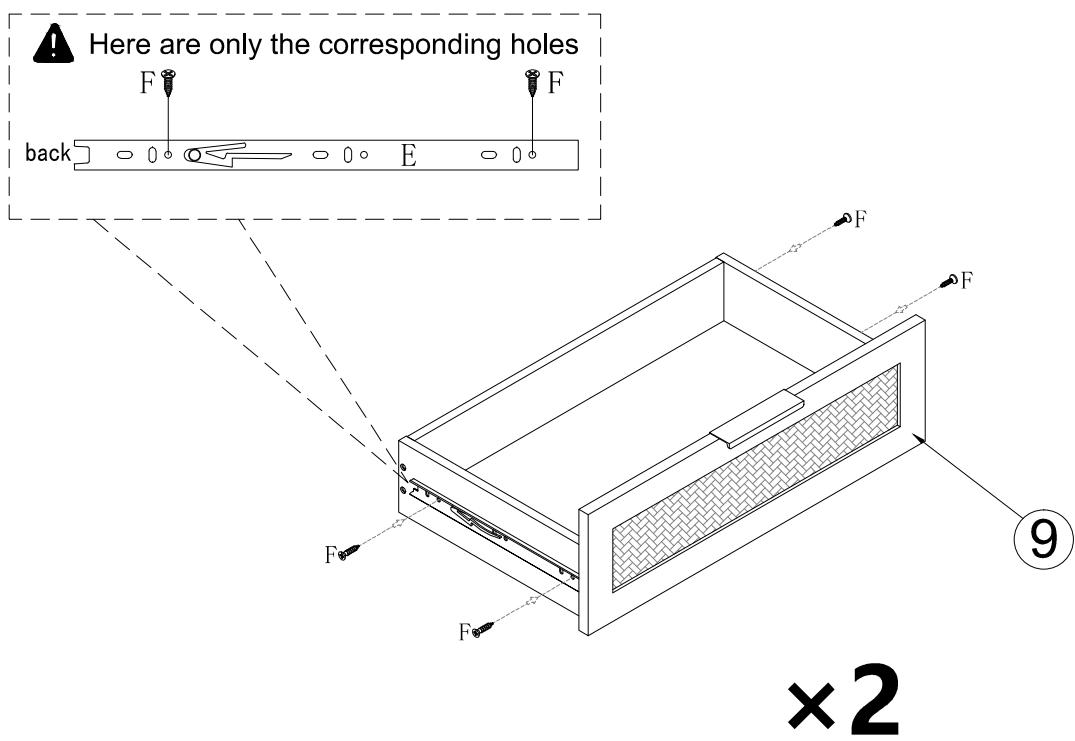


STEP 10

Drawer Front Alignment

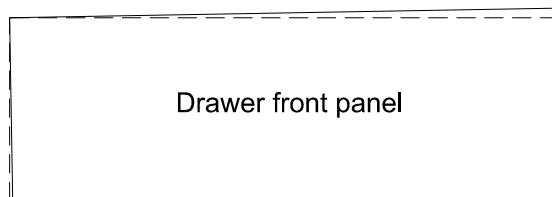


If the drawer front panel is NOT level after being assembled, then...

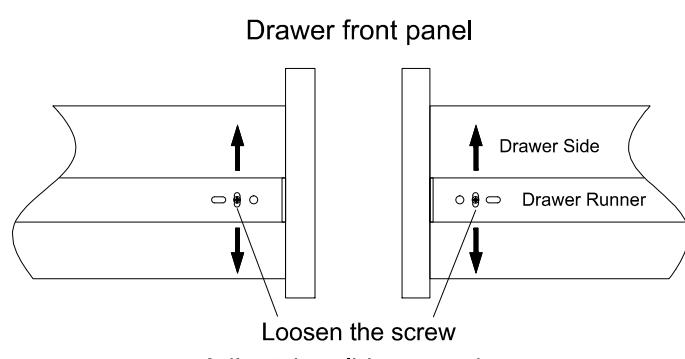


Loosen the screws on the left and right hand side, then adjust the drawer slide up or down, until the drawer fronts are even/level, then tighten the screws.

STEP 11

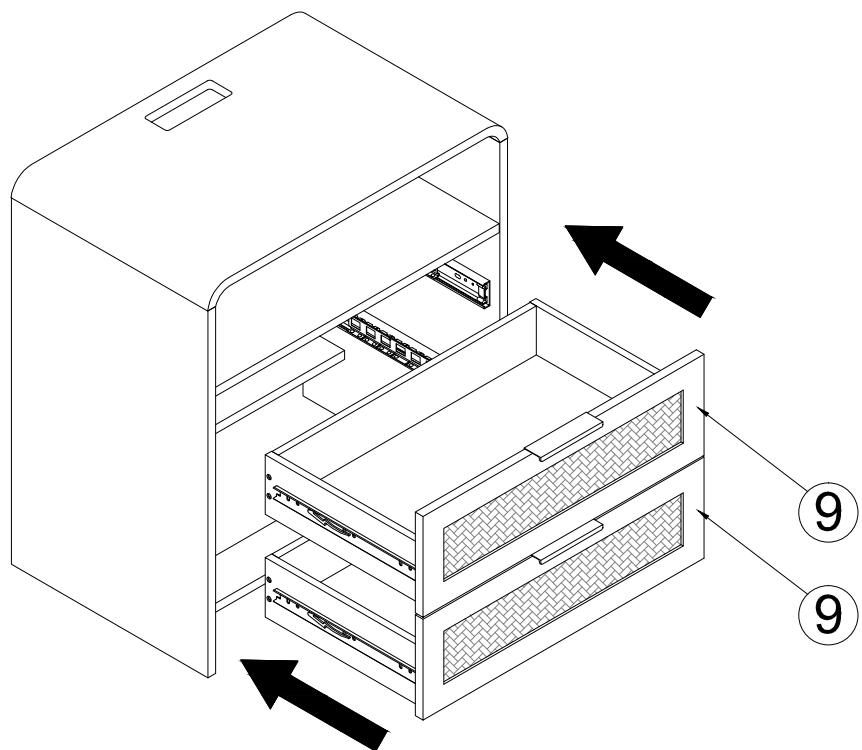


STEP 12

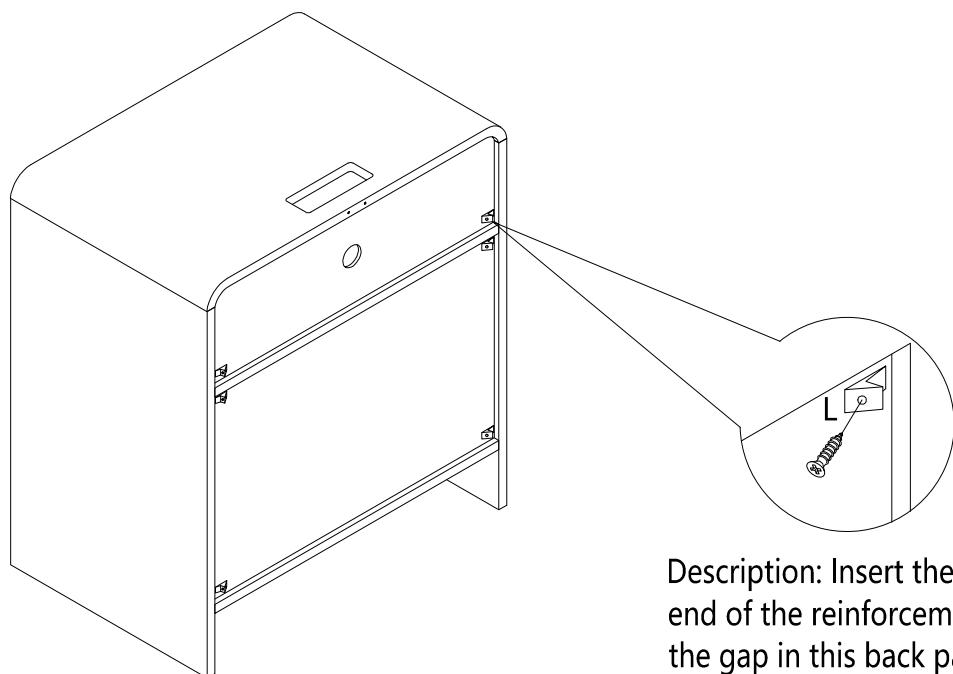

Description: Insert the thinner end of the reinforcement into the gap in this back panel, then tighten the screws. This will make the cabinet more stable.



STEP 13

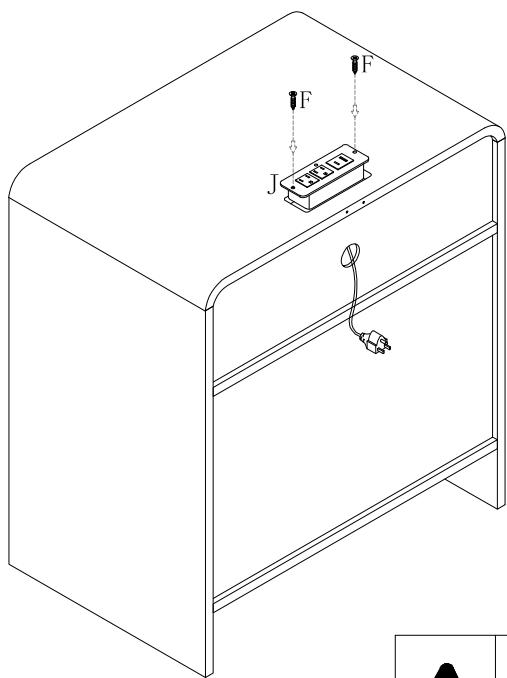

	F×2PCS
	J×1PC



After placing the power strip into the groove, you can directly tighten the screws.

STEP 14

