

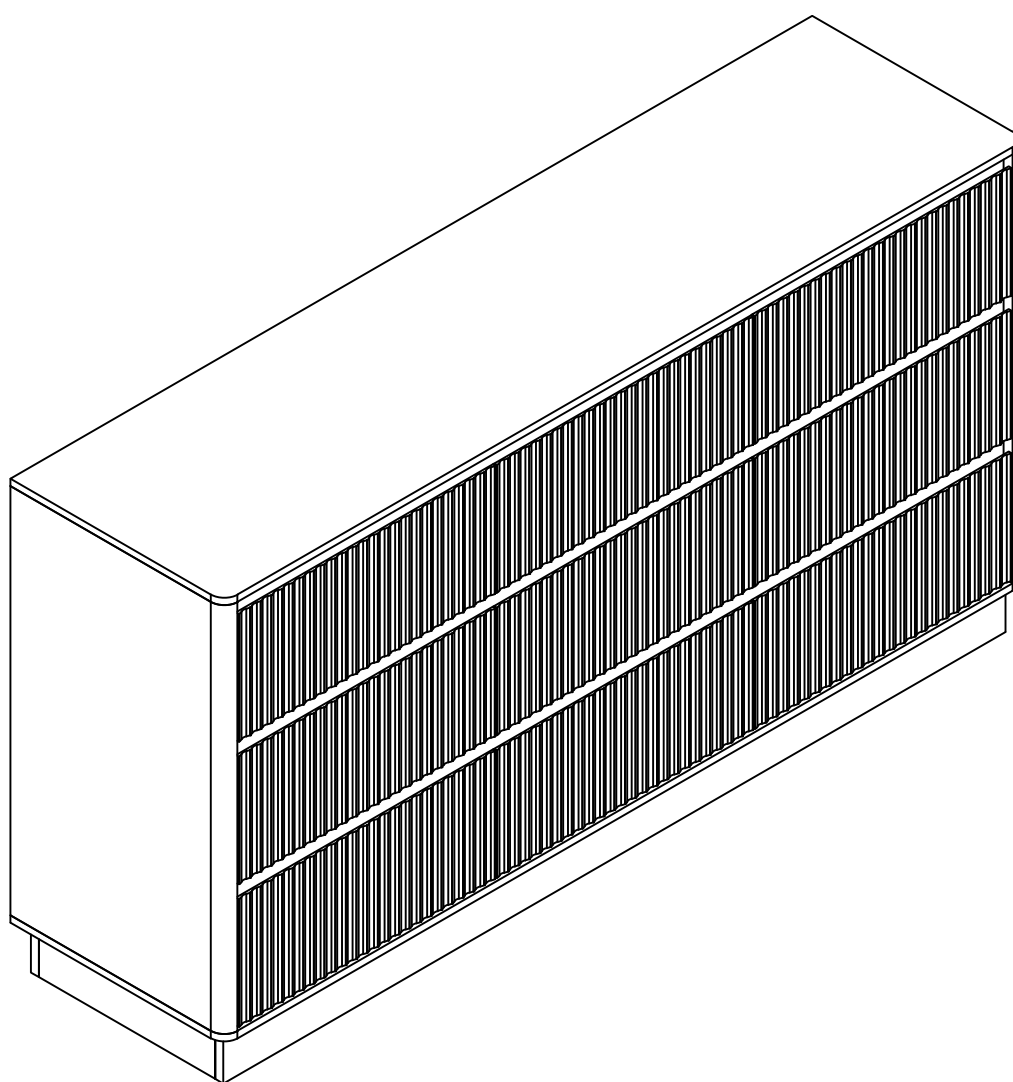
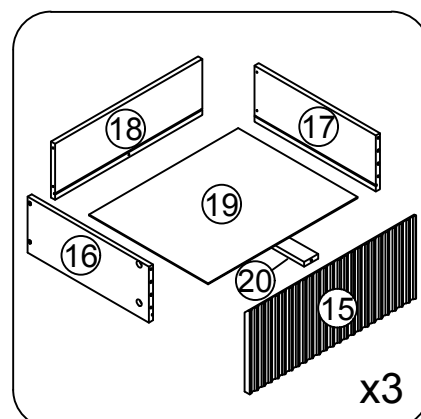
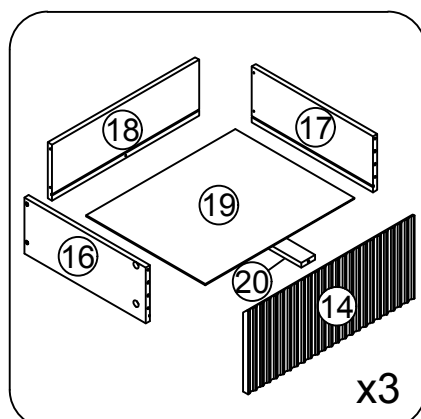


DJYC2524

ASSEMBLY INTRODUCTION

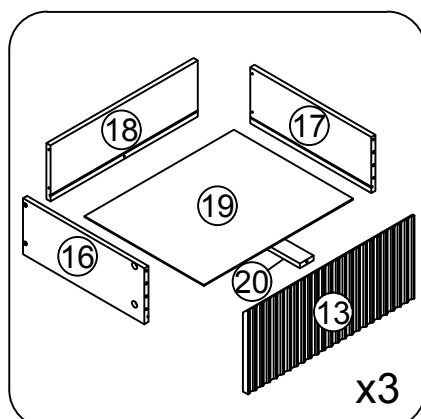

Exploded View

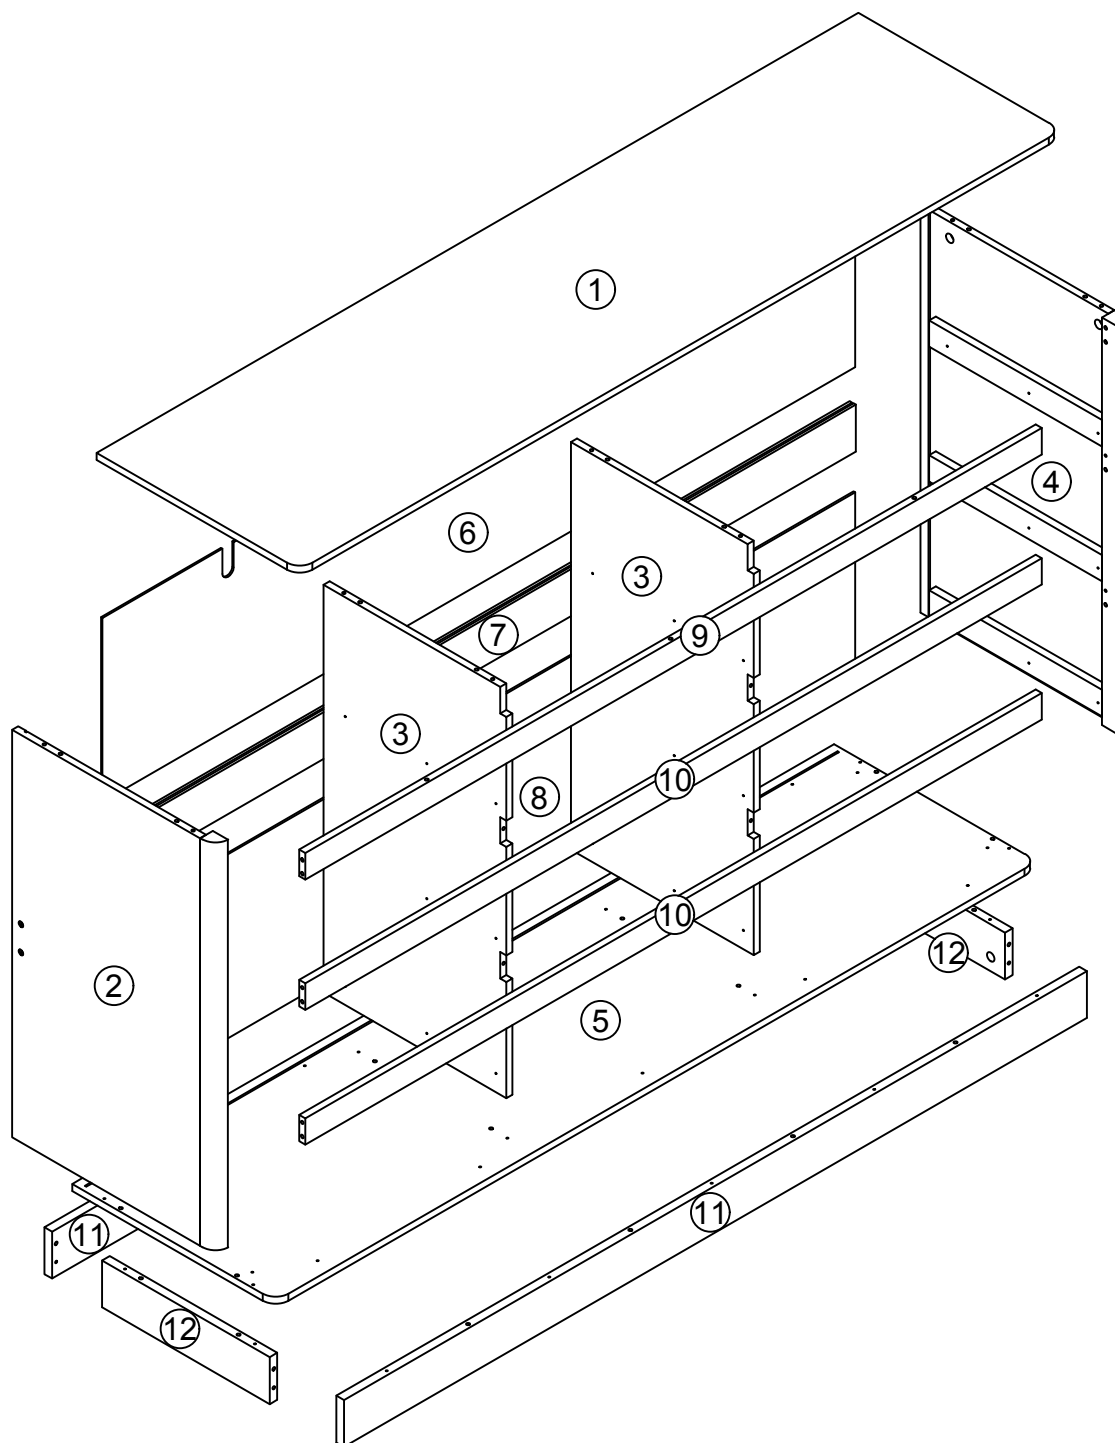

Fitting



A x 65
M6 x 35 mm



B x 65
φ15 x 10 mm



C x 79
φ6 x 30 mm




D x 61
φ4 x 35 mm



E x 108
φ3.5 x 12 mm



F x 14
M4 x 30 mm



G x 12
φ3 x 16 mm



H x 2
φ6 x 30 mm



I x 2
φ4 x 12 mm




J x 4
φ20 mm




CL x 9
350 mm



CR x 9
350 mm





DL x 9
350 mm



DR x 9
350 mm

Step 1

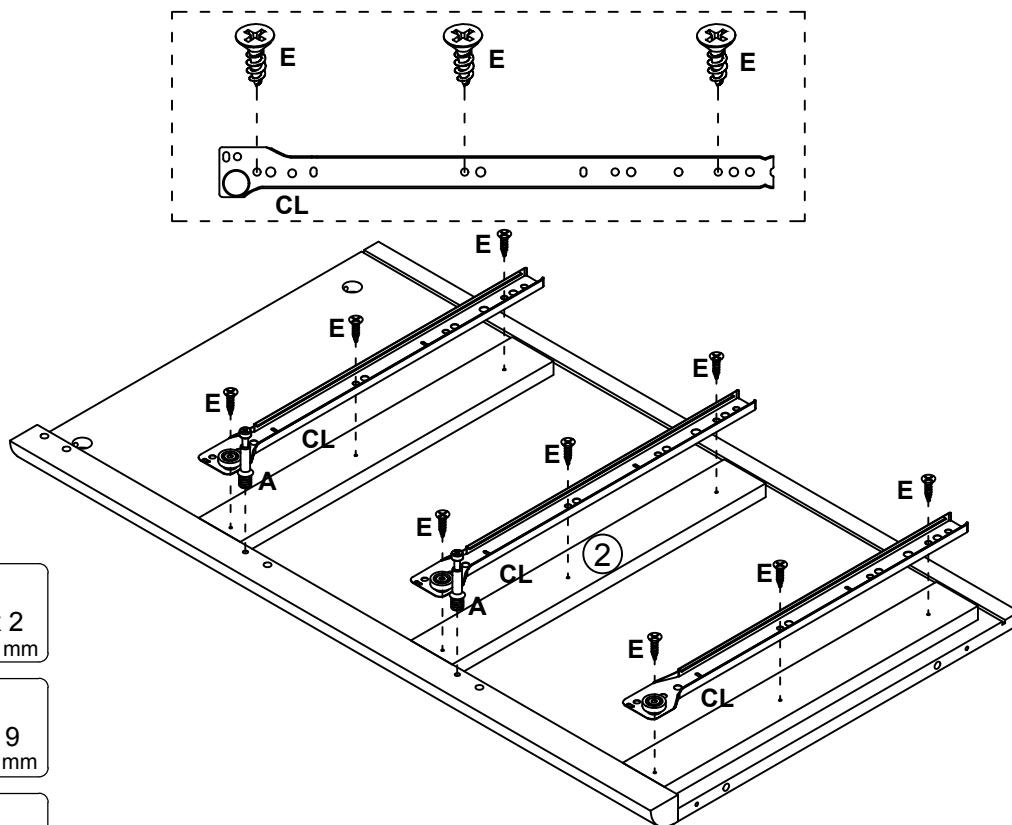

A x 2
M6 x 35 mm





E x 9
φ3.5 x 12 mm



CL x 3
350 mm

Step 2

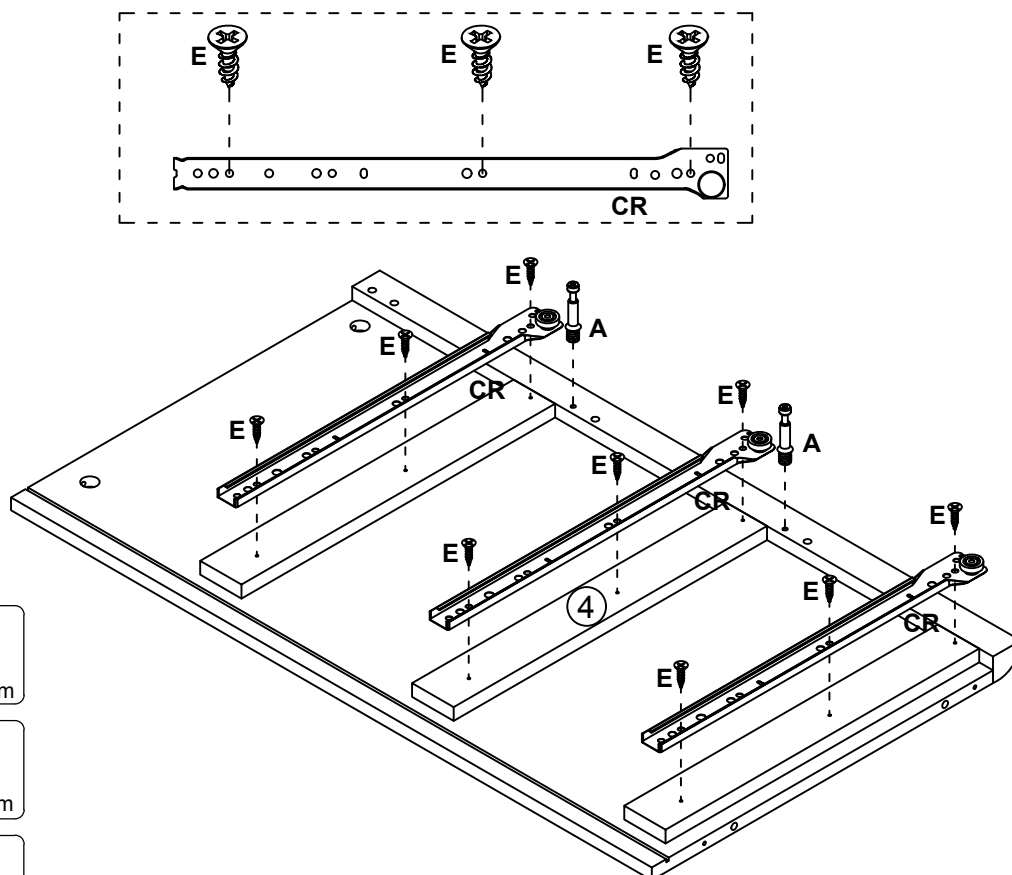

A x 2
M6 x 35 mm





E x 9
φ3.5 x 12 mm





CR x 3
350 mm


Step 3

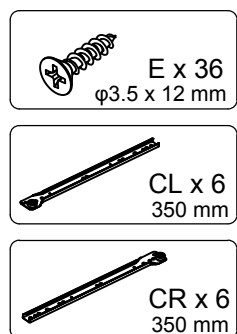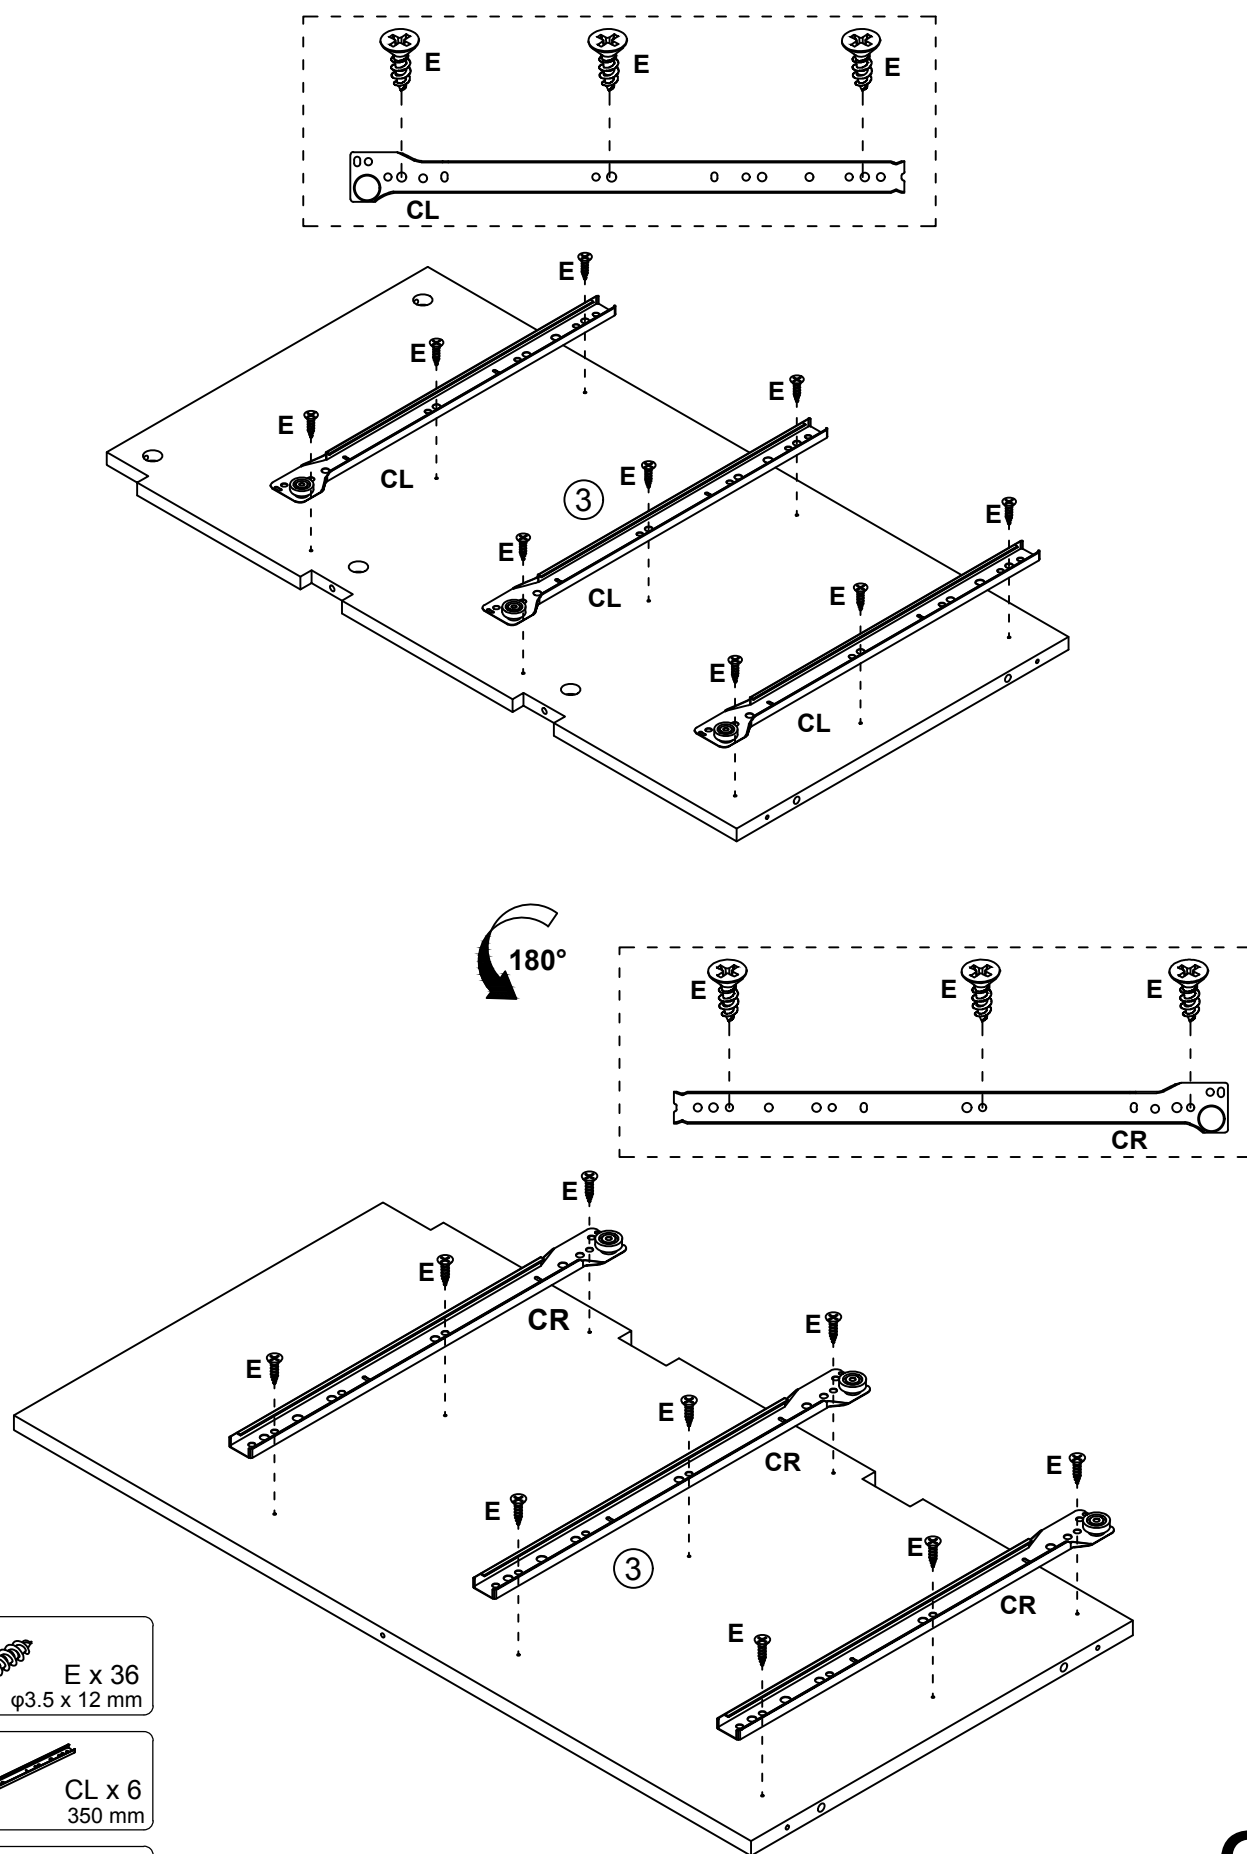



Step 4

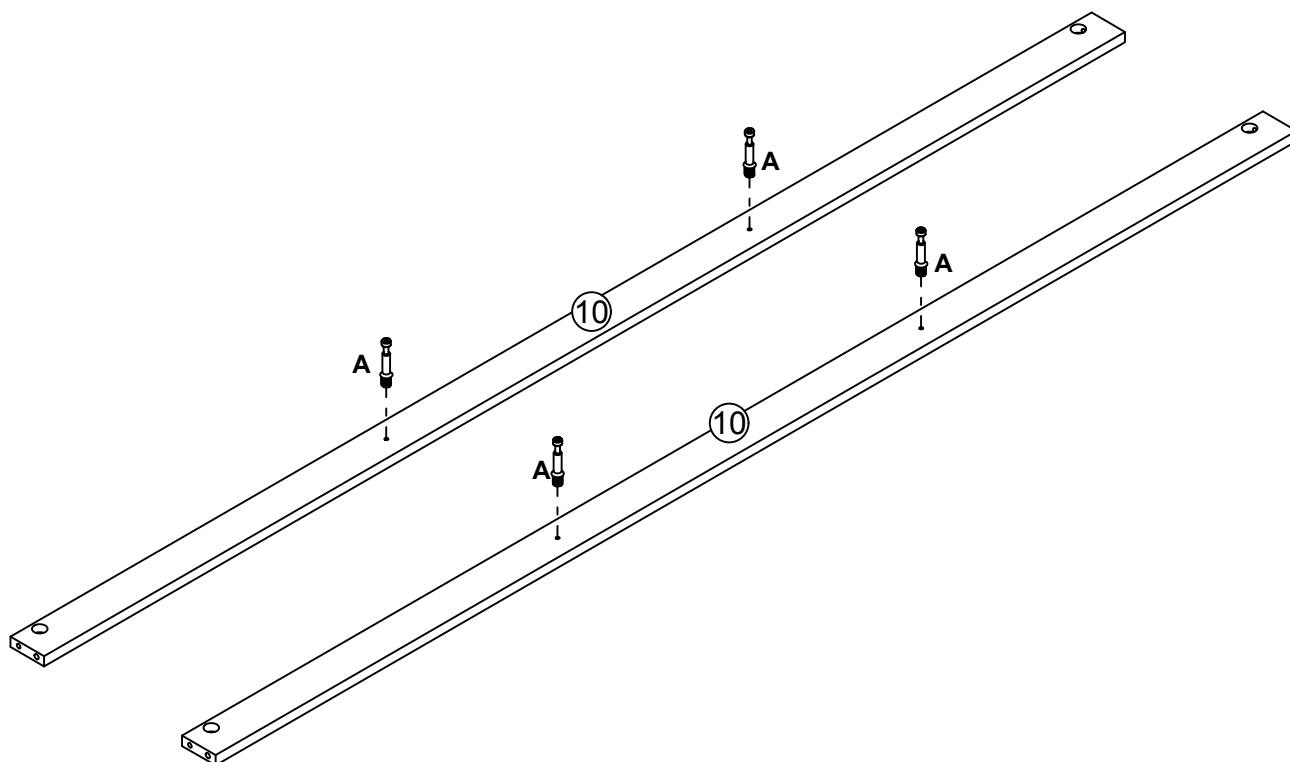




Step 5

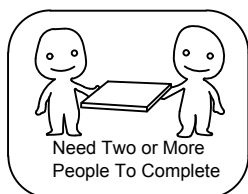





Please pay attention
to the direction
during installation.

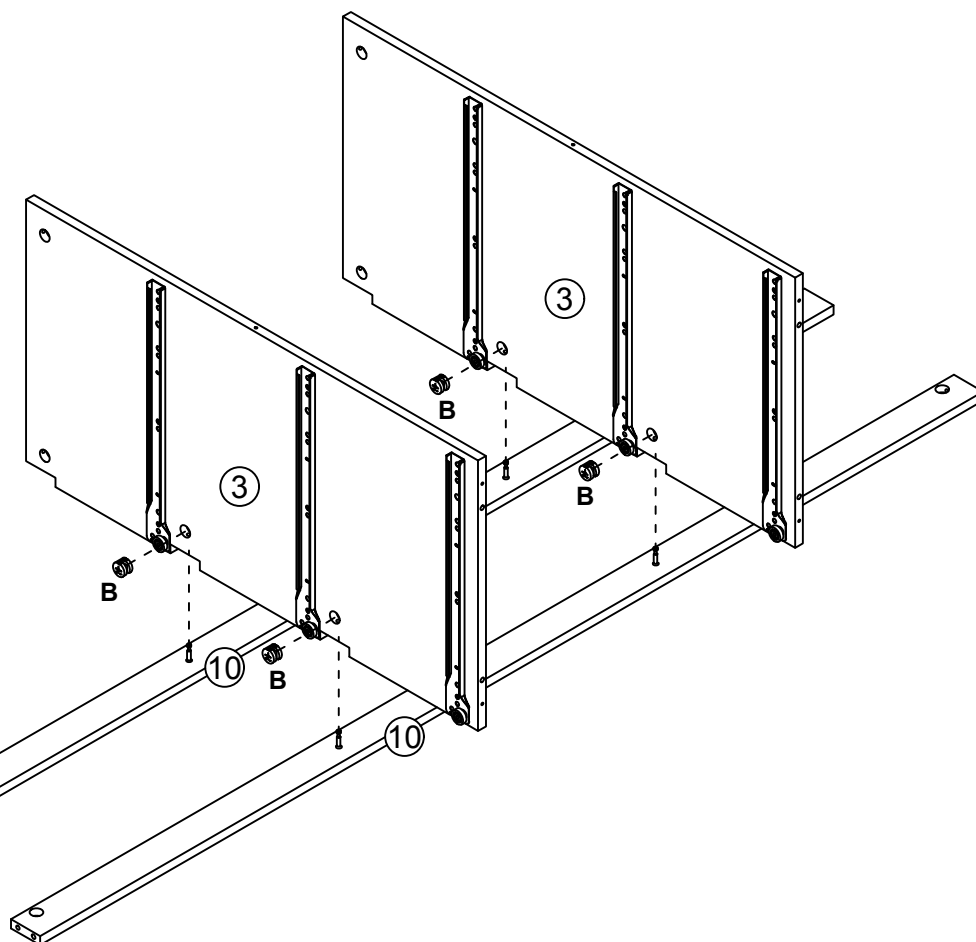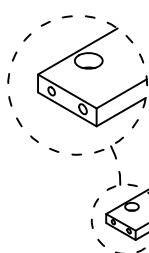



Step 6

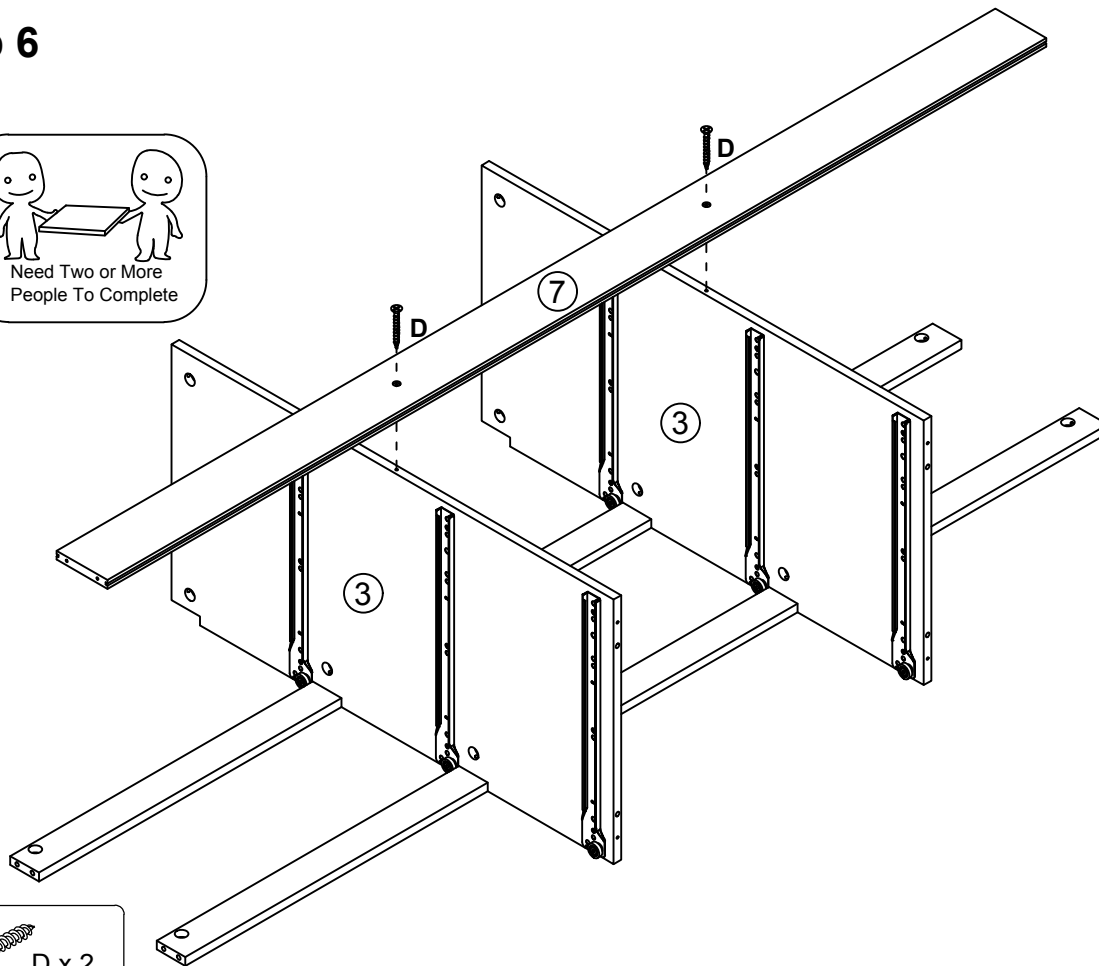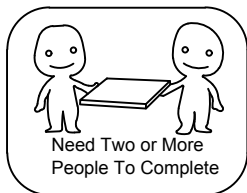

Step 7

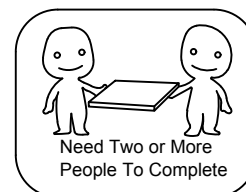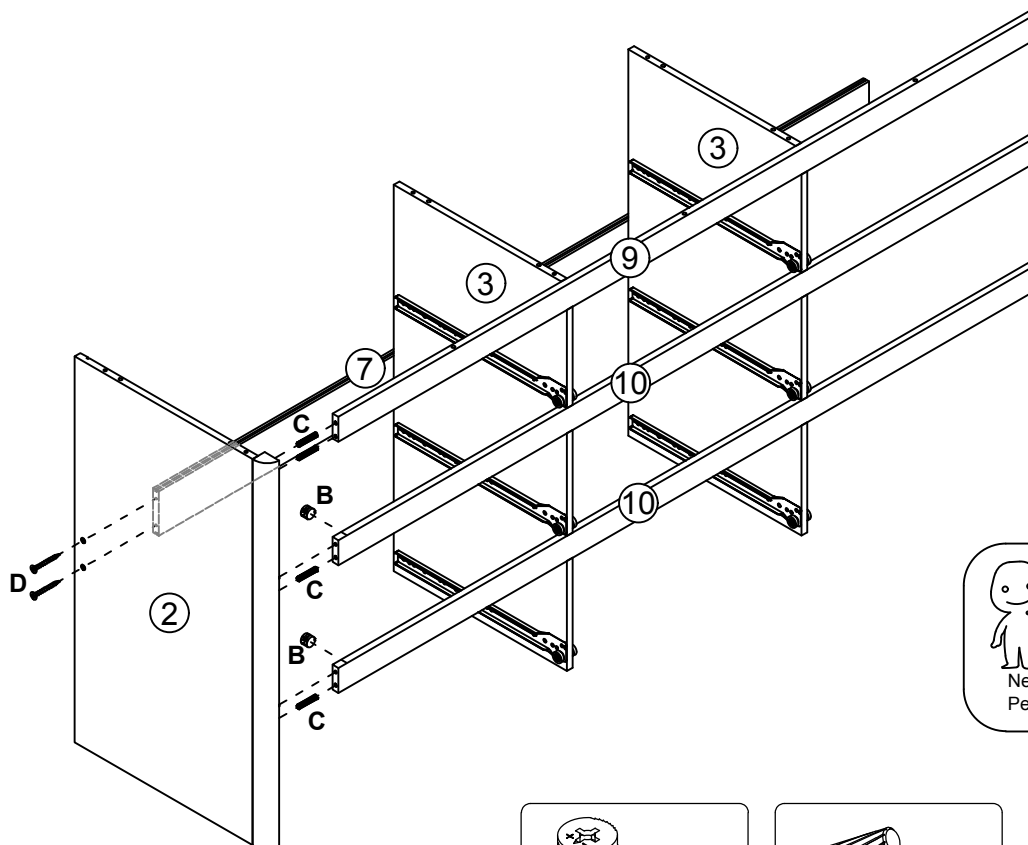


Step 8

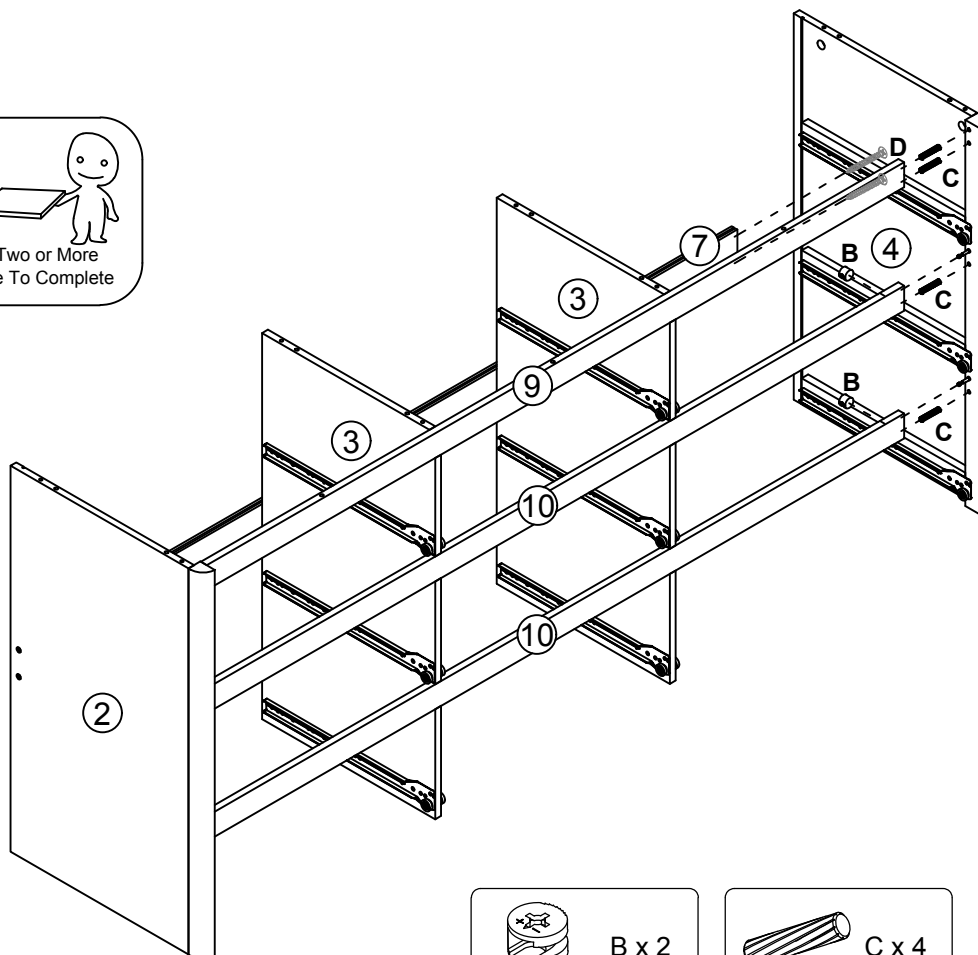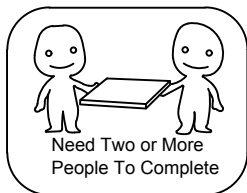

B x 2
15 x 10 mm




C x 4
6 x 30 mm





D x 2
4 x 35 mm

Step 9


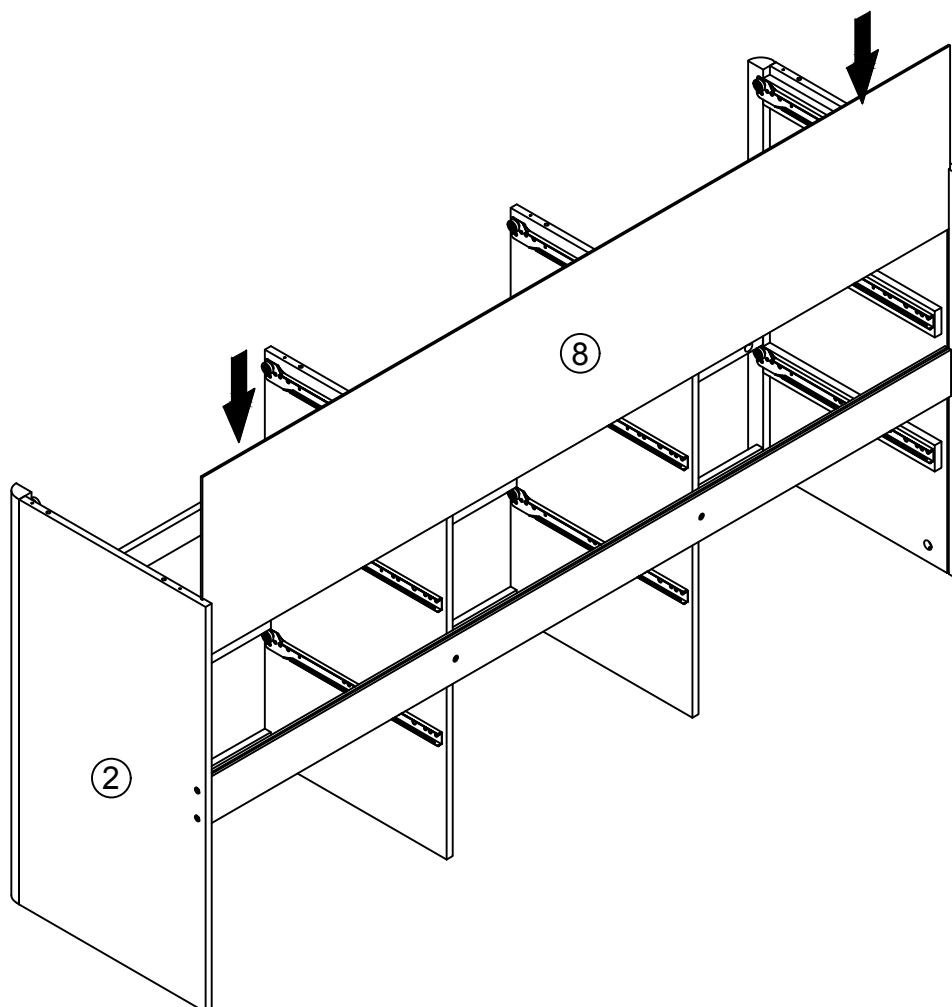


Step 10


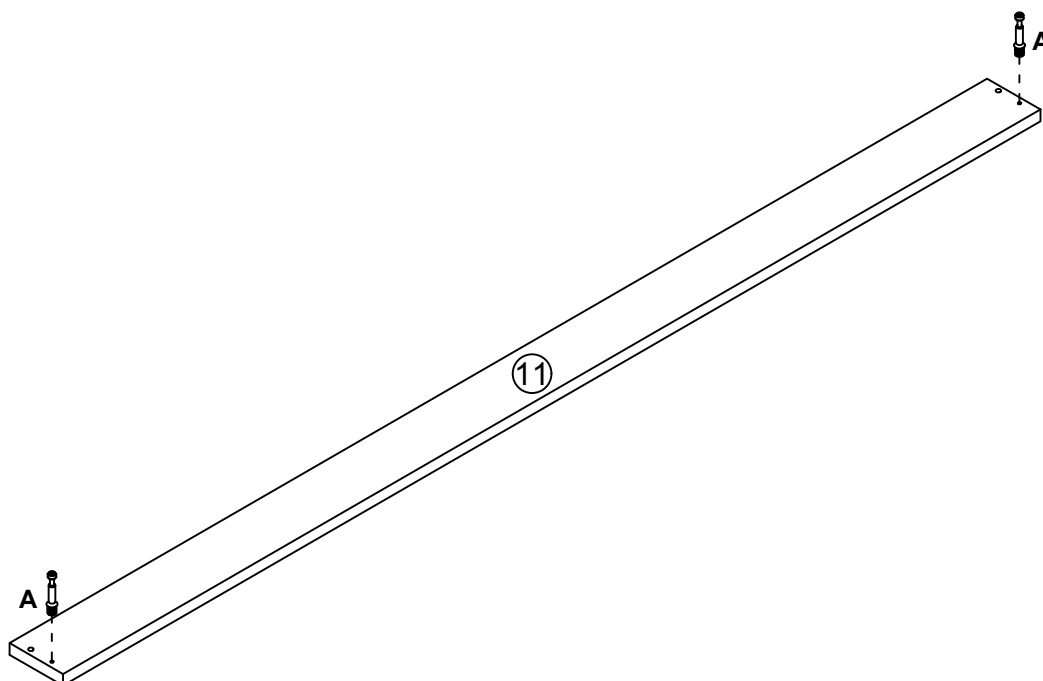


x2

Step 11

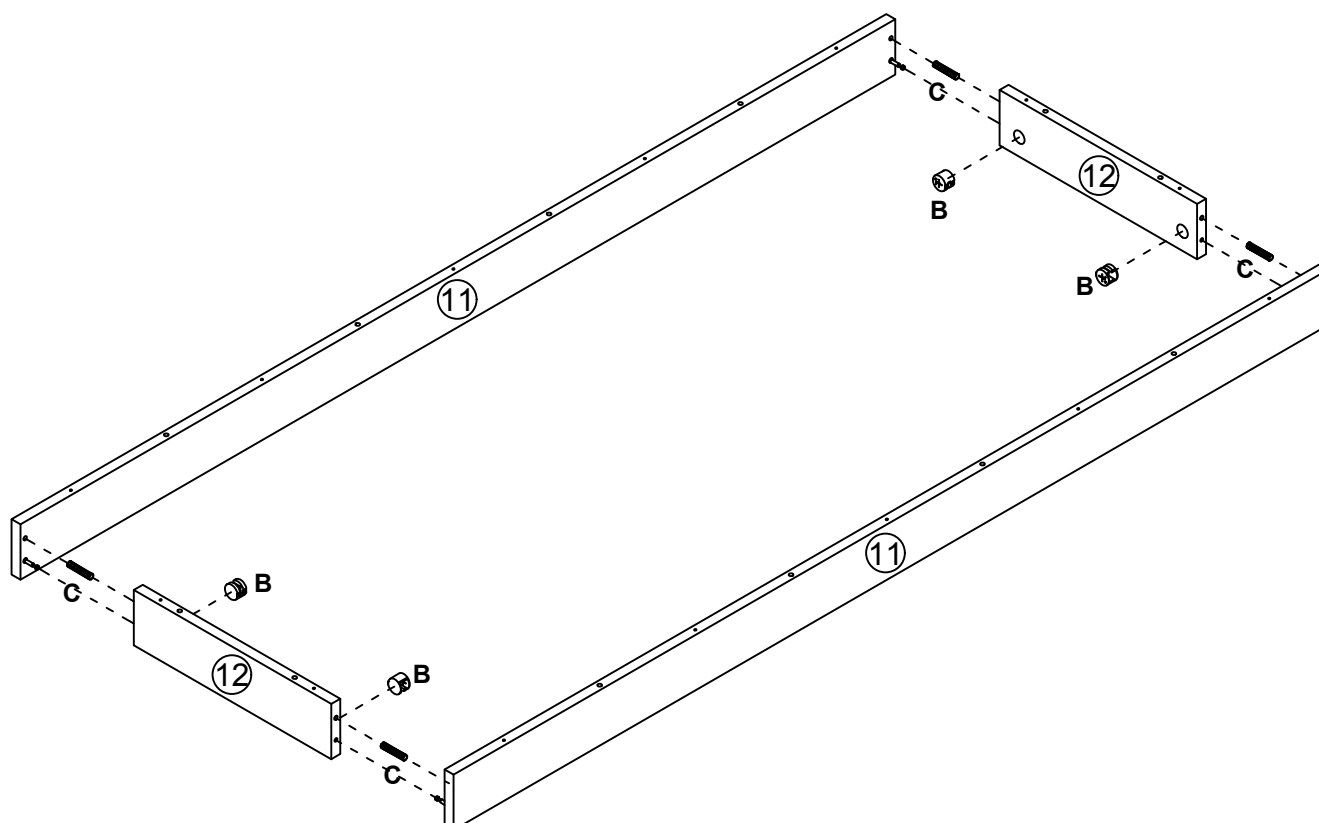

Step 12

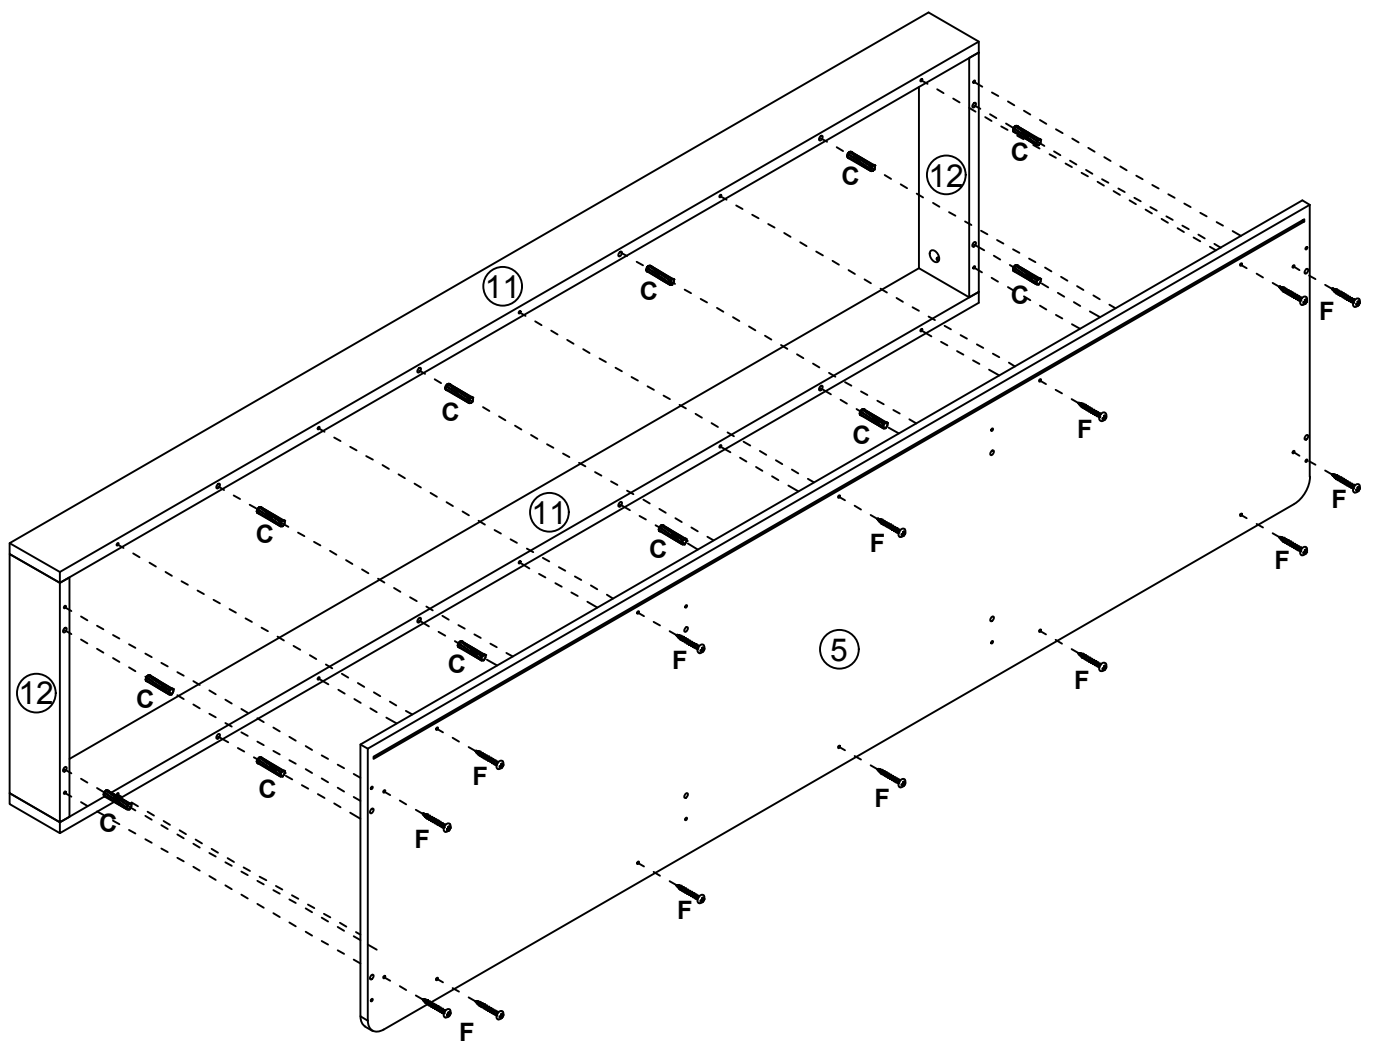
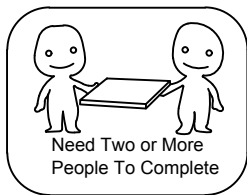


C x 12
6 x 30 mm




F x 14
M4 x 30 mm

Step 13

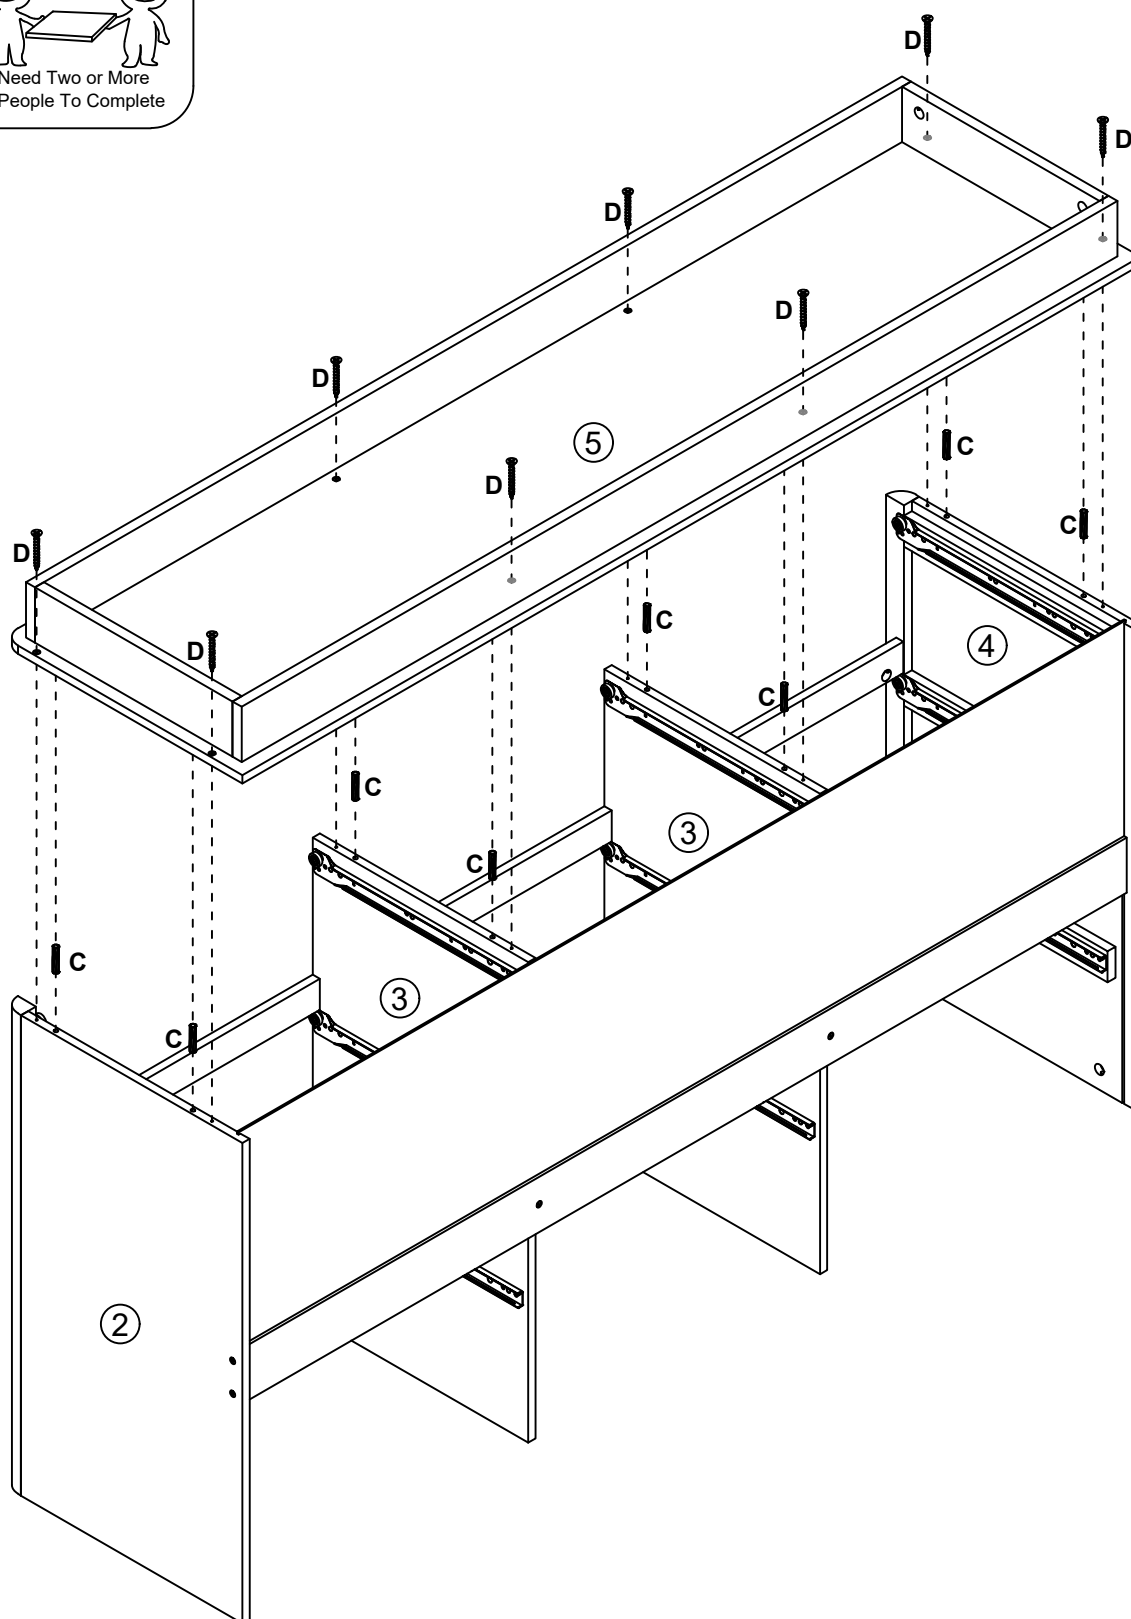
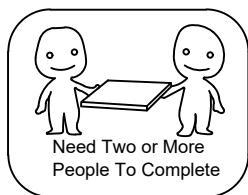


C x 8
φ6 x 30 mm






D x 8
φ4 x 35 mm



Step 14

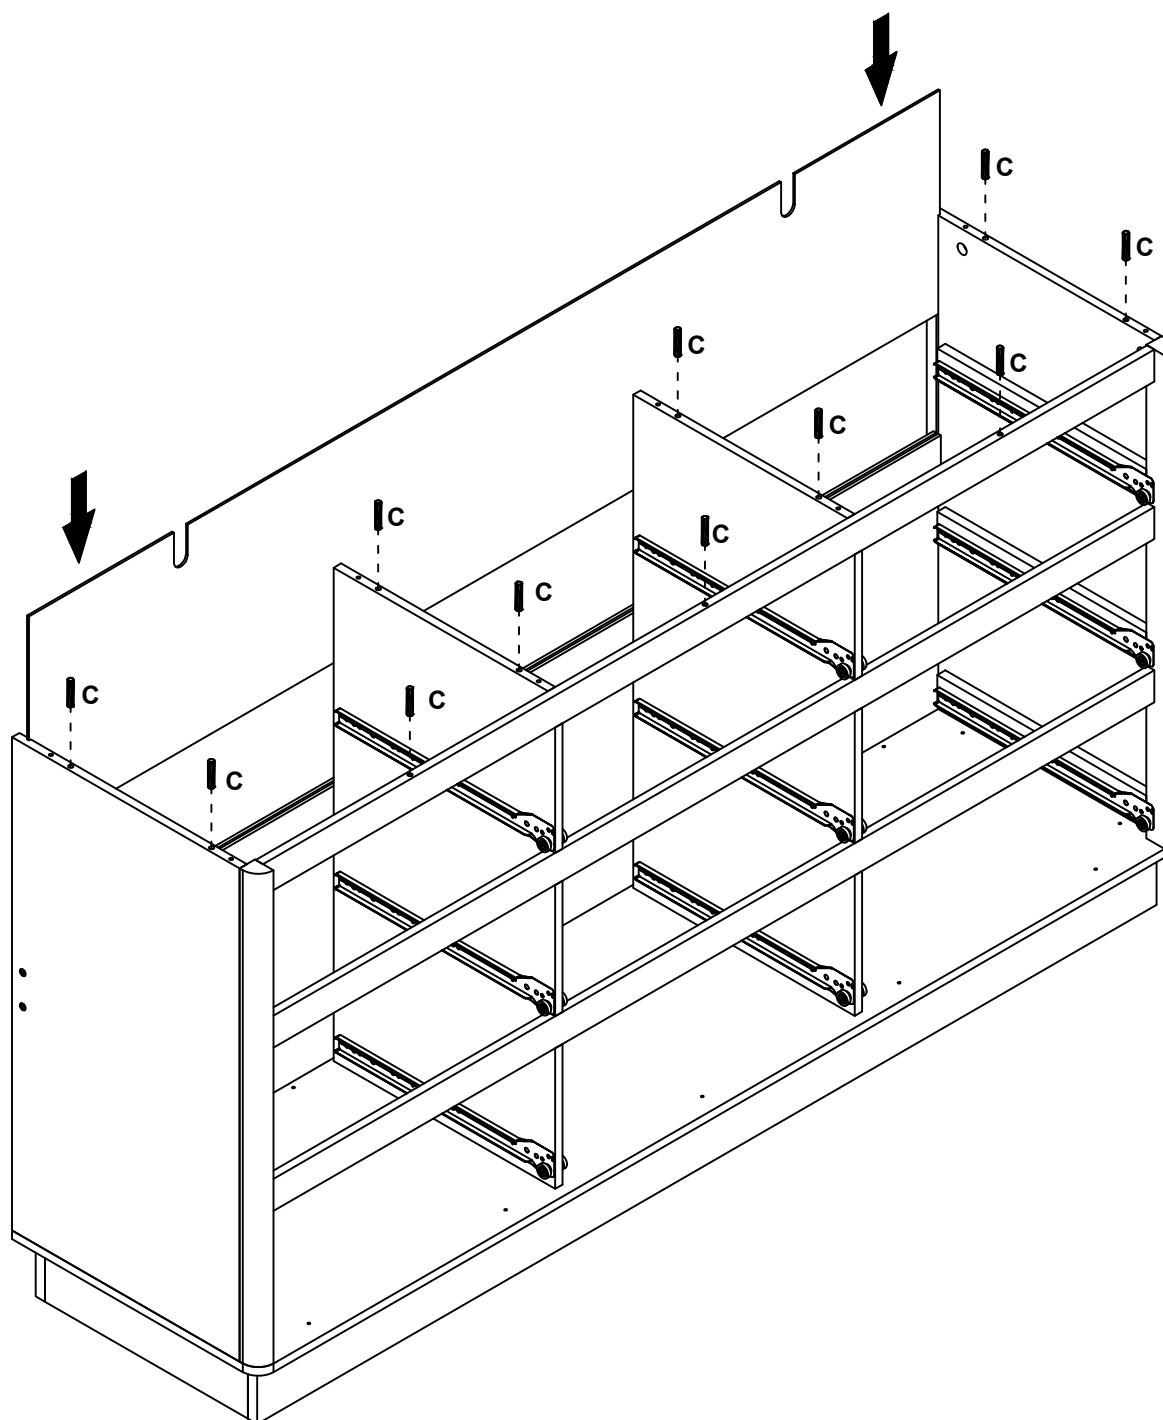


Step 15

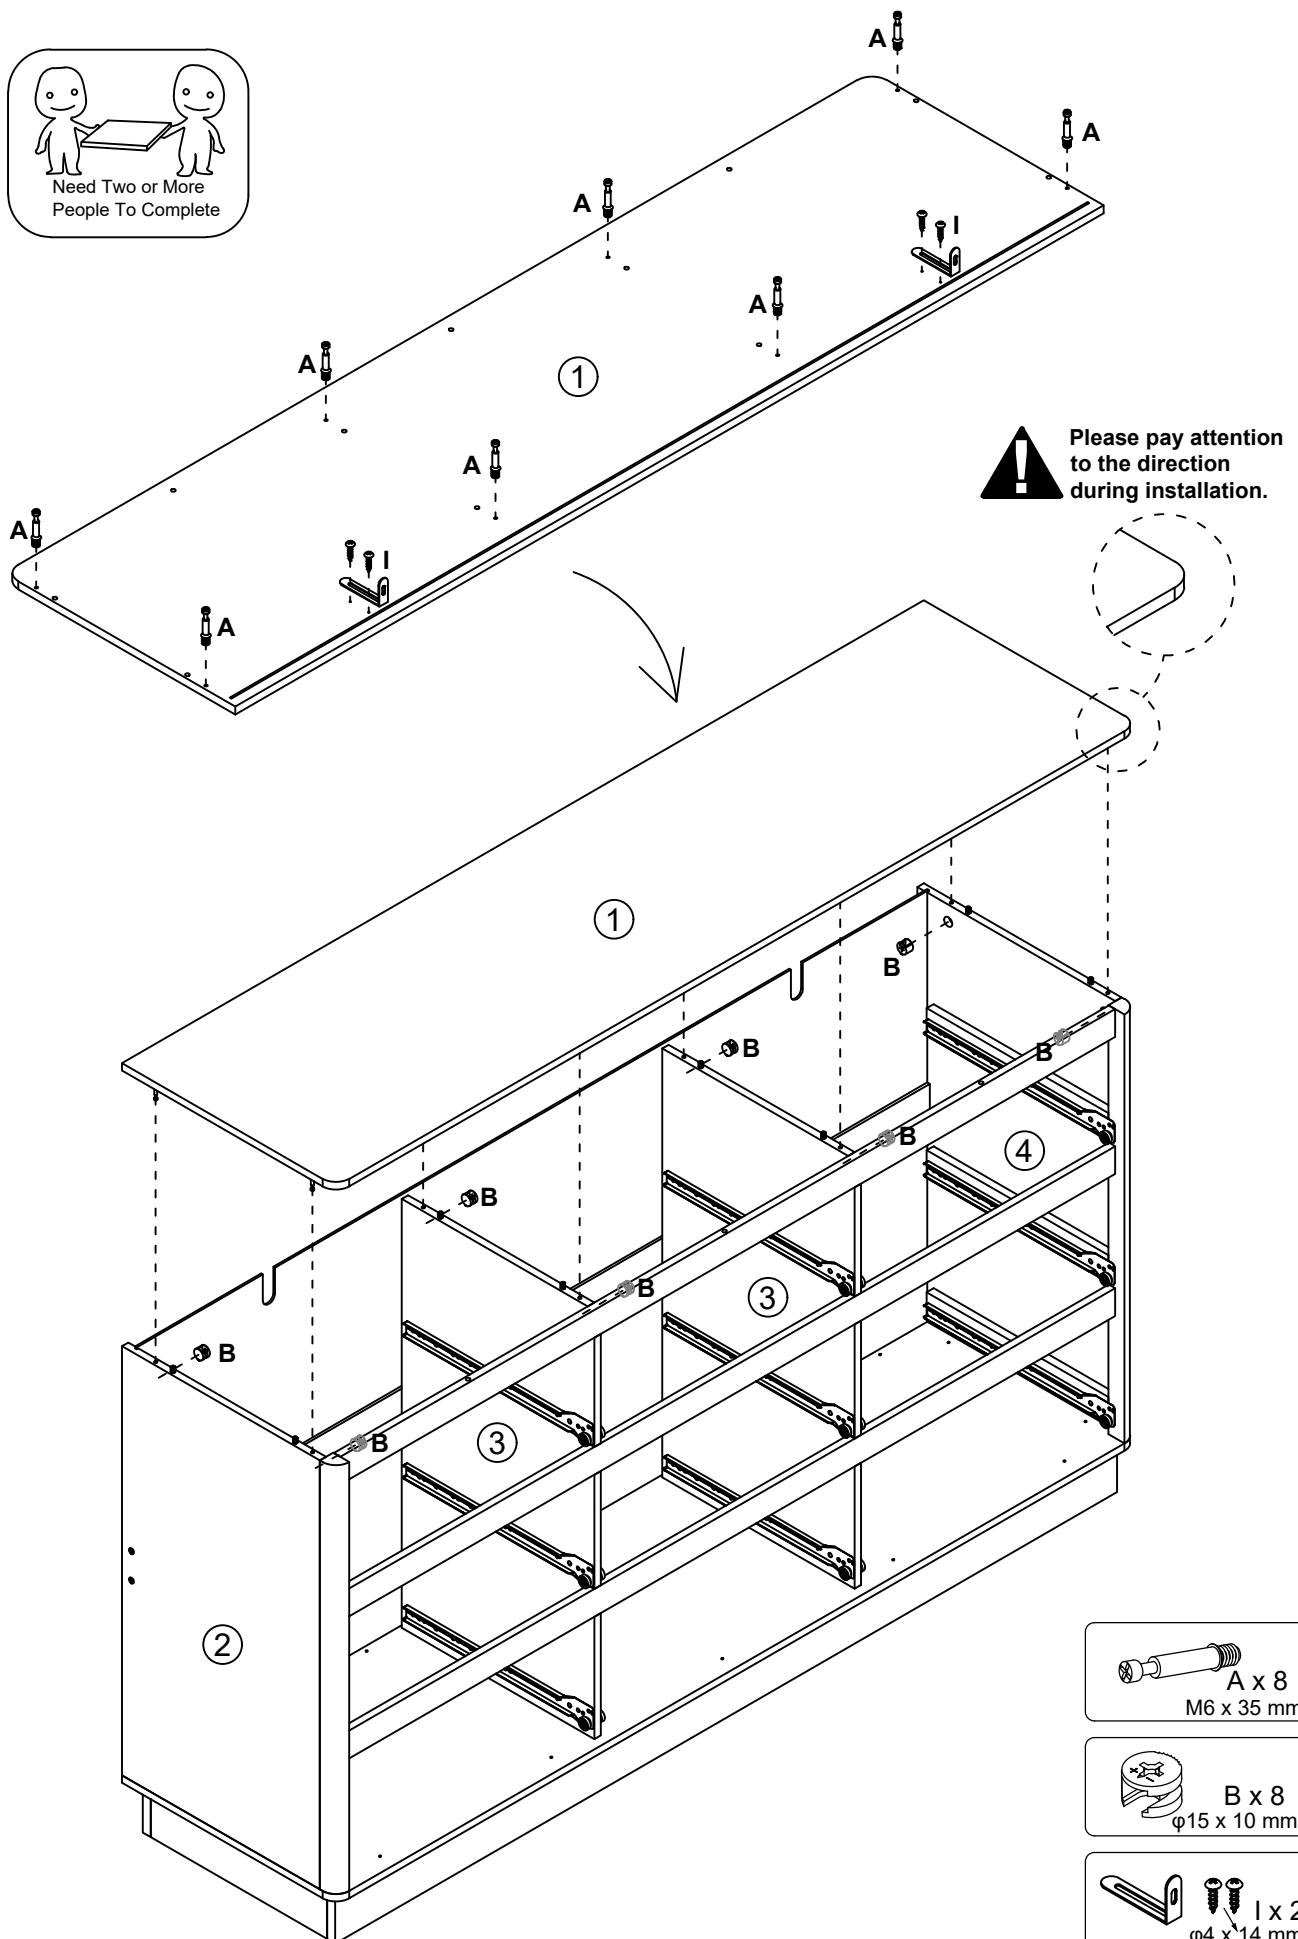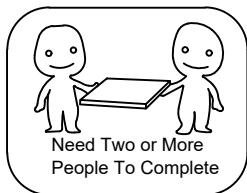


Step 16

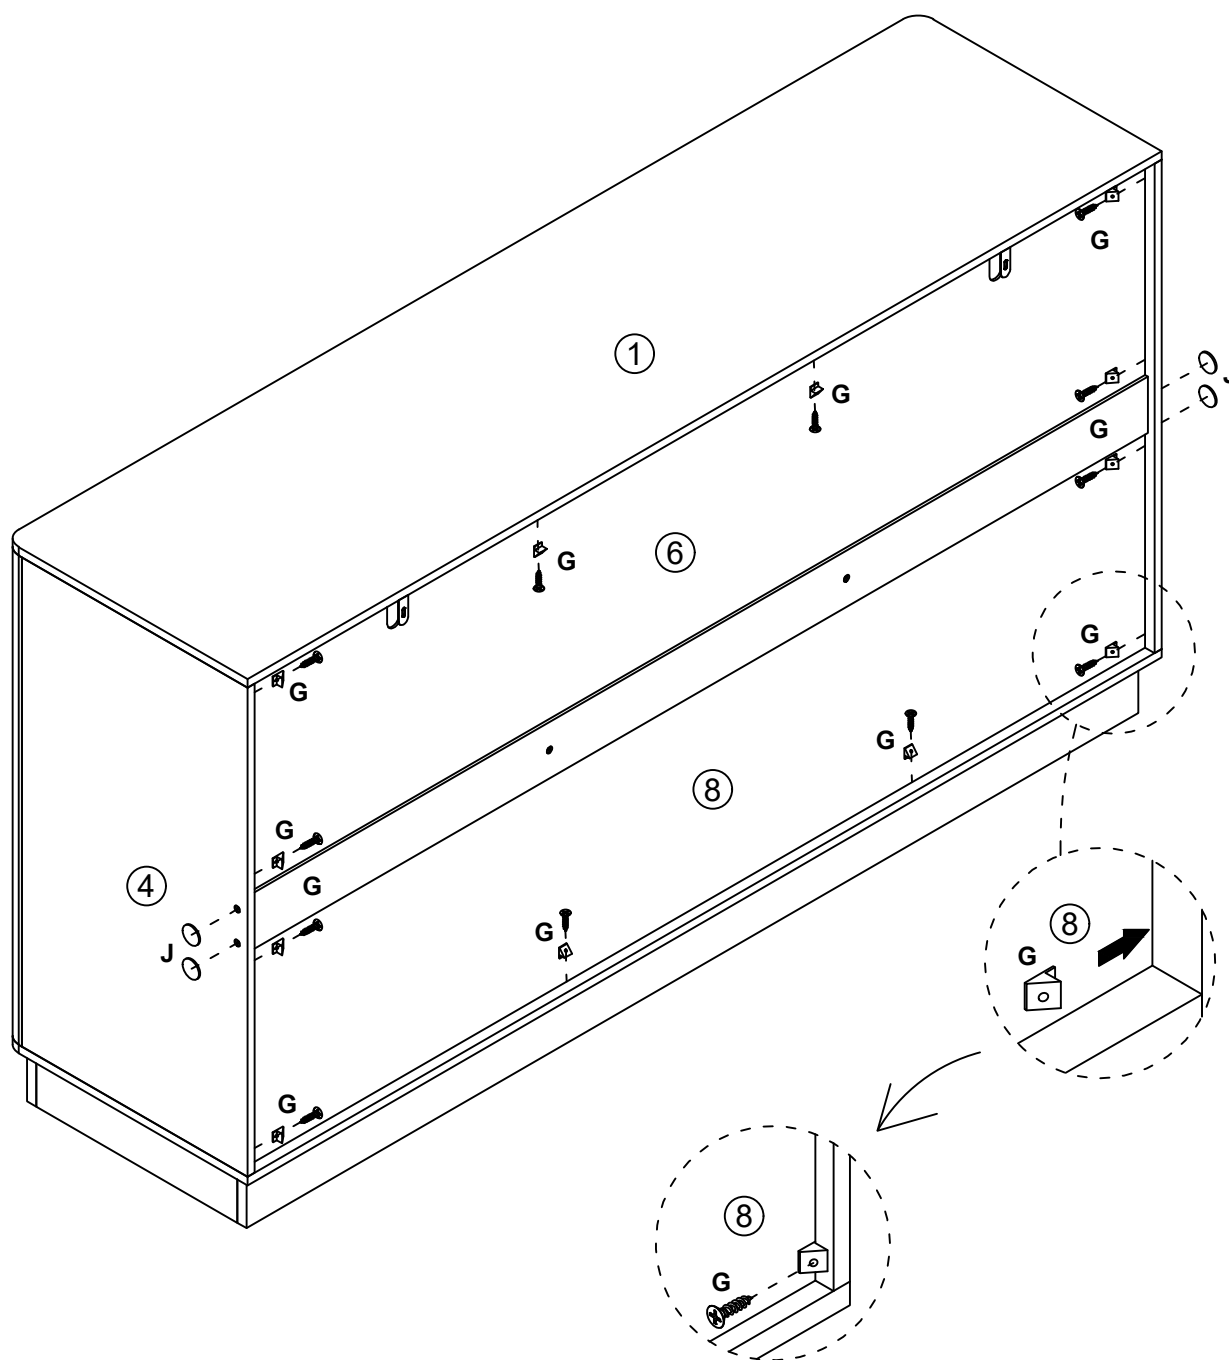

Step 17

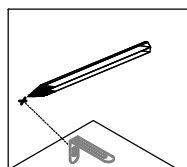


(1)x2

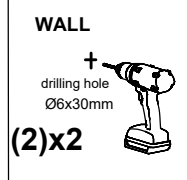


(2)x2

First fix the anti-rewind screw in the reserved hole of the product.

Then use a tape drill to make holes in the wall that are suitable for the product screws.

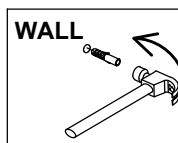


(3)x2

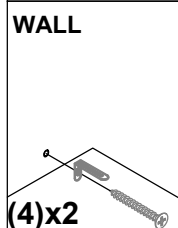


(4)x2

Then, put the expansion bolt into the hole

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.


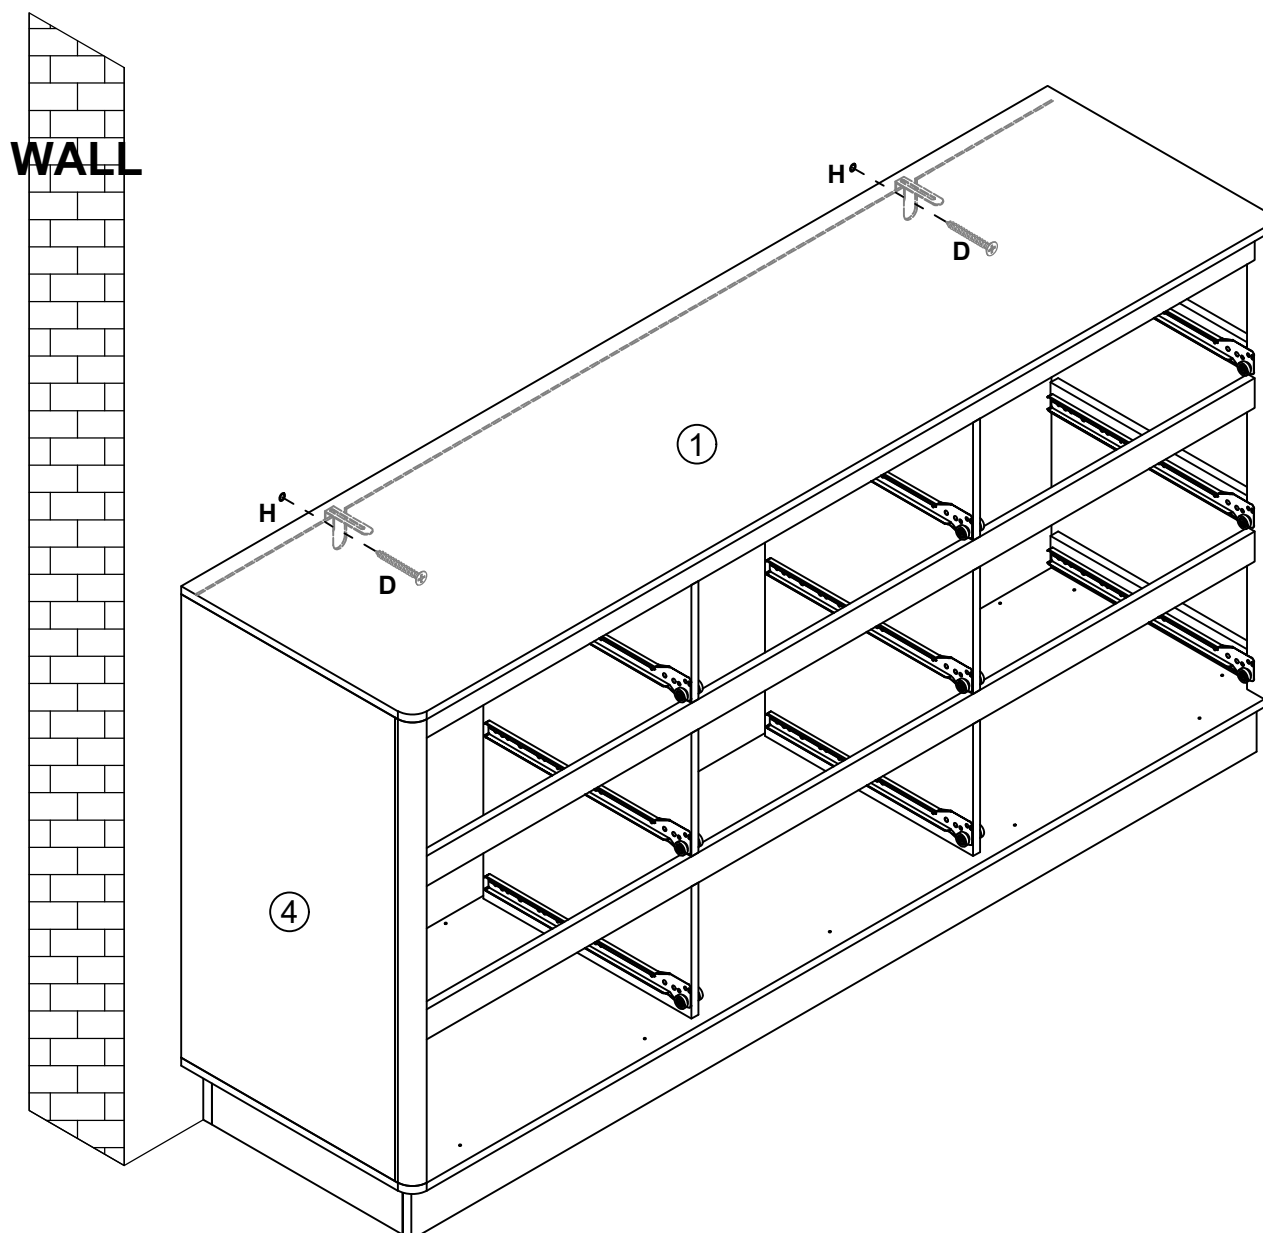


Step 18

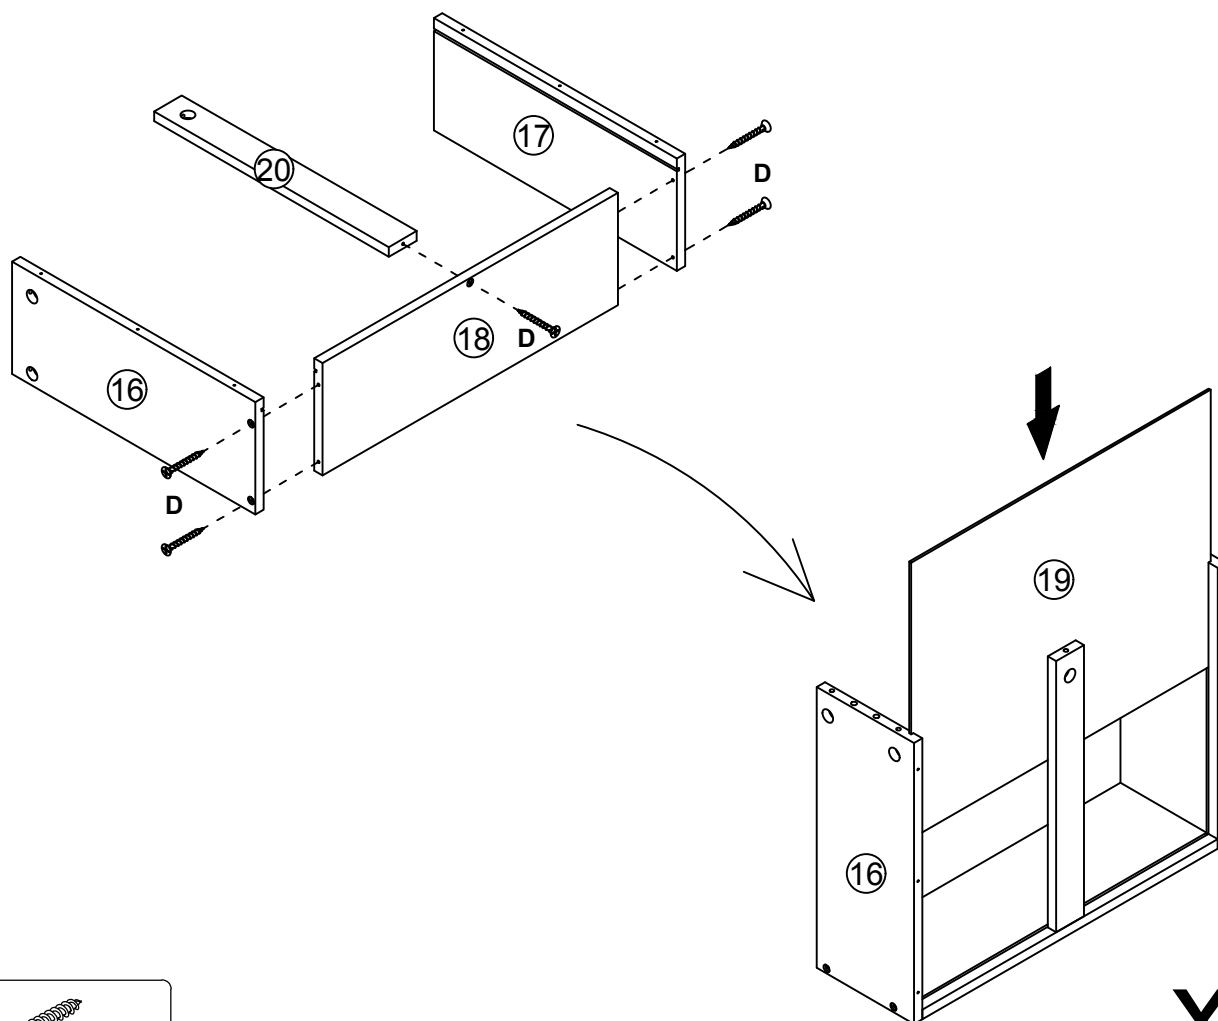




x9

Step 19

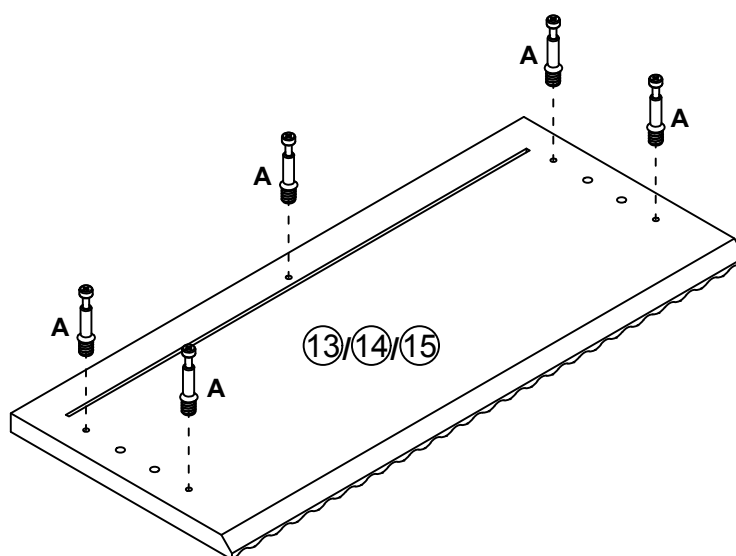





x3

Step 20

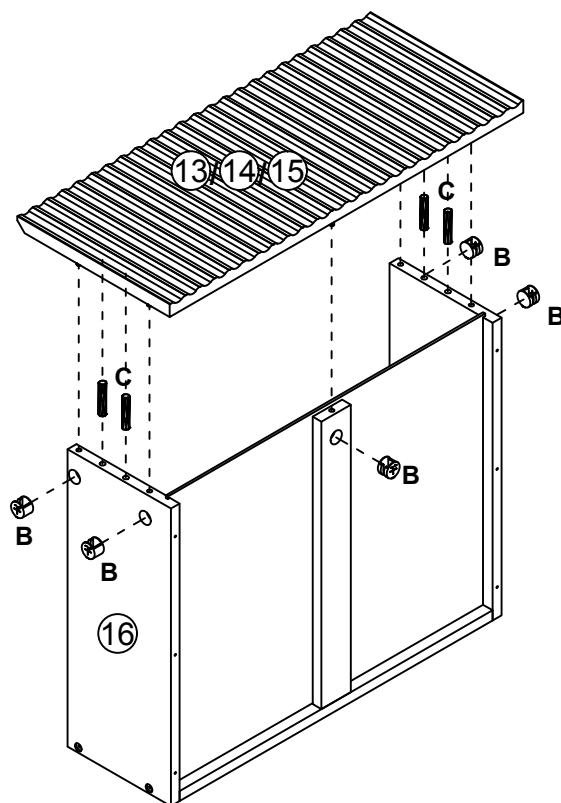

x3

Step 21

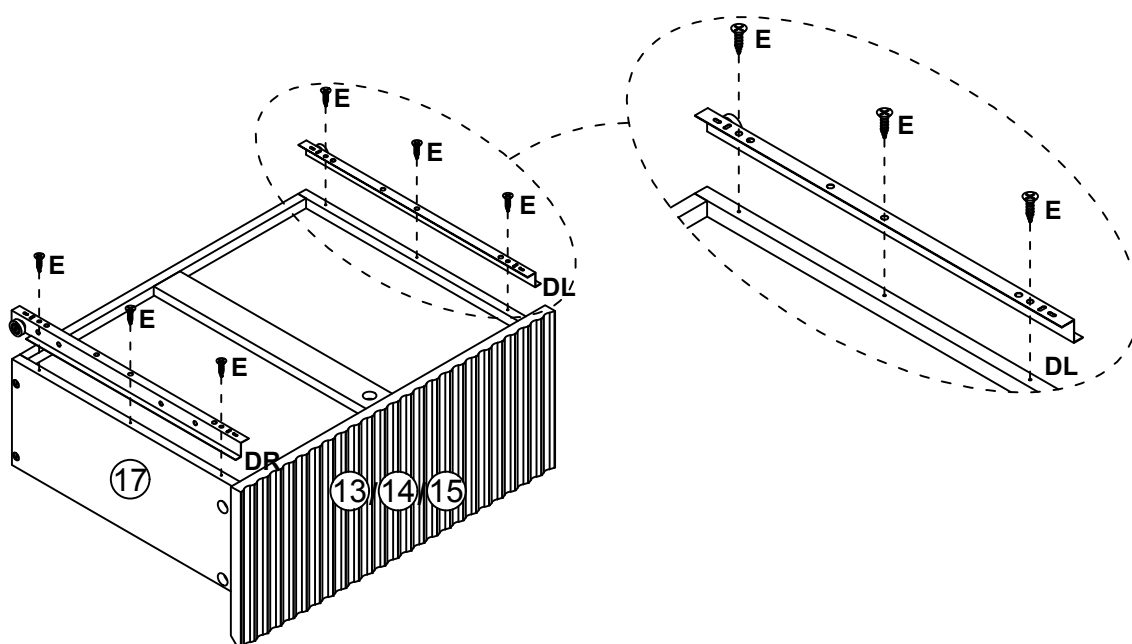


x3

Step 22

Attention: The drawers are divided into left drawer, middle drawer, and right drawer.



The picture shows the left drawer installed in the cabinet.

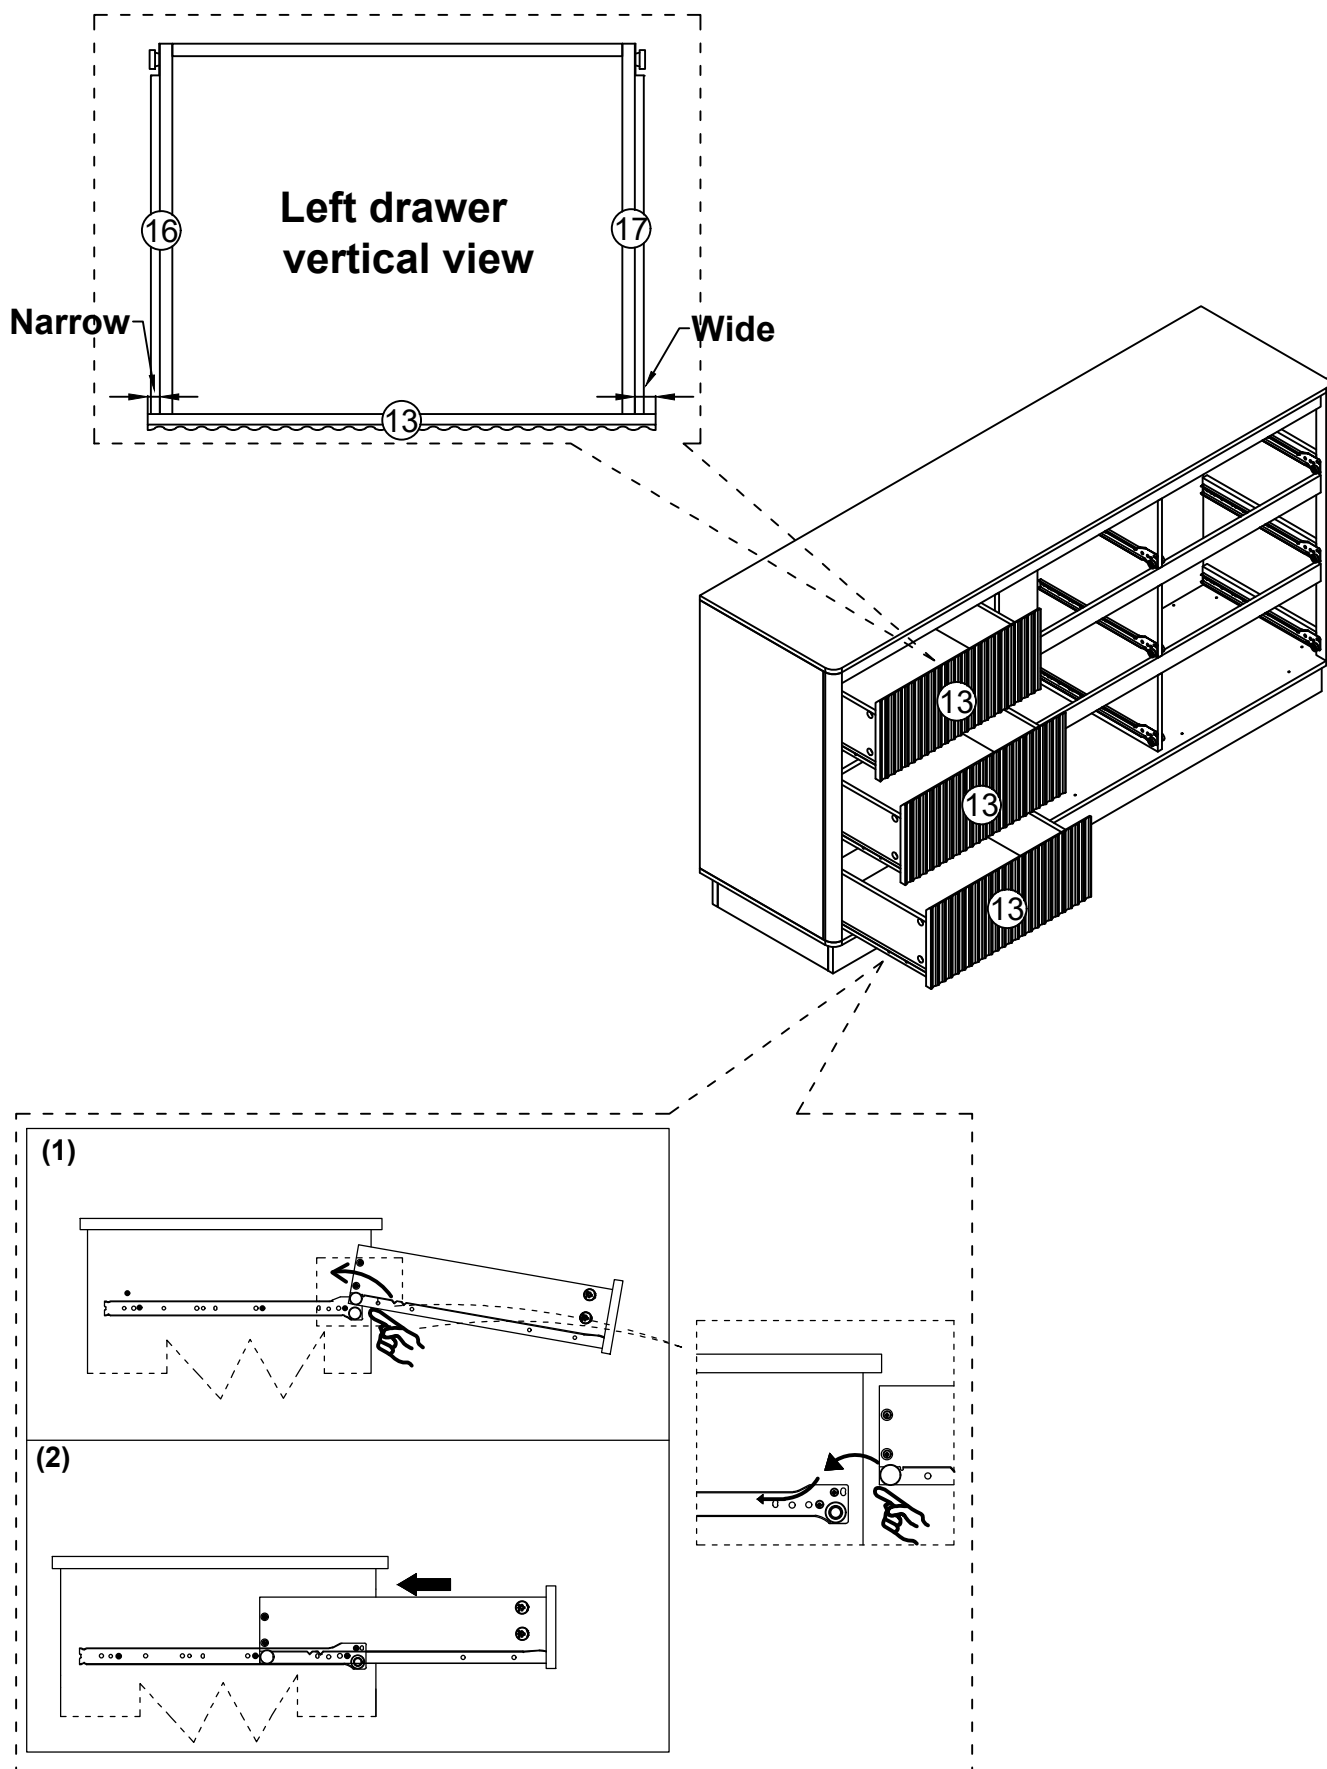


Step 23


Attention: The drawers are divided into left drawer, middle drawer, and right drawer.




The picture shows the middle drawer installed in the cabinet.

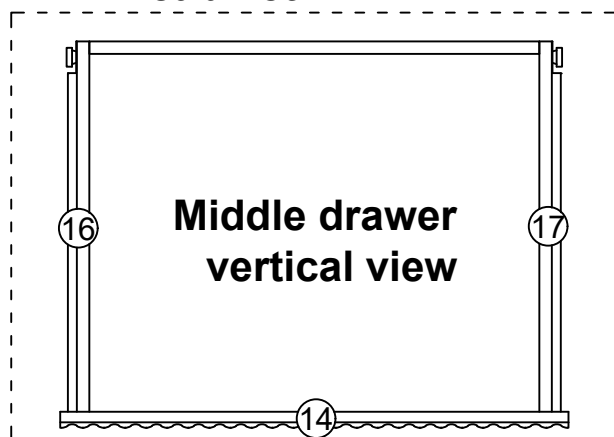



The distance between the left and right is the same.

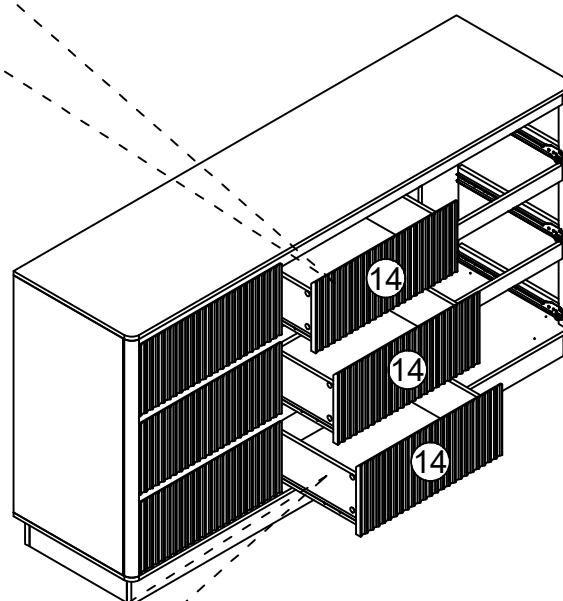

(1)

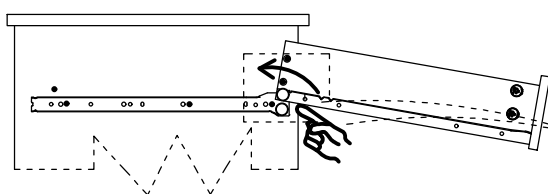

(2)

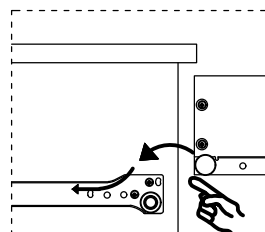
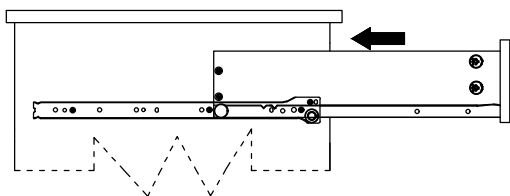


Step 24


Attention: The drawers are divided into left drawer, middle drawer, and right drawer.





The picture shows the right drawer installed in the cabinet.

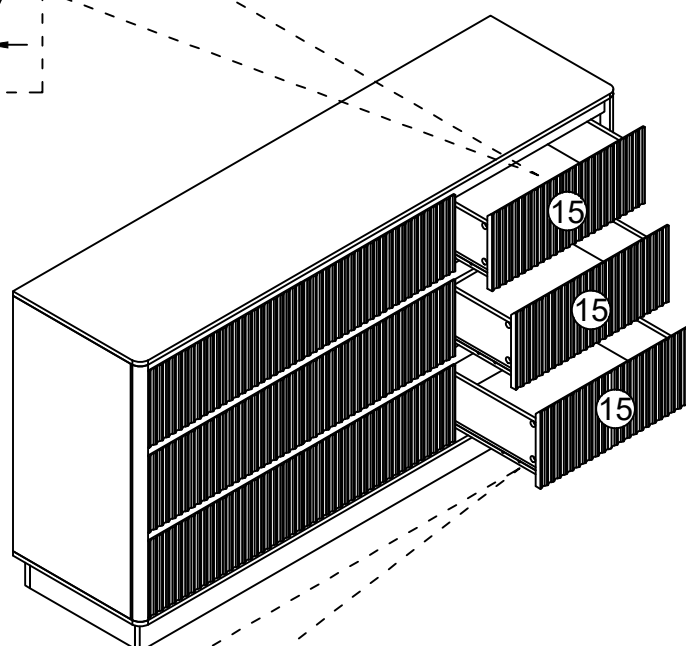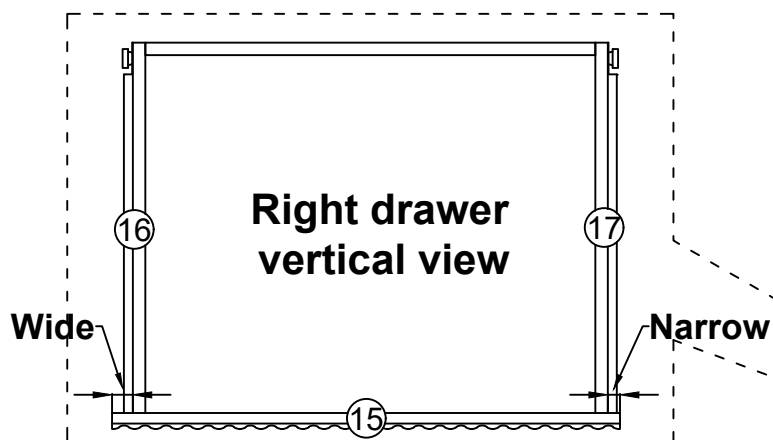

(1)

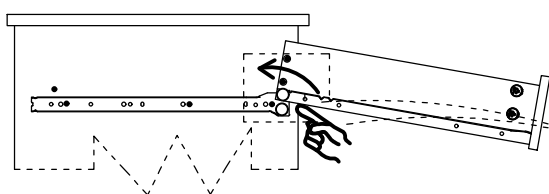

(2)

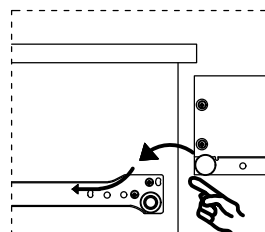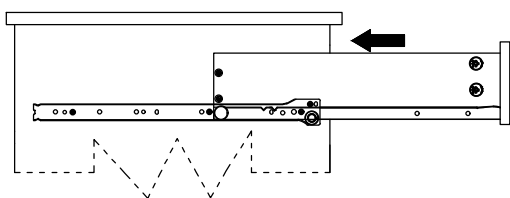

Step 25

