

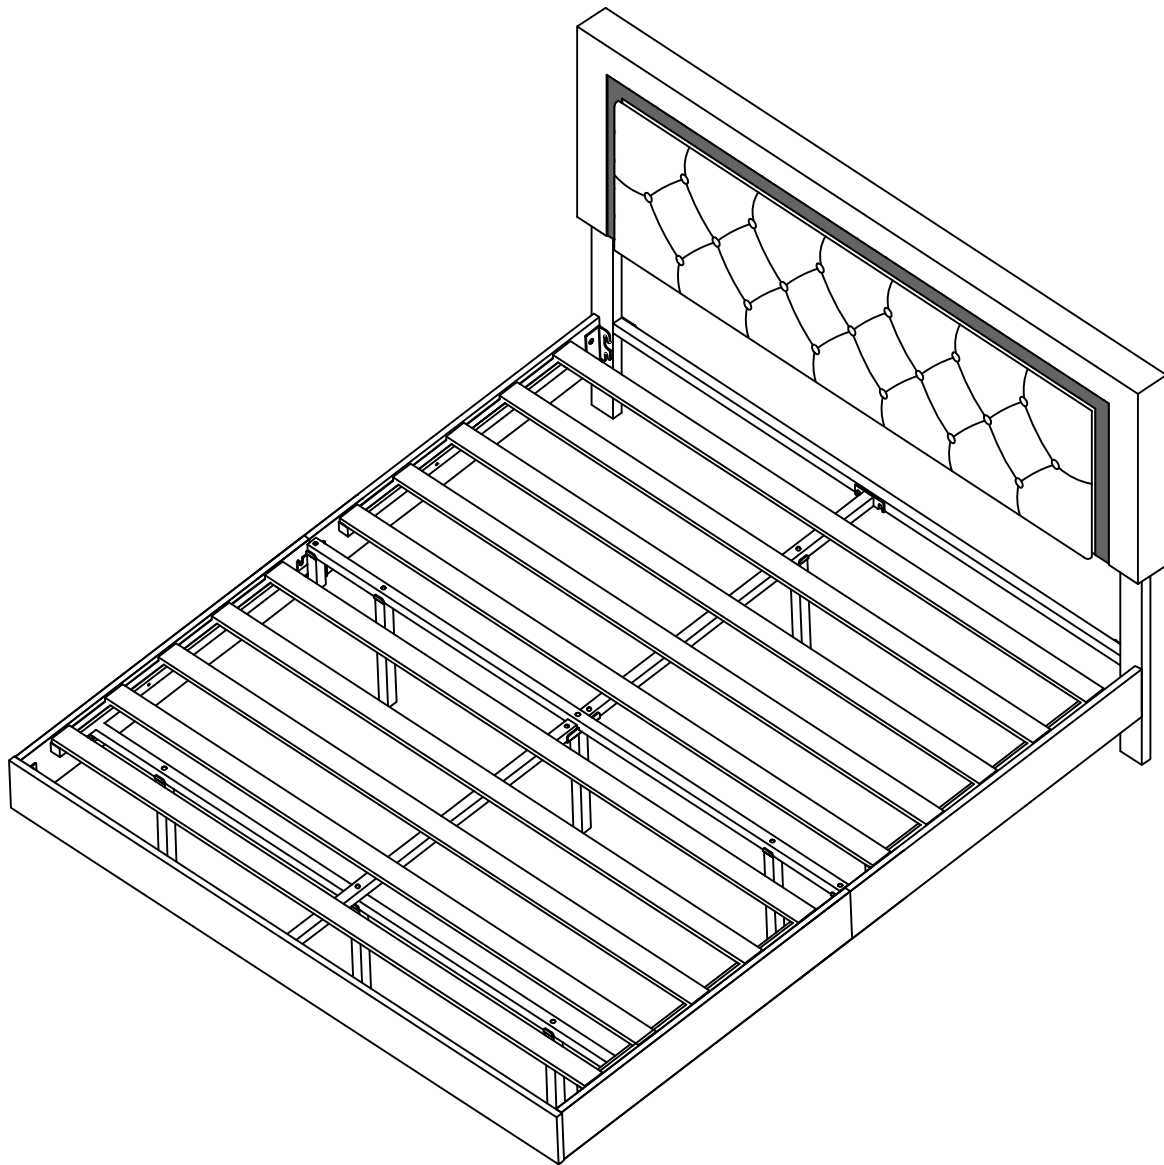
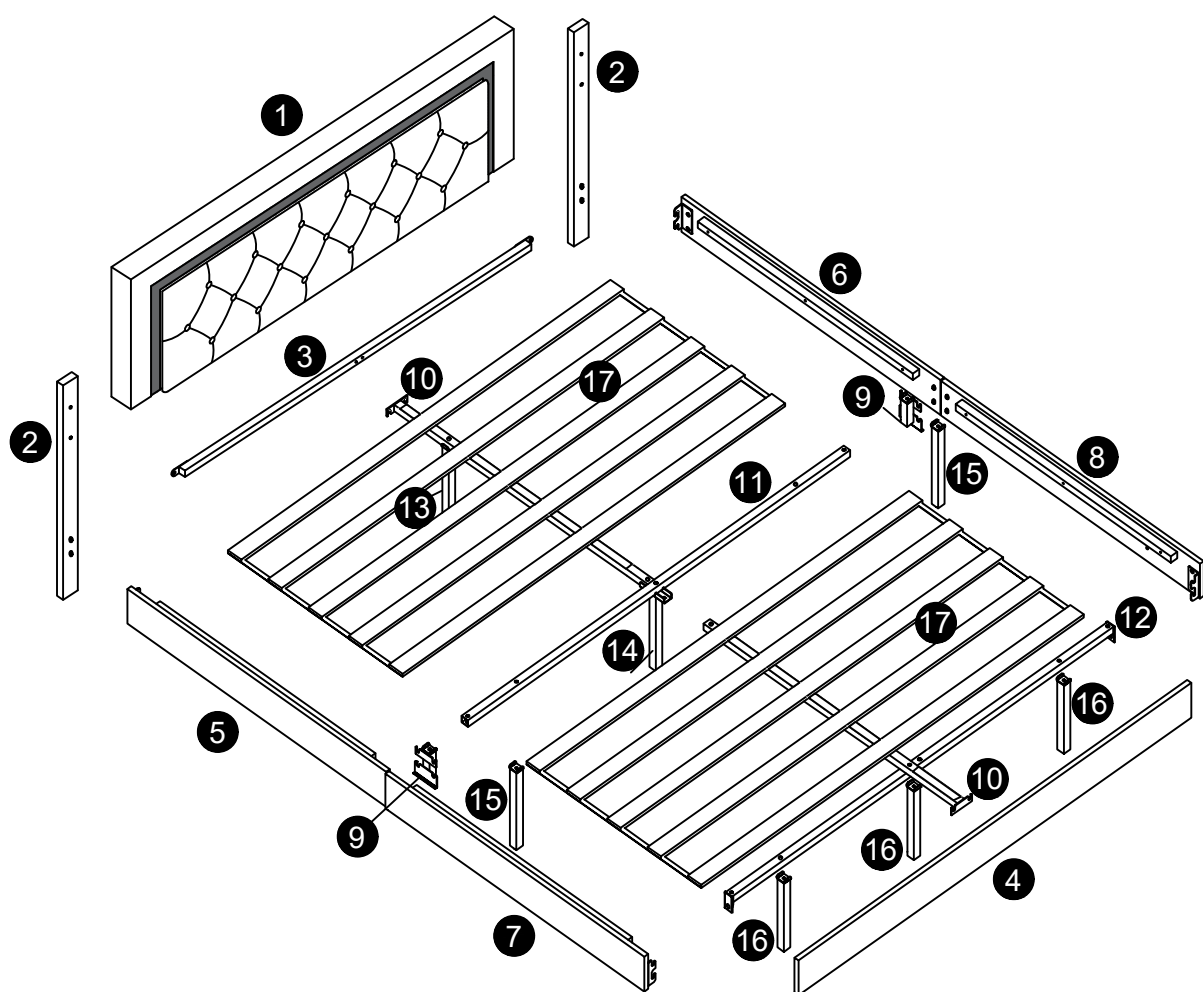
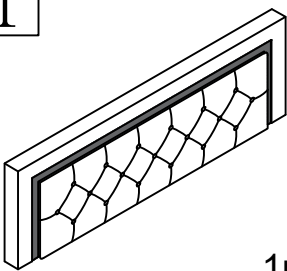

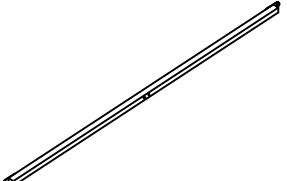
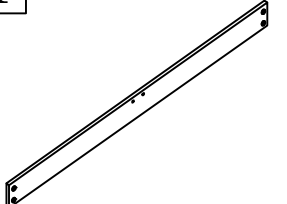
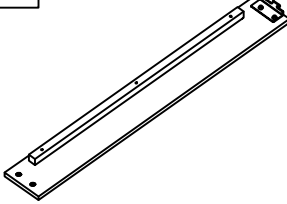
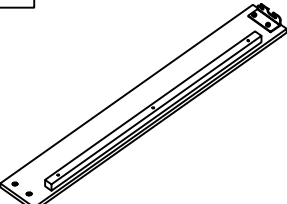
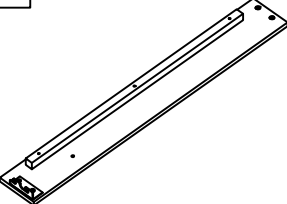
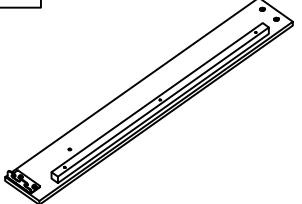

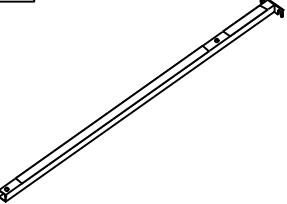
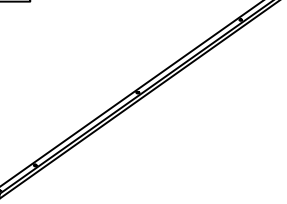
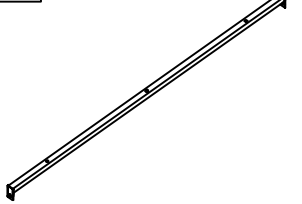


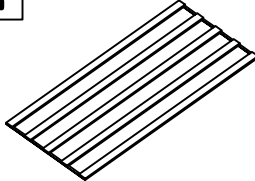




699FQ

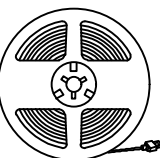





Part list

1		1pc
2		2pcs
3		1pc
4		1pc
5		1pc
6		1pc
7		1pc
8		1pc
9		2pcs
10		2pcs
11		1pc
12		1pc
13		mid 1pc
14		1pc
15		long 2pcs
16		short 3pcs
17		2pcs
18		1pc
19		1pc
20		1pc
21		1pc

Hardware list


A  M8*60mm 2pcs	B  M8*40mm 14pcs	C  M8*20mm 2pcs	D  M8*15mm 6pcs	E  M5*65MM 1pc
---	--	---	---	--

Step1

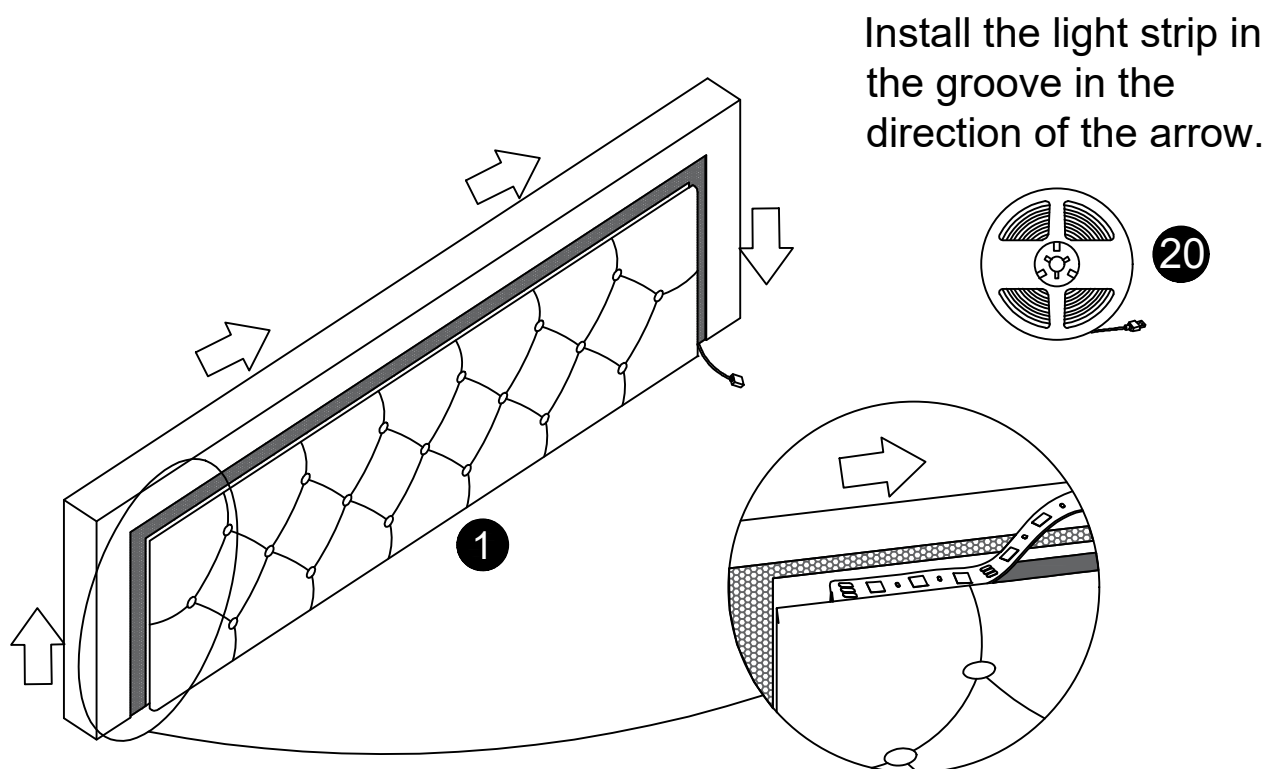


Step2

B		M8x40mm	4pcs
E		M5*65MM	1pc

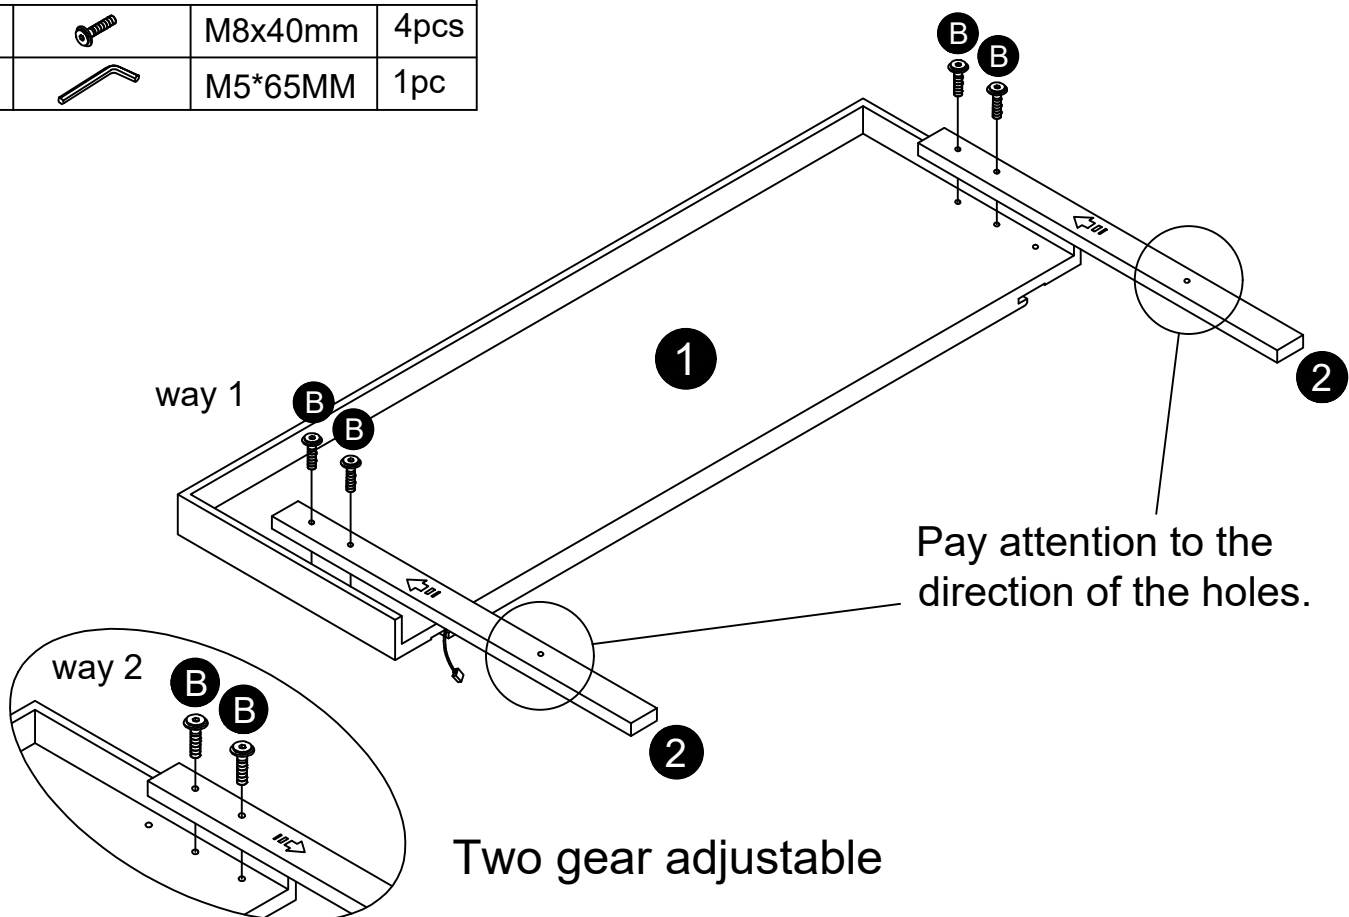


Step3

C		M8x20mm	2pcs
E		M5*65MM	1pc

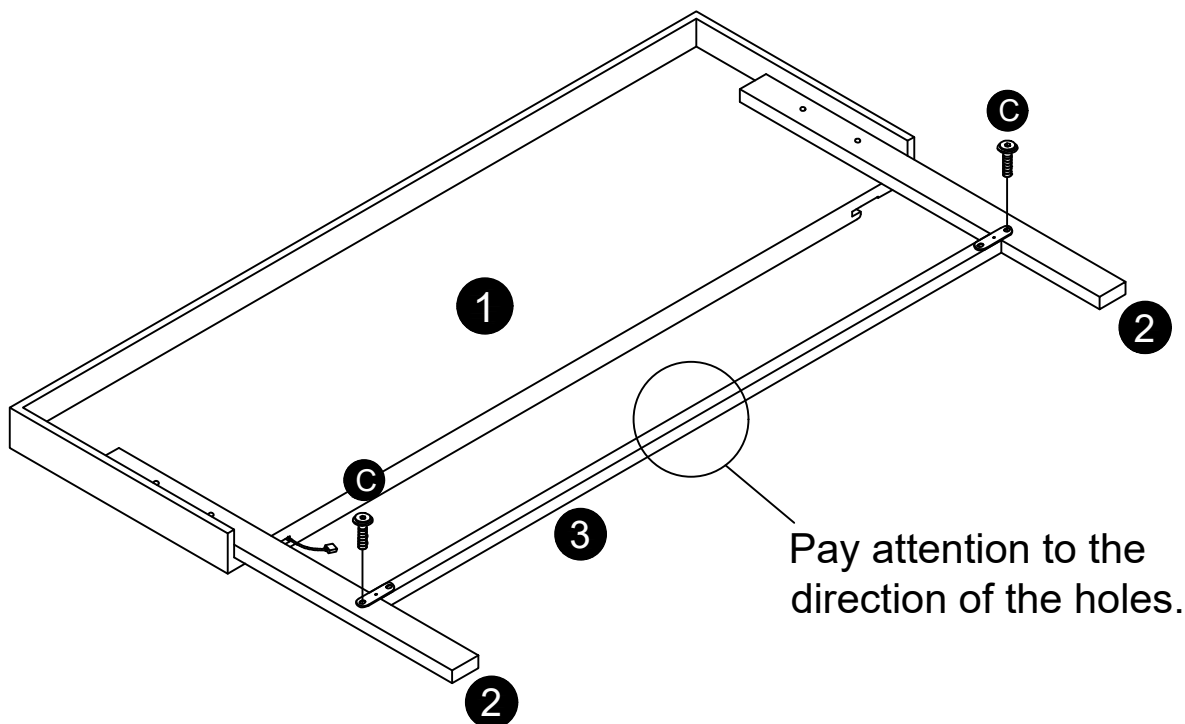


Step4

E		M5*65MM	1pc
---	---	---------	-----

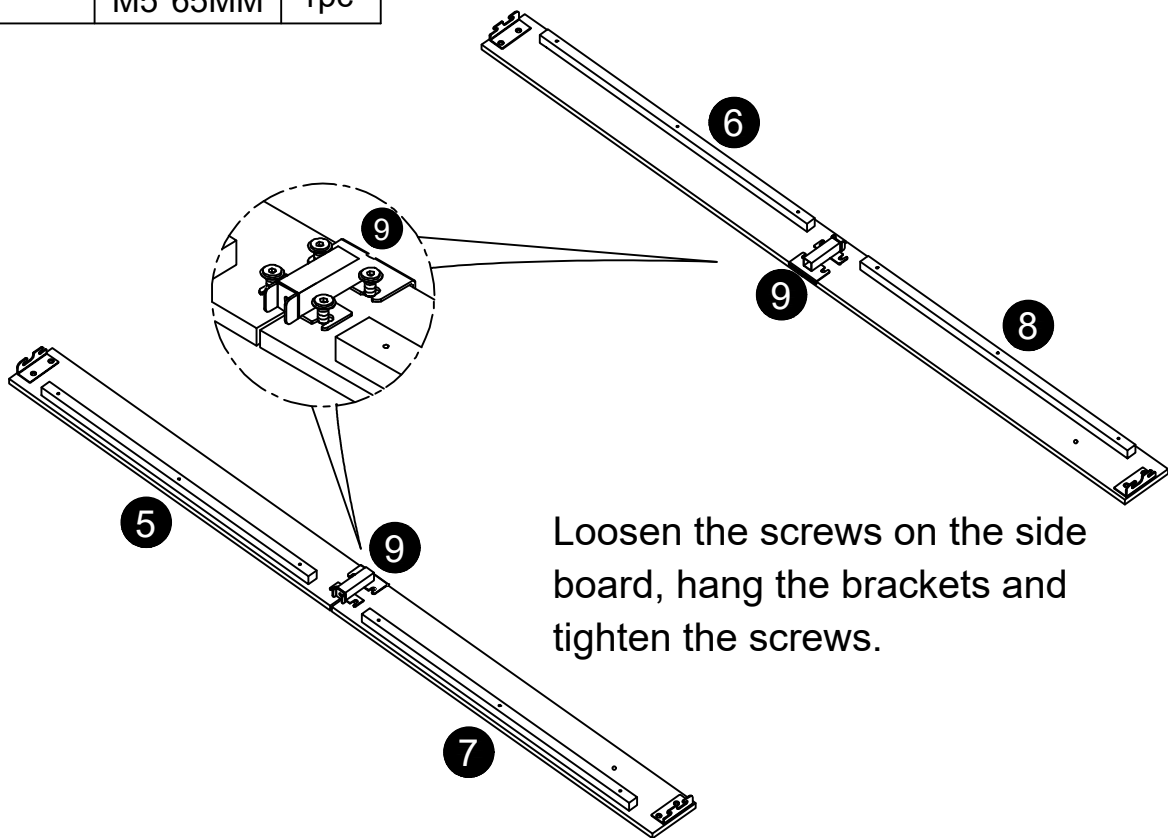


Step5

D		M8x15mm	2pcs
E		M5*65MM	1pc

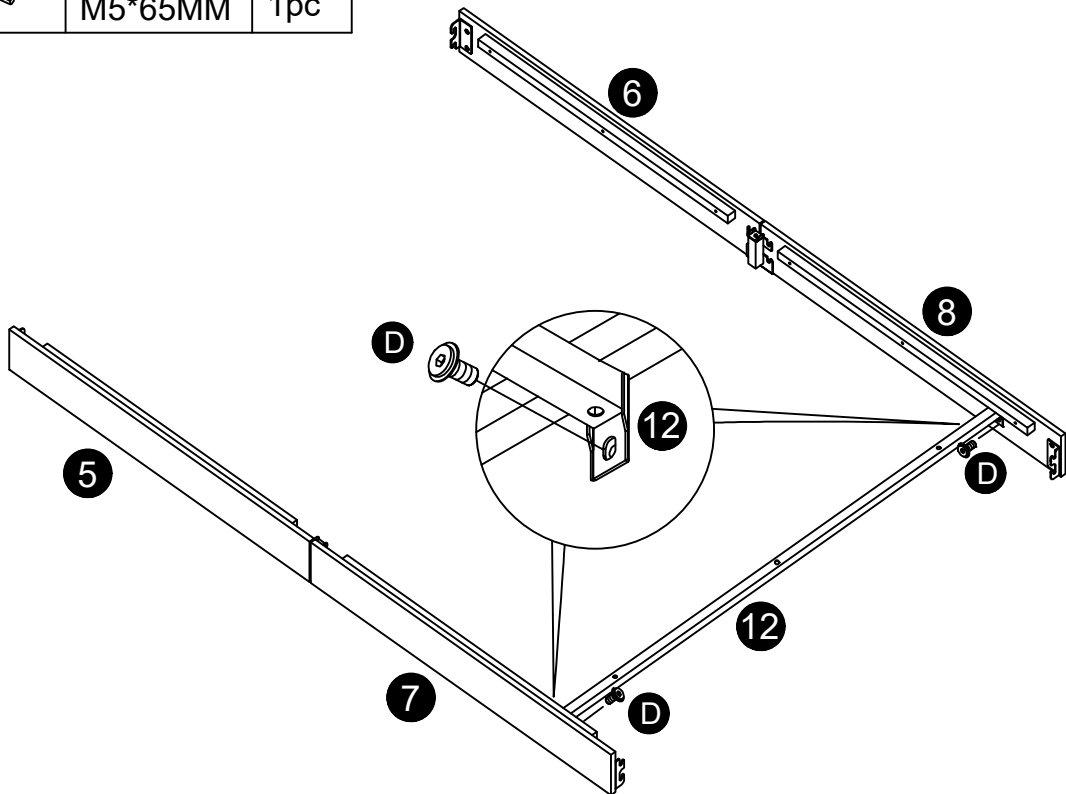


Step6

E		M5*65MM	1pc
---	---	---------	-----

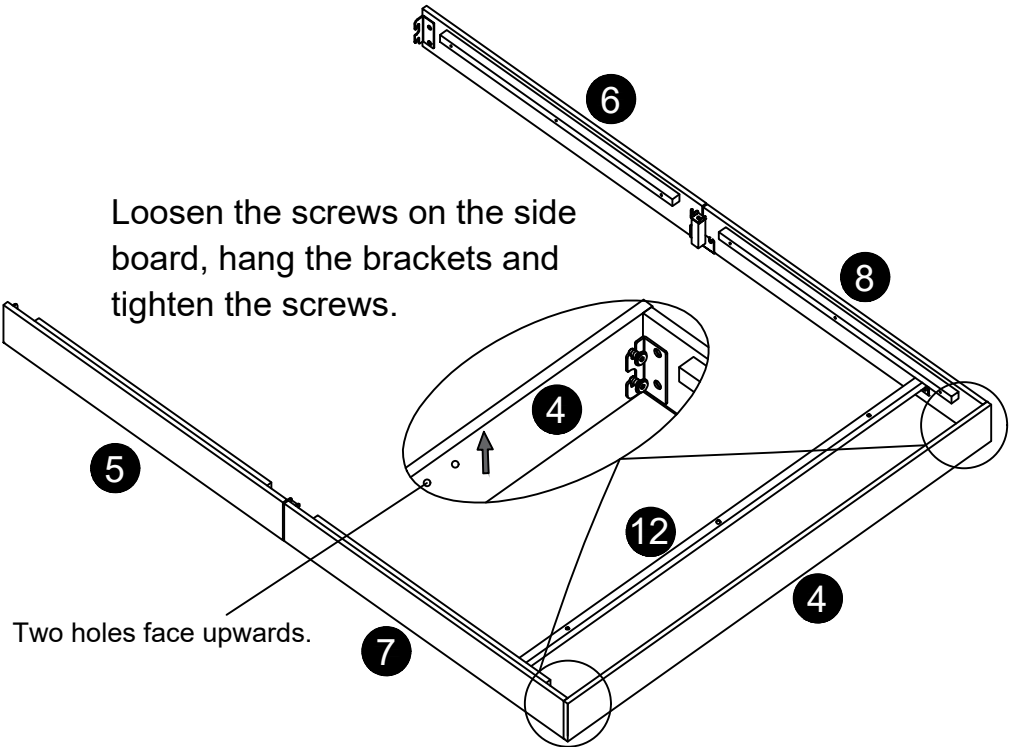

Step7

B		M8x40mm	2pcs
E		M5*65MM	1pc

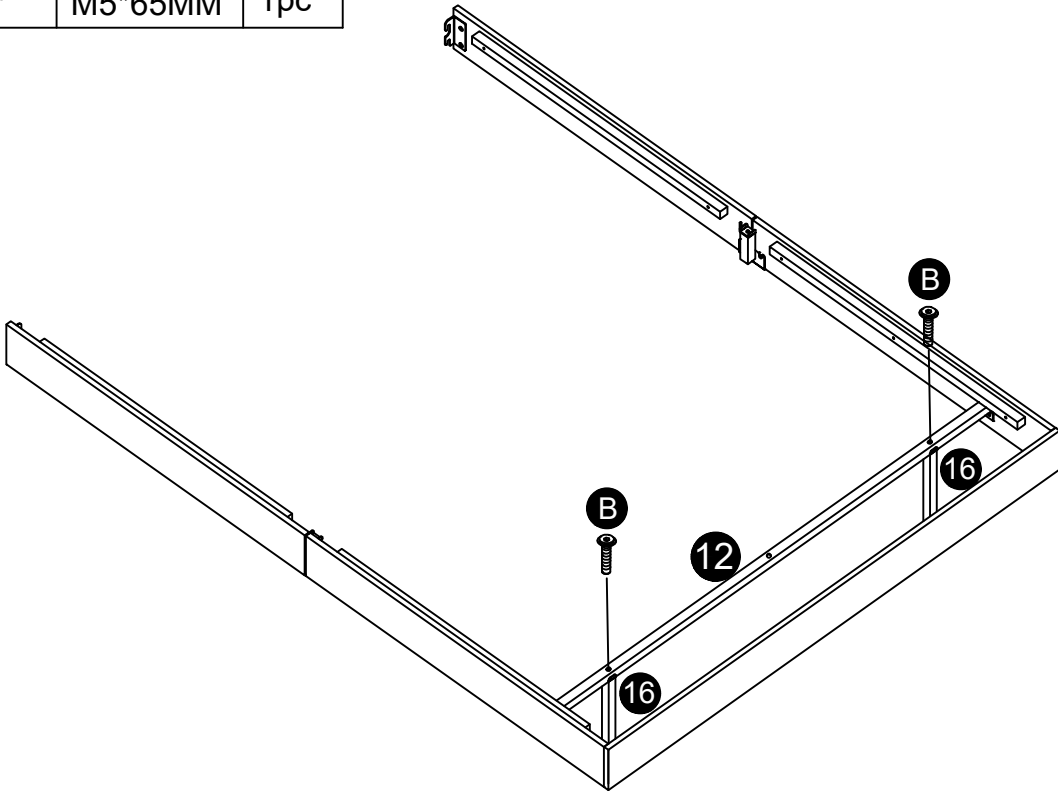


Step8

E



M5*65MM

1pc

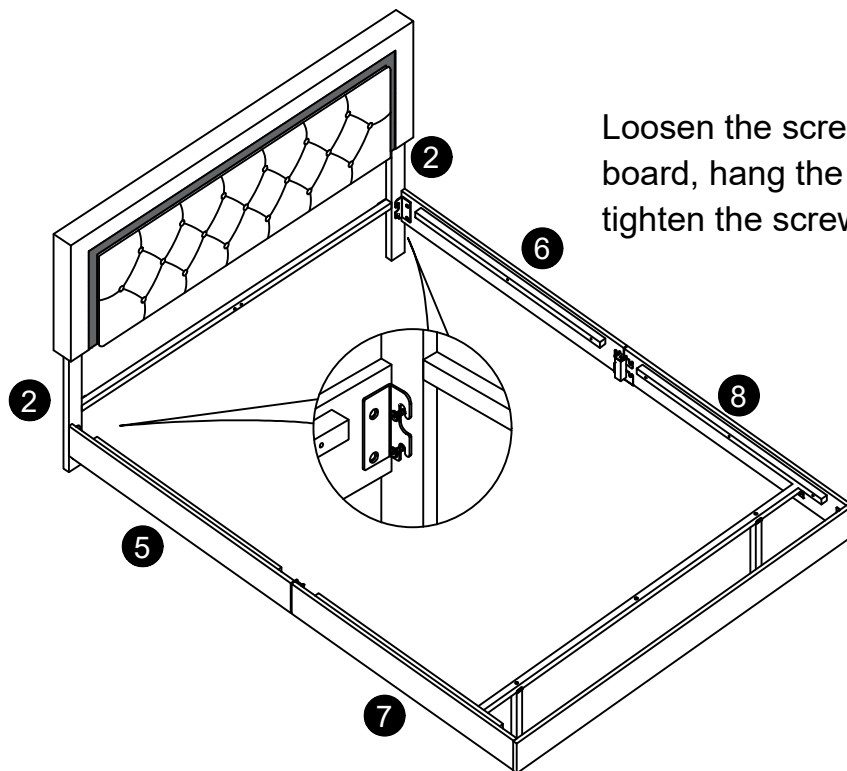

Loosen the screws on the side board, hang the brackets and tighten the screws.

Step9

A



M8x60mm

1pc

B



M8x40mm

3pcs

D



M8x15mm



4pcs

E



M5*65MM

1pc

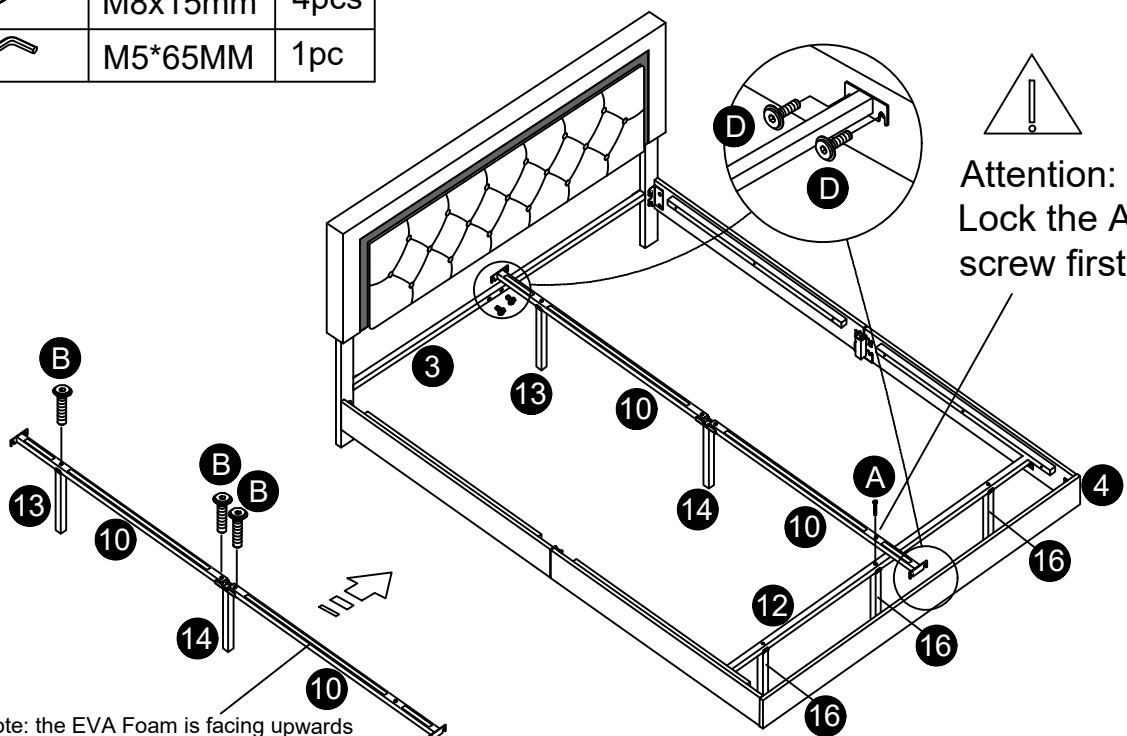


Attention:
Lock the A
screw first


Note: the EVA Foam is facing upwards

Step10

A		M8x60mm	1pc
B		M8x40mm	4pcs
E		M5*65MM	1pc

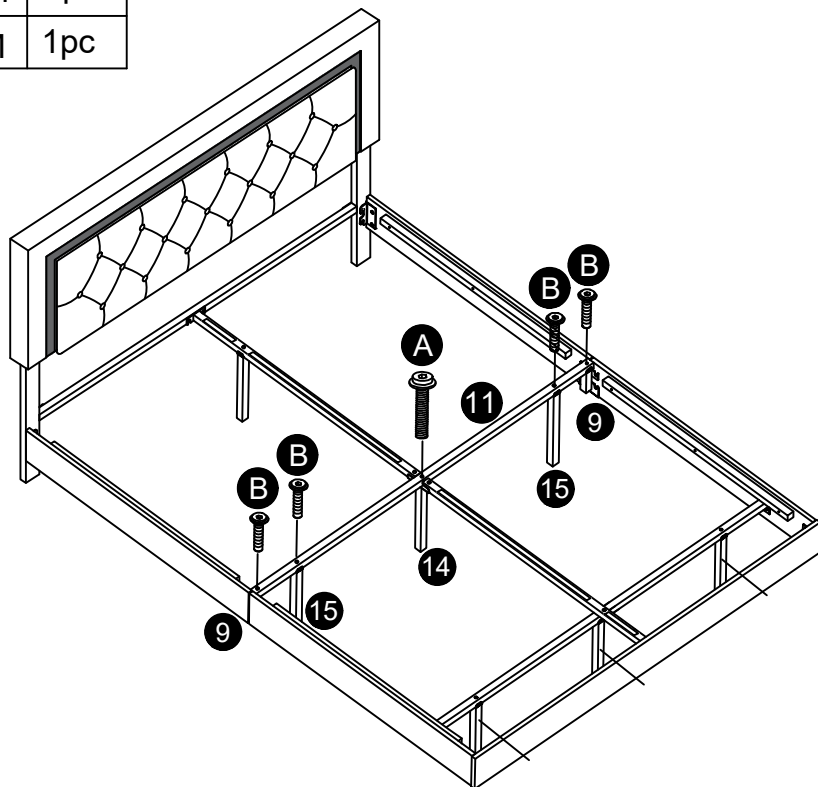


Step11

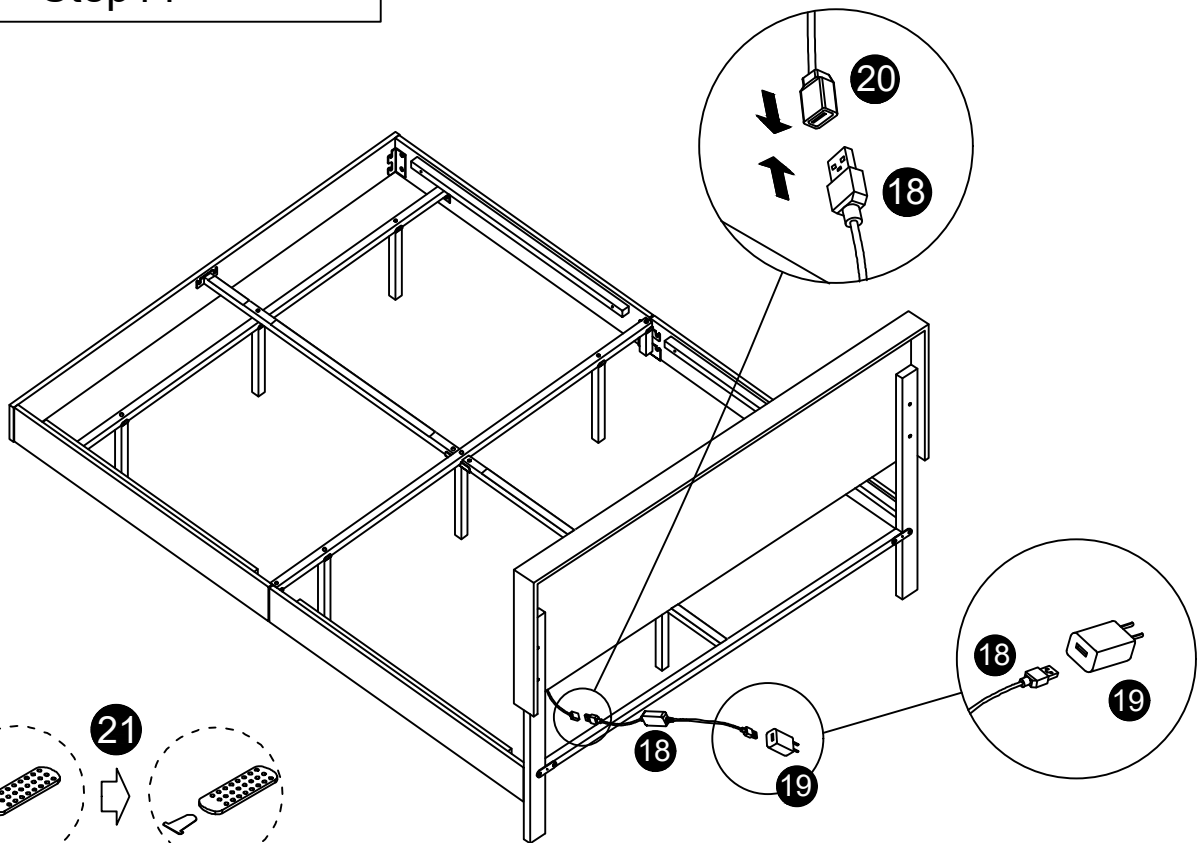

Extract the insulation sheet

Step12

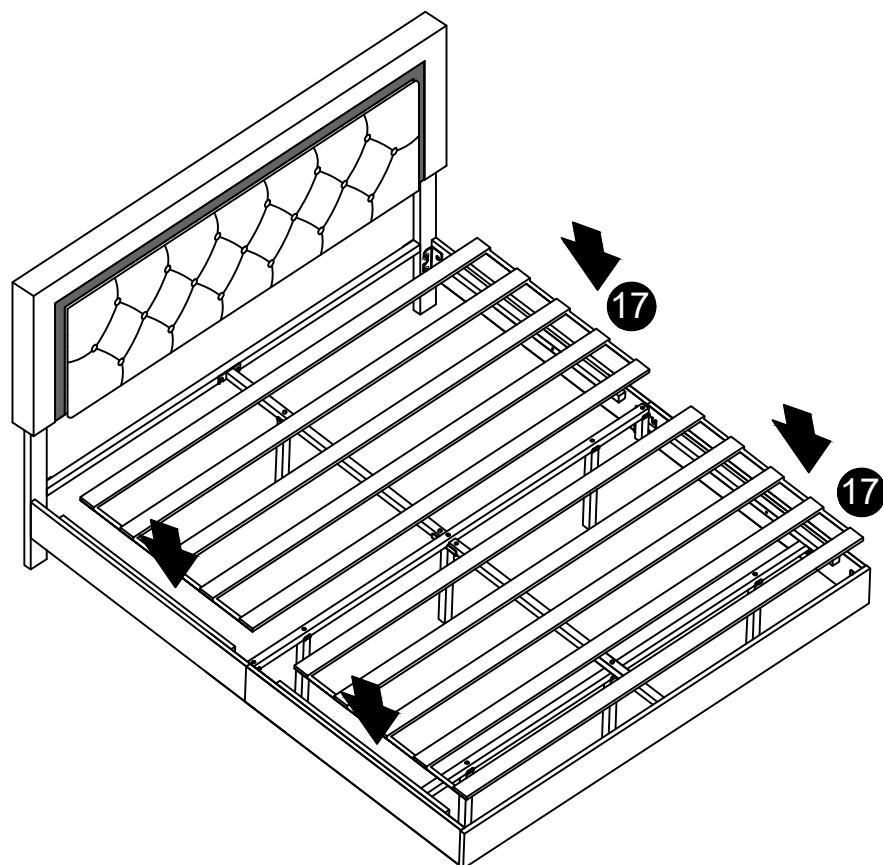

Step13

