
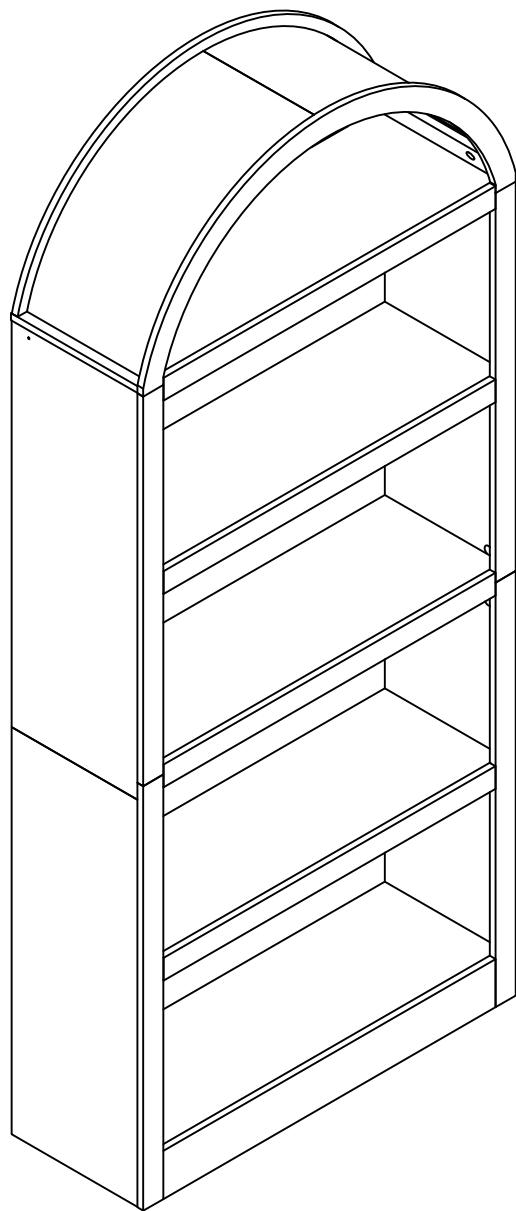


TV Stand

Assembly Instructions - Please keep for future reference

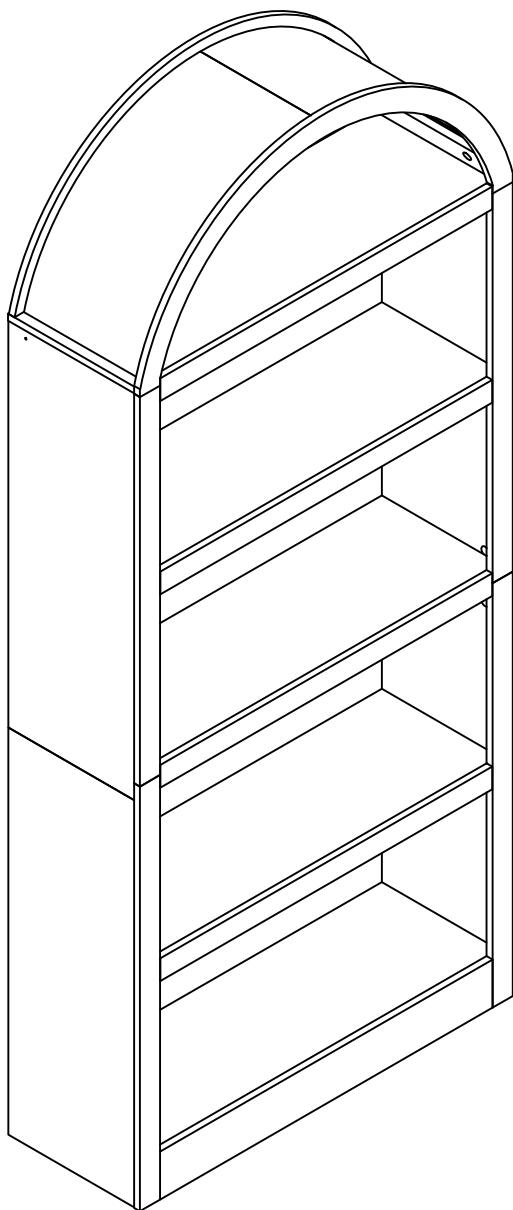

Single Dimensions

Width-29.921inch

Depth-10.63inch

Height-68.898inch



WARNING



This product is NOT a Clothing Storage Unit (CSU).

DO NOT use it for clothing storage.

Improper use may cause furniture tipover.

Important - Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

WARNING

In order to help prevent overturning – please follow these instructions






To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Components-Fittings

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. in some cases more fittings may be supplied than are required

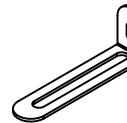 6*35mm Cam Bolt x 144	 15*10mm Cam Lock x 144	 8*30mm Dowel x 104	 4*40mm Screw x 10
 3.5*14mm Screw x 48	 4.0*14mm Screw x 4	 Anti-tilt Angle iron x 4	 Allen wrench x 1
 Phillips screwdriver x1	 Back panel buckle x 44	 Plastic expansion bolt x 4	 EVA pad x 8
 Reinforcing iron sheet x 8	 Hole position sticker x 20	 6.0*10mm Screw x 16	

Tools required



Phillips screwdriver


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

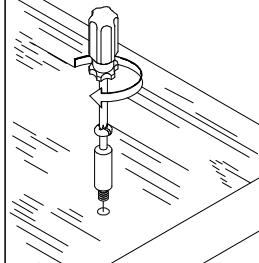

Step 2

Push the male camlock into the entry hole.

2

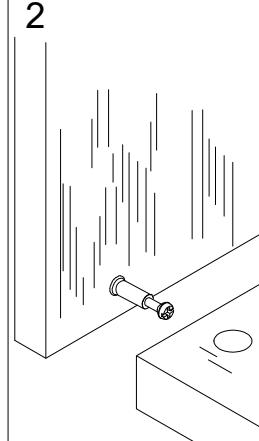


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

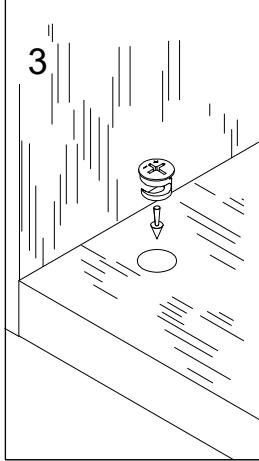


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.











4

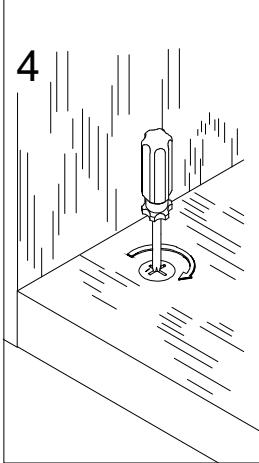

Assembly Instructions

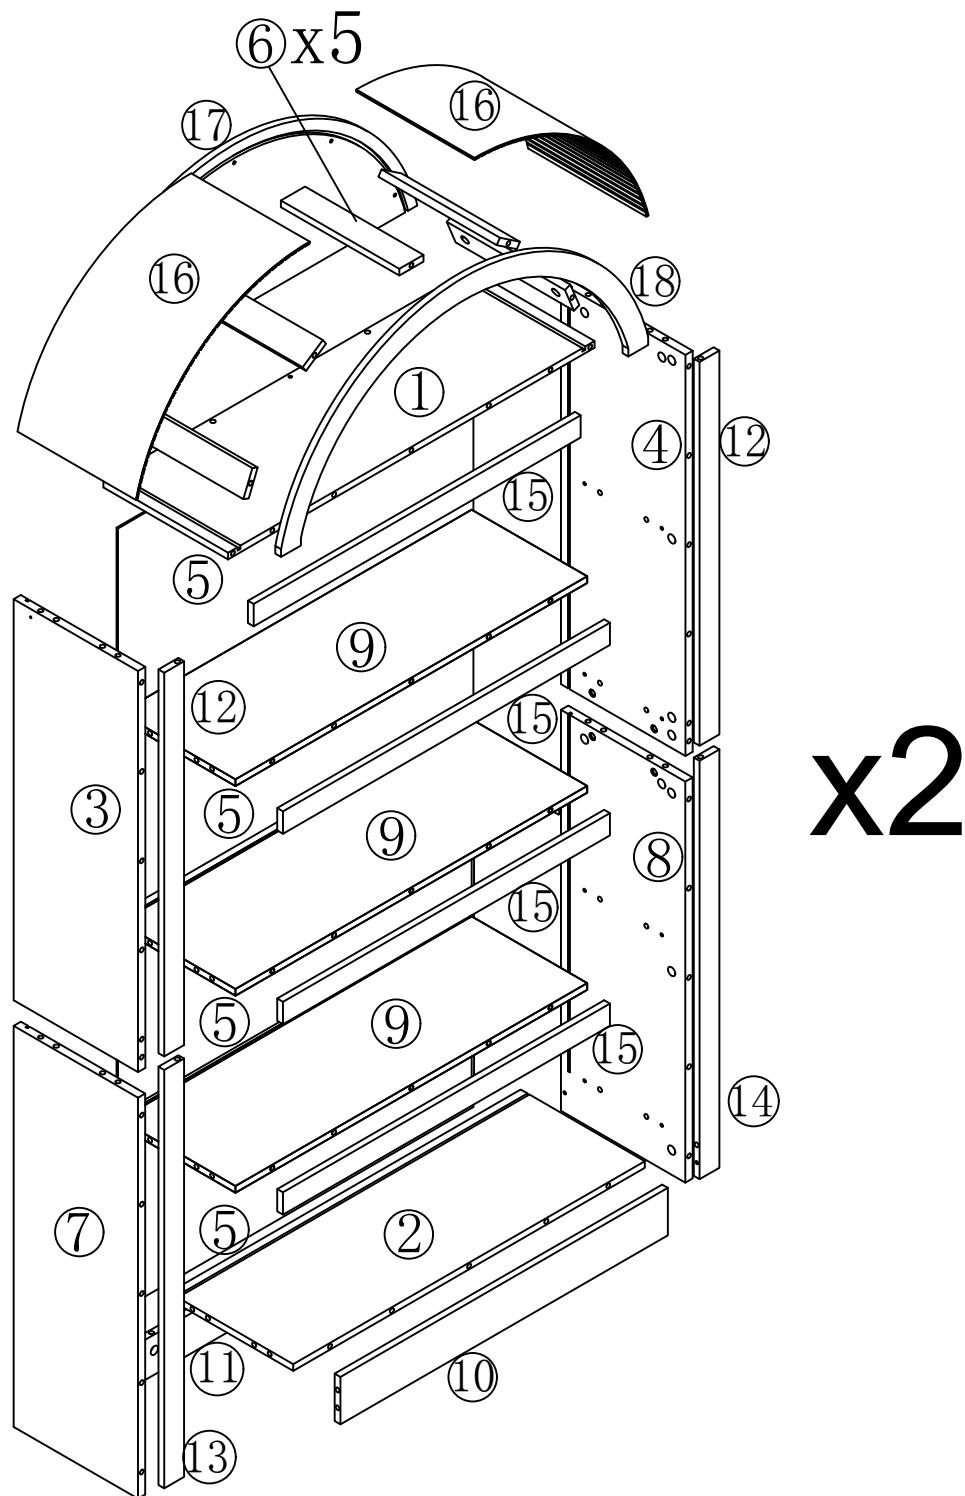


Assembly Instructions

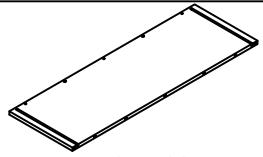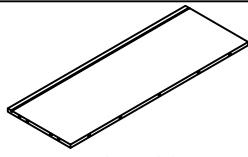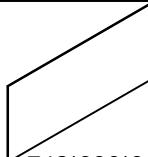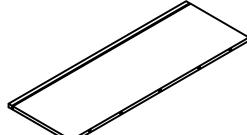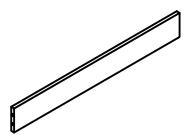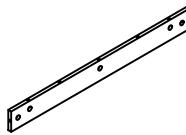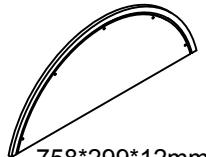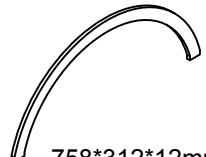
			
①X2	②X2	③X2	④X2
			
⑤X8	⑥X10	⑦X2	⑧X2
			
⑨X6	⑩ X2	⑪ X2	⑫ X4
			
⑬ X2	⑭ X2	⑮ X8	⑯ X4
			
⑰ X2	⑱ X2		

Assembly Instructions

Step 1

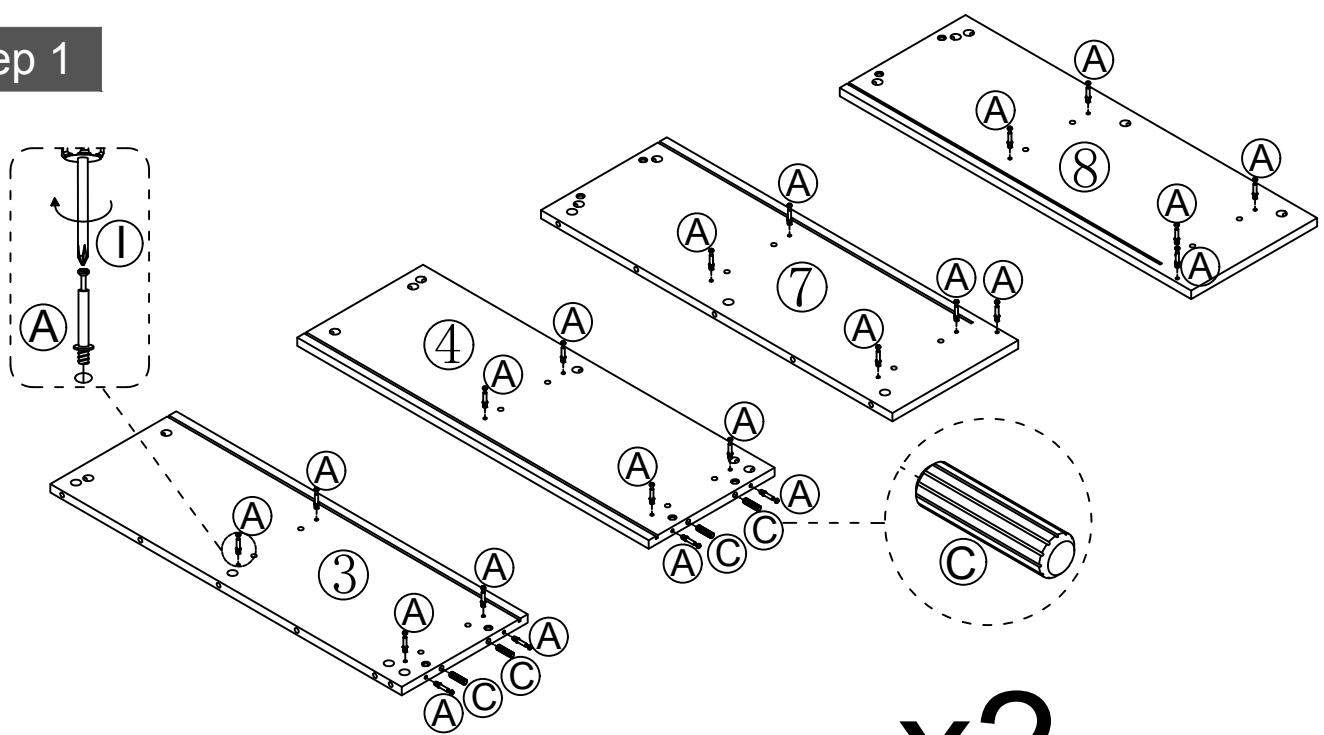

(A)




6*35mm Cam Bolt x 44

(C)




8*30mm Dowel x 8

Step 1

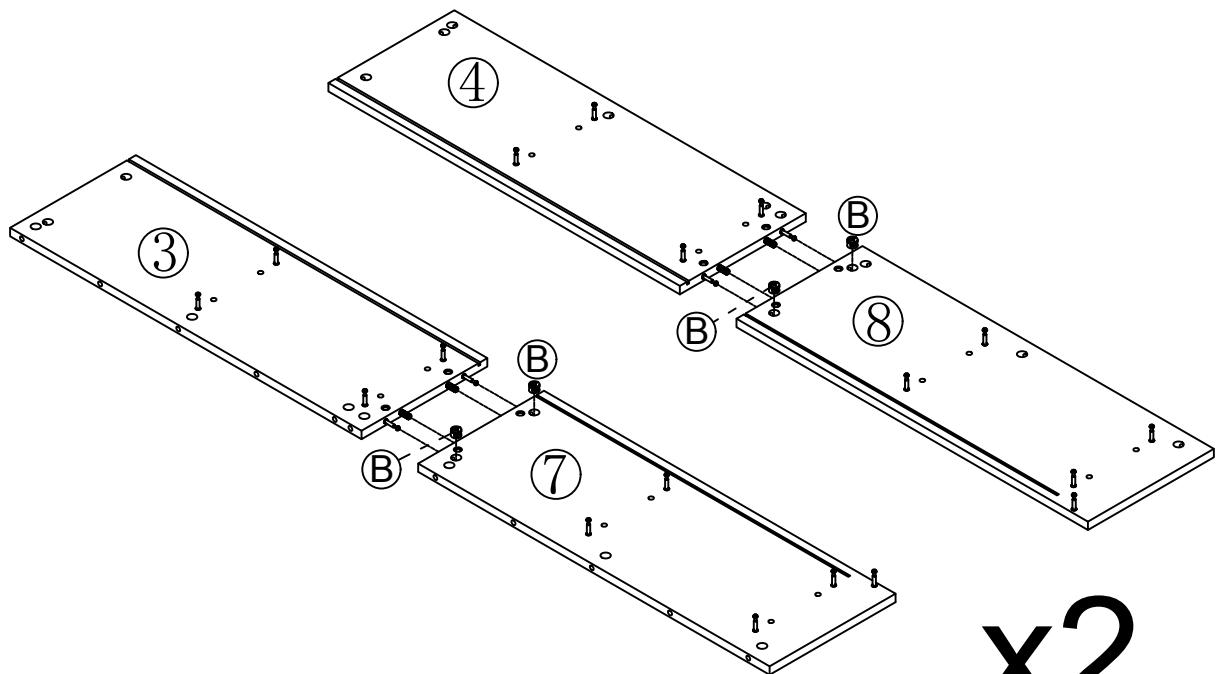

(B)



15*10mm Cam Lock x 8


Step 1

Step 2

Step 3

Assembly Instructions

Step 3

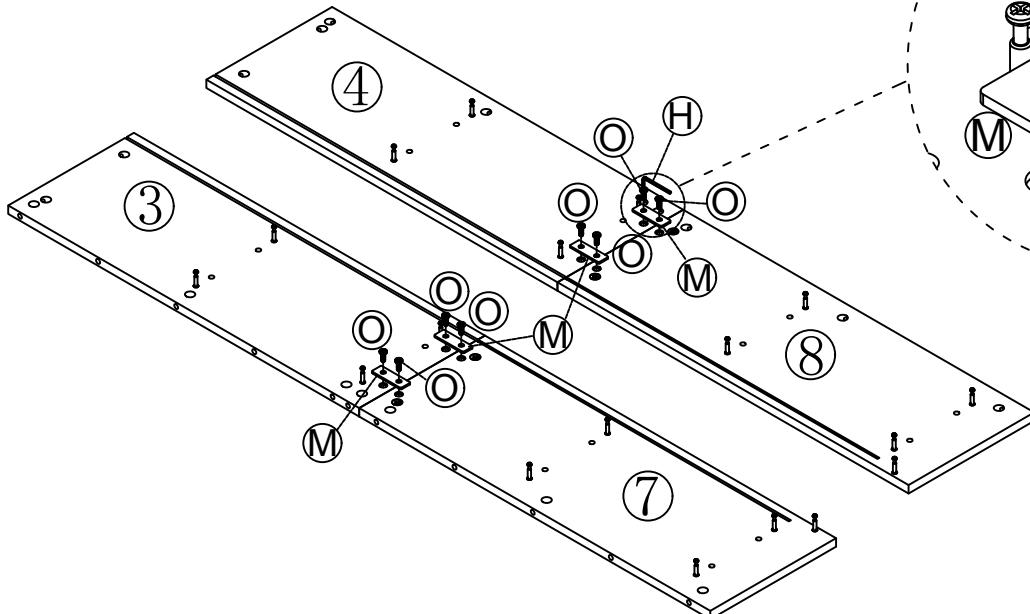

x2

(H)



Allen wrench x 1

(M)




Reinforcing iron sheet x 8

(O)




6.0*10mm Screw x 16

Step 4

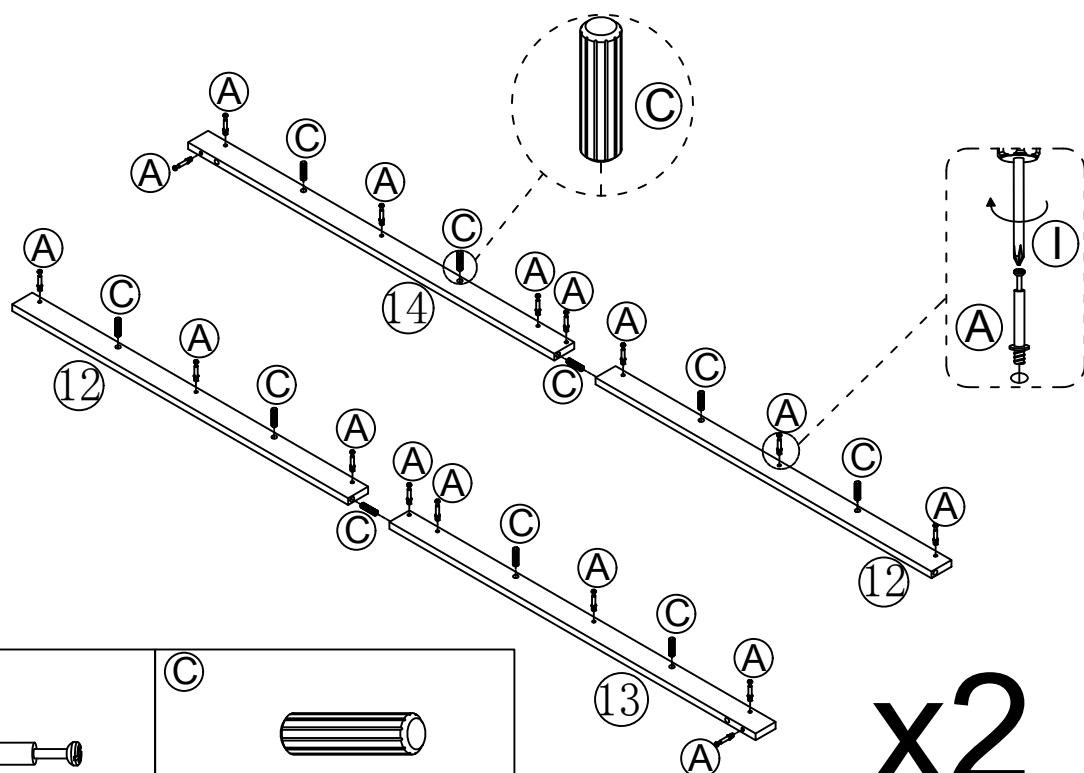

x2

(A)



6*35mm Cam Bolt x 32


(C)



8*30mm Dowel x 20

Assembly Instructions

Step 5

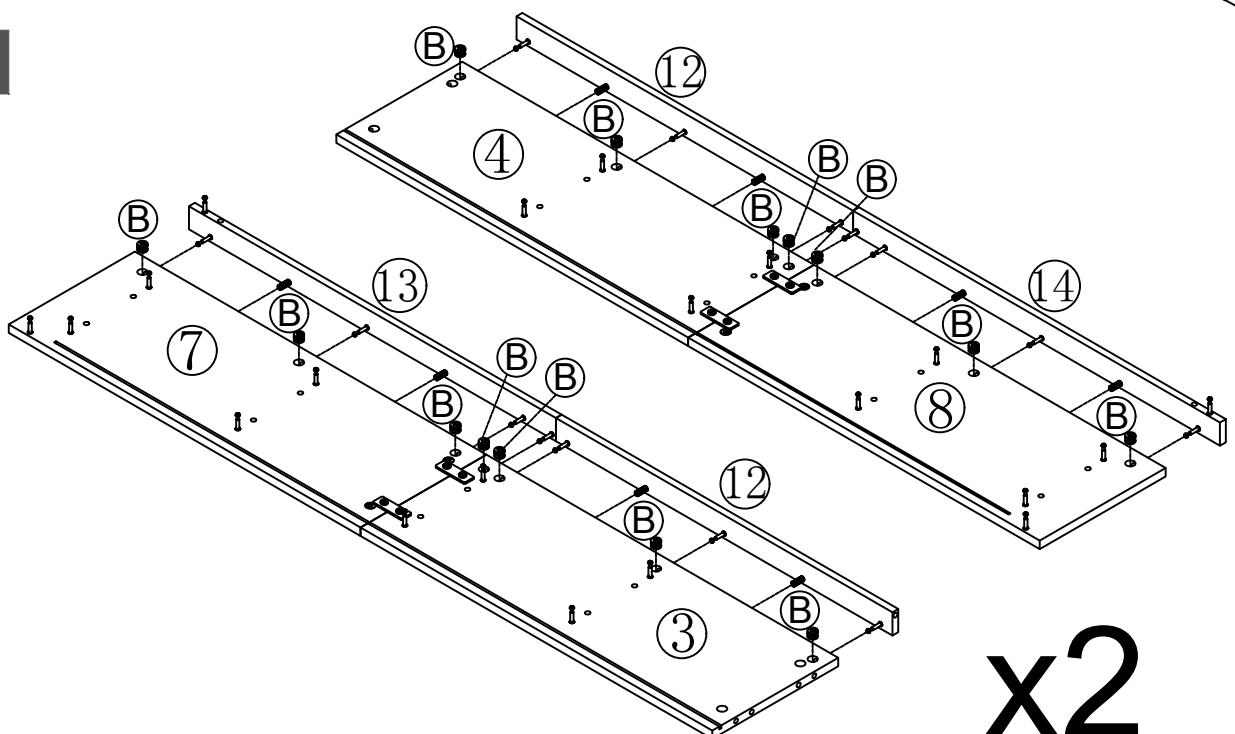

X2

Step 1


Step 2

Step 3


(B)



15*10mm Cam Lock x 28

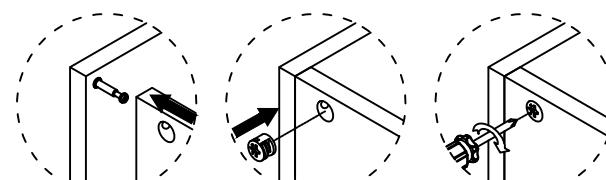


Step 6

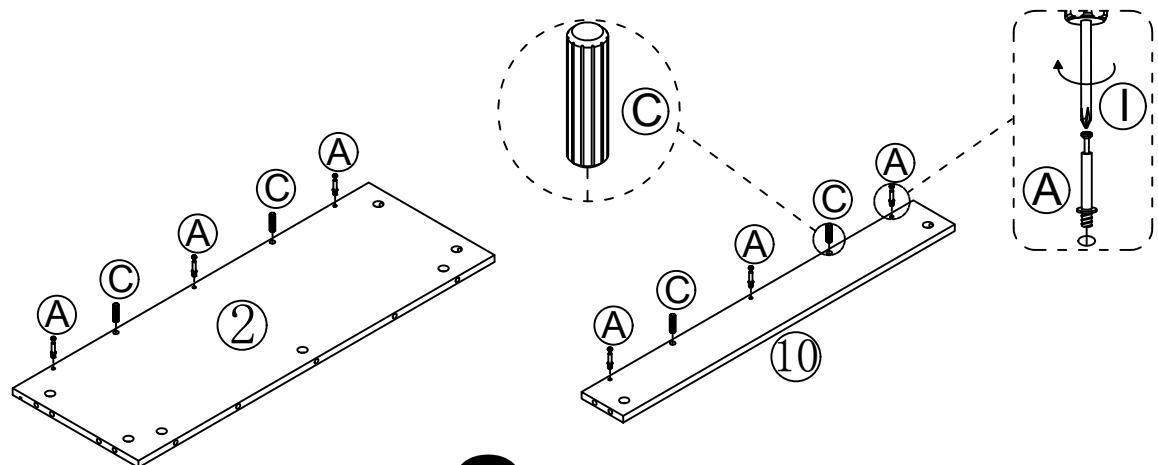

X2

(A)



6*35mm Cam Bolt x 12



(C)



8*30mm Dowel x 8

Assembly Instructions

Step 7

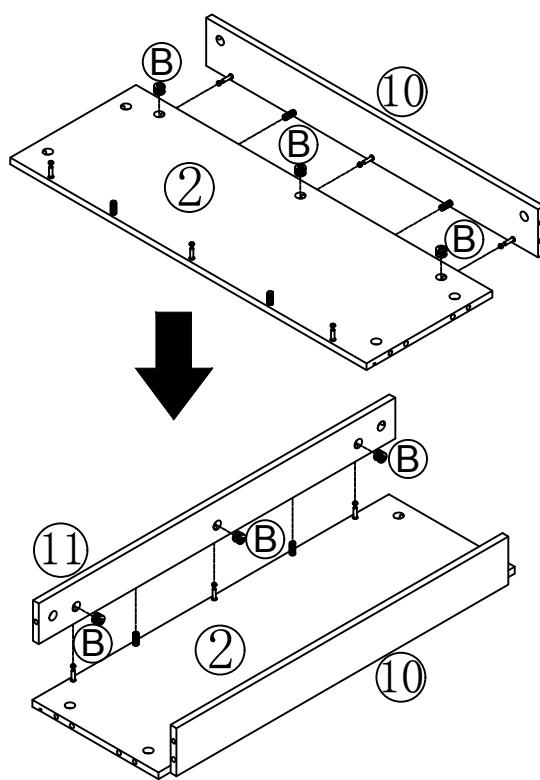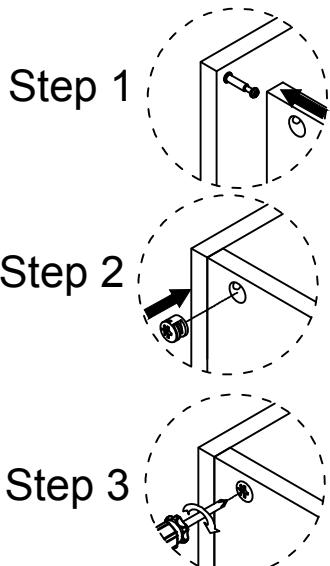



x2

(B)



15*10mm Cam Lock x 12

Step 8

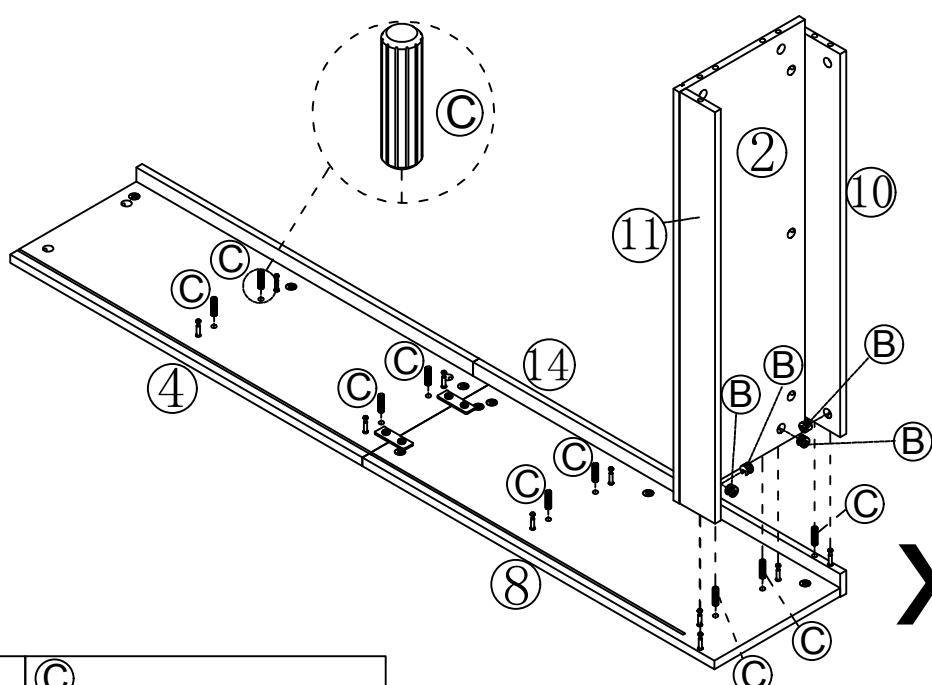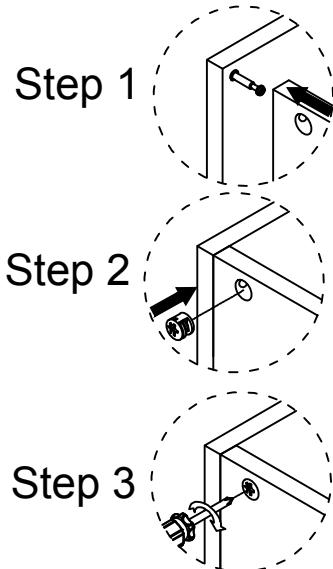

x2

(B)



15*10mm Cam Lock x 8





(C)




8*30mm Dowel x 18

Assembly Instructions


Step 9

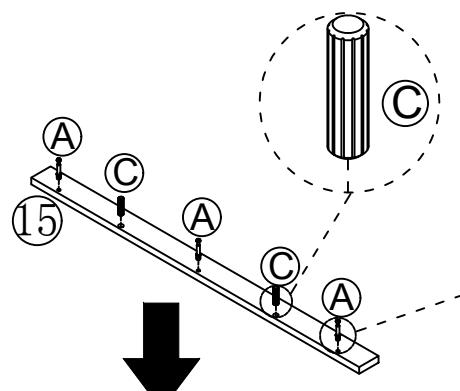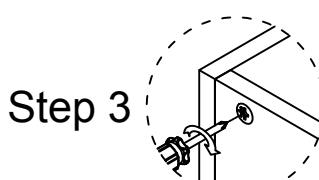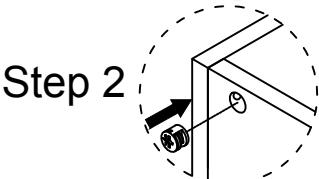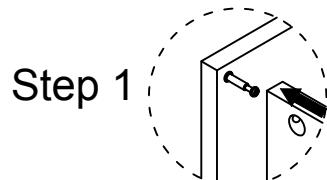

x6

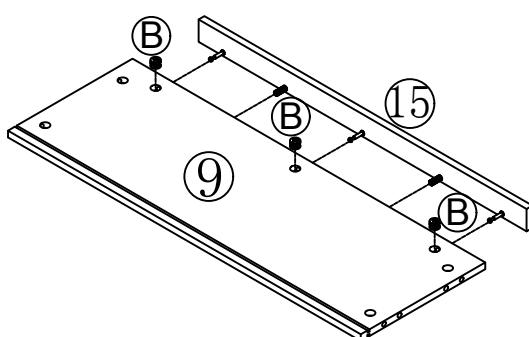

(A)







(B)




(C)



Step 10

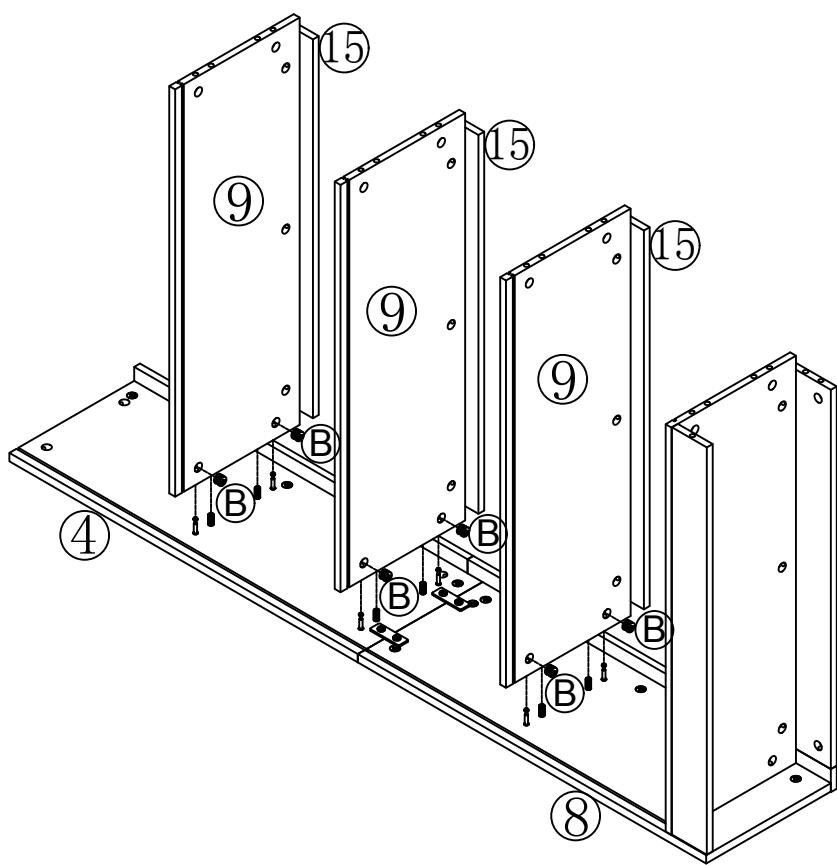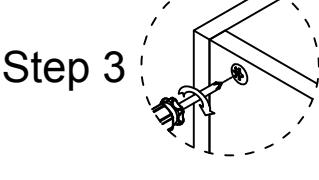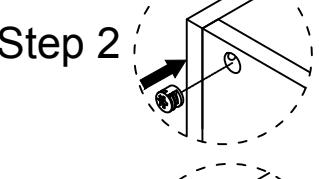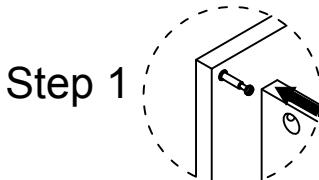


x2

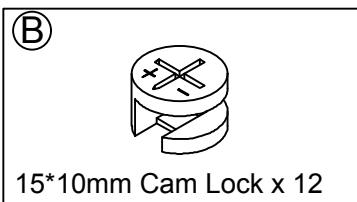

Assembly Instructions

Step 11

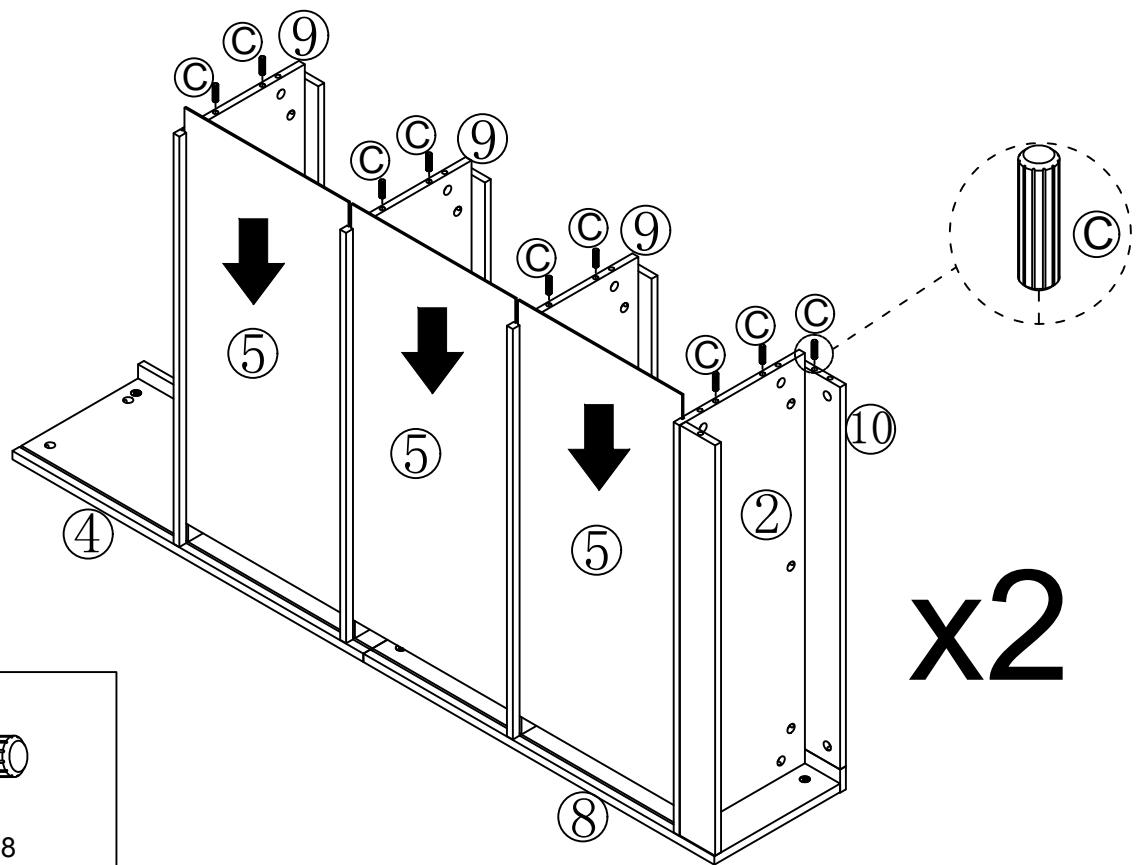


(C)



8*30mm Dowel x 18

Step 12

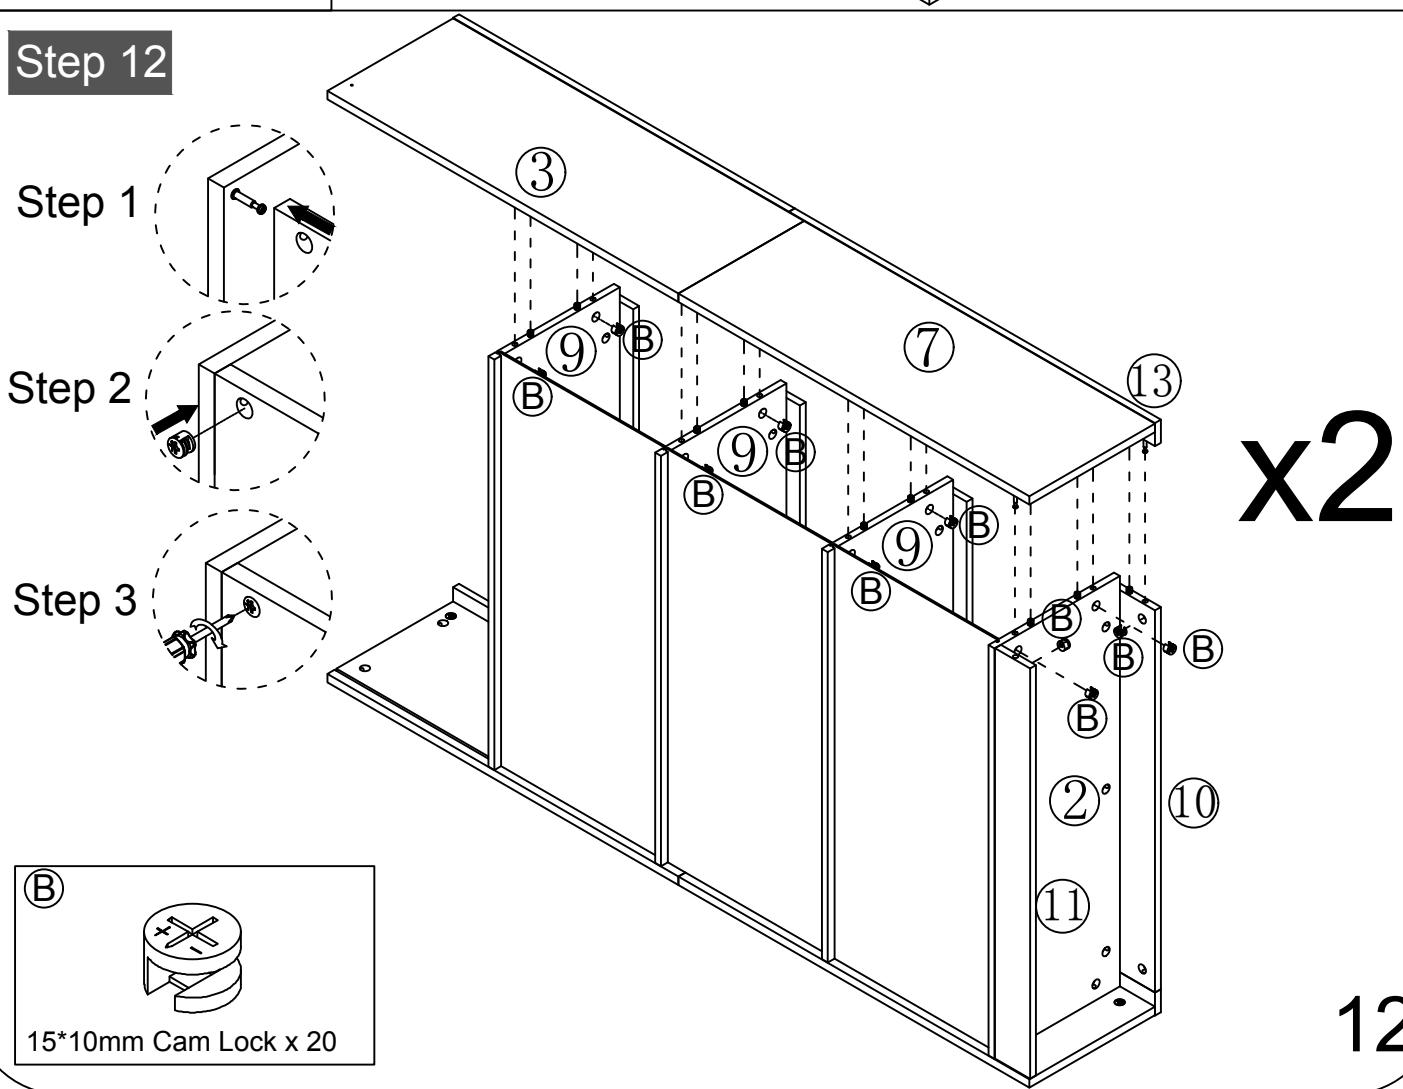

(B)




15*10mm Cam Lock x 20

12


Assembly Instructions

Step 13

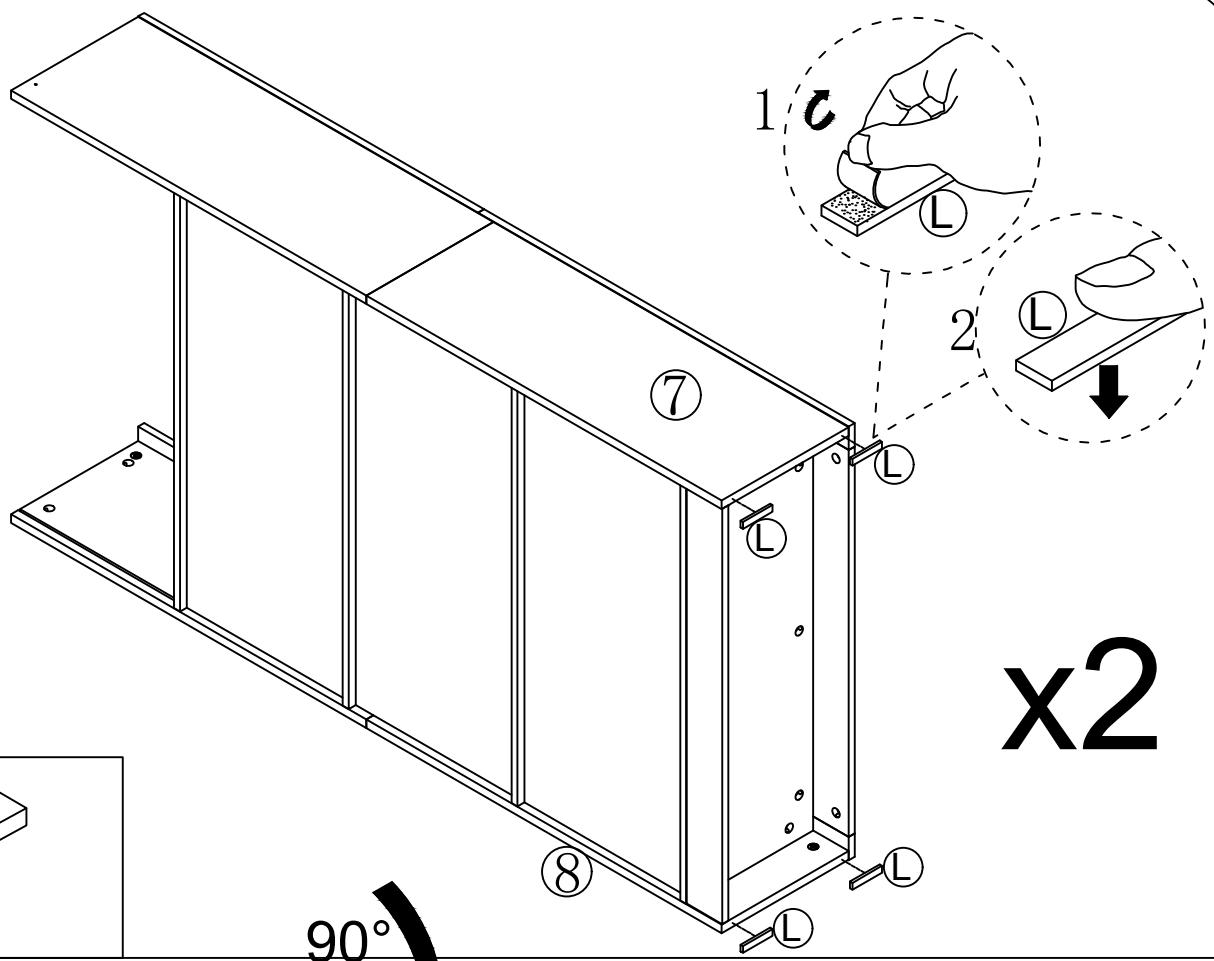

Step 14


Be careful! At least two people are required here.

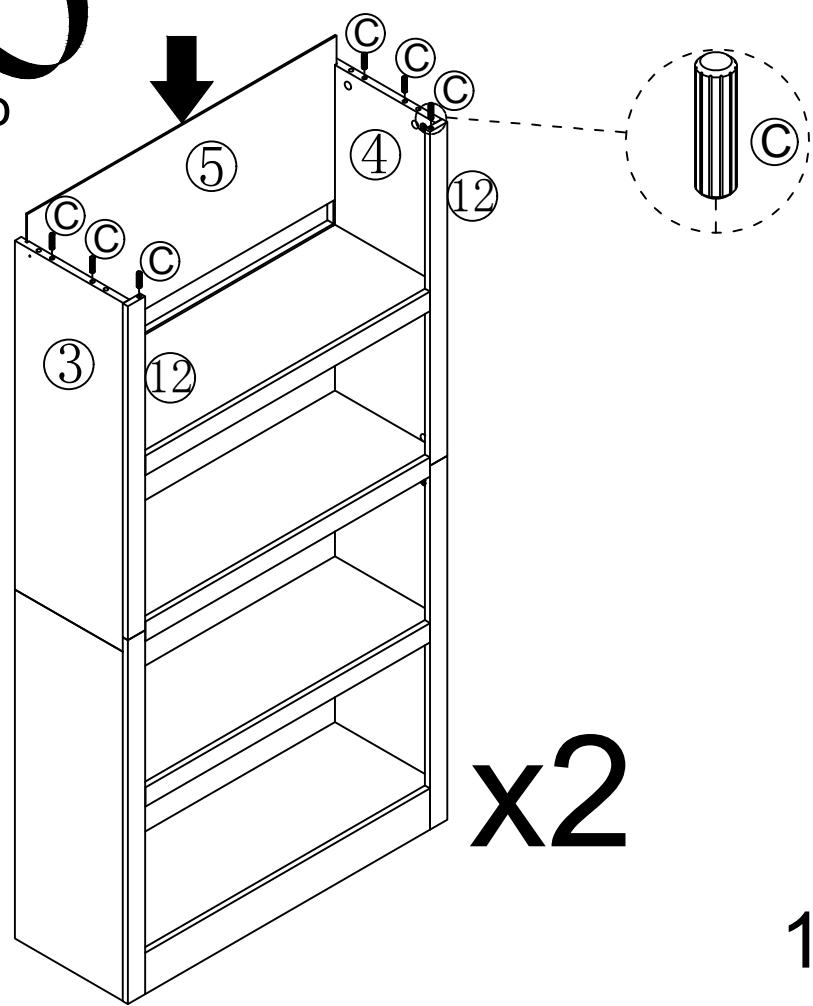


Assembly Instructions

Step 15



Step 1

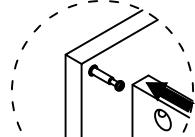

Step 2

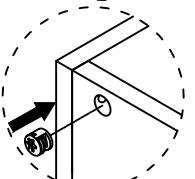

Step 3

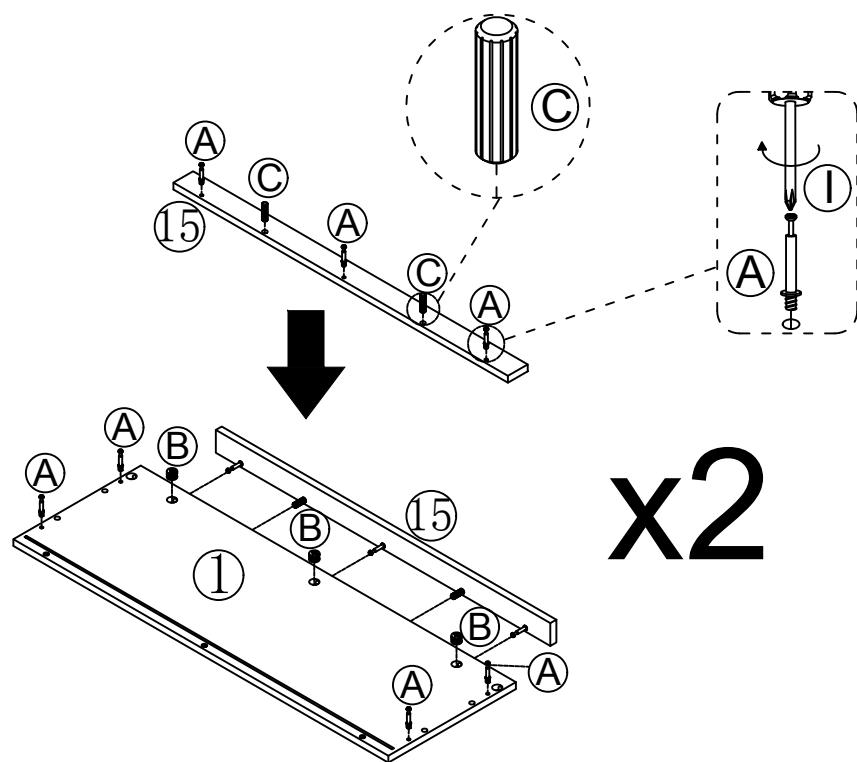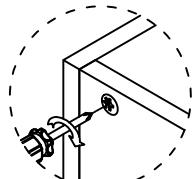

(A)

6*35mm Cam Bolt x 14

(B)




15*10mm Cam Lock x 6

(C)



8*30mm Dowel x 4

Step 16



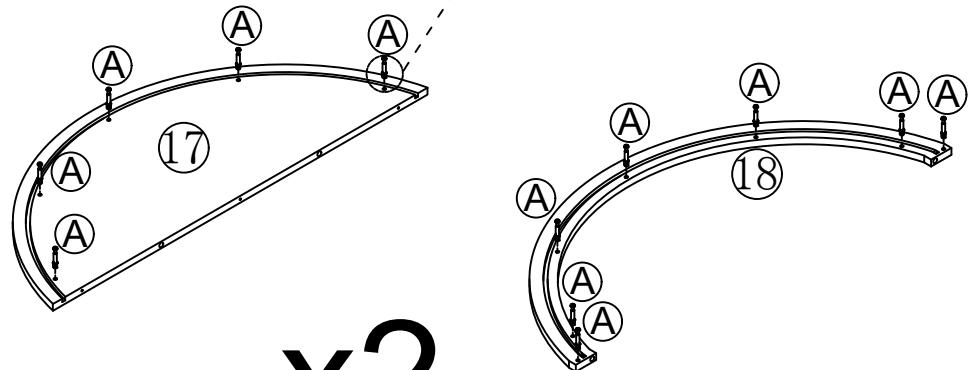


(A)

6*35mm Cam Bolt x 24

Assembly Instructions

Step 17

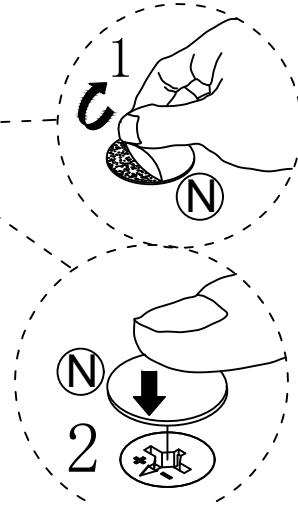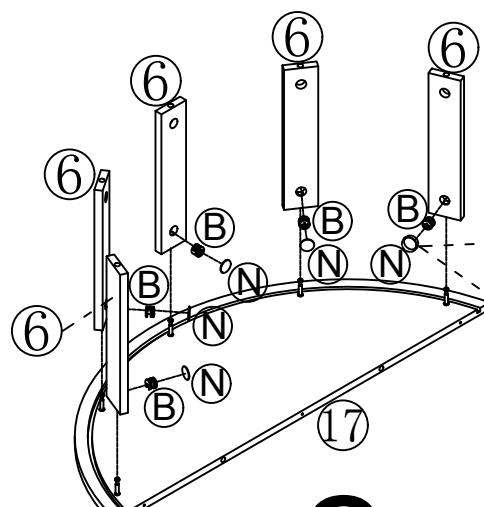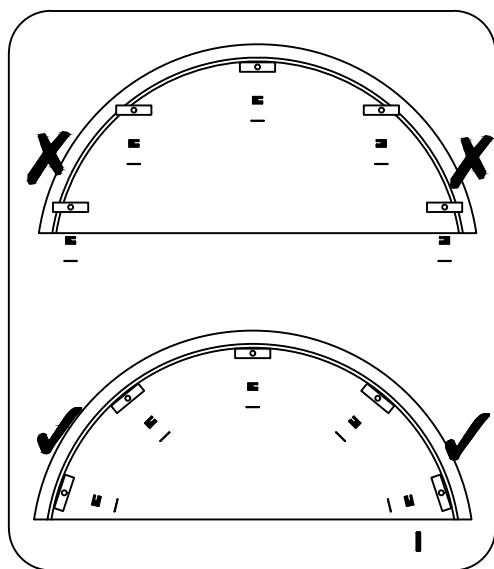

Step 1

Step 2


Step 3

(B)




15*10mm Cam Lock x 10

(N)



Hole position sticker x 10

Step 18

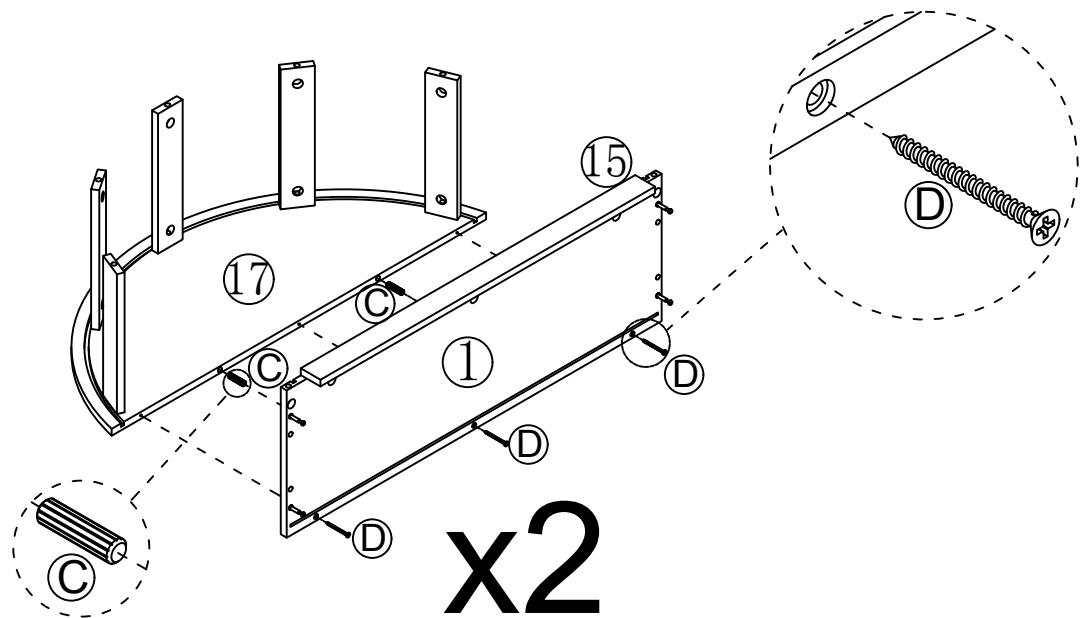

(C)



8*30mm Dowel x 4


(D)





4*40mm Screw x 6

Assembly Instructions

Step 19



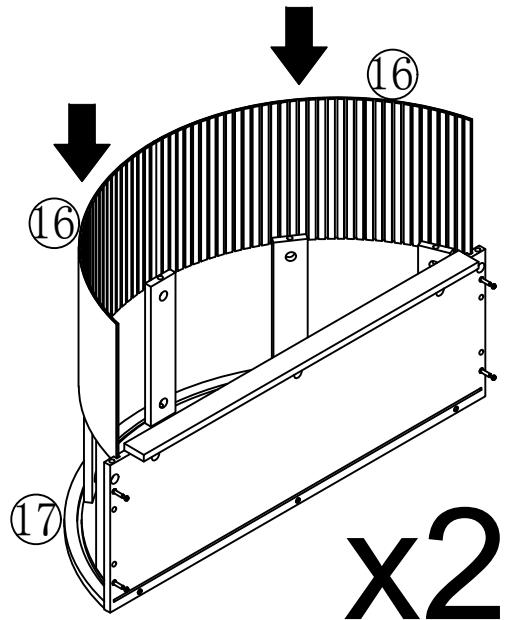


Step 20

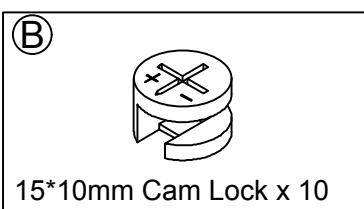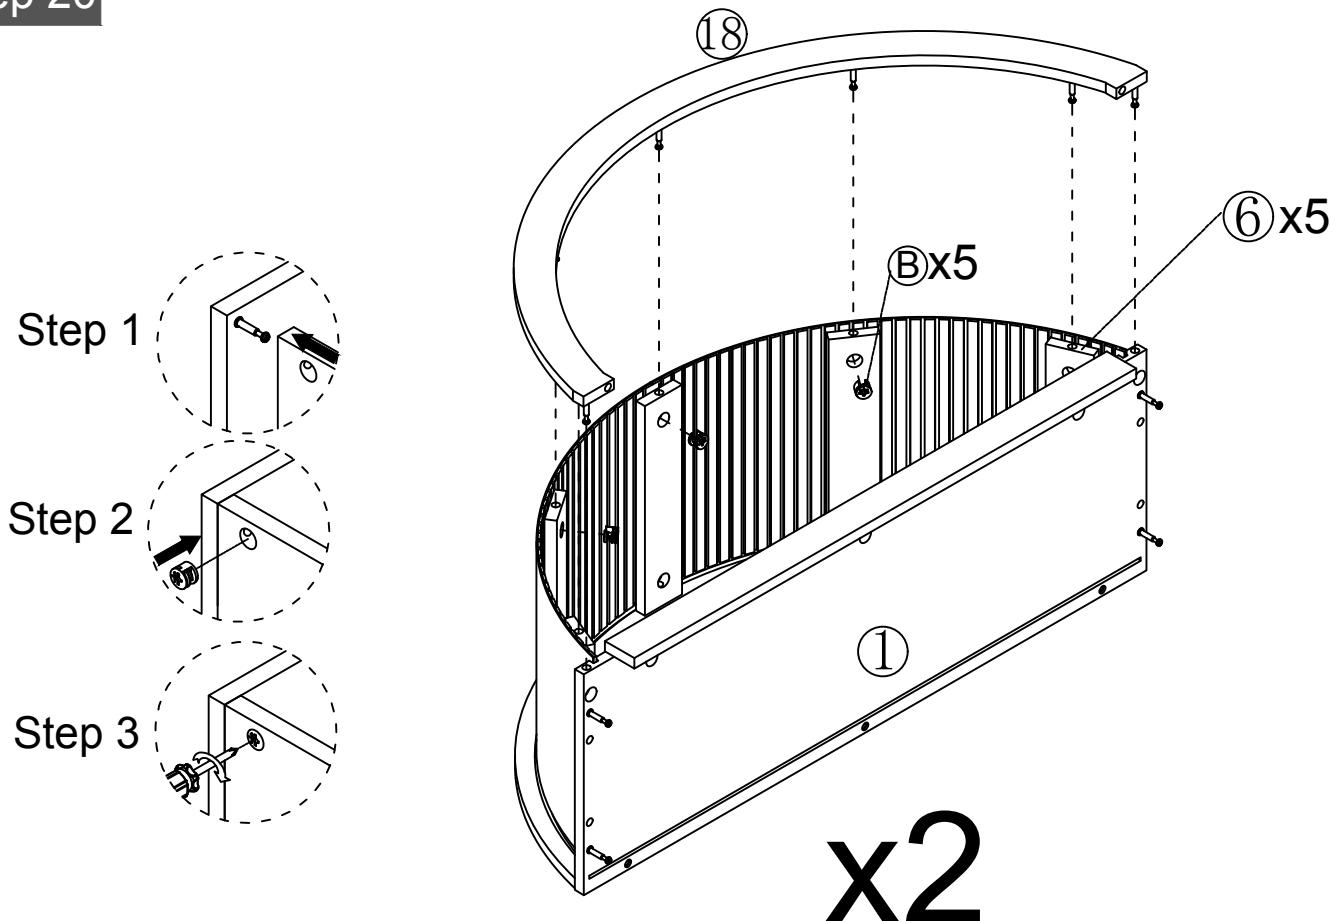

Assembly Instructions

Step 21

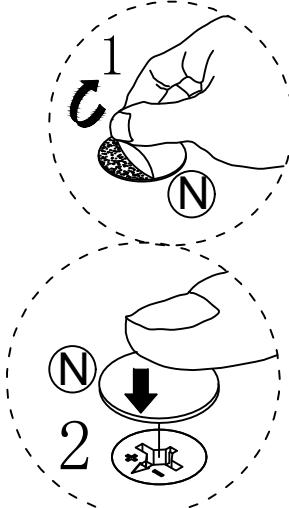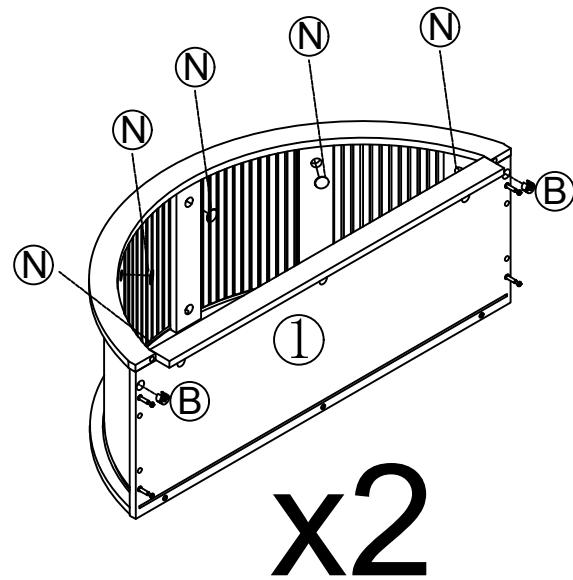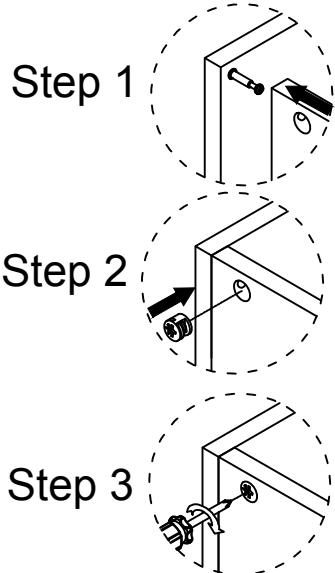


(B)





15*10mm Cam Lock x 4

(N)



Hole position sticker x 10



Step 22

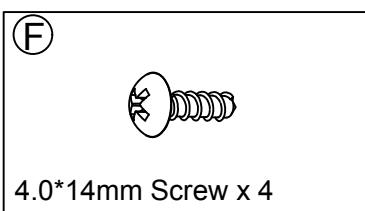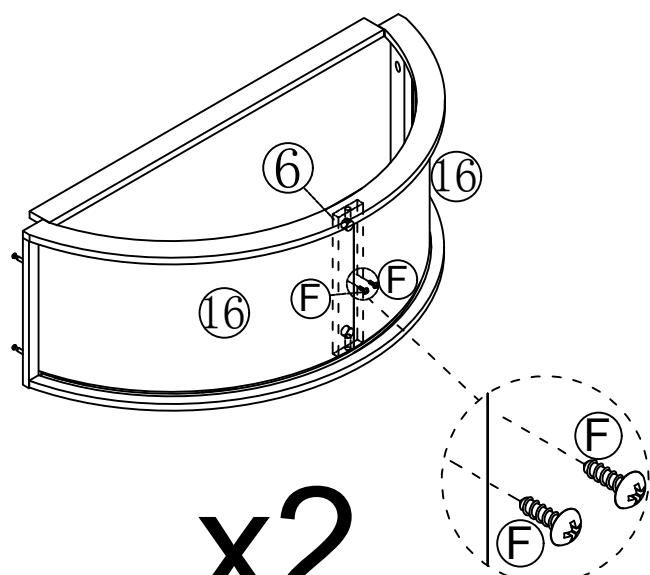

4.0*14mm Screw x 4



Assembly Instructions

Step 23

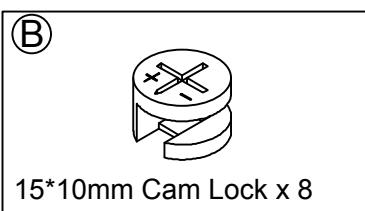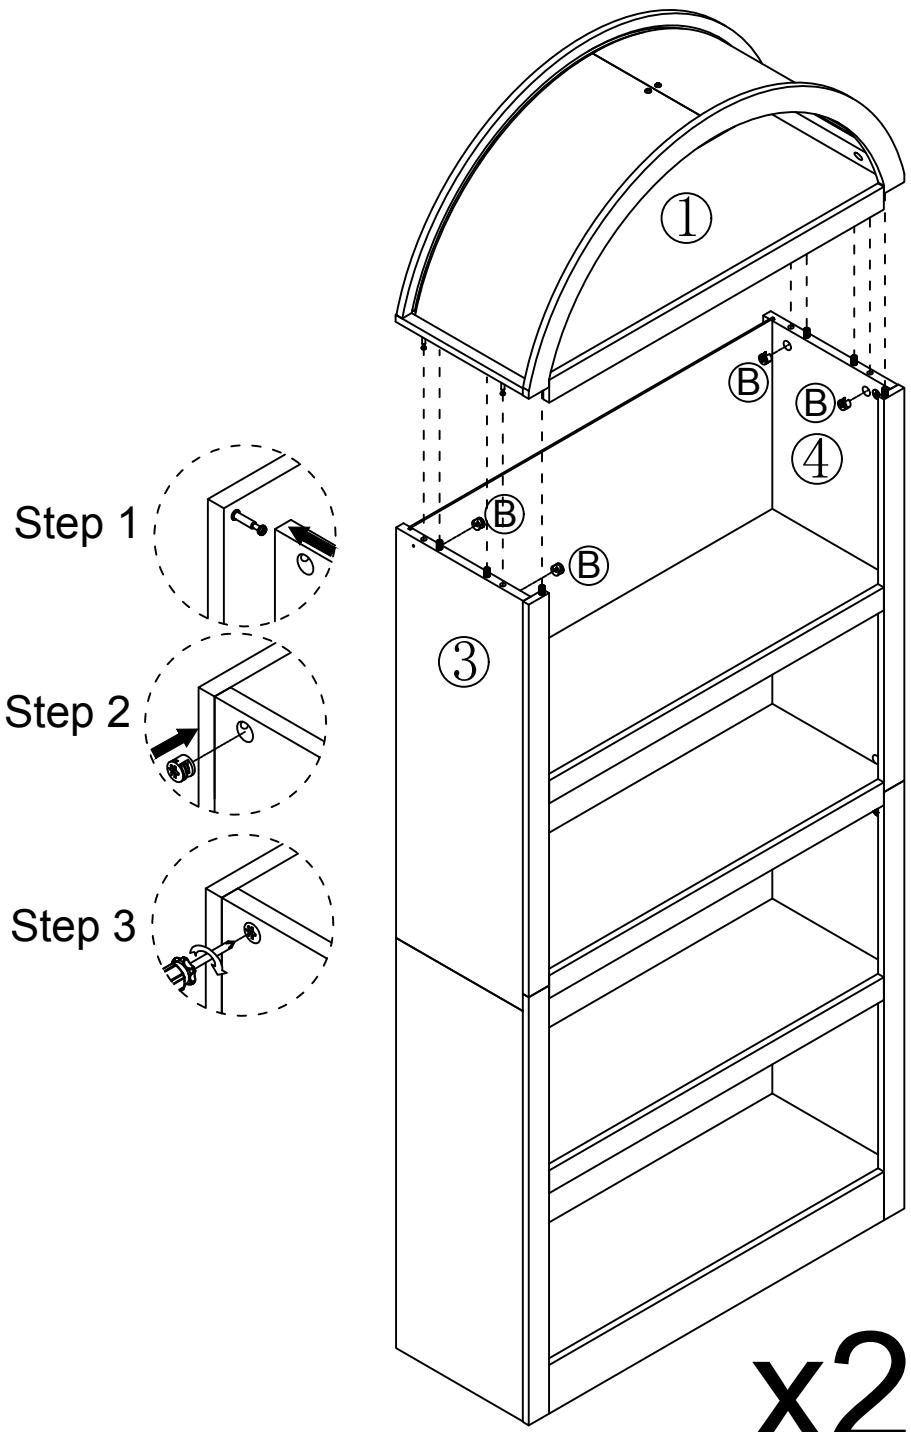



Assembly Instructions

Step 24

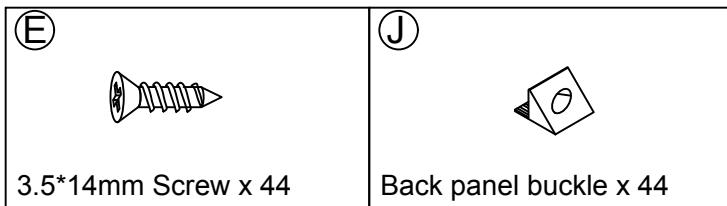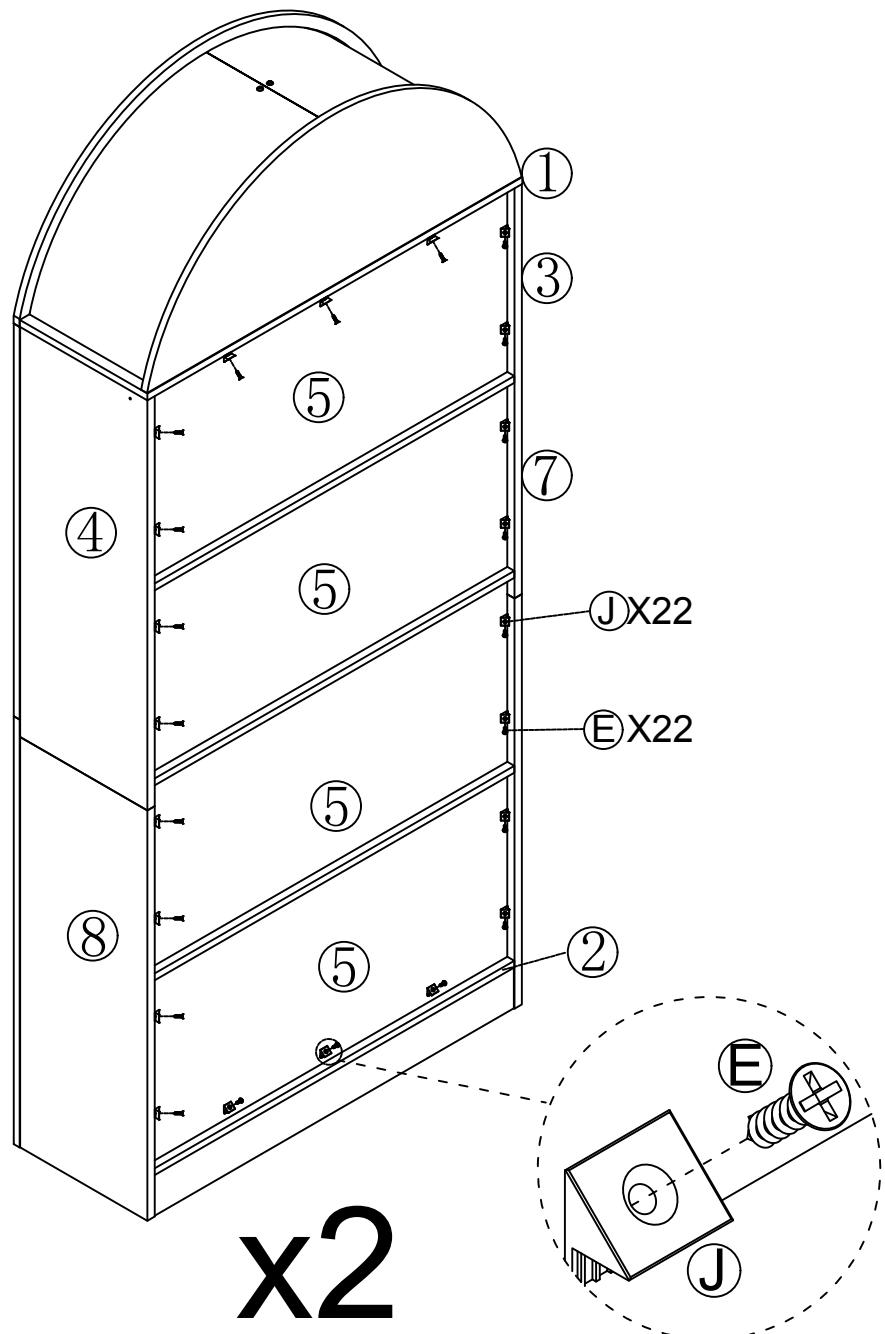


Assembly Instructions

Step 25

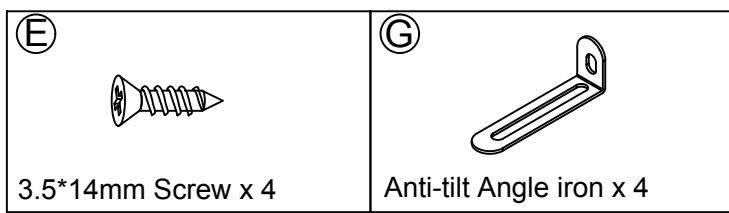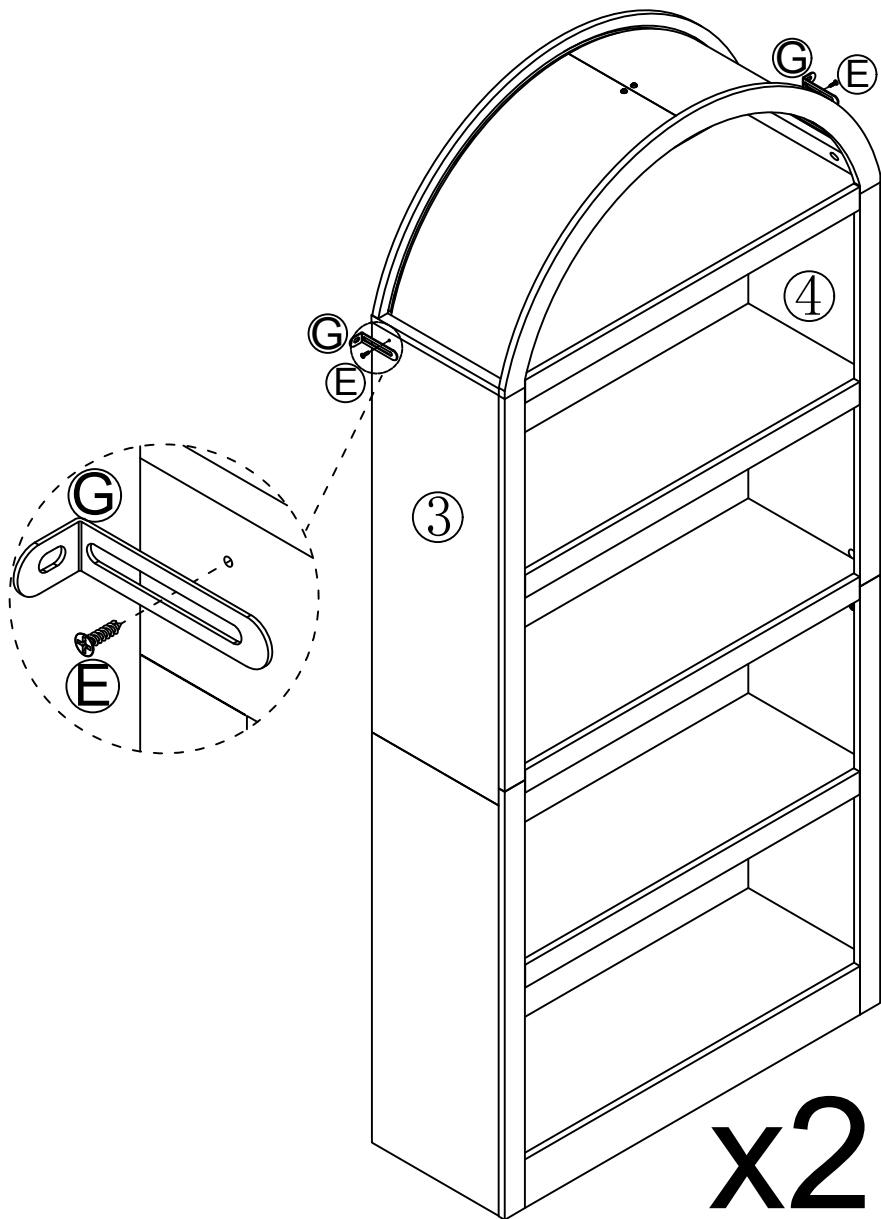



3.5*14mm Screw x 4

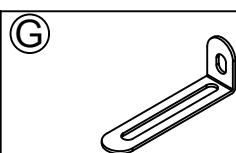

Anti-tilt Angle iron x 4

Assembly Instructions

Step 26

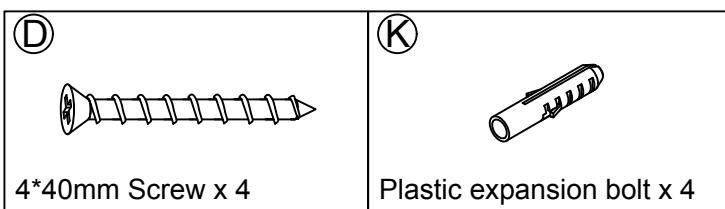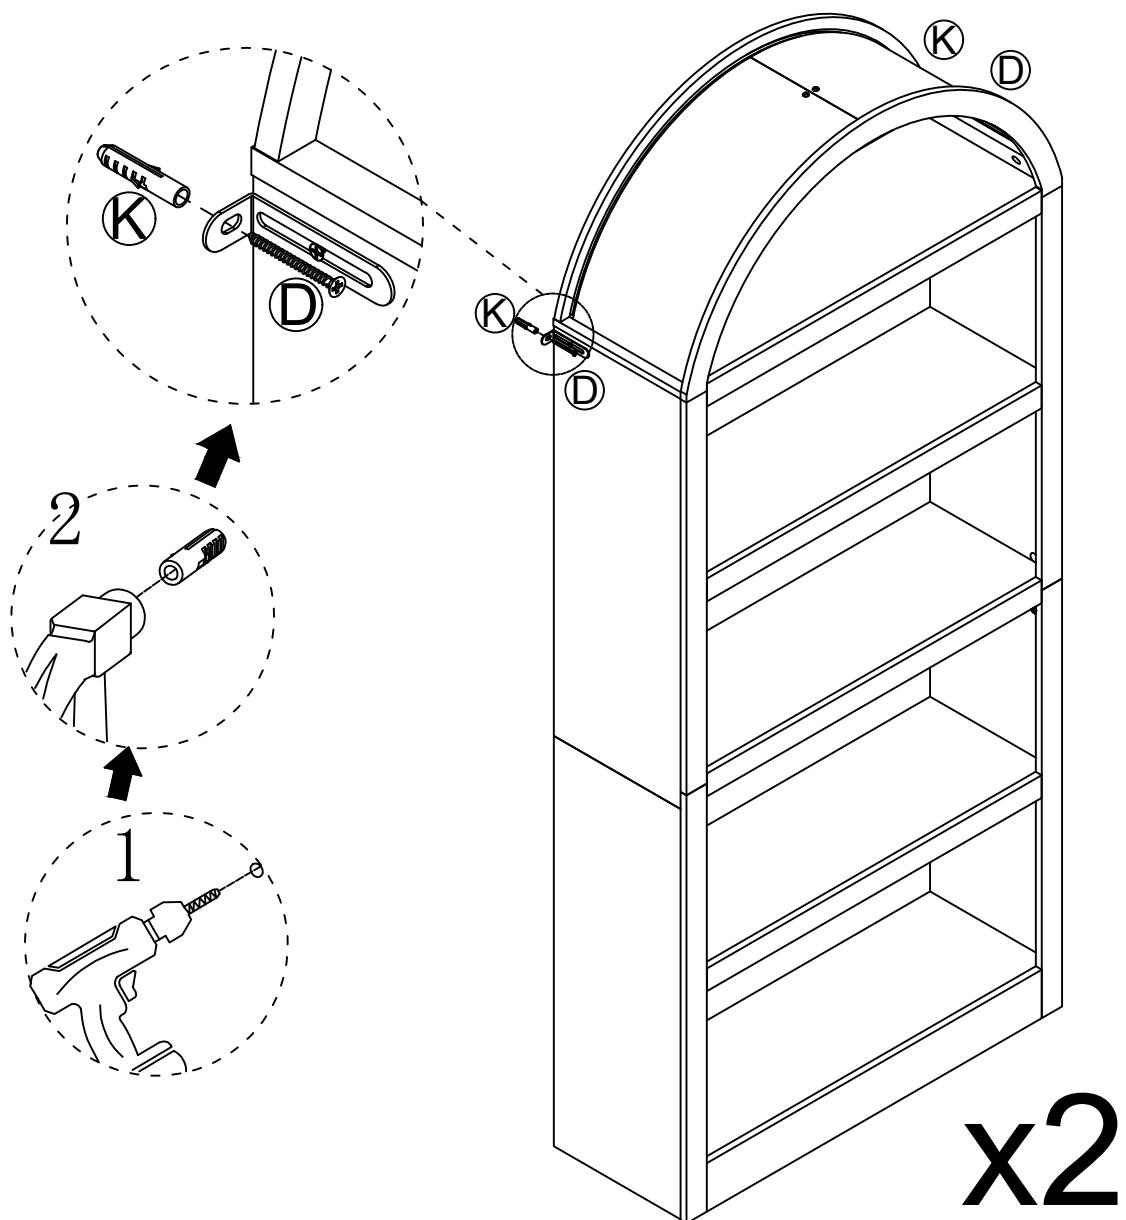

Assembly Instructions

Step 27

