


WALKER EDISON™

Writing Desk

SKU# WEPEN42OS1

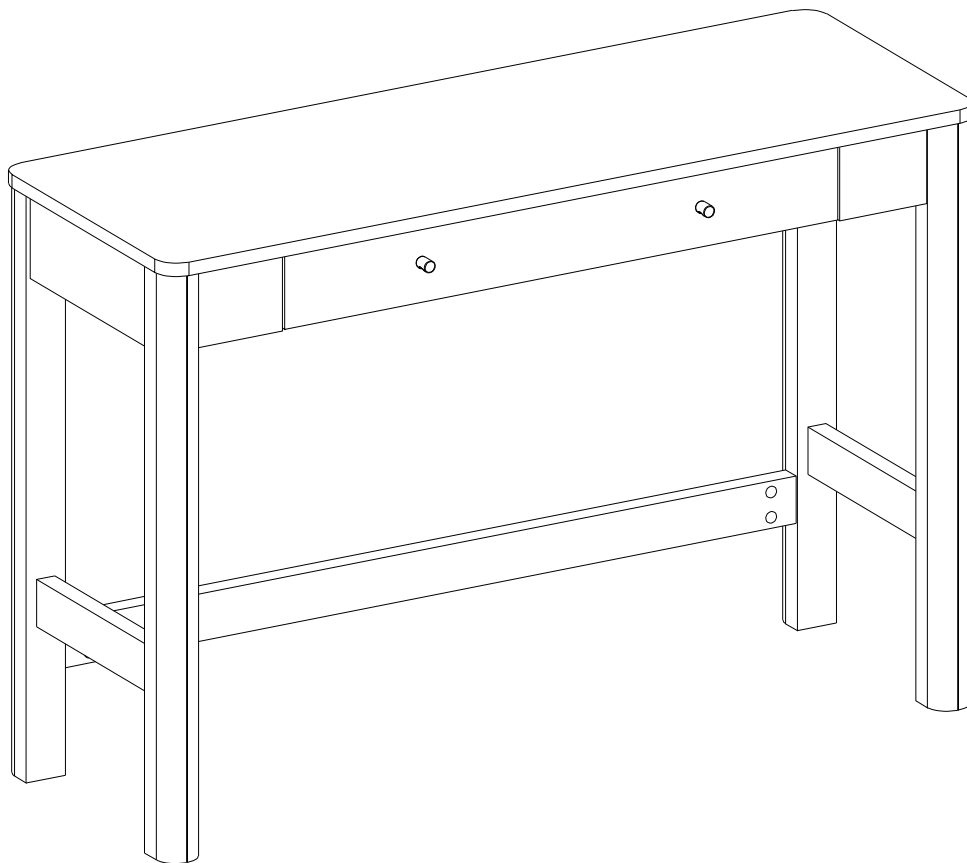

For Residential Use Only

Please visit our website for the most current instructions, assembly tips, report damage, or request parts. www.walkeredison.com



Time to get started


Set up a clean and soft workplace to get started and avoid damage during the assembly. It also helps to double-check that you've got all the pieces and parts before diving in to assembly.

Estimated time for assembly



People recommended for assembly


Make it a team effort! Grab a friend for quicker, easier assembly.

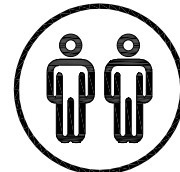

2 People Build


Tools Needed

Grab a Phillips head screwdriver to conquer this assembly

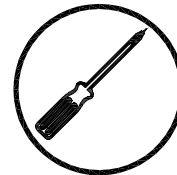

Use power tools with caution

You can cause cracking or damage to the material and easily strip the hardware. If you choose to use a power tool, your product will no longer be covered under Walker Edison's warranty.

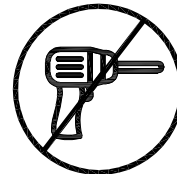


Glue is provided to secure wood dowels in place

When inserting dowels, locate the appropriate hole, place a small amount of glue in the hole, and then insert the dowel. Wipe away excess glue immediately.



Scan to get assembly tips and help!



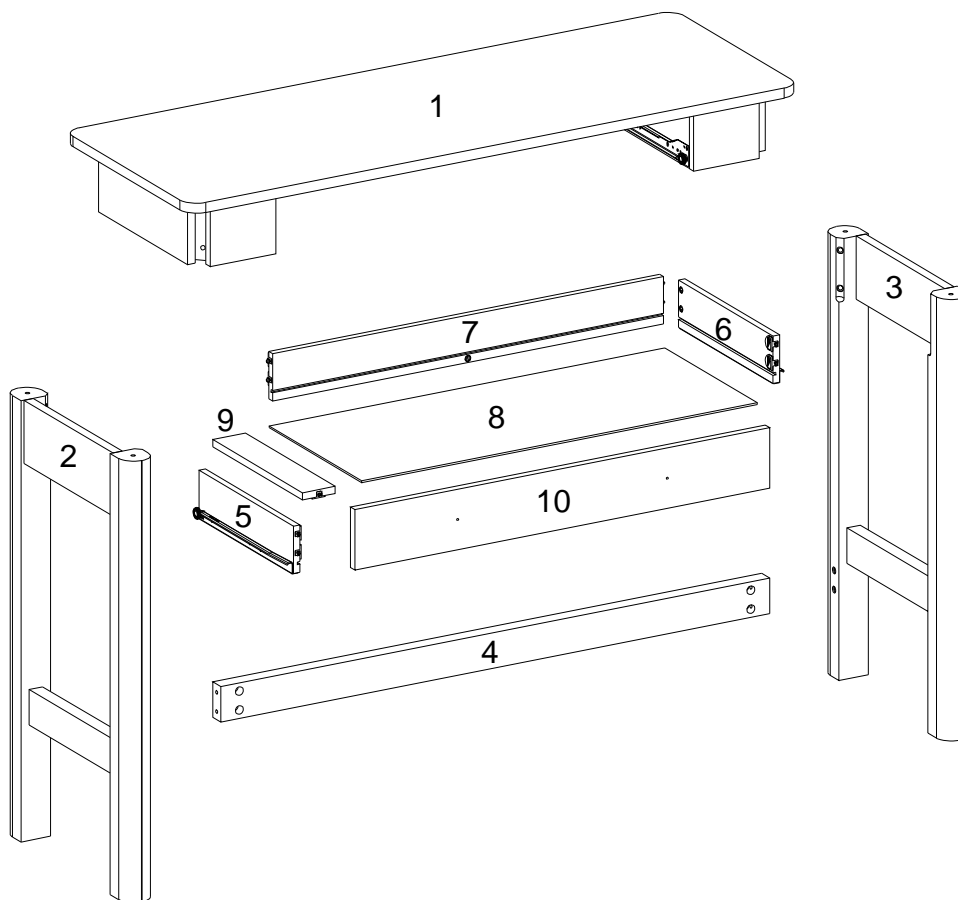









WE Parts List



Part Number	Description	Quantity
1	Desktop Panel	1
2	Left Side Panel	1
3	Right Side Panel	1
4	Support Panel	1
5	Drawer Left Side Panel	1
6	Drawer Right Side Panel	1
7	Drawer Back Panel	1
8	Drawer Bottom Panel	1
9	Base Cross Bar	1
10	Drawer Front Panel	1








Hardware List

Part	Size	Name	Quantity
A	 8x30mm	Wooden dowel	4
B	 6x51mm	Cam Bolt	4
C	 15x14mm	Cam Lock	4
D	 6x7mm	Cam Lock Nut	4
E	 30mm	Sticker	4
F	 6x55mm	Bolt	8
G	 6.5x11mm	Lock washer	8
H	 6.5x16mm	Washer	8
J	 M4	Hex key	1
K	 16x20mm	Handle	2
L	 5/32"x20mm	Handle Bolt	2
M		Glue tube	1

*The hardware quantities listed above are required for proper assembly.
Extra hardware pieces may be included.*

Step 1

Let's get started! Using a Phillips head screwdriver, screw the cam bolts (B) into the Left Side Panel (2) and the Right Side Panel (3). Then, insert wooden dowels (A) into the tops of both pieces.

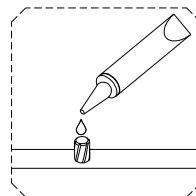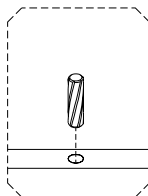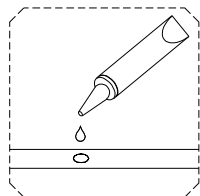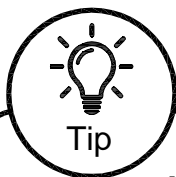
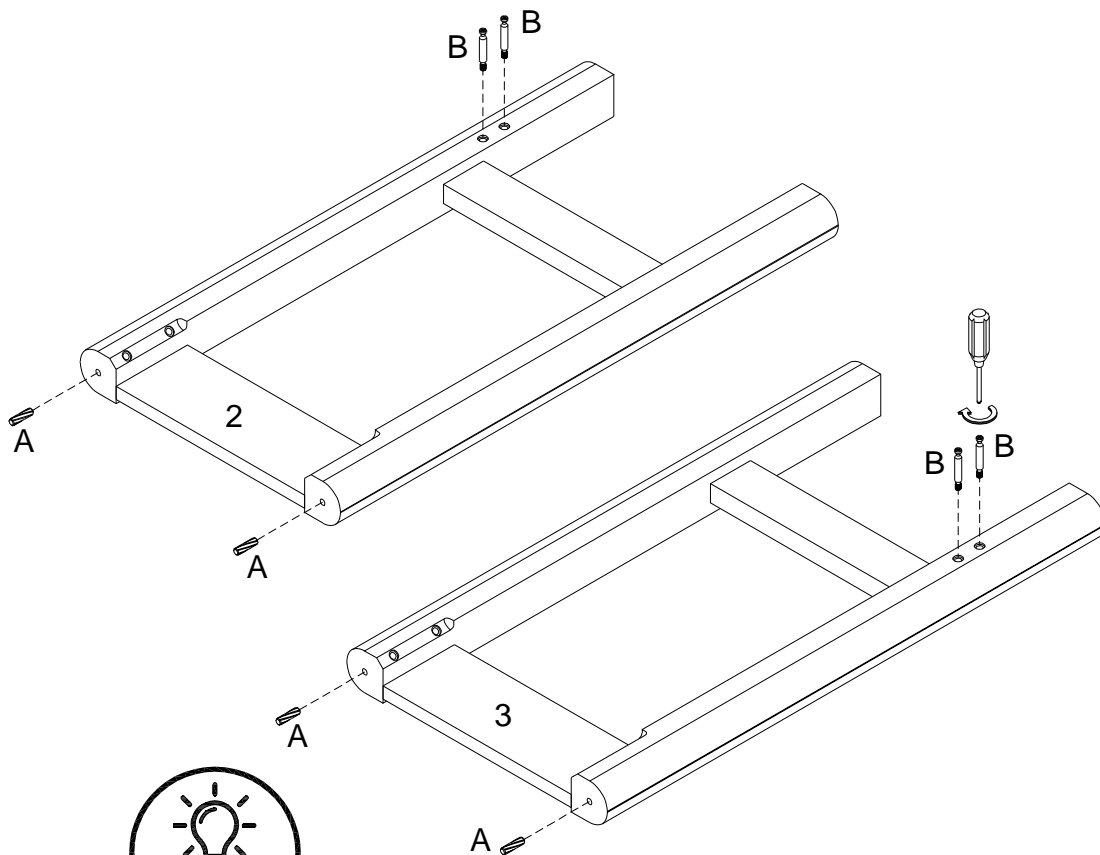


1: The provided glue is to secure wood dowels in place. When first inserting dowels, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately.

2: In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.

Step 2


Place cam locks (C) into the designated holes on the Support Panel (4). Attach the Support Panel (4) to the Left Side Panel (2) and the Right Side Panel (3) and secure with the cam lock nuts (D). Tighten with a screwdriver.

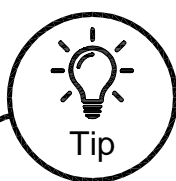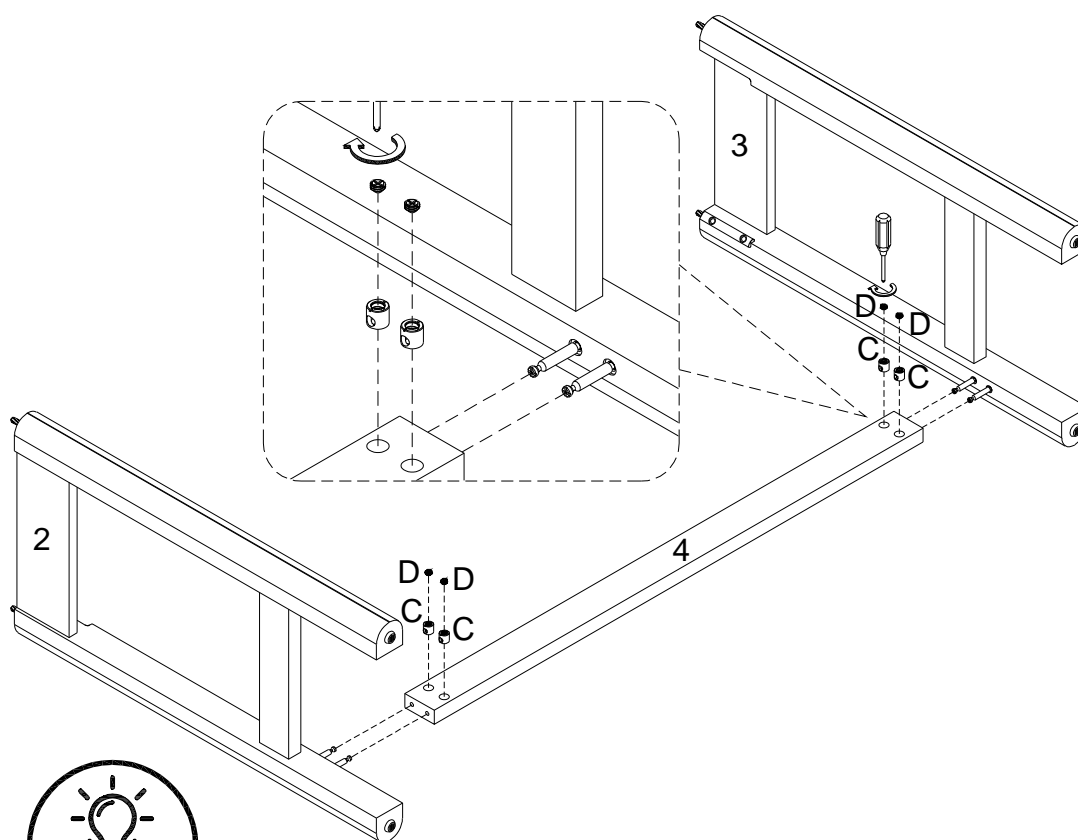


Tip

Cam Locks


Cam Locks help securely join two pieces together.
Follow these easy steps.

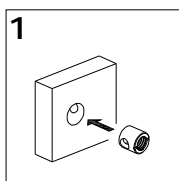

1: Place the Cam Lock into the designated hole.

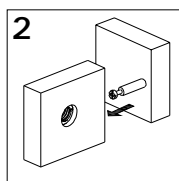


2: Join the two pieces by sliding the Cam Bolt into the hole on the side of the piece.

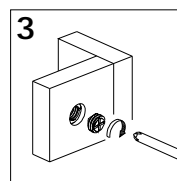

3: Insert the Cam Lock Nut and securely tighten it with a screwdriver.


Step 3

Next, attach the Desktop Panel (1) to the base using the wooden dowels in the Left Side Panel (2) and the Right Side Panel (3).

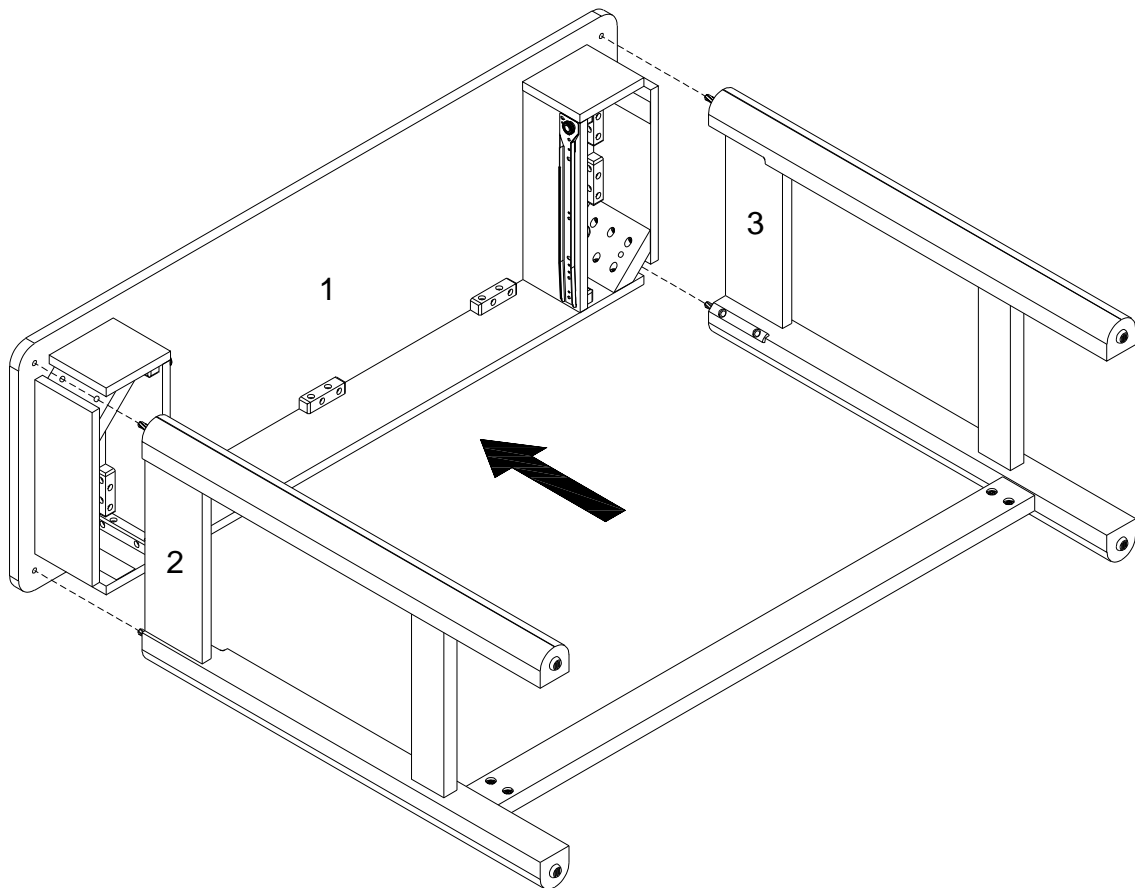


Step 4

Secure the base to the Desktop Panel (1) using the (F) bolts, lock washer (G), and washer (H). Tighten with the provided hex key (J). Repeat this step for all four corners.

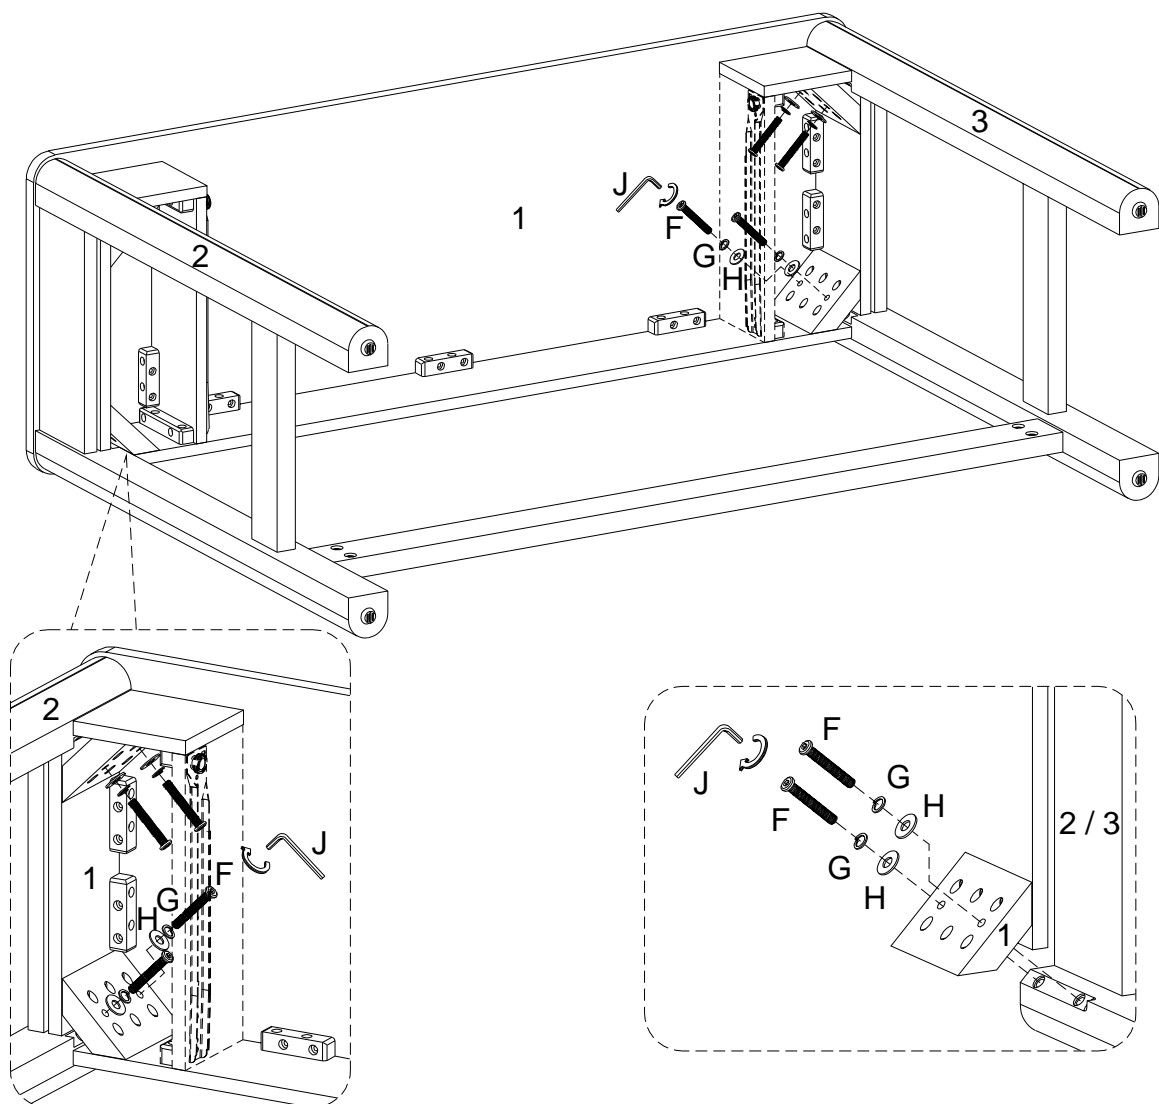


Step 5

Use the provided stickers (E) to ensure a clean finish.

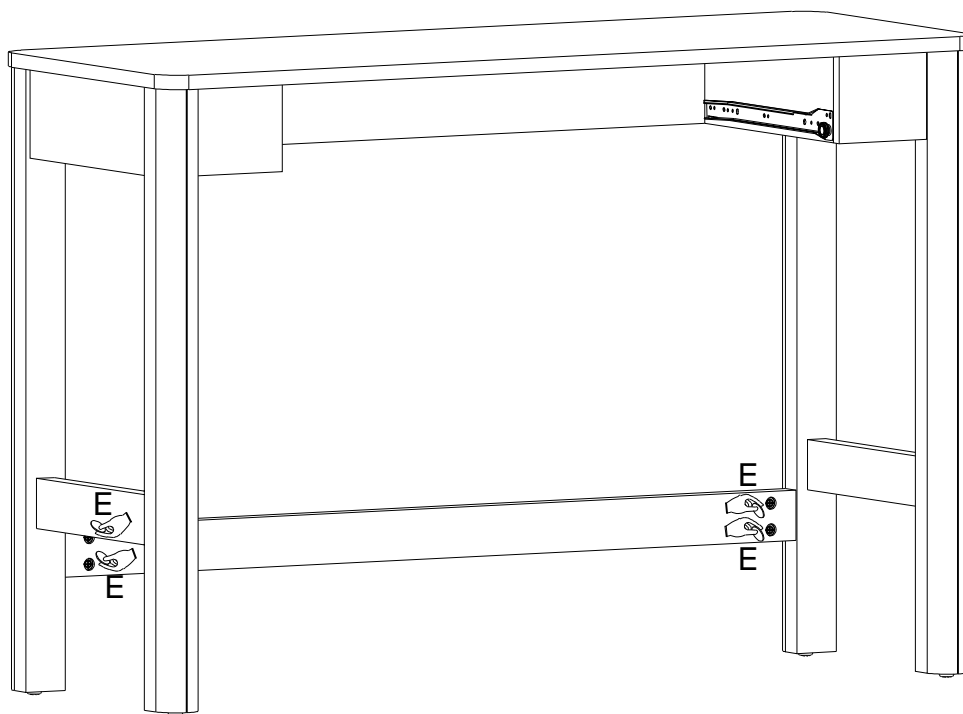



Step 6

Attach the Handles (K) to the Drawer Front Panel (10) using the handle bolts (L).

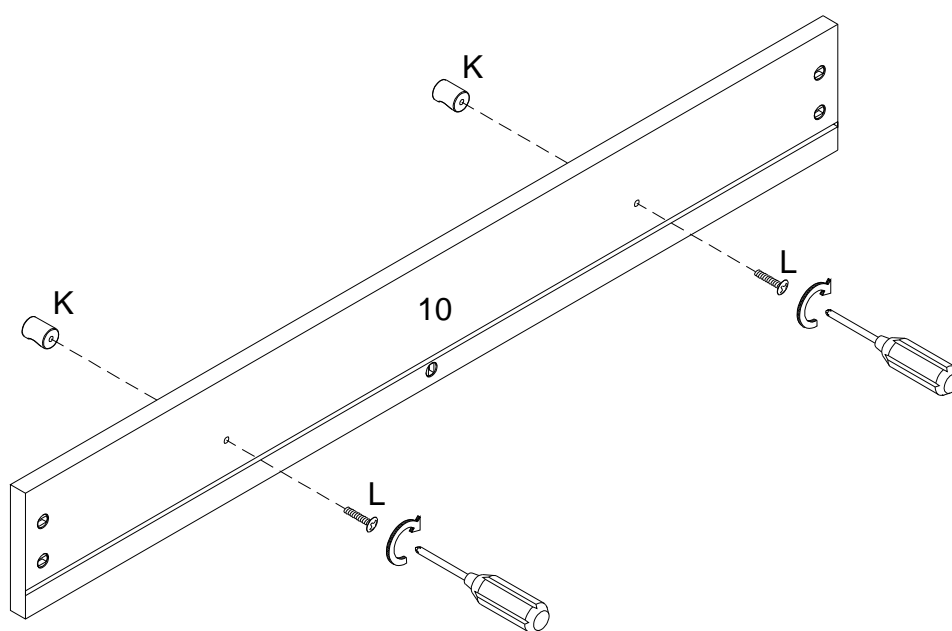


Step 7


Secure the Drawer Right Side Panel (6) and Drawer Left Side Panel (5) to the Drawer Back Panel (7) using the quick assembly mechanism.

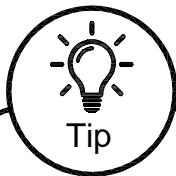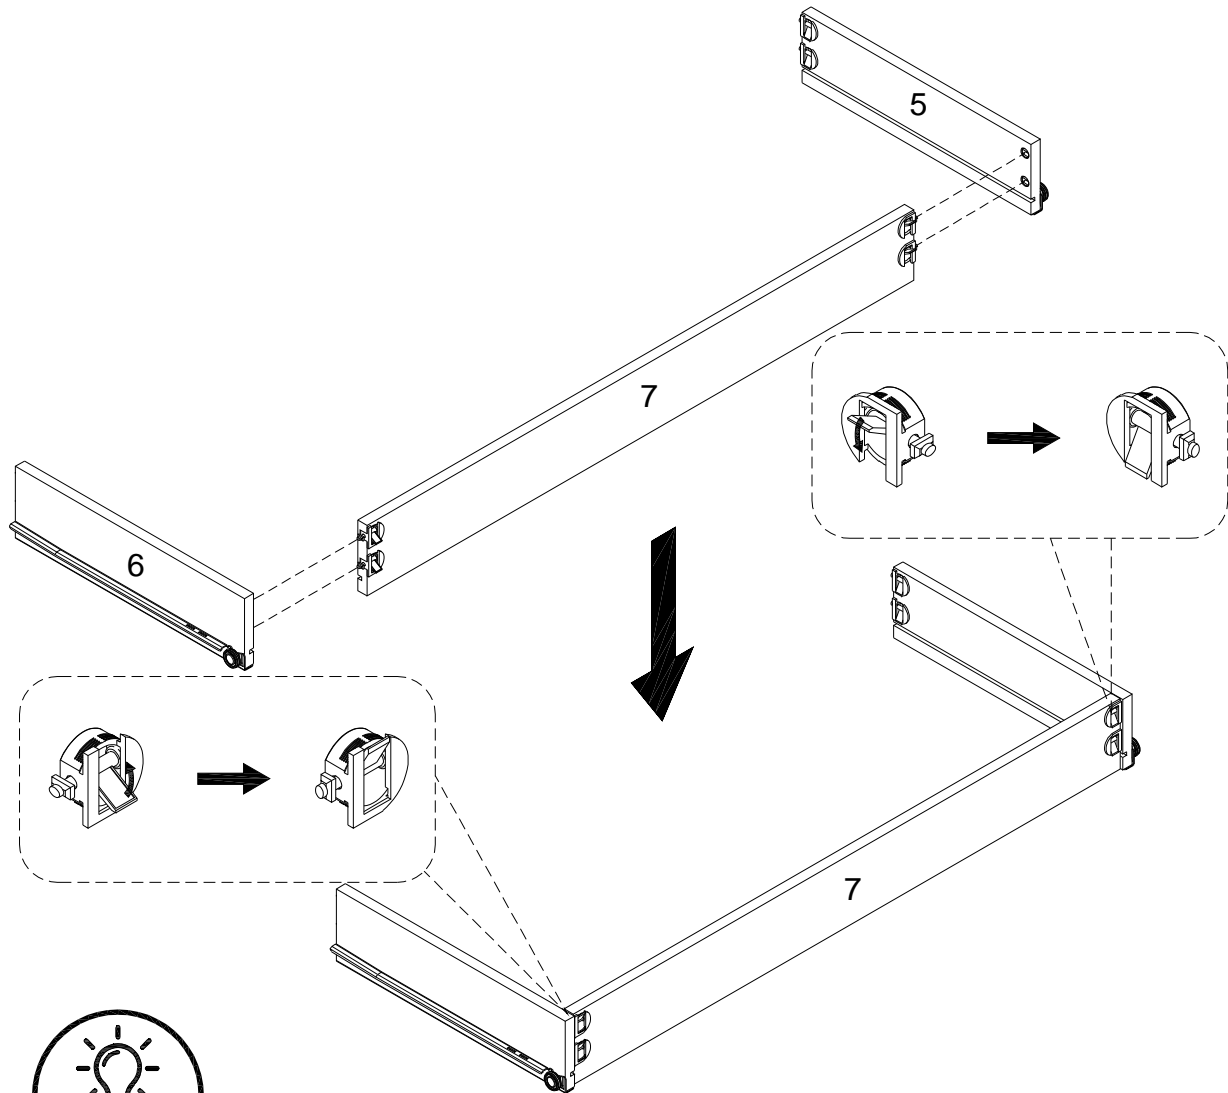

Quick Assembly Drawers

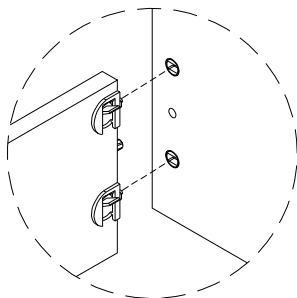


1. Make sure the quick assembly drawer pin is aligned with the corresponding hole.

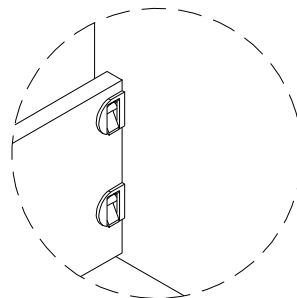

2. Once the pin is inserted correctly, flip the metal lever in the opposite direction to ensure the panels are firmly locked together.


Step 8

Secure the Base Cross Bar (9) to the Drawer Back Panel (7).

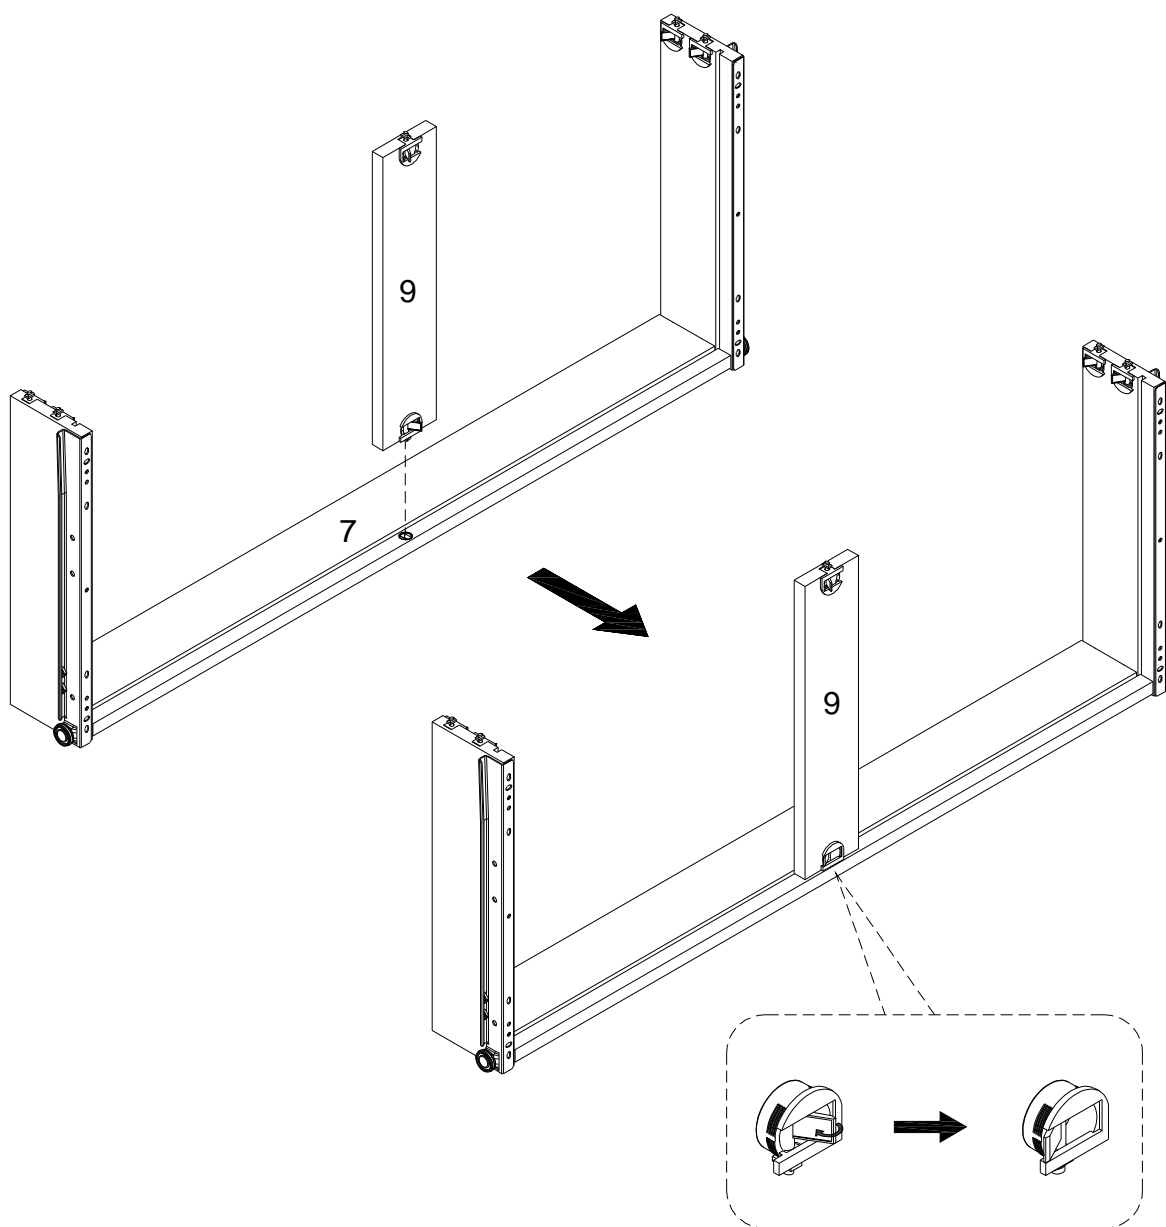


Step 9

Next, slide the Drawer Bottom Panel (8) in, using the grooves as a guide.

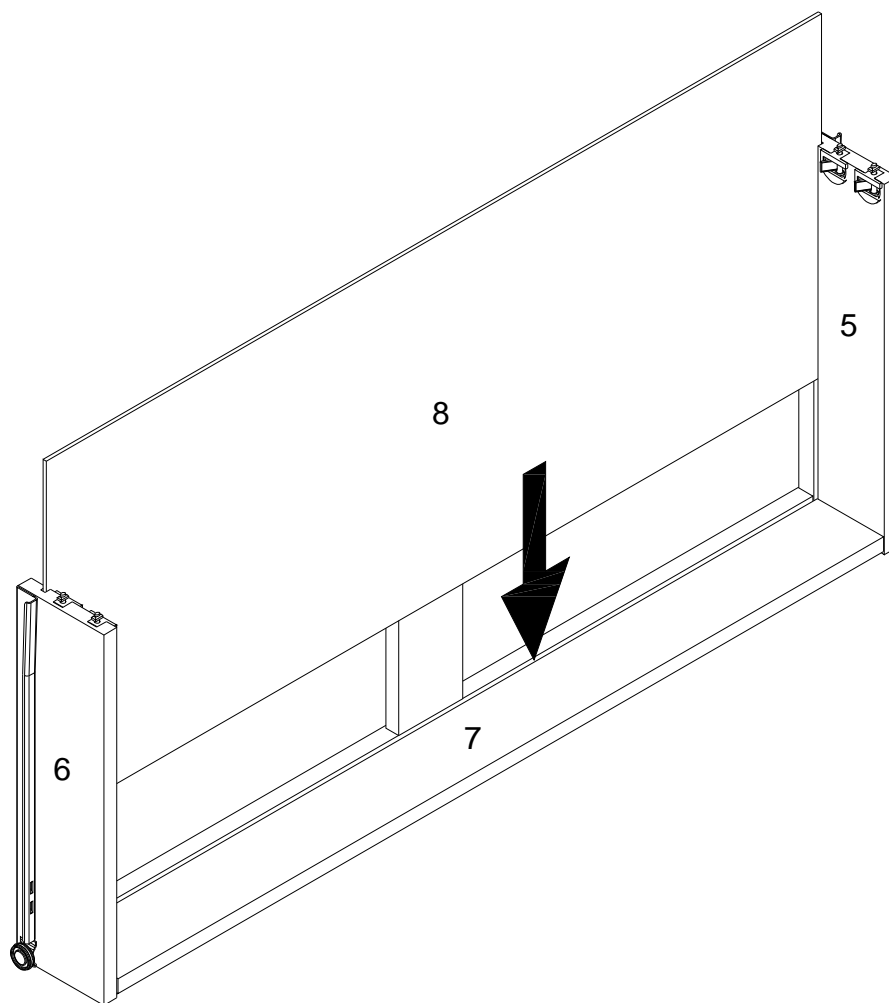


Step 10

Attach the Drawer Front Panel (10) to the drawer and secure with the quick assembly mechanism.

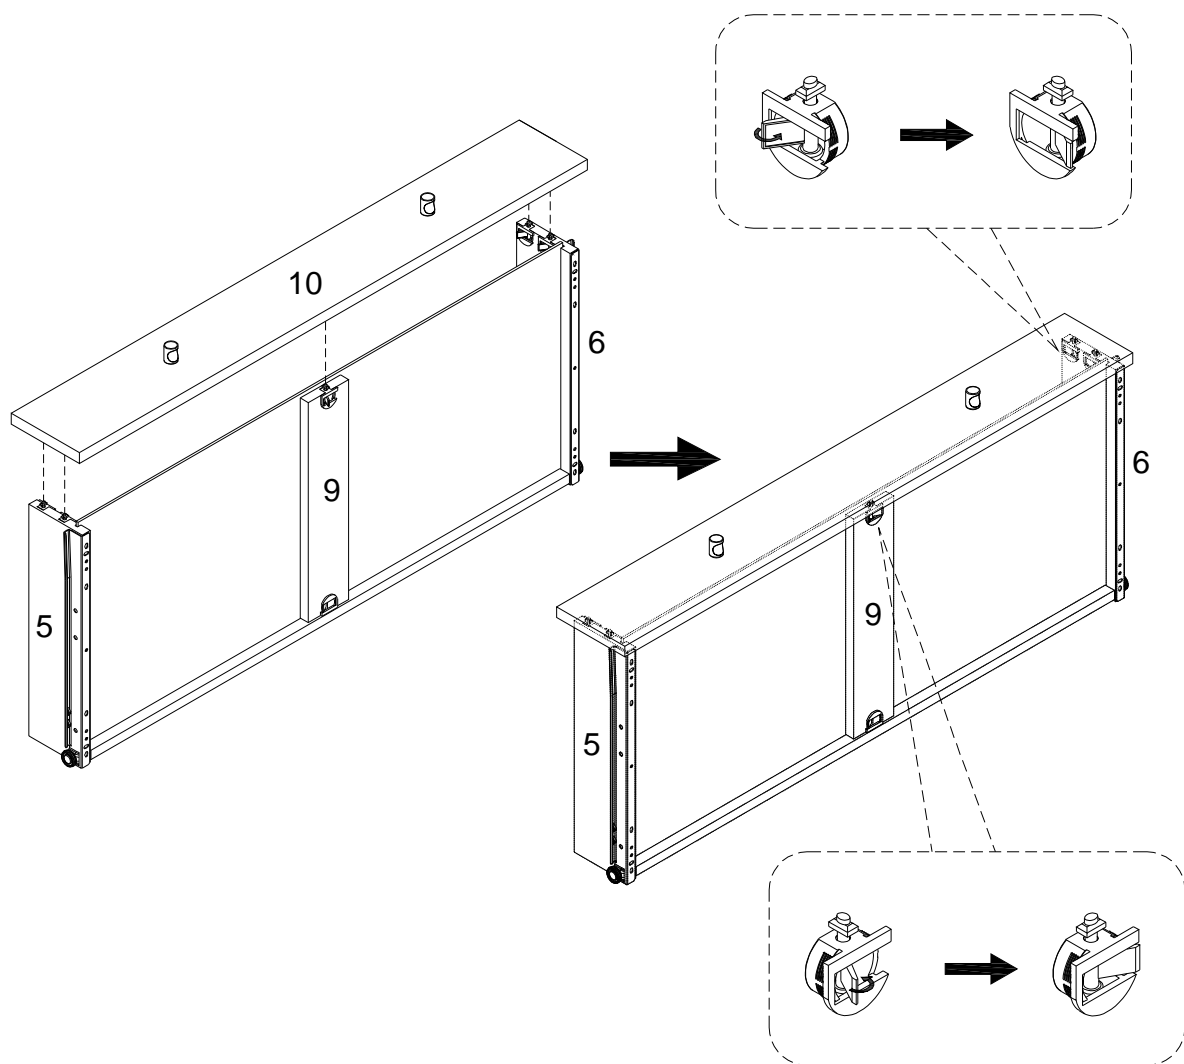


Step 11

Firmly push the drawer all the way into place, making sure the wheel on the drawer member goes over the wheel on the cabinet member. Some resistance is normal.

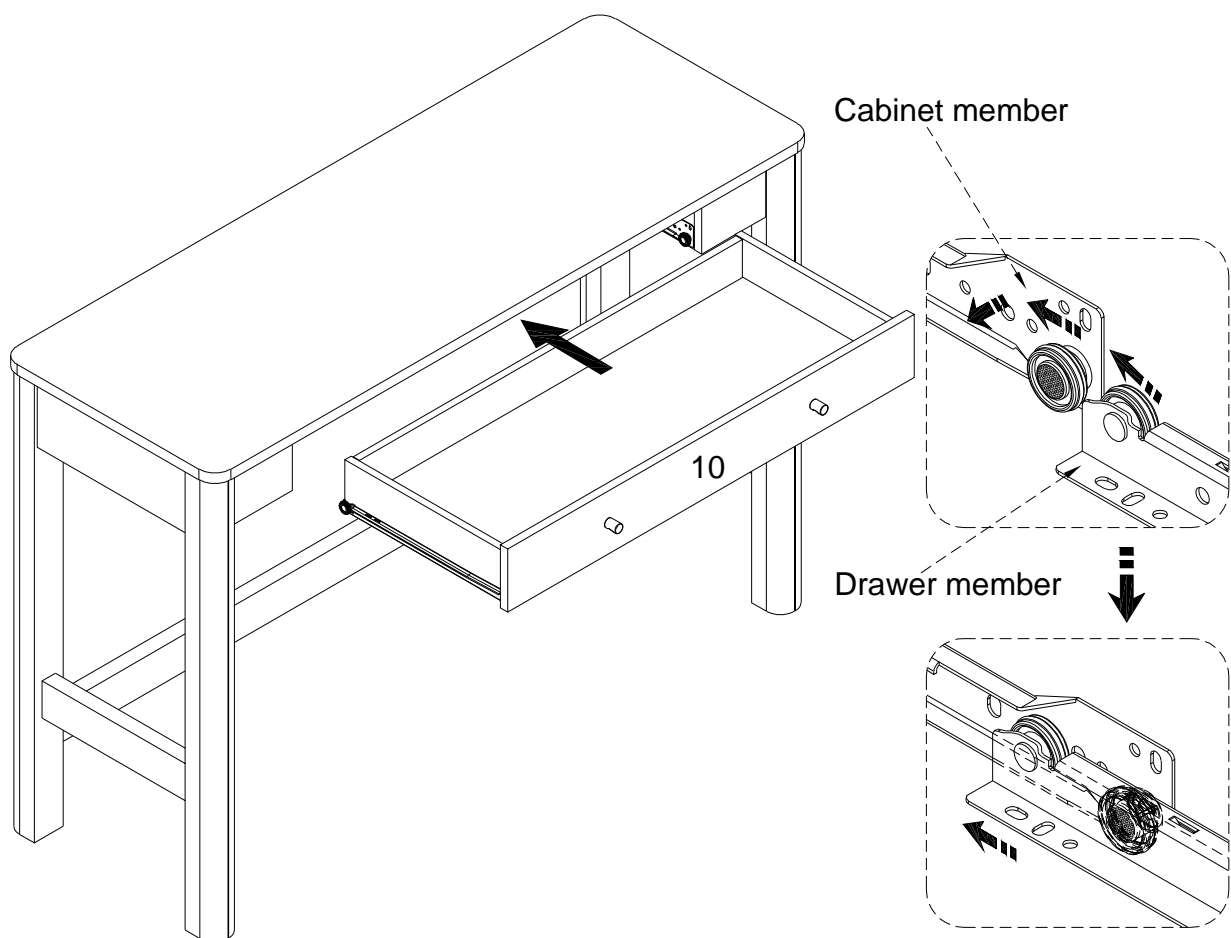


Step 12

Adjust foot to keep furniture level with the floor.

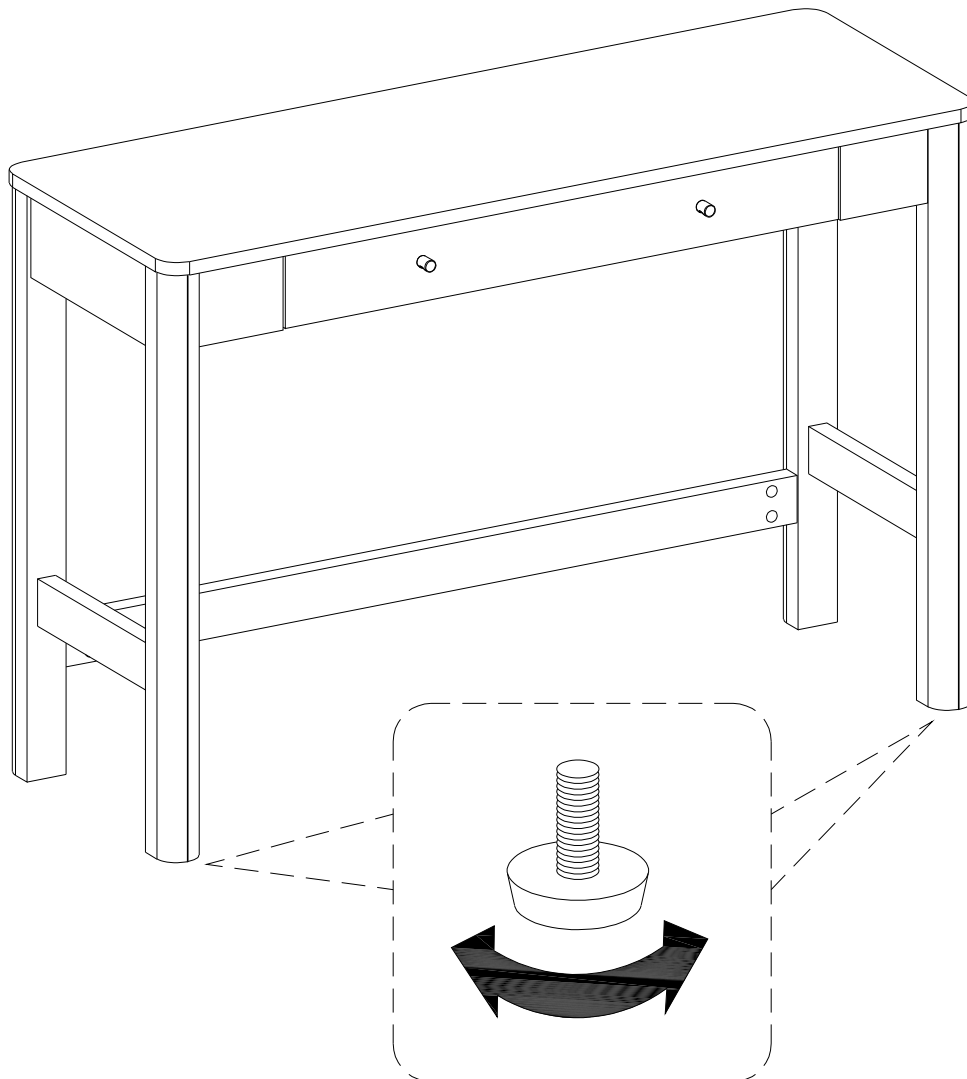

Final Assembly

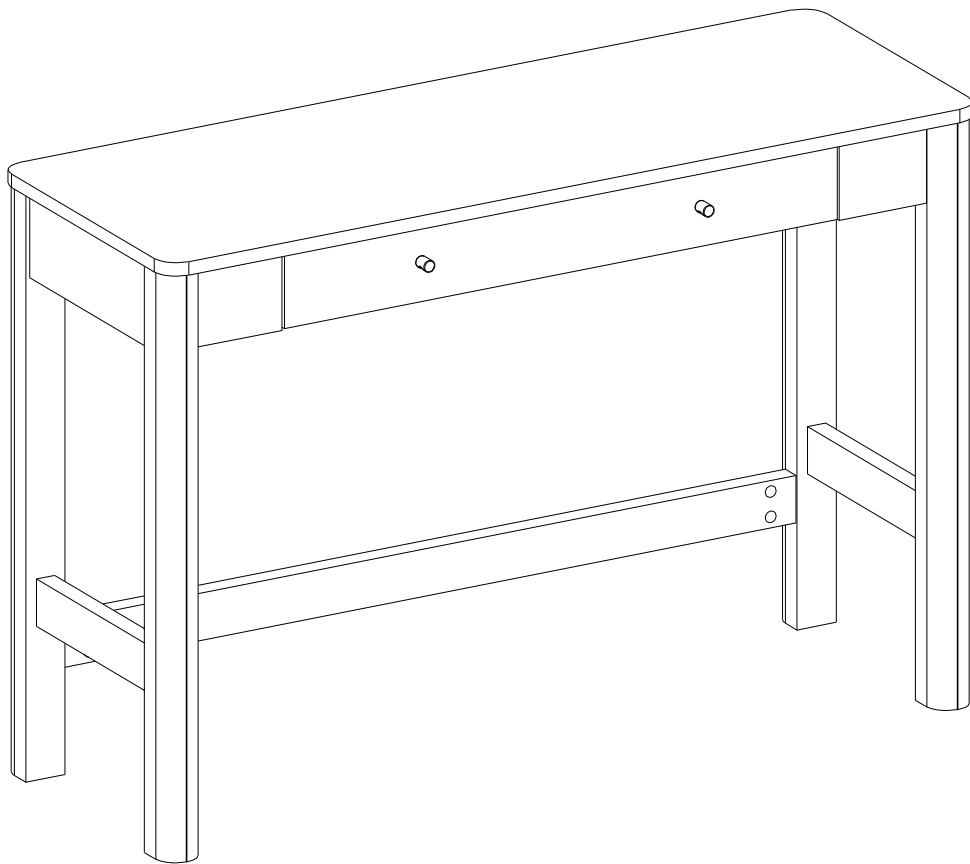

Congratulations on your new piece of furniture!

We would love to hear about it and see it.
Please leave us a review or post a picture with
[#mywalkeredisonhome](#)

Assembling furniture can be tricky sometimes.

Our customer service team, located in Utah, is here for product information, help assembling a product, or for any other customer support issue

Call us at **801-433-3008**

Email us at service@walkeredison.com

Visit our Customer Service website at
walkeredison.com/pages/customer-service

We are available to help Monday -Thursday 8am-5pm, Friday
8am-3pm MST

For details on Assembly Videos, Assembly Instructions,
Replacement Parts, and Customer service,

SCAN HERE

