


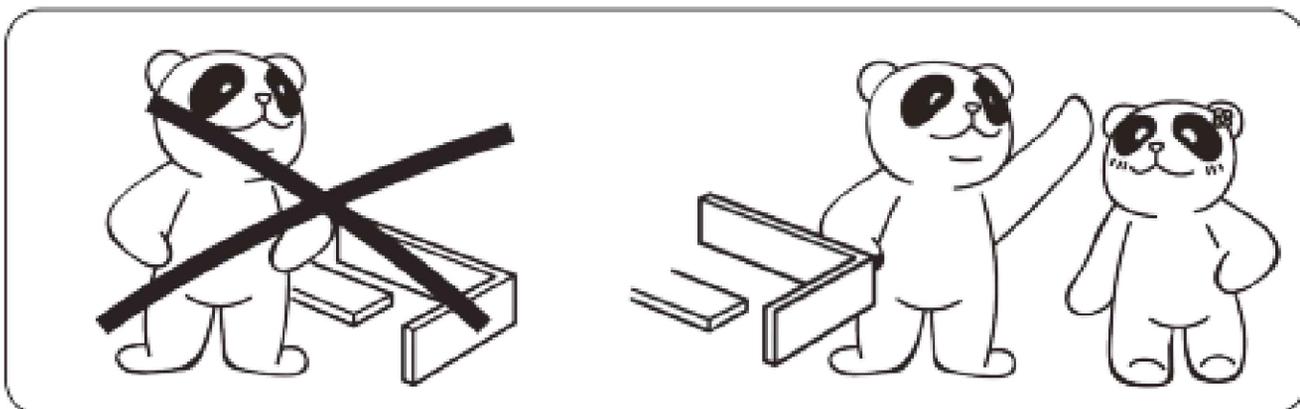
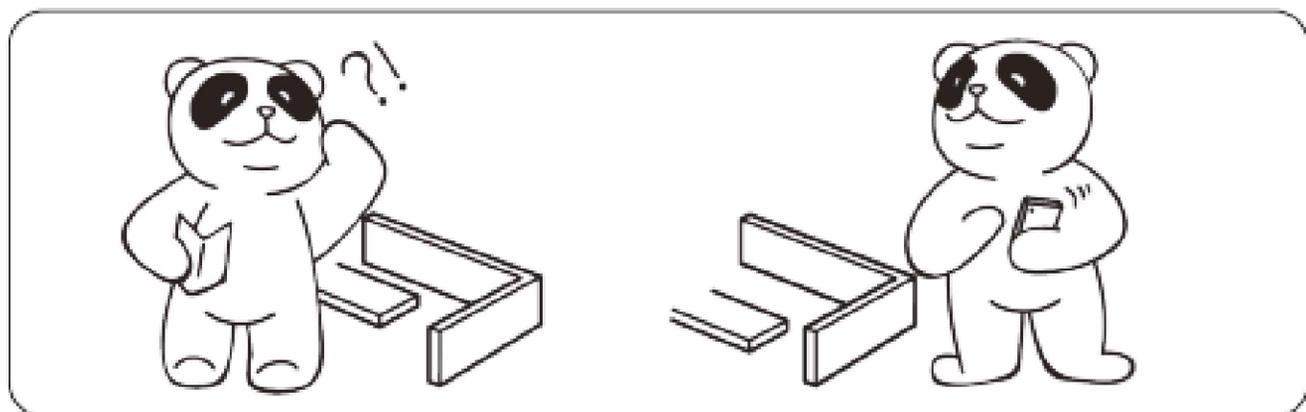
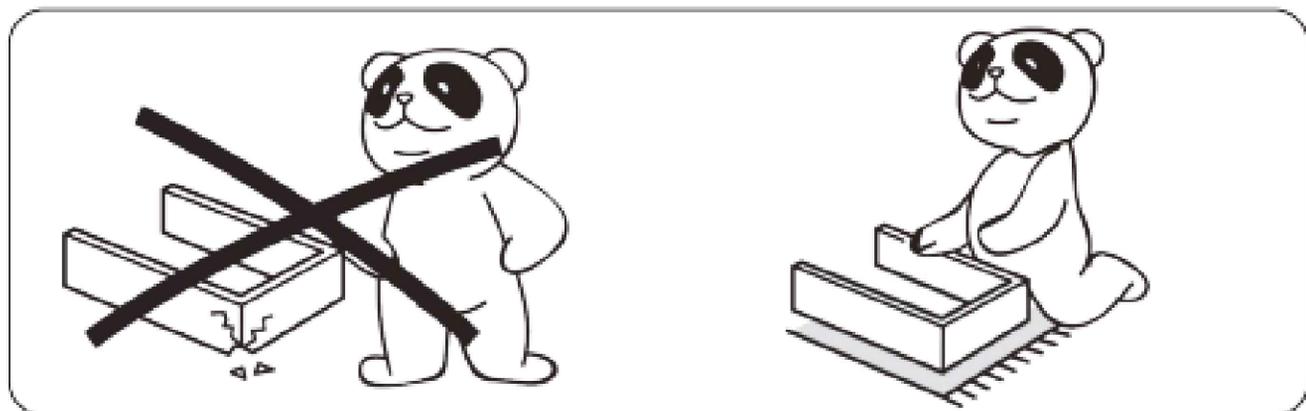


A	 M5*40mm	51	B	 M6*15mm	4	C	 M6*25mm	18
D	 M6*28mm	35	E	 M6*60mm	2	F	 M6	9
G	 M6*40mm	13	H	 M6	2	I	 M6*50mm	3
J	 M4*14mm	4	K	 M4*18mm	8	L		2
M	 M4*10mm	13	N	 M6*40mm	8	O	 15cm	2
P	 1.0	8	Q	 ∅6*M4*20mm	4	R	 23cm	2
S		4	T		1	U		1
V		1	W	 M6	1	X	 M4	1
Y	 M6	1	Z		1	a	 M4	32
b		1	c	 M4	1	d	 M4*28mm	32
e		1						

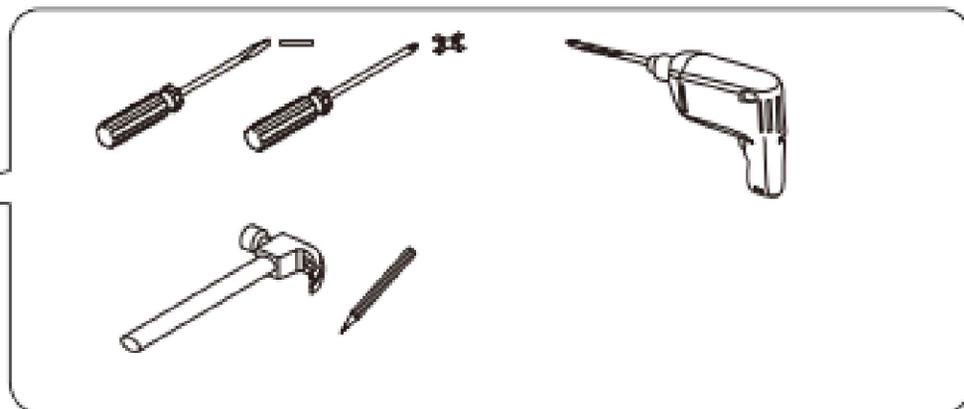

Note:


1. Should be assembled on flat ground to keep balance.
2. Before completing the installation, do not tighten the screws.

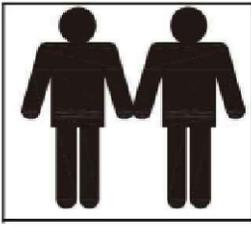

It needs at least two people to install.




Before starting the assembly, you must read the whole manual and follow the instructions

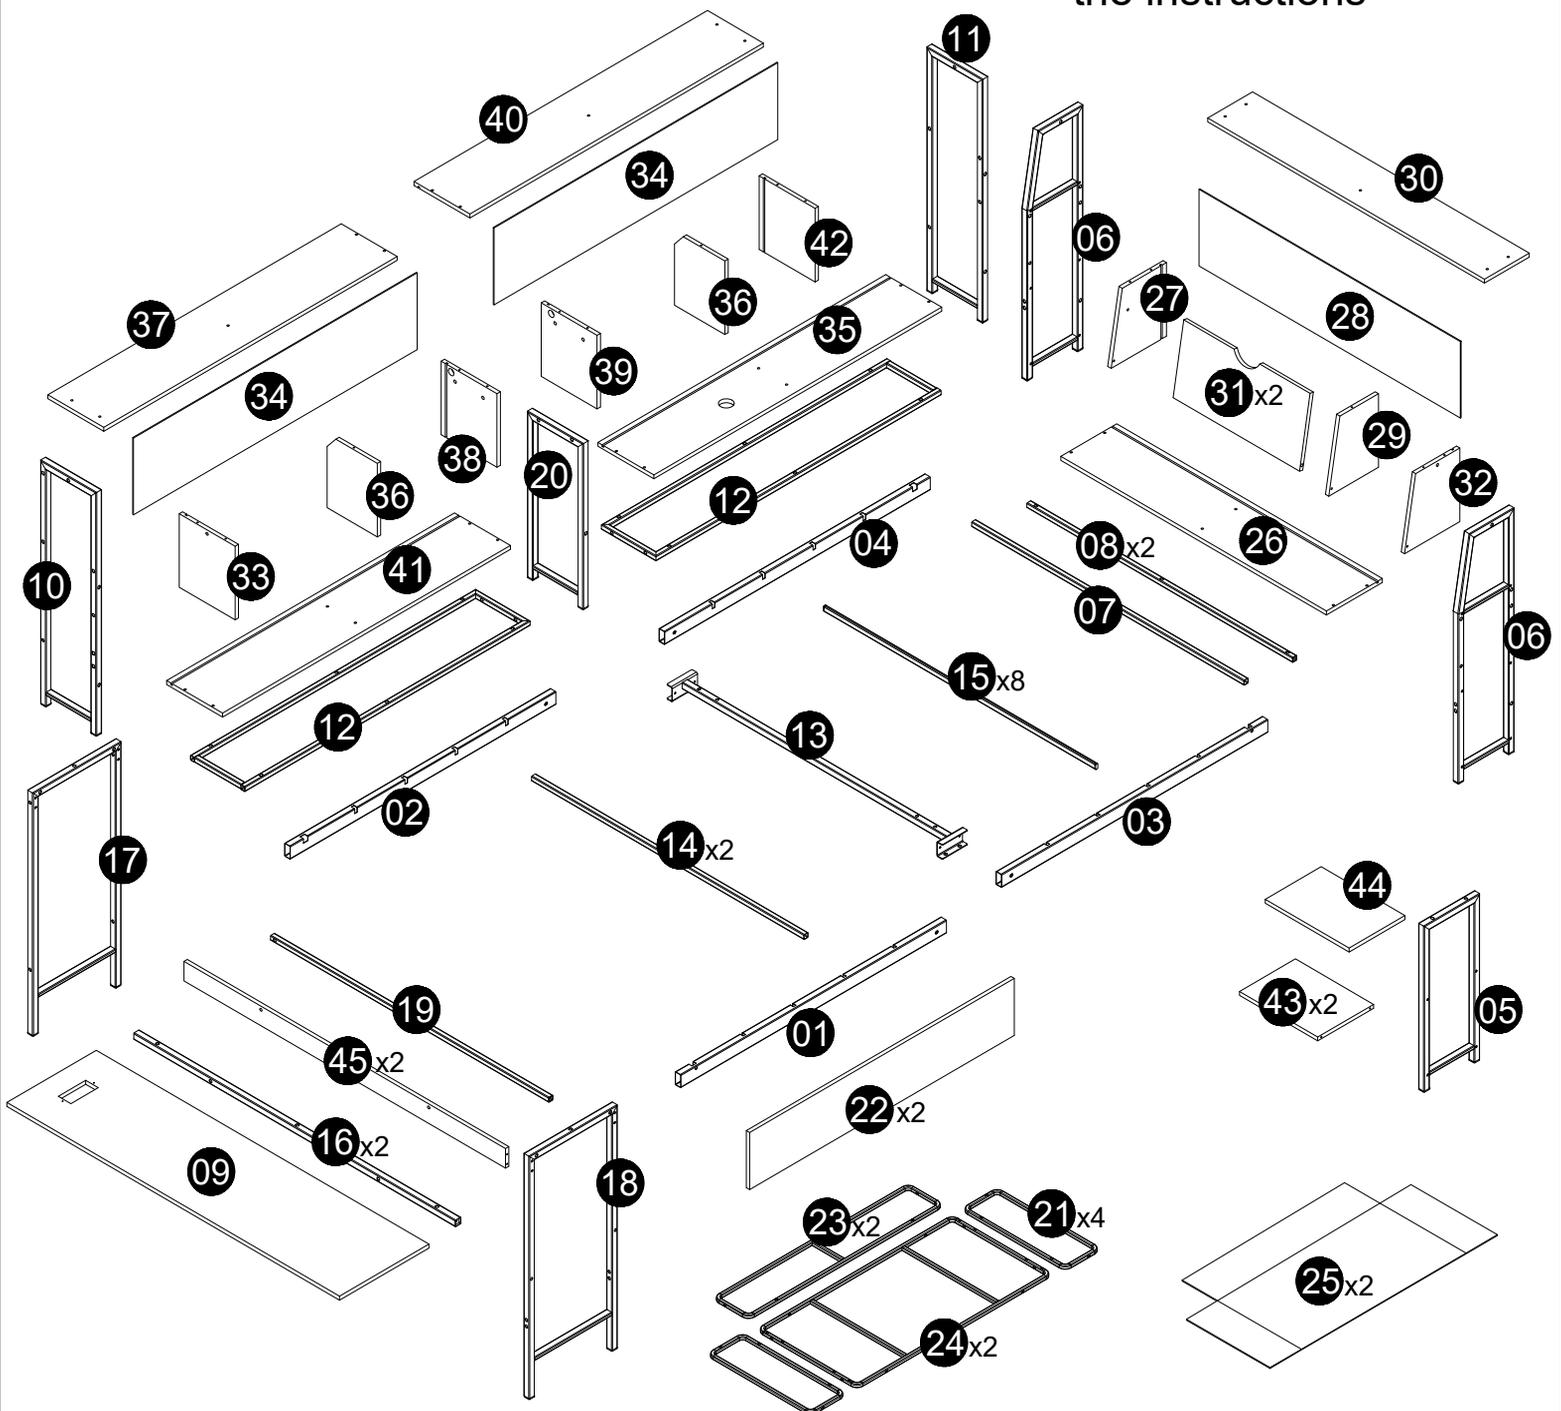


1

L		2pcs
M	 M4*10mm	4pcs

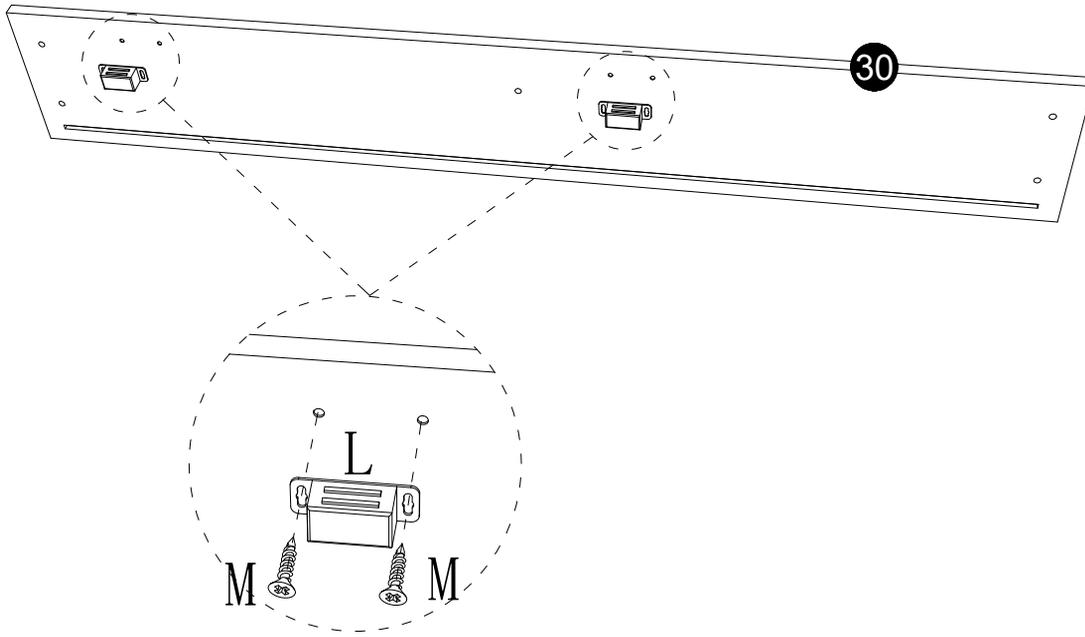


2

L		2pcs
M	 M4*10mm	4pcs

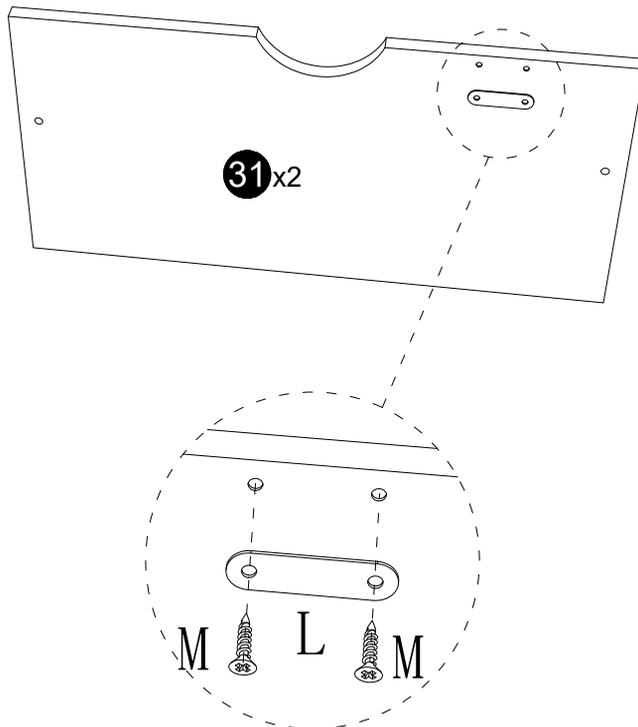


3

A  M5\*40mm 6pcs

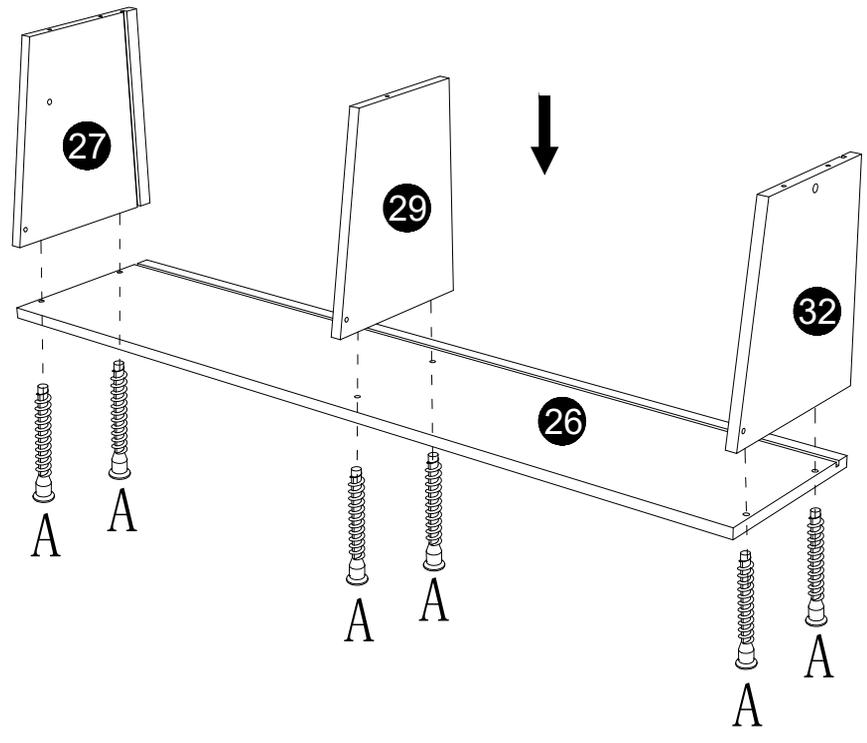


4

A  M5\*40mm 5pcs

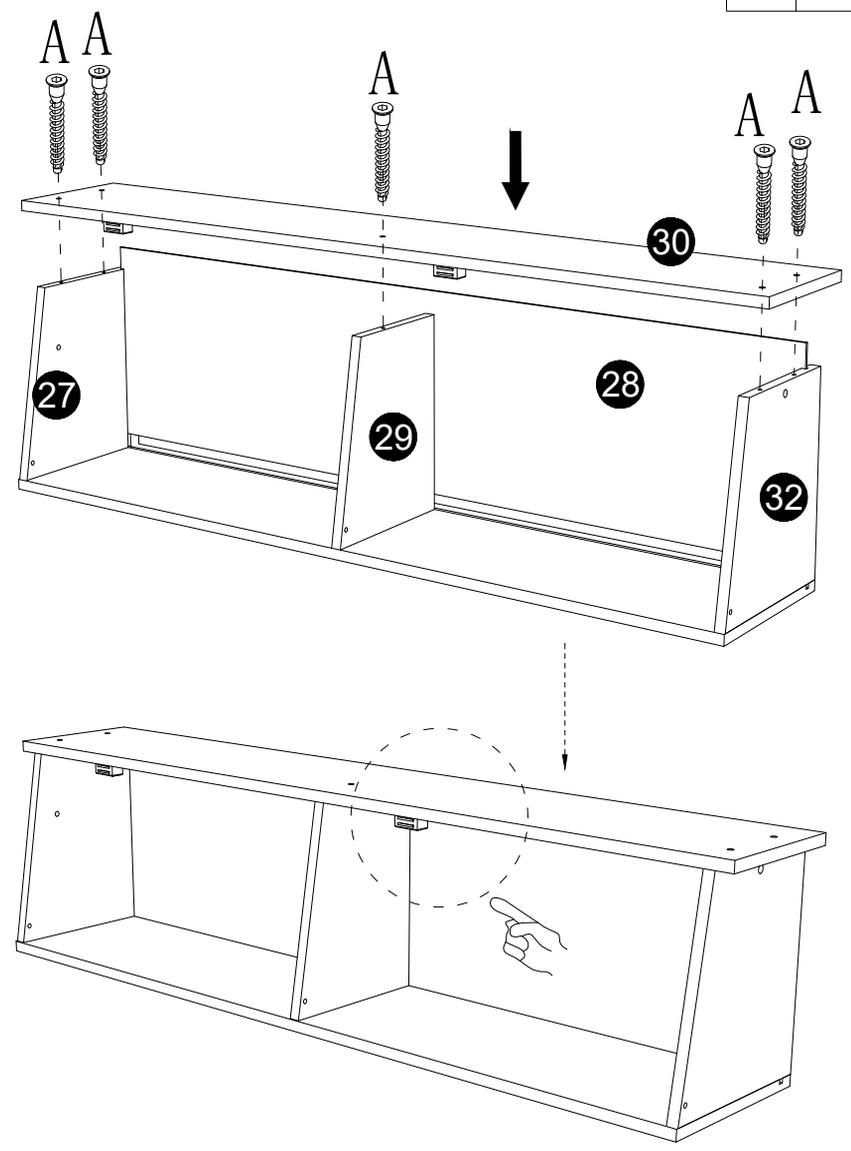


5

A  M5\*40mm 10pcs

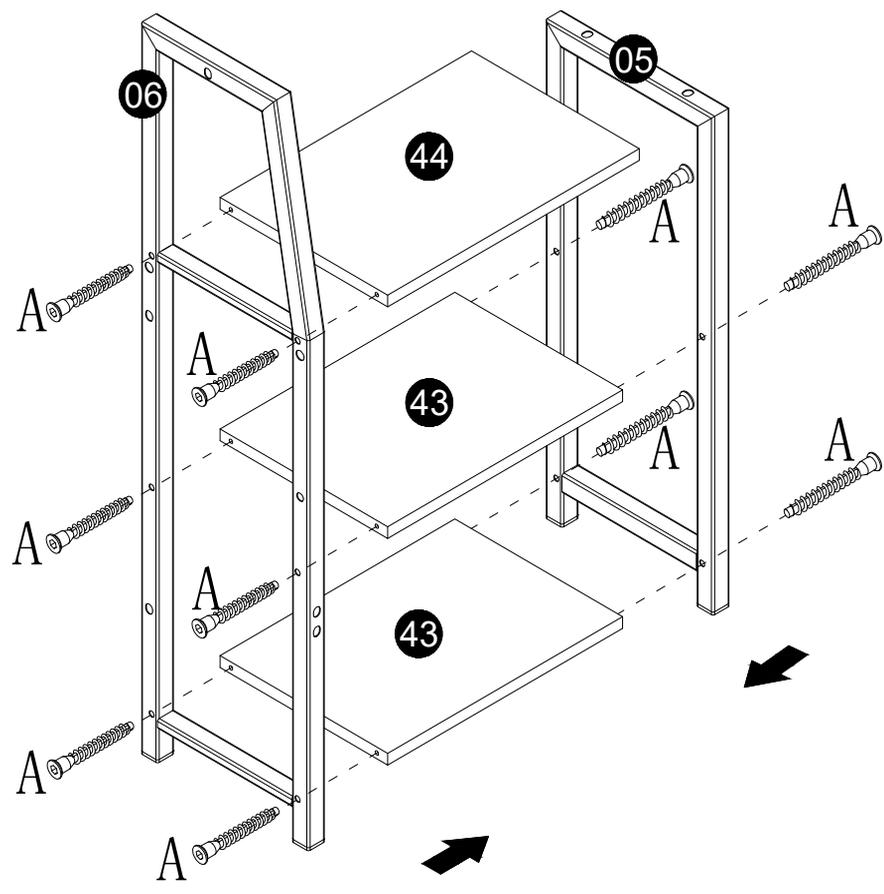


6

D  M6\*28mm 2pcs

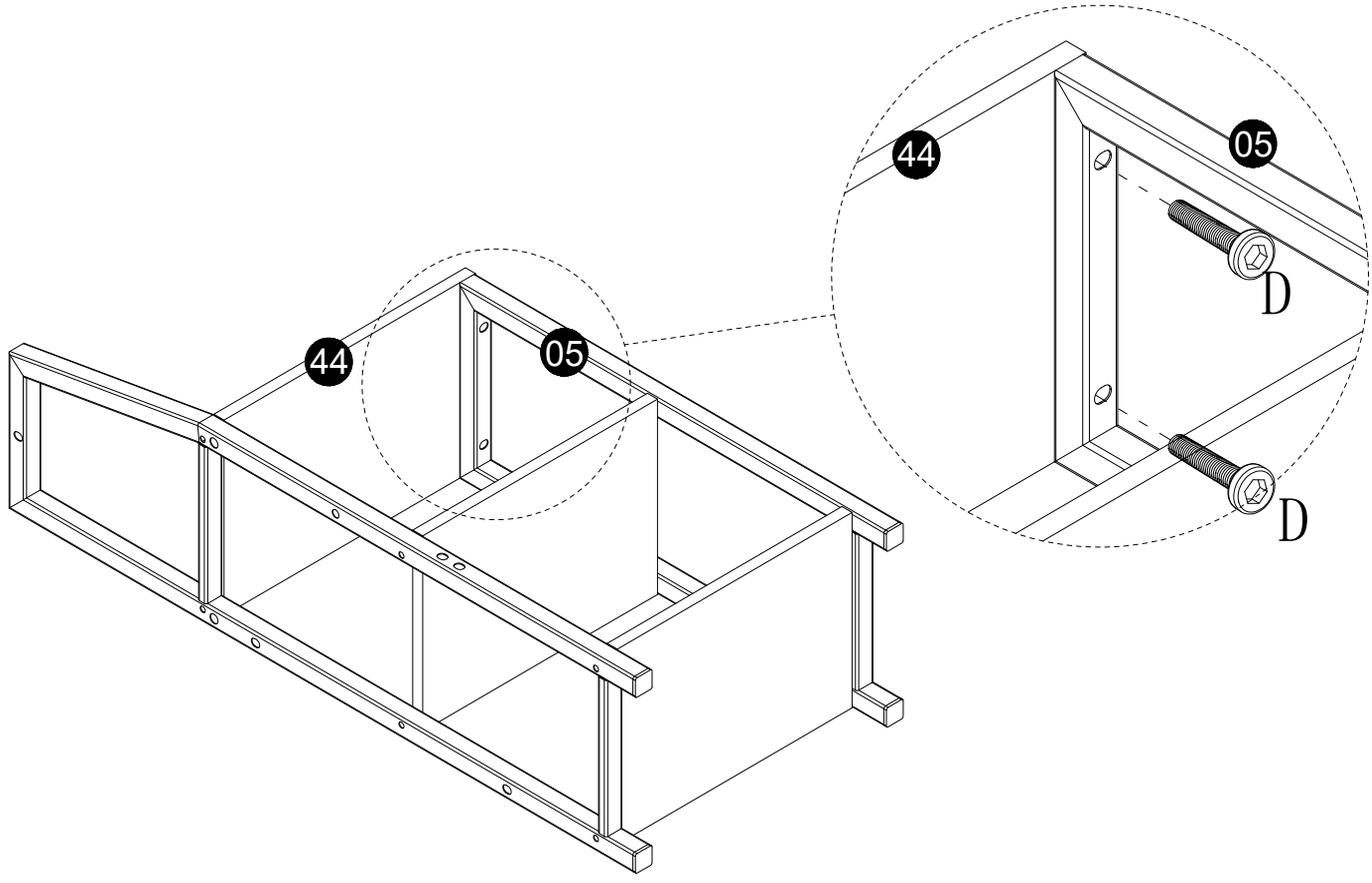


7

N  M6\*40mm 4pcs

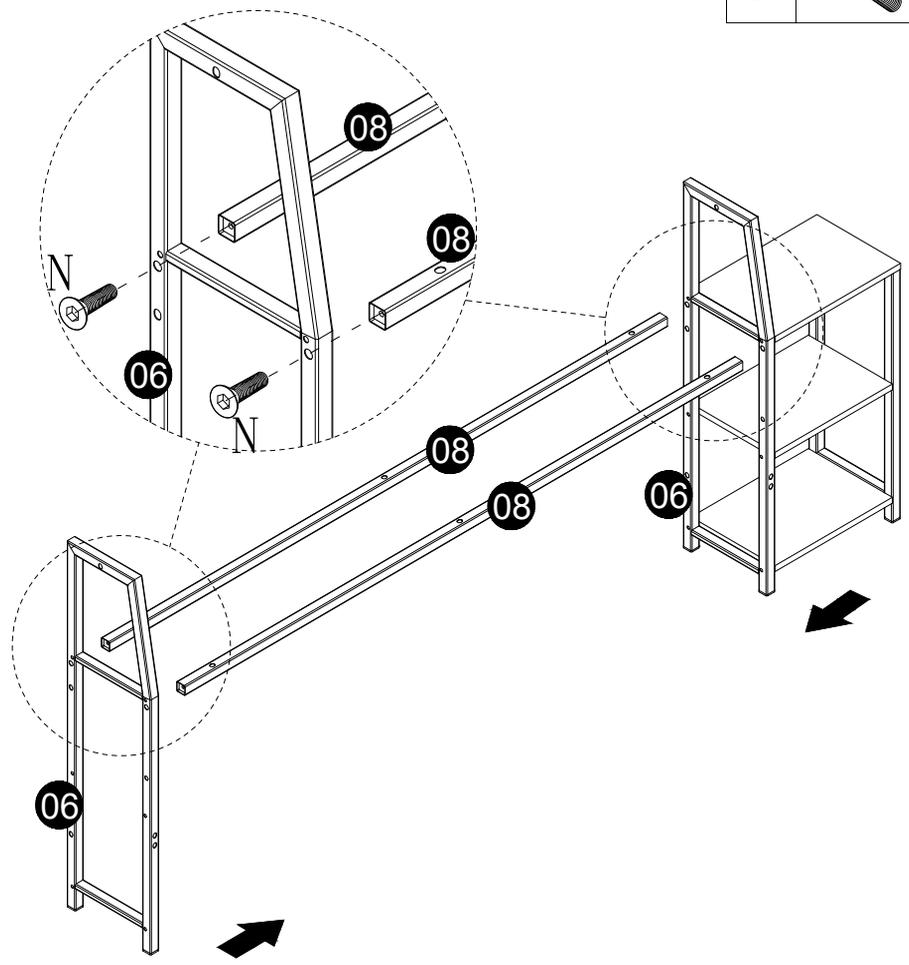


8

C  M6\*25mm 6pcs

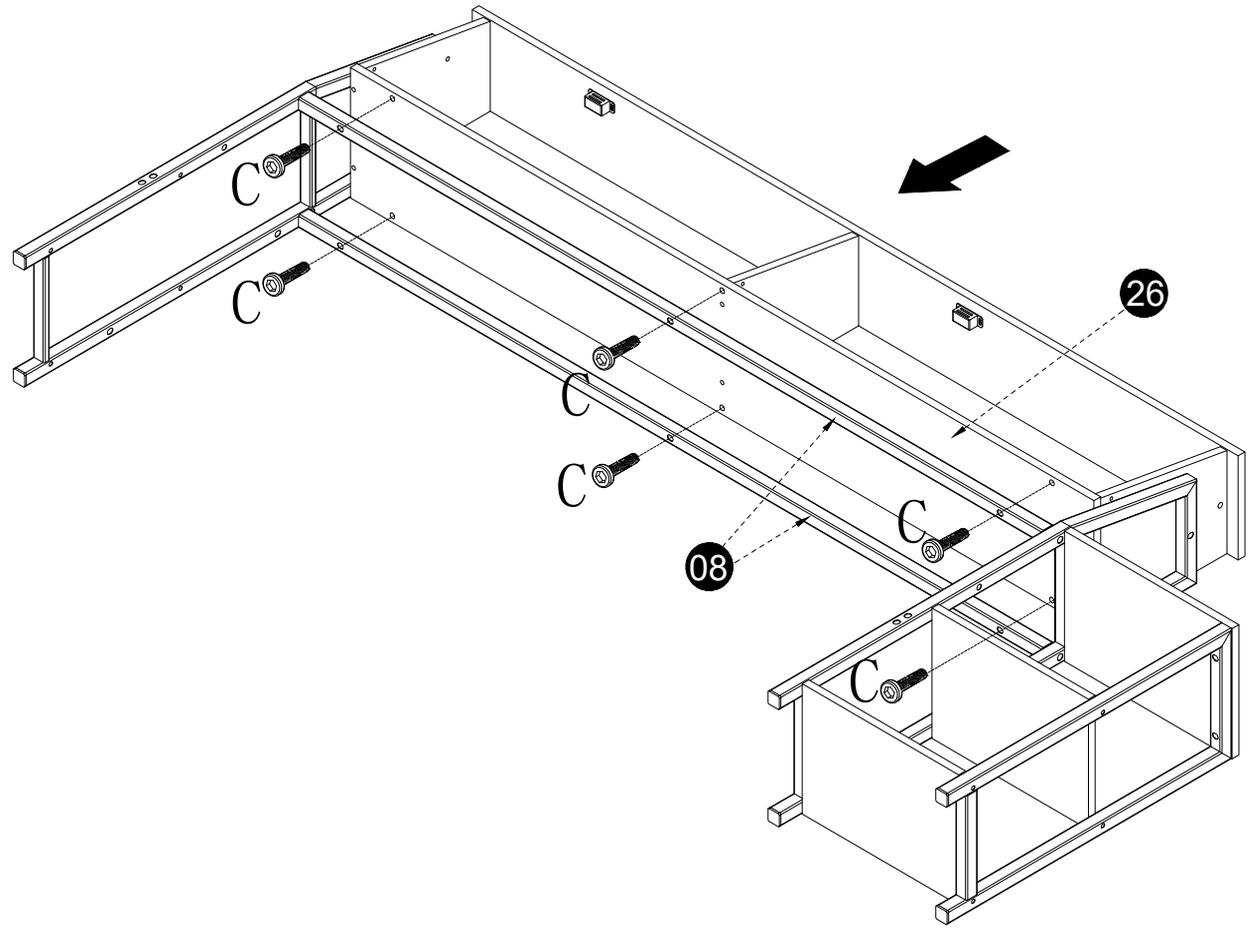


9

D		M6*28mm	2pcs
G		M6*40mm	2pcs

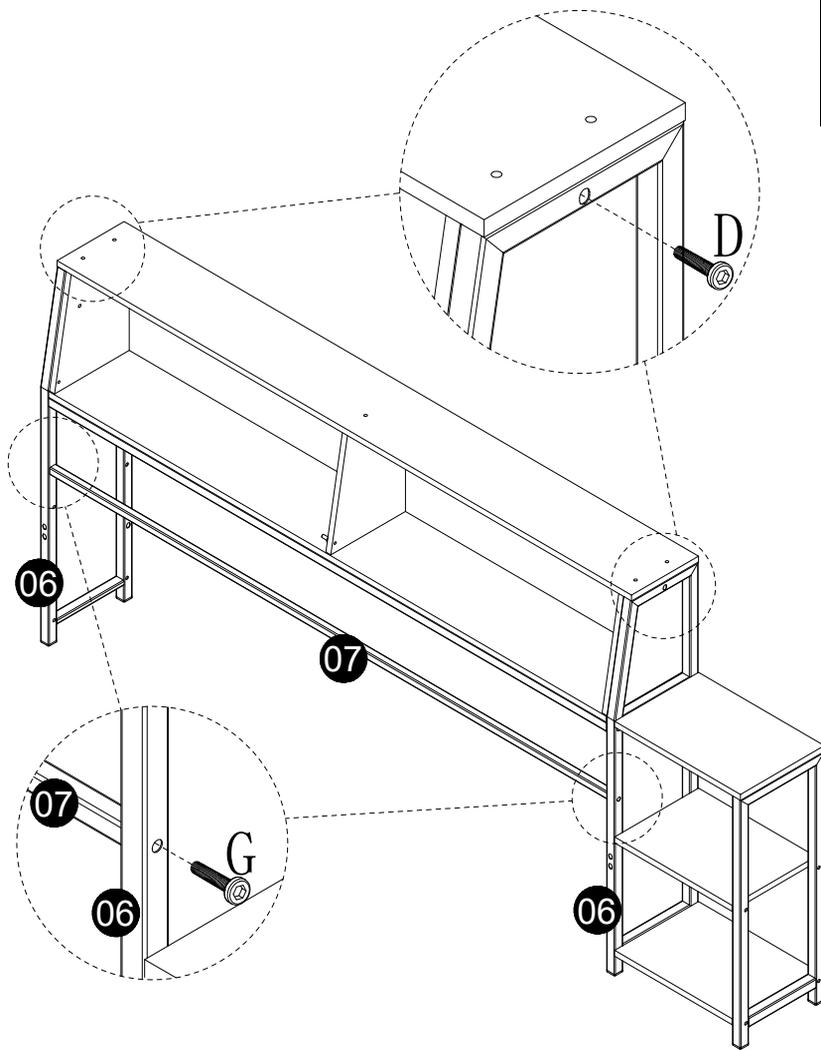


10

S			4pcs
---	---	--	------

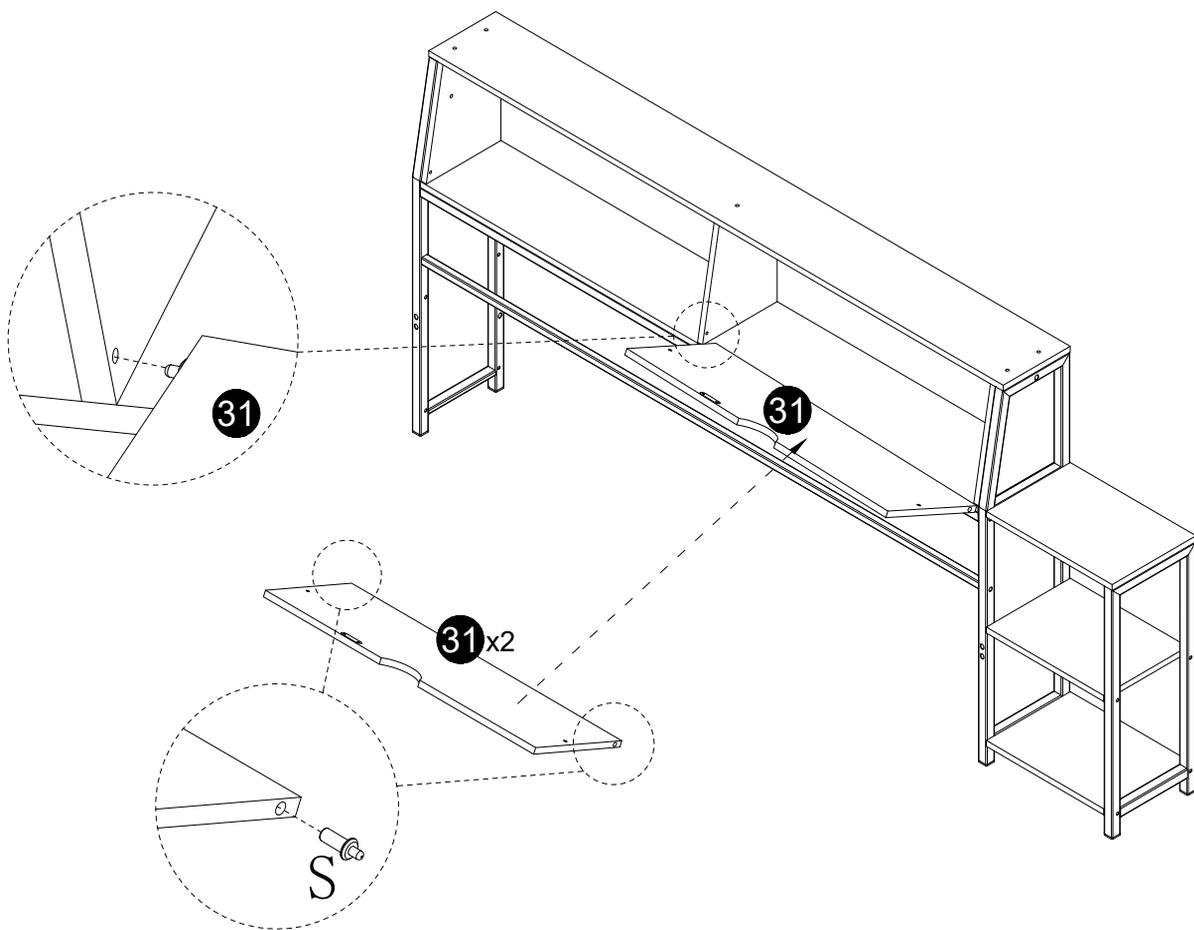


11



J		M4*14mm	4pcs
O			2pcs

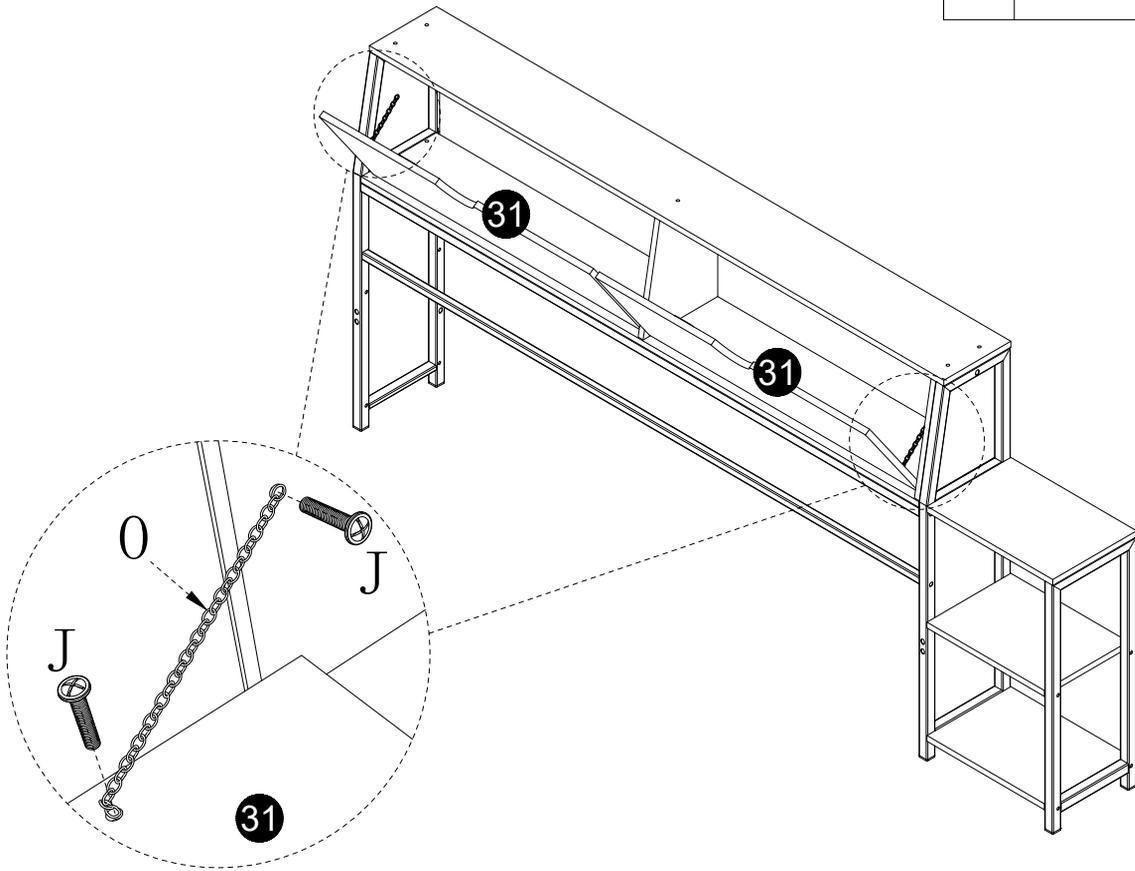

12

D		M6*28mm	4pcs
F		M6	4pcs
R		23cm	2pcs

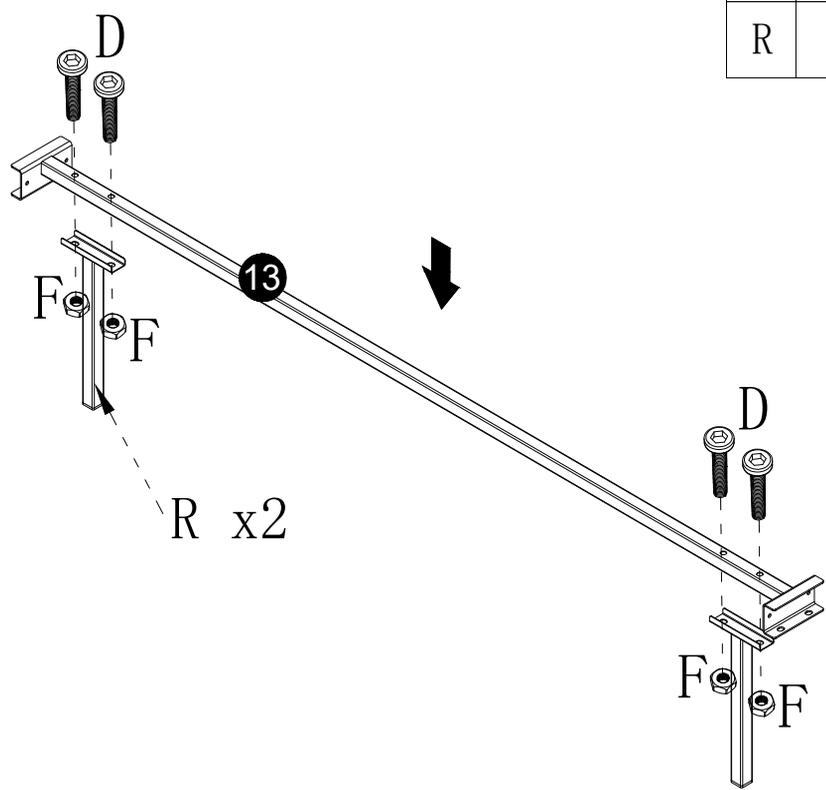

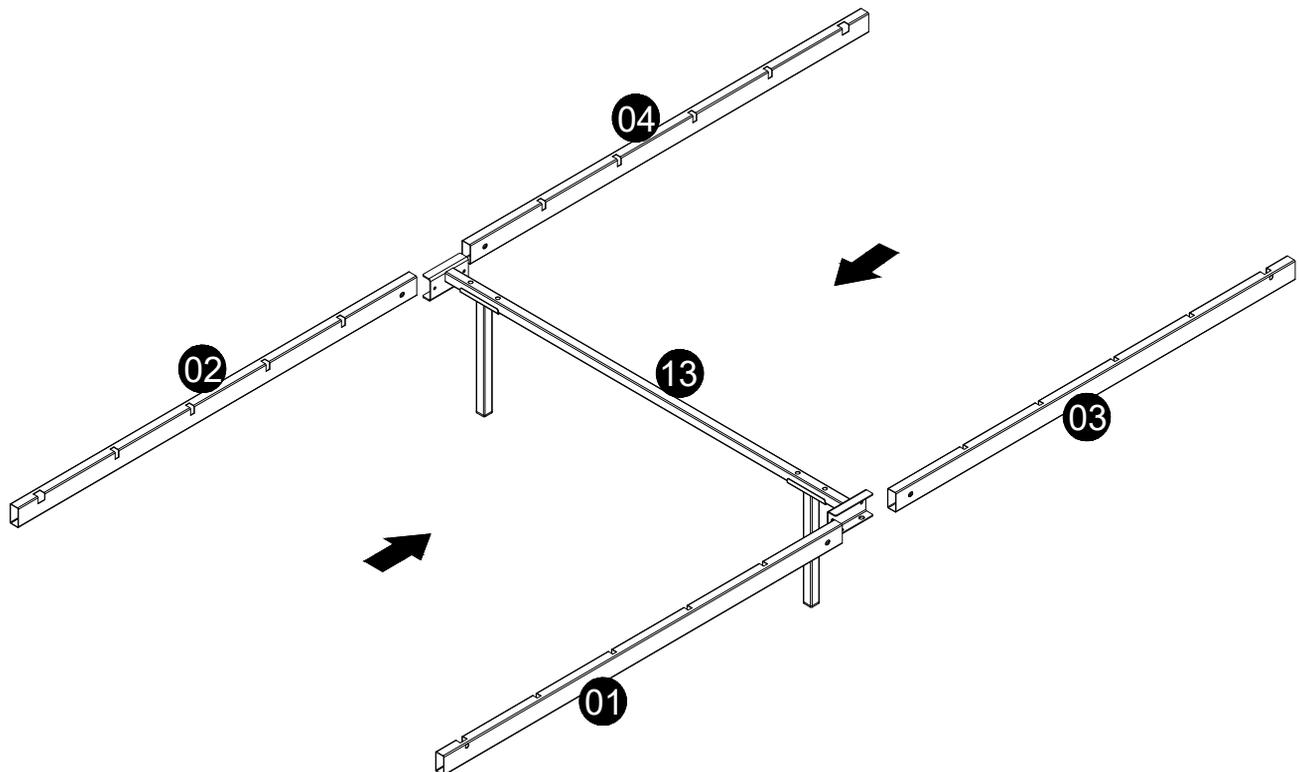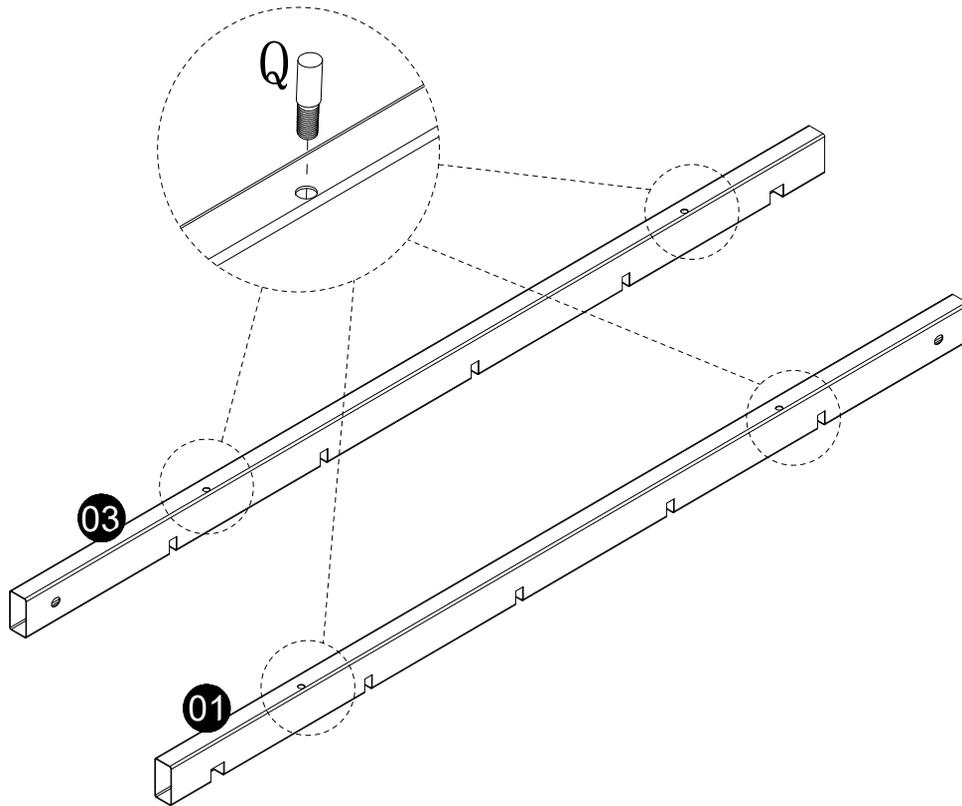


15

D



M6\*28mm 4pcs

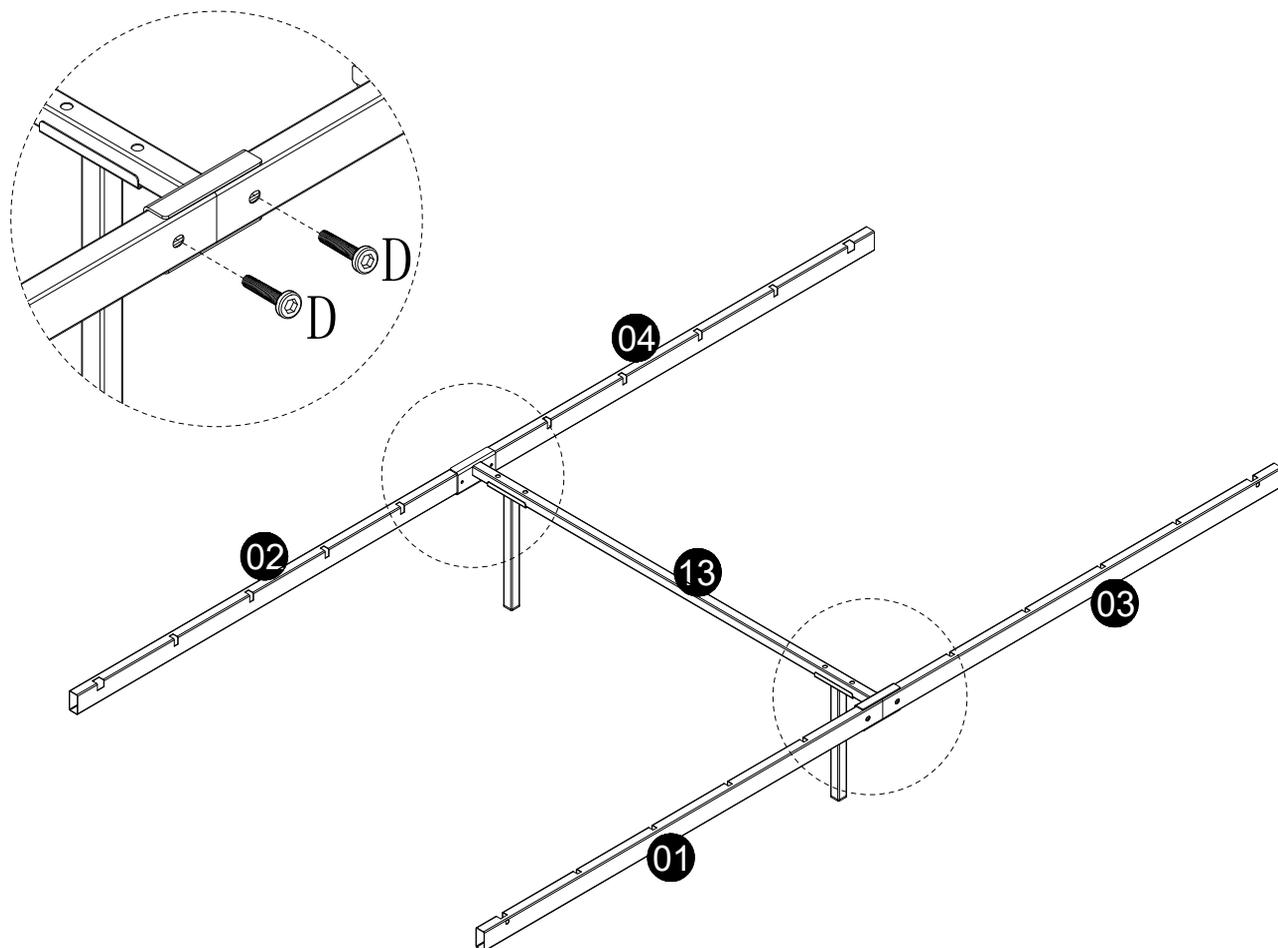


16

A




M5\*40mm 6pcs

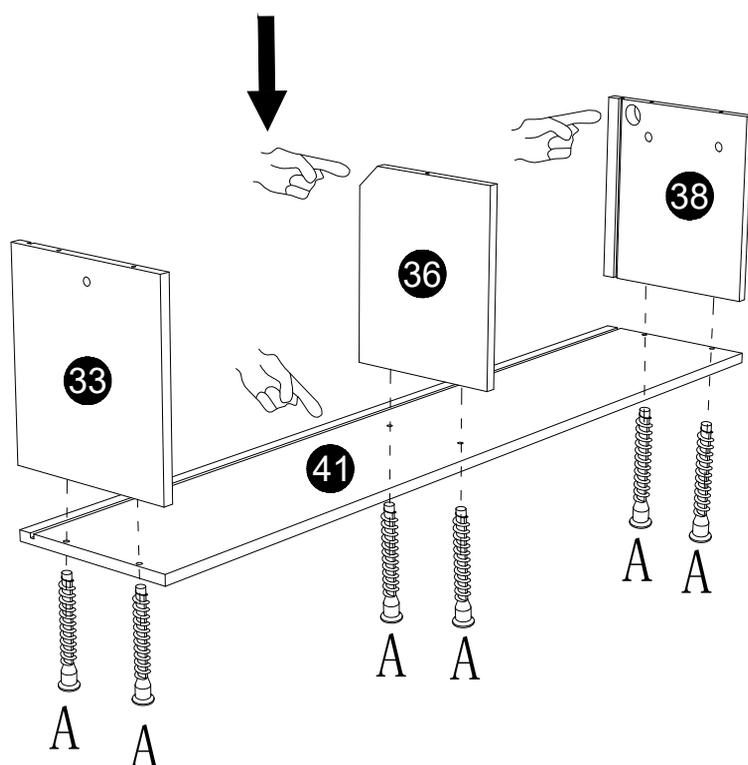


17

A  M5\*40mm 5pcs

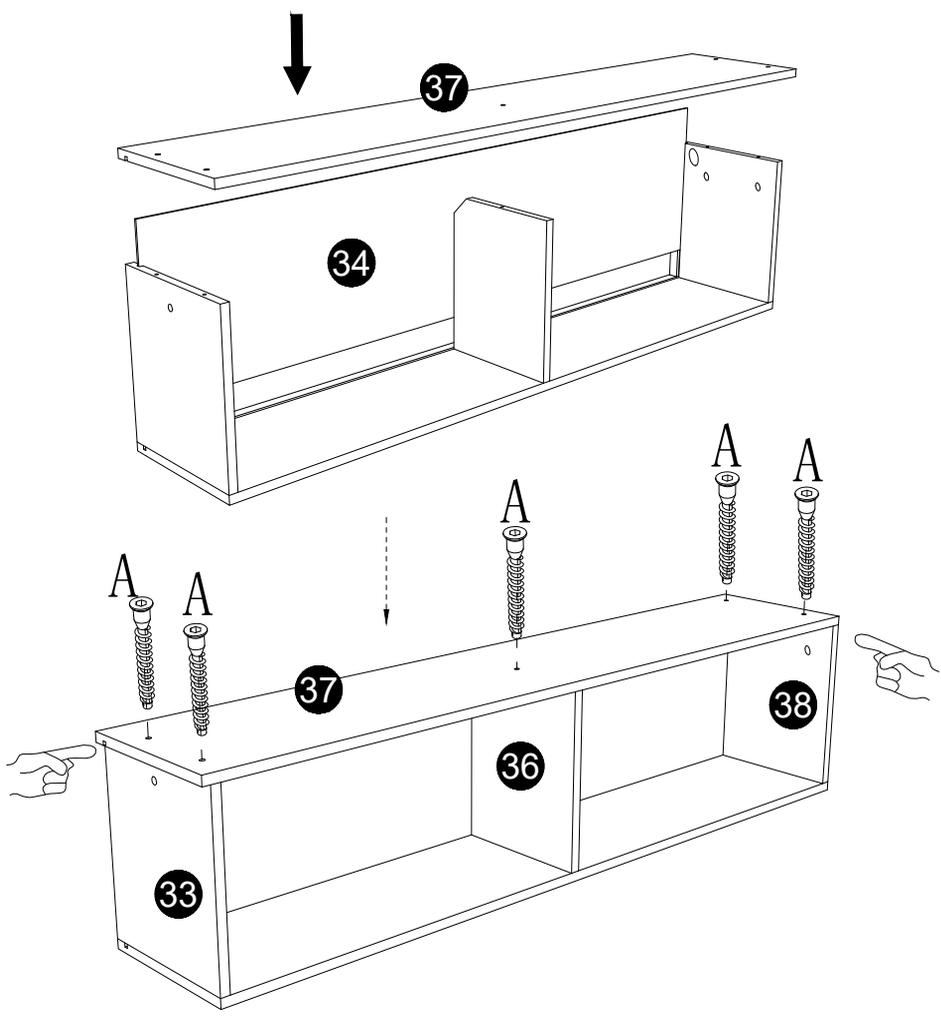


18

A  M5\*40mm 6pcs

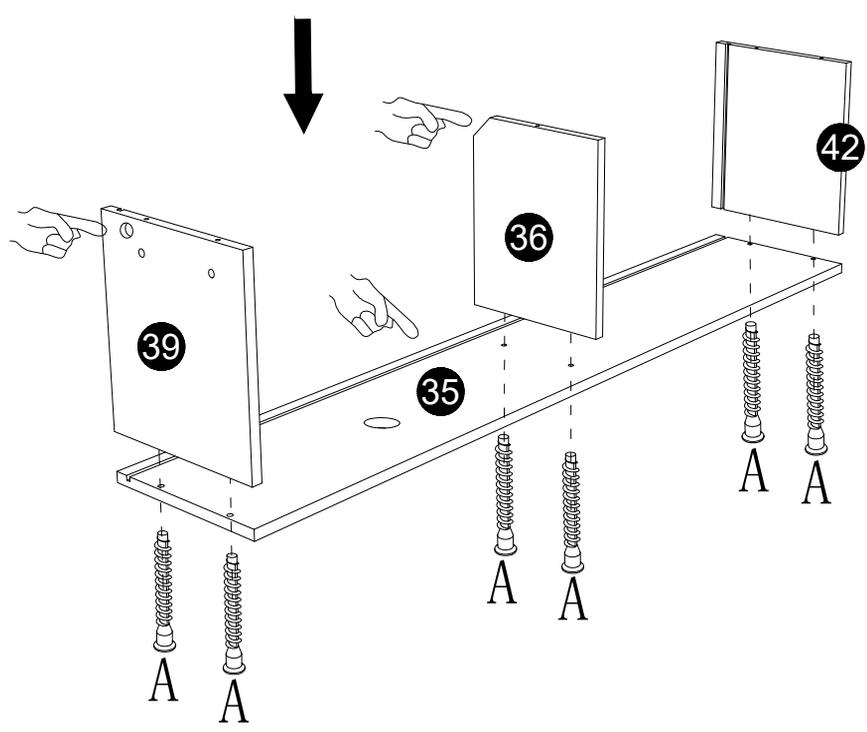


19

A		M5*40mm	5pcs
---	---	---------	------

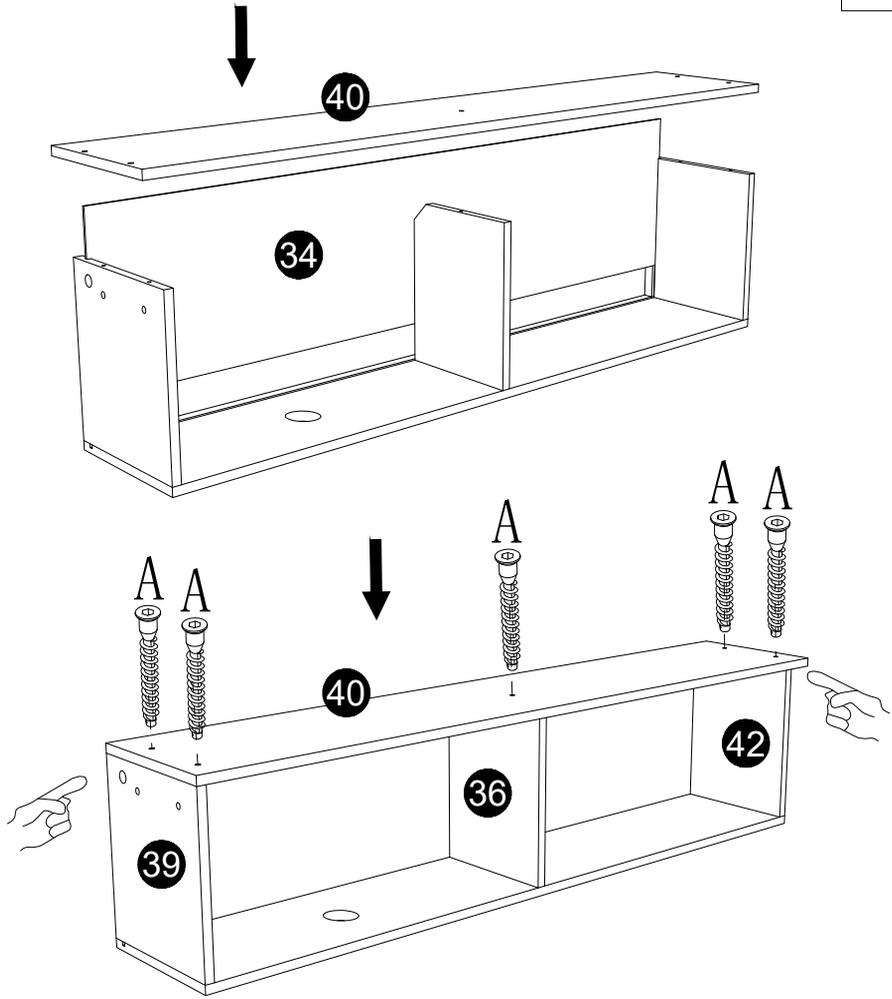


20

E		M6*60mm	2pcs
F		M6	2pcs
N		M6*40mm	4pcs

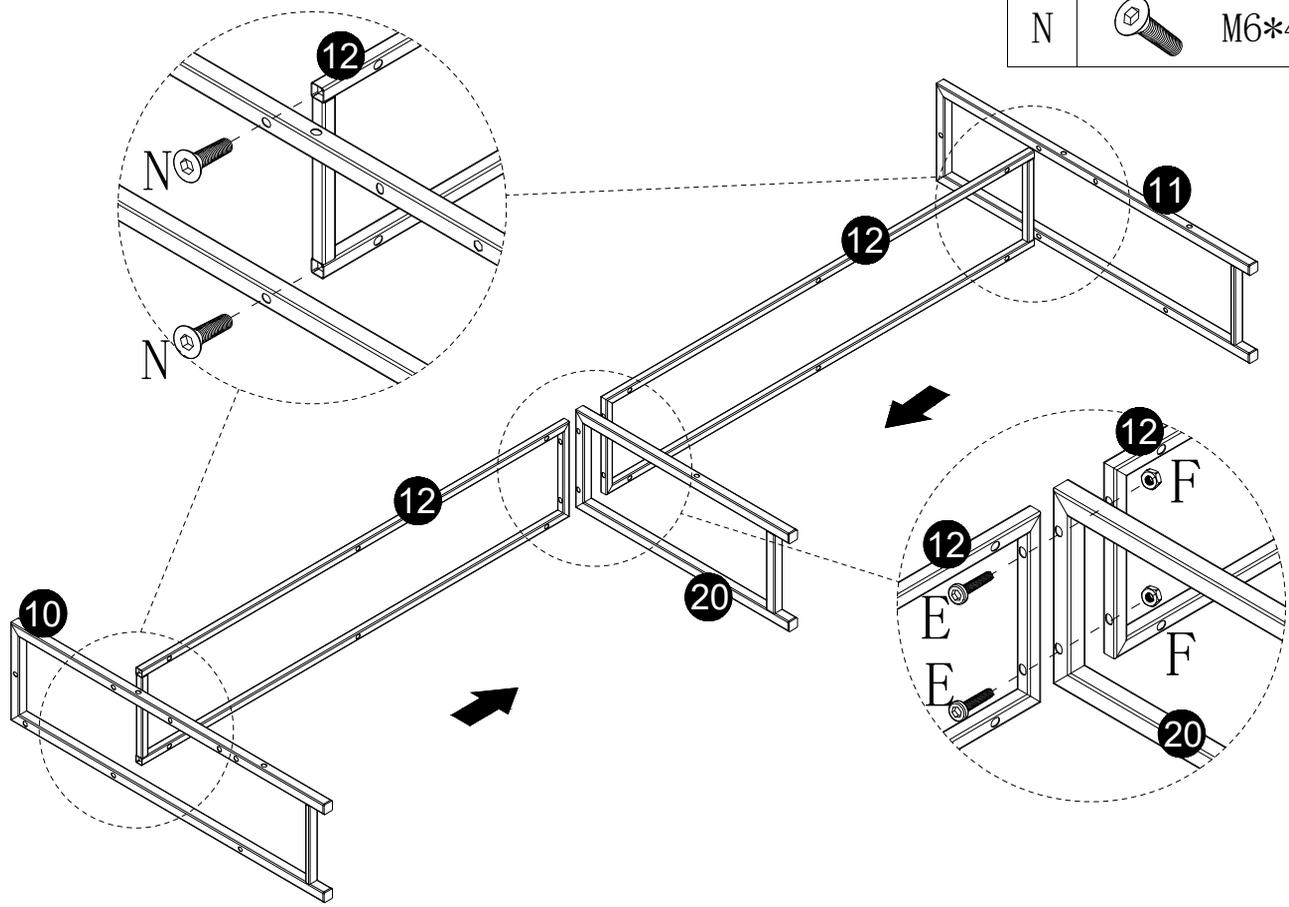


21

B		M6*15mm	2pcs
H		M6*15mm	2pcs

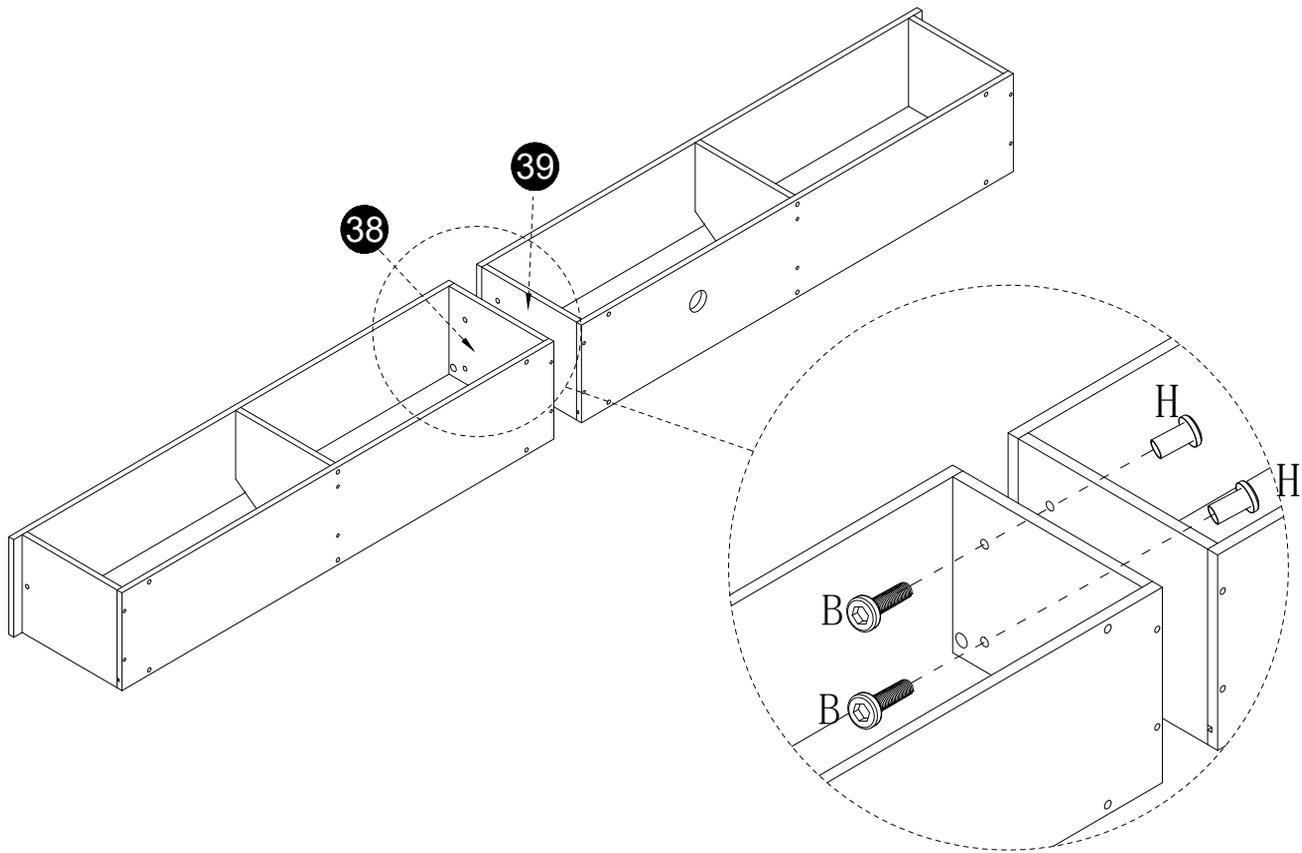


22

C		M6*25mm	12pcs
---	---	---------	-------

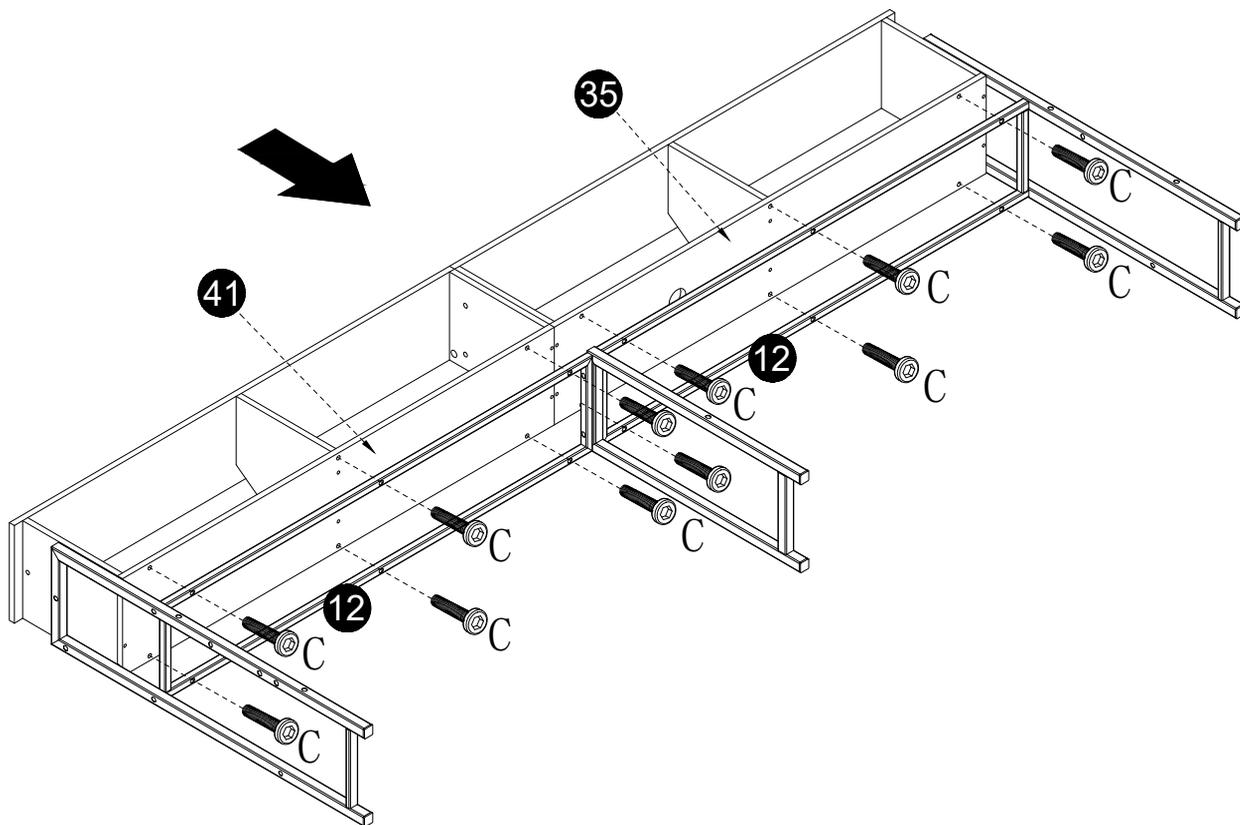


23

T		1pc
D		M6*28mm 2pcs

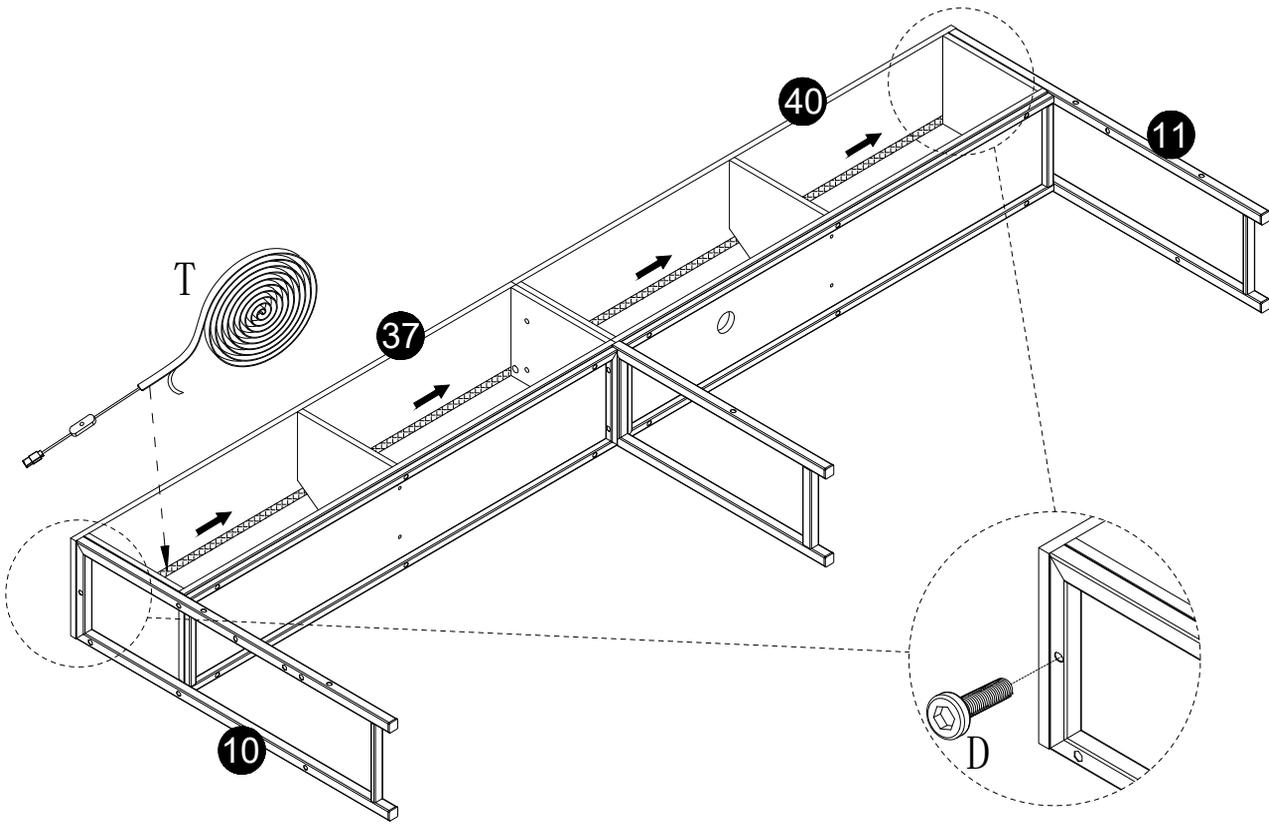


24

G		M6*40mm 4pcs
---	---	--------------

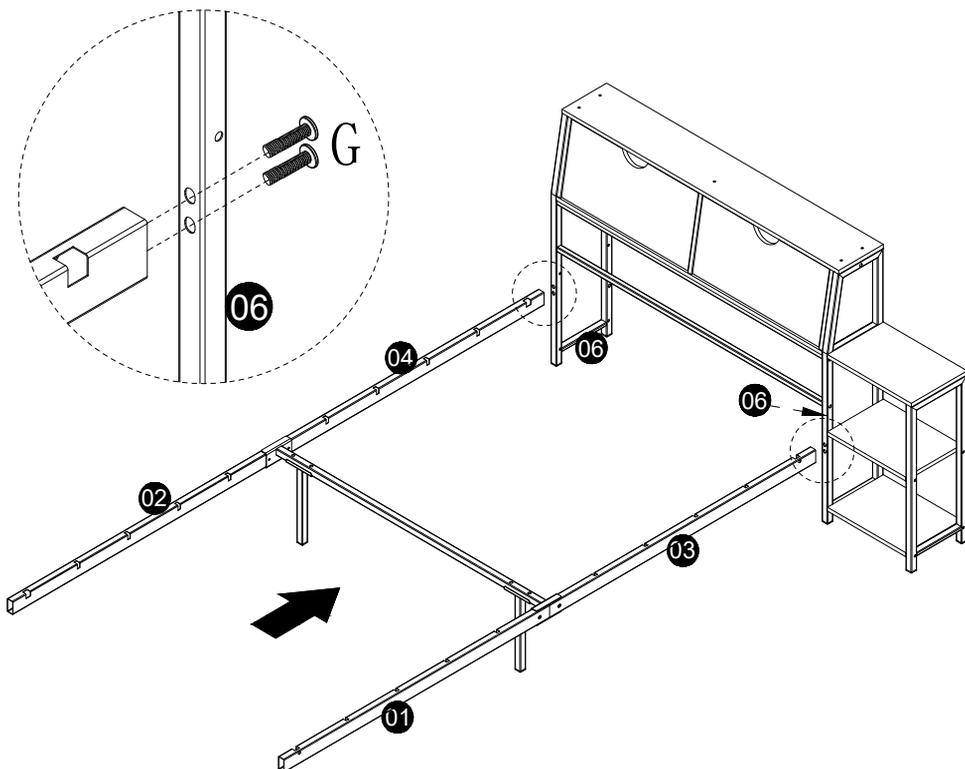


25

D		M6*28mm	1pc
I		M6*50mm	2pcs
F		M6	2pcs

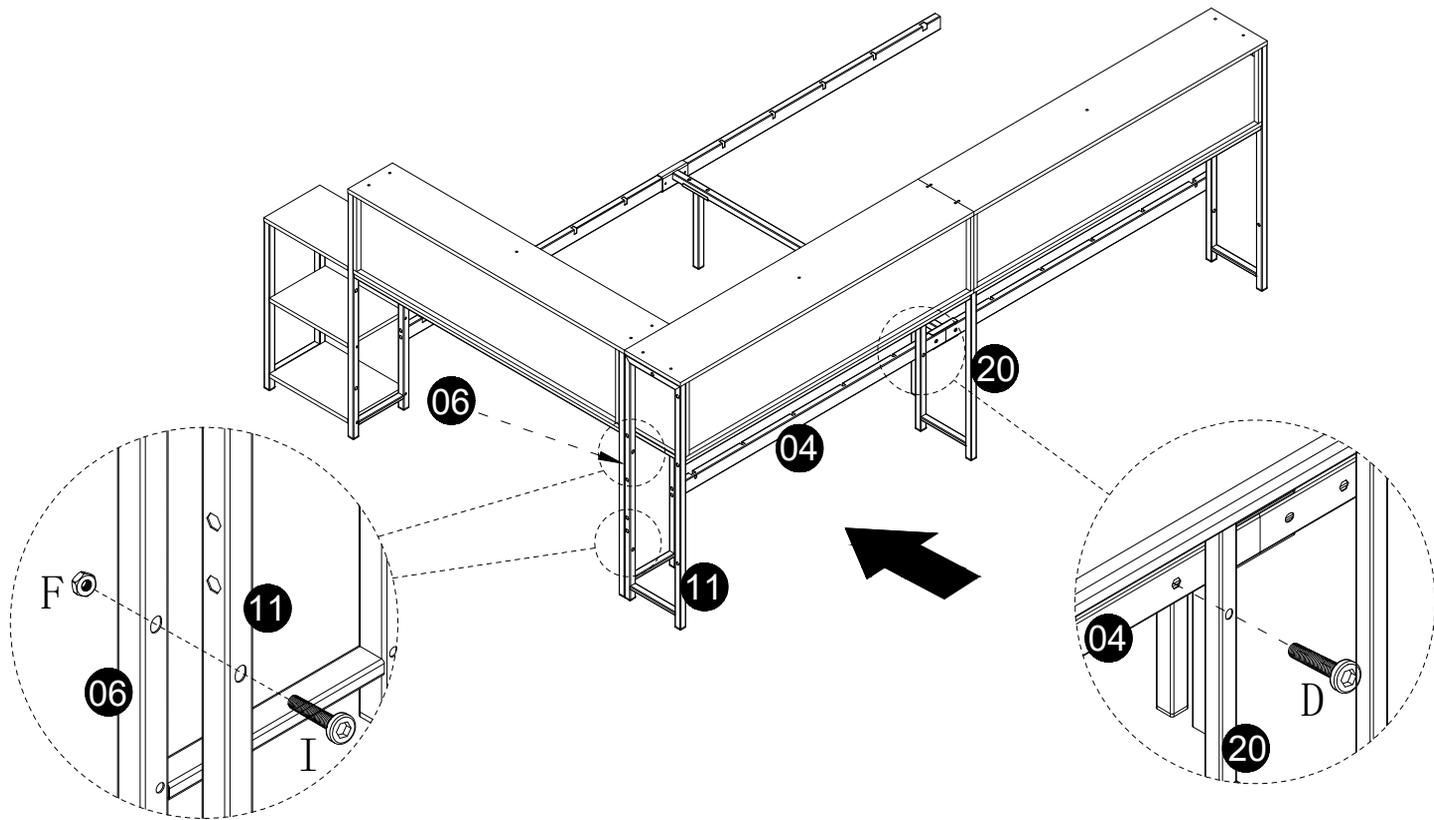


26

B		M6*15mm	2pcs
D		M6*28mm	2pcs
b			1pc

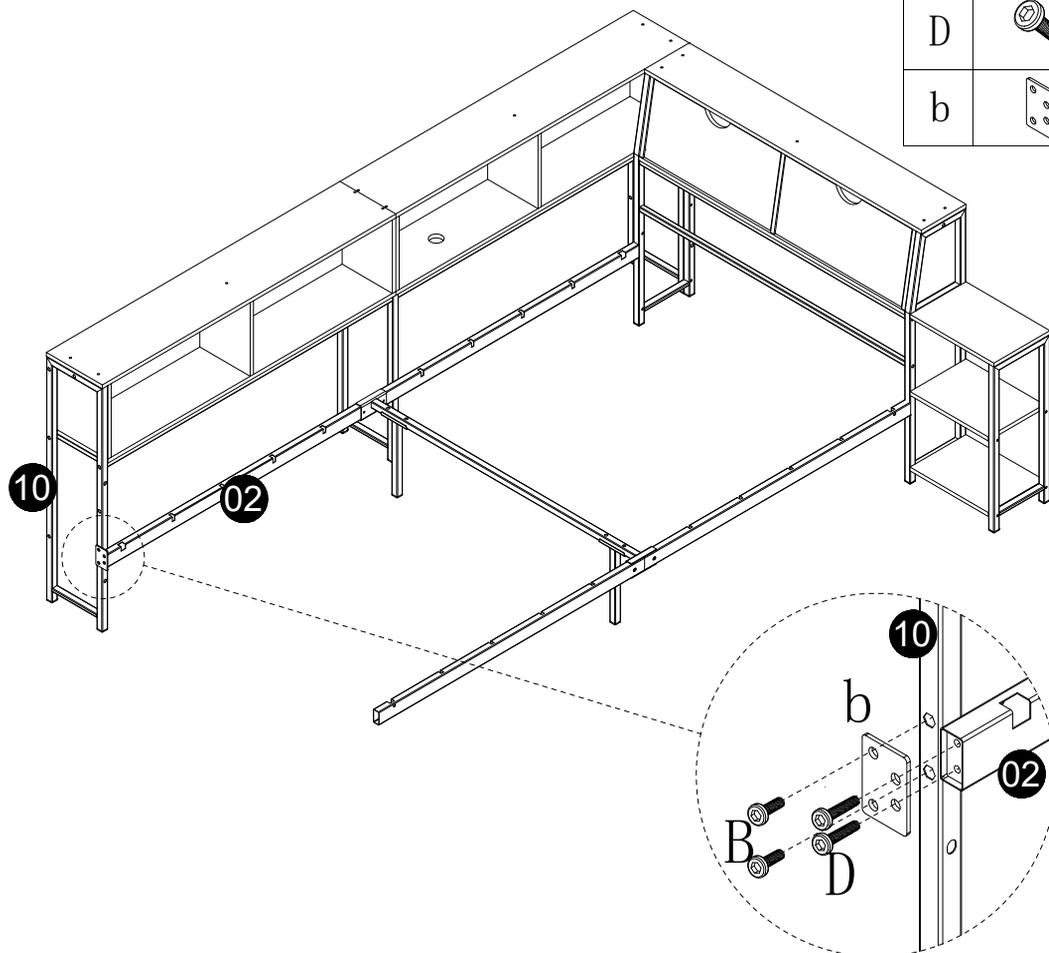


27


F		M6	1pc	D		M6*28mm	1pc
				G		M6*40mm	2pcs
				I		M6*50mm	1pc

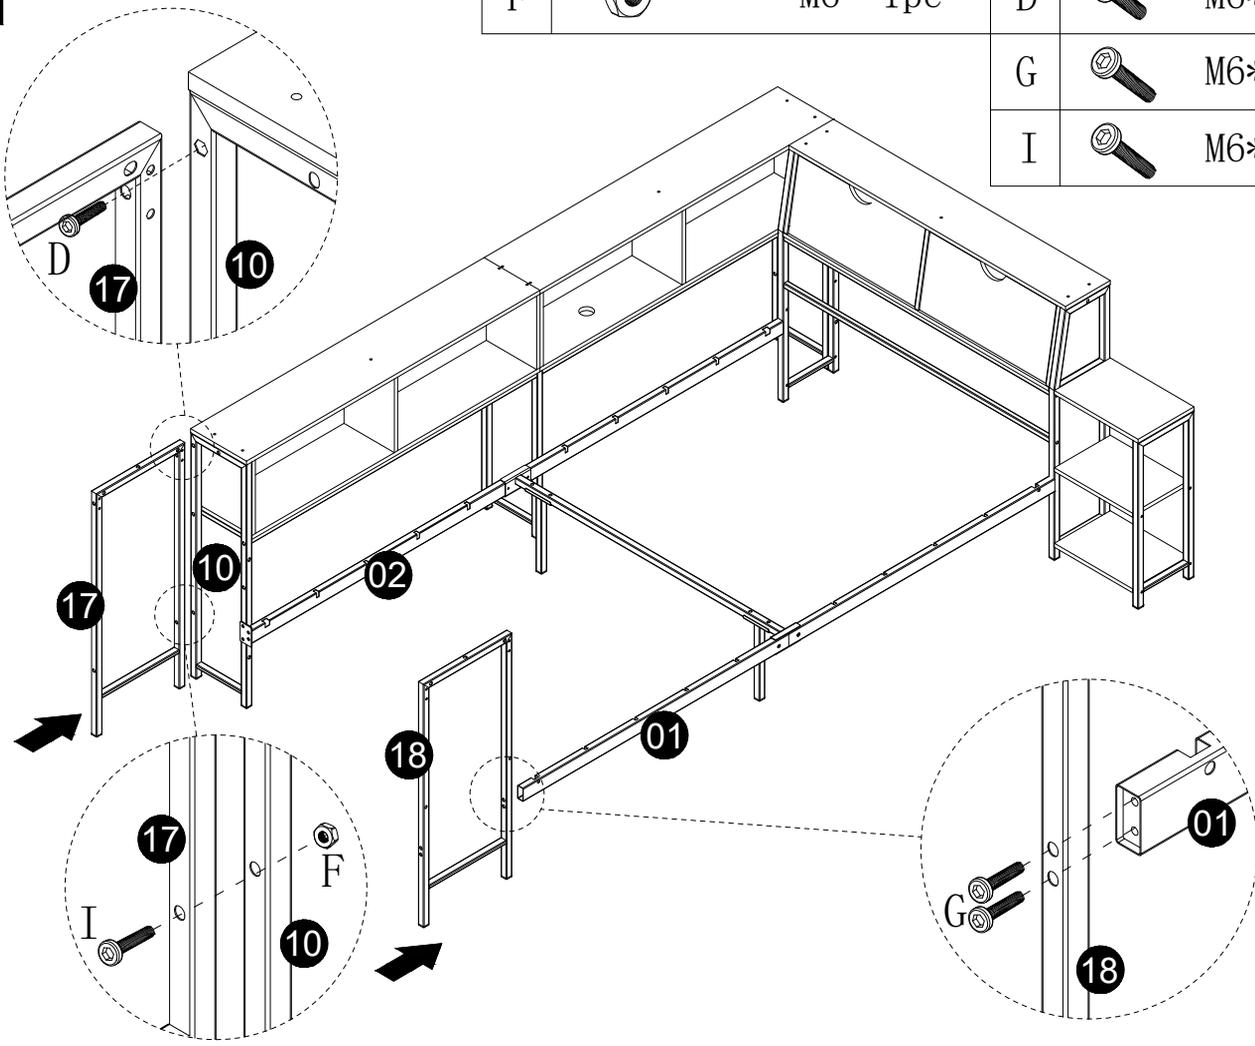


28

D		M6*28mm	1pc
G		M6*40mm	1pc

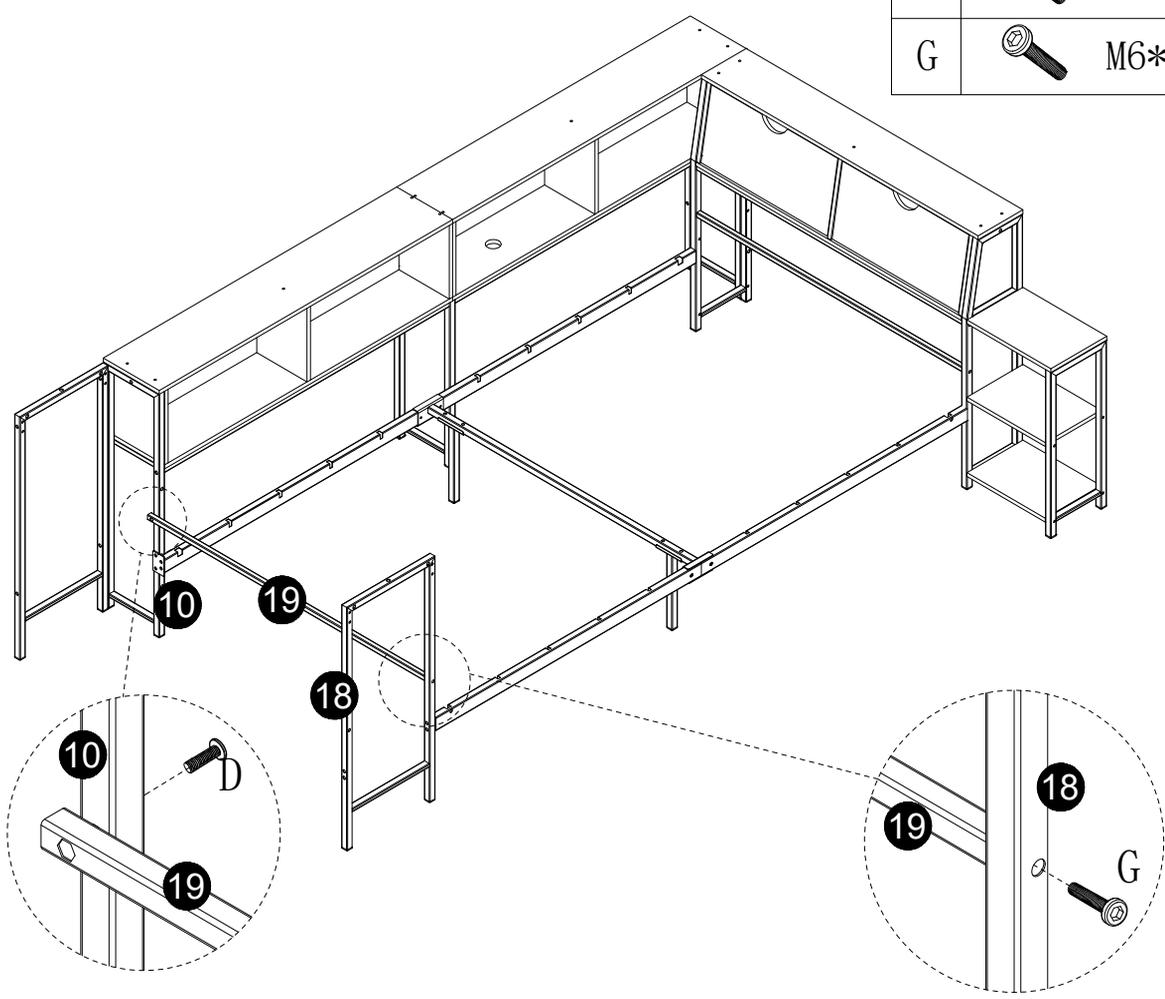

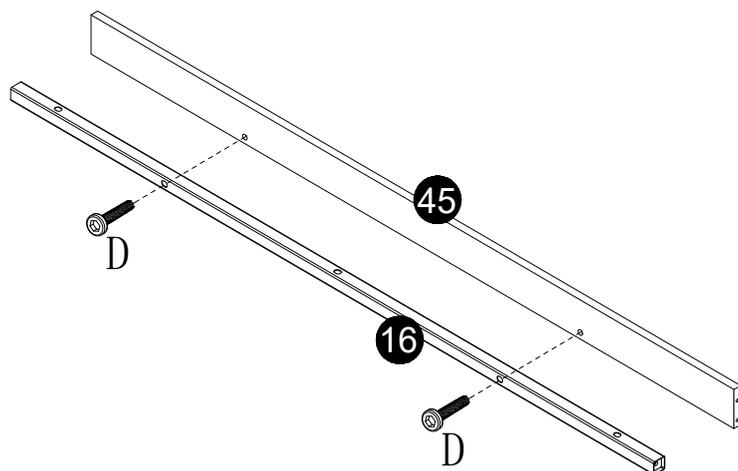

x2

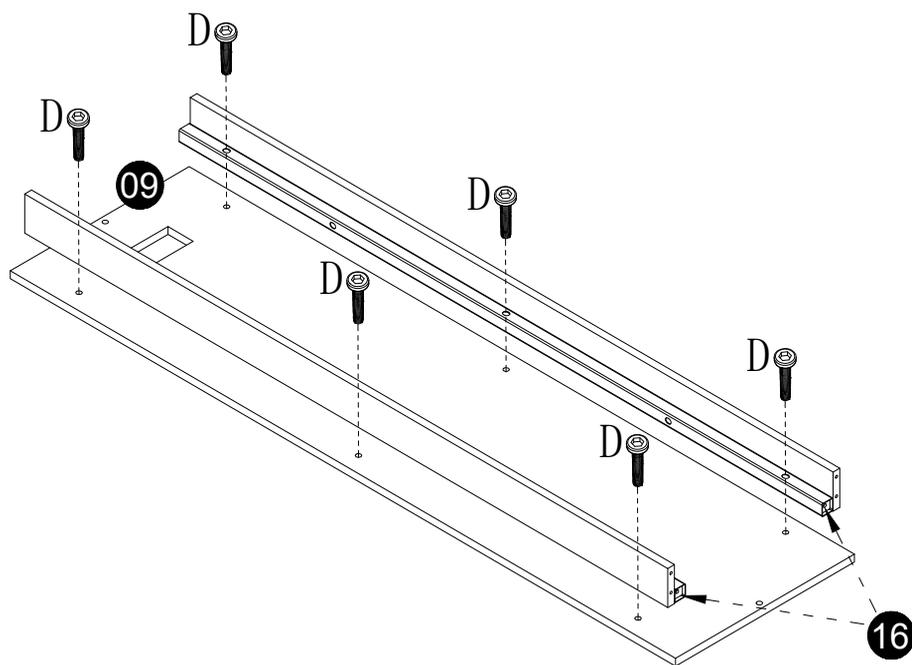


31

D



M6\*28mm 2pcs

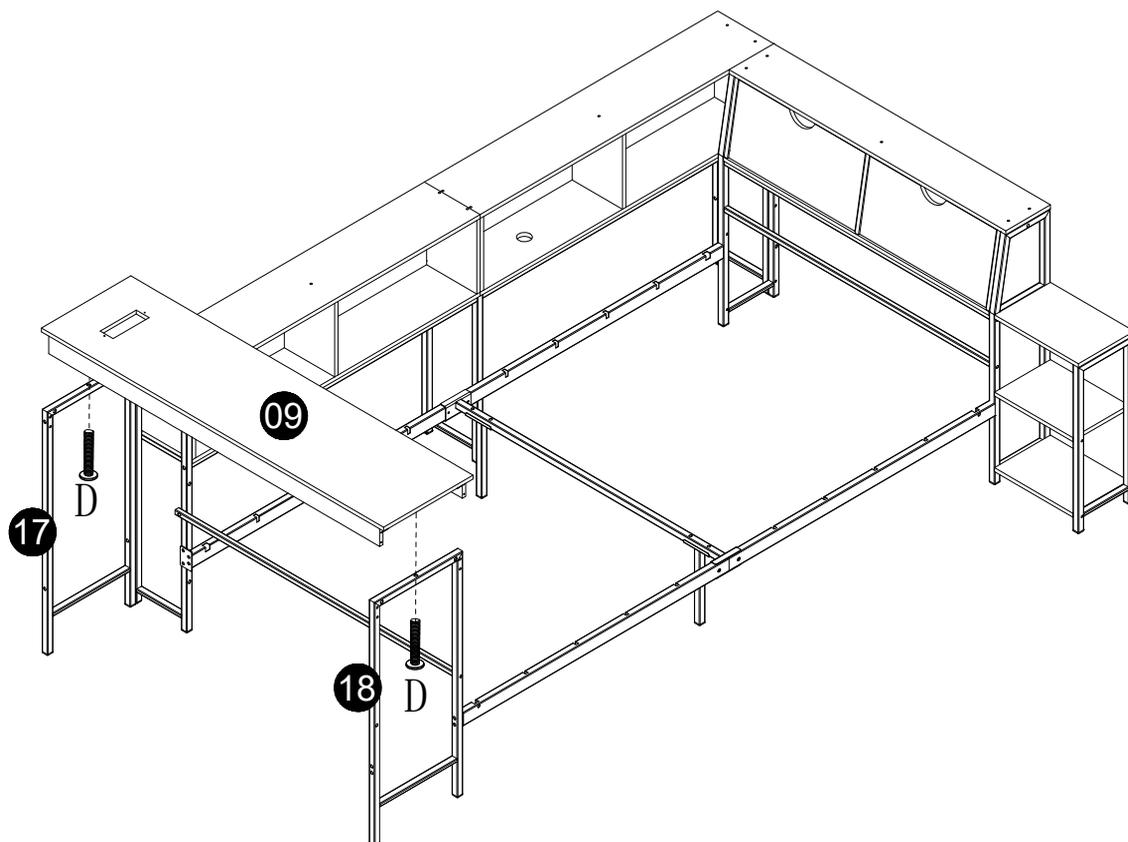

32

A




M5\*40mm 8pcs

G



M6\*40mm 4pcs



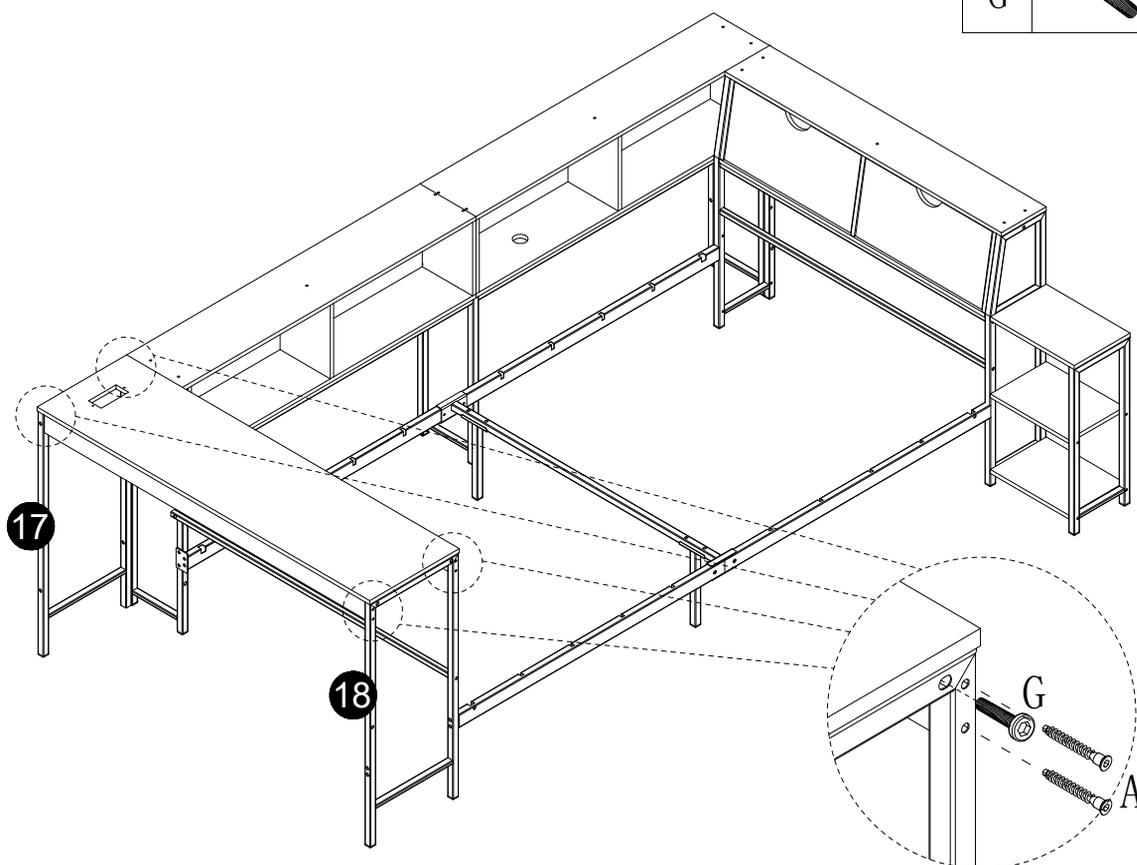


33


Step 1

Step 2


M	 M4*10mm	3pcs
V		1pc

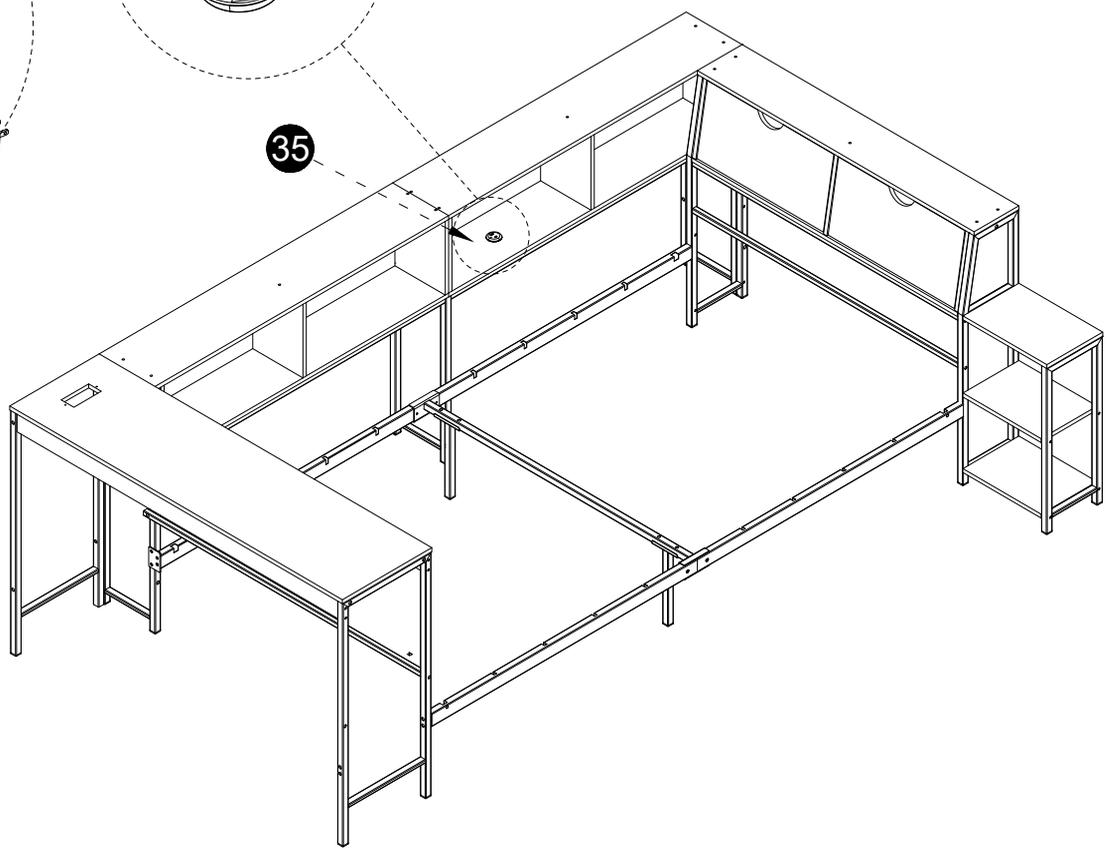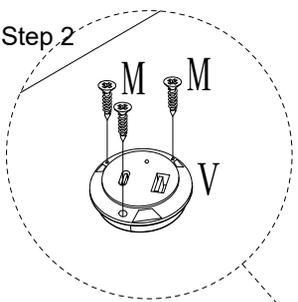
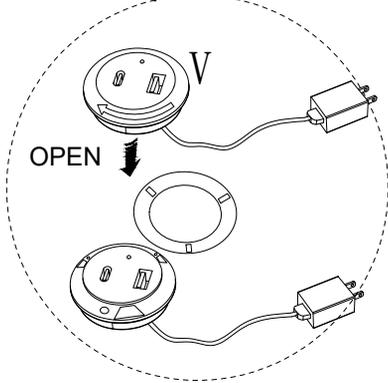


34

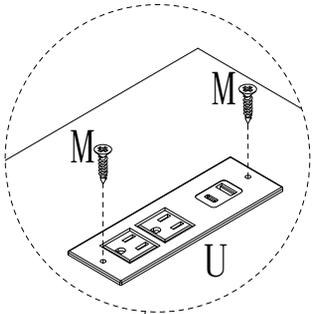


M	 M4*10mm	2pcs
U		1pc

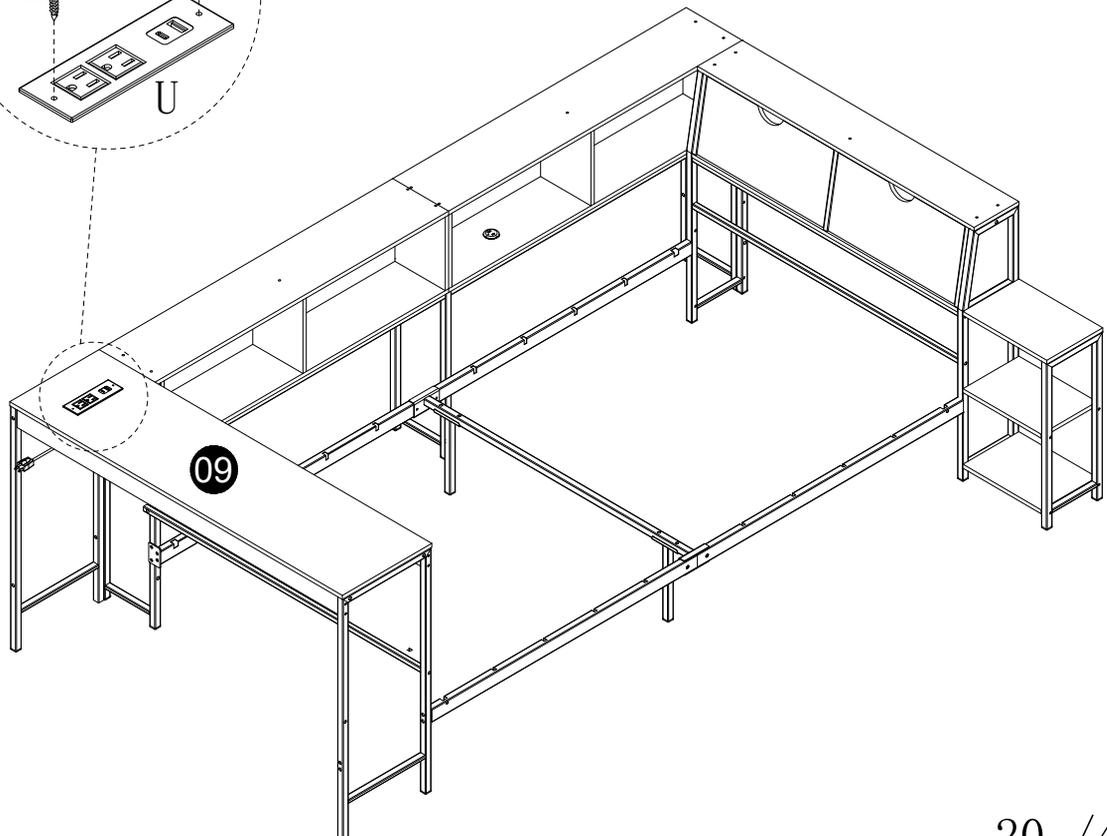


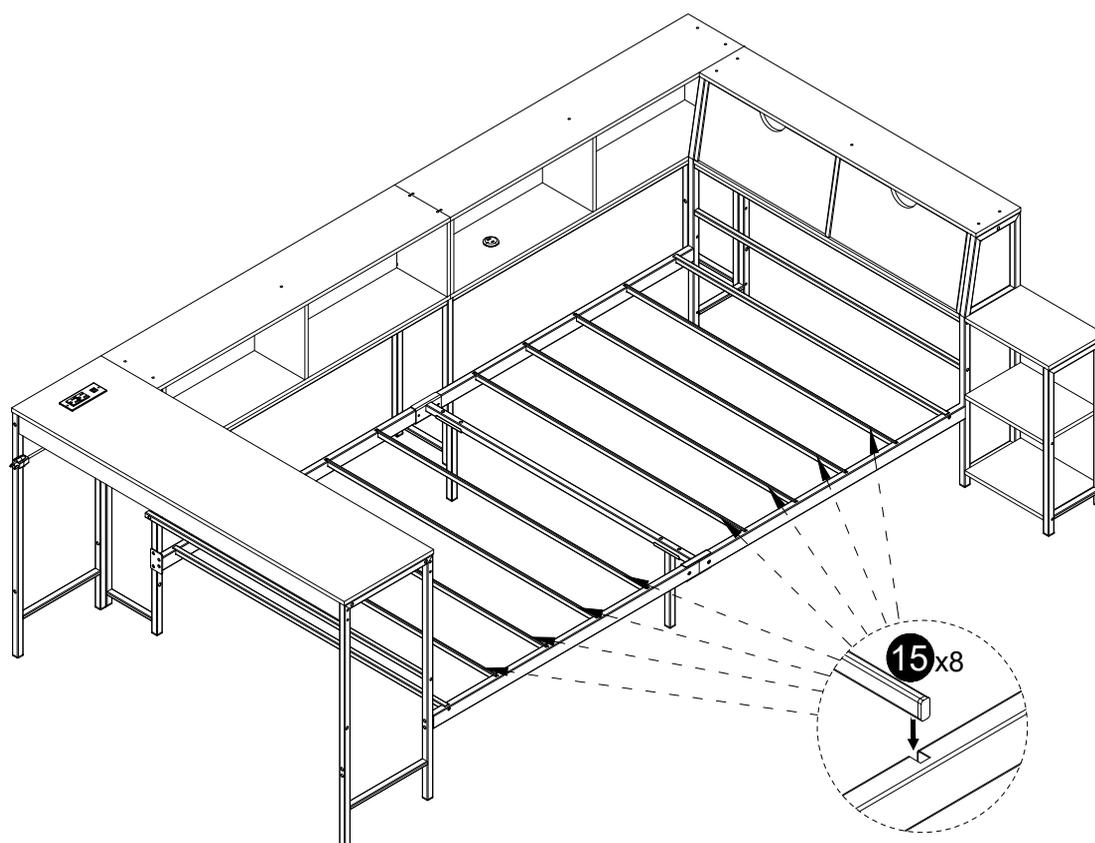
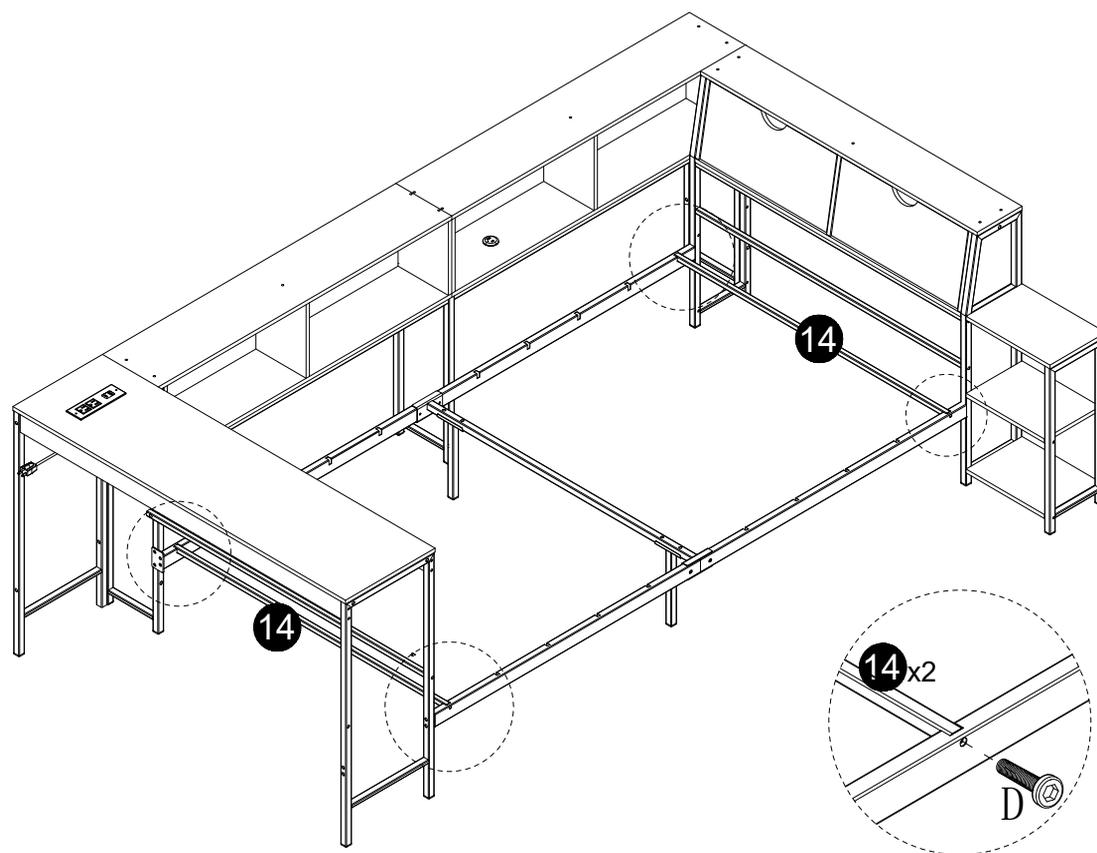




37

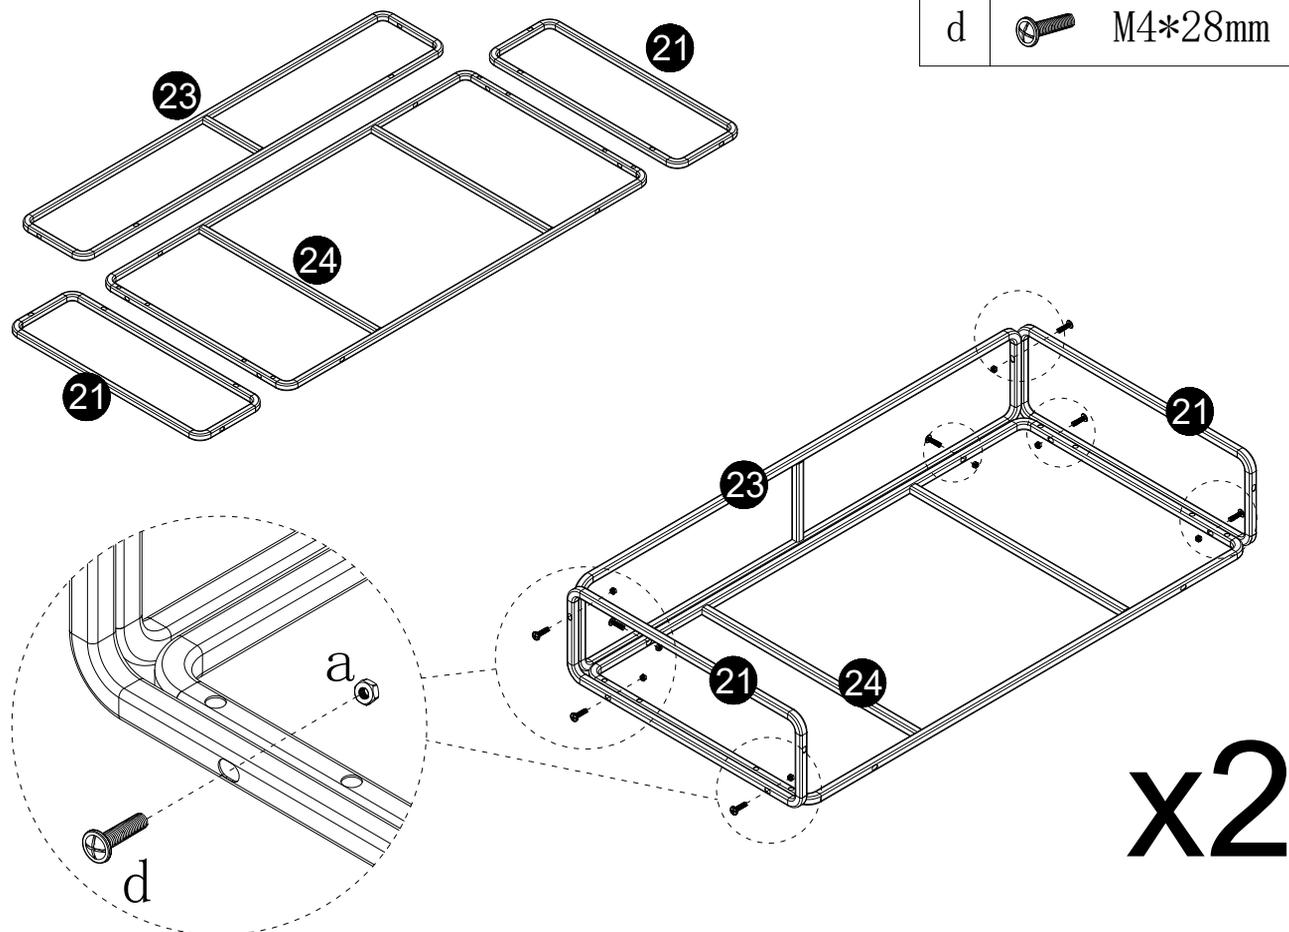a  M4 16pcsd  M4\*28mm 16pcs


38

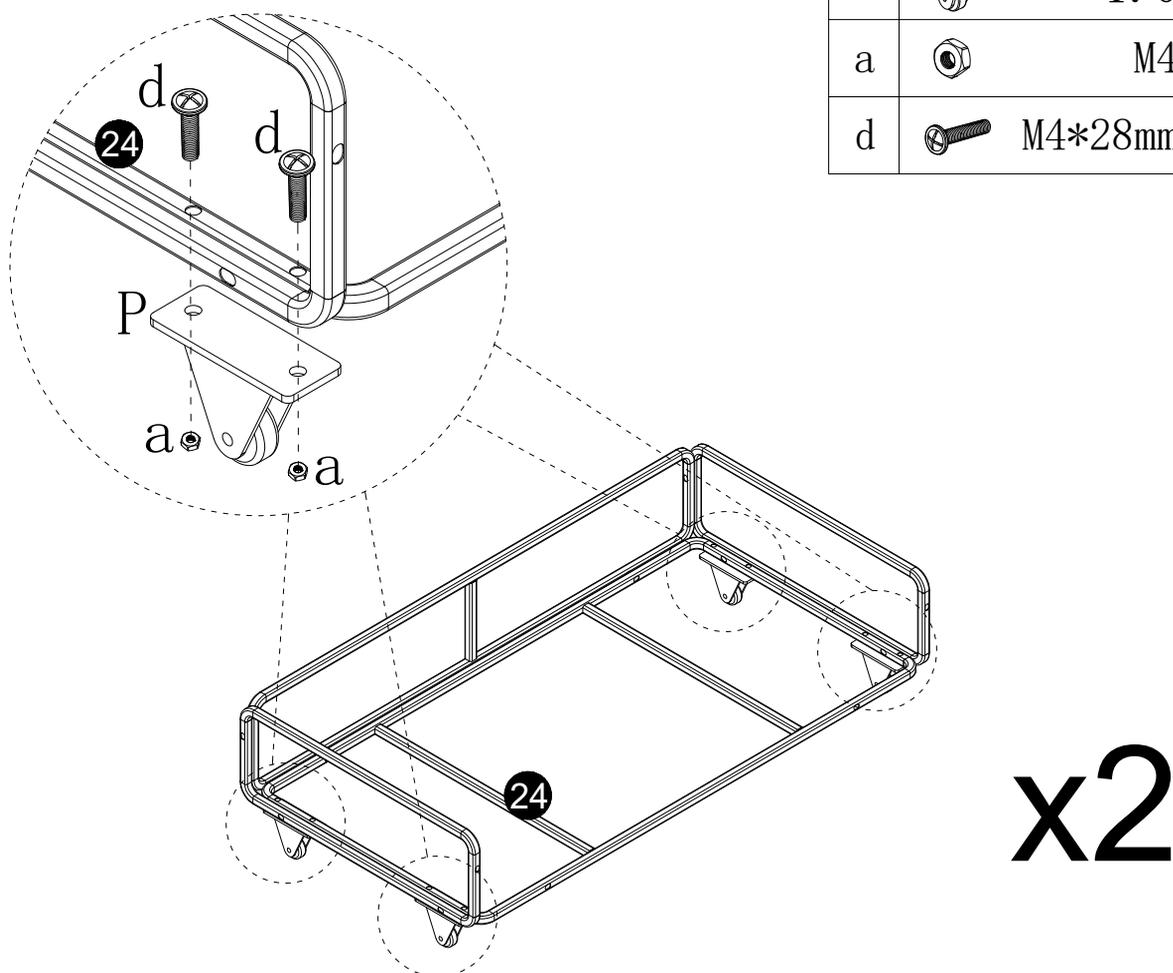P  1.0 8pcsa  M4 16pcsd  M4\*28mm 16pcs

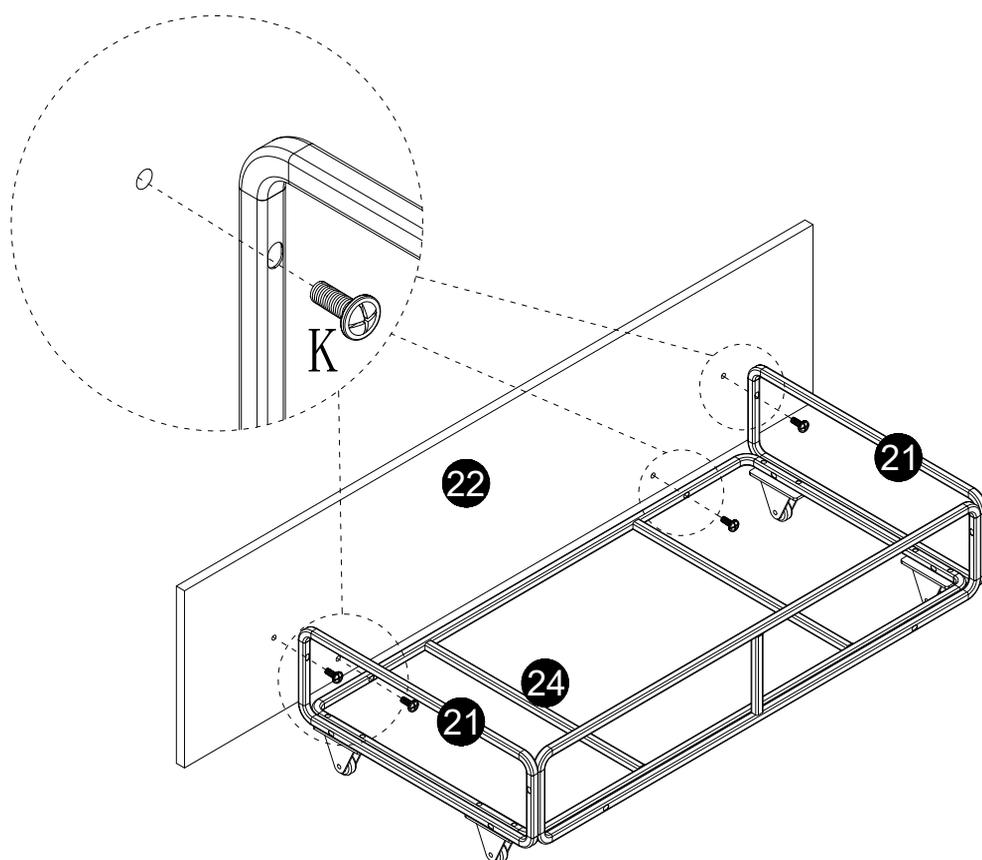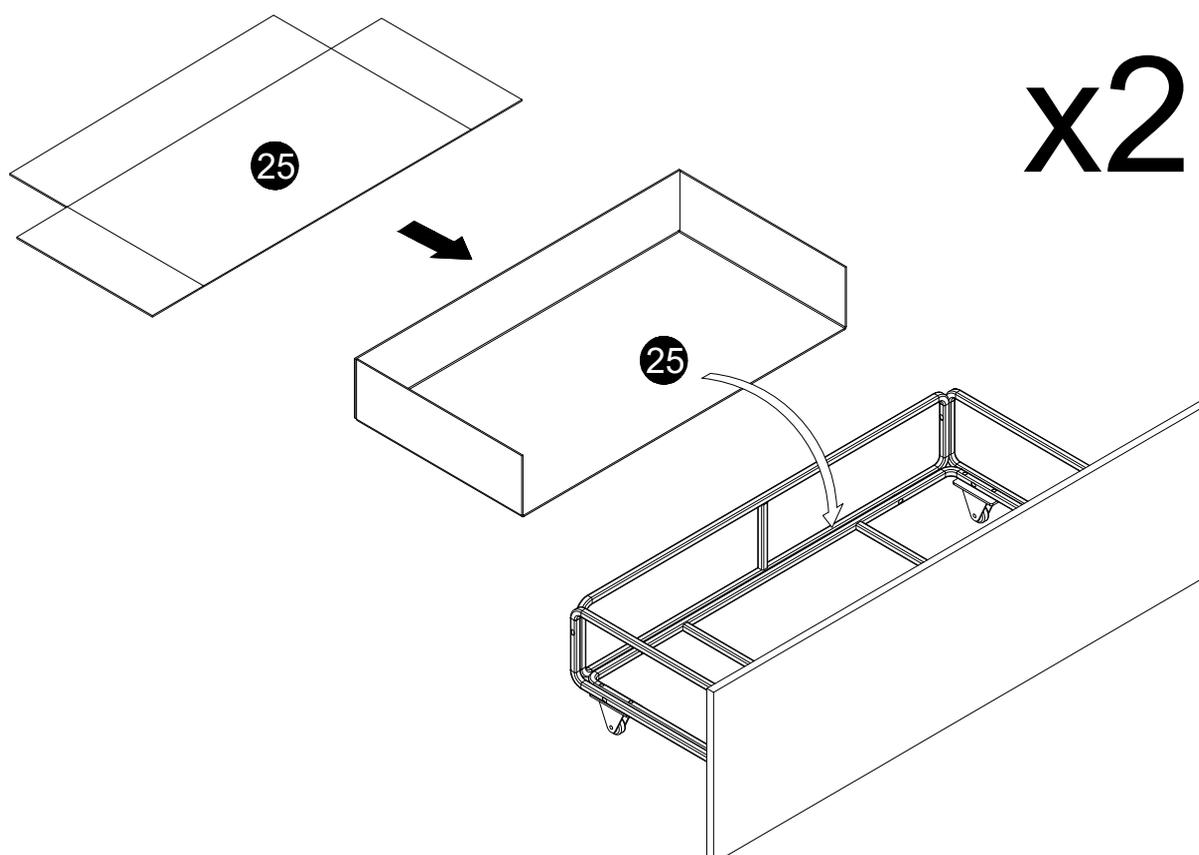**x2****x2**

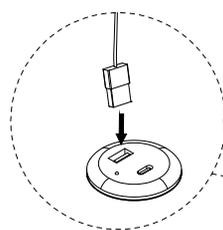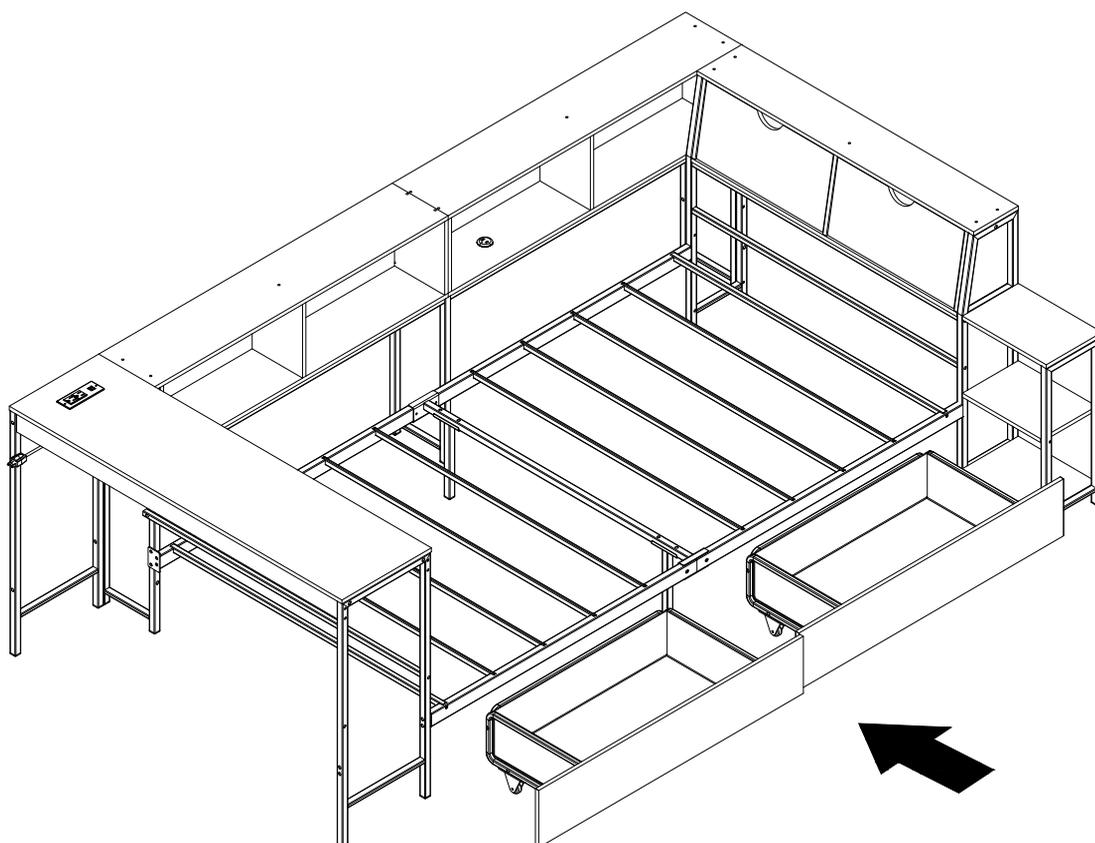


This LED light strip  
directly into the USB

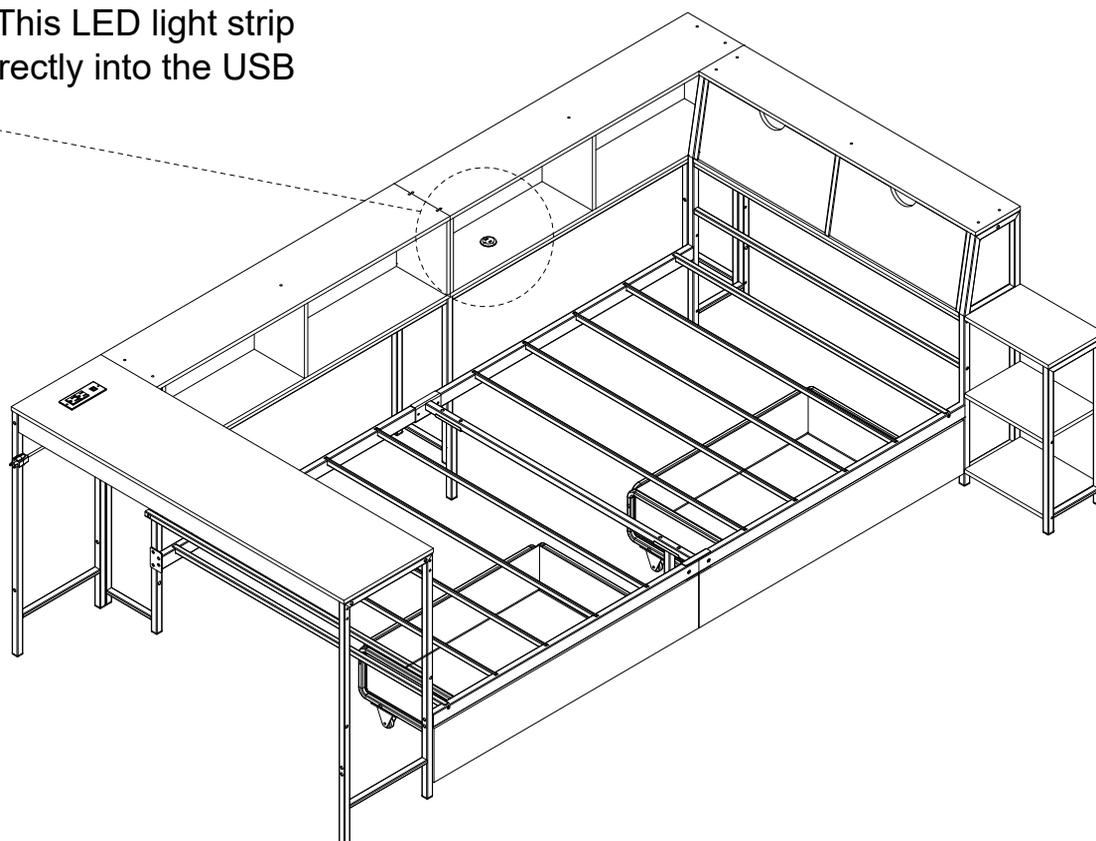

Note:


1. Should be assembled on flat ground to keep balance.
2. Before completing the installation, do not tighten the screws.

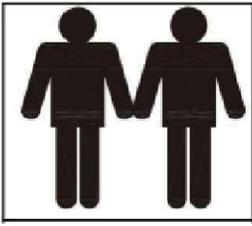

It needs at least Before starting the two people to install.




Before starting the assembly, you must read the whole manual and follow the instructions

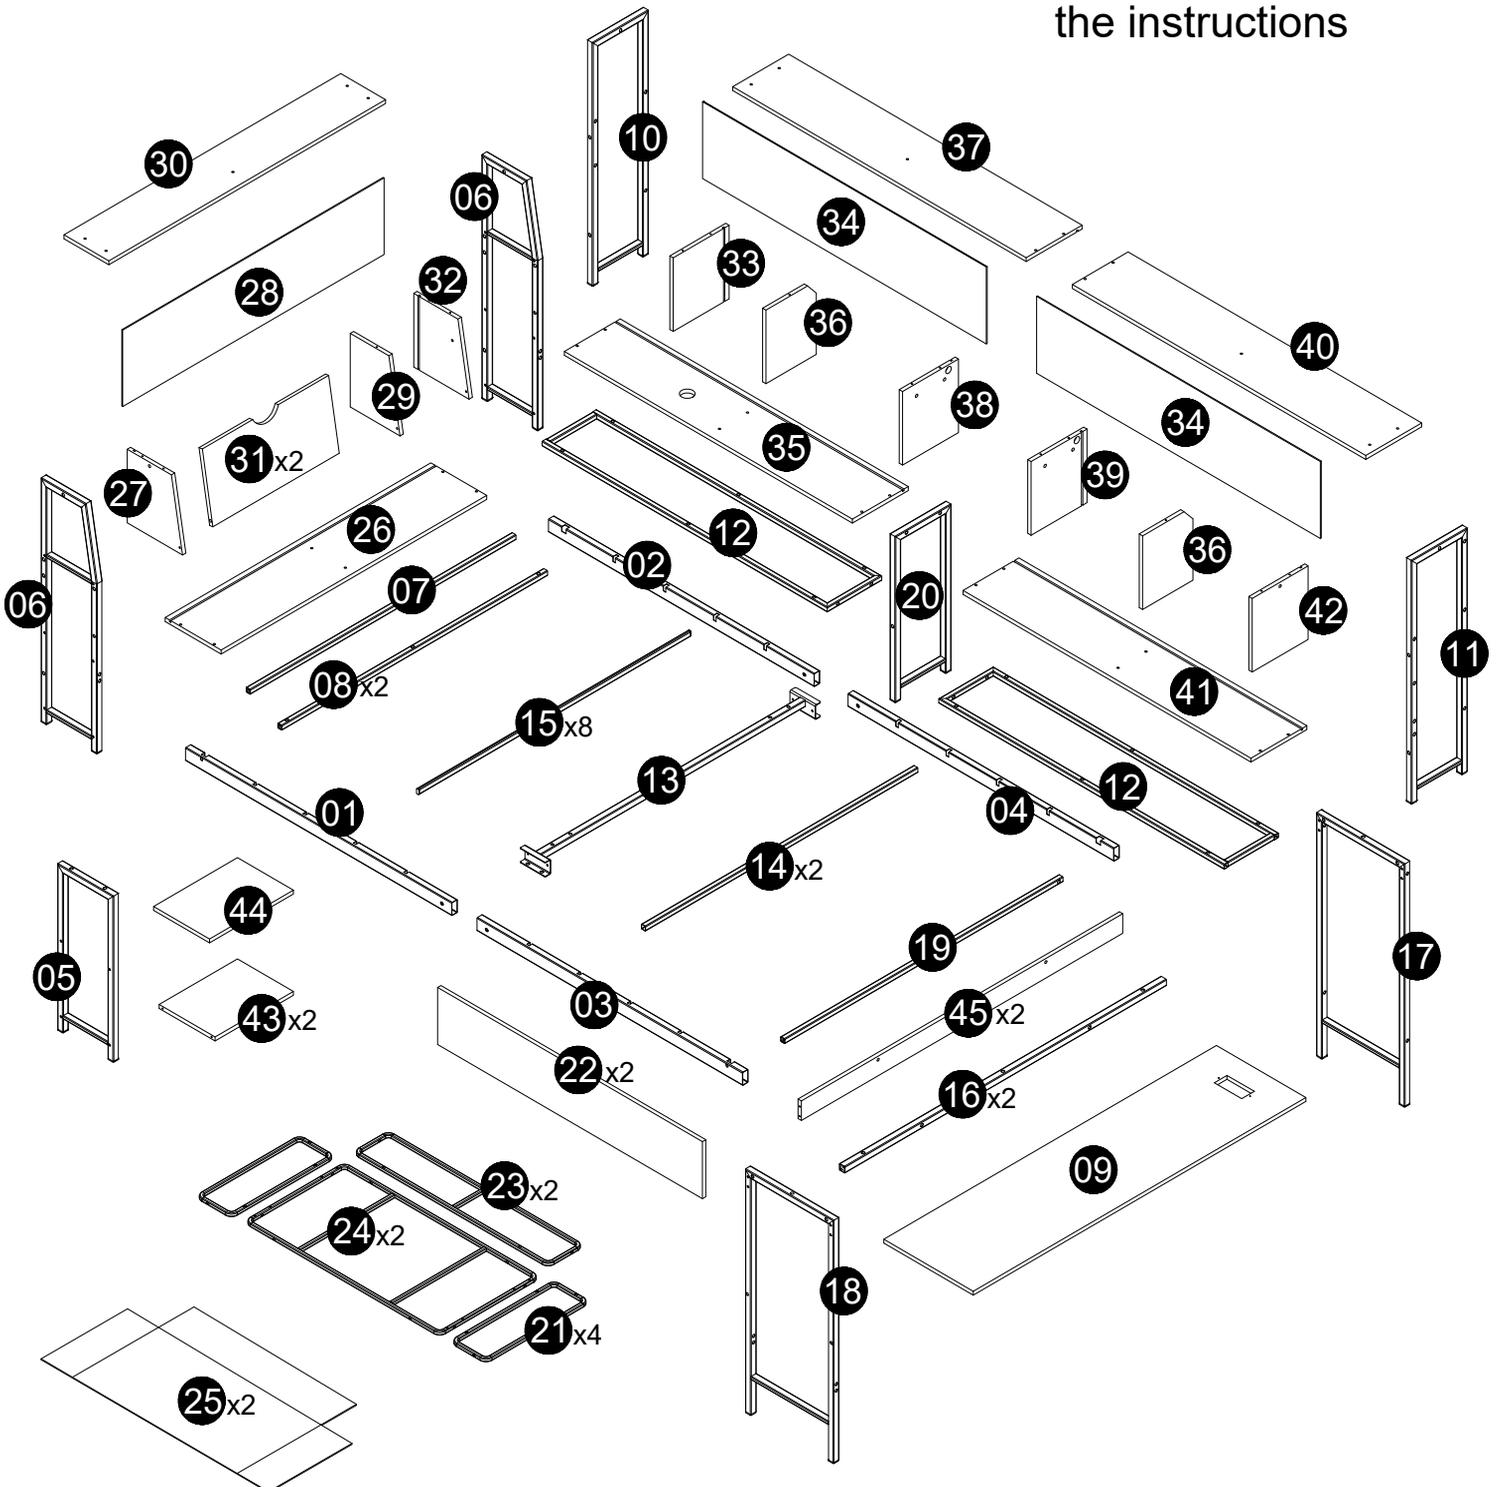


1

L		2pcs
M	 M4*10mm	4pcs

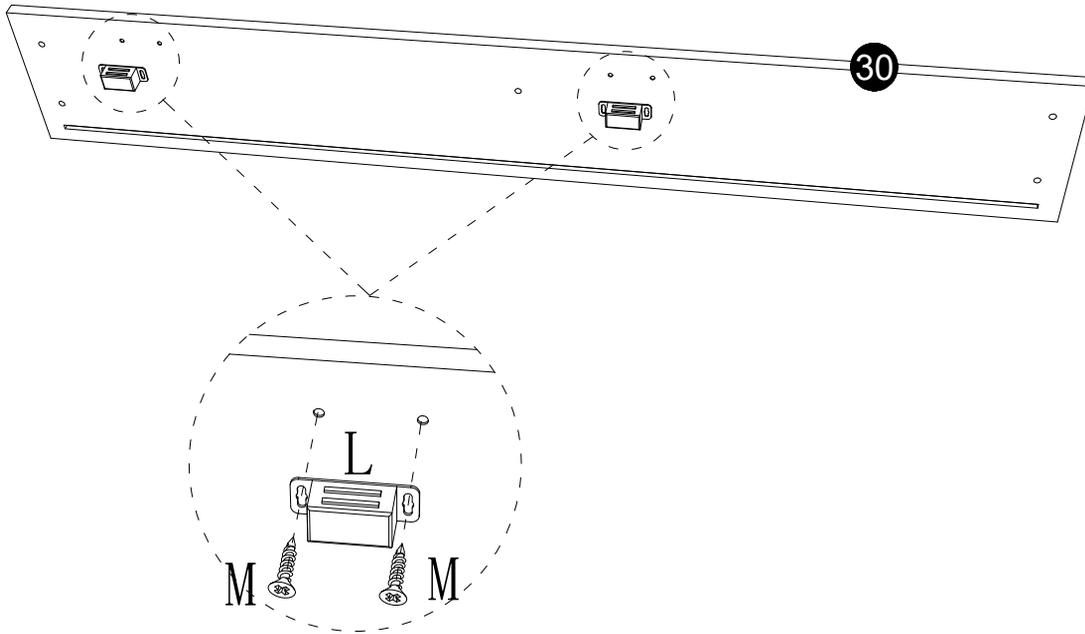


2

L		2pcs
M	 M4*10mm	4pcs

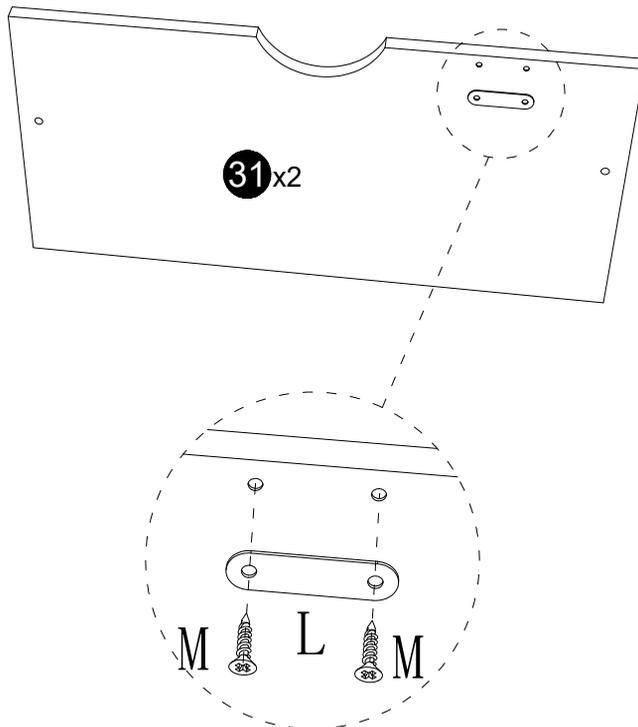


3

A  M5\*40mm 6pcs

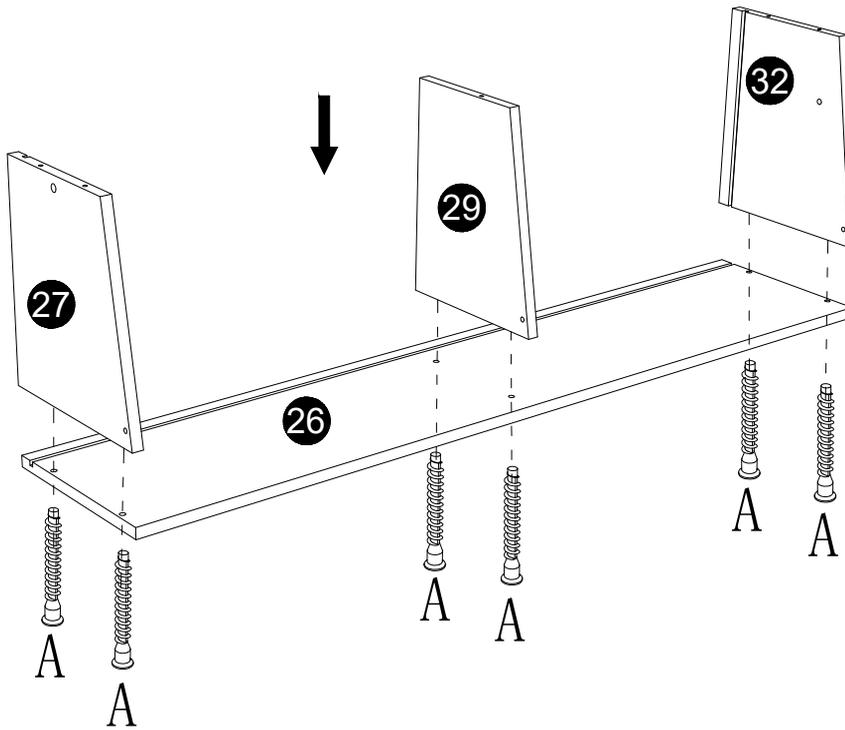


4

A  M5\*40mm 5pcs

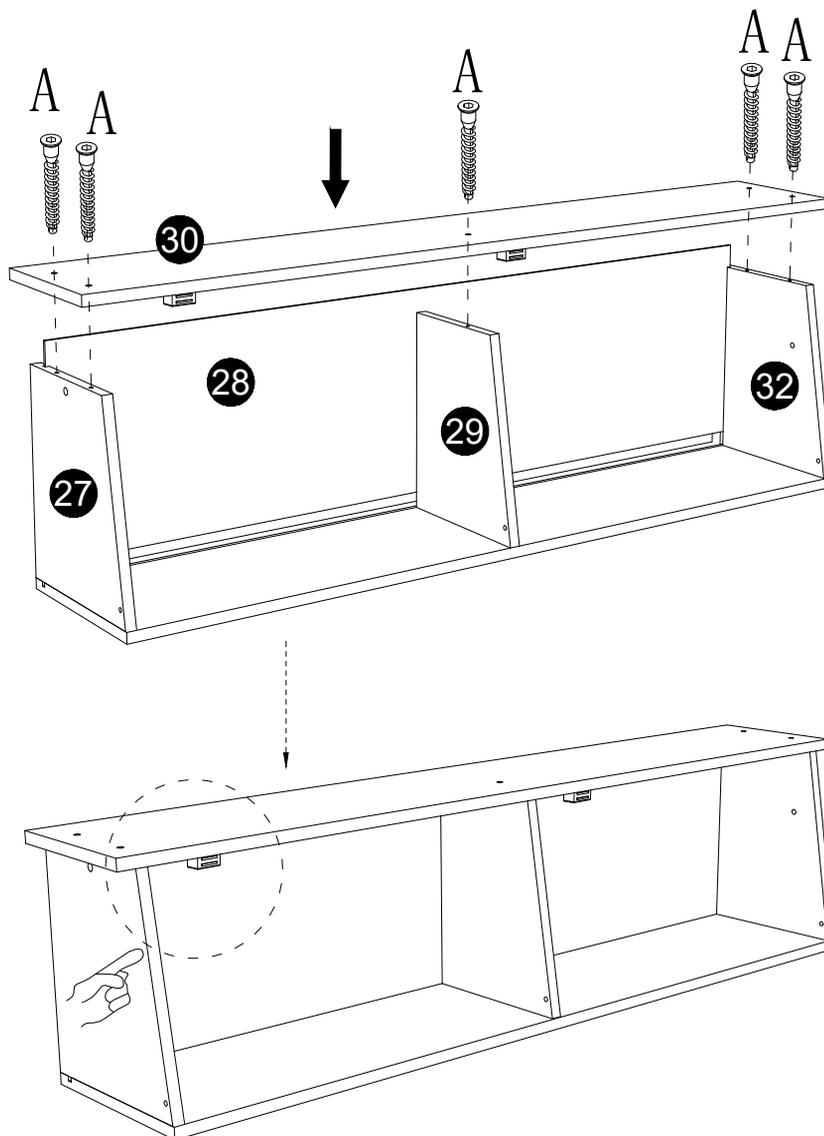


5

A  M5\*40mm 10pcs

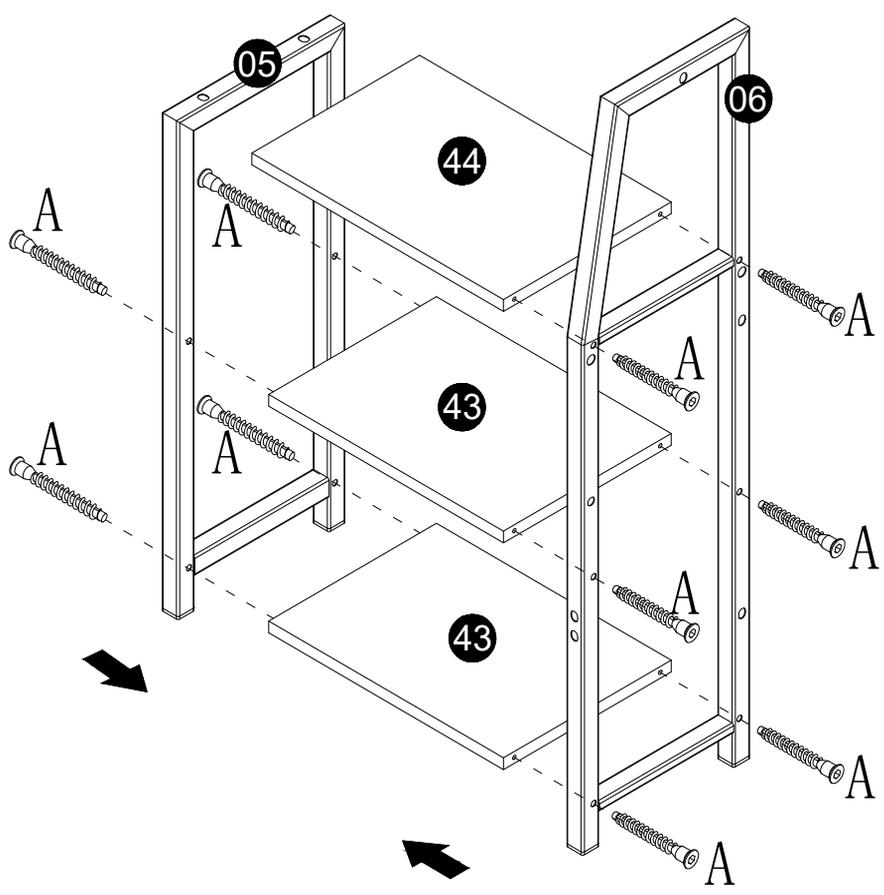

6

D  M6\*28mm 2pcs

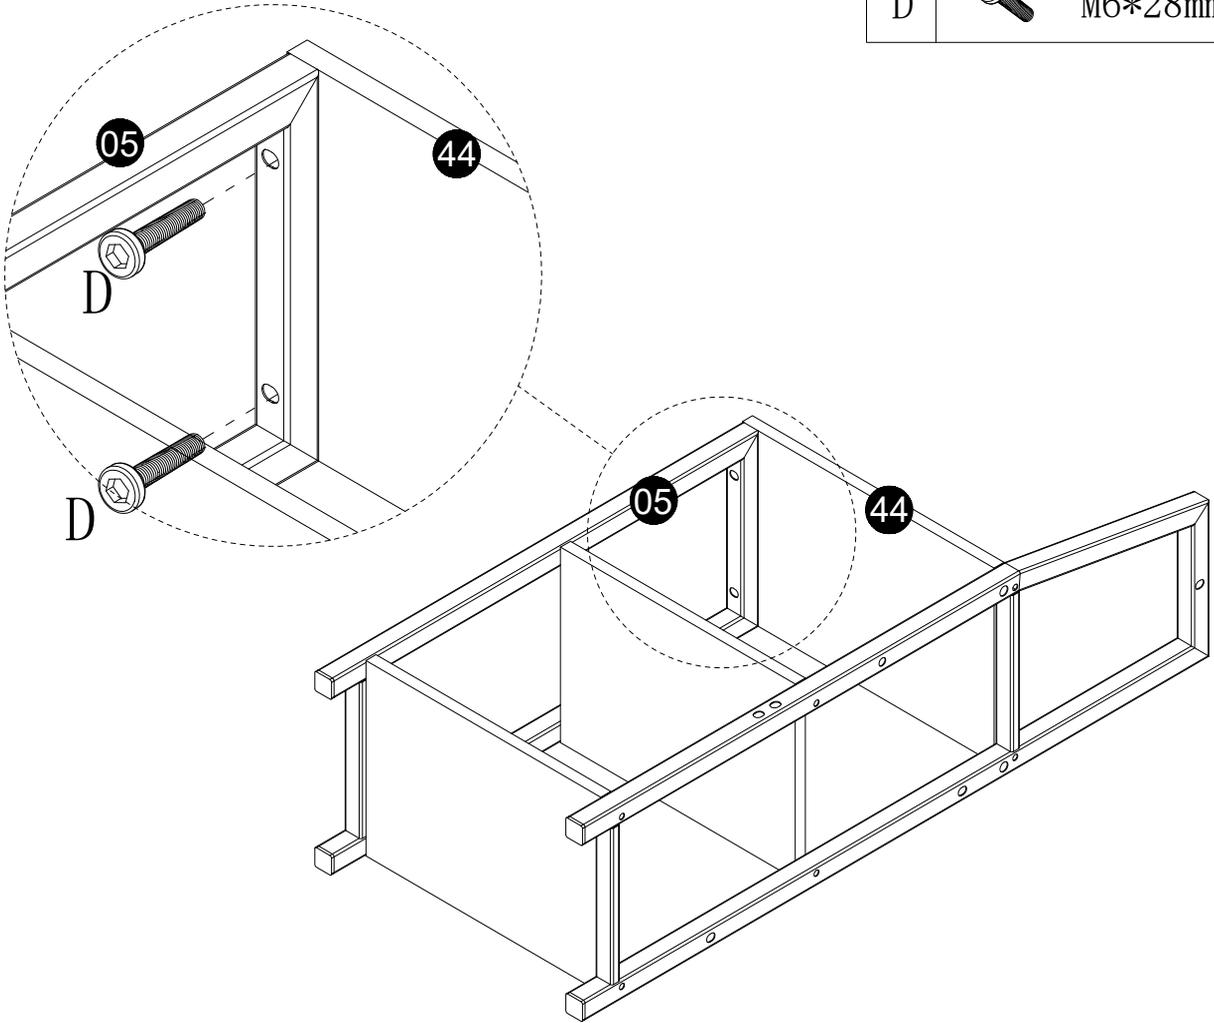


7

N



M6\*40mm 4pcs

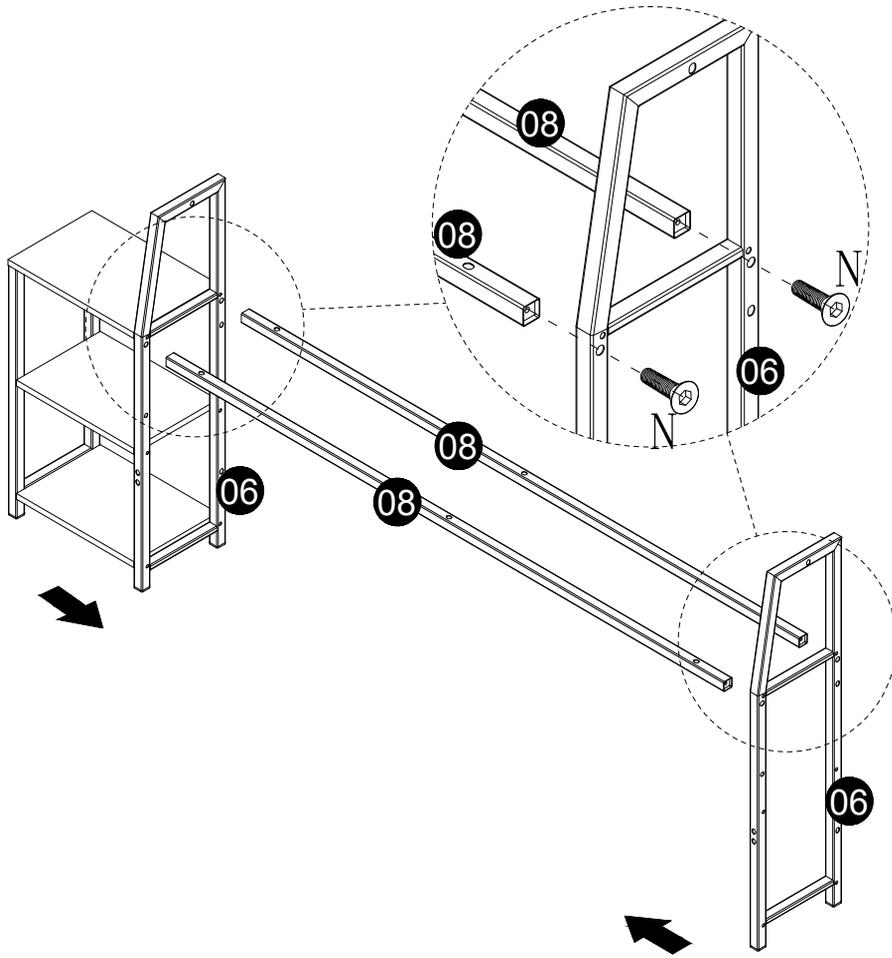


8

C




M6\*25mm 6pcs

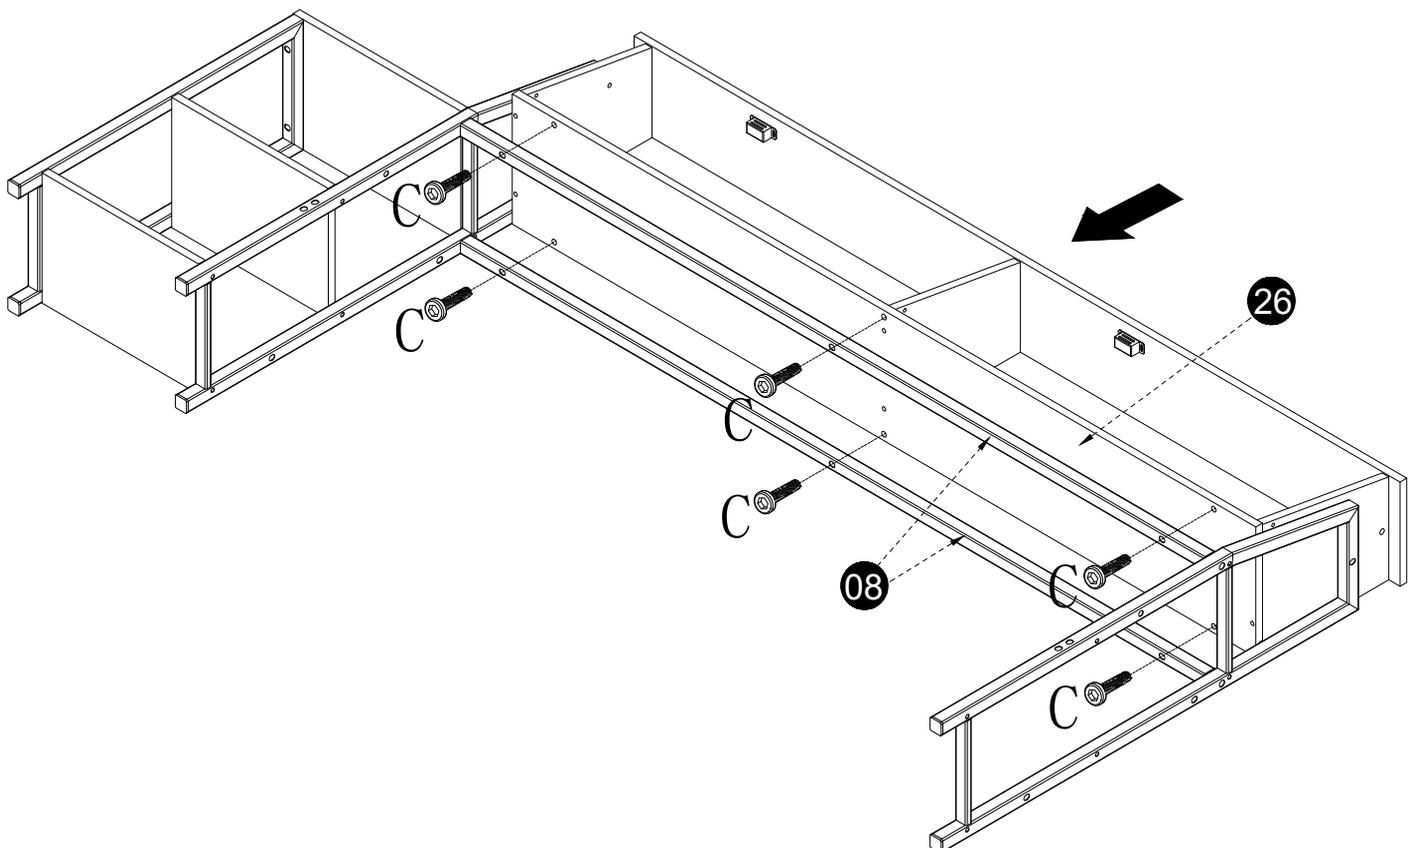


9

D		M6*28mm	2pcs
G		M6*40mm	2pcs

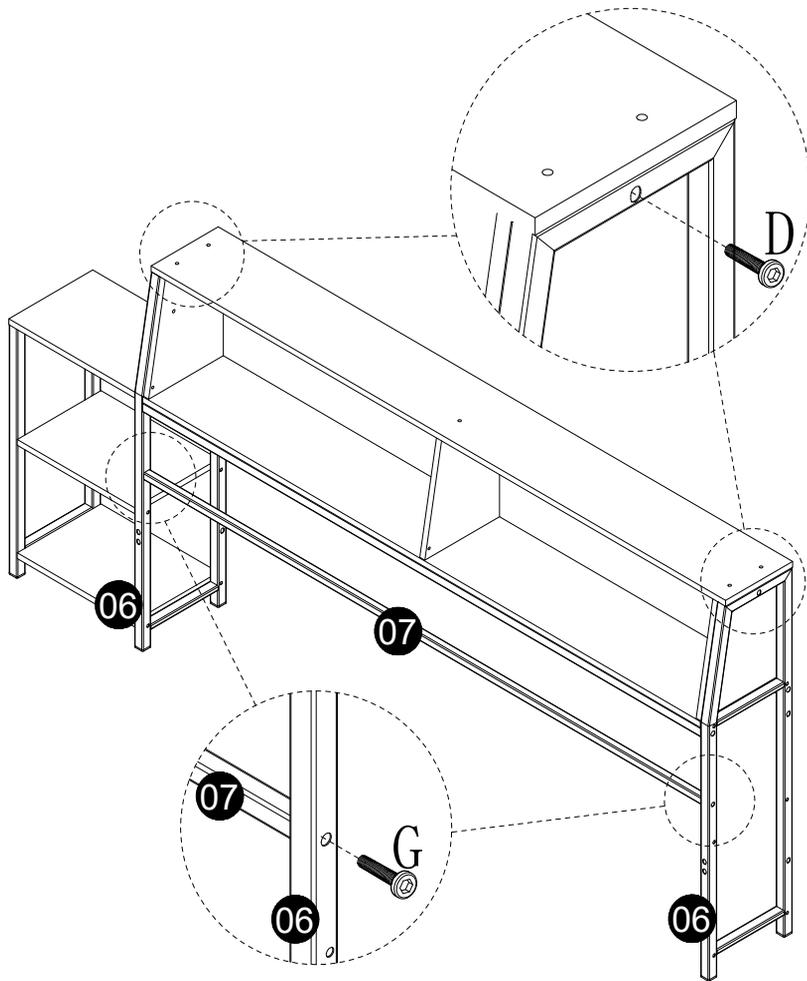


10

S		4pcs
---	---	------

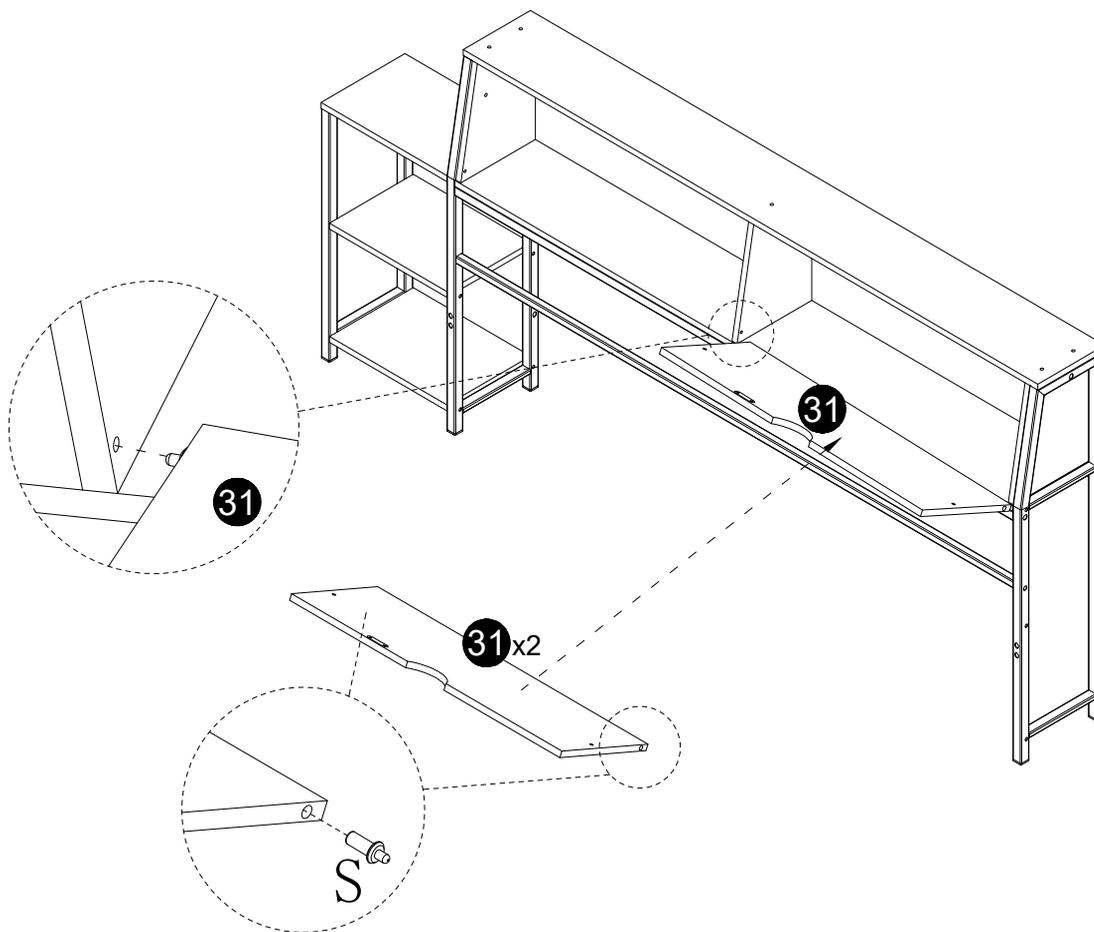


11



J		M4*14mm	4pcs
O			2pcs

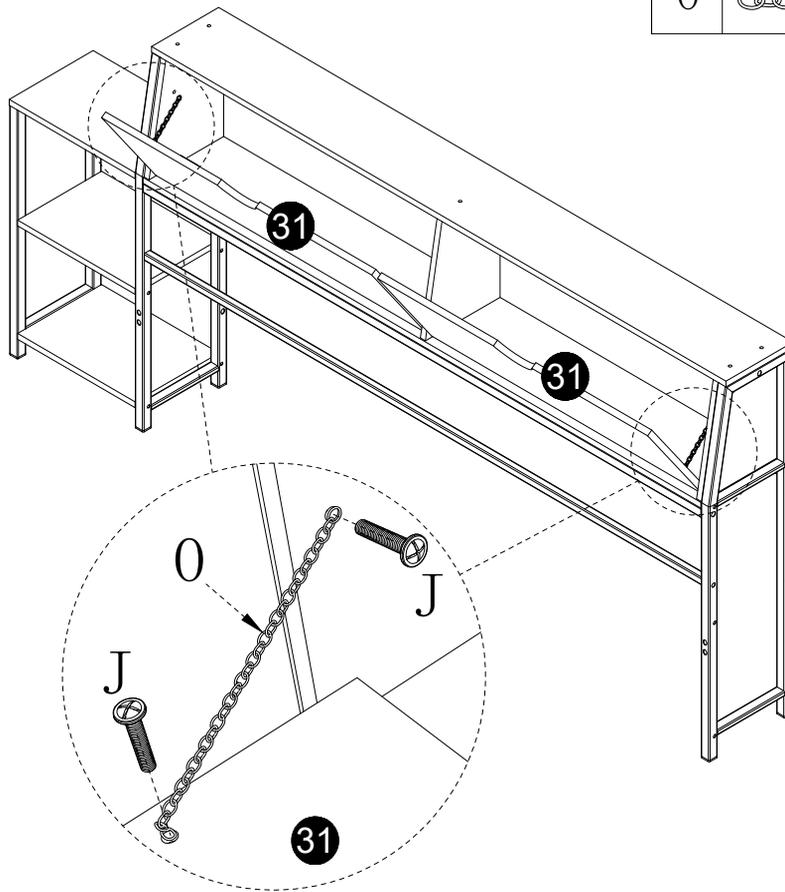

12

D		M6*28mm	4pcs
F		M6	4pcs
R		23cm	2pcs

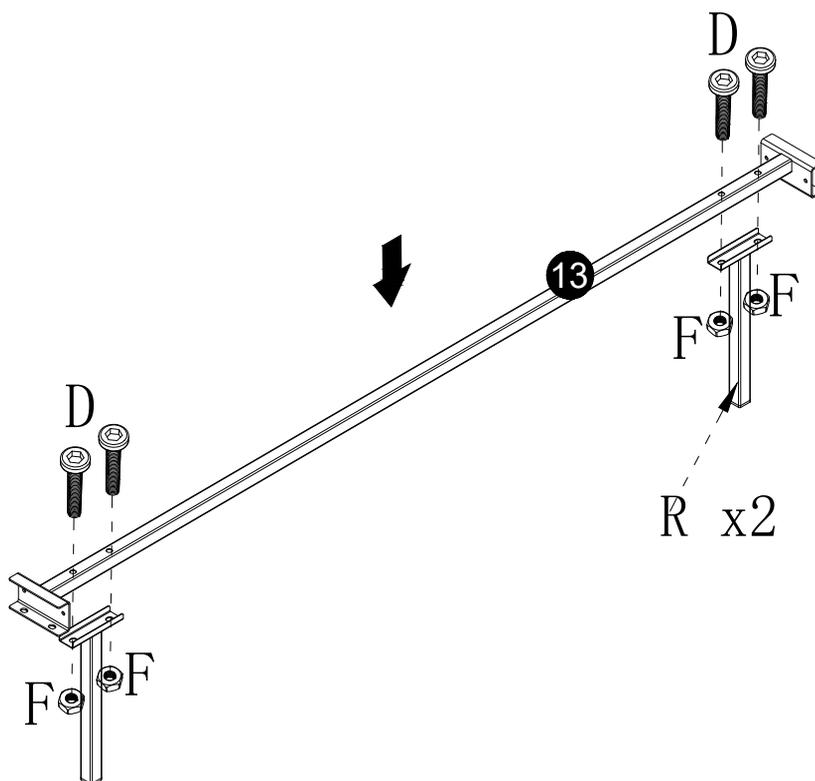

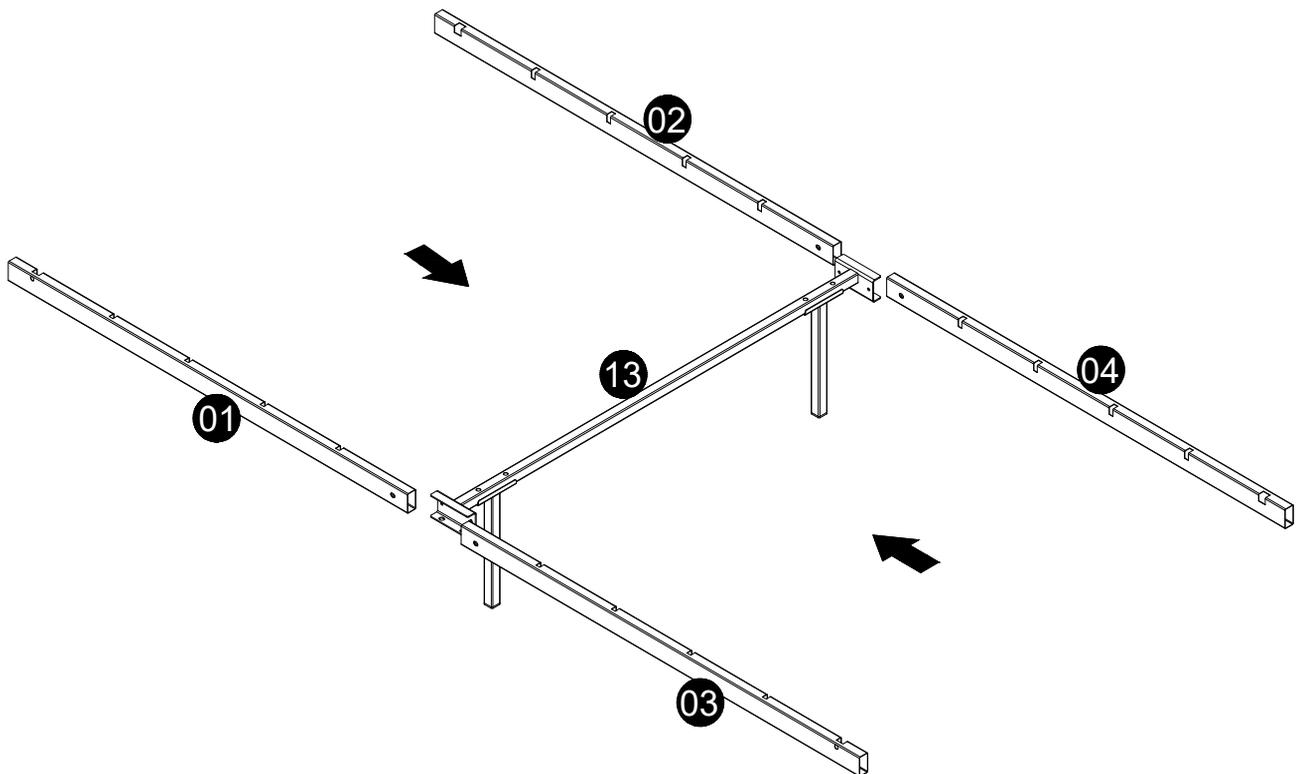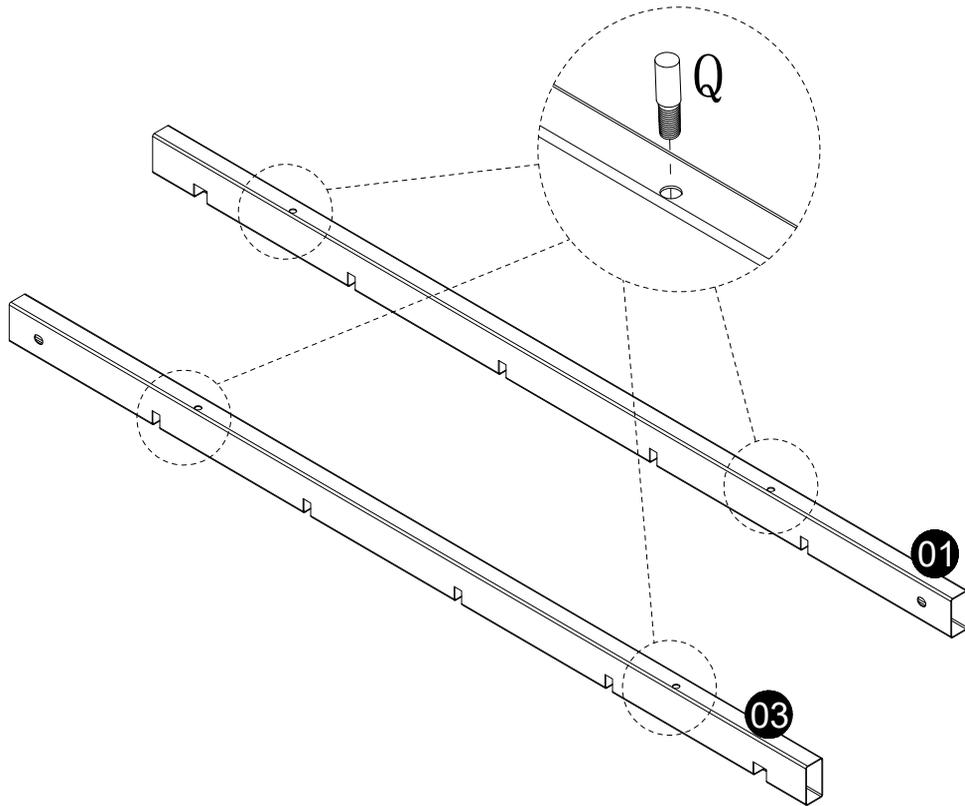


15

D



M6\*28mm 4pcs

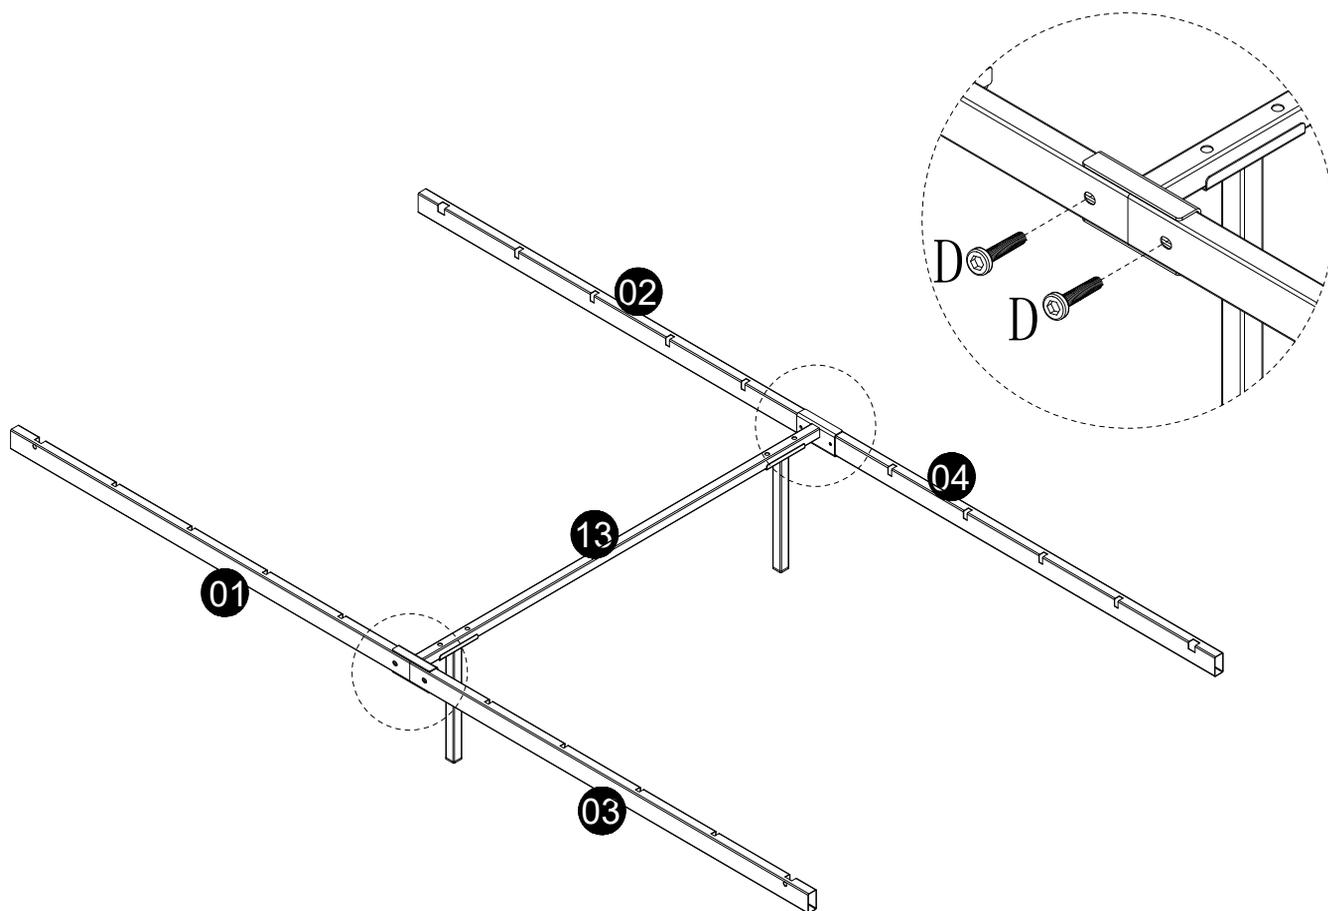


16

A




M5\*40mm 6pcs

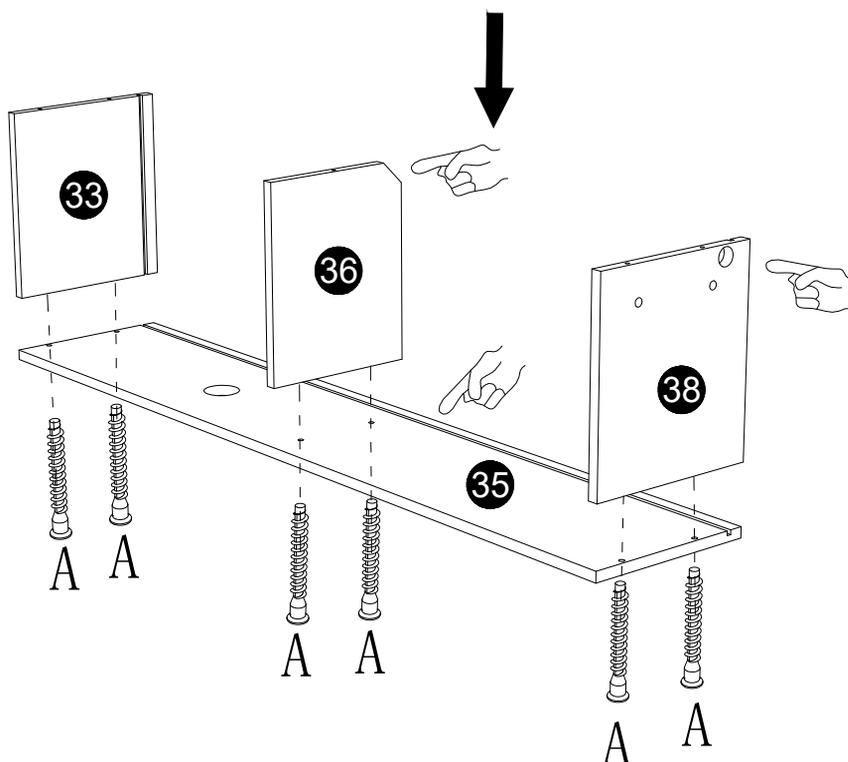


17

A  M5\*40mm 5pcs

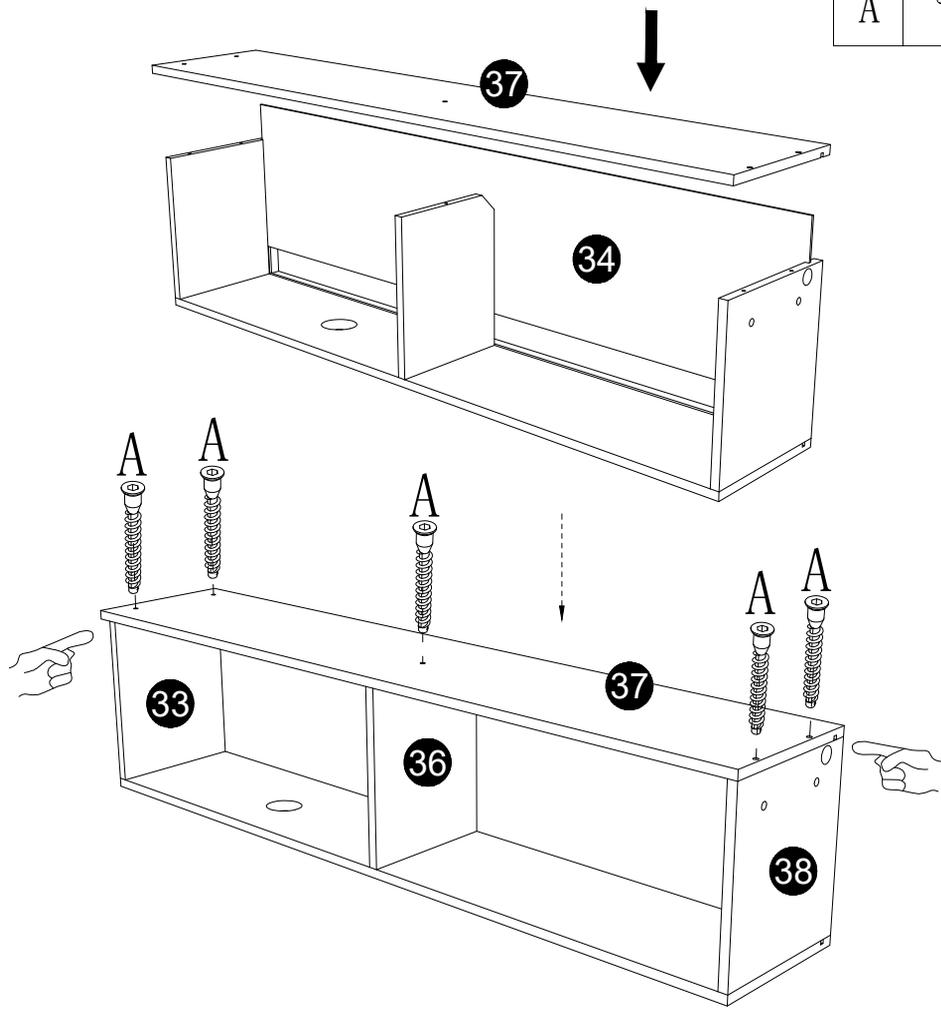


18

A  M5\*40mm 6pcs

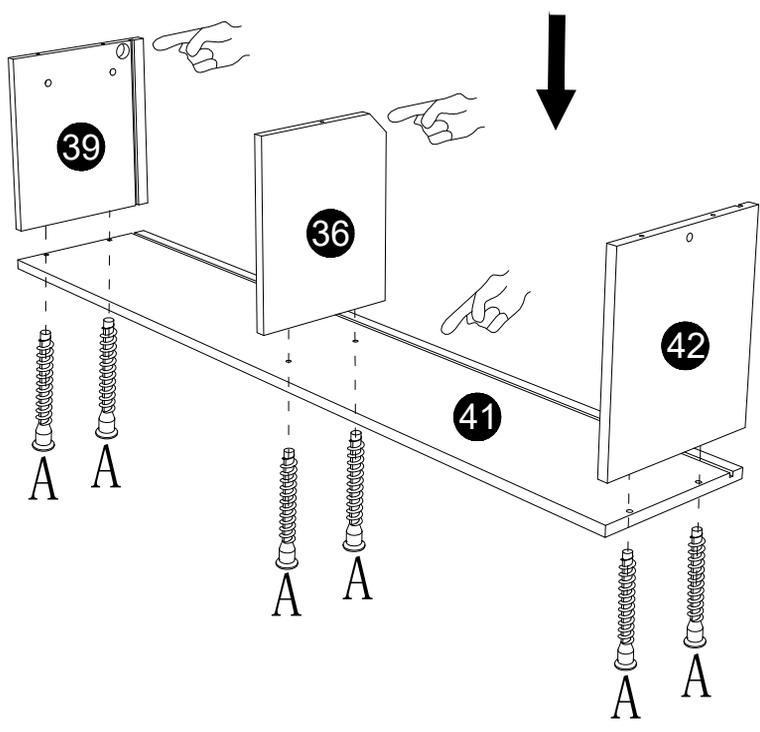


19

A  M5\*40mm 5pcs

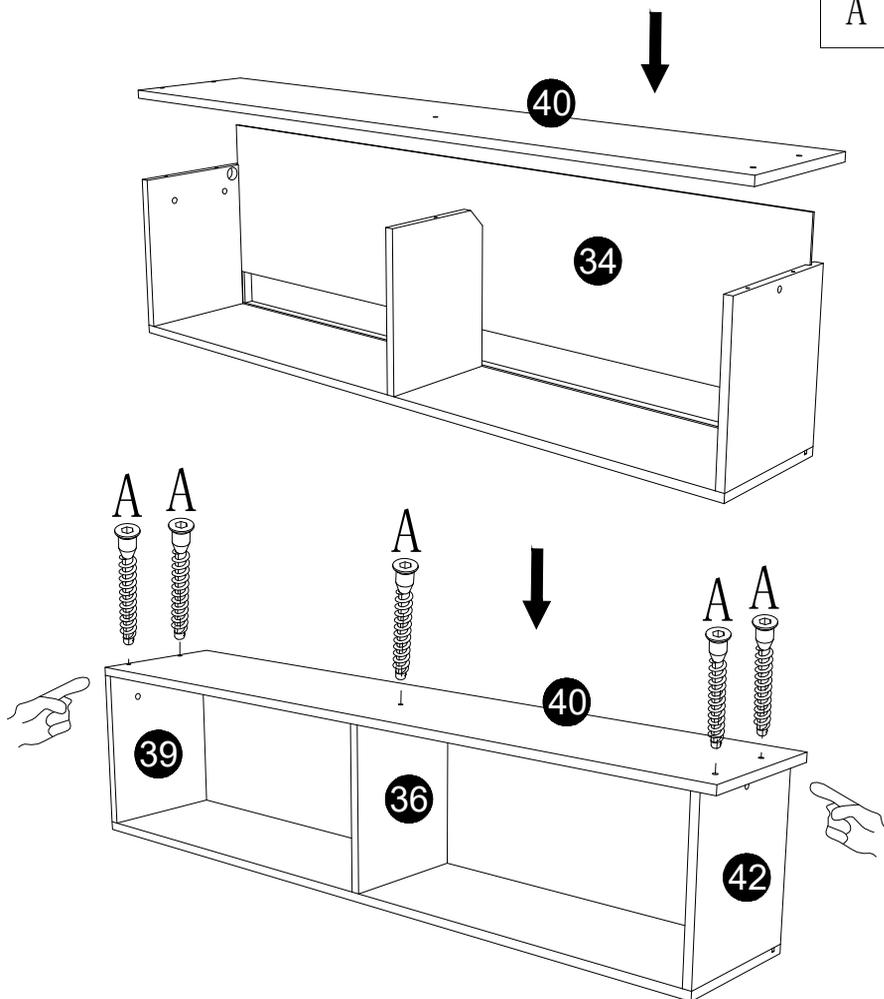


20

E  M6\*60mm 2pcs  
 F  M6 2pcs  
 N  M6\*40mm 4pcs

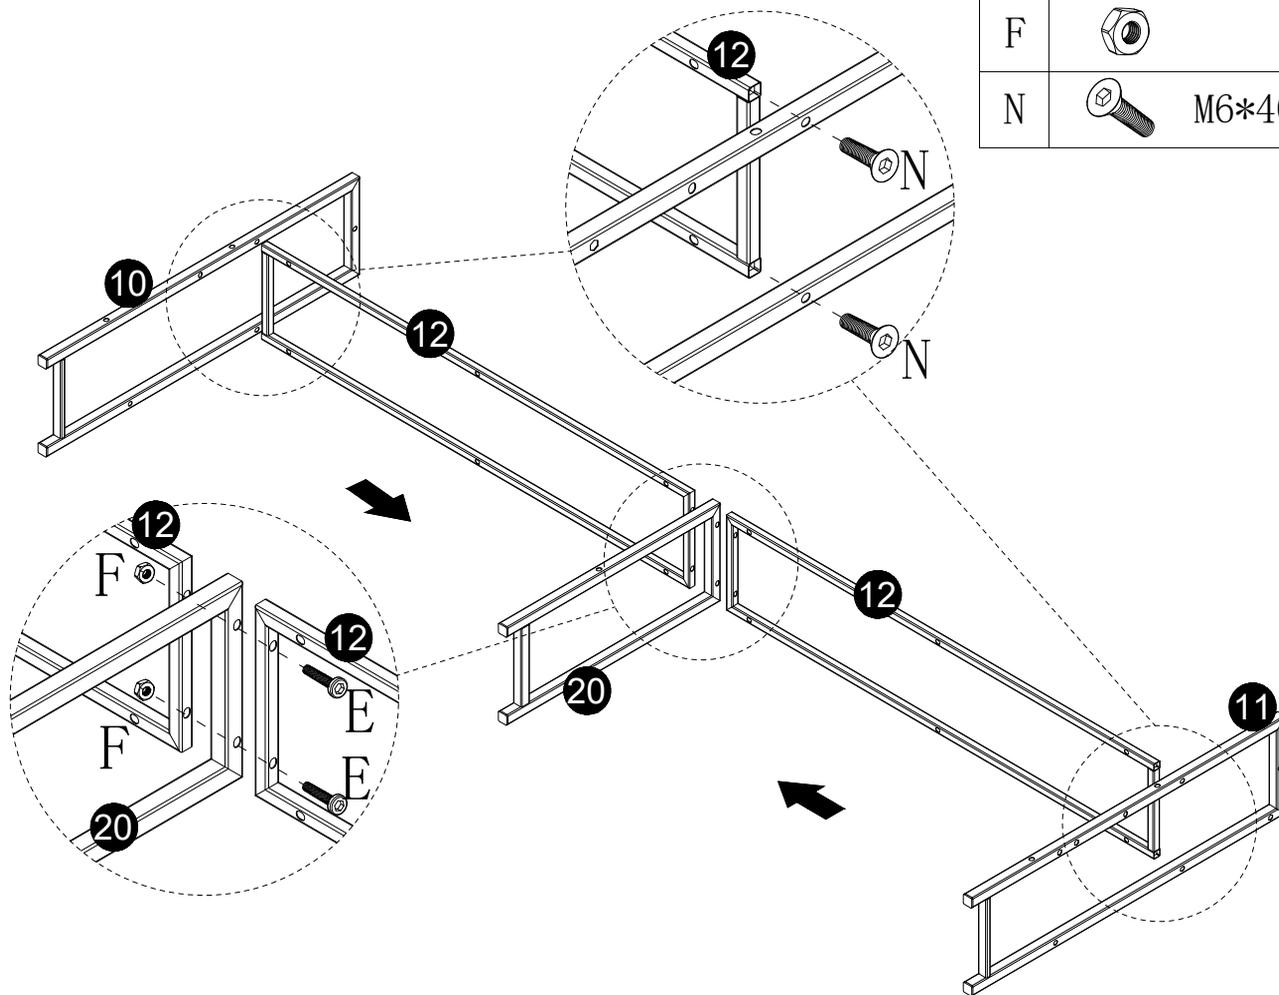


21

B		M6*15mm	2pcs
H		M6*15mm	2pcs

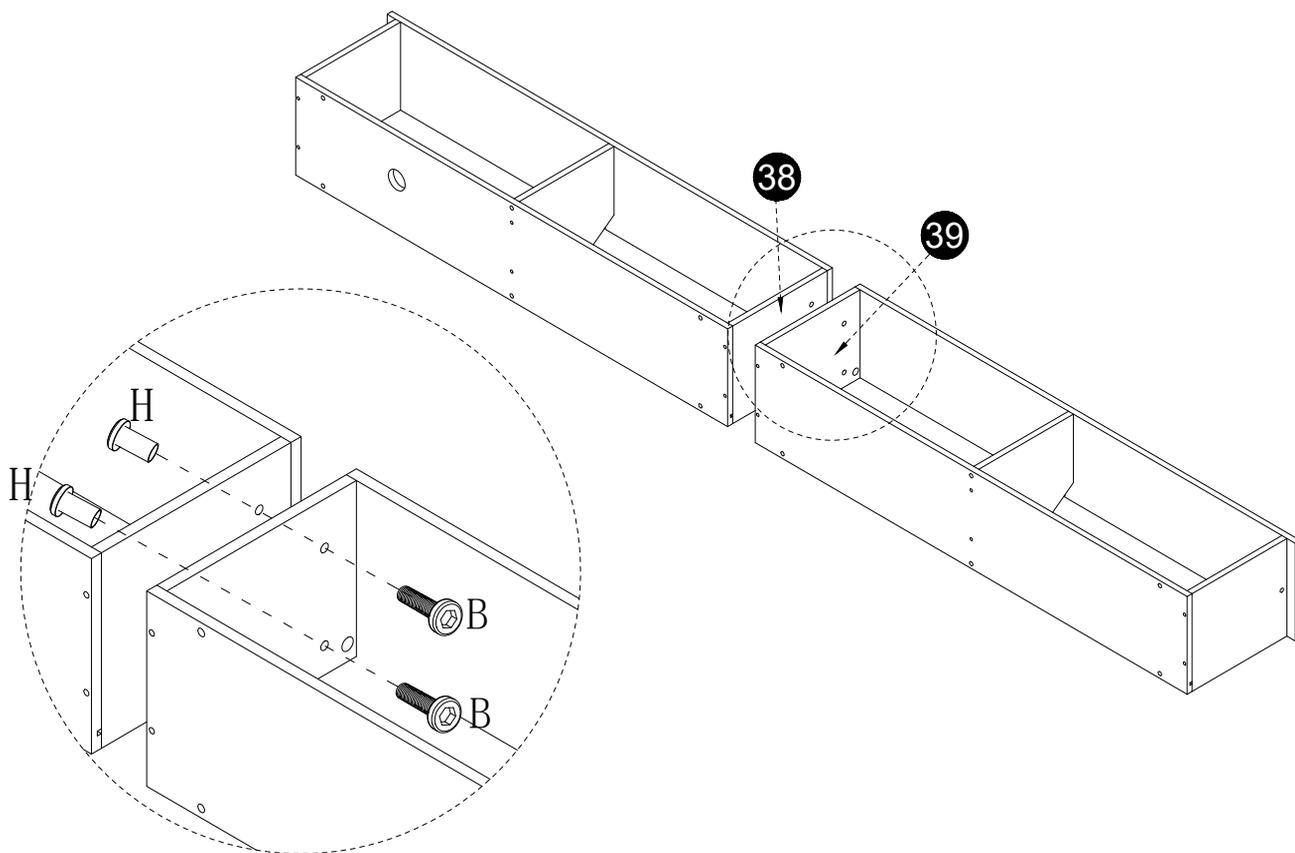


22

C		M6*25mm	12pcs
---	---	---------	-------

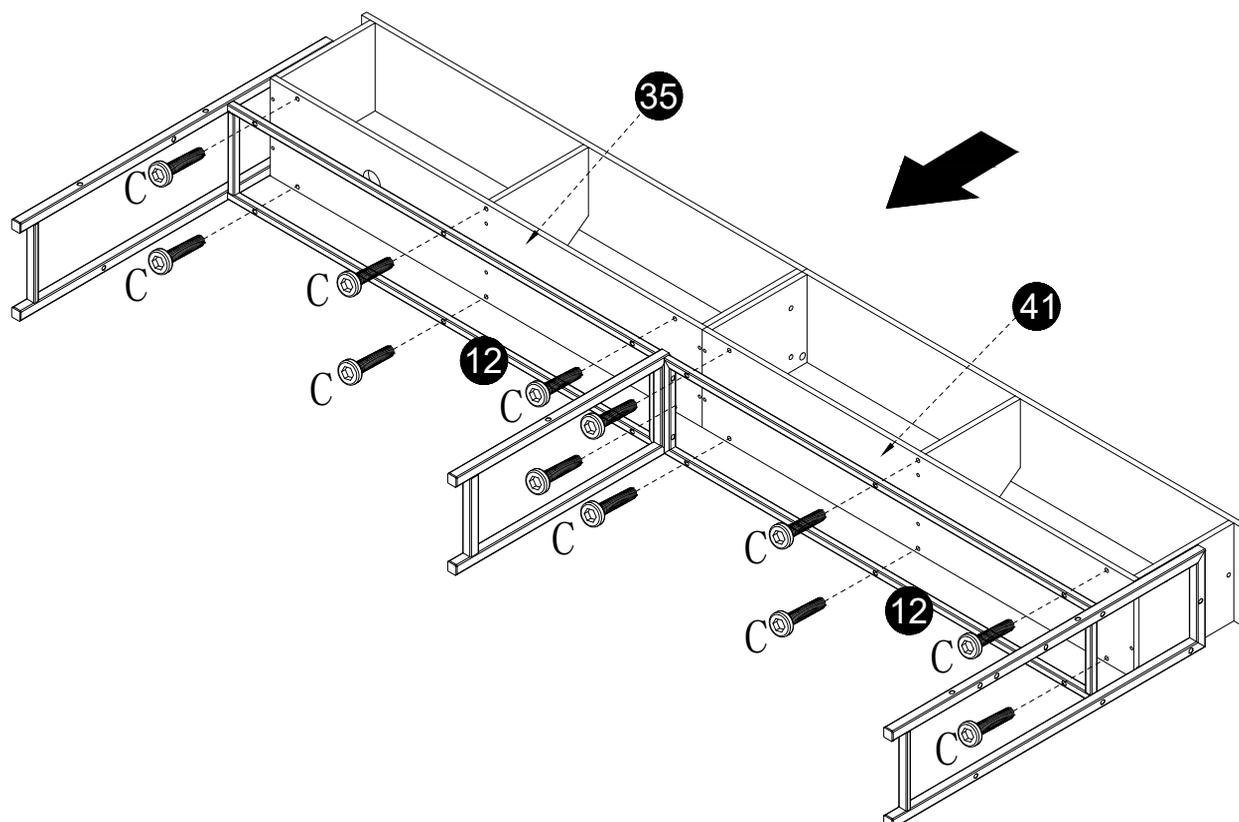


23

T		1pc
D		M6*28mm 2pcs

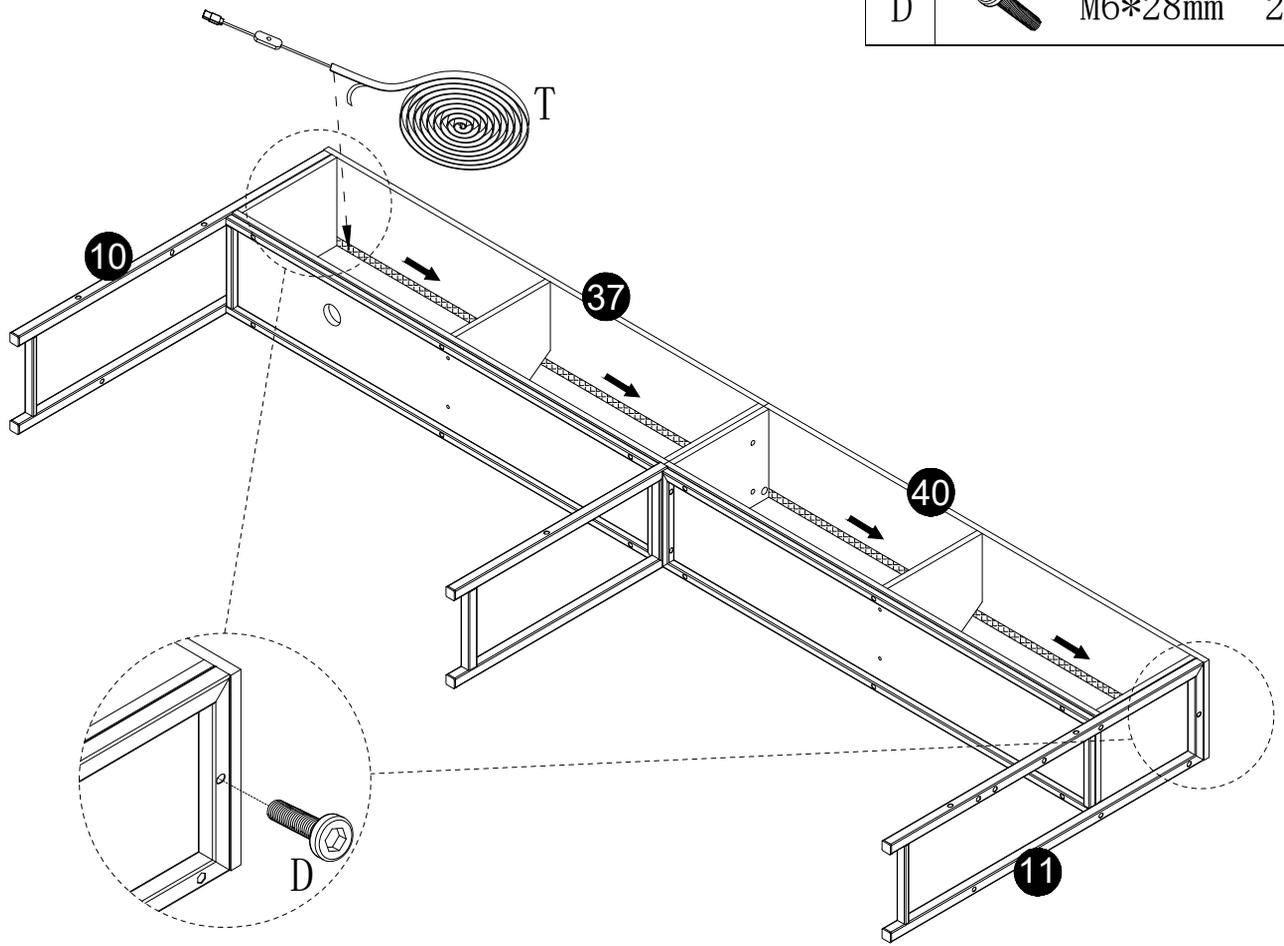


24

G		M6*40mm 4pcs
---	---	--------------

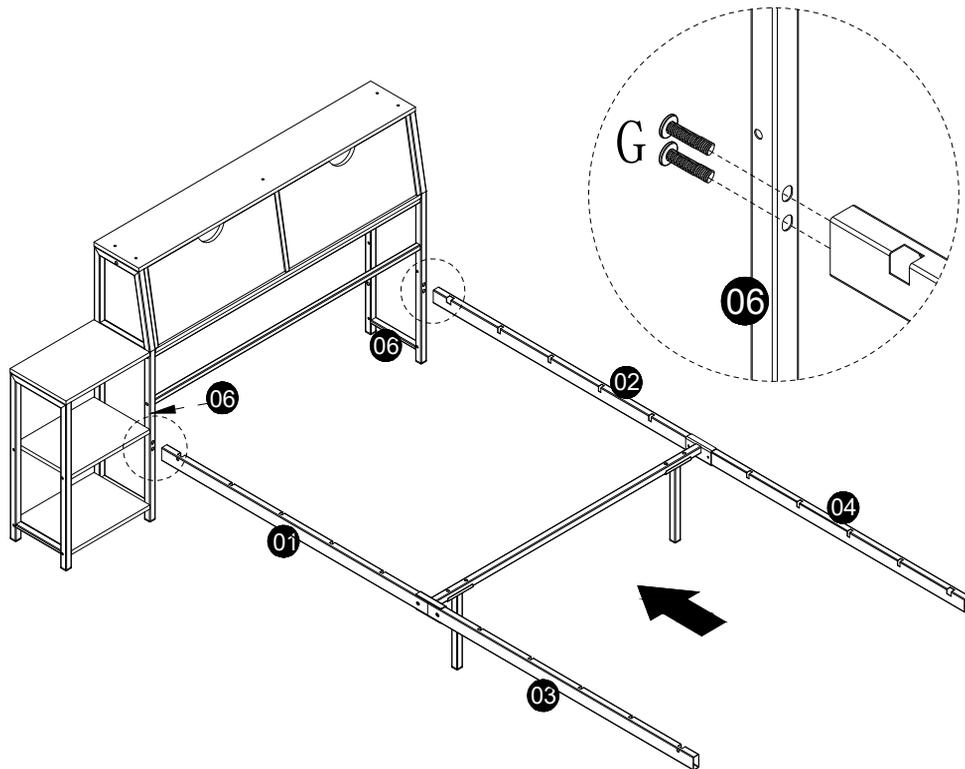


25

D		M6*28mm	1pc
I		M6*50mm	2pcs
F		M6	2pcs

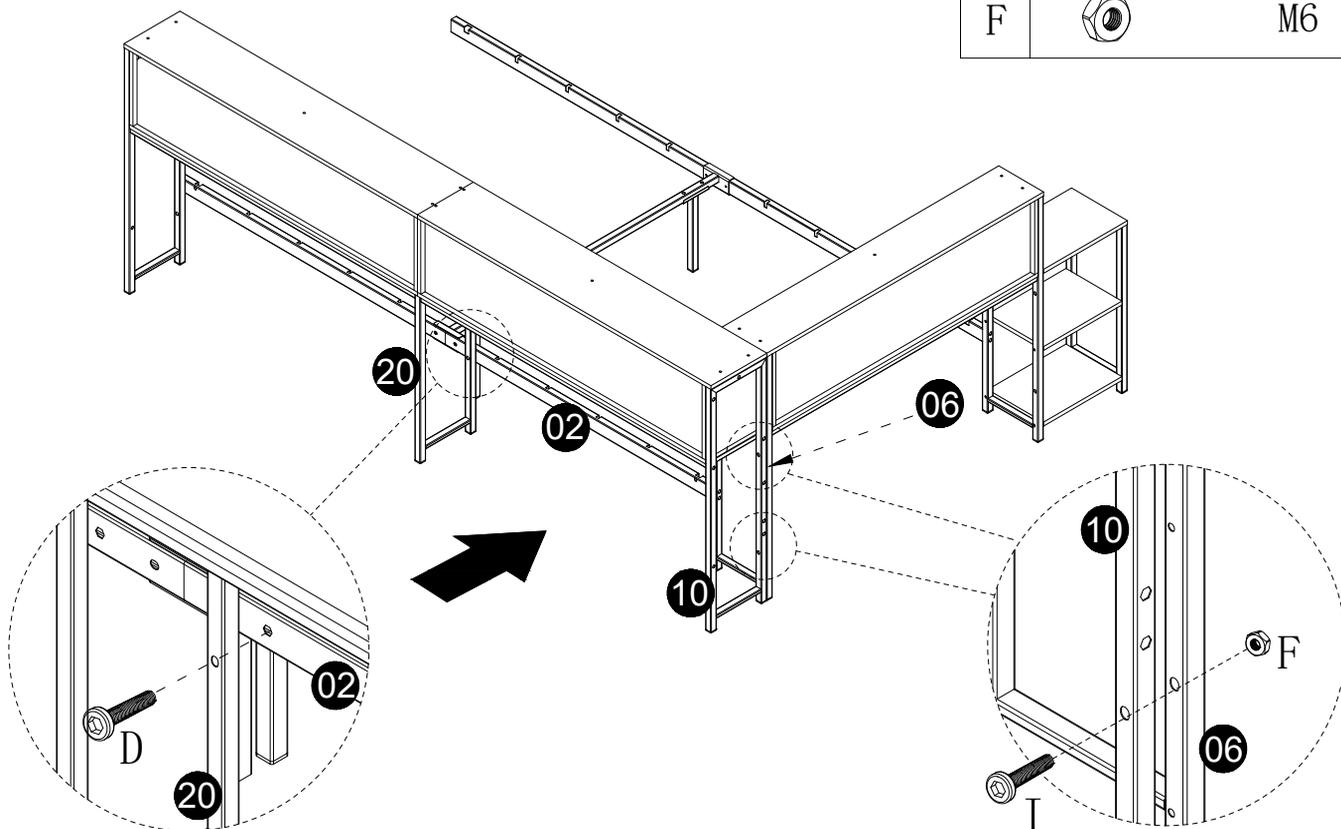





26

B		M6*15mm	2pcs
D		M6*28mm	2pcs
b			1pc

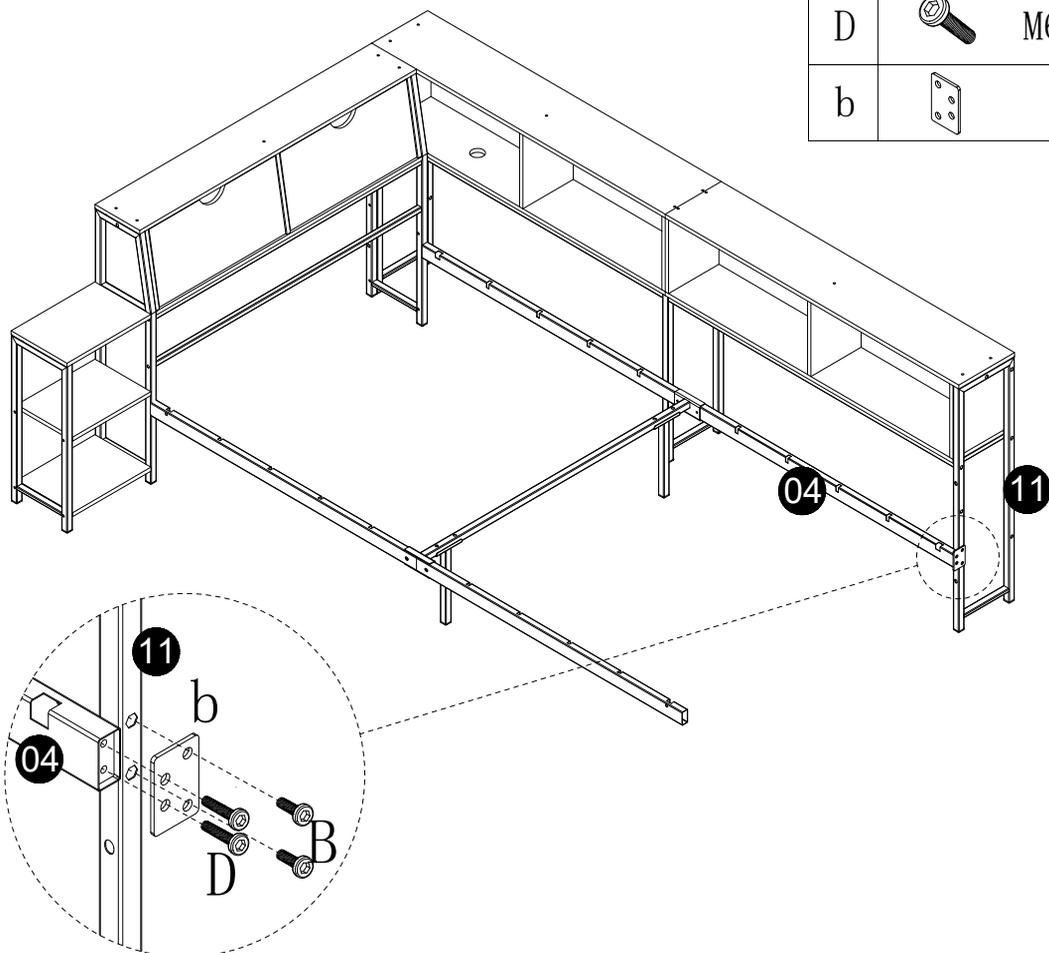




27


F		M6	1pc	D		M6*28mm	1pc
				G		M6*40mm	2pcs
				I		M6*50mm	1pc

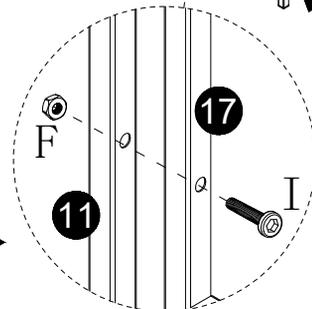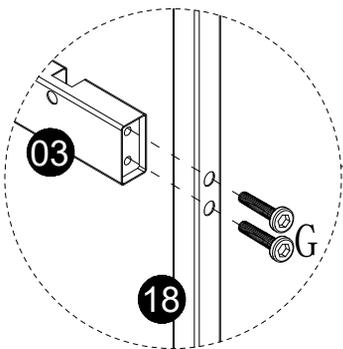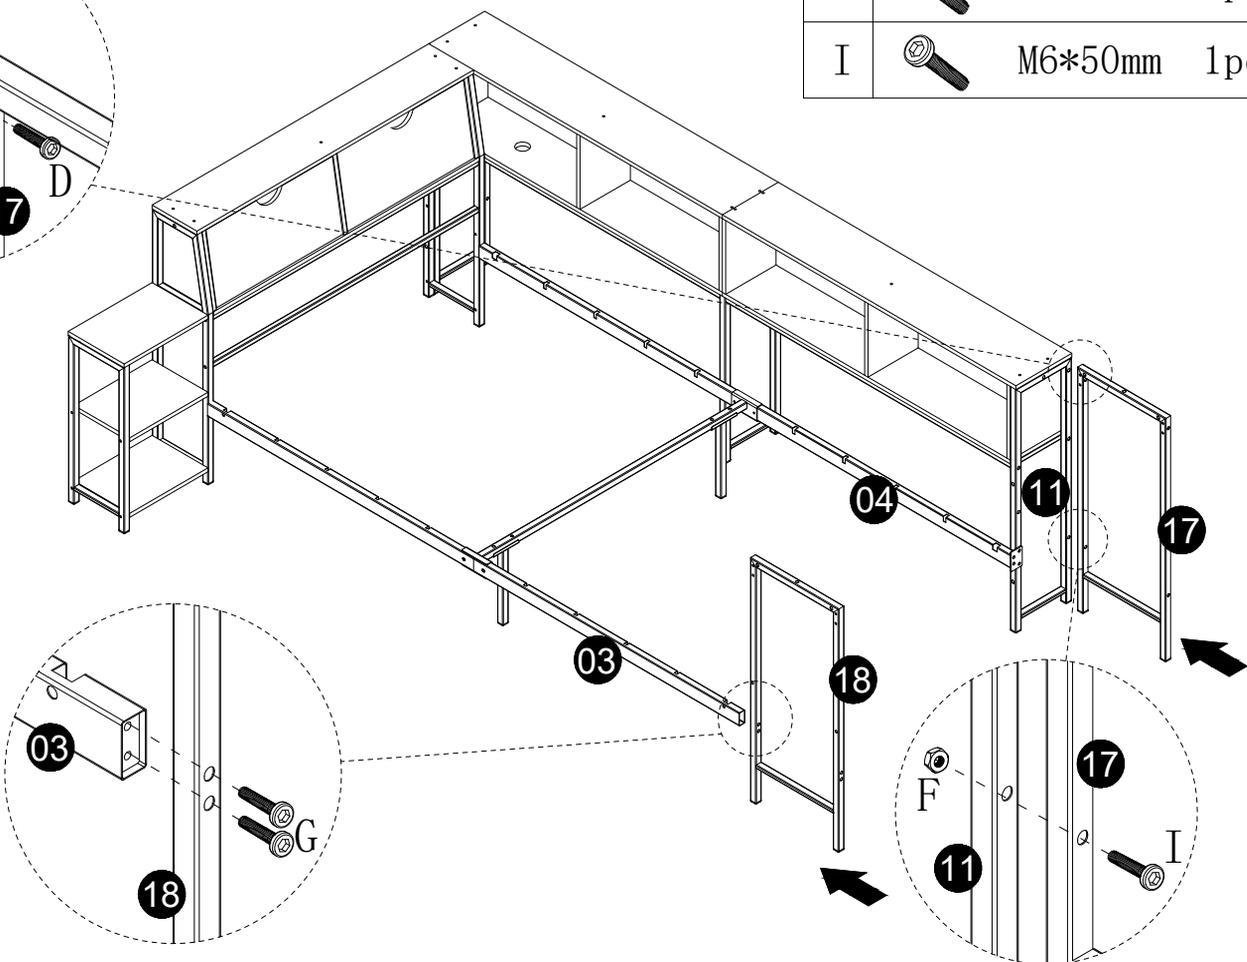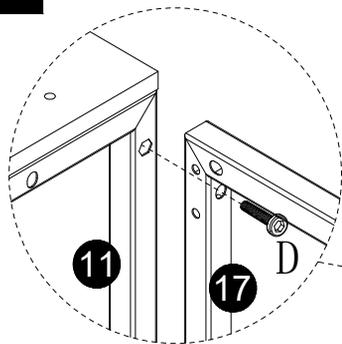


28

D		M6*28mm	1pc
G		M6*40mm	1pc

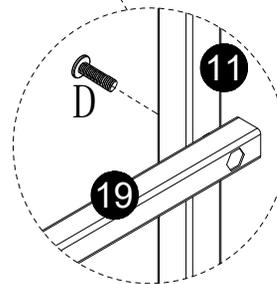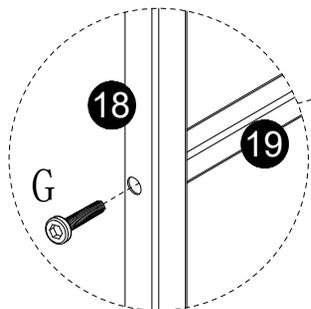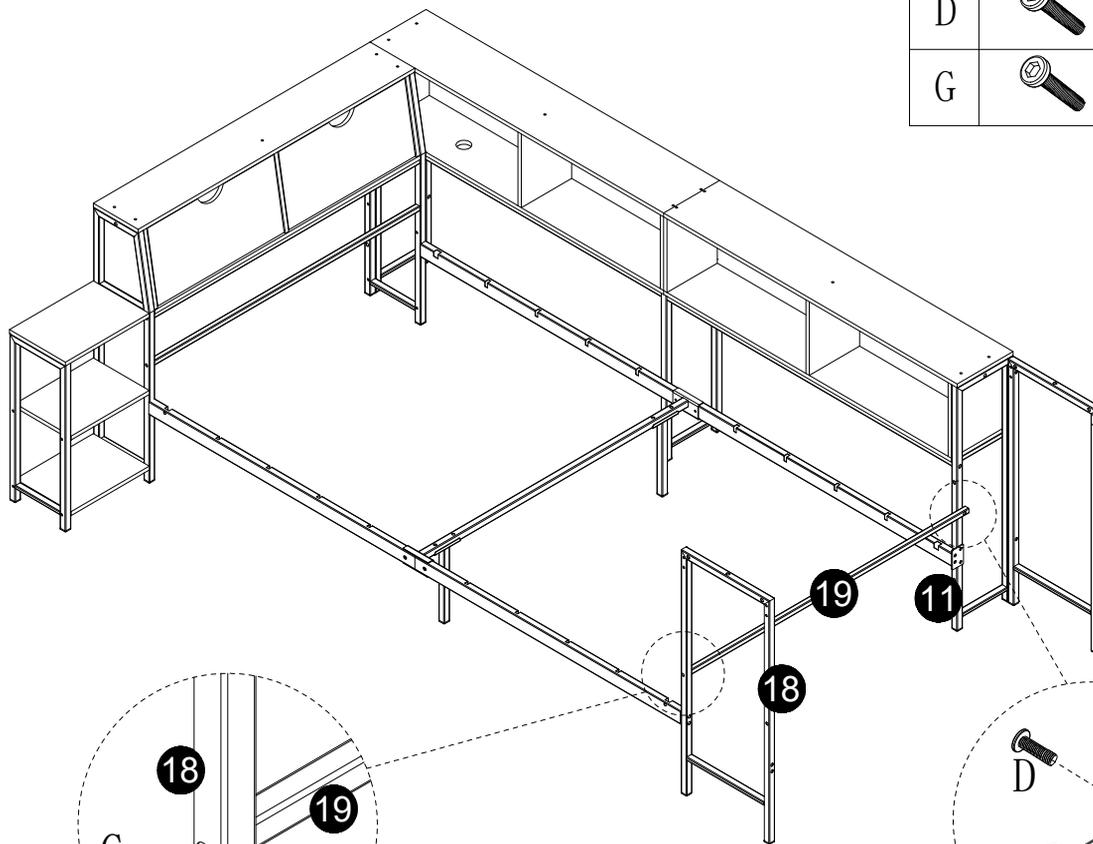

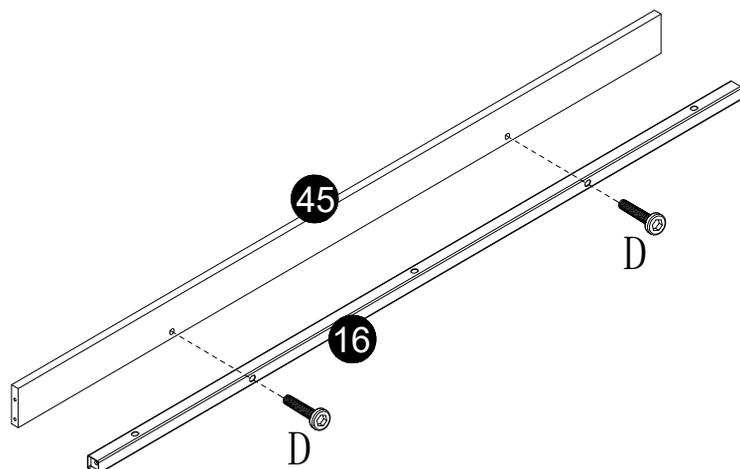

x2

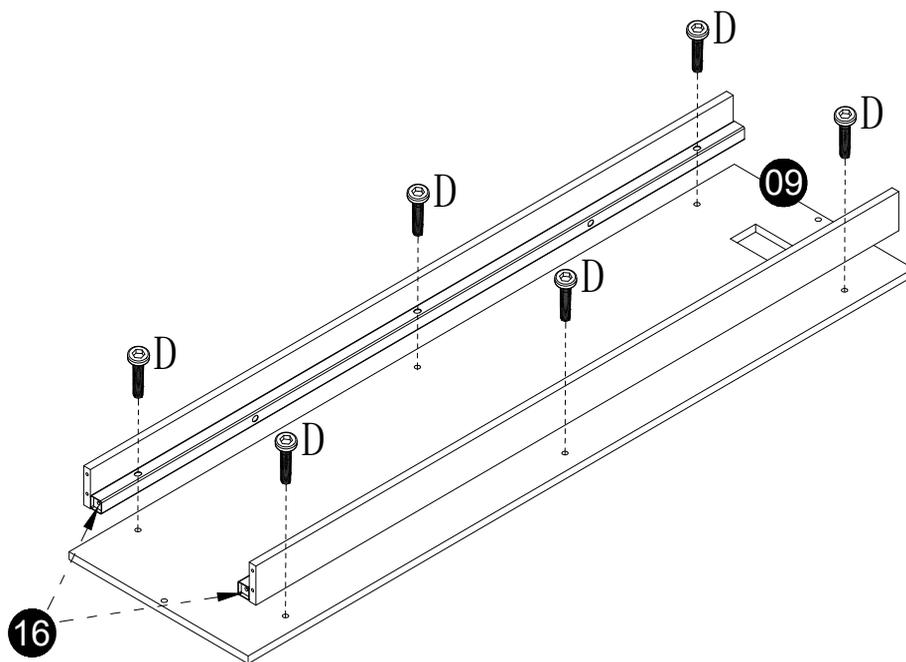


31

D



M6\*28mm 2pcs

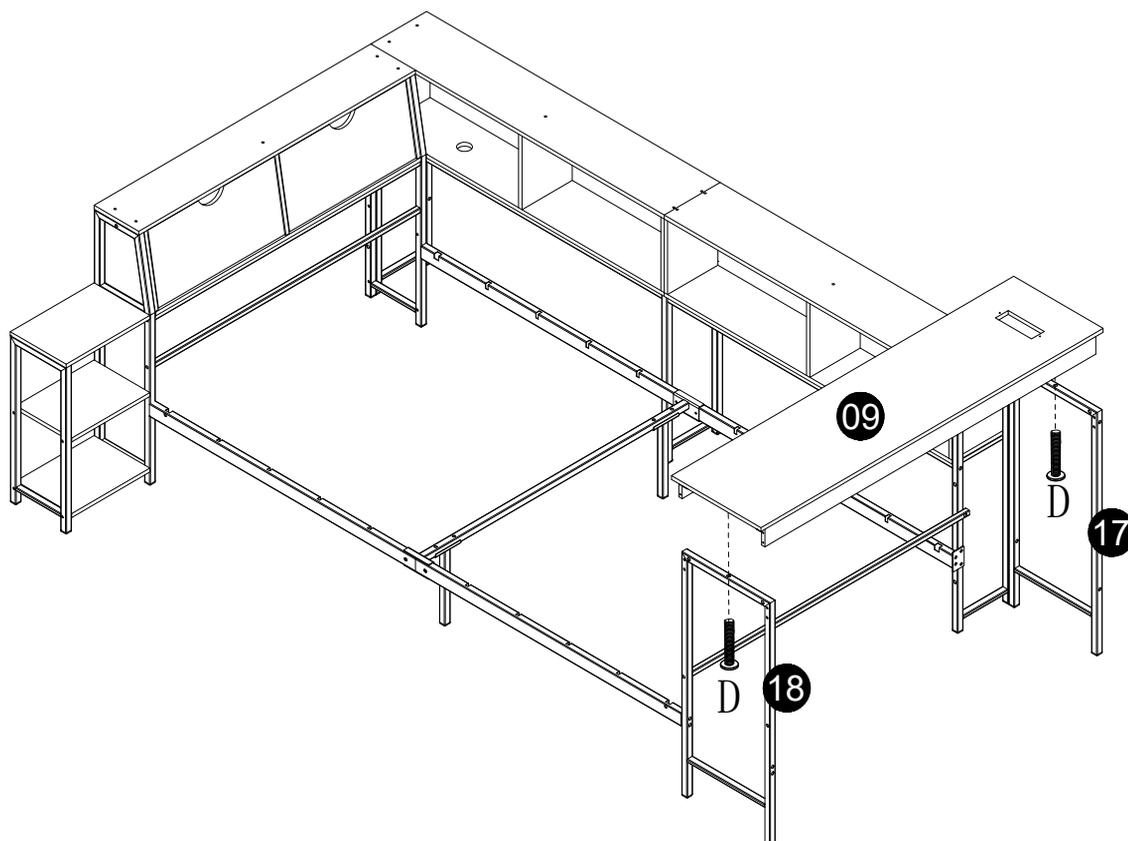

32

A




M5\*40mm 8pcs

G




M6\*40mm 4pcs

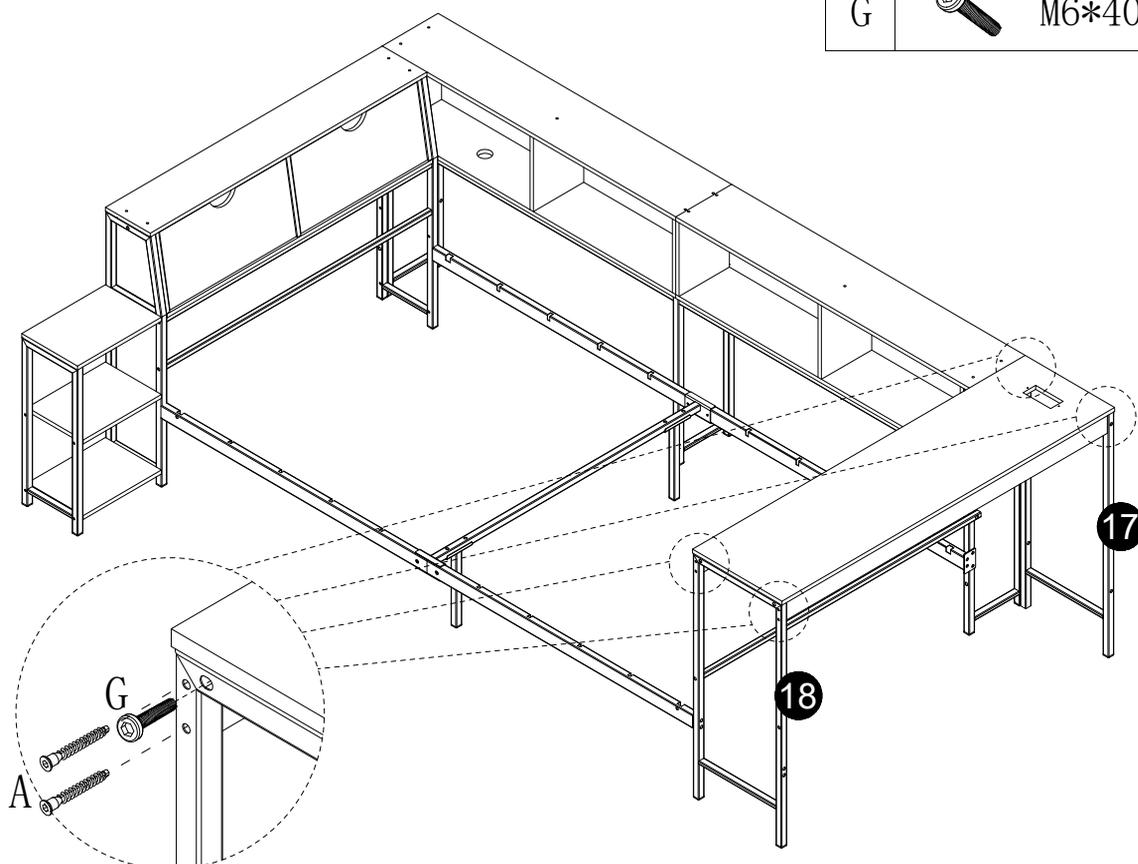


33

Step 2

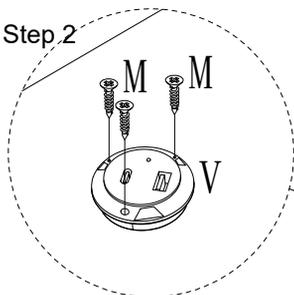


35

M	 M4*10mm	3pcs
V		1pc

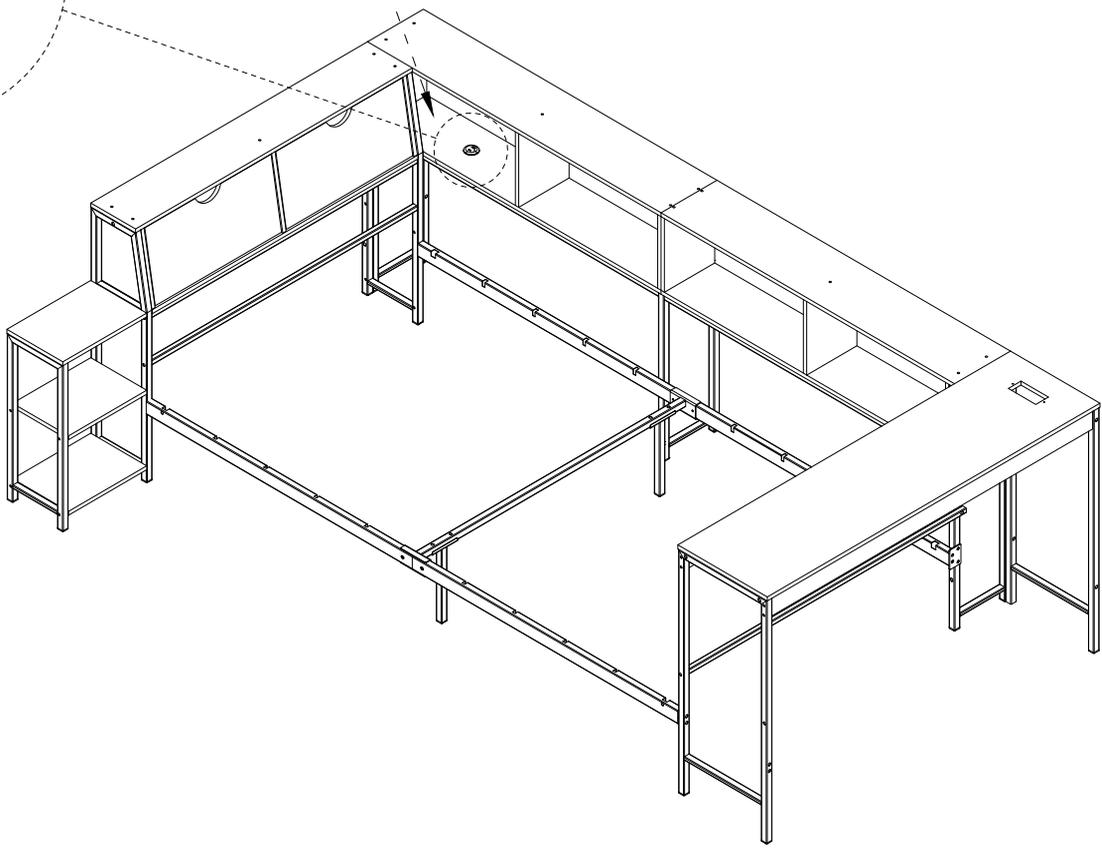


Step 1

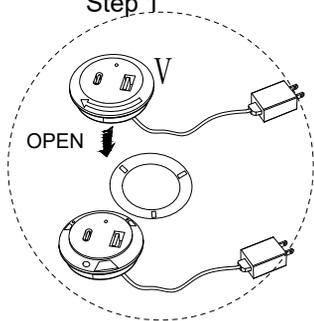




34

M	 M4*10mm	2pcs
U		1pc

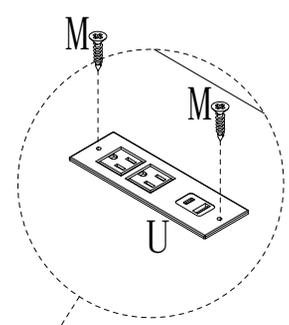


09

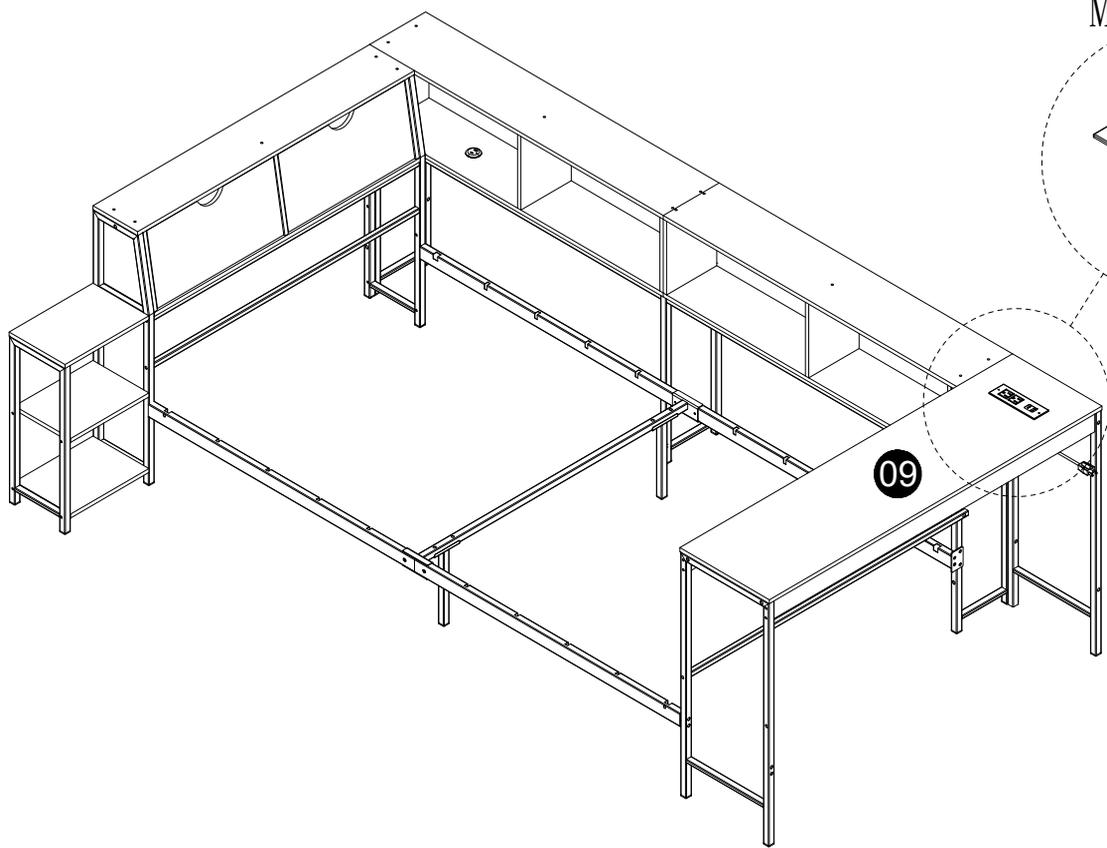

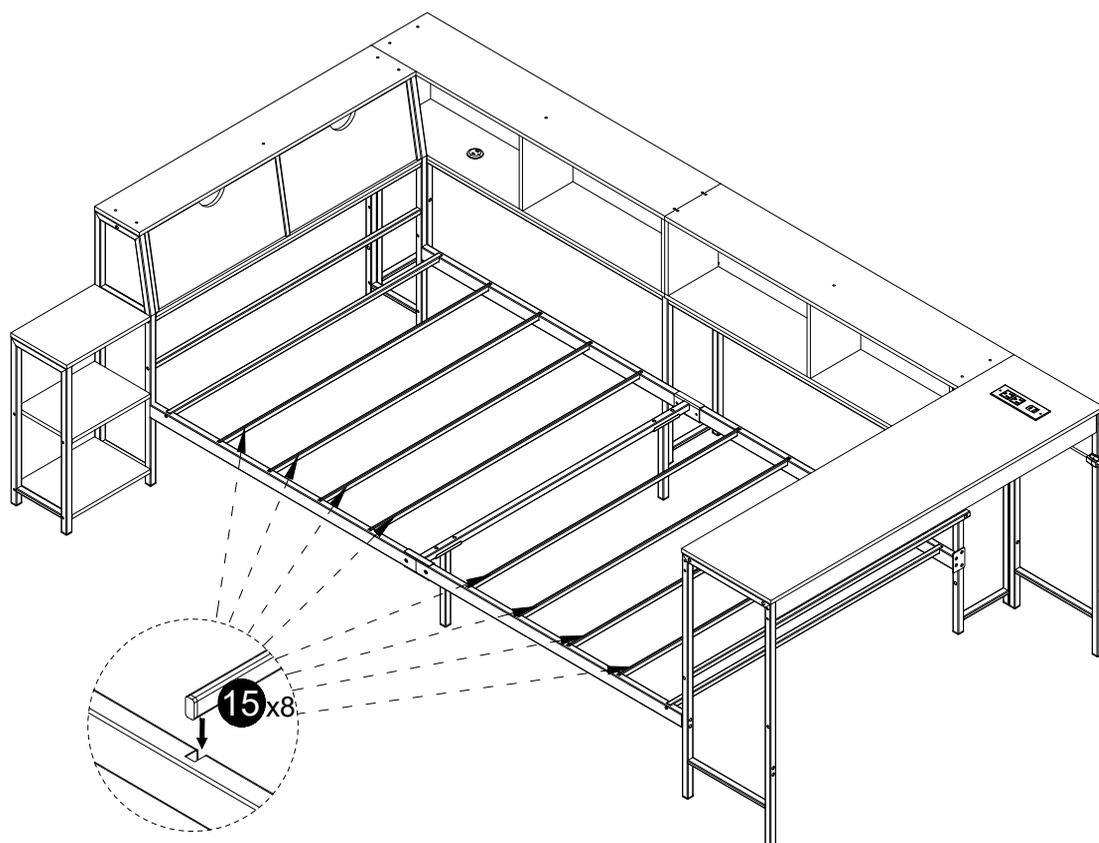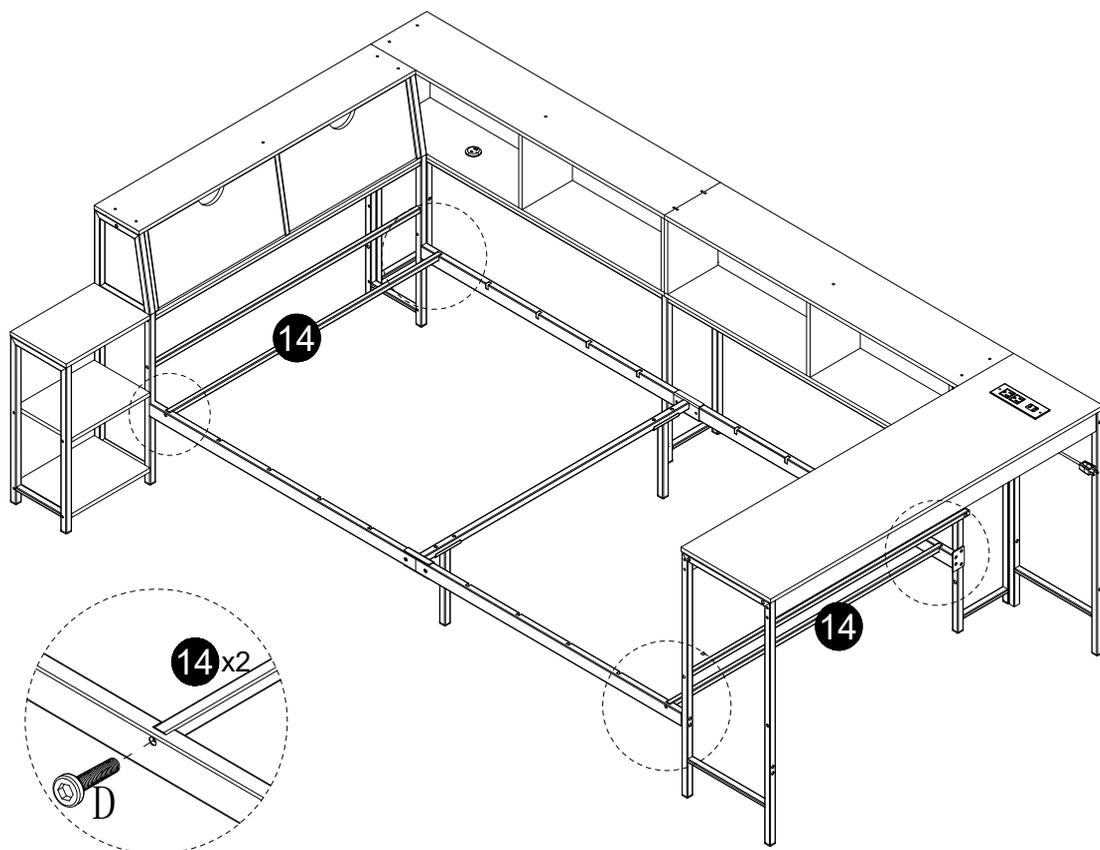

37

a		M4	16pcs
d		M4*28mm	16pcs

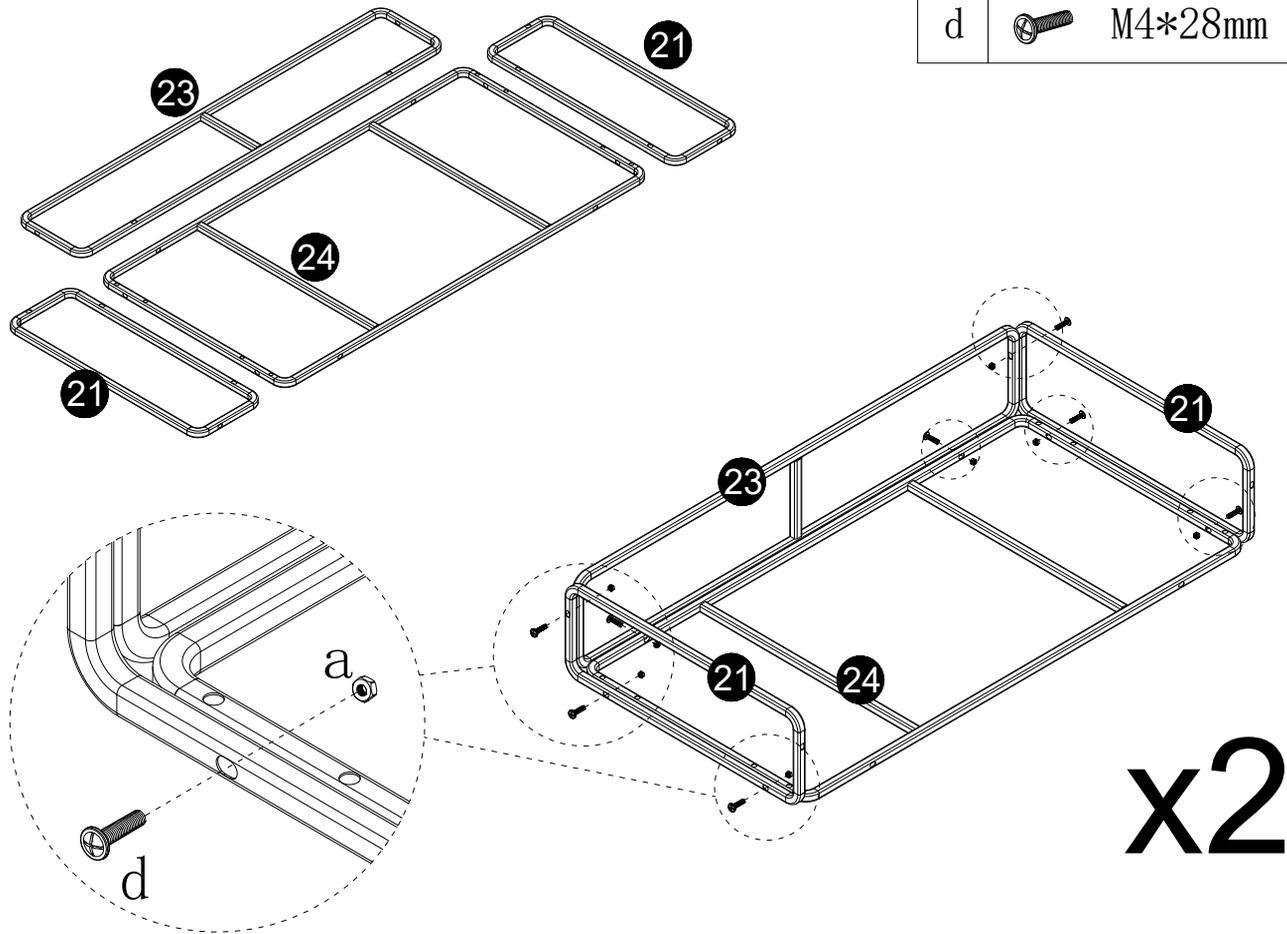

38

P		1.0	8pcs
a		M4	16pcs
d		M4*28mm	16pcs

